



# Configuring ISG as a RADIUS Proxy

---

**First Published: December 5, 2006**

**Last Updated: November 25, 2009**

Intelligent Services Gateway (ISG) is a Cisco XE software feature set that provides a structured framework in which edge devices can deliver flexible and scalable services to subscribers. The ISG RADIUS proxy feature enables ISG to serve as a proxy between a client device that uses RADIUS authentication and an authentication, authorization, and accounting (AAA) server. When configured as a RADIUS proxy, ISG is able to “sniff” (look at) the RADIUS packet flows and, on successful authentication, it can transparently create a corresponding ISG session. This document describes how to configure ISG as a RADIUS proxy.

## Finding Feature Information

For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the [“Feature Information for ISG RADIUS Proxy”](#) section on page 17.

Use Cisco Feature Navigator to find information about platform support and Cisco IOS XE software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

## Contents

- [Prerequisites for ISG RADIUS Proxy, page 2](#)
- [Restrictions for ISG RADIUS Proxy, page 2](#)
- [Information About ISG RADIUS Proxy, page 2](#)
- [How to Configure ISG as a RADIUS Proxy, page 4](#)
- [Configuration Examples for ISG RADIUS Proxy, page 13](#)
- [Additional References, page 15](#)
- [Feature Information for ISG RADIUS Proxy, page 17](#)



---

**Americas Headquarters:**

**Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA**

© 2006–2009 Cisco Systems, Inc. All rights reserved.

## Prerequisites for ISG RADIUS Proxy

The Cisco IOS image must support AAA and ISG.

## Restrictions for ISG RADIUS Proxy

Wireless Internet service provider roaming (WISPr) attributes are not supported.

## Information About ISG RADIUS Proxy

Before you configure ISG to serve as a RADIUS proxy, you should understand the following concepts:

- [Overview of ISG RADIUS Proxy, page 2](#)
- [ISG RADIUS Proxy Handling of Accounting Packets, page 3](#)
- [RADIUS Client Subnet Definition, page 3](#)
- [ISG RADIUS Proxy Support for Mobile Wireless Environments, page 3](#)
- [Benefits of ISG RADIUS Proxy, page 4](#)

## Overview of ISG RADIUS Proxy

Public wireless LANs (PWLANS) and wireless mesh networks can contain hundreds of access points, each of which must send RADIUS authentication requests to a AAA server. The ISG RADIUS proxy functionality allows the access points to send authentication requests to ISG, rather than directly to the AAA server. ISG relays the requests to the AAA server. The AAA server sends a response to ISG, which then relays the response to the appropriate access point.

When serving as a RADIUS proxy, ISG can pull user-specific data from the RADIUS flows that occur during subscriber authentication and authorization, and transparently create a corresponding IP session upon successful authentication. This functionality provides an automatic login facility with respect to ISG for subscribers that are authenticated by devices that are closer to the network edge.

When configured as a RADIUS proxy, ISG proxies all RADIUS requests generated by a client device and all RADIUS responses generated by the corresponding AAA server, as described in RFC 2865, RFC 2866, and RFC 2869.

ISG RADIUS proxy functionality is independent of the type of client device and supports standard authentication (that is, a single Access-Request/Response exchange) using both Password Authentication Protocol (PAP) and Challenge Handshake Authentication Protocol (CHAP), Access-Challenge packets, and Extensible Authentication Protocol (EAP) mechanisms.

In cases where authentication and accounting requests originate from separate RADIUS client devices, ISG associates all requests with the appropriate session through the use of correlation rules. For example, in a centralized PWLAN deployment, authentication requests originate from the wireless LAN (WLAN) access point, and accounting requests are generated by the Access Zone Router (AZR). The association of the disparate RADIUS flows with the underlying session is performed automatically when the Calling-Station-ID (Attribute 31) is sufficient to make the association reliable.

Following a successful authentication, authorization data collected from the RADIUS response is applied to the corresponding ISG session.

Sessions that were created using ISG RADIUS proxy operation are generally terminated by receipt of an Accounting-Stop packet.

## ISG RADIUS Proxy Handling of Accounting Packets

By default, ISG RADIUS proxy responds locally to accounting packets it receives. The **accounting method-list** command can be used to configure ISG to forward RADIUS proxy client accounting packets to a specified server. Forwarding of accounting packets can be configured globally for all RADIUS proxy clients or on a per-client basis.

## RADIUS Client Subnet Definition

If ISG is acting as a proxy for more than one client device, all of which reside on the same subnet, the clients may be configured using a subnet definition rather than a discrete IP address for each device. This configuration method results in the sharing of a single configuration by all the client devices.

## ISG RADIUS Proxy Support for Mobile Wireless Environments

ISG RADIUS proxy uses mobile wireless-specific processes to provide support for Gateway General Packet Radio Service (GPRS) Support Node (GGSN) environments. The following sections describe ISG RADIUS proxy attribute support and processing:

- [Attribute Processing and RADIUS Request Correlation, page 3](#)
- [3GPP Attribute Support, page 4](#)

### Attribute Processing and RADIUS Request Correlation

When authentication and accounting requests originate from separate RADIUS client devices, ISG uses correlation rules to associate all the requests with the appropriate session. The association of the disparate RADIUS flows with the underlying session is performed automatically when the Calling-Station-ID (Attribute 31) is sufficient to make the association reliable.

In mobile wireless environments attribute processing and the correlation of RADIUS requests with a session are implemented differently than in a WLAN environment. For example, in a WLAN environment the Attribute 31 is a MAC address, and in a GGSN environment Attribute 31 is a Mobile Station Integrated Services Digital Network (MSISDN), which is a plain number or alphanumeric string. In addition, in a GGSN environment the correlation of RADIUS requests can be performed using attributes other than Attribute 31.

ISG RADIUS proxy supports mobile wireless environments by allowing you to specify whether the RADIUS-proxy client uses a MAC or MSISDN format for Attribute 31. The format is specified using the **calling-station-id format** command. In addition, you can use the **session-identifier** command to configure ISG RADIUS proxy to use other attributes (apart from Attribute 31) to perform RADIUS request correlation.

## 3GPP Attribute Support

In GGSN environments ISG RADIUS proxy must understand and parse the Third Generation Partnership Project (3GPP) attributes described in [Table 1](#). These attributes form part of the accounting requests.

**Table 1** *3GPP Attributes Supported by ISG RADIUS Proxy*

Attribute	Description	Vendor ID/type
3GPP-IMSI	The International Mobile Subscriber Identity (IMSI) for the user.	10415/1
3GPP-Charging-Id	The charging ID for this Packet Data Protocol (PDP) context (this together with the GGSN address constitutes a unique identifier for PDP context).	10415/2
3GPP-SGSN-Address	The Serving GPRS Support Node (SGSN) address that is used by the GPRS Tunneling Protocol (GTP) control plane for handling of control messages. It may be used to identify the Public Line Mobile Network (PLMN) to which the user is attached.	10415/6

## Benefits of ISG RADIUS Proxy

Use of ISG RADIUS Proxy has the following benefits:

- Allows the complete set of ISG functionality to be applied to EAP subscriber sessions.
- Allows an ISG device to be introduced into a network with minimum disruption to the existing network access server (NAS) and AAA servers.
- Simplifies RADIUS server configuration because only the ISG, not every access point, must be configured as a client.

## How to Configure ISG as a RADIUS Proxy

This section contains the following procedures:

- [Initiating ISG RADIUS Proxy IP Sessions, page 5](#) (required)
- [Configuring ISG RADIUS Proxy Global Parameters, page 6](#) (required)
- [Configuring ISG RADIUS Proxy Client-Specific Parameters, page 8](#) (optional)
- [Defining an ISG Policy for RADIUS Proxy Events, page 10](#) (required)
- [Verifying ISG RADIUS Proxy Configuration, page 11](#) (optional)
- [Clearing ISG RADIUS Proxy Sessions, page 12](#) (optional)

## Initiating ISG RADIUS Proxy IP Sessions

Perform this task to configure ISG to initiate an IP session upon receipt of a RADIUS proxy message from a RADIUS client.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface** *type number*
4. **ip subscriber** {**interface** | **l2-connected** | **routed**}
5. **initiator radius-proxy**
6. **end**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"><li>• Enter your password if prompted.</li></ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>interface</b> <i>type number</i>  <b>Example:</b> Router(config)# interface GigabitEthernet 0/0/0	Specifies an interface for configuration and enters interface configuration mode.
Step 4	<b>ip subscriber</b> { <b>interface</b>   <b>l2-connected</b>   <b>routed</b> }  <b>Example:</b> Router(config-if)# ip subscriber routed	Enables ISG IP subscriber support on an interface, specifies the access method that IP subscribers will use to connect to ISG on an interface and enters subscriber configuration mode.
Step 5	<b>initiator radius-proxy</b>  <b>Example:</b> Router(config-subscriber)# initiator radius-proxy	Configures ISG to initiate IP sessions upon receipt of any RADIUS packet.
Step 6	<b>end</b>  <b>Example:</b> Router(config-subscriber)# end	Exits the current configuration mode and returns to privileged EXEC mode.

## Configuring ISG RADIUS Proxy Global Parameters

Perform this task to configure ISG RADIUS proxy parameters that are applied by default to all RADIUS proxy clients. Client-specific parameters can also be configured and take precedence over this global configuration. To specify a client-specific configuration, see the [“Configuring ISG RADIUS Proxy Client-Specific Parameters”](#) section on page 8.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **aaa new-model**
4. **aaa server radius proxy**
5. **session-identifier** {*attribute number* | **vsa vendor id type number**}
6. **calling-station-id format** {*mac-address* | *msisdn*}
7. **accounting method-list** {*method-list-name* | **default**}
8. **accounting port** *port-number*
9. **authentication port** *port-number*
10. **key** [*0* | *7*] *word*
11. **timer** {*ip-address* | **request**} *seconds*
12. **end**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"><li>• Enter your password if prompted.</li></ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>aaa new-model</b>  <b>Example:</b> Router(config)# aaa new-model	Enables the AAA access control model.
Step 4	<b>aaa server radius proxy</b>  <b>Example:</b> Router(config)# aaa server radius proxy	Enters ISG RADIUS proxy server configuration mode.

	Command or Action	Purpose
Step 5	<b>session-identifier</b> { <b>attribute number</b>   <b>vsa vendor id type number</b> }  <b>Example:</b> Router(config-locsvr-proxy-radius)# session-identifier attribute 1	(Optional) Correlates the RADIUS server requests of a session and identifies the session in the RADIUS proxy module.
Step 6	<b>calling-station-id format</b> { <b>mac-address</b>   <b>msisdn</b> }  <b>Example:</b> Router(config-locsvr-proxy-radius)# calling-station-id format msisdn	Specifies the calling-station-id format.
Step 7	<b>accounting method-list</b> { <b>method-list-name</b>   <b>default</b> }  <b>Example:</b> Router(config-locsvr-proxy-radius)# accounting method-list fwdacct	Specifies the server to which accounting packets from RADIUS clients are forwarded.  <b>Note</b> By default, ISG RADIUS proxy handles accounting packets locally.
Step 8	<b>accounting port</b> <i>port-number</i>  <b>Example:</b> Router(config-locsvr-proxy-radius)# accounting port 2222	Specifies the port on which the ISG listens for accounting packets from RADIUS clients. <ul style="list-style-type: none"> <li>The default port is 1646.</li> </ul>
Step 9	<b>authentication port</b> <i>port-number</i>  <b>Example:</b> Router(config-locsvr-proxy-radius)# authentication port 1111	Specifies the port on which the ISG listens for authentication packets from RADIUS clients. <ul style="list-style-type: none"> <li>The default port is 1645.</li> </ul>
Step 10	<b>key</b> [0   7] <i>word</i>  <b>Example:</b> Router(config-locsvr-proxy-radius)# key radpro	Configures the encryption key to be shared between ISG and RADIUS clients. <ul style="list-style-type: none"> <li>0 specifies that an unencrypted key will follow.</li> <li>7 specifies a hidden key will follow.</li> </ul>
Step 11	<b>timer</b> { <b>ip-address</b>   <b>request</b> } <i>seconds</i>  <b>Example:</b> Router(config-locsvr-proxy-radius)# timer ip-address 5	Specifies the amount of time ISG waits for the specified event before terminating the session. <ul style="list-style-type: none"> <li><b>ip-address</b>—Specifies the amount of time ISG waits for an IP address to be assigned to the session.</li> <li><b>request</b>—Specifies the amount of time ISG waits to receive an Access-Request from a client device.</li> </ul>
Step 12	<b>end</b>  <b>Example:</b> Router(config-locsvr-proxy-radius)# end	Exits the current configuration mode and returns to privileged EXEC mode.

## Configuring ISG RADIUS Proxy Client-Specific Parameters

Perform this task to configure client-specific parameters for the ISG RADIUS proxy. This configuration applies to the specified client or subnet only. The client-specific configuration takes precedence over the global ISG RADIUS proxy configuration.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **aaa new-model**
4. **aaa server radius proxy**
5. **client** {*name* | *ip-address*} [*subnet-mask* [*vrf vrf-id*]]
6. **session-identifier** {*attribute number* | **vsa vendor id type number**}
7. **calling-station-id format** {*mac-address* | *msisdn*}
8. **accounting method-list** {*method-list-name* | **default**}
9. **accounting port** *port-number*
10. **authentication port** *port-number*
11. **key** [*0* | *7*] *word*
12. **timer** {*ip-address* | **request**} *seconds*
13. **end**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>aaa new-model</b>  <b>Example:</b> Router(config)# aaa new-model	Enables the AAA access control model.
Step 4	<b>aaa server radius proxy</b>  <b>Example:</b> Router(config)# aaa server radius proxy	Enters ISG RADIUS proxy server configuration mode.



	Command or Action	Purpose
Step 5	<b>client</b> { <b>name</b>   <i>ip-address</i> } [ <i>subnet-mask</i> [ <b>vrf</b> <i>vrf-id</i> ]]  <b>Example:</b> Router(config-locsvr-proxy-radius)# client 172.16.54.45 vrf myvrftable	Specifies a RADIUS proxy client for which client-specific parameters can be configured, and enters RADIUS client configuration mode.
Step 6	<b>session-identifier</b> { <b>attribute</b> <i>number</i>   <b>vsa</b> <b>vendor</b> <i>id</i> <b>type</b> <i>number</i> }  <b>Example:</b> Router(config-locsvr-radius-client)# session-identifier vsa vendor 5335 type 123	(Optional) Correlates the RADIUS requests of a session and identifies the session in the RADIUS proxy module.
Step 7	<b>calling-station-id format</b> { <b>mac-address</b>   <b>msisdn</b> }  <b>Example:</b> Router(config-locsvr-radius-client)# calling-station-id format msisdn	Specifies the calling-station-id format.
Step 8	<b>accounting method-list</b> { <i>method-list-name</i>   <b>default</b> }  <b>Example:</b> Router(config-locsvr-radius-client)# accounting method-list fwdacct	Specifies the server to which accounting packets from RADIUS clients are forwarded.
Step 9	<b>accounting port</b> <i>port-number</i>  <b>Example:</b> Router(config-locsvr-radius-client)# accounting port 2222	Specifies the port on which the ISG listens for accounting packets from RADIUS clients. <ul style="list-style-type: none"> <li>The default port is 1646.</li> </ul>
Step 10	<b>authentication port</b> <i>port-number</i>  <b>Example:</b> Router(config-locsvr-radius-client)# authentication port 1111	Specifies the port on which the ISG listens for authentication packets from RADIUS clients. <ul style="list-style-type: none"> <li>The default port is 1645.</li> </ul>
Step 11	<b>key</b> [0   7] <i>word</i>  <b>Example:</b> Router(config-locsvr-radius-client)# key radpro	Configures the encryption key to be shared between ISG and RADIUS clients. <ul style="list-style-type: none"> <li>0 specifies that an unencrypted key will follow.</li> <li>7 specifies a hidden key will follow.</li> </ul>

	Command or Action	Purpose
Step 12	<b>timer</b> { <b>ip-address</b>   <b>request</b> } <i>seconds</i>  <b>Example:</b> Router(config-locsvr-radius-client)# timer ip-address 5	Specifies the amount of time ISG waits for the specified event before terminating the session. <ul style="list-style-type: none"> <li><b>ip-address</b>—Specifies the amount of time ISG waits for an IP address to be assigned to the session.</li> <li><b>request</b>—Specifies the amount of time ISG waits to receive an Access-Request from a client device.</li> </ul>
Step 13	<b>end</b>  <b>Example:</b> Router(config-locsvr-radius-client)# end	Exits the current configuration mode and returns to privileged EXEC mode.

## Defining an ISG Policy for RADIUS Proxy Events

Perform this task to configure a policy that is applied at session start and causes ISG to proxy RADIUS packets to a specified server.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **aaa new-model**
4. **aaa authorization radius-proxy** {**default** | *list-name*} *method1* [*method2* [*method3*...]]
5. **policy-map type control** *policy-map-name*
6. **class type control** {*control-class-name* | **always**} **event session-start**
7. *action-number* **proxy** [**aaa list** {**default** | *list-name*}]
8. **end**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
Step 3	<b>aaa new-model</b>  <b>Example:</b> Router(config)# aaa new-model	Enables the AAA access control model.

	Command or Action	Purpose
Step 4	<b>aaa authorization radius-proxy</b> {default   list-name} method1 [method2 [method3...]]  <b>Example:</b> Router(config)# aaa authorization radius-proxy RP group radius	Configures AAA authorization methods for ISG RADIUS proxy subscribers. <ul style="list-style-type: none"> <li>A method may be either of the following: <ul style="list-style-type: none"> <li><b>group group-name</b>—Uses a subset of RADIUS servers for authorization as defined by the <b>server group group-name</b> command.</li> <li><b>group radius</b>—Uses the list of all RADIUS servers for authorization as defined by the <b>aaa group server radius</b> command.</li> </ul> </li> </ul>
Step 5	<b>policy-map type control</b> policy-map-name  <b>Example:</b> Router(config)# policy-map type control proxyrule	Creates or modifies a control policy map, which defines an ISG control policy and enters control policy-map configuration mode.
Step 6	<b>class type control</b> {control-class-name   always} event session-start  <b>Example:</b> Router(config-control-policymap)# class type control always event session-start	Specifies a control class for which actions may be configured and enters control policy-map class configuration mode.
Step 7	<b>action-number proxy</b> [aaa list {default   list-name}]  <b>Example:</b> Router(config-control-policymap-class-control)# 1 proxy aaa list RP	Sends RADIUS packets to the specified server. <ul style="list-style-type: none"> <li>Use this command to configure ISG to forward RADIUS proxy packets to the server specified by the <b>aaa authorization radius-proxy</b> command in Step 4.</li> </ul>
Step 8	<b>end</b>  <b>Example:</b> Router(config)# end	Exits the current configuration mode and returns to privileged EXEC mode.

## Verifying ISG RADIUS Proxy Configuration

Use one or more of the following commands to verify ISG RADIUS proxy configuration. The commands may be entered in any order.

### SUMMARY STEPS

- show radius-proxy client** ip-address [vrf vrf-id]
- show radius-proxy session** {id id-number | ip ip-address}
- show subscriber session** [identifier {authen-status {authenticated | unauthenticated} | authenticated-domain domain-name | authenticated-username username | dn timer-name | media type | nas-port identifier | protocol type | source-ip-address ip-address subnet-mask | timer timer-name | tunnel-name name | unauthenticated-domain domain-name | unauthenticated-username username} | uid session-identifier | username username] [detailed]

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>show radius-proxy client</b> <i>ip-address</i> [ <b>vrf</b> <i>vrf-id</i> ]  <b>Example:</b> Router# show radius-proxy client 10.10.10.10	Displays RADIUS proxy configuration information and a summary of sessions for an ISG RADIUS proxy client.
Step 2	<b>show radius-proxy session</b> { <b>id</b> <i>id-number</i>   <b>ip</b> <i>ip-address</i> }  <b>Example:</b> Router# show radius-proxy session ip 10.10.10.10	Displays information about an ISG RADIUS proxy session.  <b>Note</b> The ID can be found in the output of the <b>show radius-proxy client</b> command.
Step 3	<b>show subscriber session</b> [ <b>identifier</b> { <b>authen-status</b> { <b>authenticated</b>   <b>unauthenticated</b> }   <b>authenticated-domain</b> <i>domain-name</i>   <b>authenticated-username</b> <i>username</i>   <b>dnis</b> <i>dnis</i>   <b>media type</b>   <b>nas-port</b> <i>identifier</i>   <b>protocol type</b>   <b>source-ip-address</b> <i>ip-address subnet-mask</i>   <b>timer</b> <i>timer-name</i>   <b>tunnel-name</b> <i>name</i>   <b>unauthenticated-domain</b> <i>domain-name</i>   <b>unauthenticated-username</b> <i>username</i> }   <b>uid</b> <i>session-identifier</i>   <b>username</b> <i>username</i> } [ <b>detailed</b> ]  <b>Example:</b> Router# show subscriber session detailed	Displays information about subscriber sessions on an ISG device.

## Clearing ISG RADIUS Proxy Sessions

Perform this task to clear ISG RADIUS proxy sessions.

## SUMMARY STEPS

1. **enable**
2. **clear radius-proxy client** *ip-address*
3. **clear radius-proxy session** {**id** *id-number* | **ip** *ip-address*}

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
Step 2	<b>clear radius-proxy client</b> <i>ip-address</i>  <b>Example:</b> Router# clear radius-proxy client 10.10.10.10	Clears all ISG RADIUS proxy sessions that are associated with the specified client device.
Step 3	<b>clear radius-proxy session</b> { <i>id id-number</i>   <i>ip ip-address</i> }  <b>Example:</b> Router# clear radius-proxy session ip 10.10.10.10	Clears a specific ISG RADIUS proxy session.  <b>Note</b> The ID can be found in the output of the <b>show radius-proxy client</b> command.

## Configuration Examples for ISG RADIUS Proxy

This section contains the following examples:

- [ISG RADIUS Proxy Configuration: Example, page 13](#)
- [ISG RADIUS Proxy and Layer 4 Redirect: Example, page 14](#)

### ISG RADIUS Proxy Configuration: Example

The following example configures ISG to serve as a RADIUS proxy and to send RADIUS packets to the method list called RP. FastEthernet interface 0/0 is configured to initiate IP sessions upon receipt of RADIUS packets.

```
!
aaa new-model
!
aaa group server radius EAP
server 10.2.36.253 auth-port 1812 acct-port 1813
!
aaa authorization radius-proxy RP group EAP
aaa accounting network FWDACCT start-stop group EAP
aaa accounting network FLOWACCT start-stop group EAP
!
aaa server radius proxy
session-identifier attribute 1
calling-station-id format msisdn
authentication port 1111
accounting port 2222
key radpro
message-authenticator ignore
```

```
! The method list "FWDACCT" was configured by the aaa accounting network FWDACCT
! start-stop group EAP command above.
```

```

accounting method-list FWDACCT
client 10.45.45.2
timer request 5
!
client 10.45.45.3
key aashica#@!$%&/
timer ip-address 120
!
!
! This control policy references the method list called "RP" that was configured using the
aaa authorization radius-proxy command above.
policy-map type control PROXYRULE
class type control always event session-start
1 proxy aaa list RP
!
!
!
bba-group pppoe global
!
!
interface GigabitEthernet 2/1/0
ip address 10.45.45.1 255.255.255.0
ip subscriber routed
initiator radius-proxy
no ip route-cache cef
no ip route-cache
no cdp enable
!
! The control policy "PROXYRULE" is applied to the interface.
service-policy type control PROXYRULE
!
!
radius-server host 10.2.36.253 auth-port 1812 acct-port 1813 key cisco
radius-server host 10.76.86.83 auth-port 1665 acct-port 1666 key rad123
radius-server vsa send accounting
radius-server vsa send authentication

aaa new-model
!
!
aaa group server radius EAP
server 10.2.36.253 auth-port 1812 acct-port 1813
!

```

## ISG RADIUS Proxy and Layer 4 Redirect: Example

The following example shows an ISG policy configured for both ISG RADIUS proxy and Layer 4 redirection:

```

aaa authorization network default local
!
redirect server-group REDIRECT
server ip 10.255.255.28 port 23
!
class-map type traffic match-any traffic1
match access-group input 101
!
policy-map type service service1
class type traffic traffic1
redirect list 101 to group REDIRECT
!
policy-map type control PROXYRULE

```

```

class type control always event session-start
 1 proxy aaa list RP
 2 service-policy type service name service1
!
access-list 101 permit tcp host 10.45.45.2 any

```

The following example shows corresponding sample output from the **show subscriber session** command:

```
Router# show subscriber session username 12345675@cisco
```

```

Unique Session ID: 66
Identifier: aash
SIP subscriber access type(s): IP
Current SIP options: Req Fwding/Req Fwded
Session Up-time: 00:00:40, Last Changed: 00:00:00

```

Policy information:

```

Authentication status: authen
Active services associated with session:
  name "service1", applied before account logon
Rules, actions and conditions executed:
  subscriber rule-map PROXYRULE
    condition always event session-start
      1 proxy aaa list RP
      2 service-policy type service name service1

```

Session inbound features:

```

Feature: Layer 4 Redirect ----->>> L4 redirect is applied to the session at session start
Rule table is empty

```

Traffic classes:

```

Traffic class session ID: 67
  ACL Name: 101, Packets = 0, Bytes = 0
Unmatched Packets (dropped) = 0, Re-classified packets (redirected) = 0

```

Configuration sources associated with this session:

```

Service: service1, Active Time = 00:00:40
Interface: FastEthernet0/1, Active Time = 00:00:40

```

## Additional References

The following sections provide references related to ISG RADIUS proxy.

### Related Documents

Related Topic	Document Title
ISG commands	<a href="#">Cisco IOS Intelligent Services Gateway Command Reference</a>

### Standards

Standard	Title
None	—

## MIBs

MIB	MIBs Link
None	<p>To locate and download MIBs for selected platforms, Cisco IOS XE software releases, and feature sets, use Cisco MIB Locator found at the following URL:</p> <p><a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a></p>

## RFCs

RFC	Title
RFC 2865	<i>Remote Authentication Dial In User Service (RADIUS)</i>
RFC 2866	<i>RADIUS Accounting</i>
RFC 2869	<i>RADIUS Extensions</i>

## Technical Assistance

Description	Link
<p>The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.</p> <p>To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.</p> <p>Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.</p>	<p><a href="http://www.cisco.com/techsupport">http://www.cisco.com/techsupport</a></p>



## Feature Information for ISG RADIUS Proxy

Table 2 lists the features in this module and provides links to specific configuration information. For information about a feature in this technology that is not documented here, see the “[Intelligent Services Gateway Features Roadmap](#).”

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which Cisco IOS XE software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.



### Note

Table 2 list only the Cisco IOS XE software release that introduced support for a given feature in a given Cisco IOS software release train. Unless noted otherwise, subsequent releases of that Cisco IOS XE software release train also support that feature.

**Table 2** Feature Information for ISG RADIUS Proxy

Feature Name	Releases	Feature Information
ISG: AAA Wireless Enhancements	Cisco IOS XE Release 2.5.0	<p>This feature enhances ISG RADIUS proxy to provide additional support for mobile wireless environments. It includes changes to RADIUS attribute 31 processing.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> <li><a href="#">Information About ISG RADIUS Proxy, page 2</a></li> <li><a href="#">How to Configure ISG as a RADIUS Proxy, page 4</a></li> </ul> <p>The following commands were introduced by this feature: <b>session-identifier, calling-station-id format.</b></p>
ISG: Authentication:RADIUS Proxy WiMax Enhancements	Cisco IOS XE Release 2.5.0	<p>This feature enhances ISG RADIUS proxy to provide additional support for WiMax broadband environments.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> <li><a href="#">Information About ISG RADIUS Proxy, page 2</a></li> <li><a href="#">How to Configure ISG as a RADIUS Proxy, page 4</a></li> </ul>

**Table 2**      **Feature Information for ISG RADIUS Proxy**

Feature Name	Releases	Feature Information
RADIUS Proxy Enhancements for ISG	Cisco IOS XE Release 2.2	<p>This feature enables ISG to serve as a proxy between a client device that uses RADIUS authentication and an AAA server. This functionality enables ISG to be deployed in PWLAN and wireless mesh networks where authentication requests for mobile subscribers must be sent to specific RADIUS servers.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> <li>• <a href="#">Information About ISG RADIUS Proxy, page 2</a></li> <li>• <a href="#">How to Configure ISG as a RADIUS Proxy, page 4</a></li> </ul> <p>The following commands were introduced or modified by this feature: <b>aaa authorization radius-proxy</b>, <b>aaa server radius proxy</b>, <b>accounting method-list</b>, <b>accounting port</b>, <b>authentication port</b>, <b>clear radius-proxy client</b>, <b>clear radius-proxy session</b>, <b>client</b> (ISG RADIUS proxy), <b>debug radius-proxy</b>, <b>initiator radius-proxy</b>, <b>key</b> (ISG RADIUS proxy), <b>message-authenticator ignore</b>, <b>proxy</b> (ISG RADIUS proxy), <b>show radius-proxy client</b>, <b>show radius-proxy session</b>, <b>timer</b> (ISG RADIUS proxy).</p>

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses used in this document are not intended to be actual addresses. Any examples, command display output, and figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses in illustrative content is unintentional and coincidental.

© 2006–2009 Cisco Systems, Inc. All rights reserved.