



## Setup and Upgrade Commands

---

This section serves as a reference to view the list of commands related to setting up and upgrading the router. Use this section to understand the command syntaxes, default values and sample command usage with output.

- [Action Commands, on page 1](#)
- [Show Commands, on page 1](#)

### Action Commands

- [clear configuration inconsistency](#)
- [reload](#)
- [install add](#)
- [install activate \(IOS XR 64 bit\)](#)
- [install deactivate \(IOS XR 64 bit\)](#)
- [install remove](#)
- [install replace](#)
- [install boot-options](#)
- [install commit](#)
- [install upgrade source](#)
- [ztp enable](#)
- [ztp disable](#)
- [ztp initiate](#)

### Show Commands

- [show version](#)
- [show platform](#)

- `show install`
- `show install active`
- `show install committed`
- `show install inactive`
- `show install package`
- `show fpd package`
- `show hw-module fpd`
- `show interfaces (frame relay)`
- `show inventory (Cisco IOS XR 64-bit)`
- `show ipv4 interface`
- `show ipv6 interface`
- `show install boot-options`
- `show running-config`
- `show redundancy`
- `show media`