



# Hardware Module Commands

---

This module lists the system management hardware module commands for Cisco 8000 Series Routers.

For detailed information about the system management concepts, configuration tasks, and examples, see the *System Management Configuration Guide for Cisco 8000 Series Routers*.

- [Hardware Module Commands, on page 2](#)

# Hardware Module Commands

## Hardware Redundancy Commands

- `hw-module fabric-fec-monitor disable`
- `hw-module fault-recovery`
- `hw-module npu-power-profile`
- `hw-module profile pbr vrfredirect`
- `hw-module profile npu-compatibility`
- `hw-module reset auto`
- `hw-module shutdown`