



## **System Monitoring Command Reference for Cisco 8000 Series Routers**

**First Published:** 2020-03-01

**Last Modified:** 2025-12-17

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883





## CONTENTS

---

### PREFACE

#### **Preface** xiii

Changes to This Document xiii

Obtaining Documentation and Submitting a Service Request xiii

---

### CHAPTER 1

#### **Alarm Management and Logging Correlation Commands** 1

alarm 2

all-alarms 3

all-of-router 3

clear logging correlator delete 4

clear logging events delete 5

clear logging events reset 8

context-correlation 9

logging correlator apply rule 10

logging correlator apply ruleset 11

logging correlator buffer-size 13

logging correlator rule 14

logging correlator ruleset 16

logging events buffer-size 16

logging events display-location 17

logging events level 19

logging events threshold 20

logging suppress apply rule 21

logging suppress rule 22

nonrootcause 23

reissue-nonbistate 24

reparent 25

rootcause	26
show alarms	27
show alarms brief	31
show alarms detail	32
show logging correlator buffer	35
show logging correlator info	36
show logging correlator rule	37
show logging correlator ruleset	38
show logging events buffer	40
show logging events info	43
show logging suppress rule	44

---

**CHAPTER 2 Embedded Event Manager Commands 47**

event manager directory user	47
event manager environment	49
event manager policy	50
event manager refresh-time	52
event manager run	53
event manager scheduler suspend	54
show event manager directory user	55
show event manager environment	56
show event manager policy available	57
show event manager policy registered	58
show event manager refresh-time	60
show event manager statistics-table	61

---

**CHAPTER 3 Logging Services Commands 63**

logging	64
logging archive	66
logging buffered	67
logging console	68
logging console disable	70
logging container all	71
logging events link-status	72

logging events link-status (interface)	73
logging facility	75
logging file	77
logging format bsd	78
logging format rfc5424	79
logging history	80
logging history size	81
logging hostnameprefix	82
logging ipv4/ipv6	83
logging localfilesize	85
logging monitor	86
logging source-interface	87
logging suppress deprecated	88
logging suppress duplicates	89
logging trap	89
login-history	90
service timestamps	91
severity (logging)	92
show logging	93
show logging history	97
terminal monitor	98
enable-pam process-monitoring	99
disable-pam process-monitoring	100
show pam process-monitoring-status	100

---

**CHAPTER 4 Onboard Failure Logging Commands 103**

clear logging onboard	103
show logging onboard	104

---

**CHAPTER 5 Performance Management Commands 107**

monitor	107
monitor interface	110
performance-mgmt apply monitor	117
performance-mgmt apply statistics	120

performance-mgmt apply thresholds	122
performance-mgmt regular-expression	124
performance-mgmt resources dump local	124
performance-mgmt resources memory	125
performance-mgmt resources tftp-server	126
performance-mgmt statistics	127
performance-mgmt thresholds	129
show performance-mgmt bgp	138
show performance-mgmt interface	140
show performance-mgmt mpls	143
show performance-mgmt node	144
show performance-mgmt ospf	146
show running performance-mgmt	147

**CHAPTER 6****Diagnostic Commands 149**

show diag	150
diagnostic monitor interval	153
diagnostic monitor location disable	154
diagnostic monitor syslog	155
diagnostic monitor threshold	156
show dataplane-health status	157
show diagnostic trace location	158
show diagnostic result	159
monitor dataplane-health	161
clear packet-trace conditions all	166
clear packet-trace counters all	167
packet-trace condition	167
packet-trace start	169
packet trace stop	169
show packet-trace decode	170
show packet trace description	174
show packet-trace hw-status	174
show packet-trace result	176
show packet trace status	176

---

**CHAPTER 7**      **Graceful Handling of Out of Resource Situations Commands**    179

- oor hw    179
- show ofa transport async stats client fib    180
- show cef object-queue    181
- show controllers npu resources    182

---

**CHAPTER 8**      **IP Service Level Agreements Commands**    185

- access-list    187
- action (IP SLA)    188
- ageout    189
- buckets (history)    190
- buckets (statistics hourly)    191
- buckets (statistics interval)    192
- control disable    193
- datasize request    194
- destination address (IP SLA)    195
- destination port    196
- distribution count    197
- distribution interval    198
- exp    199
- filter    200
- force explicit-null    201
- frequency (IP SLA)    202
- history    203
- hw-timestamp disable    204
- interval    205
- ipsla    206
- key-chain    207
- life    207
- lives    208
- local-ip    209
- low-memory    210
- lsp selector ipv4    211

lsp-path	212
maximum hops	213
maximum paths (IP SLA)	213
monitor (IP SLA)	214
mpls discovery vpn	215
mpls lsp-monitor	216
operation	217
output interface	217
output nexthop	218
packet count	219
packet interval	220
path discover	221
path discover echo	222
path discover path	223
path discover scan	224
path discover session	225
react	226
react lpd	229
reaction monitor	230
reaction operation	231
reaction trigger	232
reply dscp	233
reply mode	234
responder	235
responder twamp light	236
samples	238
scan delete-factor	238
scan interval	239
schedule monitor	240
schedule operation	241
schedule period	242
show ipsla application	243
show ipsla history	244
show ipsla mpls discovery vpn	246

- show ipsla mpls lsp-monitor lpd 247
- show ipsla mpls lsp-monitor scan-queue 249
- show ipsla mpls lsp-monitor summary 250
- show ipsla responder statistics 252
- show ipsla statistics 253
- show ipsla statistics aggregated 256
- show ipsla statistics enhanced aggregated 263
- show ipsla twamp connection 266
- source address 266
- source port 267
- start-time 268
- statistics 270
- tag (IP SLA) 271
- target ipv4 272
- target pseudowire 274
- target traffic-eng 275
- threshold 276
- threshold type average 277
- threshold type consecutive 278
- threshold type immediate 279
- threshold type xofy 280
- timeout (IP SLA) 281
- tos 283
- ttl 284
- type icmp echo 285
- type icmp path-echo 285
- type icmp path-jitter 286
- type mpls lsp ping 287
- type mpls lsp trace 288
- type udp echo 290
- type udp jitter 290
- type udp ipv4 address 291
- verify-data 292
- vrf (IP SLA) 293

vrf (IP SLA MPLS LSP monitor) 294

---

**CHAPTER 9**

**Traffic Monitoring Commands 297**

clear controllers npu packet-latency instance 297

hw-module profile packet-loss-alert 299

hw-module profile port-rate-histogram 299

show drops all 300

show controllers npu debug-utils 302

show controllers npu stats counters-all 342

show controllers npu port-rate-histogram 347

show controllers npu stats counters-detail 348

show controllers npu stats counters-drop 351

show controllers npu stats traps-all 355

show controllers npu stats voq 358

show spp node-counters 361

show controllers npu card-fsm 364

show controllers npu driver 366

show controllers npu packet-latency instance 368

show controllers npu retimer 371

show controllers npu slice 372

show controllers npu trace 373

show controllers npu voq-usage 376

---

**CHAPTER 10**

**Monitoring Fabric Links Commands 379**

hw-module fabric-tsmon-port-reset disable 379

show controller fabric dashboard 380

show controller fabric dashboard capacity 381

show controller fabric dashboard link-all 383

show controller fabric health 385

show controller fabric plane 386

---

**CHAPTER 11**

**Tech-Support Commands 389**

show tech-support custom 389

---

<b>CHAPTER 12</b>	<b>System Health Check Commands</b>	<b>409</b>
	healthcheck	409
	healthcheck metric	410
	show healthcheck metric	411
	show healthcheck report	413
	show healthcheck status	414
	show healthcheck use-case packet-drop	415
	show smart-monitor	417
	use-case	420

---

<b>CHAPTER 13</b>	<b>Hardware Module Commands</b>	<b>423</b>
	Hardware Module Commands	423

---

<b>CHAPTER 14</b>	<b>Audit Monitoring Commands</b>	<b>425</b>
	linux security audit	425
	show linux security audit	429





## Preface

---

This preface contains these sections:

- [Changes to This Document, on page xiii](#)
- [Obtaining Documentation and Submitting a Service Request, on page xiii](#)

## Changes to This Document

This table lists the technical changes made to this document since it was first released.

*Table 1: Changes to This Document*

Date	Summary
February 2026	Republished for Release 26.1.1.
December 2024	Republished for Release 24.4.1.
June 2024	Republished for Release 24.2.1.
January 2024	Republished for Release 7.3.6.
August 2023	Republished for Release 7.3.5.
May 2021	Republished for Release 7.3.15.
February 2021	Republished for Release 7.3.1.
August 2020	Republished for Release 7.0.14.
March 2020	Initial release of this document.

## Obtaining Documentation and Submitting a Service Request





## CHAPTER 1

# Alarm Management and Logging Correlation Commands

---

This module describes the commands used to manage alarms and configure logging correlation rules for system monitoring on the router.

For detailed information about alarm management and logging correlation concepts, configuration tasks, and examples, see the *Implementing and Monitoring Alarms and Logging Correlation* module in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

For system logging commands, see the *Logging Services Commands* module.

For system logging concepts, see the *Implementing Logging Services* module in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [alarm](#), on page 2
- [all-alarms](#), on page 3
- [all-of-router](#), on page 3
- [clear logging correlator delete](#), on page 4
- [clear logging events delete](#), on page 5
- [clear logging events reset](#), on page 8
- [context-correlation](#), on page 9
- [logging correlator apply rule](#), on page 10
- [logging correlator apply ruleset](#), on page 11
- [logging correlator buffer-size](#), on page 13
- [logging correlator rule](#), on page 14
- [logging correlator ruleset](#), on page 16
- [logging events buffer-size](#), on page 16
- [logging events display-location](#), on page 17
- [logging events level](#), on page 19
- [logging events threshold](#), on page 20
- [logging suppress apply rule](#), on page 21
- [logging suppress rule](#), on page 22
- [nonrootcause](#), on page 23
- [reissue-nonbistate](#), on page 24
- [reparent](#), on page 25
- [rootcause](#), on page 26

- [show alarms](#), on page 27
- [show alarms brief](#), on page 31
- [show alarms detail](#), on page 32
- [show logging correlator buffer](#), on page 35
- [show logging correlator info](#), on page 36
- [show logging correlator rule](#), on page 37
- [show logging correlator ruleset](#), on page 38
- [show logging events buffer](#), on page 40
- [show logging events info](#), on page 43
- [show logging suppress rule](#), on page 44

## alarm

To specify a type of alarm to be suppressed by a logging suppression rule, use the **alarm** command in logging suppression rule configuration mode.

**alarm** *msg-category* *group-name* *msg-code*

### Syntax Description

*msg-category* Message category of the root message.

*group-name* Group name of the root message.

*msg-code* Message code of the root message.

### Command Default

No alarm types are configured by default.

### Command Modes

Logging suppression rule configuration

### Command History

Release	Modification
Release 7.0.12	This command was introduced.

### Usage Guidelines

No specific guidelines impact the use of this command.

### Task ID

Task ID	Operations
logging	read, write

### Examples

This example shows how to configure the logging suppression rule “commit” to suppress alarms whose root message are “MBGL”, with group name “commit” and message code “succeeded”:

```
RP/0/RP0/CPU0:router(config)# logging suppress rule commit
RP/0/RP0/CPU0:router(config-suppr-rule)# alarm MBGL COMMIT SUCCEEDED
```

## all-alarms

To configure a logging suppression rule to suppress all types of alarms, use the **all-alarms** command in logging suppression rule configuration mode.

### all-alarms

**Syntax Description** This command has no keywords or arguments.

**Command Default** No alarm types are configured by default.

**Command Modes** Logging suppression rule configuration

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	logging	read, write

**Examples** This example shows how to configure the logging suppression rule commit to suppress all alarms:

```
RP/0/RP0/CPU0:router(config)# logging suppress rule commit
RP/0/RP0/CPU0:router(config-suppr-rule)# all-alarms
```

## all-of-router

To apply a logging suppression rule to alarms originating from all locations on the router, use the **all-of-router** command in logging suppression apply rule configuration mode.

### all-of-router

**Syntax Description** This command has no keywords or arguments.

**Command Default** No scope is configured by default.

**Command Modes** Logging suppression apply rule configuration

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	logging	execute

**Examples**

This example shows how to apply the logging suppression rule “commit” to all locations on the router:

```
RP/0/RP0/CPU0:router(config)# logging suppress apply rule commit
RP/0/RP0/CPU0:router(config-suppr-apply-rule)# all-of-router
```

## clear logging correlator delete

To delete all messages or messages specified by a correlation ID from the logging correlator buffer, use the **clear logging correlator delete** command in XR EXEC mode.

**clear logging correlator delete** {**all-in-buffer***correlation-id*}

Syntax Description	all-in-buffer	Clears all messages in the logging correlator buffer.
	<i>correlation-id</i>	Correlation event record ID. Up to 14 correlation IDs can be specified, separated by a space. Range is 0 to 4294967294.

**Command Default** No messages are automatically deleted unless buffer capacity is reached.

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the [show logging correlator buffer, on page 35](#) command to confirm that records have been cleared. Use the [logging correlator buffer-size, on page 13](#) command to configure the capacity of the logging correlator buffer.

Task ID	Task ID	Operations
	logging	execute

**Examples**

This example shows how to clear all records from the logging correlator buffer:

```
RP/0/RP0/CPU0:router# clear logging correlator delete all-in-buffer
```

# clear logging events delete

To delete messages from the logging events buffer, use the **clear logging events delete** command in XR EXEC mode.

**clear logging events delete**

Syntax Description		
<b>admin-level-only</b>		Deletes only events at the administrative level.
<b>all-in-buffer</b>		Deletes all event IDs from the logging events buffer.
<b>bistate-alarms-set</b>		Deletes bi-state alarms in the SET state.
<b>category</b> <i>name</i>		Deletes events from a specified category.
<b>context</b> <i>name</i>		Deletes events from a specified context.
<b>event-hi-limit</b> <i>event-id</i>		Deletes events with an event ID equal to or lower than the event ID specified with the <i>event-id</i> argument. Range is 0 to 4294967294.
<b>event-lo-limit</b> <i>event-id</i>		Deletes events with an event ID equal to or higher than the event ID specified with the <i>event-id</i> argument. Range is 0 to 4294967294.
<b>first</b> <i>event-count</i>		Deletes events, beginning with the first event in the logging events buffer. For the <i>event-count</i> argument, enter the number of events to be deleted.
<b>group</b> <i>message-group</i>		Deletes events from a specified message group.
<b>last</b> <i>event-count</i>		Deletes events, beginning with the last event in the logging events buffer. For the <i>event-count</i> argument, enter the number of events to be deleted.
<b>location</b> <i>node-id</i>		Deletes messages from the logging events buffer for the specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<b>message</b> <i>message-code</i>		Deletes events with the specified message code.
<b>severity-hi-limit</b>		Deletes events with a severity level equal to or lower than the severity level specified with the <i>severity</i> argument.

---

<b>severity</b>	Severity level. Valid values are: <ul style="list-style-type: none"><li>• <b>alerts</b></li><li>• <b>critical</b></li><li>• <b>emergencies</b></li><li>• <b>errors</b></li><li>• <b>informational</b></li><li>• <b>notifications</b></li><li>• <b>warnings</b></li></ul> <p><b>Note</b> Settings for the severity levels and their respective system conditions are listed under the “Usage Guidelines” section for the <b>logging events level</b> command. Events of lower severity level represent events of higher importance.</p>
<b>severity-lo-limit</b>	Deletes events with a severity level equal to or higher than the severity level specified with the <i>severity</i> argument.
<b>timestamp-hi-limit</b>	Deletes events with a time stamp equal to or lower than the specified time stamp.

---

*hh : mm : ss [month] [day] [year]* Time stamp for the **timestamp-hi-limit** or **timestamp-lo-limit** keyword. The *month*, *day*, and *year* arguments default to the current month, day, and year, if not specified.

Ranges for the *hh : mm : ss month day year* arguments are as follows:

- *hh* :—Hours. Range is 00 to 23. You must insert a colon after the *hh* argument.
- *mm* :—Minutes. Range is 00 to 59. You must insert a colon after the *mm* argument.
- *ss*—Seconds. Range is 00 to 59.
- *month*—(Optional) The month of the year. The values for the *month* argument are:
  - january
  - february
  - march
  - april
  - may
  - june
  - july
  - august
  - september
  - october
  - november
  - december
- *day*—(Optional) Day of the month. Range is 01 to 31.
- *year*—(Optional) Year. Enter the last two digits of the year (for example, **04** for 2004). Range is 01 to 37.

---

<b>timestamp-lo-limit</b>	Deletes events with a time stamp equal to or higher than the specified time stamp.
---------------------------	--

---

<b>Command Default</b>	No messages are automatically deleted unless buffer capacity is reached.
------------------------	--

<b>Command Modes</b>	XR EXEC mode
----------------------	--------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

---

**Usage Guidelines**

This command is used to delete messages from the logging events buffer that match the keywords and arguments that you specify. The description is matched if all of the conditions are met.

Use the [show logging events buffer, on page 40](#) command to verify that events have been cleared from the logging events buffer.

Use the [logging events buffer-size, on page 16](#) command to configure the capacity of the logging events buffer.

**Task ID**

Task ID	Operations
logging	execute

**Examples**

This example shows how to delete all messages from the logging events buffer:

```
RP/0/RP0/CPU0:router# clear logging events delete all-in-buffer
```

## clear logging events reset

To reset bi-state alarms, use the **clear logging events reset** command in XR EXEC mode.

```
clear logging events reset {all-in-buffer event-id}
```

**Syntax Description**

**all-in-buffer** Resets all bi-state alarm messages in the event logging buffer.

*event-id* Event ID. Resets the bi-state alarm for an event or events. Up to 32 event IDs can be specified, separated by a space. Range is 0 to 4294967294.

**Command Default**

None

**Command Modes**

XR EXEC mode

**Command History****Release**

Release 7.0.12

**Modification**

This command was introduced.

**Usage Guidelines**

This command clears bi-state alarms messages from the logging events buffer. Bi-state alarms are generated by state changes associated with system hardware, such as a change of interface state from active to inactive, or a change in component temperature.

Use the [show logging events buffer, on page 40](#) command to display messages in the logging events buffer.

**Task ID**

Task ID	Operations
logging	execute

**Examples**

This example shows how to reset all bi-alarms in the logging events buffer:

```
RP/0/RP0/CPU0:router# clear logging events reset all-in-buffer
```

## context-correlation

To enable context-specific correlation, use the **context-correlation** command in either stateful or nonstateful correlation rule configuration mode. To disable correlation on context, use the **no** form of this command.

**context-correlation**  
**no context-correlation**

**Syntax Description**

This command has no keywords or arguments.

**Command Default**

Correlation on context is not enabled.

**Command Modes**

Stateful correlation rule configuration  
Nonstateful correlation rule configuration

**Command History**

Release	Modification
Release 7.0.12	This command was introduced.

**Usage Guidelines**

This command enables context-specific correlation for each of the contexts in which a given rule is applied. For example, if the rule is applied to two contexts (context1 and context2), messages that have context “context1” are correlated separately from those messages with context “context2”.

Use the [show logging correlator rule, on page 37](#) command to show the current setting for the context-correlation flag.

**Task ID**

Task ID	Operations
logging	read, write

**Examples**

This example shows how to enable correlation on context for a stateful correlation rule:

```
RP/0/RP0/CPU0:router(config)# logging correlator rule stateful_rule type stateful
RP/0/RP0/CPU0:router(config-corr-rule-st)# context-correlation
```

# logging correlator apply rule

To apply and activate a correlation rule and enter correlation apply rule configuration mode, use the **logging correlator apply rule** command in XR Config mode. To deactivate a correlation rule, use the **no** form of this command.

**logging correlator apply rule** *correlation-rule* [**all-of-router** | **context** *name* | **location** *node-id*]  
**no logging correlator apply rule** *correlation-rule* [**all-of-router** | **context** *name* | **location** *node-id*]

Syntax Description	
<i>correlation-rule</i>	Name of the correlation rule to be applied.
<b>all-of-router</b>	(Optional) Applies the correlation rule to the entire router.
<b>context</b> <i>name</i>	(Optional) Applies the correlation rule to the specified context. Unlimited number of contexts. The <i>name</i> string is limited to 32 characters.
<b>location</b> <i>node-id</i>	(Optional) Applies the correlation rule to the specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. Unlimited number of locations.

**Command Default** No correlation rules are applied.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** The **logging correlator apply rule** command is used to either add or remove apply settings for a given rule. These settings then determine which messages are correlated for the affected rules.

If the rule is applied to **all-of-router**, then correlation occurs for only those messages that match the configured cause values for the rule to be correlated, regardless of the context or location setting of that message.

If a rule is applied to a specific set of contexts or locations, then correlation occurs for only those messages that match both the configured cause values for the rule and at least one of those contexts or locations.

Use the [show logging correlator rule, on page 37](#) command to show the current apply settings for a given rule.



**Tip** When a rule is applied (or if a rule set that contains this rule is applied), then the rule definition cannot be modified through the configuration until the rule or rule set is once again unapplied.



**Tip** It is possible to configure apply settings at the same time for both a rule and zero or more rule sets that contain the rule. In this case, the apply settings for the rule are the union of all the apply configurations.

The **logging correlator apply rule** command allows you to enter submode (config-corr-apply-rule) to apply and activate rules:

```
RP/0/RP0/CPU0:router(config)# logging correlator apply rule statefull
RP/0/RP0/CPU0:router(config-corr-apply-rule)#?

  all-of-router  Apply the rule to all of the router
  clear          Clear the uncommitted configuration
  clear          Clear the configuration
  commit         Commit the configuration changes to running
  context        Apply rule to specified context
  describe      Describe a command without taking real actions
  do             Run an exec command
  exit           Exit from this submode
  location       Apply rule to specified location
  no             Negate a command or set its defaults
  pwd            Commands used to reach current submode
  root           Exit to the XR Config mode
  show           Show contents of configuration
RP/0/RP0/CPU0:router(config-corr-apply-rule)#
```

While in the submode, you can negate keyword options:

```
RP/0/RP0/CPU0:router(config-corr-apply-rule)# no all-of-router
RP/0/RP0/CPU0:router(config-corr-apply-rule)# no context
RP/0/RP0/CPU0:router(config-corr-apply-rule)# no location
```

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to apply a predefined correlator rule to a location:

```
RP/0/RP0/CPU0:router(config)# logging correlator apply rule rule1
RP/0/RP0/CPU0:router(config-corr-apply-rule)#
```

## logging correlator apply ruleset

To apply and activate a correlation rule set and enter correlation apply rule set configuration mode, use the **logging correlator apply ruleset** command in XR Config mode. To deactivate a correlation rule set, use the **no** form of this command.

```
logging correlator apply ruleset correlation-ruleset [all-of-router | context name | location node-id]
no logging correlator apply ruleset correlation-ruleset [all-of-router | context name | location node-id]
```

### Syntax Description

*correlation-ruleset* Name of the correlation rule set to be applied.

**all-of-router** (Optional) Applies the correlation rule set to the entire router.

---

**context** *name* (Optional) Applies the correlation rule set to the specified context. Unlimited number of contexts. The *name* string is limited to 32 characters.

---

**location** *node-id* (Optional) Applies the correlation rule to the specified node. The *node-id* argument is entered in the *rack/slot/module* notation. Unlimited number of locations.

---

**Command Default** No correlation rule sets are applied.

**Command Modes** XR Config mode

**Command History** **location** *node-id* (Optional) Displays location information for the specified node ID.

---

**Usage Guidelines** The **logging correlator apply ruleset** command is used to either add or remove apply settings for a given rule set. These settings then determine which messages are correlated for the affected rules.

If the rule set is applied to **all-of-router**, then correlation occurs for only those messages that match the configured cause values for the rule to be correlated, regardless of the context or location setting of that message.

If a rule set is applied to a specific set of contexts or locations, then correlation occurs for only those messages that match both the configured cause values for the rule and at least one of those contexts or locations.

Use the [show logging correlator ruleset, on page 38](#) command to show the current apply settings for a given rule set.



**Tip** When a rule is applied (or if a rule set that contains this rule is applied), then the rule definition cannot be modified through the configuration until the rule or rule set is once again unapplied.

---



**Tip** It is possible to configure apply settings at the same time for both a rule and zero or more rule sets that contain the rule. In this case, the apply settings for the rule are the union of all the apply configurations.

---

The **logging correlator apply ruleset** command allows you to enter the submode (config-corr-apply-ruleset) to apply and activate rule sets:

```
RP/0/RP0/CPU0:router(config)# logging correlator apply ruleset ruleset1
RP/0/RP0/CPU0:router(config-corr-apply-ruleset)#?
  all-of-router  Apply the rule to all of the router
  clear         Clear the uncommitted configuration
  clear         Clear the configuration
  commit        Commit the configuration changes to running
  context       Apply rule to specified context
  describe      Describe a command without taking real actions
  do            Run an exec command
  exit          Exit from this submode
  location      Apply rule to specified location
  no            Negate a command or set its defaults
  pwd           Commands used to reach current submode
  root         Exit to the XR Config mode
```

```
show          Show contents of configuration
RP/0/RP0/CPU0:router(config-corr-apply-ruleset) #
```

While in the submode, you can negate keyword options:

```
RP/0/RP0/CPU0:router(config-corr-apply-ruleset) # no all-of-router
RP/0/RP0/CPU0:router(config-corr-apply-ruleset) # no context
RP/0/RP0/CPU0:router(config-corr-apply-ruleset) # no location
```

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to apply a predefined correlator rule set to the entire router:

```
RP/0/RP0/CPU0:router(config) # logging correlator apply ruleset ruleset1
RP/0/RP0/CPU0:router(config-corr-apply-rule) # all-of-router
```

## logging correlator buffer-size

To configure the logging correlator buffer size, use the **logging correlator buffer-size** command in XR Config mode. To return the buffer size to its default setting, use the **no** form of this command.

```
logging correlator buffer-size bytes
no logging correlator buffer-size bytes
```

<b>Syntax Description</b>	<i>bytes</i> The size, in bytes, of the logging correlator buffer. Range is 1024 to 52428800 bytes.
---------------------------	---

<b>Command Default</b>	<i>bytes</i> : 81920 bytes
------------------------	----------------------------

<b>Command Modes</b>	XR Config mode
----------------------	----------------

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** The **logging correlator buffer-size** command configures the size of the correlation buffer. This buffer holds all the correlation records as well as the associated correlated messages. When the size of this buffer is exceeded, older correlations in the buffer are replaced with the newer incoming correlations. The criteria that are used to recycle these buffers are:

- First, remove the oldest nonstateful correlation records from the buffer.
- Then, if there are no more nonstateful correlations present; remove the oldest stateful correlation records.

Use the [show logging correlator info, on page 36](#) command to confirm the size of the buffer and the percentage of buffer space that is currently used. The [show logging events buffer, on page 40](#) **all-in-buffer** command can be used to show the details of the buffer contents.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to set the logging correlator buffer size to 90000 bytes:

```
RP/0/RP0/CPU0:router(config)# logging correlator buffer-size 90000
```

## logging correlator rule

To define the rules for correlating messages, use the **logging correlator rule** command in XR Config mode. To delete the correlation rule, use the **no** form of this command.

```
logging correlator rule correlation-rule type {stateful | nonstateful}
no logging correlator rule correlation-rule
```

### Syntax Description

<i>correlation-rule</i>	Name of the correlation rule to be applied.
<b>type</b>	Specifies the type of rule.
<b>stateful</b>	Enters stateful correlation rule configuration mode.
<b>nonstateful</b>	Enters nonstateful correlation rule configuration mode.

### Command Default

No rules are defined.

### Command Modes

XR Config mode

### Syntax Description

<b>location</b> <i>node-id</i>	(Optional) Displays location information for the specified node ID.
--------------------------------	---

### Usage Guidelines

The **logging correlator rule** command defines the correlation rules used by the correlator to store messages in the logging correlator buffer. A rule must, at a minimum, consist of three elements: a root-cause message, one or more non-root-cause messages, and a timeout.

When the root-cause message, or a non-root-cause message is received, the timer is started. Any non-root-cause messages are temporarily held, while the root-cause is sent to syslog. If, after the timer has expired, the root-cause and at least one non-root-cause message was received, a correlation is created and stored in the correlation buffer.

A rule can be of type stateful or nonstateful. Stateful rules allow non-root-cause messages to be sent from the correlation buffer if the bi-state root-cause alarm clears at a later time. Nonstateful rules result in correlations that are fixed and immutable after the correlation occurs.

Below are the rule parameters that are available while in stateful correlation rule configuration mode:

```
RP/0/RP0/CPU0:router(config-corr-rule-st)# ?

context-correlation  Specify enable correlation on context
nonrootcause         nonrootcause alarm
reissue-nonbistate   Specify reissue of non-bistate alarms on parent clear
reparent             Specify reparent of alarm on parent clear
rootcause            Specify root cause alarm: Category/Group/Code combos
timeout              Specify timeout
timeout-rootcause    Specify timeout for root-cause
```

```
RP/0/RP0/CPU0:router(config-corr-rule-st)#
```

Below are the rule parameters that are available while in nonstateful correlation rule configuration mode:

```
RP/0/RP0/CPU0:router(config-corr-rule-nonst)# ?

context-correlation  Specify enable correlation on context
nonrootcause         nonrootcause alarm
rootcause            Specify root cause alarm: Category/Group/Code combos
timeout              Specify timeout
timeout-rootcause    Specify timeout for root-cause
RP/0/RP0/CPU0:router(config-corr-rule-nonst)#
```



**Note** A rule cannot be deleted or modified while it is applied, so the **no logging correlator apply** command must be used to unapply the rule before it can be changed.



**Note** The name of the correlation rule must be unique across all rule types and is limited to a maximum length of 32 characters.

Use the [show logging correlator buffer, on page 35](#) to display messages stored in the logging correlator buffer.

Use the [logging correlator buffer-size, on page 13](#) command to verify correlation rule settings.

## Task ID

Task ID	Operations
logging	read, write

## Examples

This example shows how to enter stateful correlation rule configuration mode to specify a collection duration period time for correlator messages sent to the logging events buffer:

```
RP/0/RP0/CPU0:router(config)# logging correlator rule state_rule type stateful
RP/0/RP0/CPU0:router(config-corr-rule-st)# timeout 50000
```

## logging correlator ruleset

To enter correlation rule set configuration mode and define a correlation rule set, use the **logging correlator ruleset** command in XR Config mode. To delete the correlation rule set, use the **no** form of this command.

**logging correlator ruleset** *correlation-ruleset* **rulename** *correlation-rulename*  
**no logging correlator ruleset** *correlation-ruleset*

### Syntax Description

<i>correlation-ruleset</i>	Name of the correlation rule set to be applied.
<b>rulename</b>	Specifies the correlation rule name.
<i>correlation-rulename</i>	Name of the correlation rule name to be applied.

### Command Default

No rule sets are defined.

### Command Modes

XR Config mode

### Command History

Release	Modification
Release 7.0.12	This command was introduced.

### Usage Guidelines

The **logging correlator ruleset** command defines a specific correlation rule set. A rule set name must be unique and is limited to a maximum length of 32 characters.

To apply a logging correlator rule set, use the [logging correlator apply ruleset, on page 11](#) command.

### Examples

This example shows how to specify a logging correlator rule set:

```
RP/0/RP0/CPU0:router(config)# logging correlator ruleset ruleset_1
RP/0/RP0/CPU0:router(config-corr-ruleset)# rulename state_rule
RP/0/RP0/CPU0:router(config-corr-ruleset)# rulename state_rule2
```

## logging events buffer-size

To configure the size of the logging events buffer, use the **logging events buffer-size** command in XR Config mode. To restore the buffer size to the default value, use the **no** form of this command.

**logging events buffer-size** *bytes*  
**no logging events buffer-size** *bytes*

### Syntax Description

<i>bytes</i>	The size, in bytes, of the logging events buffer. Range is 1024 to 1024000 bytes. The default is 43200 bytes.
--------------	---

### Command Default

*bytes*: 43200

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

### Usage Guidelines



**Note** The logging events buffer automatically adjusts to a multiple of the record size that is lower than or equal to the value configured for the *bytes* argument.

Use the [show logging events info, on page 43](#) command to confirm the size of the logging events buffer.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to increase the logging events buffer size to 50000 bytes:

```
RP/0/RP0/CPU0:router(config)# logging events buffer-size 50000
```

## logging events display-location

To enable the alarm source location display field for bistate alarms in the output of the **show logging** and **show logging events buffer** command, use the **logging events display-location** command in XR Config mode.

**logging events display-location**  
**no logging events display-location**

**Syntax Description** This command has no keywords or arguments.

**Command Default** The alarm source location display field in **show logging** output is not enabled.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** The output of the **show logging** command for bistate alarms has been enhanced. Previously, the alarm source field in the output displayed the location of the process that logged the alarm. Use the **logging events display-location** command to configure the output of the **show logging** command to include an additional

source field that displays the actual source of the alarm. The alarm source is displayed in a format that is consistent with alarm source identification in other platforms and equipment. The new alarm source display field aids accurate identification and isolation of the source of a fault.

By default, the output of the **show logging** command does not include the new alarm source identification field. If you enable the alarm source location display field in the **show logging** output, the same naming conventions are also used to display hardware locations in the **show diag** and **show inventory** command output.



**Note** Customer OSS tools may rely on the default output to parse and interpret the alarm output.

Task ID	Task ID	Operations
	logging	read, write

## Examples

This example shows the **show logging** command output for bistate alarms before and after enabling the alarm source location display field:

```
RP/0/RP0/CPU0:router# show logging | inc Interface

Wed Aug 13 01:30:58.461 UTC
LC/0/2/CPU0:Aug 12 01:20:54.073 : ifmgr[159]: %PKT_INFRA-LINK-5-CHANGED : Interface
HundredGigE0/2/0/0, changed state to Administratively Down
LC/0/2/CPU0:Aug 12 01:20:59.450 : ifmgr[159]: %PKT_INFRA-LINK-3-UPDOWN : Interface
HundredGigE0/2/0/0, changed state to Down
LC/0/2/CPU0:Aug 12 01:20:59.451 : ifmgr[159]: %PKT_INFRA-LINEPROTO-5-UPDOWN : Line protocol
on Interface HundredGigE0/2/0/0, changed state to Down
RP/0/RP0/CPU0:Aug 12 01:22:11.496 : ifmgr[202]: %PKT_INFRA-LINK-5-CHANGED : Interface
MgmtEth0/RP0/CPU0/0, changed state to Administratively Down
RP/0/RP0/CPU0:Aug 12 01:23:23.842 : ifmgr[202]: %PKT_INFRA-LINK-3-UPDOWN : Interface
MgmtEth0/RP0/CPU0/0, changed state to Down
RP/0/RP0/CPU0:Aug 12 01:23:23.843 : ifmgr[202]: %PKT_INFRA-LINEPROTO-5-UPDOWN : Line protocol
on Interface MgmtEth0/RP0/CPU0/0, changed state to Down
RP/0/RP0/CPU0:Aug 12 01:23:23.850 : ifmgr[202]: %PKT_INFRA-LINK-3-UPDOWN : Interface
MgmtEth0/RP0/CPU0/0, changed state to Up
RP/0/RP0/CPU0:Aug 12 01:23:23.856 : ifmgr[202]: %PKT_INFRA-LINEPROTO-5-UPDOWN : Line protocol
on Interface MgmtEth0/RP0/CPU0/0, changed state to Up

RP/0/RP0/CPU0:router# config
Wed Aug 13 01:31:32.517 UTC

RP/0/RP0/CPU0:router(config)# logging events display-location

RP/0/RP0/CPU0:router(config)# commit

RP/0/RP0/CPU0:router(config)# exit

RP/0/RP0/CPU0:router# show logging | inc Interface

Wed Aug 13 01:31:48.141 UTC
LC/0/2/CPU0:Aug 12 01:20:54.073 : ifmgr[159]: %PKT_INFRA-LINK-5-CHANGED : Interface
HundredGigE0/2/0/0, changed state to Administratively Down
LC/0/2/CPU0:Aug 12 01:20:59.450 : ifmgr[159]: %PKT_INFRA-LINK-3-UPDOWN : interface
```

```

HundredGigE0/2/0/0: Interface HundredGigE0/2/0/0, changed state to Down
LC/0/2/CPU0:Aug 12 01:20:59.451 : ifmgr[159]: %PKT_INFRA-LINEPROTO-5-UPDOWN : interface
HundredGigE0/2/0/0: Line protocol on Interface HundredGigE0/2/0/0, changed state to Down
RP/0/RP0/CPU0:Aug 12 01:22:11.496 : ifmgr[202]: %PKT_INFRA-LINK-5-CHANGED : Interface
MgmtEth0/RP0/CPU0/0, changed state to Administratively Down
RP/0/RP0/CPU0:Aug 12 01:23:23.842 : ifmgr[202]: %PKT_INFRA-LINK-3-UPDOWN : interface
MgmtEth0/RP0/CPU0/0: Interface MgmtEth0/RP0/CPU0/0, changed state to Down
RP/0/RP0/CPU0:Aug 12 01:23:23.843 : ifmgr[202]: %PKT_INFRA-LINEPROTO-5-UPDOWN : interface
MgmtEth0/RP0/CPU0/0: Line protocol on Interface MgmtEth0/RP0/CPU0/0, changed state to Down

RP/0/RP0/CPU0:Aug 12 01:23:23.850 : ifmgr[202]: %PKT_INFRA-LINK-3-UPDOWN : interface
MgmtEth0/RP0/CPU0/0: Interface MgmtEth0/RP0/CPU0/0, changed state to Up
RP/0/RP0/CPU0:Aug 12 01:23:23.856 : ifmgr[202]: %PKT_INFRA-LINEPROTO-5-UPDOWN : interface
MgmtEth0/RP0/CPU0/0: Line protocol on Interface MgmtEth0/RP0/CPU0/0, changed state to Up

```

## logging events level

To specify a severity level for logging alarm messages, use the **logging events level** command in XR Config mode. To return to the default value, use the **no** form of this command.

**logging events level** *severity*

**no logging events level**

### Syntax Description

*severity* Severity level of events to be logged in the logging events buffer, including events of a higher severity level (numerically lower). See the "Usage Guidelines" for severity levels and their respective system conditions.

### Command Default

All severity levels (from 0 to 6) are logged.

### Command Modes

XR Config mode

### Command History

Release	Modification
Release 7.0.12	This command was introduced.

### Usage Guidelines

This command specifies the event severity necessary for alarm messages to be logged. Severity levels can be specified by the severity level description (for example, **warnings**). When a severity level is specified, events of equal or lower severity level are also written to the logging events buffer.



**Note** Events of lower severity level represent events of higher importance.

This table lists the system severity levels and their corresponding numeric values, and describes the corresponding system condition.

**Table 2: Alarm Severity Levels for Event Logging**

Severity Level Keyword	Numeric Value	Logged System Messages
emergencies	0	System is unusable.
alerts	1	Critical system condition exists requiring immediate action.
critical	2	Critical system condition exists.
errors	3	Noncritical errors.
warnings	4	Warning conditions.
notifications	5	Notifications of changes to system configuration.
informational	6	Information about changes to system state.

---

**Task ID**

**Task ID**    **Operations**

logging read,  
write

---



---

**Examples**

This example shows how to set the severity level for notification to warnings (level 4):

```
RP/0/RP0/CPU0:router(config)# logging events level warnings
```

## logging events threshold

To specify the logging events buffer threshold that, when surpassed, generates an alarm, use the **logging events threshold** command in XR Config mode. To return to the default value, use the **no** form of this command.

**logging events threshold** *percent*  
**no logging events threshold**

---

**Syntax Description**

*percent* Minimum percentage of buffer capacity that must be allocated to messages before an alarm is generated. Range is 10 to 100. The default is 80 percent.

---



---

**Command Default**

*percent*: 80 percent

---

**Command Modes**

XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines**

This command can be configured to generate an alarm when 10 percent or more of the event buffer capacity is available.

The logging events buffer is circular; that is, when full it overwrites the oldest messages in the buffer. Once the logging events buffer reaches full capacity, the next threshold alarm is generated when the number of overwritten events surpasses the percentage of buffer capacity allocated to messages.

Use the [show logging events info, on page 43](#) command to display the current threshold setting.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to configure the threshold setting to 95 percent of buffer capacity:

```
RP/0/RP0/CPU0:router(config)# logging events threshold 95
```

## logging suppress apply rule

To apply and activate a logging suppression rule, use the **logging suppress apply rule** command in XR Config mode. To deactivate a logging suppression rule, use the **no** form of this command.

```
logging suppress apply rule rule-name [all-of-router | source location node-id]  
no logging suppress apply rule rule-name [all-of-router | source location node-id]
```

Syntax Description		
	<i>rule-name</i>	Name of the logging suppression rule to activate.
	<b>all-of-router</b>	(Optional) Applies the specified logging suppression rule to alarms originating from all locations on the router.
	<b>source location</b> <i>node-id</i>	(Optional) Applies the specified logging suppression rule to alarms originating from the specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

**Command Default** No logging suppression rules are applied.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	logging	read, write

**Examples** This example shows how to apply a predefined logging suppression rule to the entire router:

```
RP/0/RP0/CPU0:router(config)#logging suppress apply rule infobistate
RP/0/RP0/CPU0:router(config-suppr-apply-rule)# all-of-router
```

## logging suppress rule

To create a logging suppression rule and enter the configuration mode for the rule, use the **logging suppress rule** command in the XR Config mode. To remove a logging suppression rule, use the **no** form of this command.

**logging suppress rule** *rule-name* [**alarm** *msg-category* *group-name* *msg-code* | **all-alarms**]  
**no logging suppress rule** *rule-name*

<b>Syntax Description</b>	<i>rule-name</i>	Name of the rule.
	<b>alarm</b>	(Optional) Specifies a type of alarm to be suppressed by the logging suppression rule.
	<i>msg-category</i>	Message category of the root message.
	<i>group-name</i>	Group name of the root message.
	<i>msg-code</i>	Message code of the root message.
	<b>all-alarms</b>	(Optional) Specifies that the logging suppression rule suppresses all types of alarms.

**Command Default** No logging suppression rules exist by default.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** If you use the **logging suppress rule** command without specifying a non-root-cause alarm, you can do so afterwards, by entering the **alarm** keyword at the prompt.

Task ID	Task ID	Operations
	logging	read, write

**Examples**

This example shows how to create a logging suppression rule called infobistate:

```
RP/0/RP0/CPU0:router(config)# logging suppress rule infobistate
RP/0/RP0/CPU0:router(config-suppr-rule)#
```

## nonrootcause

To enter the non-root-cause configuration mode and specify a non-root-cause alarm, use the **nonrootcause** command in stateful or nonstateful correlation rule configuration modes.

```
nonrootcause alarm msg-category group-name msg-code
no nonrootcause
```

**Syntax Description**

**alarm** Non-root-cause alarm.

*msg-category* (Optional) Message category assigned to the message. Unlimited messages (identified by message category, group, and code) can be specified, separated by a space.

*group-name* (Optional) Message group assigned to the message. Unlimited messages (identified by message category, group, and code) can be specified, separated by a space.

*msg-code* (Optional) Message code assigned to the message. Unlimited messages (identified by message category, group, and code) can be specified, separated by a space.

**Command Default**

Non-root-cause configuration mode and alarm are not specified.

**Command Modes**

Stateful correlation rule configuration

Nonstateful correlation rule configuration

**Command History****Release**

Release 7.0.12

**Modification**

This command was introduced.

**Usage Guidelines**

This command is used to enter the non-root-cause configuration mode to configure one or more non-root-cause alarms associated with a particular correlation rule.

Use the [show logging events info, on page 43](#) command to display the current threshold setting.

If you use the **nonrootcause** command without specifying a non-root-cause alarm, you can do so afterwards, by entering the **alarm** keyword at the prompt.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to enter non-root-cause configuration mode and display the commands that are available under this mode:

```
RP/0/RP0/CPU0:router(config)# logging correlator rule state_rule type stateful
RP/0/RP0/CPU0:router(config-corr-rule-st)# nonrootcause
(config-corr-rule-st-nonrc)# ?
alarm      Specify non-root cause alarm: Category/Group/Code combos
clear      Clear the uncommitted configuration
clear      Clear the configuration
commit     Commit the configuration changes to running
describe   Describe a command without taking real actions
do         Run an exec command
exit       Exit from this submode
no         Negate a command or set its defaults
pwd        Commands used to reach current submode
root       Exit to the XR Config mode
show       Show contents of configuration
```

## reissue-nonbistate

To reissue non-bistate alarm messages (events) from the correlator log after the root-cause alarm of a stateful rule clears, use the **reissue-nonbistate** command in stateful or nonstateful correlation rule configuration modes. To disable the reissue-nonbistate flag, use the **no** form of this command.

**reissue-nonbistate**  
**no reissue-nonbistate**

<b>Syntax Description</b>	This command has no keywords or arguments.
<b>Command Default</b>	Non-bistate alarm messages are not reissued after their root-cause alarm clears.
<b>Command Modes</b>	Stateful correlation rule configuration Nonstateful correlation rule configuration

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

<b>Usage Guidelines</b>	By default, when the root-cause alarm of a stateful correlation is cleared, any non-root-cause, bistate messages being held for that correlation are silently deleted and are not sent to syslog. If the non-bistate messages should be sent, use the <b>reissue-nonbistate</b> command for the rules where this behavior is required.
-------------------------	--

Task ID	Task ID	Operations
	logging	read, write

**Examples**

This example shows how to reissue nonbistate alarm messages:

```
RP/0/RP0/CPU0:router(config)# logging correlator rule state_rule type stateful
RP/0/RP0/CPU0:router(config-corr-rule-st)# reissue-nonbistate
```

# reparent

To reparent non-root-cause messages to the next highest active rootcause in a hierarchical correlation when their immediate parent clears, use the **reparent** command in stateful correlation rule configuration mode. To disable the reparent flag, use the **no** form of this command.

**reparent**  
**no reparent**

**Syntax Description**

This command has no keywords or arguments.

**Command Default**

A non-root-cause alarm is sent to syslog after a root-cause parent clears.

**Command Modes**

Stateful correlation rule configuration

**Command History**

Release	Modification
Release 7.0.12	This command was introduced.

**Usage Guidelines**

Use the **reparent** command to specify what happens to non-root-cause alarms in a hierarchical correlation after their root-cause alarm clears. The following scenario illustrates why you may want to set the reparent flag.

Rule 1 with rootcause A and non-rootcause B

Rule 2 with rootcause B and non-rootcause C

(Alarm B is a non-rootcause for Rule 1 and a rootcause for Rule 2. For the purpose of this example, all the messages are bistate alarms.)

If both Rule 1 and Rule 2 each trigger a successful correlation, then a hierarchy is constructed that links these two correlations. When alarm B clears, alarm C would normally be sent to syslog, but the operator may choose to continue suppression of alarm C (hold it in the correlation buffer); because the rootcause that is higher in the hierarchy (alarm A) is still active.

The reparent flag allows you to specify non-root-cause behavior—if the flag is set, then alarm C becomes a child of rootcause alarm A; otherwise, alarm C is sent to syslog.



**Note** Stateful behavior, such as reparenting, is supported only for bistate alarms. Bistate alarms are associated with system hardware, such as a change of interface state from active to inactive.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to set the reparent flag for a stateful rule:

```
RP/0/RP0/CPU0:router(config)# logging correlator rule state_rule type stateful
RP/0/RP0/CPU0:router(config-corr-rule-st)# reparent
```

## rootcause

To specify the root-cause alarm message, use the **rootcause** command in stateful or nonstateful correlation rule configuration modes.

```
rootcause msg-category group-name msg-code
no rootcause
```

Syntax Description	
<i>msg-category</i>	Message category of the root message.
<i>group-name</i>	Group name of the root message.
<i>msg-code</i>	Message code of the root message.

**Command Default** Root-cause alarm is not specified.

**Command Modes** Stateful correlation rule configuration  
Nonstateful correlation rule configuration

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** This command is used to configure the root-cause message for a particular correlation rule. Messages are identified by their message category, group, and code. The category, group, and code each can contain up to 32 characters. The root-cause message for a stateful correlation rule should be a bi-state alarm.

Use the [show logging events info, on page 43](#) command to display the root-cause and non-root-cause alarms for a correlation rule.

Task ID	Task ID	Operations
	logging	read, write

## show alarms

To display alarms related to System Monitoring, use the **show alarms** command in the System Monitoring mode.

### show alarms

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** System Monitoring EXEC

**Command History**

Release	Modification
Release 3.9.0	This command was introduced.

**Usage Guidelines** Use the [show alarms brief, on page 31](#) to view the router alarms in brief. Use the [show alarms detail, on page 32](#) to view the router alarms in detail.

Task ID	Task ID	Operations
	logging	read

This example displays the output of the **show alarms** command:

```
RP/0/RSP0/CPU0:router#show alarms
-----
Active Alarms (Brief) for 1/0
-----
Location      Severity    Group      Set time          Description
-----
0/1/CPU0     Critical    Fabric     11/11/2022 10:34:22 IST  LC Bandwidth Insufficient To Support
Line Rate Traffic
1/0/CPU0     Major      Software   11/11/2022 10:43:36 IST  Optics1/0/0/20 - hw_optics: RX
LOS LANE-0 ALARM
1/0/CPU0     Major      Software   11/11/2022 10:43:36 IST  Optics1/0/0/20 - hw_optics: RX
LOS LANE-1 ALARM
-----
History Alarms (Brief) for 1/0
-----
```

## show alarms

No entries.

-----  
 Suppressed Alarms (Brief) for 1/0  
 -----

No entries.

-----  
 Conditions (Brief) for 1/0  
 -----

No entries.

-----  
 System Scoped Active Alarms (Brief)  
 -----

Location	Severity	Group	Set Time	Description
D1	Major	Environ	11/16/2022 11:37:41 IST	Power Group redundancy lost.
D1/PM1 (PM_OUTPUT_EN_PIN_HI).	Major	Environ	11/16/2022 11:37:41 IST	Power Module Output Disabled

-----  
 System Scoped History Alarms (Brief)  
 -----

Location	Severity	Group	Set Time	Clear Time	Description
7/0 LANE-0 ALARM	Major	Fabric	07/14/2022 11:51:38 IST		7/0/1/6 - hw_optics: RX LOS
7/0 LANE-1 ALARM	Major	Fabric	07/18/2022 12:29:02 IST	07/14/2022 11:51:38 IST	7/0/1/6 - hw_optics: RX LOS
7/0/CPU0	Critical	Fabric	09/13/2022 11:40:53 IST	09/09/2022 21:50:13 IST	LC Bandwidth Insufficient To Support Line Rate Traffic

-----  
 Active Alarms (Brief) for EDT  
 -----

Location	Severity	Group	Set Time	Description
D1	Major	Environ	11/16/2022 11:37:41 IST	Power Group redundancy lost.
D1/PM1 (PM_OUTPUT_EN_PIN_HI).	Major	Environ	11/16/2022 11:37:41 IST	Power Module Output Disabled
E0	Major	Environ	11/16/2022 11:37:42 IST	Power Group redundancy lost.

-----  
 Active Alarms (Brief) for EDT  
 -----

Location	Severity	Group	Set Time	Description
D1	Major	Environ	11/16/2022 11:37:41 IST	Power Group redundancy lost.
D1/PM1 (PM_OUTPUT_EN_PIN_HI).	Major	Environ	11/16/2022 11:37:41 IST	Power Module Output Disabled
E0	Major	Environ	11/16/2022 11:37:42 IST	Power Group redundancy lost.

-----  
 History Alarms (Detail) for 1/0  
 -----

-----  
 No entries.

-----  
 Suppressed Alarms (Detail) for 1/0  
 -----

No entries.

-----  
 Conditions (Detail) for 1/0  
 -----

No entries.

-----  
 Clients for 1/0  
 -----

Agent Name: optics\_fm.xml  
 Agent ID: 196678  
 Agent Location: 1/0/CPU0  
 Agent Handle: 93827323237168  
 Agent State: Registered  
 Agent Type: Producer  
 Agent Filter Display: false  
 Agent Subscriber ID: 0  
 Agent Filter Severity: Unknown  
 Agent Filter State: Unknown  
 Agent Filter Group: Unknown  
 Agent Connect Count: 1  
 Agent Connect Timestamp: 11/16/2022 20:40:18 IST  
 Agent Get Count: 0  
 Agent Subscribe Count: 0  
 Agent Report Count: 8

-----  
 Statistics for 1/0  
 -----

Alarms Reported: 9  
 Alarms Dropped: 0  
 Active (bi-state set): 9  
 History (bi-state cleared): 0  
 Suppressed: 0  
 Dropped Invalid AID: 0  
 Dropped No Memory: 0  
 Dropped DB Error: 0  
 Dropped Clear Without Set: 0  
 Dropped Duplicate: 0  
 Cache Hit: 0  
 Cache Miss: 0

-----  
 Active Alarms (Detail) for 7/0  
 -----

Description: LC Bandwidth Insufficient To Support Line Rate Traffic

Location: 7/0/CPU0  
 AID: XR\_FABRIC/SW\_MISC\_ERR/18  
 Tag String: FAM\_FAULT\_TAG\_HW\_FIA\_LC\_BANDWIDTH  
 Module Name: N/A  
 EID: MODULE/MSC/1:MODULE/Slice/1:MODULE/PSE/1  
 Reporting Agent ID: 524365  
 Pending Sync: false  
 Severity: Critical  
 Status: Set  
 Group: Fabric  
 Set Time: 11/16/2022 20:42:41 IST  
 Clear Time: -

## show alarms

```

Service Affecting:      NotServiceAffecting
Transport Direction:   NotSpecified
Transport Source:      NotSpecified
Interface:              N/A
Alarm Name:            LC-BW-DEG

```

```
-----
History Alarms (Detail) for 7/0
-----
```

```
No entries.
```

```
-----
Suppressed Alarms (Detail) for 7/0
-----
```

```
No entries.
```

```
-----
Conditions (Detail) for 7/0
-----
```

```
No entries.
```

```
-----
Clients for 7/0
-----
```

```

Agent Name:            optics_fm.xml
Agent ID:              196678
Agent Location:        7/0/CPU0
Agent Handle:          94180835316528
Agent State:           Registered
Agent Type:            Unknown
Agent Filter Display:  false
Agent Subscriber ID:   0
Agent Filter Severity: Unknown
Agent Filter State:    Unknown
Agent Filter Group:    Unknown
Agent Connect Count:   1
Agent Connect Timestamp: 11/16/2022 20:40:11 IST
Agent Get Count:       0
Agent Subscribe Count: 0
Agent Report Count:    0

```

```
-----
Agent Name:            fia_fm.xml
Agent ID:              524365
Agent Location:        7/0/CPU0
Agent Handle:          94180835313792
Agent State:           Registered
Agent Type:            Producer
Agent Filter Display:  false
Agent Subscriber ID:   0
Agent Filter Severity: Unknown
Agent Filter State:    Unknown
Agent Filter Group:    Unknown
Agent Connect Count:   1
Agent Connect Timestamp: 11/16/2022 20:39:59 IST
Agent Get Count:       0
Agent Subscribe Count: 0
Agent Report Count:    1

```

```
Statistics for 7/0
-----
```

```

Alarms Reported:      1
Alarms Dropped:       0
Active (bi-state set): 1
History (bi-state cleared): 0
Suppressed:           0
Dropped Invalid AID:  0
Dropped No Memory:    0
Dropped DB Error:     0
Dropped Clear Without Set: 0

```

```
Dropped Duplicate:      0
Cache Hit:              0
Cache Miss:             0
```

Related Commands	Command	Description
	<a href="#">show alarms brief, on page 31</a>	Displays router alarms in brief.
	<a href="#">show alarms detail, on page 32</a>	Displays router alarms in detail.

## show alarms brief

To display alarms related to System Monitoring, use the **show alarms brief** command in the System Monitoring mode.

```
show alarms brief [ aid [ active { * } ] | card [ location location-ID [ active | conditions |
history | suppressed ] ] | system [ active | conditions | history | suppressed ] ]
```

Syntax Description		
<b>brief</b>		Displays alarms in brief.
<b>aid</b>		Displays system scope alarms related data.
<b>card</b>		Displays card scope alarms related data.
<b>system</b>		Displays brief system scope related data.
<b>active</b>		Displays the active alarms at this scope.
<b>conditions</b>		Displays the conditions present at this scope.
<b>history</b>		Displays the history alarms at this scope.
<b>suppressed</b>		Displays the suppressed alarms at this scope.

**Command Default** None

**Command Modes** System Monitoring EXEC

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task	Operations
	logging	read

This example displays the output of the **show alarms brief** command:

```
RP/0/RSP0/CPU0:router#show alarms brief
```

```
-----
Active Alarms for 1/0
-----
Location      Severity  Group      Set time          Description
-----
0/1/CPU0     Critical  Fabric     11/11/2022 10:34:22 IST  LC Bandwidth Insufficient To Support
Line Rate Traffic
1/0/CPU0     Major    Software   11/11/2022 10:43:36 IST  Optics1/0/0/20 - hw_optics:  RX
LOS LANE-0 ALARM
1/0/CPU0     Major    Software   11/11/2022 10:43:36 IST  Optics1/0/0/20 - hw_optics:  RX
LOS LANE-1 ALARM
-----
History Alarms for 1/0
-----
No entries.

-----
Suppressed Alarms for 1/0
-----
No entries.

-----
Conditions for 1/0
-----
No entries.
```

#### Related Commands

Command	Description
<a href="#">show alarms, on page 27</a>	Displays router alarms in brief and detail.
<a href="#">show alarms detail, on page 32</a>	Displays router alarms in detail.

## show alarms detail

To display alarms related to System Monitoring, use the **show alarms detail** command in the System Monitoring mode.

```
show alarms detail [ aid [ active { * } ] | card [ location location-ID [ active | conditions |
history | suppressed ] ] | system [ active | clients | conditions | history | stats | suppressed
] ]
```

#### Syntax Description

<b>detail</b>	Displays alarms in detail.
<b>aid</b>	Displays system scope alarms related data.
<b>card</b>	Displays card scope alarms related data.
<b>system</b>	Displays system scope alarms related data.

<b>active</b>	Displays the active alarms at this scope.
<b>clients</b>	Displays the clients associated with this service.
<b>conditions</b>	Displays the conditions present at this scope.
<b>history</b>	Displays the history alarms at this scope.
<b>stats</b>	Displays the service statistics.
<b>suppressed</b>	Displays the suppressed alarms at this scope.

**Command Default**

None

**Command Modes**

System Monitoring EXEC

**Command History**

Release	Modification
Release 3.9.0	This command was introduced.

**Usage Guidelines**

No specific guidelines impact the use of this command.

**Task ID**

Task ID	Operations
logging read	

This example displays the output of the **show alarms detail** command:

```
RP/0/RSP0/CPU0:router#show alarms detail
```

```
-----
Active Alarms for 1/0
-----
```

```
Description:          LC Bandwidth Insufficient To Support Line Rate Traffic
```

```
Location:             1/0/CPU0
AID:                  XR_FABRIC/SW_MISC_ERR/18
Tag String:           FAM_FAULT_TAG_HW_FIA_LC_BANDWIDTH
Module Name:          N/A
EID:                  MODULE/MSC/1:MODULE/Slice/1:MODULE/PSE/1
Reporting Agent ID:   524365
Pending Sync:         false
Severity:             Critical
Status:               Set
Group:                Fabric
Set Time:             11/11/2022 10:34:22 IST
Clear Time:           -
Service Affecting:    NotServiceAffecting
Transport Direction:  NotSpecified
Transport Source:     NotSpecified
Interface:            N/A
Alarm Name:           LC-BW-DEG
```

## show alarms detail

```
-----
History Alarms for 1/0
-----
```

```
No entries.
```

```
-----
Suppressed Alarms for 1/0
-----
```

```
No entries.
```

```
-----
Conditions for 1/0
-----
```

```
No entries.
```

```
-----
Clients for 1/0
-----
```

```
Agent Name:          optics_fm.xml
Agent ID:            196678
Agent Location:     1/0/CPU0
Agent Handle:       94374612126576
Agent State:        Registered
Agent Type:         Producer
Agent Filter Display: false
Agent Subscriber ID: 0
Agent Filter Severity: Unknown
Agent Filter State: Unknown
Agent Filter Group: Unknown
Agent Connect Count: 1
Agent Connect Timestamp: 11/11/2022 10:30:04 IST
Agent Get Count:    0
Agent Subscribe Count: 0
Agent Report Count: 8
```

```
-----
Statistics for 1/0
-----
```

```
Alarms Reported:      9
Alarms Dropped:       0
Active (bi-state set): 9
History (bi-state cleared): 0
Suppressed:           0
Dropped Invalid AID:  0
Dropped No Memory:    0
Dropped DB Error:     0
Dropped Clear Without Set: 0
Dropped Duplicate:    0
Cache Hit:            0
Cache Miss:           0
```

## Related Commands

Command	Description
<a href="#">show alarms, on page 27</a>	Displays router alarms in brief and detail.
<a href="#">show alarms brief, on page 31</a>	Displays router alarms in brief.

# show logging correlator buffer

To display messages in the logging correlator buffer, use the **show logging correlator buffer** command in XR EXEC mode.

```
show logging correlator buffer {all-in-buffer [ruletype [nonstateful | stateful]] | [rulesource
[internal | user]] | rule-name correlation-rule1 . . . correlation-rule14 | correlationID correlation-id1
. . . correlation-id14}
```

Syntax Description		
<b>all-in-buffer</b>		Displays all messages in the correlation buffer.
<b>ruletype</b>		(Optional) Displays the ruletype filter.
<b>nonstateful</b>		(Optional) Displays the nonstateful rules.
<b>stateful</b>		(Optional) Displays the stateful rules.
<b>rulesource</b>		(Optional) Displays the rulesource filter.
<b>internal</b>		(Optional) Displays the internally defined rules from the rulesource filter.
<b>user</b>		(Optional) Displays the user-defined rules from the rulesource filter.
<b>rule-name</b>		Displays a messages associated with a correlation rule name. Up to <i>correlation-rule1...correlation-rule14</i> 14 correlation rules can be specified, separated by a space.
<b>correlationID</b>		Displays a message identified by correlation ID. Up to 14 correlation IDs can be specified, separated by a space. Range is 0 to 4294967294.
	<i>correlation-id1..correlation-id14</i>	

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** This command displays messages from the logging correlator buffer that match the correlation ID or correlation rule name specified. When the **all-in-buffer** keyword is entered, all messages in the logging correlator buffer are displayed.

If the ruletype is not specified, then both stateful and nonstateful rules are displayed.

if the rulesource is not specified, then both user and internal rules are displayed.

Task ID	Task ID	Operations
	logging	read

**Examples**

This is the sample output from the **show logging correlator buffer** command:

```
RP/0/RP0/CPU0:router# show logging correlator buffer all-in-buffer

#C_id.id:Rule Name:Source :Context: Time : Text
#14.1 :Rule1:RP/0/RP0/CPU0: :Aug 22 13:39:13.693 2007:ifmgr[196]: %PKT_INFRA-LINK-3-UPDOWN
: Interface MgmtEth0/RP0/CPU0/0, changed state to Down
#14.2 :Rule1:RP/0/RP0/CPU0: :Aug 22 13:39:13.693 2007:ifmgr[196]:
%PKT_INFRA-LINEPROTO-3-UPDOWN : Line protocol on Interface MgmtEth0/RP0/CPU0/0, changed
state to Down
```

This table describes the significant fields shown in the display.

**Table 3: show logging correlator buffer Field Descriptions**

Field	Description
C_id.	Correlation ID assigned to a event that matches a logging correlation rule.
id	An ID number assigned to each event matching a particular correlation rule. This event number serves as index to identify each individual event that has been matched for a logging correlation rule.
Rule Name	Name of the logging correlation rule that filters messages defined in a logging correlation rule to the logging correlator buffer.
Source	Node from which the event is generated.
Time	Date and time at which the event occurred.
Text	Message string that delineates the event.

## show logging correlator info

To display the logging correlator buffer size and the percentage of the buffer occupied by correlated messages, use the **show correlator info** command in XR EXEC mode.

### show logging correlator info

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** This command displays the size of the logging correlator buffer and the percentage of the buffer allocated to correlated messages.

Use the [logging correlator buffer-size, on page 13](#) command to set the size of the buffer.

Task ID	Task ID	Operations
	logging	read

### Examples

In this example, the **show logging correlator info** command is used to display remaining buffer size and percentage allocated to correlated messages:

```
RP/0/RP0/CPU0:router# show logging correlator info

Buffer-Size      Percentage-Occupied
      81920                0.00
```

## show logging correlator rule

To display defined correlation rules, use the **show logging correlator rule** command in XR EXEC mode.

```
show logging correlator rule {all | correlation-rule1 . . . correlation-rule14} [context
context1 . . . context 6] [location node-id1 . . . node-id6] [rulesource {internal | user}] [ruletype
{nonstateful | stateful}] [summary | detail]
```

Syntax Description	
<b>all</b>	Displays all rule sets.
<i>correlation-rule1...correlation-rule14</i>	Rule set name to be displayed. Up to 14 predefined correlation rules can be specified, separated by a space.
<b>context</b> <i>context1...context 6</i>	(Optional) Displays a list of context rules.
<b>location</b> <i>node-id1...node-id6</i>	(Optional) Displays the location of the list of rules filter from the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<b>rulesource</b>	(Optional) Displays the rulesource filter.
<b>internal</b>	(Optional) Displays the internally defined rules from the rulesource filter.
<b>user</b>	(Optional) Displays the user defined rules from the rulesource filter.
<b>ruletype</b>	(Optional) Displays the ruletype filter.
<b>nonstateful</b>	(Optional) Displays the nonstateful rules.
<b>stateful</b>	(Optional) Displays the stateful rules.
<b>summary</b>	(Optional) Displays the summary information.
<b>detail</b>	(Optional) Displays detailed information.

## show logging correlator ruleset

<b>Command Default</b>	None	
<b>Command Modes</b>	XR EXEC mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.
<b>Usage Guidelines</b>	If the ruletype is not specified, then both stateful and nonstateful rules are displayed as the default.	
	If the rulesource is not specified, then both user and internally defined rules are displayed as the default.	
	If the summary or detail keywords are not specified, then detailed information is displayed as the default.	
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	logging	read

## show logging correlator ruleset

To display defined correlation rule set names, use the **show logging correlator ruleset** command in XR EXEC mode.

**show logging correlator ruleset** {**all** | *correlation-ruleset1* . . . *correlation-ruleset14*} [**detail** | **summary**]

<b>Syntax Description</b>	<b>all</b>	Displays all rule set names.
	<i>correlation-rule1...correlation-rule14</i>	Rule set name to be displayed. Up to 14 predefined rule set names can be specified, separated by a space.
	<b>detail</b>	(Optional) Displays detailed information.
	<b>summary</b>	(Optional) Displays the summary information.

<b>Command Default</b>	Detail is the default, if nothing is specified.	
<b>Command Modes</b>	XR EXEC mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.
<b>Usage Guidelines</b>	If the ruletype is not specified, then both stateful and nonstateful rules are displayed as the default.	
	If the rulesource is not specified, then both user and internally defined rules are displayed as the default.	
	If the summary or detail options are not specified, then detailed information is displayed as the default.	

Task ID	Task ID	Operations
	logging	read

### Examples

This is the sample output from the **show logging correlator ruleset** command:

```
RP/0/RP0/CPU0:router# show logging correlator RuleSetOne RuleSetTwo

Rule Set Name : RuleSetOne
Rules: Rule1 : Applied
Rule2 : Applied
Rule3 : Applied
Rule Set Name : RuleSetTwo
Rules: Rule1 : Applied
Rule5 : Not Applied
```

This is the sample output from the **show logging correlator ruleset** command when the **all** option is specified:

```
RP/0/RP0/CPU0:router# show logging correlator ruleset all

Rule Set Name : RuleSetOne
Rules: Rule1 : Applied
Rule2 : Applied
Rule3 : Applied
Rule Set Name : RuleSetTwo
Rules: Rule1 : Applied
Rule5 : Not Applied
Rule Set Name : RuleSetThree
Rules: Rule2 : Applied
Rule3 : Applied
```

This is sample output from the **show logging correlator ruleset** command when the **all** and **summary** options are specified:

```
RP/0/RP0/CPU0:router# show logging correlator ruleset all summary
RuleSetOne
RuleSetTwo
RuleSetThree
```

This table describes the significant fields shown in the display.

**Table 4: show logging correlator ruleset Field Descriptions**

Field	Description
Rule Set Name	Name of the ruleset.
Rules	All rules contained in the ruleset are listed.
Applied	The rule is applied.
Not Applied	The rule is not applied.

## show logging events buffer

To display messages in the logging events buffer, use the **show logging events buffer** command in XR EXEC mode.

```
show logging events buffer [admin-level-only] [all-in-buffer] [bistate-alarms-set] [category name]
[context name] [event-hi-limit event-id] [event-lo-limit event-id] [first event-count] [group
message-group] [last event-count] [location node-id] [message message-code] [severity-hi-limit
severity] [severity-lo-limit severity] [timestamp-hi-limit hh:mm:ss [month] [day] [year]]
timestamp-lo-limit hh:mm:ss [month] [day] [year]]
```

### Syntax Description

<b>admin-level-only</b>	Displays only the events that are at the administrative level.
<b>all-in-buffer</b>	Displays all event IDs in the events buffer.
<b>bistate-alarms-set</b>	Displays bi-state alarms in the SET state.
<b>category name</b>	Displays events from a specified category.
<b>context name</b>	Displays events from a specified context.
<b>event-hi-limit event-id</b>	Displays events with an event ID equal to or lower than the event ID specified with the <i>event-id</i> argument. Range is 0 to 4294967294.
<b>event-lo-limit event-id</b>	Displays events with an event ID equal to or higher than the event ID specified with <i>event-id</i> argument. Range is 0 to 4294967294.
<b>first event-count</b>	Displays events in the logging events buffer, beginning with the first event. For the <i>event-count</i> argument, enter the number of events to be displayed.
<b>group message-group</b>	Displays events from a specified message group.
<b>last event-count</b>	Displays events, beginning with the last event in the logging events buffer. For the <i>event-count</i> argument, enter the number of events to be displayed.
<b>location node-id</b>	Displays events for the specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<b>message message-code</b>	Displays events with the specified message code.
<b>severity-hi-limit</b>	Displays events with a severity level equal to or lower than the specified severity level.

---

<b>severity</b>	Severity level. Valid values are: <ul style="list-style-type: none"><li>• <b>emergencies</b></li><li>• <b>alerts</b></li><li>• <b>critical</b></li><li>• <b>errors</b></li><li>• <b>warnings</b></li><li>• <b>notifications</b></li><li>• <b>informational</b></li></ul> <p><b>Note</b> Settings for the severity levels and their respective system conditions are listed under the “Usage Guidelines” section for the <b>logging events level</b> command. Events of lower severity level represent events of higher importance.</p>
<b>severity-lo-limit</b>	Displays events with a severity level equal to or higher than the specified severity level.
<b>timestamp-hi-limit</b>	Displays events with a time stamp equal to or lower than the specified time stamp.

---

*hh* : *mm* : *ss* [*month*] [*day*] [*year*]  
 Time stamp for the **timestamp-hi-limit** or **timestamp-lo-limit** keyword. The *month*, *day*, and *year* arguments default to the current month, day, and year if not specified.

Ranges for the *hh* : *mm* : *ss* *month day year* arguments are as follows:

- *hh* :—Hours. Range is 00 to 23. You must insert a colon after the *hh* argument.
- *mm* :—Minutes. Range is 00 to 59. You must insert a colon after the *mm* argument.
- *ss*—Seconds. Range is 00 to 59.
- *month*—(Optional) The month of the year. The values for the *month* argument are:
  - january
  - february
  - march
  - april
  - may
  - june
  - july
  - august
  - september
  - october
  - november
  - december
- *day*—(Optional) Day of the month. Range is 01 to 31.
- *year*—(Optional) Year. Enter the last two digits of the year (for example, **04** for 2004). Range is 01 to 37.

**timestamp-lo-limit** Displays events with a time stamp equal to or higher than the specified time stamp.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

**Usage Guidelines** This command displays messages from the logging events buffer matching the description. The description is matched when all of the conditions are met.

Task ID	Task ID	Operations
	logging	read

### Examples

This is the sample output from the **show logging events buffer all-in-buffer** command:

```
RP/0/RP0/CPU0:router# show logging events buffer all-in-buffer

#ID      :C_id:Source      :Time                               :%CATEGORY-GROUP-SEVERITY-MESSAGECODE: Text

#1       :      :RP/0/RP0/CPU0:Jan  9 08:57:54 2004:nvram[66]: %MEDIA-NVRAM_PLATFORM-3-BAD_NVRAM_VAR : ROMMON variable-value pair: '^'[19~CONFIG_FILE = disk0:config/startup, contains illegal (non-printable) characters
#2       :      :RP/0/RP0/CPU0:Jan  9 08:58:21 2004:psarb[238]: %PLATFORM-PSARB-5-GO_BID : Card is going to bid state.
#3       :      :RP/0/RP0/CPU0:Jan  9 08:58:22 2004:psarb[238]: %PLATFORM-PSARB-5-GO_ACTIVE : Card is becoming active.
#4       :      :RP/0/RP0/CPU0:Jan  9 08:58:22 2004:psarb[238]: %PLATFORM-PSARB-6-RESET_ALL_LC_CARDS : RP going active; resetting all linecards in chassis
#5       :      :RP/0/RP0/CPU0:Jan  9 08:58:22 2004:redcon[245]: %HA-REDCON-6-GO_ACTIVE : this card going active
#6       :      :RP/0/RP0/CPU0:Jan  9 08:58:22 2004:redcon[245]: %HA-REDCON-6-FAILOVER_ENABLED : Failover has been enabled by config
```

This table describes the significant fields shown in the display.

**Table 5: show logging correlator buffer Field Descriptions**

Field	Description
#ID	Integer assigned to each event in the logging events buffer.
C_id.	Correlation ID assigned to a event that has matched a logging correlation rule.
Source	Node from which the event is generated.
Time	Date and time at which the event occurred.
%CATEGORY-GROUP-SEVERITY-MESSAGECODE	The category, group name, severity level, and message code associated with the event.
Text	Message string that delineates the event.

## show logging events info

To display configuration and operational information about the logging events buffer, use the **show logging events info** command in XR EXEC mode.

**show logging events info**

**show logging suppress rule**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** This command displays information about the size of the logging events buffer, the maximum size of the buffer, the number of records being stored, the maximum allowable number of records threshold for circular filing, and message filtering.

Task ID	Task ID	Operations
	logging	read

**Examples**

This is the sample output from the **show logging events info** command:

```
RP/0/RP0/CPU0:router# show logging events info

Size (Current/Max)      #Records      Thresh      Filter
16960      /42400      37          90          Not Set
```

This table describes the significant fields shown in the display.

**Table 6: show logging events info Field Descriptions**

Field	Description
Size (Current/Max)	The current and maximum size of the logging events buffer. The maximum size of the buffer is controlled by the <a href="#">logging events buffer-size, on page 16</a> command.
#Records	The number of event records stored in the logging events buffer.
Thresh	The configured logging events threshold value. This field is controlled by the <a href="#">logging events threshold, on page 20</a> command.
Filter	The lowest severity level for events that will be displayed. This field is controlled by the <a href="#">logging events level, on page 19</a> command.

## show logging suppress rule

To display defined logging suppression rules, use the **show logging suppression rule** command in XR EXEC mode.

**show logging suppress rule** [*rule-name1* [. . . [*rule-name14*]]] | **all** [**detail**] [**summary**] [**source location** *node-id*]

<b>Syntax Description</b>	<i>rule-name1</i> [... <i>rule-name14</i> ]] Specifies up to 14 logging suppression rules to display.
<b>all</b>	Displays all logging suppression rules.
<b>source location</b> <i>node-id</i>	(Optional) Displays the location of the list of rules filter from the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<b>detail</b>	(Optional) Displays detailed information.
<b>summary</b>	(Optional) Displays the summary information.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task Operations ID</b>
	logging read

## Examples

This example displays information about a logging suppression rule that has been configured but has not been activated:

```
RP/0/RP0/CPU0:router# show logging suppression rule test_suppression
```

```
Rule Name : test_suppression
Rule State: RULE_UNAPPLIED
Severities : informational, critical
Alarms :
  Category      Group          Message
  CAT_C         GROUP_C       CODE_C
  CAT_D         GROUP_D       CODE_D
```

```
Apply Alarm-Locations: PowerSupply-0/A/A0
Apply Sources:        0/RP0/CPU0, 1/6/SP
```

```
Number of suppressed alarms : 0
```

This example displays information about all logging suppression rules applied to a specific source location on the router:

```
RP/0/RP0/CPU0:router# show logging suppress rule all source location 0/RP0/CPU0
```

```
Rule Name : test_suppression
```

**show logging suppress rule**

```
Rule State: RULE_APPLIED_ALL
Severities : N/A
Alarms :
  Category      Group      Message
  CAT_E        GROUP_F    CODE_G

Apply Alarm-Locations: None
Apply Sources:      0/RP0/CPU0

Number of suppressed alarms : 0
```

This example shows summary information about all logging suppression rules:

```
RP/0/RP0/CPU0:router# show logging suppression rule all summary
Rule Name                                     :Number of Suppressed Alarms
Mike1                                         0
Mike2                                         0
Mike3                                         0
Reall                                         4
```



## CHAPTER 2

# Embedded Event Manager Commands

This module describes the commands that are used to set the Embedded Event Manager (EEM) operational attributes and monitor EEM operations.

The Cisco IOS XR software EEM functions as the central clearing house for the events detected by any portion of Cisco IOS XR software High Availability Services. The EEM is responsible for fault detection, fault recovery, and process the reliability statistics in a system. The EEM is policy driven and enables you to configure the high-availability monitoring features of the system to fit your needs.

The EEM monitors the reliability rates achieved by each process in the system. You can use these metrics during testing to identify the components that do not meet their reliability or availability goals, which in turn enables you to take corrective action.

For detailed information about the EEM concepts, configuration tasks, and examples, see the *Configuring and Managing Embedded Event Manager Policies* module in *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [event manager directory user, on page 47](#)
- [event manager environment, on page 49](#)
- [event manager policy, on page 50](#)
- [event manager refresh-time, on page 52](#)
- [event manager run, on page 53](#)
- [event manager scheduler suspend, on page 54](#)
- [show event manager directory user, on page 55](#)
- [show event manager environment, on page 56](#)
- [show event manager policy available, on page 57](#)
- [show event manager policy registered, on page 58](#)
- [show event manager refresh-time, on page 60](#)
- [show event manager statistics-table, on page 61](#)

## event manager directory user

To specify a directory name for storing user library files or user-defined Embedded Event Manager (EEM) policies, use the **event manager directory user** command in XR Config mode. To disable the use of a directory for storing user library files or user-defined EEM policies, use the **no** form of this command.

```
event manager directory user {library path | policy path}
no event manager directory user {library path | policy path}
```

**Syntax Description**

**library** Specifies a directory name for storing user library files.

*path* Absolute pathname to the user directory on the flash device.

**policy** Specifies a directory name for storing user-defined EEM policies.

**Command Default**

No directory name is specified for storing user library files or user-defined EEM policies.

**Command Modes**

XR Config mode

**Command History**

Release	Modification
Release 7.0.12	This command was introduced.

**Usage Guidelines**

Cisco IOS XR software supports only the policy files that are created by using the Tool Command Language (TCL) scripting language. The TCL software is provided in the Cisco IOS XR software image when the EEM is installed on the network device. Files with the .tcl extension can be EEM policies, TCL library files, or a special TCL library index file named tclindex. The tclindex file contains a list of user function names and library files that contain the user functions (procedures). The EEM searches the user library directory when the TCL starts to process the tclindex file.

**User Library**

A user library directory is needed to store user library files associated with authoring EEM policies. If you do not plan to write EEM policies, you do not have to create a user library directory.

To create user library directory before identifying it to the EEM, use the **mkdir** command in XR EXEC mode. After creating the user library directory, use the **copy** command to copy the .tcl library files into the user library directory.

**User Policy**

A user policy directory is essential to store the user-defined policy files. If you do not plan to write EEM policies, you do not have to create a user policy directory. The EEM searches the user policy directory when you enter the **event manager policy *policy-name* user** command.

To create a user policy directory before identifying it to the EEM, use the **mkdir** command in XR EXEC mode. After creating the user policy directory, use the **copy** command to copy the policy files into the user policy directory.

**Task ID**

Task ID	Operations
eem	read, write

**Examples**

This example shows how to set the pathname for a user library directory to /usr/lib/tcl on disk0:

```
RP/0/RP0/CPU0:router (config) # event manager directory user library disk0:/usr/lib/tcl
```

This example shows how to set the location of the EEM user policy directory to /usr/fm\_policies on disk0:

```
RP/0/RP0/CPU0:router(config)# event manager directory user policy disk0:/usr/fm_policies
```

## event manager environment

To set an Embedded Event Manager (EEM) environment variable, use the **event manager environment** command in XR Config mode. To remove the configuration, use the **no** form of this command.

```
event manager environment var-name [var-value]  
no event manager environment var-name
```

### Syntax Description

*var-name* Name assigned to the EEM environment configuration variable.

*var-value* (Optional) Series of characters, including embedded spaces, to be placed in the environment variable *var-name*.

### Command Default

None

### Command Modes

XR Config mode

### Command History

Release	Modification
Release 7.0.12	This command was introduced.

### Usage Guidelines

Environment variables are available to EEM policies when you set the variables using the **event manager environment** command. They become unavailable when you remove them with the **no** form of this command.

By convention, the names of all the environment variables defined by Cisco begin with an underscore character (\_) to set them apart, for example, `_show_cmd`.

Spaces can be used in the *var-value* argument. This command interprets everything after the *var-name* argument until the end of the line in order to be a part of the *var-value* argument.

Use the [event manager environment, on page 49](#) command to display the name and value of all EEM environment variables before and after they have been set using the **event manager environment** command.

### Task ID

Task ID	Operations
eem	read, write

### Examples

This example shows how to define a set of EEM environment variables:

```
RP/0/RP0/CPU0:router(config)# event manager environment _cron_entry 0-59/2 0-23/1 * * 0-7  
RP/0/RP0/CPU0:router(config)# event manager environment _show_cmd show eem manager policy  
registered  
RP/0/RP0/CPU0:router(config)# event manager environment _email_server alpha@cisco.com  
RP/0/RP0/CPU0:router(config)# event manager environment _email_from beta@cisco.com
```

```
RP/0/RP0/CPU0:router(config)# event manager environment _email_to beta@cisco.com
RP/0/RP0/CPU0:router(config)# event manager environment _email_cc
```

## event manager policy

To register an Embedded Event Manager (EEM) policy with the EEM, use the **event manager policy** command in XR Config mode. To unregister an EEM policy from the EEM, use the **no** form of this command.

**event manager policy** *policy-name* **username** *username* [**persist-time** [*seconds* | **infinite**] | **type** [*system* | **user**]]

**no event manager policy** *policy-name* [**username** *username*]

Syntax Description		
	<i>policy-name</i>	Name of the policy file.
	<b>username</b> <i>username</i>	Specifies the username used to run the script. This name can be different from that of the user who is currently logged in, but the registering user must have permissions that are a superset of the username that runs the script. Otherwise, the script is not registered, and the command is rejected.  In addition, the username that runs the script must have access privileges to the commands issued by the EEM policy being registered.
	<b>persist-time</b> [ <i>seconds</i>   <b>infinite</b> ]	(Optional) The length of the username authentication validity, in seconds. The default time is 3600 seconds (1 hour). The <i>seconds</i> range is 0 to 4294967294. Enter 0 to stop the username authentication from being cached. Enter the <b>infinite</b> keyword to stop the username from being marked as invalid.
	<b>type</b> [ <i>system</i>   <b>user</b> ]	(Optional) Specifies the type of policy to register. Use the <i>system</i> keyword to register a system policy defined by Cisco and the <i>user</i> keyword to register a user-defined policy.

**Command Default** The default persist time is 3600 seconds (1 hour).

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** The EEM schedules and runs policies on the basis of an event specification that is contained within the policy itself. When the **event manager policy** command is invoked, the EEM examines the policy and registers it to be run when the specified event occurs. An EEM script is available to be scheduled by the EEM until the **no** form of this command is entered.



---

**Note** AAA authorization (such as the **aaa authorization** command with the **eventmanager** and **default** keywords) must be configured before the EEM policies can be registered. The **eventmanager** and **default** keywords must be configured for policy registration. See the *Configuring AAA Services* module of *System Security Configuration Guide for Cisco 8000 Series Routers* for more information on AAA authorization configuration.

---

### Username

Enter the username that should execute the script with the **username** *username* keyword and argument. This name can be different from the user who is currently logged in, but the registering user must have permissions that are a superset of the username that runs the script. Otherwise, the script will not be registered, and the command will be rejected. In addition, the username that runs the script must have access privileges to the commands issued by the EEM policy being registered.

### Persist-time

When a script is first registered, the configured **username** for the script is authenticated. If authentication fails, or if the AAA server is down, the script registration fails.

After the script is registered, the username is authenticated each time a script is run.

If the AAA server is down, the username authentication can be read from memory. The **persist-time** determines the number of seconds this username authentication is held in memory.

- If the AAA server is down and the **persist-time** has not expired, the username is authenticated from memory, and the script runs.
- If the AAA server is down, and the **persist-time** has expired, user authentication fails, and the script does not run.



---

**Note** EEM attempts to contact the AAA server and refresh the username reauthenticate whenever the configured **refresh-time** expires. See the [event manager refresh-time, on page 52](#) command for more information.

---

These values can be used for the **persist-time**:

- The default **persist-time** is 3600 seconds (1 hour). Enter the **event manager policy** command without the **persist-time** keyword to set the **persist-time** to 1 hour.
- Enter zero to stop the username authentication from being cached. If the AAA server is down, the username is not authenticated and the script does not run.
- Enter **infinite** to stop the username from being marked as invalid. The username authentication held in the cache will not expire. If the AAA server is down, the username is authenticated from the cache.

### Type

If you enter the **event manager policy** command without specifying the **type** keyword, the EEM first tries to locate the specified policy file in the system policy directory. If the EEM finds the file in the system policy directory, it registers the policy as a system policy. If the EEM does not find the specified policy file in the system policy directory, it looks in the user policy directory. If the EEM locates the specified file in the user policy directory, it registers the policy file as a user policy. If the EEM finds policy files with the same name in both the system policy directory and the user policy directory, the policy file in the system policy directory takes precedence, and the policy file is registered as a system policy.

Task ID	Task ID	Operations
	eem	read, write

**Examples**

This example shows how to register a user-defined policy named cron.tcl located in the user policy directory:

```
RP/0/RP0/CPU0:router(config)# event manager policy cron.tcl username joe
```

## event manager refresh-time

To define the time between user authentication refreshes in Embedded Event Manager (EEM), use the **event manager refresh-time** command in XR Config mode. To restore the system to its default condition, use the **no** form of this command.

```
event manager refresh-time seconds
no event manager refresh-time seconds
```

**Syntax Description**

*seconds* Number of seconds between user authentication refreshes, in seconds. Range is 10 to 4294967295.

**Command Default**

The default refresh time is 1800 seconds (30 minutes).

**Command Modes**

XR Config mode

**Command History**

Release	Modification
Release 7.0.12	This command was introduced.

**Usage Guidelines**

EEM attempts to contact the AAA server and refresh the username reauthentication whenever the configured **refresh-time** expires.

Task ID	Task ID	Operations
	eem	read, write

**Examples**

This example shows how to set the refresh time:

```
RP/0/RP0/CPU0:router(config)# event manager refresh-time 1900
```

# event manager run

To manually run an Embedded Event Manager (EEM) policy, use the **event manager run** command in XR EXEC mode.

```
event manager run policy [argument [... [argument15]]]
```

<b>Syntax Description</b>	<i>policy</i>	Name of the policy file.
	[ <i>argument</i> [...[ <i>argument15</i> ]]]	Argument that you want to pass to the policy. The maximum number of arguments is 15.
<b>Command Default</b>	No registered EEM policies are run.	
<b>Command Modes</b>	XR EXEC mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

**Usage Guidelines**

EEM usually schedules and runs policies on the basis of an event specification that is contained within the policy itself. The **event manager run** command allows policies to be run manually.

EEM usually schedules and runs policies on the basis of an event specification that is contained within the policy itself. However the policies of **none** type have to be run manually using **event manager run** command. A **none** type event is a dummy event. An EEM script can register for **none** type event using **event\_register\_none** tcl command in the script.

You can query the arguments in the policy file by using the **TCL** command *event\_reqinfo* , as shown in this example:

```
array set arr_einfo [event_reqinfo] set argc $arr_einfo(argc) set arg1
    $arr_einfo(arg1)
```

Use the [event manager run, on page 53](#) command to register the policy before using the **event manager run** command to run the policy. The policy can be registered with none as the event type.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	eem	read

**Examples**

This example of the **event manager run** command shows how to manually run an EEM policy named policy-manual.tcl:

```
RP/0/RP0/CPU0:router# event manager run policy-manual.tcl parameter1 parameter2 parameter3
RP/0/RP0/CPU0:Sep 20 10:26:31.169 : user-plocy.tcl[65724]: The reqinfo of arg2 is parameter2.
```

```

RP/0/RP0/CPU0:Sep 20 10:26:31.170 : user-plocy.tcl[65724]: The reqinfo of argc is 3.
RP/0/RP0/CPU0:Sep 20 10:26:31.171 : user-plocy.tcl[65724]: The reqinfo of arg3 is parameter3.

RP/0/RP0/CPU0:Sep 20 10:26:31.172 : user-plocy.tcl[65724]: The reqinfo of event_type_string
is none.
RP/0/RP0/CPU0:Sep 20 10:26:31.172 : user-plocy.tcl[65724]: The reqinfo of event_pub_sec is
1190283990.
RP/0/RP0/CPU0:Sep 20 10:26:31.173 : user-plocy.tcl[65724]: The reqinfo of event_pub_time
is 1190283990.
RP/0/RP0/CPU0:Sep 20 10:26:31.173 : user-plocy.tcl[65724]: The reqinfo of event_id is 3.
RP/0/RP0/CPU0:Sep 20 10:26:31.174 : user-plocy.tcl[65724]: The reqinfo of arg1 is parameter1.

RP/0/RP0/CPU0:Sep 20 10:26:31.175 : user-plocy.tcl[65724]: The reqinfo of event_type is 16.

RP/0/RP0/CPU0:Sep 20 10:26:31.175 : user-plocy.tcl[65724]: The reqinfo of event_pub_msec
is 830

```

## event manager scheduler suspend

To suspend the Embedded Event Manager (EEM) policy scheduling execution immediately, use the **event manager scheduler suspend** command in XR Config mode. To restore a system to its default condition, use the **no** form of this command.

**event manager scheduler suspend**  
**no event manager scheduler suspend**

**Syntax Description** This command has no keywords or arguments.

**Command Default** Policy scheduling is active by default.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **event manager scheduler suspend** command to suspend all the policy scheduling requests, and do not perform scheduling until you enter the **no** form of this command. The **no** form of this command resumes policy scheduling and runs pending policies, if any.

It is recommended that you suspend policy execution immediately instead of unregistering policies one by one, for the following reasons:

- Security—If you suspect that the security of your system has been compromised.
- Performance—If you want to suspend policy execution temporarily to make more CPU cycles available for other functions.

Task ID	Task ID	Operations
	eem	read, write

**Examples**

This example shows how to disable policy scheduling:

```
RP/0/RP0/CPU0:router(config)# event manager scheduler suspend
```

This example shows how to enable policy scheduling:

```
RP/0/RP0/CPU0:router(config)# no event manager scheduler suspend
```

## show event manager directory user

To display the current value of the EEM user library files or user-defined Embedded Event Manager (EEM) policies, use the **show event manager directory user** command in XR EXEC mode.

```
show event manager directory user {library | policy}
```

**Syntax Description**

**library** Specifies the user library files.

**policy** Specifies the user-defined EEM policies.

**Command Default**

None

**Command Modes**

XR EXEC mode

**Command History****Release**

Release 7.0.12

**Modification**

This command was introduced.

**Usage Guidelines**

Use the **show event manager directory user** command to display the current value of the EEM user library or policy directory.

**Task ID****Task Operations ID**

eem read

**Examples**

This is a sample output of the **show event manager directory user** command:

```
RP/0/RP0/CPU0:router# show event manager directory user library
disk0:/fm_user_lib_dir
```

```
RP/0/RP0/CPU0:router# show event manager directory user policy
disk0:/fm_user_pol_dir
```

# show event manager environment

To display the names and values of the Embedded Event Manager (EEM) environment variables, use the **show event manager environment** command in XR EXEC mode.

**show event manager environment** [*all**environment-name*]

<b>Syntax Description</b>	<b>all</b> (Optional) Specifies all the environment variables.
	<i>environment-name</i> (Optional) Environment variable for which data is displayed.

**Command Default** All environment variables are displayed.

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **show event manager environment** command to display the names and values of the EEM environment variables.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	eem	read

## Examples

This is a sample output of the **show event manager environment** command:

```
RP/0/RP0/CPU0:router# show event manager environment

No.  Name                               Value
1    _email_cc                             mosnerd@cisco.com
2    _email_to                             mosnerd@cisco.com
3    _show_cmd                             show event manager policy registered
4    _cron_entry                           0-59/2 0-23/1 * * 0-7
5    _email_from                           mosnerd@cisco.com
6    _email_server                          zeta@cisco.com
```

This table describes the significant fields in the display.

**Table 7: show event manager environment Field Descriptions**

<b>Field</b>	<b>Description</b>
No.	Number of the EEM environment variable.
Name	Name of the EEM environment variable.

Field	Description
Value	Value of the EEM environment variable.

## show event manager policy available

To display Embedded Event Manager (EEM) policies that are available to be registered, use the **show event manager policy available** command in XR EXEC mode.

**show event manager policy available** [**system** | **user**]

### Syntax Description

**system** (Optional) Displays all the available system policies.

**user** (Optional) Displays all the available user policies.

### Command Default

If this command is invoked with no optional keywords, it displays information for all available system and user policies.

### Command Modes

XR EXEC mode

### Command History

Release	Modification
Release 7.0.12	This command was introduced.

### Usage Guidelines

Use the **show event manager policy available** command to find out what policies are available to be registered just prior to using the **event manager policy** command to register policies.

This command is also useful if you forget the exact name of a policy that is required for the **event manager policy** command.

### Task ID

Task ID	Operations
eem	read

### Examples

This is a sample output of the **show event manager policy available** command:

```
RP/0/RP0/CPU0:router# show event manager policy available

No.  Type      Time Created                               Name
1    system   Tue Jan 12 09:41:32 2004                 pr_sample_cdp_abort.tcl
2    system   Tue Jan 12 09:41:32 2004                 pr_sample_cdp_revert.tcl
3    system   Tue Jan 12 09:41:32 2004                 sl_sample_intf_down.tcl
4    system   Tue Jan 12 09:41:32 2004                 tm_sample_cli_cmd.tcl
5    system   Tue Jan 12 09:41:32 2004                 tm_sample_crash_hist.tcl
6    system   Tue Jan 12 09:41:32 2004                 wd_sample_proc_mem_used.tcl
7    system   Tue Jan 12 09:41:32 2004                 wd_sample_sys_mem_used.tcl
```

This table describes the significant fields shown in the display.

**Table 8: show event manager policy available Field Descriptions**

Field	Description
No.	Number of the policy.
Type	Type of policy.
Time Created	Time the policy was created.
Name	Name of the policy.

## show event manager policy registered

To display the Embedded Event Manager (EEM) policies that are already registered, use the **show event manager policy registered** command in XR EXEC mode.

**show event manager policy registered**[event-type *type*] [system | user] [time-ordered | name-ordered]

### Syntax Description

**event-type** *type* (Optional) Displays the registered policies for a specific event type, where the valid *type* options are as follows:

- **application**—Application event type
- **cli**—CLI event type
- **config**—Conf event type
- **counter**—Counter event type
- **hardware**—Hardware event type
- **none**—None event type
- **oir**—Online insertion and removal (OIR) event type
- **process-abort**—Event type for abnormal termination of process
- **process-start**—Process start event type
- **process-term**—Process termination event type
- **process-user-restart**—Process user restart event type
- **process-user-shutdown**—Process user shutdown event type
- **snmp**—SNMP event type
- **snmp-proxy**—SNMP PROXY event type
- **statistics**—Statistics event type
- **syslog**—Syslog event type
- **timer-absolute**—Absolute timer event type
- **timer-countdown**—Countdown timer event type
- **timer-cron**—Clock daemon (cron) timer event type
- **timer-watchdog**—Watchdog timer event type
- **track**—Track event type
- **wdsysmon**—Watchdog system monitor event type

<b>system</b>	(Optional) Displays the registered system policies.
<b>user</b>	(Optional) Displays the registered user policies.
<b>time-ordered</b>	(Optional) Displays the policies according to registration time.
<b>name-ordered</b>	(Optional) Displays the policies in alphabetical order according to policy name.

**Command Default** If this command is invoked with no optional keywords or arguments, it displays the registered EEM policies for all the event types. The policies are displayed according to the registration time.

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

**Usage Guidelines** The output of the **show event manager policy registered** command is most beneficial if you are writing and monitoring the EEM policies. The output displays registered policy information in two parts. The first line in each policy description lists the index number assigned to the policy, policy type (system or user), type of event registered, time at which the policy was registered, and name of the policy file. The remaining lines of each policy description display information about the registered event and how the event is to be handled, and come directly from the Tool Command Language (TCL) command arguments that make up the policy file.

Registered policy information is documented in the Cisco publication *Writing Embedded Event Manager Policies Using Tcl*.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	eem	read

**Examples** This is a sample output of the **show event manager policy registered** command:

```
RP/0/RP0/CPU0:router# show event manager policy registered

No.      Type      Event Type      Time Registered      Name
1        system   proc abort      Wed Jan 16 23:44:56 2004  test1.tcl
  version 00.00.0000 instance 1 path {cdp}
  priority normal maxrun_sec 20 maxrun_nsec 0
2        system   timer cron      Wed Jan 16 23:44:58 2004  test2.tcl
  name {crontimer1}
  priority normal maxrun_sec 20 maxrun_nsec 0
3        system   proc abort      Wed Jan 16 23:45:02 2004  test3.tcl
  path {cdp}
  priority normal maxrun_sec 20 maxrun_nsec 0
4        system   syslog          Wed Jan 16 23:45:41 2004  test4.tcl
  occurs 1 pattern {test_pattern}
  priority normal maxrun_sec 90 maxrun_nsec 0
5        system   timer cron      Wed Jan 16 23:45:12 2004  test5.tcl
  name {crontimer2}
  priority normal maxrun_sec 30 maxrun_nsec 0
```

**show event manager refresh-time**

```

6          system wdsysmon          Wed Jan 16 23:45:15 2004      test6.tcl
  timewin_sec 120 timewin_nsec 0 sub1 mem_tot_used {node {localhost} op gt
  val 23000}
  priority normal maxrun_sec 40 maxrun_nsec 0
7          system wdsysmon          Wed Jan 16 23:45:19 2004      test7.tcl
  timewin_sec 120 timewin_nsec 0 sub1 mem_proc {node {localhost} procname
  {wdsysmon} op gt val 80 is_percent FALSE}
  priority normal maxrun_sec 40 maxrun_nsec 0

```

This table describes the significant fields displayed in the example.

**Table 9: show event manager policy registered Field Descriptions**

Field	Description
No.	Number of the policy.
Type	Type of policy.
Event Type	Type of the EEM event for which the policy is registered.
Time Registered	Time at which the policy was registered.
Name	Name of the policy.

## show event manager refresh-time

To display the time between the user authentication refreshes in the Embedded Event Manager (EEM), use the **show event manager refresh-time** command in XR EXEC mode.

### show event manager refresh-time

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR EXEC mode

#### Command History

Release	Modification
Release 7.0.12	This command was introduced.

#### Usage Guidelines

The output of the **show event manager refresh-time** command is the refresh time, in seconds.

#### Task ID

Task ID	Operations
eem	read

**Examples**

This is a sample output of the **show event manager refresh-time** command:

```
RP/0/RP0/CPU0:router# show event manager refresh-time
Output:
1800 seconds
```

## show event manager statistics-table

To display the currently supported statistic counters maintained by the Statistic Event Detector, use the **show event manager statistics-table** command in XR EXEC mode.

```
show event manager statistics-table {stats-name | all}
```

**Syntax Description**

*stats-name* Specific statistics type to be displayed. There are three statistics types:

- generic (ifstats-generic)
- interface table (ifstats-itable)
- data rate (ifstats-datarate)

**all** Displays the possible values for the *stats-name* argument.  
Displays the output for all the statistics types.

**Command Default**

None

**Command Modes**

XR EXEC mode

**Usage Guidelines**

Use the **show event manager statistics-table all** command to display the output for all the statistics types.

**Task ID**

Task ID	Operations
eem	read

**Examples**

This is a sample output of the **show event manager statistics-table all** command:

```
RP/0/RP0/CPU0:router# show event manager statistics-table all

Name                Type      Description
ifstats-generic     bag       Interface generic stats
ifstats-itable      bag       Interface iftable stats
ifstats-datarate    bag       Interface datarate stats
```

This is a sample output providing more detailed information on the ifstats-itable interface statistics table:

```
RP/0/RP0/CPU0:router# show event manager statistics-table ifstats-itable

Name                Type      Description
PacketsReceived    uint64    Packets rcvd
```

show event manager statistics-table

BytesReceived	uint64	Bytes rcvd
PacketsSent	uint64	Packets sent
BytesSent	uint64	Bytes sent
MulticastPacketsReceived	uint64	Multicast pkts rcvd
BroadcastPacketsReceived	uint64	Broadcast pkts rcvd
MulticastPacketsSent	uint64	Multicast pkts sent
BroadcastPacketsSent	uint64	Broadcast pkts sent
OutputDropsCount	uint32	Total output drops
InputDropsCount	uint32	Total input drops
InputQueueDrops	uint32	Input queue drops
RuntPacketsReceived	uint32	Received runt packets
GiantPacketsReceived	uint32	Received giant packets
ThrottledPacketsReceived	uint32	Received throttled packets
ParityPacketsReceived	uint32	Received parity packets
UnknownProtocolPacketsReceived	uint32	Unknown protocol pkts rcvd
InputErrorsCount	uint32	Total input errors
CRCErrorsCount	uint32	Input crc errors
InputOverruns	uint32	Input overruns
FramingErrorsReceived	uint32	Framing-errors rcvd
InputIgnoredPackets	uint32	Input ignored packets
InputAborts	uint32	Input aborts
OutputErrorsCount	uint32	Total output errors
OutputUnderruns	uint32	Output underruns
OutputBufferFailures	uint32	Output buffer failures
OutputBuffersSwappedOut	uint32	Output buffers swapped out
Applique	uint32	Applique
ResetCount	uint32	Number of board resets
CarrierTransitions	uint32	Carrier transitions
AvailabilityFlag	uint32	Availability bit mask
NumberOfSecondsSinceLastClearCounters	uint32	Seconds since last clear counters
LastClearTime	uint32	SysUpTime when counters were last cleared (in seconds)

This table describes the significant fields displayed in the example.

**Table 10: show event manager statistics-table Field Descriptions**

Field	Description
Name	Name of the statistic.  When the <b>all</b> keyword is specified, there are three types of statistics displayed: <ul style="list-style-type: none"> <li>• ifstats-generic</li> <li>• ifstats-iftable</li> <li>• ifstats-datarate</li> </ul> When a statistics type is specified, the statistics for the statistic type are displayed.
Type	Type of statistic.
Description	Description of the statistic.



## CHAPTER 3

# Logging Services Commands

---

This module describes the Cisco IOS XR7 Software commands to configure system logging (syslog) for system monitoring on the router.

For detailed information about logging concepts, configuration tasks, and examples, see the *Implementing Logging Services* chapter in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [logging](#), on page 64
- [logging archive](#), on page 66
- [logging buffered](#), on page 67
- [logging console](#), on page 68
- [logging console disable](#), on page 70
- [logging container all](#), on page 71
- [logging events link-status](#), on page 72
- [logging events link-status \(interface\)](#), on page 73
- [logging facility](#), on page 75
- [logging file](#), on page 77
- [logging format bsd](#), on page 78
- [logging format rfc5424](#), on page 79
- [logging history](#), on page 80
- [logging history size](#), on page 81
- [logging hostnameprefix](#), on page 82
- [logging ipv4/ipv6](#), on page 83
- [logging localfilesize](#), on page 85
- [logging monitor](#), on page 86
- [logging source-interface](#), on page 87
- [logging suppress deprecated](#), on page 88
- [logging suppress duplicates](#), on page 89
- [logging trap](#), on page 89
- [login-history](#), on page 90
- [service timestamps](#), on page 91
- [severity \(logging\)](#), on page 92
- [show logging](#), on page 93
- [show logging history](#), on page 97
- [terminal monitor](#), on page 98
- [enable-pam process-monitoring](#), on page 99

- [disable-pam process-monitoring](#), on page 100
- [show pam process-monitoring-status](#), on page 100

## logging

To specify a system logging (syslog) server host as the recipient of syslog messages, use the **logging** command in XR Config mode. To remove the **logging** command from the configuration file and delete a syslog server from the list of syslog server hosts, use the **no** form of this command.

```
logging { ip-address hostname | { vrf vrf_name } } { archive | buffered | console | correlator | disable
| events | facility type | format rfc5424 | history | hostnameprefix | localfilesize | monitor | operator
| port | severity | source-address | source-interface ipv4 address | suppress | trap }
```

### Syntax Description

<i>ip-address</i>   <i>hostname</i>	IP address or hostname of the host to be used as a syslog server.
<b>vrf</b> <i>vrf-name</i>	Name of the VRF. Maximum length is 32 alphanumeric characters.
<b>archive</b>	Specifies logging to a persistent device(disk/harddisk).
<b>buffered</b>	Sets buffered logging parameters.
<b>console</b>	Sets console logging.
<b>correlator</b>	Configures properties of the event correlator
<b>disable</b>	Disables console logging.
<b>events</b>	Configures event monitoring parameters.
<b>facility</b> <i>type</i>	Modifies message logging facilities.
<b>format</b>	Configures the syslog message format to send to the server.
<b>rfc5424</b>	Sets the syslog message format according to RFC 5424.
<b>history</b>	Sets history logging.
<b>hostnameprefix</b>	Adds the hostname prefix to messages on servers.
<b>localfilesize</b>	Sets size of the local log file.
<b>monitor</b>	Sets monitor logging
<b>operator</b>	Sets severity operator of messages for anparticular remote host/vrf.
<b>port</b>	Sets UDP port for this remote host/vrf.
<b>severity</b>	Sets severity of messages for particular remote host/vrf

<b>source-address</b> <i>ipv4 address</i>	Specifies source address of the logging host.
<b>source-interface</b>	Specifies interface for source address in logging transactions.
<b>suppress</b>	Configures properties for the event suppression.
<b>trap</b>	Sets trap logging.

**Command Default** No syslog server hosts are configured as recipients of syslog messages.

**Command Modes** XR Config mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 24.2.1	The <b>facility</b> and <b>source-address</b> options per remote syslog server were introduced.
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **logging** command to identify a syslog server host to receive messages. By issuing this command more than once, you build a list of syslog servers that receive messages.

When syslog messages are sent to a syslog server, the Cisco IOS XR software includes a numerical message identifier in syslog messages. The message identifier is cumulative and sequential. The numerical identifier included in syslog messages sent to syslog servers provides a means to determine if any messages have been lost.

Use the [logging trap, on page 89](#) command to limit the messages sent to snmp server.

The configurations for **facility** and **source-address** per remote syslog server takes priority over global configuration.

<b>Task ID</b>	<b>Task</b>	<b>Operations</b>
	logging	read, write

This example shows how to log messages to a host named host1:

```
Router(config)#logging host1

Router(config)#logging A.B.C.D
facility          Modify message logging facilities
operator         Set severity operator of messages for particular remote host/vrf
port             Set UDP port for this remote host/vrf
severity         Set severity of messages for particular remote host/vrf
source-address   Specify source address of the logging host
vrf              Set VRF option

Router(config)#logging A.B.C.D
Router(config)#commit
Wed Nov 14 03:47:58.976 PST
```

```
Router(config)#do show run logging
Wed Nov 14 03:48:10.816 PST
logging A.B.C.D vrf default severity info
```



**Note** Default level is severity info.

### Configuration Example for Facility and Source-address Per Remote Syslog Server

This example shows how to configure **facility** and **source-address** per remote syslog server:

```
Router#configure
Router(config)#
Router(config)#logging 209.165.201.1 source-address 209.165.201.2
Router(config)#logging 209.165.201.1 facility local2
Router(config)#commit
```

## logging archive

To configure attributes for archiving syslogs, use the **logging archive** command in XR Config mode. To exit the **logging archive** submode, use the **no** form of this command.

**logging archive**  
**no logging archive**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **logging archive** command to configure attributes for archiving syslogs. This command enters logging archive configuration mode and allows you to configure the commands in the table:



**Note** The configuration attributes must be explicitly configured in order to use the logging archive feature.

*Table 11: Configuring Command Attributes For Archiving Syslogs*

Command	Range	Description	Recommended Setting
archive-length	<0-4294967295>	Number of weeks	4 weeks
archive-size	<1-2047>	Size in MB	20 MB

Command	Range	Description	Recommended Setting
device	<disk0   disk1   hddisk>	Use configured devices as the archive device.	hddisk
file-size	<1-2047>	Size in MB	1 MB
frequency	<daily   weekly>		daily
severity	<alerts   critical   debugging   emergencies   errors   informational   notifications   warnings>		informational

**Task ID****Task Operations ID**

logging read,  
write

**Examples**

This example shows how to enter logging archive configuration mode and change the device to be used for logging syslogs to disk1:

```
RP/0/RP0/CPU0:router(config)# logging archive
RP/0/RP0/CPU0:router(config-logging-arch)# device disk1
```

## logging buffered

To send system logging (syslog) messages to logging buffer, use the **logging buffered** command in XR Config mode. To return to the default, use the **no** form of the **logging buffered** command.

**logging buffered** { *buffer-size* | | **alerts** | **critical** | | **debugging** | | **discriminator** | | **emergencies** | **errors** | | **informational** | | **notifications** | | **warnings** | | **entries-count** *count* }

**Syntax Description**

<i>buffer-size</i>	Size of the buffer, in bytes. Range is 2097152-125000000 bytes. The default is 2097152 bytes.
<b>entries-count</b> <i>count</i>	Specifies the buffer entries-count of syslog messages you want to see. The default value is 2545. The range is 2545-151699.
<b>alerts</b>	Specifies if any immediate action is needed
<b>critical</b>	Specifies critical conditions
<b>debugging</b>	Specifies debugging messages
<b>discriminator</b>	Sets logging buffer discriminator
<b>emergencies</b>	Specifies system is unusable

<b>informational</b>	Specifies informational messages
<b>notifications</b>	Specifies normal but significant conditions
<b>warnings</b>	Specifies warning conditions

**Command Default** None

**Command Modes** XR Config mode  
XR Config Mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.11.1	This command was modified to include <b>entries-count</b> option.
	Release 6.0	This command was introduced.

**Usage Guidelines** Use the **logging buffered** command to copy messages to the logging buffer. The logging buffer is circular, so newer messages overwrite older messages after the buffer is filled. This command is related to the **show logging buffer** command, which means that when you execute a **logging buffered warnings** command, it enables the logging for all the levels below the configured level, including log for LOG\_ERR, LOG\_CRIT, LOG\_ALERT, LOG\_EMERG, and LOG\_WARNING messages. Use the **logging buffer size** to specify the size of the buffer. Use the **logging buffer entries-count** command to specify the count of syslog entries.

If both the **logging buffered bytes** and **logging buffered entries-count** commands are present, then the maximum configured value is taken to display the number of system log messages.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	logging	read, write

### Examples

This example shows the configuration for sending syslog messages to the logging buffer:

```
RP/0/RP0/CPU0:router(config)# logging buffered 3000000
```

This example shows how to specify the count of syslog entries.

```
Router# configure
Router(config)# logging buffered entries-count 3000
Router(config)# commit
```

## logging console

To enable logging of system logging (syslog) messages logged to the console by severity level, use the **logging console** command in XR Config mode. To return console logging to the default setting, use the **no** form of this command.

**logging console** {*severity* | **disable**}  
**no logging console**

**Syntax Description**

*severity* Severity level of messages logged to the console, including events of a higher severity level (numerically lower). The default is **informational**. Settings for the severity levels and their respective system conditions are listed in the table under the “Usage Guidelines” section.

**disable** Removes the **logging console** command from the configuration file and disables logging to the console terminal.

**Command Default**

By default, logging to the console is enabled.

*severity*: **informational**

**Command Modes**

XR Config mode

**Command History**

Release	Modification
Release 7.0.12	This command was introduced.

**Usage Guidelines**

Use the **logging console** command to prevent debugging messages from flooding your screen.

The **logging console** is for the console terminal. The value specified for the *severity* argument causes messages at that level and at numerically lower levels (higher severity levels) to be displayed on the console.

Use the **logging console disable** command to disable console logging completely.

Use the **no logging console** command to return the configuration to the default setting.

Use the **show logging** command to display syslog messages stored in the logging buffer.

The value specified for the *severity* argument causes messages at that level and at numerically lower levels to be displayed on the console terminal. See the table for a list of the possible severity level keywords for the *severity* argument.

This table describes the acceptable severity levels for the *severity* argument.

**Table 12: Severity Levels for Messages**

Level Keywords	Level	Description	Syslog Definition
emergencies	0	Unusable system	LOG_EMERG
alerts	1	Need for immediate action	LOG_ALERT
critical	2	Critical condition	LOG_CRIT
errors	3	Error condition	LOG_ERR
warnings	4	Warning condition	LOG_WARNING
notifications	5	Normal but significant condition	LOG_NOTICE
informational	6	Informational message only	LOG_INFO

Level Keywords	Level	Description	Syslog Definition
debugging	7	Debugging message	LOG_DEBUG

**Task ID****Task ID**    **Operations**

logging read,  
write

**Examples**

This example shows how to change the level of messages displayed on the console terminal to **alerts** (1), which means that **alerts** (1) and **emergencies** (0) are displayed:

```
RP/0/RP0/CPU0:router(config)# logging console alerts
```

This example shows how to disable console logging:

```
RP/0/RP0/CPU0:router(config)# logging console disable
```

This example shows how to return console logging to the default setting (the console is enabled, *severity*: **informational**):

```
RP/0/RP0/CPU0:router# no logging console
```

## logging console disable

To disable logging of system logging (syslog) messages logged to the console, use the **logging console disable** command in XR Config mode. To return logging to the default setting, use the **no** form of this command.

**logging console disable**  
**no logging console disable**

**Syntax Description**

This command has no keywords or arguments.

**Command Default**

By default, logging is enabled.

**Command Modes**

XR Config mode

**Command History**

Release	Modification
Release 7.0.12	This command was introduced.

**Usage Guidelines**

Use the **logging console disable** command to disable console logging completely.

Use the **no logging console disable** command to return the configuration to the default setting.

Task ID	Task ID	Operations
	logging	read, write

**Examples**

This example shows how to disable syslog messages:

```
RP/0/RP0/CPU0:router(config)# logging console disable
```

## logging container all

To enable logging of messages from third-party software containers, use the **logging container all** command in XR Config mode. To disable logging messages from third-party containers, use the **no** form of this command.

**logging container all**

**Syntax Description**

**container** Enables the logging of messages from third-party software containers.

**all** Specifies all running containers in the device.

**Command Default**

By default, logging is disabled.

**Command Modes**

XR Config mode

**Command History****Release**

Release 7.3.15

**Modification**

This command was introduced.

**Usage Guidelines**

None.

Task ID	Task ID	Operations
	logging	read, write

**Examples**

This example shows how to enable third-party software container logging and how to view the logs for the third-party software container named DOCKER:

```
Router# configure
Router(config)# logging container all
Router(config)# commit
```

```
Router# show logging | inc DOCKER
```

```

Syslog logging: enabled (0 messages dropped, 0 flushes, 0 overruns)
  Console logging: level warnings, 5 messages logged
  Monitor logging: level debugging, 0 messages logged
  Trap logging: level informational, 0 messages logged
  Buffer logging: level debugging, 148 messages logged

Log Buffer (2097152 bytes):

RP/0/RP0/CPU0:Mar  5 06:56:11.913 UTC: exec[66927]: %SECURITY-LOGIN-6-AUTHEN_SUCCESS :
Successfully authenticated user 'lab' from 'console' on 'con0_RP0_CPU0'
RP/0/RP0/CPU0:Mar  5 06:58:13.053 UTC: config[66985]: %MGBL-SYS-5-CONFIG_I : Configured
from console by lab
RP/0/RP0/CPU0:Mar  5 06:59:04.775 UTC: ubuntu-1[67232]: %OS-SYSLOG-6-DOCKER_APP :
^[]0;root@c382b2e7bed6: /^Groot@c382b2e7bed6:/# testlog
RP/0/RP0/CPU0:Mar  5 06:59:04.830 UTC: config[67139]: %MGBL-CONFIG-6-DB_COMMIT : Configuration
committed by user 'lab'. Use 'show configuration commit changes 100000012' to view the
changes.
RP/0/RP0/CPU0:Mar  5 06:59:45.028 UTC: config[67139]: %MGBL-SYS-5-CONFIG_I : Configured
from console by lab
RP/0/RP0/CPU0:Mar  5 06:59:48.552 UTC: run_cmd[67780]: %INFRA-INFRA_MSG-5-RUN_LOGIN : User
lab logged into shell from con0/RP0/CPU0
RP/0/RP0/CPU0:Mar  5 06:59:56.073 UTC: ubuntu-1[67976]: %OS-SYSLOG-6-DOCKER_APP : testlog-123

RP/0/RP0/CPU0:Mar  5 07:00:12.471 UTC: ubuntu-1[68099]: %OS-SYSLOG-6-DOCKER_APP : testlog-new1

RP/0/RP0/CPU0:Mar  5 07:01:55.747 UTC: ubuntu-1[68245]: %OS-SYSLOG-6-DOCKER_APP : testlog-new1

RP/0/RP0/CPU0:Mar  5 07:02:02.869 UTC: run_cmd[67780]: %INFRA-INFRA_MSG-5-RUN_LOGOUT : User
lab logged out of shell from con0/RP0/CPU0

```

## logging events link-status

To enable the logging of link-status system logging (syslog) messages for logical and physical links, use the **logging events link-status** command in XR Config mode. To disable the logging of link status messages, use the **no** form of this command.

```

logging events link-status {disable | software-interfaces}
no logging events link-status [disable | software-interfaces]

```

<b>Syntax Description</b>	<b>disable</b> Disables the logging of link-status messages for all interfaces, including physical links.				
	<b>software-interfaces</b> Enables the logging of link-status messages for logical links as well as physical links.				
<b>Command Default</b>	The logging of link-status messages is enabled for physical links.				
<b>Command Modes</b>	XR Config mode				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.0.12</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.0.12	This command was introduced.
Release	Modification				
Release 7.0.12	This command was introduced.				
<b>Usage Guidelines</b>	When the logging of link-status messages is enabled, the router can generate a high volume of link-status up and down system logging messages.				

Use the **no logging events link-status** command to enable the logging of link-status messages for physical links only, which is the default behavior.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to disable the logging of physical and logical link-status messages:

```
RP/0/RP0/CPU0:router(config)# logging events link-status disable
```

## logging events link-status (interface)

To enable the logging of link-status system logging (syslog) messages on a specific interface for virtual interfaces and subinterfaces, use the **logging events link-status** command in the appropriate interface or subinterface mode. To disable the logging of link status messages, use the **no** form of this command.

**logging events link-status**  
**no logging events link-status**

### Syntax Description

This command has no keywords or arguments.

### Command Default

The logging of link-status messages is disabled for virtual interfaces and subinterfaces.

### Command Modes

Interface configuration

### Command History

Release	Modification
Release 7.0.12	This command was introduced.

### Usage Guidelines

When the logging of link-status messages is enabled, the router can generate a high volume of link-status up and down system logging messages. The **logging events link-status** command enables messages for virtual interfaces and subinterfaces only.

The **logging events link-status** command allows you to enable and disable logging on a specific interface for bundles, tunnels, and VLANs.

Use the **no logging events link-status** command to disable the logging of link-status messages.



**Note** Enabling the **logging events link-status** command on a specific interface overrides the global configuration set using the **logging events link-status** command described in this section.

Task ID	Task ID	Operations
	logging	read, write

## Examples

This example shows the results of turning on logging for a bundle interface:

```
RP/0/RP0/CPU0:router(config)# int bundle-ether1
RP/0/RP0/CPU0:router(config-if)# logging events link-status
RP/0/RP0/CPU0:router(config-if)# no shutdown
RP/0/RP0/CPU0:router(config-if)# commit

LC/0/4/CPU0:Jun 29 12:51:26.887 : ifmgr[142]:
%PKT_INFRA-LINK-3-UPDOWN : Interface HundredGigE0/0/0/0, changed state to Up

LC/0/4/CPU0:Jun 29 12:51:26.897 : ifmgr[142]:
%PKT_INFRA-LINEPROTO-6-UPDOWN : Line protocol on Interface HundredGigE0/0/0/0, changed state
to Up

RP/0/RP0/CPU0:router(config-if)# shutdown
RP/0/RP0/CPU0:router(config-if)# commit

LC/0/4/CPU0:Jun 29 12:51:32.375 : ifmgr[142]:
%PKT_INFRA-LINK-3-UPDOWN : Interface HundredGigE0/0/0/0, changed state to Down

LC/0/4/CPU0:Jun 29 12:51:32.376 : ifmgr[142]:
%PKT_INFRA-LINEPROTO-6-UPDOWN : Line protocol on Interface HundredGigE0/0/0/0, changed state
to Down
```

This example shows a sequence of commands for a tunnel interface with and without logging turned on:

```
RP/0/RP0/CPU0:router(config)# int tunnel-te 1
RP/0/RP0/CPU0:router(config-if)# commit
RP/0/RP0/CPU0:router(config-if)# shutdown
RP/0/RP0/CPU0:router(config-if)# commit
RP/0/RP0/CPU0:router(config-if)# no shutdown
RP/0/RP0/CPU0:router(config-if)# commit
RP/0/RP0/CPU0:router(config-if)# logging events link-status
RP/0/RP0/CPU0:router(config-if)# commit
RP/0/RP0/CPU0:router(config-if)# shutdown
RP/0/RP0/CPU0:router(config-if)# commit

RP/0/RP0/CPU0:Jun 29 14:05:57.732 : ifmgr[176]:
%PKT_INFRA-LINK-3-UPDOWN : Interface tunnel-te1, changed state to Administratively Down

RP/0/RP0/CPU0:Jun 29 14:05:57.733 : ifmgr[176]:
%PKT_INFRA-LINEPROTO-6-UPDOWN : Line protocol on Interface tunnel-te1, changed state to
Administratively Down

RP/0/RP0/CPU0:router(config-if)# no shutdown
RP/0/RP0/CPU0:router(config-if)# commit

RP/0/RP0/CPU0:Jun 29 14:06:02.104 : ifmgr[176]:
%PKT_INFRA-LINK-3-UPDOWN : Interface tunnel-te1, changed state to Down

RP/0/RP0/CPU0:Jun 29 14:06:02.109 : ifmgr[176]:
```

```
%PKT_INFRA-LINEPROTO-6-UPDOWN : Line protocol on Interface tunnel-tel, changed state to Down
```

This example shows the same process for a subinterface:

```
RP/0/RP0/CPU0:router(config)# int HundredGigE 0/0/0/0.1
RP/0/RP0/CPU0:router(config-subif)# commit
RP/0/RP0/CPU0:router(config-subif)# shutdown
RP/0/RP0/CPU0:router(config-subif)# commit
RP/0/RP0/CPU0:router(config-subif)# no shutdown
RP/0/RP0/CPU0:router(config-subif)# commit
RP/0/RP0/CPU0:router(config-subif)# logging events link-status
RP/0/RP0/CPU0:router(config-subif)# commit
RP/0/RP0/CPU0:router(config-subif)# shutdown
RP/0/RP0/CPU0:router(config-subif)# commit

LC/0/5/CPU0:Jun 29 14:06:46.710 : ifmgr[142]:
%PKT_INFRA-LINEPROTO-6-UPDOWN : Line protocol on Interface HundredGigE0/0/0/0.1, changed
state to Administratively Down

LC/0/5/CPU0:Jun 29 14:06:46.726 : ifmgr[142]:
%PKT_INFRA-LINK-3-UPDOWN : Interface HundredGigE0/0/0/0.1, changed state to Administratively
Down

RP/0/RP0/CPU0:router(config-subif)# no shutdown
RP/0/RP0/CPU0:router(config-subif)# commit

LC/0/5/CPU0:Jun 29 14:06:52.229 : ifmgr[142]:
%PKT_INFRA-LINK-3-UPDOWN : Interface HundredGigE0/0/0/0.1, changed state to Up

LC/0/5/CPU0:Jun 29 14:06:52.244 : ifmgr[142]:
%PKT_INFRA-LINEPROTO-6-UPDOWN : Line protocol on Interface HundredGigE0/0/0/0.1, changed
state to Down
```

## logging facility

To configure the type of syslog facility in which system logging (syslog) messages are sent to syslog servers, use the **logging facility** command in XR Config mode. To remove the **logging facility** command from the configuration file and disable the logging of messages to any facility type, use the **no** form of this command.

**logging facility** [*type*]

**no logging facility**

<b>Syntax Description</b>	<i>type</i> (Optional) Syslog facility type. The default is <b>local7</b> . Possible values are listed under Table 1 in the “Usage Guidelines” section.
<b>Command Default</b>	<i>type</i> : <b>local7</b>
<b>Command Modes</b>	XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines**

This table describes the acceptable options for the *type* argument.

**Table 13: Facility Type Descriptions**

Facility Type	Description
auth	Authorization system
cron	Cron/at facility
daemon	System daemon
kern	Kernel
local0	Reserved for locally defined messages
local1	Reserved for locally defined messages
local2	Reserved for locally defined messages
local3	Reserved for locally defined messages
local4	Reserved for locally defined messages
local5	Reserved for locally defined messages
local6	Reserved for locally defined messages
local7	Reserved for locally defined messages
lpr	Line printer system
mail	Mail system
news	USENET news
sys9	System use
sys10	System use
sys11	System use
sys12	System use
sys13	System use
sys14	System use
syslog	System log
user	User process

Facility Type	Description
uucp	UNIX-to-UNIX copy system

Use the [logging, on page 64](#) command to specify a syslog server host as a destination for syslog messages.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to configure the syslog facility to the **kern** facility type:

```
RP/0/RP0/CPU0:router(config)# logging facility kern
```

## logging file

To specify the file logging destination, use the **logging file** command in XR Config mode. To remove the file logging destination, use the **no** form of this command.

**logging file** *filename* [**discriminator** {**match** | **nomatch**}] [**path** *pathname* {**maxfilesize** | **severity**}]  
**no logging file**

Syntax Description	
<i>filename</i>	Specifies the filename of the file to display.
<b>discriminator</b>	Specifies the match or nomatch syslog discriminator.
<b>path</b> <i>pathname</i>	Specifies the location to save the logging file.
<b>maxfilesize</b>	(optional) Specifies the maximum file size of the logging file in bytes. Range is from 1 to 2097152 (in KB). Default is 2 GB.
<b>severity</b>	(optional) Specifies the severity level for the logging file. Default is informational. <ul style="list-style-type: none"> <li>• alerts Immediate action needed (severity=1)</li> <li>• critical Critical conditions (severity=2)</li> <li>• debugging Debugging messages (severity=7)</li> <li>• emergencies System is unusable (severity=0)</li> <li>• errors Error conditions (severity=3)</li> <li>• informational Informational messages (severity=6)</li> <li>• notifications Normal but significant conditions (severity=5)</li> <li>• warnings Warning conditions (severity=4)</li> </ul>

## logging format bsd

**Command Default** None

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **logging file** command to set the logging file destination. To set the logging file discriminator you have to specify the file name. If it exceeds the maximum file size, then a wrap occurs.

Task ID	Task ID	Operation
	logging	read, write

**Example**

This example shows how to set the maximum file size for the defined file destination:

```
RP/0/RP0/CPU0:router (config) # logging file file1 path /harddisk:/logfiles/ maxfilesize 2048
```

## logging format bsd

To send system logging messages to a remote server in Berkeley Software Distribution (BSD) format, use the **logging format bsd** command in XR Config mode. To return console logging to the default setting, use the **no** form of this command.

**logging format bsd**

Syntax Description	format	Specifies the format of the syslog messages sent to the server.
	<b>bsd</b>	Configures the format of the syslog messages according to the BSD format.

**Command Default** By default, this feature is disabled.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.1.2	This command was introduced.

**Usage Guidelines** None.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to log messages to a server, in the BSD format:

```
Router(config)#logging 209.165.200.225 vrf default severity info
Router(config)#logging format bsd
Router(config)#commit
```

```
Router(config)#do show run logging
logging format bsd
logging 209.165.200.225 vrf default severity info
```

## logging format rfc5424

To configure the format of the system logging (syslog) messages according to the one outlined in RFC 5424, use the **logging format rfc5424** command in XR Config mode. To return console logging to the default setting, use the **no** form of this command.

**logging format rfc5424**

### Syntax Description

**format** Specifies the format of the syslog messages sent to the server.

**rfc5424** Configures the format of the syslog messages according to the one outlined in RFC 5424.

### Command Default

By default, this feature is disabled.

### Command Modes

XR Config mode

### Command History

Release	Modification
Release 7.0.12	This command was introduced.

### Usage Guidelines

None.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to log messages to a server, in the format specified in RFC 5424:

```
Router(config)#logging 209.165.200.225 vrf default severity info
Router(config)#logging format rfc5424
Router(config)#commit

Router(config)#do show run logging
logging format rfc5424
logging 209.165.200.225 vrf default severity info
```

## logging history

To change the severity level of system logging (syslog) messages sent to the history table on the router and a Simple Network Management Protocol (SNMP) network management station (NMS), use the **logging history** command in XR Config mode. To remove the **logging history** command from the configuration and return the logging of messages to the default level, use the **no** form of this command.

**logging history** *severity*  
**no logging history**

### Syntax Description

*severity* Severity level of messages sent to the history table on the router and an SNMP NMS, including events of a higher severity level (numerically lower). Settings for the severity levels and their respective system conditions are listed under the Usage Guidelines section for the **logging console** command.

### Command Default

*severity*: **warnings**

### Command Modes

XR Config mode

### Command History

Release	Modification
Release 7.0.12	This command was introduced.

### Usage Guidelines

Logging of messages to an SNMP NMS is enabled by the **snmp-server enable traps** command. Because SNMP traps are inherently unreliable and much too important to lose, at least one syslog message, the most recent message, is stored in a history table on the router.

Use the **logging history** command to reflect the history of last 500 syslog messages. For example, when this command is issued, the last 500 syslog messages with severity less than warning message are displayed in the output of **show logging history** command.

Use the [show logging history](#) command to display the history table, which contains table size, message status, and message text data.

Use the [logging history size](#) command to change the number of messages stored in the history table.

The value specified for the *severity* argument causes messages at that severity level and at numerically lower levels to be stored in the history table of the router and sent to the SNMP NMS. Severity levels are numbered 0 to 7, with 1 being the most important message and 7 being the least important message (that is, the lower the number, the more critical the message). For example, specifying the level critical with the **critical** keyword causes messages at the severity level of **critical** (2), **alerts** (1), and **emergencies** (0) to be stored in the history table and sent to the SNMP NMS.

The **no logging history** command resets the history level to the default.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to change the level of messages sent to the history table and to the SNMP server to **alerts** (1), which means that messages at the severity level of **alerts** (1) and **emergencies** (0) are sent:

```
RP/0/RP0/CPU0:router(config)# logging history alerts
```

## logging history size

To change the number of system logging (syslog) messages that can be stored in the history table, use the **logging history size** command in XR Config mode. To remove the **logging history size** command from the configuration and return the number of messages to the default value, use the **no** form of this command.

**logging history size** *number*

**no logging history** *number*

<b>Syntax Description</b>	<i>number</i> Number from 1 to 500 indicating the maximum number of messages that can be stored in the history table. The default is 1 message.	
<b>Command Default</b>	<i>number</i> : 1 message	
<b>Command Modes</b>	XR Config mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

### Usage Guidelines

Use the **logging history size** command to change the number of messages that can be stored in this history table. When the history table is full (that is, when it contains the maximum number of messages specified with the command), the oldest message is deleted from the table to allow the new message to be stored.

Use the [logging history](#) command to change the severity level of syslog messages stored in the history file and sent to the SNMP server.

Task ID	Task ID	Operations
	logging	read, write

**Examples**

This example shows how to set the number of messages stored in the history table to 20:

```
RP/0/RP0/CPU0:router(config)# logging history size 20
```

## logging hostnameprefix

To append a hostname prefix to system logging (syslog) messages logged to syslog servers, use the **logging hostnameprefix** command in XR Config mode. To remove the **logging hostnameprefix** command from the configuration file and disable the logging host name prefix definition, use the **no** form of this command.

```
logging hostnameprefix hostname
no logging hostnameprefix
```

**Syntax Description**

*hostname* Hostname that appears in messages sent to syslog servers.

**Command Default**

No hostname prefix is added to the messages logged to the syslog servers.

**Command Modes**

XR Config mode

**Command History**

Release	Modification
Release 7.0.12	This command was introduced.

**Usage Guidelines**

Use the **logging hostnameprefix** command to append a hostname prefix to messages sent to syslog servers from the router. You can use these prefixes to sort the messages being sent to a given syslog server from different networking devices.

Use the **logging** command to specify a syslog server host as a destination for syslog messages.

**Task ID**

Task ID	Operations
logging	read, write

**Examples**

This example shows how to add the hostname prefix host1 to messages sent to the syslog servers from the router:

```
RP/0/RP0/CPU0:router(config)# logging hostnameprefix host1
```

## logging ipv4/ipv6

To configure the differentiated services code point (DSCP) or the precedence value for the IPv4 or IPv6 header of the syslog packet in the egress direction, use the **logging** {**ipv4** | **ipv6**} command in XR EXEC mode. To remove the configured DSCP or precedence value, use the **no** form of this command.

```
logging {ipv4 | ipv6} {dscp dscp-value | precedence {numbername}}
no logging {ipv4 | ipv6} {dscp dscp-value | precedence {numbername}}
```

Syntax Description		
<b>ipv4 / ipv6</b>		Sets the DSCP or precedence bit for IPv4 or IPv6 packets.
<b>dscp</b> <i>dscp-value</i>		Specifies differentiated services code point value or per hop behavior values (PHB). For more information on PHB values, see Usage Guideline section below. The range is from 0 to 63. The default value is 0.
<b>precedence</b> { <i>number</i>   <i>name</i> }		Sets Type of Service (TOS) precedence value. You can specify either a precedence number or name. The range of argument <i>number</i> is between 0 to 7.  The <i>name</i> argument has following keywords: <ul style="list-style-type: none"> <li>• routine—Match packets with routine precedence ( 0)</li> <li>• priority—Match packets with priority precedence (1)</li> <li>• immediate—Match packets with immediate precedence (2)</li> <li>• flash—Match packets with flash precedence (3)</li> <li>• flash-override—Match packets with flash override precedence (4)</li> <li>• critical—Match packets with critical precedence (5)</li> <li>• internet—Match packets with internetwork control precedence (6)</li> <li>• network—Match packets with network control precedence (7)</li> </ul>

**Command Default** None.

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** By specifying PHB values you can further control the format of locally generated syslog traffic on the network.

You may provide these PHB values:

- af11—Match packets with AF11 DSCP (001010)
- af12—Match packets with AF12 dscp (001100)

- af13—Match packets with AF13 dscp (001110)
- af21— Match packets with AF21 dscp (010010)
- af22—Match packets with AF22 dscp (010100)
- af23—Match packets with AF23 dscp (010110)
- af31—Match packets with AF31 dscp (011010)
- af32—Match packets with AF32 dscp (011100)
- af33—Match packets with AF33 dscp (011110)
- af41—Match packets with AF41 dscp (100010)
- af42—Match packets with AF42 dscp (100100)
- af43— Match packets with AF43 dscp (100110)
- cs1—Match packets with CS1(precedence 1) dscp (001000)
- cs2—Match packets with CS2(precedence 2) dscp (010000)
- cs3—Match packets with CS3(precedence 3) dscp (011000)
- cs4—Match packets with CS4(precedence 4) dscp (100000)
- cs5—Match packets with CS5(precedence 5) dscp (101000)
- cs6—Match packets with CS6(precedence 6) dscp (110000)
- cs7—Match packets with CS7(precedence 7) dscp (111000)
- default—Match packets with default dscp (000000)
- ef—Match packets with EF dscp (10111)

Assured Forwarding (AF) PHB group is a means for a provider DS domain to offer different levels of forwarding assurances for IP packets. The Assured Forwarding PHB guarantees an assured amount of bandwidth to an AF class and allows access to additional bandwidth, if obtainable.

For example AF PHB value af11 - Match packets with AF11 DSCP (001010), displays the DSCP values as 10 and 11. The DSCP bits are shown as 001010 and 001011 .

AF11 stands for:

- Assured forwarding class 1 (001)
- Drop priority 100 (1)
- Dropped last in AF1 class

Similarly AF PHB value af12 - Match packets with AF12 dscp (001100), displays the DSCP values as 12 and 13. The DSCP bits are shown as 001100 and 001101.

AF12 stands for:

- Assured forwarding class 1 (001)
- Drop priority 100 (2)

- Dropped second in AF1 class

Class Selector (CS) provides backward compatibility bits,

CS PHB value cs1 - Match packets with CS1(precedence 1) dscp (001000)

CS1 stands for:

- CS1 DSCP bits are displayed as 001000 and 001001
- priority stated as 1

Expedited Forwarding (EF) PHB is defined as a forwarding treatment to build a low loss, low latency, assured bandwidth, end-to-end service. These characteristics are suitable for voice, video and other realtime services.

EF PHB Value ef - Match packets with EF dscp (101110) - this example states the recommended EF value (used for voice traffic).

Task ID	Task ID	Operation
	logging	read, write

### Example

This example shows how to configure DSCP value as 1 for IPv4 header of syslog packet.

```
RP/0/RP0/CPU0:router(config)#logging ipv4 dscp 1
```

This example shows how to configure DSCP value as 21 for IPv6 header of syslog packet.

```
RP/0/RP0/CPU0:router(config)#logging ipv6 dscp 21
```

This example shows how to configure precedence value as 5 for IPv6 header of syslog packet.

```
RP/0/RP0/CPU0:router(config)#logging ipv6 precedence 5
```

## logging localfilesize

To specify the size of the local logging file, use the **logging localfilesize** command in XR Config mode. To remove the **logging localfilesize** command from the configuration file and restore the system to the default condition, use the **no** form of this command.

**logging localfilesize** *bytes*  
**no logging localfilesize** *bytes*

Syntax Description	<i>bytes</i> Size of the local logging file in bytes. Range is 0 to 4294967295. Default is 32000 bytes.
--------------------	---

**Command Default** *bytes: 32000 bytes*

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **logging localfilesize** command to set the size of the local logging file.

Task ID	Task ID	Operations
	logging	read, write

**Examples** This example shows how to set the local logging file to 90000 bytes:

```
RP/0/RP0/CPU0:router(config)# logging localfilesize 90000
```

## logging monitor

To specify terminal lines other than the console terminal as destinations for system logging (syslog) messages and limit the number of messages sent to terminal lines based on severity, use the **logging monitor** command in XR Config mode. To remove the **logging monitor** command from the configuration file and disable logging to terminal lines other than the console line, use the **no** form of this command.

**logging monitor** [*severity*]  
**no logging monitor**

**Syntax Description** *severity* (Optional) Severity level of messages logged to the terminal lines, including events of a higher severity level (numerically lower). The default is **debugging**.

**Command Default** *severity: debugging*

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** The **logging monitor** is for the terminal monitoring. Use the **logging monitor** command to restrict the messages displayed on terminal lines other than the console line (such as virtual terminals). The value set for the *severity* argument causes messages at that level and at numerically lower levels to be displayed on the monitor.

Use the **terminal monitor** command to enable the display of syslog messages for the current terminal session.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to set the severity level of messages logged to terminal lines to errors:

```
RP/0/RP0/CPU0:router(config)# logging monitor errors
```

## logging source-interface

To set all system logging (syslog) messages being sent to syslog servers to contain the same IP address, regardless of which interface the syslog message uses to exit the router, use the **logging source-interface** command in XR Config mode. To remove the **logging source-interface** command from the configuration file and remove the source designation, use the **no** form of this command.

**logging source-interface** *type interface-path-id*  
**no logging source-interface**

### Syntax Description

<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface.
	<b>Note</b> Use the <b>show interfaces</b> command to see a list of all interfaces currently configured on the router.
	For more information about the syntax for the router, use the question mark (?) online help function.

### Command Default

No source IP address is specified.

### Command Modes

XR Config mode

### Command History

Release	Modification
Release 7.0.12	This command was introduced.

### Usage Guidelines

Normally, a syslog message contains the IP address of the interface it uses to leave the networking device. Use the **logging source-interface** command to specify that syslog packets contain the IP address of a particular interface, regardless of which interface the packet uses to exit the networking device.

Use the [logging, on page 64](#) command to specify a syslog server host as a destination for syslog messages.

Task ID	Task ID	Operations
	logging	read, write

**Examples**

This example shows how to specify that the IP address for HundredGigE interface 0/1/0/0 be set as the source IP address for all messages:

```
RP/0/RP0/CPU0:router(config)# logging source-interface HundredGigE interface 0/1/0/0
```

## logging suppress deprecated

To prevent the logging of messages to the console to indicate that commands are deprecated, use the **logging suppress deprecated** command in XR Config mode. To remove the **logging suppress deprecated** command from the configuration file, use the **no** form of this command.

**logging suppress deprecated**  
**no logging suppress deprecated**

**Syntax Description**

This command has no keywords or arguments.

**Command Default**

Console messages are displayed when deprecated commands are used.

**Command Modes**

XR Config mode

**Command History**

Release	Modification
Release 7.0.12	This command was introduced.

**Usage Guidelines**

The **logging suppress deprecated** command affects messages to the console only.

**Task ID**

Task ID	Task ID	Operations
	logging	read, write

**Examples**

This example shows how to suppress the consecutive logging of deprecated messages:

```
RP/0/RP0/CPU0:router(config)# logging suppress deprecated
```

## logging suppress duplicates

To prevent the consecutive logging of more than one copy of the same system logging (syslog) message, use the **logging suppress duplicates** command in XR Config mode. To remove the **logging suppress duplicates** command from the configuration file and disable the filtering process, use the **no** form of this command.

**logging suppress duplicates**  
**no logging suppress duplicates**

**Syntax Description** This command has no keywords or arguments.

**Command Default** Duplicate messages are logged.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** If you use the **logging suppress duplicates** command during debugging sessions, you might not see all the repeated messages and could miss important information related to problems that you are attempting to isolate and resolve. In such a situation, you might consider disabling this command.

Task ID	Task ID	Operations
	logging	read, write

**Examples** This example shows how to suppress the consecutive logging of duplicate messages:

```
RP/0/RP0/CPU0:router(config)# logging suppress duplicates
```

## logging trap

To specify the severity level of messages logged to snmp server, use the **logging trap** command in XR Config mode. To restore the default behavior, use the **no** form of this command.

**logging trap** [*severity*]  
**no logging trap**

**Syntax Description** *severity* (Optional) Severity level of messages logged to the snmp server, including events of a higher severity level (numerically lower). The default is **informational**. Settings for the severity levels and their respective system conditions are listed under Table 1 in the “Usage Guidelines” section for the **logging console** command.

**Command Default** *severity*: **informational**

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **logging trap** command to limit the logging of messages sent to snmp servers to only those messages at the specified level.

The “Usage Guidelines” section for the logging console command lists the syslog definitions that correspond to the debugging message levels.

Use the [logging, on page 64](#) command to specify a syslog server host as a destination for syslog messages.

The **logging trap disable** will disable the logging of messages to both snmp server and syslog servers.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to restrict messages to **notifications** (5) and numerically lower levels.

```
RP/0/RP0/CPU0:router(config)# logging trap notifications
```

## login-history

To enable the display of the login banner in compliance with US DoD login notification requirements, use the **login-history enable** command in the XR Config mode. To disable the display of the login banner, use the **login-history disable** command in the XR Config mode.

**login-history** { **enable** | **disable** }

**Command Default** The display of the login banner is not enabled.

Command History	Release	Modification
	Release 7.3.1	This command was introduced.

Task ID	Task ID	Operations
	aaa	read, write

## Examples

This example shows how to enable and disable the display of the login banner in compliance with the US DoD login notification requirements:

```
Router(config)# login-history enable
Router(config-un)# login-history disable
```

If you enable the login banner, you can display the login notification banner that conforms to the US (DOD) requirements:

```
Username: user1
Password:
User root : login failed 2 time(s) successful 5 time(s).
Most recent Failure Thu Mar 19 2020 21:12:00 UTC
to con0_RP0_CPU0 from console

User user1 last logged in successfully Thu Mar 19 2020 21:11:50 UTC
to con0_RP0_CPU0 from console
```

## service timestamps

To modify the time-stamp format for system logging (syslog) and debug messages, use the **service timestamps** command in XR Config mode. To revert to the default timestamp format, use the **no** form of this command.

```
service timestamps [[debug | log] {datetime [localtime] [msec] [show-timezone] | disable | uptime}]
no service timestamps [[debug | log] {datetime [localtime] [msec] [show-timezone] | disable | uptime}]
```

### Syntax Description

<b>debug</b>	(Optional) Specifies the time-stamp format for debugging messages.
<b>log</b>	(Optional) Specifies the time-stamp format for syslog messages.
<b>datetime</b>	(Optional) Specifies that syslog messages are time-stamped with date and time.
<b>localtime</b>	(Optional) When used with the <b>datetime</b> keyword, includes the local time zone in time stamps.
<b>msec</b>	(Optional) When used with the <b>datetime</b> keyword, includes milliseconds in the time stamp.
<b>show-timezone</b>	(Optional) When used with the <b>datetime</b> keyword, includes time zone information in the time stamp.
<b>disable</b>	(Optional) Causes messages to be time-stamped in the default format.
<b>uptime</b>	(Optional) Specifies that syslog messages are time-stamped with the time that has elapsed since the networking device last rebooted.

### Command Default

Messages are time-stamped in the month day hh:mm:ss by default.

The default for the **service timestamps log datetime localtime** and **service timestamps debug datetime localtime** forms of the command with no additional keywords is to format the time in the local time zone, without milliseconds and time zone information.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Time stamps can be added to either debugging or syslog messages independently. The **uptime** keyword adds time stamps in the format hhhh:mm:ss, indicating the elapsed time in hours:minutes:seconds since the networking device last rebooted. The **datetime** keyword adds time stamps in the format mmm dd hh:mm:ss, indicating the date and time according to the system clock. If the system clock has not been set, the date and time are preceded by an asterisk (\*), which indicates that the date and time have not been set and should be verified.

The **no** form of the **service timestamps** command causes messages to be time-stamped in the default format.

Entering the **service timestamps** form of this command without any keywords or arguments is equivalent to issuing the **service timestamps debug uptime** form of this command.

Task ID	Task ID	Operations
	logging	read, write

### Examples

This example shows how to enable time stamps on debugging messages, which show the elapsed time since the networking device last rebooted:

```
RP/0/RP0/CPU0:router(config)# service timestamps debug uptime
```

This example shows how to enable time stamps on syslog messages, which show the current time and date relative to the local time zone, with the time zone name included:

```
RP/0/RP0/CPU0:router(config)# service timestamps log datetime localtime show-timezone
```

## severity (logging)

To specify the filter level for logs, use the **severity** command in logging archive configuration mode. To return to the default, use the **no** form of this command.

```
severity {severity}
no severity
```

**Syntax Description** *severity* Severity level for determining which messages are logged to the archive. Possible severity levels and their respective system conditions are listed in the “Usage Guidelines” section for the [logging console](#) command. The default is **informational**.

**Command Default** Informational

<b>Command Modes</b>	Logging archive configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.
<b>Usage Guidelines</b>	<p>Use the <b>severity</b> command to specify the filter level for syslog messages. All syslog messages higher in severity or the same as the configured value are logged to the archive.</p> <p>The “Usage Guidelines” section for the logging console command describes the acceptable severity levels for the <i>severity</i> argument.</p>	
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	logging	read, write
<b>Examples</b>	<p>This example shows how to specify that warning conditions and higher-severity messages are logged to the archive:</p> <pre>Router(config)# logging archive Router(config-logging-arch)# severity warnings</pre>	

## show logging

To display the contents of the logging buffer, use the **show logging** command in XR EXEC mode.

```
show logging [[alarm-location location] | [correlator options] | local location node-id |
[location node-id] [start month day hh : mm : ss] [process name] [string string] [end month
day hh : mm :ss][events options][history][last entries][suppress rule {rule_name | all}]
```

<b>Syntax Description</b>	<b>alarm-location trace</b> <i>location</i>	(Optional) Displays alarm-location information. The <b>trace</b> option shows trace data for the alarm location components.
	<b>correlator</b> <i>options</i>	<p>(Optional) Displays content and information about correlation buffer. Options available are:</p> <ul style="list-style-type: none"> <li>• <b>buffer</b>: Displays content of the correlation buffer.</li> <li>• <b>info</b>: Displays information about event correlation.</li> <li>• <b>trace</b>: Displays trace data for the alarm_logger component.</li> </ul>

<b>end</b> <i>month day hh : mm : ss</i>	(Optional) Displays syslog messages with a time stamp equal to or lower than the time stamp specified with the <i>monthday hh : mm : ss</i> argument.  The ranges for the <i>month day hh : mm : ss</i> arguments are: <ul style="list-style-type: none"> <li>• <i>month</i>—The month of the year. The values for the <i>month</i> argument are the names of the twelve months.</li> <li>• <i>day</i>—Day of the month. Range is from 01 to 31.</li> <li>• <i>hh</i> :—Hours. Range is from 00 to 23. You must insert a colon after the <i>hh</i> argument.</li> <li>• <i>mm</i> :—Minutes. Range is from 00 to 59. You must insert a colon after the <i>mm</i> argument.</li> <li>• <i>ss</i>—Seconds. Range is from 00 to 59.</li> </ul>
<b>events</b> <i>options</i>	Displays content and information about the event buffer. The various options available are: <ul style="list-style-type: none"> <li>• <i>buffer</i>: Displays content of the event buffer.</li> <li>• <i>info</i>: Displays information about events buffer.</li> <li>• <i>rule</i>: Displays specified rules.</li> <li>• <i>ruleset</i>: Displays rulesets.</li> <li>• <i>trace</i>: Displays trace data for the correlation component.</li> </ul>
<b>history</b>	Displays contents of logging history.
<b>last</b> <i>entries</i>	Displays last <n> entries. The number of entries can range from 1 to 500.
<b>local location</b> <i>node-id</i>	(Optional) Displays system logging (syslog) messages from the specified local buffer. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<b>location</b> <i>node-id</i>	(Optional) Displays syslog messages from the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

<b>start</b> <i>month day hh : mm : ss</i>	(Optional) Displays syslog messages with a time stamp equal to or higher than the time stamp specified with the <i>month day mm : hh : ss</i> argument.  The ranges for the <i>month day hh : mm : ss</i> arguments are as follows: <ul style="list-style-type: none"> <li>• <i>month</i>—The month of the year. The values for the <i>month</i> argument are the names of the twelve months.</li> <li>• <i>day</i>—Day of the month. Range is from 01 to 31.</li> <li>• <i>hh</i> :—Hours. Range is from 00 to 23. You must insert a colon after the <i>hh</i> argument.</li> <li>• <i>mm</i> :—Minutes. Range is from 00 to 59. You must insert a colon after the <i>mm</i> argument.</li> <li>• <i>ss</i>—Seconds. Range is from 00 to 59.</li> </ul>
<b>process</b> <i>name</i>	(Optional) Displays syslog messages related to the specified process.
<b>string</b> <i>string</i>	(Optional) Displays syslog messages that contain the specified string.
<b>suppress rule</b> { <i>rule_name</i>   <b>all</b> }	Displays content and information about log suppression. The <b>rule</b> option shows specified rules.

**Command Default**

None

**Command Modes**

XR EXEC mode

**Command History**

Release	Modification
Release 7.0.12	This command was introduced.

**Usage Guidelines**

Use the **show logging** command to display the state of syslog error and event logging on the processor console. The information from the command includes the types of logging enabled and the size of the buffer.

**Task ID**

Task ID	Operations
logging	read

**Examples**

This is the sample output from the **show logging** command with the **process** keyword and *name* argument. Syslog messages related to the init process are displayed in the sample output.

```
RP/0/RP0/CPU0:router# show logging process init
```

```
Syslog logging: enabled (24 messages dropped, 0 flushes, 0 overruns)
Console logging: level, 59 messages logged
Monitor logging: level debugging, 0 messages logged
```

```

Trap logging: level informational, 0 messages logged
Buffer logging: level debugging, 75 messages logged

Log Buffer (16384 bytes):

LC/0/1/CPU0:May 24 22:20:13.043 : init[65540]: %INIT-7-INSTALL_READY : total time 47.522
seconds
SP/0/1/SP:May 24 22:18:54.925 : init[65541]: %INIT-7-MBI_STARTED : total time 7.159 seconds

SP/0/1/SP:May 24 22:20:16.737 : init[65541]: %INIT-7-INSTALL_READY : total time 88.984
seconds
SP/0/SM1/SP:May 24 22:18:40.993 : init[65541]: %INIT-7-MBI_STARTED : total time 7.194 seconds

SP/0/SM1/SP:May 24 22:20:17.195 : init[65541]: %INIT-7-INSTALL_READY : total time 103.415
seconds
SP/0/2/SP:May 24 22:18:55.946 : init[65541]: %INIT-7-MBI_STARTED : total time 7.152 seconds

SP/0/2/SP:May 24 22:20:18.252 : init[65541]: %INIT-7-INSTALL_READY : total time 89.473
seconds

```

This is the sample output from the **show logging** command using both the **process name** keyword argument pair and **location node-id** keyword argument pair. Syslog messages related to the “init” process emitted from node 0/RP0/CPU0 are displayed in the sample output.

```

RP/0/RP0/CPU0:router# show logging process init location 0/RP0/CPU0

Syslog logging: enabled (24 messages dropped, 0 flushes, 0 overruns)
Console logging: level, 59 messages logged
Monitor logging: level debugging, 0 messages logged
Trap logging: level informational, 0 messages logged
Buffer logging: level debugging, 75 messages logged

Log Buffer (16384 bytes):
LC/0/1/CPU0:May 24 22:20:13.043 : init[65540]: %INIT-7-INSTALL_READY : total time 47.522
seconds

```

This table describes the significant fields shown in the display.

**Table 14: show logging Field Descriptions**

Field	Description
Syslog logging	If enabled, system logging messages are sent to a UNIX host that acts as a syslog server; that is, the host captures and saves the messages.
Console logging	If enabled, the level and the number of messages logged to the console are stated; otherwise, this field displays “disabled.”
Monitor logging	If enabled, the minimum level of severity required for a log message to be sent to the monitor terminal (not the console) and the number of messages logged to the monitor terminal are stated; otherwise, this field displays “disabled.”
Trap logging	If enabled, the minimum level of severity required for a log message to be sent to the syslog server and the number of messages logged to the syslog server are stated; otherwise, this field displays “disabled.”
Buffer logging	If enabled, the level and the number of messages logged to the buffer are stated; otherwise, this field displays “disabled.”

To find out OOR state of a router's hardware and Software Development Kit (SDK) resources, you can view the sample output from the **show logging** command with the output modifier as OOR. You can configure the threshold value at which a router reaches the **OOR State Red** or **Yellow** by using the `oor hw threshold` command. For more information, see `oor hw threshold` command in the chapter *Logging Services Commands of System Monitoring Command Reference for Cisco 8000 Series Routers*.

```
Router# show logging | inc OOR
Wed Jan 6 23:36:34.138 EST
LC/0/0/CPU0:Jan 6 23:01:09.609 EST: npu_drvr[278]: %PLATFORM-OFA-4-OOR_YELLOW : NPU 1, Table
nhgroup, Resource stage2_lb_group
LC/0/0/CPU0:Jan 6 23:01:29.655 EST: npu_drvr[278]: %PLATFORM-OFA-4-OOR_YELLOW : NPU 1, Table
nhgroup, Resource stage2_lb_member
LC/0/0/CPU0:Jan 6 23:01:38.938 EST: npu_drvr[278]: %PLATFORM-OFA-1-OOR_RED : NPU 3, Table
nhgroup, Resource stage2_lb_group
```

## show logging history

To display information about the state of the system logging (syslog) history table, use the **show logging history** command in XR EXEC mode mode.

### show logging history

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **show logging history** command to display information about the syslog history table, such as the table size, the status of messages, and the text of messages stored in the table. Simple Network Management Protocol (SNMP) configuration parameters and protocol activity also are displayed.

Use the [logging history](#) command to change the severity level of syslog messages stored in the history file and sent to the SNMP server.

Use the [logging history size](#) to change the number of syslog messages that can be stored in the history table.

Task ID	Task Operations ID
	logging read

**Examples** This is the sample output from the **show logging history** command:

```
RP/0/RP0/CPU0:router# show logging history
```

```
Syslog History Table: '1' maximum table entries
saving level 'warnings' or higher
137 messages ignored, 0 dropped, 29 table entries flushed
SNMP notifications disabled
```

This table describes the significant fields shown in the display.

**Table 15: show logging history Field Descriptions**

Field	Description
maximum table entries	Number of messages that can be stored in the history table. Set with the <b>logging history size</b> command.
saving level	Level of messages that are stored in the history table and sent to the SNMP server (if SNMP notifications are enabled). Set with the <b>logging history</b> command.
messages ignored	Number of messages not stored in the history table because the severity level is greater than that specified with the <b>logging history</b> command.
SNMP notifications	Status of whether syslog traps of the appropriate level are sent to the SNMP server. Syslog traps are either enabled or disabled through the <b>snmp-server enable</b> command.

## terminal monitor

To enable the display of debug command output and system logging (syslog) messages for the current terminal session, use the **terminal monitor** command in XR EXEC mode.

**terminal monitor** [**disable**]

---

**Syntax Description**     **disable** (Optional) Disables the display of syslog messages for the current terminal session.

---

**Command Default**     None

**Command Modes**     XR EXEC mode

---

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

---

**Usage Guidelines**     Use the **terminal monitor** command to enable the display of syslog messages for the current terminal session.



**Note**     Syslog messages are not sent to terminal lines unless the **logging monitor** is enabled.

Use the **terminal monitor disable** command to disable the display of logging messages for the current terminal session. If the display of logging messages has been disabled, use the **terminal monitor** command to re-enable the display of logging messages for the current terminal session.

The **terminal monitor** command is set locally, and does not remain in effect after a terminal session has ended; therefore, you must explicitly enable or disable the **terminal monitor** command each time that you would like to monitor a terminal session.

Task ID	Task ID	Operations
	logging	execute

### Examples

This example shows how to enable the display syslog messages for the current terminal session:

```
RP/0/RP0/CPU0:router# terminal monitor
```

## enable-pam process-monitoring

To detect the blocked processes on all nodes in the system, use the **enable-pam process-monitoring** command in EXEC mode to enable the Platform Automated Monitoring process blockage monitoring feature.

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** EXEC mode

Command History	Release	Modification
	Release 7.5.2	This command was introduced.

**Usage Guidelines** This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. When PAM detects a process crash, traceback, potential memory leak, CPU hog, a full file system or blocked process on any node, it automatically collects logs and saves these logs (along with the core file in applicable cases) as a *.tgz* file in `harddisk:/cisco_support/` or in `/misc/disk1/cisco_support/` directory. PAM also generates a system log message with severity level as warning, mentioning the respective issue.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.

Task ID	Task ID	Operations
	monitor	read
	basic-services or cisco-support	read

### Examples

```
Router# enable-pam process-monitoring
PAM "Monitoring Process Blockage" Feature is enabled
```

## disable-pam process-monitoring

To disable the Platform Automated Monitoring process blockage monitoring feature, use the **disable-pam process-monitoring** command in EXEC mode. To re-enable the feature, use the **enable** form of this command.

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** EXEC mode

Command History	Release	Modification
	Release 7.5.2	This command was introduced.

**Usage Guidelines** This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. When PAM detects a process crash, traceback, potential memory leak, CPU hog, a full file system or blocked process on any node, it automatically collects logs and saves these logs (along with the core file in applicable cases) as a .tgz file in `harddisk:/cisco_support/` or in `/misc/disk1/cisco_support/` directory. PAM also generates a system log message with severity level as warning, mentioning the respective issue.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.

Task ID	Task ID	Operations
	monitor	read
	basic-services or cisco-support	read

### Examples

```
Router# disable-pam process-monitoring
PAM "Monitoring Process Blockage" Feature has been disabled
```

## show pam process-monitoring-status

To see if the Platform Automated Monitoring (PAM) process blockage monitoring is enabled or disabled, use the **show pam process-monitoring-status** command in EXEC mode.

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** EXEC mode

Command History	Release	Modification
	Release 7.5.2	This command was introduced.

**Usage Guidelines**

This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. When PAM detects a process crash, traceback, potential memory leak, CPU hog, a full file system or blocked process on any node, it automatically collects logs and saves these logs (along with the core file in applicable cases) as a *.tgz* file in `harddisk:/cisco_support/` or in `/misc/disk1/cisco_support/` directory. PAM also generates a system log message with severity level as warning, mentioning the respective issue.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.

Task ID	Task ID	Operations
	monitor	read
	basic-services or cisco-support	read

### Examples

```
Router# show pam process-monitoring-status
PAM "Monitoring Process Blockage" Feature is disabled
```

**show pam process-monitoring-status**



## CHAPTER 4

# Onboard Failure Logging Commands

This module describes the Cisco IOS XR7 Software commands used for viewing the onboard failure logging (OBFL) outputs on the router. OBFL gathers boot, environmental, and critical hardware data for field-replaceable units (FRUs), and stores the information in the nonvolatile memory of the FRU. This information is used for troubleshooting, testing, and diagnosis if a failure or other error occurs, providing improved accuracy in hardware troubleshooting and root cause isolation analysis. Stored OBFL data can be retrieved in the event of a failure and is accessible even if the card does not boot.

Because OBFL is on by default, data is collected and stored as soon as the card is installed. If a problem occurs, the data can provide information about historical environmental conditions, uptime, downtime, errors, and other operating conditions.



---

**Note** OBFL is activated by default in all cards and cannot be disabled.

---

### Related Documents

For detailed information about OBFL concepts, configuration tasks, and examples, see the *Onboard Failure Logging* chapter in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [clear logging onboard, on page 103](#)
- [show logging onboard, on page 104](#)

## clear logging onboard

To clear OBFL logging messages from a node or from all nodes, use the **clear logging onboard** command in XR EXEC mode.

**clear logging onboard** [**location** *node-id*]

<b>Syntax Description</b>	<b>location</b> <i>node-id</i>	(Optional) Clears OBFL messages from the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<b>Command Default</b>	All OBFL logging messages are cleared from all nodes.	
<b>Command Modes</b>	XR EXEC mode	

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **clear logging onboard** command to clear OBFL messages from all nodes. Use the **clear logging onboard** command with the **location** *node-id* keyword and argument to clear OBFL messages for a specific node. If the specified node is not present, an error message is displayed.



**Caution** The **clear logging onboard** command permanently deletes all OBFL data for a node or for all nodes. Do not clear the OBFL logs without specific reasons, because the OBFL data is used to diagnose and resolve problems in FRUs.



**Caution** If OBFL is actively running on a card, issuing the **clear logging onboard** command can result in a corrupt or incomplete log at a later point in time. OBFL should always be disabled before this command is issued.

Task ID	Task ID	Operations
	logging	read

### Examples

In the following example, the OBFL data is cleared for all nodes in the system:

```
Router# clear logging onboard
Remove all onboard failure log files for 0/RP0/CPU0? [confirm] y
Router#
```

## show logging onboard

To display the onboard failure logging (OBFL) messages, use the **show logging onboard** command in XR EXEC mode.

```
show logging onboard { alarm | current | fpd | inventory | npu | temperature | uptime | voltage }
[ location node-id ] [ verbose ]
```

Syntax Description	Parameter	Description
	<b>alarm</b>	Displays the OBFL alarm information.
	<b>current</b>	Displays the OBFL electric current sensor data..
	<b>fpd</b>	Displays the OBFL FPD data information.
	<b>inventory</b>	Displays the OBFL inventory data information.
	<b>npu</b>	Displays the OBFL NPU lifetime data.

<b>temperature</b>	Displays temperature information.
<b>uptime</b>	Displays the OBFL uptime.
<b>voltage</b>	Displays voltage information.
<b>location</b> <i>node-id</i>	(Optional) Displays OBFL messages from the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **show logging onboard** command to display all logging messages for OBFL. To narrow the output of the command, enter the **show logging onboard** command with one of the keyword. Use the **location** *node-id* keyword and argument to display OBFL messages for a specific node.

<b>Task ID</b>	<b>Task Operations ID</b>
	logging read

### Examples

This example displays uptime information from the OBFL feature:

```
Router# show logging onboard uptime
OBFL uptime information for: 0/RP0/CPU0
  * indicates incomplete time-sync while record was written
  ! indicates time reset backwards while system was running
-----
Entity Name                : Value
-----
UPTIME CARD INFORMATION
-----
Previous Chassis SN       : FOC2325NREU
Current Chassis SN       : FOC2325NREU
Previous R/S/I           : -/-/-
Current R/S/I           : 0/0/0
Write Interval           : 15 (min)
First Power On TS       : 07/02/2019 02:49:13
Last Erase TS           : 03/03/2020 02:46:46
Rack Change Count       : 0
Slot Change Count       : 0
Last Reset Reason       : 0
-----
UPTIME INFORMATION
-----
Start Time (UTC)         | End Time (UTC)         | Card Uptime info
mm/dd/yyyy hh:mm:ss    | mm/dd/yyyy hh:mm:ss    | Weeks.Days.Hrs.Min.Sec
-----
02/29/2020 02:08:18    | 03/03/2020 16:39:00    | 0.3.14.30.42
```

**show logging onboard**



## CHAPTER 5

# Performance Management Commands

This module describes the performance management and monitoring commands available on the router. These commands are used to monitor, collect, and report statistics, and to adjust statistics gathering for Border Gateway Protocol (BGP), Open Shortest Path First (OSPF) protocol, generic interfaces, and individual nodes.

For detailed information about performance management concepts, configuration tasks, and examples, see the *Implementing Performance Management* module in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [monitor](#), on page 107
- [monitor interface](#), on page 110
- [performance-mgmt apply monitor](#), on page 117
- [performance-mgmt apply statistics](#), on page 120
- [performance-mgmt apply thresholds](#), on page 122
- [performance-mgmt regular-expression](#), on page 124
- [performance-mgmt resources dump local](#), on page 124
- [performance-mgmt resources memory](#), on page 125
- [performance-mgmt resources tftp-server](#), on page 126
- [performance-mgmt statistics](#), on page 127
- [performance-mgmt thresholds](#), on page 129
- [show performance-mgmt bgp](#), on page 138
- [show performance-mgmt interface](#), on page 140
- [show performance-mgmt mpls](#), on page 143
- [show performance-mgmt node](#), on page 144
- [show performance-mgmt ospf](#), on page 146
- [show running performance-mgmt](#), on page 147

## monitor

To monitor counters with full screen auto-updating statistics in real time, use the **monitor** command in XR EXEC mode.

```
monitor { interface [ interface-type forward-interface ] | processes | threads iteration
number-of-iteration }
```

### Syntax Description

<b>interface</b>	Displays interface statistics in real-time.
------------------	---

<i>interface-type</i>	Specifies the Interface type. For more information, use the question mark ( ? ) online help function.
<i>forward-interface</i>	Specifies the interface in Rack/Slot/Instance/Port format.  <b>Note</b> Use the <b>show interfaces</b> command to see a list of all interfaces currently configured on the router.
<b>processes</b>	Displays process statistics in real-time.
<b>threads</b>	Displays thread statistics in real-time.
<b>iteration</b> <i>number-of-iteration</i>	Specifies the iteration of the thread.

**Command Default**

The display refreshes every 2 seconds for the monitor command.

**Command Modes**

XR EXEC mode

**Command History**

Release	Modification
Release 7.0.12	This command was introduced.

**Usage Guidelines**

*Table 16: Interactive Commands Available for the Monitor Command (Functional Summary)*

Command	Description
<b>Use the following keys to suspend or resume the counter refresh:</b>	
<b>f</b>	Freezes the display screen, thereby suspending the display of fresh counters.
<b>t</b>	Thaws the display screen, thereby resuming the display of fresh counters.
<b>Use the following key to reset the counters:</b>	
<b>c</b>	Resets interface counters to 0.
<b>Use the following keys when displaying statistics for a single interface. These keys display counters in normal or detailed view.</b>	
<b>d</b>	Changes the display mode for the interface monitoring session to display detailed counters. Use the <b>b</b> interactive command to return to the regular display mode.
<b>r</b>	Displays the protocol divided by IPv4 or IPv6, and multicast and unicast. When the statistics are displayed using the <b>r</b> option, you can also use the <b>k</b> or <b>y</b> keys to display statistics in packets (“ <b>k</b> ”) or bytes (“ <b>y</b> ”).

<b>b</b>	Returns the interface monitoring session to the regular display mode for counters. Statistics are not divided by protocol.
Use the following keys when displaying statistics for multiple interfaces. These keys modify the display to show <b>statistics in bytes or packets</b> .	
<b>k</b>	Displays statistics in packets (“ <b>k</b> ”).
<b>y</b>	(Default) Displays statistics in bytes (“ <b>y</b> ”).
<b>Use the following keys to display statistics for a different interface:</b>	
<b>i</b>	Enables you to jump to a nonsequential interface. You are prompted to enter the interface type and interface path ID to be monitored.
<b>p</b>	Displays the previous sequential interface in the list of available interfaces.
<b>n</b>	Displays the next sequential interface in the list of available interfaces.
<b>q</b>	Terminates the interface monitoring session.

**Task ID**

<b>Task ID</b>	<b>Operations</b>
basic-services	execute
monitor	read

**Examples**

This is the sample output for the **monitor processes** command. This command displays statistics for all processes in the system.

```
Router# monitor processes

top - 06:55:00 up 1 day, 53 min, 0 users, load average: 0.16, 0.16, 0.17
Tasks: 476 total, 1 running, 474 sleeping, 0 stopped, 1 zombie
%Cpu(s): 1.4 us, 2.8 sy, 0.0 ni, 95.7 id, 0.0 wa, 0.0 hi, 0.0 si, 0.0 st
KiB Mem : 32620396 total, 26953916 free, 3459252 used, 2207228 buff/cache
KiB Swap: 0 total, 0 free, 0 used. 27780560 avail Mem

  PID USER      PR  NI   VIRT   RES   SHR S  %CPU  %MEM    TIME+  COMMAND
 4360 root        20   0 8522304 50912 39736 S   5.0   0.2   71:14.11 gsp
 4266 root        20   0 8682364 250472 219884 S   4.0   0.8   55:12.60 spp
 4437 root        20   0 11.489g 847708 190376 S   3.0   2.6 106:27.92 NPU Main Thread
 2818 root        20   0 400632 25636 16372 S   1.0   0.1    8:51.17 docker-containe
```

```

4004 root      20    0 8815260 128036 22980 S   0.7  0.4 10:36.15 SPI Envmon Main
4273 root      20    0 9014704  24536 14760 S   0.7  0.1 13:51.04 wd main
9020 root      20    0   30876   3432  2516 R   0.7  0.0  0:00.10 top
   7 root      20    0     0     0     0 S   0.3  0.0  0:29.94 rcu_sched
 532 root      20    0   42396   6316  4384 S   0.3  0.0  0:00.95 systemd-udev
4382 root      20    0 7899076 11596   9340 S   0.3  0.0  5:26.69 npu_cfg
4974 root      20    0 8945128 39460 31576 S   0.3  0.1  0:25.38 eth_mgmt
5138 root      20    0 8950280 54216 46884 S   0.3  0.2  0:31.70 ipv6_mfwd_partn
5210 root      20    0 8860556 40356 33444 S   0.3  0.1  1:16.63 xlncd
6088 root      20    0 8911892 40720 35212 S   0.3  0.1  0:00.51 sshd_child_hand
6356 root      20    0 9756120 71712 45168 S   0.3  0.2  5:59.85 pim6
6379 root      20    0 9360656 56624 40020 S   0.3  0.2  2:13.26 igmp
6390 root      20    0 9345208 68944 48724 S   0.3  0.2  3:31.12 mrib6
6539 root      20    0 9785.9m 47284 41672 S   0.3  0.1  0:14.70 udp_main
6580 root      20    0 8717900 29348 24156 S   0.3  0.1  1:23.88 bundlemgr_local
6716 root      20    0 8784028 25228 15628 S   0.3  0.1  0:27.79 Plat SL Client
   1 root      20    0   41700   8032  5364 S   0.0  0.0  0:09.24 systemd

```

## monitor interface

To monitor interface counters in real time, use the **monitor interface** command in XR EXEC mode.

```
monitor interface [ type1 interface-path-id1 [ . . . [ type32 interface-path-id32 ] ] [ wide ] [ full-name ] [ filter physical ] ]
```

### Syntax Description

*type* Interface type. For more information, use the question mark ( ? ) online help function.

---

*interface-path-id* Physical interface or virtual interface.

**Note**

Use the **show interfaces** command to see a list of all interfaces currently configured on the router.

For more information about the syntax for the router, use the question mark ( ? ) online help function.

---

*wide* Display detailed statistics of the interfaces.

---

*full-name* Display full name of the interfaces.

For more information, use the question mark ( ? ) online help function.

---

*filter physical* Filters the output to display only physical interface.

---

**Command Default**

Use the **monitor interface** command without an argument to display statistics for all interfaces in the system.

**Command Modes**

XR EXEC mode

**Command History**

Release	Modification
Release 24.4.1	This command was modified to introduce the <i>filter physical</i> keyword. New columns InDrops and OutDrops are added to the output.
Release 7.5.4	The argument <i>full-name</i> was introduced.
Release 7.0.12	This command was introduced.

**Usage Guidelines**

The argument *full-name* is supported only in Release 7.5.4.

Use the **monitor interface** command without any keywords or arguments to display interface counters for all interfaces. The display refreshes every 2 seconds.

Use the **monitor interface** command with the *type interface-path-id* arguments to display counters for a single interface. For example: **monitor interface FourHundredGigE0/0/0/0**

To display more than one selected interface, enter the **monitor interface** command with multiple *type interface-path-id* arguments. For example: **monitor interface HundredGigE0/0/0/0 HundredGigE0/0/0/1 HundredGigE0/0/0/2**

To display a range of interfaces, enter the **monitor interface** command with a wildcard. For example: **monitor interface HundredGigE0/0/\***

You can display up to 32 specific interfaces and ranges of interfaces.

The interactive commands that are available during an interface monitoring session are described in the below table.

Use the **monitor interface** command with the *wide* argument to display detailed statistics of the interfaces. For example: **monitor interface HundredGigE0/0/0/0 HundredGigE0/0/0/1 HundredGigE0/0/0/2 wide**

Use the **monitor interface** command with the *full-name* argument to display full name of the interfaces. Full name is more useful especially for Named interfaces, which has large character lengths. For example: **monitor interface** *HundredGigE0/0/0/0 HundredGigE0/0/0/1 tunnel-te FROM-INDBGL-AAA-TO-USASJC-BBB-TO-CANAD-CCC full-name*

Use the **monitor interface** command with the *wide* and *full-name* arguments to display detailed statistics of the interfaces with its full name. For example: **monitor interface** *HundredGigE0/0/0/0 HundredGigE0/0/0/1 tunnel-te FROM-INDBGL-AAA-TO-USASJC-BBB-TO-CANAD-CCC wide full-name*

From Release 24.4.1 onwards, new columns InDrops and OutDrops are displayed in the **monitor interface** command output.

**Table 17: Interactive Commands Available for the monitor interface Command (Functional Summary)**

Command	Description
<b>Use the following keys to suspend or resume the counter refresh:</b>	
<b>f</b>	Freezes the display screen, thereby suspending the display of fresh counters.
<b>t</b>	Thaws the display screen, thereby resuming the display of fresh counters.
<b>Use the following key to reset the counters:</b>	
<b>c</b>	Resets interface counters to 0.
<b>Use the following keys when displaying statistics for a single interface. These keys display counters in normal or detailed view.</b>	
<b>d</b>	Changes the display mode for the interface monitoring session to display detailed counters. Use the <b>b</b> interactive command to return to the regular display mode.
<b>r</b>	Displays the protocol divided by IPv4 or IPv6, and multicast and unicast. When the statistics are displayed using the <b>r</b> option, you can also use the <b>k</b> or <b>y</b> keys to display statistics in packets (“ <b>k</b> ”) or bytes (“ <b>y</b> ”).
<b>b</b>	Returns the interface monitoring session to the regular display mode for counters. Statistics are not divided by protocol.
<b>Use the following keys when displaying statistics for multiple interfaces. These keys modify the display to show statistics in bytes or packets.</b>	
<b>k</b>	Displays statistics in packets (“ <b>k</b> ”).
<b>y</b>	(Default) Displays statistics in bytes (“ <b>y</b> ”).
<b>Use the following keys to display statistics for a different interface:</b>	

<b>i</b>	Enables you to jump to a nonsequential interface. You are prompted to enter the interface type and interface path ID to be monitored.
<b>p</b>	Displays the previous sequential interface in the list of available interfaces.
<b>n</b>	Displays the next sequential interface in the list of available interfaces.
<b>q</b>	Terminates the interface monitoring session.

Task ID	Task ID	Operations
	basic-services	execute
	monitor	read

### Examples

When more than one interface is specified, the statistics for each interface are displayed on a separate line. This display format appears anytime more than one interface is specified. For example:

- To display statistics for all interfaces, enter the command **monitor interface** .
- To display all the interfaces for an interface type, such as all HundredGigE interface, enter the command and wildcard **monitor interface HundredGigE \*** .
- To display statistics for three specified interfaces, enter the command **monitor interface HundredGigE 0/0/0 HundredGigE 0/0/1 HundredGigE 0/0/0** .

This is the sample output for the **monitor interface** command entered without an argument. This command displays statistics for all interfaces in the system.

Before Release 24.4.1, the following output is displayed.

```
Router# monitor interface
Mon Jan 16 11:14:01.107 UTC

R1                Monitor Time: 00:00:30          SysUptime: 00:48:19

Protocol:General
Interface          In (bps)      Out (bps)      InBytes/Delta   OutBytes/Delta
FH0/0/0/0          0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/1          0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/10         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/11         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/12         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/13         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/14         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/15         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/16         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/17         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/18         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/19         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/2          0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/20         0/ 0%        0/ 0%          0/0             0/0
FH0/0/0/21         0/ 0%        0/ 0%          0/0             0/0
```

```
Quit='q',      Clear='c',      Freeze='f', Thaw='t',
Next set='n',  Prev set='p', Bytes='y',  Packets='k'
(General='g', IPv4 Uni='4u', IPv4 Multi='4m', IPv6 Uni='6u', IPv6 Multi='6m')
```

From Release 24.4.1 onwards, new columns InDrops and OutDrops are added to the output. The new columns are displayed for all **monitor interface** command outputs.

```
Router# monitor interface
Fri Aug 23 14:47:13.474 UTC
Monitor Time: 00:00:00          SysUptime: 04:26:12
Protocol:General
Interface      In (bps)    Out (bps)    InBytes/Delta  OutBytes/Delta  InDrops/Delta
OutDrops/Delta
Fo0/0/0/0      1.7M/ 0%    740000/ 0%    89.3M/0        37.2M/0         1511/0
26502/0
Fo0/0/0/1      0/ 0%       0/ 0%         0/0            0/0             0/0
0/0
Mg0/RP0/CPU0/0 0/ 0%       0/ 0%         764213/0       7686/0          0/0
0/0
Mg0/RP1/CPU0/0 0/ 0%       0/ 0%         752405/0       0/0             0/0
0/0
Te0/0/1/0      1.7M/ 0%    1.7M/ 0%     89.3M/0        88.9M/0         12044/0
0/0
Te0/0/1/1      0/ 0%       0/ 0%         0/0            0/0             0/0
0/0
Te0/0/1/10     0/ 0%       0/ 0%         0/0            0/0             0/0
0/0
Te0/0/1/11     0/ 0%       0/ 0%         0/0            0/0             0/0
0/0
Te0/0/1/12     0/ 0%       0/ 0%         0/0            0/0             0/0
0/0
Te0/0/1/13     0/ 0%       0/ 0%         0/0            0/0             0/0
0/0
Te0/0/1/14     0/ 0%       0/ 0%         0/0            0/0             0/0
0/0
Te0/0/1/15     0/ 0%       0/ 0%         0/0            0/0             0/0
0/0
Te0/0/1/16     0/ 0%       0/ 0%         0/0            0/0             0/0
0/0
```

```
Quit='q',      Clear='c',      Freeze='f', Thaw='t',
Next set='n',  Prev set='p', Bytes='y',  Packets='k'
(General='g', IPv4 Uni='4u', IPv4 Multi='4m', IPv6 Uni='6u', IPv6 Multi='6m')
```

This is the sample output for the **monitor interface** command entered with single *type interface-path-id* argument. This command displays statistics for the entered single interface.

```
Router# monitor interface fourHundredGigE 0/0/0/0
Mon Jan 16 11:08:07.126 UTC

R1                      Monitor Time: 00:00:18          SysUptime: 00:42:13

FourHundredGigE0/0/0/0 is administratively down, line protocol is administratively down
Encapsulation ARPA

Traffic Stats:(2 second rates)                                Delta
Input  Packets:                                               0
Input  pps:                                                    0
Input  Bytes:                                                  0
Input  Kbps (rate):                                           0      ( 0%)
Output Packets:                                               0
Output pps:                                                    0
Output Bytes:                                                  0
Output Kbps (rate):                                           0      ( 0%)
```

```

Errors Stats:
  Input  Total:          0          0
  Input  CRC:           0          0
  Input  Frame:         0          0
  Input  Overrun:       0          0
  Output Total:         0          0
  Output Underrun:     0          0

```

```

Quit='q', Freeze='f', Thaw='t', Clear='c', Interface='i',
Next='n', Prev='p'

```

```

Brief='b', Detail='d', Protocol(IPv4/IPv6)='r'

```

This is the sample output for the **monitor interface** command entered with multiple *type interface-path-id* arguments. This command displays statistics for all entered interfaces.

```

Router# monitor interface fourHundredGigE 0/0/0/0 fourHundredGigE 0/0/0/1 tunnel-te
FROM-BGL-AA-BB-TO-SJC-CC-DD-1 tunnel-te FROM-BGL-AA-BB-TO-SJC-CC-DD-2
Mon Jan 16 11:11:03.775 UTC

```

```

R1                               Monitor Time: 00:00:12           SysUptime: 00:45:03

Protocol:General
Interface                        In(bps)      Out(bps)      InBytes/Delta  OutBytes/Delta  InDrops/Delta
OutDrops/Delta
FH0/0/0/0                        0/ 0%       0/ 0%         0/0            0/0            0/0
0/0
FH0/0/0/1                        0/ 0%       0/ 0%         0/0            0/0            0/0
0/0
FROM-BGL-AA-                      0/ --%      0/ --%        0/0            0/0            0/0
0/0
FROM-BGL-AA-                      0/ --%      0/ --%        0/0            0/0            0/0
0/0

```

```

Quit='q',          Clear='c',      Freeze='f', Thaw='t',
Next set='n', Prev set='p', Bytes='y', Packets='k'
(General='g', IPv4 Uni='4u', IPv4 Multi='4m', IPv6 Uni='6u', IPv6 Multi='6m')

```

This is the sample output for the **monitor interface** command entered with *type interface-path-id* and *wide* arguments. This command displays detailed statistics of the interfaces.

```

Router# monitor interface fourHundredGigE 0/0/0/0 fourHundredGigE 0/0/0/1 tunnel-te
FROM-BGL-AA-BB-TO-SJC-CC-DD-1 tunnel-te FROM-BGL-AA-BB-TO-SJC-CC-DD-2 wide
Mon Jan 16 11:12:48.388 UTC

```

```

R1                               Monitor Time: 00:00:04           SysUptime: 00:46:40

Protocol:General
Interface                        In(bps)      Out(bps)      InBytes/Delta  OutBytes/Delta  ErrIn/Delta
ErrCRC/Delta  ErrFr/Delta  ErrOvr/Delta  ErrOut/Delta  ErrUnd/Delta
FH0/0/0/0      0/ 0%       0/ 0%         0/0            0/0            0/0
0/0            0/0
FH0/0/0/1      0/ 0%       0/ 0%         0/0            0/0            0/0
0/0            0/0
FROM-BGL-AA-    0/ --%      0/ --%        0/0            0/0            0/0
0/0
FROM-BGL-AA-    0/ --%      0/ --%        0/0            0/0            0/0
0/0            0/0

```

```

Quit='q',          Clear='c',      Freeze='f', Thaw='t',
Next set='n', Prev set='p', Bytes='y', Packets='k'
(General='g', IPv4 Uni='4u', IPv4 Multi='4m', IPv6 Uni='6u', IPv6 Multi='6m')

```

This is the sample output for the **monitor interface** command entered with *full-name* argument. This command displays statistics of all interfaces in the system with their full name.

```
Router# monitor interface full-name
Fri Aug 23 14:50:22.970 UTC
Monitor Time: 00:00:00          SysUptime: 04:29:21
Protocol:General
In(bps)  Out(bps)  InBytes/Delta  OutBytes/Delta  InDrops/Delta  OutDrops/Delta  Interface
2.7M/ 0% 1.1M/ 0%  88.6M/0       36.9M/0        0/0           26479/0
FortyGigE0/0/0/0
0/ 0%    0/ 0%        0/0           0/0            0/0           0/0
FortyGigE0/0/0/1
0/ 0%    0/ 0%        7397/0       42/0           0/0           0/0
MgmtEth0/RSP0/CPU0/0
0/ 0%    0/ 0%        7337/0       0/0            0/0           0/0
MgmtEth0/RSP1/CPU0/0
2.7M/ 0% 2.7M/ 0%  88.6M/0       88.6M/0        10527/0       0/0
TenGigE0/0/1/0
0/ 0%    0/ 0%        0/0           0/0            0/0           0/0
TenGigE0/0/1/1
0/ 0%    0/ 0%        0/0           0/0            0/0           0/0
TenGigE0/0/1/10
0/ 0%    0/ 0%        0/0           0/0            0/0           0/0
TenGigE0/0/1/11
0/ 0%    0/ 0%        0/0           0/0            0/0           0/0
TenGigE0/0/1/12
0/ 0%    0/ 0%        0/0           0/0            0/0           0/0
TenGigE0/0/1/13
0/ 0%    0/ 0%        0/0           0/0            0/0           0/0
TenGigE0/0/1/14
0/ 0%    0/ 0%        0/0           0/0            0/0           0/0
TenGigE0/0/1/15
0/ 0%    0/ 0%        0/0           0/0            0/0           0/0
TenGigE0/0/1/16

Quit='q',      Clear='c',      Freeze='f', Thaw='t',
Next set='n',  Prev set='p',  Bytes='y',   Packets='k'
(General='g',  IPv4 Uni='4u', IPv4 Multi='4m', IPv6 Uni='6u', IPv6 Multi='6m')
```

This is the sample output for the **monitor interface** command entered with the *type interface-path-id* and *full-name* arguments. This command displays statistics of the interfaces with their full name.

```
Router# monitor interface fourHundredGigE 0/0/0/0 fourHundredGigE 0/0/0/1 tunnel-te
FROM-BGL-AA-BB-TO-SJC-CC-DD-1 tunnel-te FROM-BGL-AA-BB-TO-SJC-CC-DD-2 full-name
Mon Jan 16 11:16:30.346 UTC

R1          Monitor Time: 00:00:04          SysUptime: 00:50:22

Protocol:General
In(bps)      Out(bps)      InBytes/Delta  OutBytes/Delta  InDrops/Delta  OutDrops/Delta  Interface
Interface
0/ 0%        0/ 0%         0/0           0/0            0/0           0/0
FourHundredGigE0/0/0/0
0/ 0%        0/ 0%         0/0           0/0            0/0           0/0
FourHundredGigE0/0/0/1
0/ --%       0/ --%        0/0           0/0            0/0           0/0
FROM-BGL-AA-BB-TO-SJC-CC-DD-1
0/ --%       0/ --%        0/0           0/0            0/0           0/0
FROM-BGL-AA-BB-TO-SJC-CC-DD-2

Quit='q',      Clear='c',      Freeze='f', Thaw='t',
Next set='n',  Prev set='p',  Bytes='y',   Packets='k'
(General='g',  IPv4 Uni='4u', IPv4 Multi='4m', IPv6 Uni='6u', IPv6 Multi='6m')
```

This is the sample output for the **monitor interface** command entered with the *type interface-path-id wide* and *full-name* arguments. This command displays detailed statistics of the interfaces with their full name.

```
Router# monitor interface HundredGigE 0/0/0/0 HundredGigE0/0/0/1 tunnel-te
FROM-BGL-AA-BB-TO-SJC-CC-DD-1 tunnel-te FROM-BGL-AA-BB-TO-SJC-CC-DD-2 wide full-name
Mon Sep 2 22:34:17.826 UTC
ios Monitor Time: 00:00:02 SysUptime: 95:09:18

Protocol:General
In(bps) Out(bps) InBytes/Delta OutBytes/Delta InDrops/Delta OutDrops/Delta ErrIn/Delta
ErrCRC/Delta ErrFr/Delta ErrOvr/Delta ErrOut/Delta ErrUnd/Delta
Interface : HundredGigE0/0/0/0
0/ 0% 0/ 0% 0/0 0/0 0/0 0/0 0/0
0/0 0/0 0/0 0/0 0/0
Interface : HundredGigE0/0/0/1
0/ 0% 0/ 0% 0/0 0/0 0/0 0/0 0/0
0/0 0/0 0/0 0/0 0/0
Interface : FROM-BGL-AA-BB-TO-SJC-CC-DD-1
0/ --% 0/ 0% 0/0 0/0 0/0 0/0 0/0
0/0 0/0 0/0 0/0
Interface : FROM-BGL-AA-BB-TO-SJC-CC-DD-2
0/ --% 0/ 0% 0/0 0/0 0/0 0/0 0/0
0/0 0/0 0/0 0/0 0/0

Quit='q', Clear='c', Freeze='f', Thaw='t',
Next set='n', Prev set='p', Bytes='y', Packets='k'
(General='g', IPv4 Uni='4u', IPv4 Multi='4m', IPv6 Uni='6u', IPv6 Multi='6m')
```

From Release 24.4.1 onwards, you can use the *filter physical* keyword with the **monitor interface** command, to filter the output to display details of only the physical interfaces.

```
Router# monitor interface filter physical
Fri Aug 23 15:18:16.185 UTC
Monitor Time: 00:00:00 SysUptime: 04:57:14
Protocol:General
Interface      In(bps)  Out(bps) InBytes/Delta OutBytes/Delta InDrops/Delta OutDrops/Delta
Fo0/0/0/0     3.6M/ 0% 1.5M/ 0% 88.5M/0      36.9M/0      0/0          26456/0
Fo0/0/0/1     0/ 0%   0/ 0%   0/0          0/0          0/0          0/0
Mg0/RSP0/CPU0/0 0/ 0%   0/ 0%   7817/0      42/0         0/0          0/0
Mg0/RSP1/CPU0/0 0/ 0%   0/ 0%   7757/0      0/0          0/0          0/0
Te0/0/1/0     3.6M/ 0% 3.6M/ 0% 88.5M/0      88.5M/0      10518/0     0/0
Te0/0/1/1     0/ 0%   0/ 0%   0/0          0/0          0/0          0/0
Te0/0/1/10    0/ 0%   0/ 0%   0/0          0/0          0/0          0/0
Te0/0/1/11    0/ 0%   0/ 0%   0/0          0/0          0/0          0/0
Te0/0/1/12    0/ 0%   0/ 0%   0/0          0/0          0/0          0/0
Te0/0/1/13    0/ 0%   0/ 0%   0/0          0/0          0/0          0/0
Te0/0/1/14    0/ 0%   0/ 0%   0/0          0/0          0/0          0/0
Te0/0/1/15    0/ 0%   0/ 0%   0/0          0/0          0/0          0/0
Te0/0/1/16    0/ 0%   0/ 0%   0/0          0/0          0/0          0/0

Quit='q', Clear='c', Freeze='f', Thaw='t',
Next set='n', Prev set='p', Bytes='y', Packets='k'
(General='g', IPv4 Uni='4u', IPv4 Multi='4m', IPv6 Uni='6u', IPv6 Multi='6m')
```

## performance-mgmt apply monitor

To apply a statistics template to gather a sampling-size set of samples for a particular instance, use the **performance-mgmt apply monitor** command in XR Config mode. To stop monitoring statistics, use the **no** form of this command.

```
performance-mgmt apply monitor entity {ip-address type interface-path-id node-id | node-id process-id
process-name} {template-name | default}
no performance-mgmt apply monitor
```

**Syntax Description**

<i>entity</i>	Specifies an entity for which you want to apply the statistics template: <ul style="list-style-type: none"> <li>• <b>bgp</b>—Applies a template for monitoring a Border Gateway Protocol (BGP) neighbor.</li> <li>• <b>interface basic-counters</b>—Applies a template for monitoring basic counters on an interface. If you enter this keyword, supply values for the <i>type</i> and <i>interface-path-id</i> arguments.</li> <li>• <b>interface data-rates</b>—Applies a template for monitoring data rates on an interface. If you enter this keyword, supply values for the <i>type</i> and <i>interface-path-id</i> arguments.</li> <li>• <b>interface generic-counters</b>—Applies a template for monitoring generic counters on an interface. If you enter this keyword, supply values for the <i>type</i> and <i>interface-path-id</i> arguments.</li> <li>• <b>mpls ldp</b>—Applies a template for monitoring an MPLS Label Distribution Protocol (LDP) neighbor.</li> <li>• <b>node cpu</b>—Applies a template for monitoring the central processing unit (CPU) on a node. Use the <i>node-id</i> argument with this entity.</li> <li>• <b>node memory</b>—Applies a template for monitoring memory utilization on a node. Use the <b>location</b> keyword and <i>node-id</i> argument with this entity.</li> <li>• <b>node process</b>—Applies a template for monitoring a process on a node. Use the <i>node-id</i> and <i>process-id</i> arguments with this entity.</li> <li>• <b>ospf v2protocol</b>—Applies a template for monitoring an Open Shortest Path First v2 (OSPFv2) process instance.</li> <li>• <b>ospf v3protocol</b>—Applies a template for monitoring an OSPFv3 process instance.</li> </ul>
<i>ip-address</i>	IP or neighbor address. Used with the <b>bgp</b> or <b>ldp</b> keyword.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. <p><b>Note</b> Use the <b>show interfaces</b> command to see a list of all interfaces currently configured on the router.</p> <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>
<i>node-id</i>	Designated node. Used with the <b>node cpu</b> or <b>node memory</b> keyword. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>node-id</i> <i>process-id</i>	Designated node and process ID. Used with the <b>node process</b> keyword. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>process-name</i>	Process name of the OSPF instance. Used with the <b>ospfv2protocol</b> and <b>ospfv3protocol</b> keywords.

---

*template-name* Name of a predefined template used for statistics collection. A template name can be any combination of alphanumeric characters, and may include the underscore character (\_). Use the **show running performance-mgmt** command to display a list of available templates.

---

**default** Applies the default template.

---

**Command Default** Monitoring is disabled.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **performance-mgmt apply monitor** command to apply a statistics template and enable monitoring. This command captures one cycle of a sample to analyze an instance of an entity. Rather than collect statistics for all instances, which is the purpose of the **performance-mgmt apply statistics** command, the **performance-mgmt apply monitor** command captures statistics for a specific entity instance for one sampling period.

The *type* and *interface-path-id* arguments are only to be used with the **interface data-rates** or **interface generic-counter** keyword.

For information about creating templates, see the *performance-mgmt apply statistics* command.

Task ID	Task ID	Operations
	monitor	read, write, execute

**Examples** This example shows how to enable the BGP protocol monitoring using the criterion set in the default template:

```
Router(config)#performance-mgmt apply monitor bgp 10.0.0.0 default
```

This example shows how to enable monitoring for data rates according to the criterion set in the default template:

```
Router(config)#performance-mgmt apply monitor interface data-rates hundredGigE 0/2/0/0 default
```

This example shows how to enable memory monitoring based on the criterion set in the default template:

```
Router(config)#performance-mgmt apply monitor node memory location 0/1/cpu0 default
```

This example shows how to enable monitoring for counters according to the criterion set in the default template:

```
Router(config)#performance-mgmt apply monitor interface basic-counters hundredGigE 0/2/0/0
default
```

## performance-mgmt apply statistics

To apply a statistics template and enable statistics collection, use the **performance-mgmt apply statistics** command in XR Config mode. To stop statistics collection, use the **no** form of this command.

```
performance-mgmt apply statistics entity location {all node-id} {template-name | default}
no performance-mgmt apply statistics
```

<b>Syntax Description</b>	<p><i>entity</i> Specifies an entity for which you want to apply a statistics template:</p> <ul style="list-style-type: none"> <li>• <b>bgp</b>—Applies a statistics collection template for Border Gateway Protocol (BGP).</li> <li>• <b>interface basic-counters</b>—Applies a statistics collection template for basic counters.</li> <li>• <b>interface data-rates</b>—Applies a statistics collection template for data rates.</li> <li>• <b>interface generic-counters</b>—Applies a statistics collection template for generic counters.</li> <li>• <b>mpls ldp</b>—Applies a template for monitoring an MPLS Label Distribution Protocol (LDP) neighbor.</li> <li>• <b>node cpu</b>—Applies a statistics collection template for the central processing unit (CPU). Use the <b>location</b> keyword with the <b>all</b> keyword or <i>node-id</i> argument when enabling a statistics collection template for this entity.</li> <li>• <b>node memory</b>—Applies a statistics collection template for memory utilization. Use the <b>location</b> keyword with the <b>all</b> keyword or <i>node-id</i> argument when enabling a statistics collection template for this entity.</li> <li>• <b>node process</b>—Applies a statistics collection template for processes. Use the <b>location</b> keyword with the <b>all</b> keyword or <i>node-id</i> argument when enabling a statistics collection template for this entity.</li> <li>• <b>ospf v2protocol</b>—Applies a statistics collection template for Open Shortest Path First v2 (OSPFv2) process instances.</li> <li>• <b>ospf v3protocol</b>—Applies a statistics collection template for OSPFv3 process instances.</li> </ul>
	<p><b>location</b> {<b>all</b>   <i>node-id</i>} Specifies all nodes or a particular node.</p> <p>Specify the <b>location all</b> keywords for all nodes, or the <i>node-id</i> argument to specify a particular node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. You must specify either the <b>location all</b> keywords or the <b>location</b> keyword and <i>node-id</i> argument with the <b>node cpu</b>, <b>node memory</b>, or <b>node process</b> entity.</p>
	<p><i>template-name</i> Name of a predefined template used for statistics collection. A template name can be any combination of alphanumeric characters, and may include the underscore character (_). Use the <i>show running performance-mgmt</i> command to display a list of available templates.</p>
	<p><b>default</b> Applies the default template.</p>
<b>Command Default</b>	Statistics collection is disabled.
<b>Command Modes</b>	XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

### Usage Guidelines

Use the **performance-mgmt apply statistics** command to apply a statistics template and enable statistics collection. Only one template for each entity can be enabled at a time. After samples are taken, the data is sent to a directory on an external TFTP server, and a new collection cycle starts. The directory where data is copied to is configured using the *performance-mgmt resources tftp-server* command. The statistics data in the directory contains the type of entity, parameters, instances, and samples. They are in binary format and must be viewed using a customer-supplied tool, or they can be queried as they are being collected using XML.

Use the **performance-mgmt apply statistics** command to collect data for all the instances on a continuous basis. To analyze a particular instance for a limited period of time, use the *performance-mgmt apply monitor* command.

Use the **no** form of the command to disable statistics collection. Because only one performance management statistics collection can be enabled for any given entity at any given time, you are not required to specify the template name with the **default** keyword or **template** keyword and *template-name* argument when disabling a performance management statistics collection.

For information about creating templates, see the *performance-mgmt statistics* command.

For more information on the steps to create and apply statistics collection template, refer the topic *Configuring PM Statistics Collection Templates* in the *Implementing Performance Management* chapter of *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.



**Caution** Each particular collection enabled requires a certain amount of resources. These resources are allocated for as long as the collection is enabled.

Task ID	Task ID	Operations
	monitor	read, write, execute

### Examples

This example shows how to start statistics collection for BGP using the template named `bgp1`:

```
Router(config)#performance-mgmt apply statistics bgp template bgp1
```

This example shows how to enable statistics collection for generic counters using the default template:

```
Router(config)#performance-mgmt apply statistics interface generic-counters default
```

This example shows how to enable CPU statistics collection based on the settings set in the default template:

```
Router(config)#performance-mgmt apply statistics node cpu location all default
```

This example shows how to enable statistics collection for basic counters using the default template:

```
Router(config)#performance-mgmt apply statistics interface basic-counters default
```

## performance-mgmt apply thresholds

To apply a thresholds template and enable threshold collection, use the **performance-mgmt apply thresholds** command in XR Config mode. To stop threshold collection, use the **no** form of this command.

```
performance-mgmt apply thresholds entity location {all node-id} {template-name | default}
no performance-mgmt apply thresholds
```

### Syntax Description

<i>entity</i>	<p>Specifies an entity for which you want to apply a threshold template:</p> <ul style="list-style-type: none"> <li>• <b>bgp</b>—Applies a threshold monitoring template for Border Gateway Protocol (BGP).</li> <li>• <b>interface basic-counters</b>—Applies a threshold monitoring template for basic counters.</li> <li>• <b>interface data-rates</b>—Applies a threshold monitoring template for data rates.</li> <li>• <b>interface generic-counters</b>—Applies a threshold monitoring template for generic counters.</li> <li>• <b>mpls ldp</b>—Applies a template for monitoring an MPLS Label Distribution Protocol (LDP) neighbor.</li> <li>• <b>node cpu</b>—Applies a threshold monitoring template for central processing unit (CPU) utilization. Use the <b>location</b> keyword in conjunction with the <b>all</b> keyword or <i>node-id</i> argument when enabling a statistics collection template for this entity.</li> <li>• <b>node memory</b>—Applies a threshold monitoring template for memory utilization. Use the <b>location</b> keyword in conjunction with the <b>all</b> keyword or <i>node-id</i> argument when enabling a statistics collection template for this entity.</li> <li>• <b>node process</b>—Applies a threshold monitoring template for processes. Use the <b>location</b> keyword in conjunction with the <b>all</b> keyword or <i>node-id</i> argument when enabling a statistics collection template for this entity.</li> <li>• <b>ospf v2protocol</b>—Applies a threshold monitoring template for OSPFv2.</li> <li>• <b>ospf v3protocol</b>—Applies a threshold monitoring template for OSPFv3.</li> </ul>
<b>location</b> {all   <i>node-id</i> }	<p>Specifies all nodes or a particular node.</p> <p>Specify the <b>location all</b> keywords for all nodes, or the <i>node-id</i> argument to specify a particular node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. You must specify either the <b>location all</b> keywords or the <b>location</b> keyword and <i>node-id</i> argument with the <b>node cpu</b>, <b>node memory</b>, or <b>node process</b> entity.</p>
<b>template-name</b>	<p>Name of a predefined template used for threshold collection. A template name can be any combination of alphanumeric characters, and may include the underscore character (_). Use the <a href="#">show running performance-mgmt, on page 147</a> command to display a list of available templates.</p>

---

<b>default</b>	Applies the default template.
----------------	-------------------------------

---



---

<b>Command Default</b>	Threshold collection is disabled.
------------------------	-----------------------------------

---



---

<b>Command Modes</b>	XR Config mode
----------------------	----------------

---



---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

---



---

**Usage Guidelines**

Use the **performance-mgmt apply thresholds** command to apply a threshold template and enable threshold collection. Several templates can be configured, but only one template for each entity can be enabled at a time.

Use the **no** form of the command to disable threshold collection. Because only one performance management threshold monitoring template can be enabled for any given entity at any given time, you are not required to specify the template name with the **default** keyword or **template** keyword and *template-name* argument when disabling a performance management statistics collection.

For information about creating threshold templates, see the [performance-mgmt thresholds, on page 129](#) command.

---

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write, execute

---



---

### Examples

This example shows how to start threshold collection for BGP using a template named stats1:

```
RP/0/RP0/CPU0:router(config)#performance-mgmt apply thresholds bgp stats1
```

This example shows how to enable threshold collection for generic counters using a template named stats2:

```
RP/0/RP0/CPU0:router(config)#performance-mgmt apply thresholds interface generic-counters stats2
```

This example shows how to enable CPU threshold collection using the template named cpu12:

```
RP/0/RP0/CPU0:router(config)#performance-mgmt apply thresholds node cpu global cpu12
```

This example shows how to enable threshold checking for basic counters using a template named stats3:

```
RP/0/RP0/CPU0:router(config)#performance-mgmt apply thresholds interface basic-counters stats3
```

## performance-mgmt regular-expression

To apply a defined regular expression group to one or more statistics or threshold template, use the **performance-mgmt regular-expression** *regular-expression-name* command in XR Config mode. To stop the usage of regular expression, use the **no** form of this command.

**performance-mgmt regular-expression** *regular-expression-name* **index** *number* *regular-expression-string*  
**no performance-mgmt regular-expression** *regular-expression-name*

<b>Syntax Description</b>	<i>regular-expression-string</i>	Specifies a defined regular expression group to one or more statistics or threshold template.
	<b>index</b>	Specifies a regular expression index. Range is 1 to 100.

**Command Default** No regular expression is configured by default.

**Command Modes** XR Config mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operation</b>
	monitor	read, write

This is the sample output from the **performance-mgmt regular-expression** command:

```
RP/0/RP0/CPU0:router# performance-mgmt regular-expression reg1 index 10
```

## performance-mgmt resources dump local

To configure the local filesystem on which the statistics data is dumped, use the **performance-mgmt resources dumplocal** command in XR Config mode. To stop dumping of statistics data on the local filesystem, use the **no** form of this command.

**performance-mgmt resources dump local**  
**no performance-mgmt resources dump local**

<b>Syntax Description</b>	<b>dump</b>	Configures data dump parameters.
---------------------------	-------------	----------------------------------

**local** Sets the local filesystem on which statistics data is dumped.

**Note**

You can also dump the statistics data on the TFTP server location. But the configuration is rejected if you configure both local dump and TFTP server at the same time.

**Command Default** Local filesystem is disabled.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operation
	monitor	read, write

This is the sample output for the **performance-mgmt resources dumplocal** command:

```
RP/0/RP0/CPU0:router# performance-mgmt resources dump local
```

## performance-mgmt resources memory

To configure memory consumption limits for performance management (PM), use the **performance-mgmt resources memory** command in XR Config mode. To restore the default memory consumption limits, use the **no** form of this command.

**performance-mgmt resources memory max-limit *kilobytes* min-reserved *kilobytes***  
**no performance-mgmt resources memory**

Syntax Description	<b>max-limit <i>kilobytes</i></b>	Specifies the maximum amount of memory (specified with the <i>kilobytes</i> argument) that the PM statistics collector can use for serving data collection requests. Range is 0 to 4294967295 kilobytes. The default is 50000 kilobytes.
	<b>min-reserved <i>kilobytes</i></b>	Specifies a minimum amount of memory (specified with the <i>kilobytes</i> argument) that must remain available in the system after allowing a new PM data collection request. Range is 0 to 4294967295 kilobytes. The default is 10000 kilobytes.
<b>Command Default</b>	<b>max-limit</b> —50000 <i>kilobytes</i>	
	<b>min-reserved</b> —10000 <i>kilobytes</i>	

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **performance-mgmt resource memory** command to ensure that the total memory consumed by data buffers in PM does not exceed a maximum limit and that any new PM data request does not cause available memory in the system to fall below a certain threshold.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

This example shows how to ensure that the total memory consumed by PM data buffers does not exceed 30,000 kilobytes and that any new PM data request does not cause available memory in the system to fall below 5000 kilobytes:

```
RP/0/RP0/CPU0:router(config)# performance-mgmt resources memory max-limit 30000 min-reserved
5000
```

## performance-mgmt resources tftp-server

To configure a destination TFTP server for PM statistics collections, use the **performance-mgmt resources tftp-server** command in XR Config mode. To disable the resource, use the **no** form of this command.

```
performance-mgmt resources tftp-server ip-address {directorydir-name} {vrf | {vrf_name | default}
| {directorydir-name}}
no performance-mgmt resources tftp-server
```

Syntax Description	
<b>tftp-server</b> <i>ip-address</i>	Specifies the IP address of the TFTP server.
<b>directory</b> <i>dir-name</i>	Specifies the directory where performance management statistics will be copied.
<b>vrf</b> <i>vrf_name</i>	Specifies the name of the VRF instance.
<b>default</b>	Specifies the default VRF.

**Command Default** A destination TFTP server is not configured and data is not copied out of the system after a collection cycle (sampling-size) ends.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** Use the **performance-mgmt resources tftp-server** command to configure a TFTP resource for performance management. By creating a directory name on the TFTP server, you create a place where statistics can be collected when statistics collection is enabled.

Use the **no** form of this command to disable the TFTP resource.



**Note** Files copied to the TFTP server contain a timestamp in their name, which makes them unique. For that reason the TFTP server used should support creation of files as data is transferred, without requiring users to manually create them at the TFTP server host in advance.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

This example shows how to specify a TFTP server with the IP address 192.168.134.254 as the performance management resource and a directory named /user/perfmgmt/tftpdump as the destination for PM statistic collections:

```
RP/0/RP0/CPU0:router (config) #performance-mgmt resources tftp-server 192.168.134.254 directory
/user/perfmgmt/tftpdump
```

## performance-mgmt statistics

To create a template to use for collecting performance management statistics, use the **performance-mgmt statistics** command in XR Config mode. To remove a template, use the **no** form of this command.

```
performance-mgmt statistics entity {template template-name | default} [sample-size size]
[sample-interval minutes]history-persistent regular-expression
no performance-mgmt statistics
```

<b>Syntax Description</b>	<i>entity</i>	Specify an entity for which you want to create a statistics template: <ul style="list-style-type: none"> <li>• <b>bgp</b>—Creates a statistics collection template for Border Gateway Protocol (BGP).</li> <li>• <b>interface basic-counters</b>—Creates a statistics collection template for basic counters.</li> <li>• <b>interface data-rates</b>—Creates a statistics collection template for data rates.</li> <li>• <b>interface generic-counters</b>—Creates a statistics collection template for generic counters.</li> <li>• <b>mpls ldp</b>—Applies a template for monitoring an MPLS Label Distribution Protocol (LDP) neighbor.</li> <li>• <b>node cpu</b>—Creates a statistics collection template for the central processing unit (CPU).</li> <li>• <b>node memory</b>—Creates a statistics collection template for memory utilization.</li> <li>• <b>node process</b>—Creates a statistics collection template for processes.</li> <li>• <b>ospf v2protocol</b>—Creates a statistics template for Open Shortest Path First v2 (OSPFv2) protocol instances.</li> <li>• <b>ospf v3protocol</b>—Creates a statistics template for OSPFv3 protocol instances.</li> </ul>
<b>template</b>		Specifies that a template will be used for collection.
<i>template-name</i>		A template name can be any combination of alphanumeric characters, and may include the underscore character (_).  Use the <a href="#">show running performance-mgmt, on page 147</a> to display information about templates, and to display the templates that are being used.
<b>default</b>		Applies the settings of the default template. The default template contains the following statistics and values. Values are in minutes.  Each entity has a default template. In each default template, the sample interval is 10 minutes, and the default sample count is 5.
<b>sample-size</b> <i>size</i>		(Optional) Sets the number of samples to be taken.
<b>sample-interval</b> <i>minutes</i>		(Optional) Sets the frequency of each sample, in minutes.
<b>history-persistent</b>		(Optional) Maintains the history of statistics collections persistently.
<b>regular-expression</b> <i>regular-expression-group-name</i>		(Optional) Sets instance filtering by regular expression.

**Command Default** Statistics collections for all entities is disabled.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** If you have not yet created a directory for the statistics, use the [performance-mgmt resources tftp-server](#), on [page 126](#) command to create a directory on an external TFTP server. When you apply the template and enable statistics collection with the [performance-mgmt apply statistics](#), on [page 120](#) command, the samples are collected and sent to that directory for later retrieval.

The statistics collected contain type of entity, parameters, instances, and samples. The collection files on the TFTP server are in binary format and must be viewed using a customer-supplied tool or they can be queried as they are being collected using XML.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

This example shows how to create a template named `int_data_rates` for data rate statistics collection, how to set the sample size to 25, and how to set the sample interval to 5 minutes:

```
Router(config)#performance-mgmt statistics interface data-rates int_data_rates
Router(config_stats-if-rate)# sample-size 25
Router(config_stats-if-rate)# sample-interval 5
```

## performance-mgmt thresholds

To configure a template for threshold checking, use the **performance-mgmt thresholds** command in XR Config mode. To remove a threshold template, use the **no** form of this command.

```
performance-mgmt thresholds entity {template template-name | default} attribute operation value
[value2] [percent] [ rearm { toggle | window window-size } ] [ delta ]
no performance-mgmt thresholds
```

**Syntax Description**

<i>entity</i>	Specify an entity for which you want to create a template: <ul style="list-style-type: none"> <li>• <b>bgp</b> —Creates a template for threshold collection for Border Gateway Protocol (BGP).</li> <li>• <b>interface basic-counters</b> —Creates a threshold monitoring template for basic counters.</li> <li>• <b>interface data-rates</b> —Creates a threshold monitoring template for data rates.</li> <li>• <b>interface generic-counters</b> —Creates a threshold monitoring template for generic counters.</li> <li>• <b>mpls ldp</b> —Applies a template for monitoring an MPLS Label Distribution Protocol (LDP) neighbor.</li> <li>• <b>node cpu</b> —Creates a threshold monitoring template for the central processing unit (CPU).</li> <li>• <b>node memory</b> —Creates a threshold monitoring template for memory utilization.</li> <li>• <b>node process</b> —Creates a threshold monitoring template for processes.</li> <li>• <b>ospf v2protocol</b> —Creates a threshold monitoring template for Open Shortest Path First v2 (OSPFv2) process instances.</li> <li>• <b>ospf v3protocol</b> —Creates a threshold monitoring template for OSPFv3 process instances.</li> </ul>
<b>template</b>	Specifies that a template will be used for collection.
<i>template-name</i>	Name of a predefined template used for threshold collection. A template name can be any combination of alphanumeric characters, and may include the underscore character (_). Use the <a href="#">show running performance-mgmt, on page 147</a> to display information about templates, and to display the templates that are being used.
<b>default</b>	Applies the settings of the default template.
<i>attribute</i>	The attributes for the entity. See <a href="#">Table 19: Attribute Values, on page 132</a> for a list of attributes.
<i>operation</i>	A limiting operation for thresholding that includes: <ul style="list-style-type: none"> <li>• <b>EQ</b> —Equal to.</li> <li>• <b>GE</b> —Greater than or equal to.</li> <li>• <b>GT</b> —Greater than.</li> <li>• <b>LE</b> —Less than or equal to.</li> <li>• <b>LT</b> —Less than.</li> <li>• <b>NE</b> —Not equal to.</li> <li>• <b>RG</b> —Not in range.</li> </ul>
<i>value</i>	The base value against which you want to sample.
<i>value2</i>	(Optional) This value can only be used with the operator <b>RG</b> . For example, if you use <b>RG</b> for the operation argument value, you create a range between <i>value</i> and <i>value2</i> .
<i>percent</i>	(Optional) Specifies a value relative to the previous sample interval value. See the “Usage Guidelines” section for more information.

**rearm** {**toggle** | **window**}

(Optional) It can be used to reduce the number of events by suppressing redundant events from being reported. Normally, every time a condition is met in a sample interval, a syslog error is generated. Using the **toggle** keyword works in this manner: If a condition is true, a syslog error message is generated, but it is not generated again until the condition becomes false, and then true again. In this way, only “fresh” events are seen when the threshold is crossed.

Use the **window** keyword to specify that an event be sent only once for each window. If a condition is true, a syslog error message is generated. You set your window size by using the **window** keyword and specify the number of intervals. With a window size, you specify that you want event notification at that number of intervals. For example, if you window size is 2 and your sample interval is 10, you would want notification of the event (for each instance in an entity) only every 20 minutes when the condition has been met.

*window-size* The number of intervals to use with the **rearm** keyword.

**delta** It compares current and previous data metric values for threshold evaluation.

**Command Default**

None

**Command Modes**

XR Config mode

**Command History**

Release	Modification
Release 7.7.1	The argument <i>delta</i> was introduced.
Release 7.0.12	This command was introduced.

**Usage Guidelines**

Use the *percent* argument to specify a value that is relative to the previous sample's interval value. When you use the *percent* argument with a *value* of 50, the calculation is performed in this manner, assuming that your current sampled value is sample1 (S1) and the value sampled in the previous sampling period is sample 0 (S0):

```
(S1 - S0) GT 50% of S0
```

For example, if you wanted to check for an increase of 50 percent in the counter BGPInputErrors, you could use the following *attribute* and *operation* with the *percent* argument:

```
BGPInputErrors GT 50
```

This table shows threshold behavior, assuming the values for BGPInputErrors are at consecutive samplings.

**Table 18: Threshold Behavior**

Value	Calculation	Event
10	—	—
16	16 - 10 = 6, which is > than 50 percent of 10	Generate event
20	20 - 16 = 4, which is not > than 50 percent of 16	No event generated
35	35 - 20 = 15, which is > than 50 percent of 20	Generate event

This table shows the attribute values supported by the entities.

**Table 19: Attribute Values**

Entity	Attributes	Description
bgp	ConnDropped	Number of times the connection was dropped.
	ConnEstablished	Number of times the connection was established.
	ErrorsReceived	Number of error notifications received on the connection.
	ErrorsSent	Number of error notifications sent on the connection.
	InputMessages	Number of messages received.
	InputUpdateMessages	Number of update messages received.
	OutputMessages	Number of messages sent.
	OutputUpdateMessages	Number of update messages sent.
interface basic-counters	InOctets	Bytes received (64-bit).
	InPackets	Packets received (64-bit).
	InputQueueDrops	Input queue drops (64-bit).
	InputTotalDrops	Inbound correct packets discarded (64-bit).
	InputTotalErrors	Inbound incorrect packets discarded (64-bit).
	OutOctets	Bytes sent (64-bit).
	OutPackets	Packets sent (64-bit).
	OutputQueueDrops	Output queue drops (64-bit).
	OutputTotalDrops	Outbound correct packets discarded (64-bit).
	OutputTotalErrors	Outbound incorrect packets discarded (64-bit).

Entity	Attributes	Description
interface data-rates	Bandwidth	Bandwidth, in kbps.
	InputDataRate	Input data rate in kbps.
	InputPacketRate	Input packets per second.
	InputPeakRate	Peak input data rate.
	InputPeakPkts	Peak input packet rate.
	OutputDataRate	Output data rate in kbps.
	OutputPacketRate	Output packets per second.
	OutputPeakPkts	Peak output packet rate.
	OutputPeakRate	Peak output data rate.

Entity	Attributes	Description
interface generic-counters	InBroadcastPkts	Broadcast packets received.
	InMulticastPkts	Multicast packets received.
	InOctets	Bytes received.
	InPackets	Packets received.
	InputCRC	Inbound packets discarded with incorrect CRC.
	InputFrame	Inbound framing errors.
	InputOverrun	Input overruns.
	InputQueueDrops	Input queue drops.
	InputTotalDrops	Inbound correct packets discarded.
	InputTotalErrors	Inbound incorrect packets discarded.
	InUcastPkts	Unicast packets received.
	InputUnknownProto	Inbound packets discarded with unknown proto.
	OutBroadcastPkts	Broadcast packets sent.
	OutMulticastPkts	Multicast packets sent.
	OutOctets	Bytes sent.
	OutPackets	Packets sent.
	OutputTotalDrops	Outbound correct packets discarded.
	OutputTotalErrors	Outbound incorrect packets discarded.
	OutUcastPkts	Unicast packets sent.
	OutputUnderrun	Output underruns.

Entity	Attributes	Description
mpls ldp	AddressMsgsRcvd	Address messages received.
	AddressMsgsSent	Address messages sent.
	AddressWithdrawMsgsRcvd	Address withdraw messages received.
	AddressWithdrawMsgsSent	Address withdraw messages sent.
	InitMsgsSent	Initial messages sent.
	InitMsgsRcvd	Initial messages received.
	KeepaliveMsgsRcvd	Keepalive messages received.
	KeepaliveMsgsSent	Keepalive messages sent.
	LabelMappingMsgsRcvd	Label mapping messages received.
	LabelMappingMsgsSent	Label mapping messages sent.
	LabelReleaseMsgsRcvd	Label release messages received.
	LabelReleaseMsgsSent	Label release messages sent.
	LabelWithdrawMsgsRcvd	Label withdraw messages received.
	LabelWithdrawMsgsSent	Label withdraw messages sent.
	NotificationMsgsRcvd	Notification messages received.
	NotificationMsgsSent	Notification messages sent.
	TotalMsgsRcvd	Total messages received.
TotalMsgsSent	Total messages sent.	
node cpu	AverageCPUUsed	Average system percent CPU utilization.
	NoProcesses	Number of processes.
node memory	CurrMemory	Current application memory (in bytes) in use.
	PeakMemory	Maximum system memory (in MB) used since bootup.
node process	AverageCPUUsed	Average percent CPU utilization.
	NumThreads	Number of threads.
	PeakMemory	Maximum dynamic memory (in KB) used since startup time.

Entity	Attributes	Description
ospf v2protocol	InputPackets	Total number of packets received
	OutputPackets	Total number of packets sent
	InputHelloPackets	Number of Hello packets received
	OutputHelloPackets	Number of Hello packets sent
	InputDBDs	Number of DBD packets received
	InputDBDsLSA	Number of LSA received in DBD packets
	OutputDBDs	Number of DBD packets sent.
	OutputDBDsLSA	Number of LSA sent in DBD packets
	InputLSRequests	Number of LS requests received.
	InputLSRequestsLSA	Number of LSA received in LS requests.
	OutputLSRequests	Number of LS requests sent.
	OutputLSRequestsLSA	Number of LSA sent in LS requests.
	InputLSAUpdates	Number of LSA updates received.
	InputLSAUpdatesLSA	Number of LSA received in LSA updates.
	OutputLSAUpdates	Number of LSA updates sent.
	OutputLSAUpdatesLSA	Number of LSA sent in LSA updates.
	InputLSAAcks	Number of LSA acknowledgements received.
	InputLSAAcksLSA	Number of LSA received in LSA acknowledgements.
	OutputLSAAcks	Number of LSA acknowledgements sent.
	OutputLSAAcksLSA	Number of LSA sent in LSA acknowledgements.
ChecksumErrors	Number of packets received with checksum errors.	

Entity	Attributes	Description
ospf v3protocol	InputPackets	Total number of packets received.
	OutputPackets	Total number of packets sent.
	InputHelloPackets	Number of Hello packets received.
	OutputHelloPackets	Number of Hello packets sent.
	InputDBDs	Number of DBD packets received.
	InputDBDsLSA	Number of LSA received in DBD packets.
	OutputDBDs	Number of DBD packets sent.
	OutputDBDsLSA	Number of LSA sent in DBD packets.
	InputLSRequests	Number of LS requests received.
	InputLSRequestsLSA	Number of LSA received in LS requests.
	OutputLSRequests	Number of LS requests sent.
	OutputLSRequestsLSA	Number of LSA sent in LS requests.
	InputLSAUpdates	Number of LSA updates received.
	InputLSRequestsLSA	Number of LSA received in LS requests.
	OutputLSAUpdates	Number of LSA updates sent.
	OutputLSAUpdatesLSA	Number of LSA sent in LSA updates.
	InputLSAAcks	Number of LSA acknowledgements received.
	InputLSAAcksLSA	Number of LSA received in LSA acknowledgements.
	OutputLSAAcks	Number of LSA acknowledgements sent
	OutputLSAAcksLSA	Number of LSA sent in LSA acknowledgements.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

This example shows how to create a template for monitoring BGP thresholds, which checks if the number of connections dropped exceeds 50 for any BGP peers. The **toggle rearm** keywords are included so that once the threshold is passed, the event will not be reported unless the value of ConnDropped is reset:

```
RP/0/RP0/CPU0:router(config)# performance-mgmt thresholds bgp template bgp_thresh1
RP/0/RP0/CPU0:router(config-threshold-bgp)# ConnDropped GT 50 rearm toggle
```

This example shows how to create a template for monitoring node CPU utilization that checks if there is a 25 percent increase at any given interval:

```
RP/0/RP0/CPU0:router(config)# performance-mgmt thresholds node cpu template cpu_thresh1
RP/0/RP0/CPU0:router(config-threshold-bgp)# AverageCPUUsed GT 25percent
```

This example shows how to create a template for monitoring the input CRC errors for interfaces. The rule checks whether the number of errors reach or exceed 1000 for any given interface:

```
RP/0/RP0/CPU0:router(config)# performance-mgmt thresholds interface generic_ctr template
intf_crc_thresh1
RP/0/RP0/CPU0:router(config-threshold-bgp)# InputCRC GE 1000
```

This example shows how to create a template for monitoring interface generic counters. The template named **ge\_delta** is configured to check if the value of InPackets counter exceeds 10.

```
RP/0/0/CPU0:ios(config)#performance-mgmt thresholds interface generic-counters template
ge_delta InPackets ge 10 delta
RP/0/0/CPU0:ios(config)#commit
```

## show performance-mgmt bgp

To display performance management (PM) data from Border Gateway Protocol (BGP) entity instance monitoring or statistics collections, use the **show performance-mgmt bgp** command in XR EXEC mode.

```
show performance-mgmt {monitor | statistics} bgp {ip-address | all} {sample-id | all-samples |
last-sample}
```

Syntax Description	monitor	statistics
	Displays the data collected for an entity instance monitoring collection. The data gathered is from one sample cycle of a BGP statistics collection template. The data is available only as the monitor data is enabled.	Displays the data collected from statistics collection samples.

<i>ip-address</i>	IP address of a BGP peer.
<b>all</b>	Displays all BGP peer instances.  <b>Note</b> This option is available only with the <b>statistics</b> keyword. It is not available with the <b>monitor</b> keyword because an entity instance monitoring collection captures data from an entity instance for one sampling cycle.
<i>sample-id</i>	Sample ID of the monitoring or statistics collection to be displayed.
<b>all-samples</b>	Displays all collected samples.
<b>last-sample</b>	Displays the last collected samples.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read

## Examples

This is the sample output from the **show performance-mgmt bgp** command:

```
RP/0/RP0/CPU0:router# show performance-mgmt monitor bgp 10.0.0.0 all-samples
BGP Neighbor: 10.0.0.0 Sample no: 1
-----
InputMessages: 0 OutputMessages: 0
InputUpdateMessages: 0 OutputUpdateMessages: 0 ConnEstablished: 0 ConnDropped: 0
ErrorsReceived: 0 ErrorsSent: 0 BGP Neighbor: 10.0.0.0 Sample no: 2
-----
InputMessages: 0 OutputMessages: 0
InputUpdateMessages: 0 OutputUpdateMessages: 0 ConnEstablished: 0 ConnDropped: 0
ErrorsReceived: 0 ErrorsSent: 0 BGP Neighbor: 10.0.0.0 Sample no: 3
-----
InputMessages: 0 OutputMessages: 0
InputUpdateMessages: 0 OutputUpdateMessages: 0 ConnEstablished: 0 ConnDropped: 0
ErrorsReceived: 0 ErrorsSent: 0
```

This table describes the significant fields in the display.

**Table 20: show performance-mgmt bgp Field Descriptions**

<b>Field</b>	<b>Description</b>
ConnDropped	Number of times the connection was dropped.

Field	Description
ConnEstablished	Number of times the connection was established.
ErrorsReceived	Number of error notifications received on the connection.
ErrorsSent	Number of error notifications sent on the connection.
InputMessages	Number of messages received.
InputUpdateMessages	Number of update messages received.
OutputMessages	Number of messages sent.
OutputUpdateMessages	Number of update messages sent.

## show performance-mgmt interface

To display performance management (PM) data from interface entity instance monitoring or statistics collections, use the **show performance-mgmt interface** command in XR EXEC mode.

**show performance-mgmt** {**monitor** | **statistics**} **interface** {**basic-counters** | **data-rates** | **generic-counters**} {*type interface-path-id* | **all**} {*sample-id* | **all-samples** | **last-sample**}

### Syntax Description

<b>monitor</b>	Displays the data collected for an entity instance monitoring collection. The data gathered is from one sample cycle from one instance of an interface data entity collection template.  <b>Note</b> The data is available to be display only as the monitor data is collected.
<b>statistics</b>	Displays the data collected from statistics collection samples.
<b>data-rates</b>	Displays data from interface data rates entity collections.
<b>generic-counters</b>	Displays data from interface generic counters entity collections.
<i>type</i>	(Optional) Interface type. For more information, use the question mark ( ? ) online help function.
<i>interface-path-id</i>	(Optional) Physical interface or virtual interface.  <b>Note</b> Use the <b>show interfaces</b> command to see a list of all interfaces currently configured on the router.  For more information about the syntax for the router, use the question mark ( ? ) online help function.

<b>all</b>	Displays all interface instances.  <b>Note</b> This option is available only with the <b>statistics</b> keyword. It is not available with the <b>monitor</b> keyword because a entity instance monitoring collection captures data from an entity instance for one sampling cycle.
<i>sample-id</i>	Sample ID of the monitoring collection or statistics collection to be displayed.
<b>all-samples</b>	Displays all collected samples.
<b>last-sample</b>	Displays the last collected samples.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read

### Examples

This is sample output from the **show performance-mgmt interface** command:

```
RP/0/RP0/CPU0:router# show performance-mgmt monitor interface generic-counters hundredGigE0/3/0/0 all-samples
```

```
Interface: HundredGigE0_3_0_0 Sample no: 1
```

```
-----
InPackets: 0 OutPackets: 0 InOctets: 0
OutOctets: 0 InUcastPkts: 0 OutUcastPkts: 0 InMulticastPkts: 0 OutMulticastPkts: 0
InBroadcastPkts: 0 OutBroadcastPkts: 0 InputTotalDrops: 0 OutputTotalDrops: 0
InputTotalErrors: 0 OutputTotalErrors: 0 InputOverrun: 0 OutputUnderrun: 0
InputQueueDrops: 0 InputUnknownProto: 0 InputCRC: 0 InputFrame: 0 Interface:
HundredGigE0_3_0_0
Sample no: 2 ----- InPackets: 0 OutPackets: 0
InOctets: 0 OutOctets: 0 InUcastPkts: 0 OutUcastPkts: 0 InMulticastPkts: 0
OutMulticastPkts: 0 InBroadcastPkts: 0 OutBroadcastPkts: 0 InputTotalDrops: 0
OutputTotalDrops: 0 InputTotalErrors: 0 OutputTotalErrors: 0 InputOverrun: 0
OutputUnderrun: 0 InputQueueDrops: 0 InputUnknownProto: 0 InputCRC: 0 InputFrame: 0
```

```
RP/0/RP0/CPU0:router# show performance-mgmt monitor interface generic-counters hundredGigE0/3/0/0 all-samples
```

```
Interface: HundredGigE0_3_0_0 Sample no: 1
```

## show performance-mgmt interface

```

-----
InPackets: 0 OutPackets: 0 InOctets: 0
OutOctets: 0 InUcastPkts: 0 OutUcastPkts: 0 InMulticastPkts: 0 OutMulticastPkts: 0
InBroadcastPkts: 0 OutBroadcastPkts: 0 InputTotalDrops: 0 OutputTotalDrops: 0
InputTotalErrors: 0 OutputTotalErrors: 0 InputOverrun: 0 OutputUnderrun: 0
InputQueueDrops: 0 InputUnknownProto: 0 InputCRC: 0 InputFrame: 0 Interface:
HundredGigE0_3_0_0
Sample no: 2 ----- InPackets: 0 OutPackets: 0
InOctets: 0 OutOctets: 0 InUcastPkts: 0 OutUcastPkts: 0 InMulticastPkts: 0
OutMulticastPkts: 0 InBroadcastPkts: 0 OutBroadcastPkts: 0 InputTotalDrops: 0
OutputTotalDrops: 0 InputTotalErrors: 0 OutputTotalErrors: 0 InputOverrun: 0
OutputUnderrun: 0 InputQueueDrops: 0 InputUnknownProto: 0 InputCRC: 0 InputFrame: 0

```

This table describes the significant fields shown in the display.

**Table 21: show performance-mgmt interface Field Descriptions**

Field	Description
InBroadcastPkts	Broadcast packets received.
InMulticast Pkts	Multicast packets received.
InOctets	Bytes received.
InPackets	Packets received.
InputCRC	Inbound packets discarded with incorrect CRC.
InputFrame	Inbound framing errors.
InputOverrun	Input overruns.
InputQueueDrops	Input queue drops.
InputTotalDrops	Inbound correct packets discarded.
InputTotalErrors	Inbound incorrect packets discarded.
InUcastPkts	Unicast packets received.
InputUnknownProto	Inbound packets discarded with unknown proto.
OutBroadcastPkts	Broadcast packets sent.
OutMulticastPkts	Multicast packets sent.
OutOctets	Bytes sent.
OutPackets	Packets sent.
OutputTotalDrops	Outbound correct packets discarded.
OutputTotalErrors	Outbound incorrect packets discarded.
OutUcastPkts	Unicast packets sent.
OutputUnderrun	Output underruns.

## show performance-mgmt mpls

To display performance management (PM) data for Multiprotocol Label Switching (MPLS) entity instance monitoring and statistics collections, use the **show performance-mgmt mpls** command in XR EXEC mode.

```
show performance-mgmt {monitor | statistics} mpls ldp {ip-address | all} {first-sample-id |
all-samples | last-sample}
```

<b>Syntax Description</b>	<b>monitor</b>	Displays the data collected for an entity instance monitoring collection. The data gathered is from one sample cycle from one instance of an MPLS entity collection template.		
		<b>Note</b>	The data is available to be displayed only as the monitor data is collected.	
	<b>statistics</b>	Displays the data collected from statistics collection samples.		
	<b>ldp</b>	Displays data from MPLS Label Distribution Protocol (LDP) collections.		
	<i>ip-address</i>	IP address of LDP session instance.		
	<b>all</b>	Displays data from all LDP session instances.		
		<b>Note</b>	This option is available only with the <b>statistics</b> keyword. It is not available with the <b>monitor</b> keyword because a entity instance monitoring collection captures data from an entity instance for one sampling cycle.	
	<i>first-sample-id</i>	Sample ID of the monitoring or statistics collection to be displayed.		
	<b>all-samples</b>	Displays all collected samples.		
	<b>last-sample</b>	Displays the last collected samples.		
<b>Command Default</b>	None			
<b>Command Modes</b>	XR EXEC mode			
<b>Command History</b>	<b>Release</b>	<b>Modification</b>		
	Release 7.0.12	This command was introduced.		
<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.			
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>		
	monitor	read		

## Examples

This is sample output from the **show performance-mgmt mpls** command:

```
RP/0/RP0/CPU0:router# show performance-mgmt monitor mpls ldp 192.0.2.45 last-sample
LDP Neighbor: 192.0.2.45 Sample no: 2
-----
TotalMsgsSent: 131,

TotalMsgsRcvd: 131 InitMsgsSent: 1, InitMsgsRcvd: 1 AddressMsgsSent: 1, AddressMsgsRcvd:
1 AddressWithdrawMsgsSent: 0, AddressWithdrawMsgsRcvd: 0 LabelMappingMsgsSent: 6,
LabelMappingMsgsRcvd: 7 LabelWithdrawMsgsSent: 0, LabelWithdrawMsgsRcvd: 0
LabelReleaseMsgsSent: 0, LabelReleaseMsgsRcvd: 0 NotificationMsgsSent: 0
NotificationMsgsRcvd: 0
```

This table describes the significant fields shown in the display.

**Table 22: show performance-mgmt mpls Field Descriptions**

Field	Description
InitMsgsSent	Initial messages sent.
InitMsgsRcvd	Initial messages received.
TotalMsgsSent	Total messages sent.
TotalMsgsRcvd	Total messages received.
AddressMsgsSent	Address messages sent.

## show performance-mgmt node

To display performance management (PM) data for node entity monitoring and statistics collections, use the **show performance-mgmt node** command in XR EXEC mode.

```
show performance-mgmt {monitor | statistics} node {cpu | memory | process} location {node-id
| all} {sample-id | all-samples | last-sample}
```

### Syntax Description

**monitor** Displays the data collected for an entity instance monitoring collection. The data gathered is from one sample cycle from one instance of a node entity collection template.

#### Note

The data is only available to be displayed as the monitor data is collected.

**statistics** Displays the data collected from statistics collection samples.

**cpu** Displays data from the central processing unit (CPU).

**memory** Displays data from memory.

**process** Displays data from processes.

**location** Specifies the location of data origination.

---

*node-id* Location of the node. The *node-id* argument is entered in the *rack/slot/module* notation.

---

**all** Displays data from all LDP session instances.

**Note**

This option is available only with the **statistics** keyword. It is not available with the **monitor** keyword because a entity instance monitoring collection captures data from an entity instance for one sampling cycle.

---

*sample-id* Sample ID of the monitoring or statistics collection to be displayed.

---

**all-samples** Displays all collected samples.

---

**last-sample** Displays the last collected samples.

---

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task	Operations
	monitor	read

**Examples**

This is sample output from the **show performance-mgmt node** command:

```
RP/0/RP0/CPU0:router# show performance-mgmt monitor node process location 0/RP0/CPU0 process
 13542 last-sample
Node ID:
Sample no: 1 ----- Process ID: 13542
----- PeakMemory: 908 AverageCPUUsed: 0
NoThreads: 5
```

This table describes the significant fields shown in the display.

**Table 23: show performance-mgmt node Field Descriptions**

Field	Description
PeakMemory	Maximum system memory (in MB) used since bootup.
AverageCPUUsed	Average system percent CPU utilization.
NoThreads	Number of threads.

# show performance-mgmt ospf

To display performance management (PM) data for Open Shortest Path First (OSPF) entity instance monitoring and statistics collections, use the **show performance-mgmt ospf** command in XR EXEC mode.

**show performance-mgmt** {**monitor** | **statistics**} **ospf** {**v2protocol** | **v3protocol**} *instance* {*sample-id* | **all-samples** | **last-sample**}

## Syntax Description

**monitor** Displays the data collected for an entity instance monitoring collection. The data gathered is from one sample cycle from one instance of an OSPF entity collection template.

### Note

The data is available to be displayed only as the monitor data is collected.

**statistics** Displays the data collected from statistics collection samples.

**v2protocol** Displays counters for an OSPF v2 protocol instance.

**v3protocol** Displays counters for an OSPF v3 protocol instance.

*sample-id* Sample ID of the monitoring or statistics collection to be displayed.

**all-samples** Displays all collected samples.

**last-sample** Displays the last collected samples.

## Command Default

None

## Command Modes

XR EXEC mode

## Command History

### Release

Release 7.0.12

### Modification

This command was introduced.

## Usage Guidelines

No specific guidelines impact the use of this command.

## Task ID

### Task Operations ID

monitor read,  
write

## Examples

This is sample output from the **show performance-mgmt ospf** command:

```
RP/0/RP0/CPU0:router(config)# show performance-mgmt statistics ospf v2protocol 100 all-samples
```

```
Mon Aug 3 06:41:15.785 PST
OSPF Instance: 100 Sample no: 1
-----
```

```

InputPackets: 12323 OutputPackets: 12045
InputHelloPackets: 11281 OutputHelloPackets: 11276
InputDBDs: 18 OutputDBDs: 20
InputDBDsLSA: 508 OutputDBDsLSA: 530
InputLSRequests: 1 OutputLSRequests: 2
InputLSRequestsLSA: 11 OutputLSRequestsLSA: 0
InputLSAUpdates: 989 OutputLSAUpdates: 109
InputLSAUpdatesLSA: 28282 OutputLSAUpdatesLSA: 587
InputLSAacks: 34 OutputLSAacks: 638
InputLSAacksLSA: 299 OutputLSAacksLSA: 27995
ChecksumErrors: 0

```

## show running performance-mgmt

To display a list of configured templates and the template being applied, use the **show running performance-mgmt** command in XR EXEC mode.

**show running performance-mgmt** [**apply** | **regular-expression** | **resources** | **statistics** | **thresholds**]

Syntax Description	
<b>apply</b>	(Optional) Displays the list of apply template commands in the current configuration.
<b>regular-expression</b>	(Optional) Displays the list of regular expression commands in the current configuration.
<b>resources</b>	(Optional) Displays the existing resource configuration commands applied.
<b>statistics</b>	(Optional) Displays the list of configured statistics templates.
<b>thresholds</b>	(Optional) Displays the list of configured threshold templates.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

This example shows the list of statistic and threshold templates, the configuration of each template, and at the end, which templates are enabled for collection:

## show running performance-mgmt

```
RF/0/RP0/CPU0:router(config)#show running performance-mgmt

performance-mgmt resources tftp-server 192.168.134.254 directory muckier/jagrelo/pmtest
performance-mgmt statistics bgp template template3
  sample-size 5
  sample-interval 60
!
performance-mgmt statistics node cpu template template4
  sample-size 30
  sample-interval 2
!
performance-mgmt statistics interface generic-counters template template2
  sample-size 3
  sample-interval 10
!
performance-mgmt statistics interface data-rates template template1
  sample-size 10
  sample-interval 5
!
performance-mgmt statistics node memory template template5
  sample-size 30
  sample-interval 2
!
performance-mgmt statistics node process template template6
  sample-size 10
  sample-interval 5
!
performance-mgmt thresholds node cpu template template20
  AverageCpuUsed GT 75
  sample-interval 5
!
performance-mgmt apply statistics interface generic-counters template2
performance-mgmt apply statistics node memory global template5
performance-mgmt apply statistics node process 0/0/CPU0 template6
performance-mgmt apply thresholds node cpu global template20
```



## CHAPTER 6

# Diagnostic Commands

---

This module describes the Cisco IOS XR Software commands to configure diagnostics for system monitoring on the router.

For detailed information about the online diagnostics, refer *Online Diagnostics* module in *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

To use commands of this module, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using any command, contact your AAA administrator for assistance.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.

- [show diag](#) , on page 150
- [diagnostic monitor interval](#), on page 153
- [diagnostic monitor location disable](#), on page 154
- [diagnostic monitor syslog](#), on page 155
- [diagnostic monitor threshold](#), on page 156
- [show dataplane-health status](#), on page 157
- [show diagnostic trace location](#), on page 158
- [show diagnostic result](#), on page 159
- [monitor dataplane-health](#), on page 161
- [clear packet-trace conditions all](#), on page 166
- [clear packet-trace counters all](#), on page 167
- [packet-trace condition](#), on page 167
- [packet-trace start](#), on page 169
- [packet trace stop](#), on page 169
- [show packet-trace decode](#), on page 170
- [show packet trace description](#), on page 174
- [show packet-trace hw-status](#), on page 174
- [show packet-trace result](#), on page 176
- [show packet trace status](#), on page 176

# show diag

To display details about the hardware and software on each node in a router, use the **show diag** command in XR EXEC mode.

**show diag** [**location** *node-id*] [**chassis** | **details** | **eprom** | **fans** | **power-supply** | **summary**]

Syntax Description	location <i>node-id</i>	(Optional) Displays diagnostic information from the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
	chassis	(Optional) Displays detailed diagnostics information for the chassis.
	details	(Optional) Displays detailed diagnostics information for the current node.
	eprom	(Optional) Displays field diagnostics results from the EEPROM.
	fans	(Optional) Displays information about the fans tray.
	power-supply	(Optional) Displays information about the power supply.
	summary	(Optional) Displays summarized diagnostics results for all nodes in the system.

**Command Default** Diagnostics for all nodes installed in the router are displayed.  
Hardware and software information for all nodes installed in the router is displayed

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** The **show diag** command displays detailed information on the hardware components for each node, and on the status of the software running on each node.

Task ID	Task ID	Operations
	sysmgr	read

**Examples** The following example shows excerpts of output from the **show diag details** command:

```
Router# show diag details
Rack 0-Chassis IDPROM - Cisco 8201 1RU System with 24x400GE QSFP56-DD & 12x100GE QSFP28
Info
  Controller Family      : 0045
  Controller Type       : 0613
  PID                   : 8201-SYS
  Version Identifier    : V00
  UDI Description       : Cisco 8201 1RU System with 24x400GE QSFP56-DD & 12x100GE
```

```

QSFP28
Chassis Serial Number      : FOC2325NREU
Top Assy. Part Number      : 68-6825-06
Top Assy. Revision         : 09
PCB Serial Number         : FOC2324NP35
PCA Number                 : 73-19428-08
PCA Revision               : 04
CLEI Code                  : UNASSIGNED
ECI Number                  : ECI123
Deviation Number # 1      : 0
Deviation Number # 2      : 0
Deviation Number # 3      : 0
Deviation Number # 4      : 0
Deviation Number # 5      : 1126
Manufacturing Test Data    : 00 00 00 00 00 00 00 00
Calibration Data           : 00000000
Chassis MAC Address        : 6c8b.d31f.d400
MAC Addr. Block Size       : 512
Hardware Revision          : 0.9
Unknown Field (type 0x00d7): 0
Device values # 1         : 21 80 84 0c 00 00 00 00

```

```

0/RP0/CPU0-Base Board IDPROM - Cisco 8201 1RU System with 24x400GE QSFP56-DD & 12x100GE QSFP28

```

```

Info
Controller Family          : 0045
Controller Type            : 0613
PID                        : 8201-SYS
Version Identifier         : V00
UDI Description            : Cisco 8201 1RU System with 24x400GE QSFP56-DD & 12x100GE

```

```

QSFP28
Chassis Serial Number      : FOC2325NREU
Top Assy. Part Number      : 68-6825-06
Top Assy. Revision         : 09
PCB Serial Number         : FOC2324NP35
PCA Number                 : 73-19428-08
PCA Revision               : 04
CLEI Code                  : UNASSIGNED
ECI Number                  : ECI123
Deviation Number # 1      : 0
Deviation Number # 2      : 0
Deviation Number # 3      : 0
Deviation Number # 4      : 0
Deviation Number # 5      : 1126
Manufacturing Test Data    : 00 00 00 00 00 00 00 00
Calibration Data           : 00000000
Chassis MAC Address        : 6c8b.d31f.d400
MAC Addr. Block Size       : 512
Hardware Revision          : 0.9
Unknown Field (type 0x00d7): 0
Device values # 1         : 21 80 84 0c 00 00 00 00

```

```

HundredGigE0/0/0/0-IDPROM - Cisco QSFP28 100G SR4 Pluggable Optics Module

```

```

Info
IDPROM Format Revision     : 05
Hardware Revision         : 1
PID                       : QSFP-100G-SR4-S
Version Identifier         : V02
UDI Description            :
CLEI Code                  : CMUIAL8CAB
ECI Number                 : 0
Top Assy. Part Number     : AFBR-89CDDZ-CS3
Top Assy. Revision        : 05
PCB Serial Number         : AVF2131S02J

```

```

PCA Number           : N/A
PCA Revision         : N/A
Deviation Number # 1 : 0
Asset ID             :
Asset Alias          :

```

.....

The output displayed for the **show diag details** command is the most comprehensive output displayed for **show diag** command variations. All other variations show a subset of the fields displayed except for the **show diag chassis**, **show diag fans**, and **show diag power-supply** commands, which also enable you to display EEPROM information.

```

RP/0/RP0/CPU0:P1#show diag eeprom
Thu Mar 12 18:16:32.436 UTC
Rack 0-Chassis IDPROM - Cisco 8201 1RU Chassis

```

```

00: 1B 5C 04 FF 48 00 45 40 06 13 CB 92 38 32 30 31  .\..H.E@....8201
10: 2D 53 59 53 00 00 00 00 00 00 00 00 00 00 00
20: 30 30 00 DA 3C 43 69 73 63 6F 20 38 32 30 31 20  00..<Cisco 8201
30: 31 52 55 20 43 68 61 73 73 69 73 00 00 00 00 00  1RU Chassis.....
40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 2D 44 44  .....-DD
50: 20 26 20 31 32 78 31 30 30 47 20 51 53 46 50 32  & 12x100G QSFP2
60: 38 C2 8B 46 4F 43 32 32 31 37 45 4C 5A 4C 87 44  8..FOC2217ELZL.D
70: 18 86 04 8D 30 37 20 20 C1 8B 46 4F 43 32 32 31  ...07 ..FOC221
80: 39 5A 4F 55 47 E2 46 00 49 00 48 7E 05 8A 30 35  9ZOUG.F.I.H~..05
90: 20 20 C6 8A 55 4E 41 53 53 49 47 4E 45 44 EB 86  ..UNASSIGNED..
A0: 45 43 49 31 32 33 88 00 00 00 00 88 00 00 00 00  EC1123.....
B0: 88 00 00 00 00 88 00 00 00 00 88 00 00 02 35 C4  .....5.
C0: 08 00 00 00 00 00 00 00 00 86 00 00 00 00 C3 06  .....
D0: 78 99 52 4C D8 00 43 02 00 41 00 01 D7 44 00 00  x.RL..C..A...D..
E0: 00 00 C9 08 2F 20 22 08 00 00 00 00 FF FF FF FF  .... / ".....
F0: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
100: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
110: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
120: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
130: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
140: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
150: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
160: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
170: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
180: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
190: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
1A0: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
1B0: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
1C0: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
1D0: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
1E0: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....
1F0: FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF FF  .....

```

This table describes the significant fields shown in the display.

**Table 24: show diag Field Descriptions**

Field	Description
MAIN	Provides the following general information about the hardware: <ul style="list-style-type: none"> <li>• Board type</li> <li>• Revision</li> <li>• Device identifier</li> <li>• Serial number</li> </ul>

Field	Description
PCA	Cisco printed circuit assembly (PCA) hardware and revision number.
PID	Displays the product identifier (PID) revision for the specified node.
VID	Displays the version identifier (VID) for the specified node.
CLEI	Displays the common language equipment identifier (CLEI) for the specified node.
ECI	Displays the equipment catalog item (ECI) for the specified node.
Board State	Displays the current software on the board and whether or not the board is running.
PLD	Displays the information about the following programmable logic device (PLD) components on the current module: <ul style="list-style-type: none"> <li>• Processor</li> <li>• Power</li> <li>• MONLIB</li> </ul>
SPEED	Displays speed information for the various components of the specified node, in megahertz.
MEM Size	Displays the memory size of the specified node, in megabytes.
RMA	Displays returned material adjustment (RMA) information for the specified node.
DIAGNOSTICS RESULTS	Provides the following information about the last diagnostics test that was run on the specified node: <ul style="list-style-type: none"> <li>• ENTRY 1</li> <li>• TIMESTAMP—Time stamp for the last diagnostic test that was run on the node.</li> <li>• VERSION</li> <li>• PARAM1</li> <li>• PARAM2</li> <li>• TESTNUM—Identifies the test that was run on the node.</li> <li>• RESULT—Displays whether the last diagnostic test passed or failed.</li> <li>• ERRRCODE</li> </ul>

## diagnostic monitor interval

To change the interval at which the online diagnostic tests send packets to the Network Processing Units (NPU) for a specific interval at a specified location, use the **diagnostic monitor interval** command in Config mode. To disable the configuration and restore the system to its original state, use the **no** form of this command.

**diagnostic monitor interval location** *node-id* **test** *test-name* *number-of-days*  
*hours:minutes:seconds.milliseconds*

<b>Syntax Description</b>	<i>node-id</i>	Specifies a location where diagnostic monitoring was configured. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
	<i>test-name</i>	Name of the diagnostic test.
	<i>number-of-days</i>	Interval between each test run.  The <i>number-of-days</i> variable specifies the number of days between each test run.
	<i>hours:minutes:seconds.milliseconds</i>	The <i>hours:minutes:seconds.milliseconds</i> variable specifies the test interval. Hours is a number in the range from 0 through 23, minutes is a number in the range from 0 through 59, seconds is a number in the range from 0 through 59, and milliseconds is a number in the range of 0 through 999.

**Command Default** None

**Command Modes** XR Config mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.5.2/Release 7.3.5	This command was introduced.

**Usage Guidelines** None

Task ID	Task ID	Operations
	diag	read, write
	cisco-support	read

**Examples** This example shows how to set the diagnostic testing at an interval of 1 hour, 2 minutes, 3 seconds, and 4 milliseconds at location 0/1/CPU0:

```
Router# config
Router(config)# diagnostic monitor interval location 0/1/cpu0 test 1 0 1:2:3.4
```

## diagnostic monitor location disable

To disable automatic diagnostic testing for a specified location, use the **diagnostic monitor location disable** command in Config mode. To enable the diagnostic testing, use the **no** form of this command.

**diagnostic monitor location** *node-id* **test** *test-name* **disable**

<b>Syntax Description</b>	<i>node-id</i>	Specifies a location where diagnostic monitoring was configured. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
---------------------------	----------------	--

---

*test-name* Name of the diagnostic test.

---

disable Disables diagnostic monitoring for a specified location.

---

**Command Default** By default, the automatic diagnostic tests are enabled in the system.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.5.2/Release 7.3.5	This command was introduced.

**Usage Guidelines** None

Task ID	Task ID	Operations
	diag	read, write
	cisco-support	read

**Examples** This example shows how to disable the online diagnostic execution at location 0/1/CPU0:

```
Router# config
Router(config)# diagnostic monitor location 0/1/cpu0 test 1 disable
```

## diagnostic monitor syslog

To enable the generation of a system log message when any online diagnosis fails, use the **diagnostic monitor syslog** command in Config mode. To remove the specified command from the configuration file and restore the system to its default condition, use the **no** form of this command.

### diagnostic monitor syslog

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.5.2/Release 7.3.5	This command was introduced.

**Usage Guidelines** None

Task ID	Task ID	Operations
	diag	read, write
	cisco-support	read

The following example shows how to generate a system log message when any online diagnostic test fails:

```
Router(config)# diagnostic monitor syslog
```

## diagnostic monitor threshold

To set the number of successive failures that triggers the generation of an NP data log, use the **diagnostic monitor threshold** command in Config mode. To remove the specified command from the configuration file and restore the system to its default condition, use the **no** form of this command.

**diagnostic monitor threshold location** *node-id* **test** *test-name* **failure-count** *failures*

Syntax Description	
	<i>node-id</i> Specifies a location where diagnostic monitoring was configured. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
	<i>test-name</i> Specifies the name of the diagnostic test.
	<i>failures</i> Number of test failures that are allowed. The given range is 1 to 99.

**Command Default** None

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.5.2/Release 7.3.5	This command was introduced.

**Usage Guidelines** None

Task ID	Task ID	Operations
	diag	read, write
	cisco-support	read

The following example shows how to set the failure threshold to 35 test failures for test 1 at location 0/1/CPU0:

```
Router# config
Router(config)# diagnostic monitor threshold location 0/1/cpu0 test 1 failure count 35
```

## show dataplane-health status

To check the status of a data plane health test and information on whether the test is still running or if it's completed, along with a summary of the results, use the **show dataplane-health status** command in XR EXEC mode.

### show dataplane-health status

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.3.5	This command was introduced.

**Usage Guidelines** Use the **show dataplane-health status** command to check the status of a data plane health test and information on whether the test is still running or if it's completed, along with a summary of the results.

Task ID	Task ID	Operations
	system	read

### Examples

This example displays the status of a data plane health test that is in progress:

```
Router# show dataplane-health status
Dataplane health monitoring in progress..
```

This example displays the status of a data plane health test that is completed and has errors:

```
Router# show dataplane-health status
Dataplane health monitoring completed
Summary of results (Module: fabric):
#####
Output summary legend:
ERROR: Tests were not run for this slice due to some errors
GOOD: Tests were successful for this slice
LOSS: Packet loss was observed for this slice
CORRUPT: Packet corruption was observed for this slice
#####
  LC   NP   Slice      GOOD      LOSS      CORRUPT      ERROR
-----
    1    0     0  2526253      0         0           0
      1  2527136      0         0           0
      2  2526235      0         0           0
```

## show diagnostic trace location

```

      1      0      2527166      0      0      0
          1      2527217      0      0      0
          2      2526424      0      0      0
-----
     2      0      0      2526733      0      0      0
          1      2526948      0      0      0
          2      2526554      0      0      0
      1      0      2526294      0      0      0
          1      2526220      0      0      0
          2      2526085      0      0      0
-----
     3      0      0      2525876      0      0      0
          1      2526642      0      0      0
          2      2525957      0      0      0
      1      0      2526491      0      0      0
          1      2526263      0      0      0
          2      2526200      0      0      0
      2      0      2526804      0      0      0
          1      2526135      0      0      0
          2      2526328      0      0      0
-----
     4      0      0      493934      0      11501      0
          1      0      0      0      0
          2      0      0      0      0
      1      0      493605      0      11591      0
          1      0      0      0      0
          2      0      0      0      0
-----
     5      0      0      505389      0      30      0
          1      0      0      0      0
          2      0      0      0      0
      1      0      505358      0      23      0
          1      0      0      0      0
          2      0      0      0      0
-----
     6      0      0      2526307      0      0      0
          1      2525905      0      0      0
          2      2526142      0      0      0
      1      0      2526755      0      0      0
          1      2526603      0      0      0
          2      2526607      0      0      0
*****
Corruption detected: (LC4/0 <-> FC2/0) (LC4/1 <-> FC2/0) (LC5/0 <-> FC3/0) (LC5/1 <-> FC3/0)

*****
FAILURES DETECTED IN DATAPATH for fabric mode.
Please run "monitor dataplane-health module no-fabric"
Please check /harddisk:/dph_mon/dataplane_health_fabric_mode_report.txt
*****

```

## show diagnostic trace location

To display the logging information of the online diagnostic tests for a specific location, use the **show diagnostic trace location** command in Config mode.

**show diagnostic trace location** *node-id*

<b>Syntax Description</b>	<i>node-id</i> Specifies a location where diagnostic monitoring was configured. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.	
<b>Command Default</b>	None	
<b>Command Modes</b>	XR Config mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.5.2/Release 7.3.5	This command was introduced.
<b>Usage Guidelines</b>	None	
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	diag	read, write
	cisco-support	read

The following example shows the online diagnostic logging information at 0/1/CPU0 location:

```
Router# config
Router(config)# show diagnostic trace location 0/1/CPU0
Apr 1 18:09:38.180 diags/online/packet 0/1/CPU0 t5879 Sending a packet to SPP
Apr 1 18:09:38.180 diags/online/packet 0/1/CPU0 t5879 Sending a packet to SPP
Apr 1 18:09:38.180 diags/online/engineer 0/1/CPU0 t5879 Now sending a pak(seq 1276),
destination slot 1 (card type 0x2), NP 0
Apr 1 18:09:38.180 diags/online/engineer 0/1/CPU0 t5879 Now sending a pak(seq 1276),
destination slot 1 (card type 0x2), NP 1
Apr 1 18:09:38.180 diags/online/engineer 0/1/CPU0 6904# t5879 Slot 1 has 2 NPs for NPU
loopback test, Inactive NP mask: 0x0
Apr 1 18:09:38.180 diags/online/engineer 0/1/CPU0 7456# t5879 Packets sent, time
tick=77148425000000
Apr 1 18:09:38.190 diags/online/gold_message 0/1/CPU0 9188# t5879 0/1/CPU0:
SFNPULoopback{ID=1} Completed Successfully.
Apr 1 18:09:38.190 diags/online/gold_message 0/1/CPU0 9740# t5879 0/1/CPU0: running parallel
test...
Apr 1 18:09:38.190 diags/online/engineer 0/1/CPU0 8008# t5879 Time took to receive 2 pkts:
10000000 nsec, timeout val: 500000000 nsec
Apr 1 18:09:38.190 diags/online/engineer 0/1/CPU0 8560# t5879 Successfully verified a
packet, seq. no.: 1276
Apr 1 18:09:38.190 diags/online/engineer 0/1/CPU0 9112# t5879 Successfully verified a
packet, seq. no.: 1276
Apr 1 18:09:38.190 diags/online/engineer 0/1/CPU0 9664# t5879 exp_mask: 0x00000003 mask:
0x00000003, err_mask: 0x00000000
```

## show diagnostic result

To display diagnostic test results, use the **show diagnostic result** command in EXEC mode.

**show diagnostic result location** *node-id* [**detail**]

<b>Syntax Description</b>	<b>location</b> <i>node-id</i>	Displays the diagnostic test results for a specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
	<b>detail</b>	(Optional) Specifies detailed results.
<b>Command Default</b>	None	
<b>Command Modes</b>	Exec mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.5.2/Release 7.3.5	This command was introduced.
<b>Usage Guidelines</b>	None	
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	diag	read, write
	cisco-support	read

The following example shows the online diagnostic test results at 0/5/CPU0 location:

```
Router#show diagnostic result location 0/5/CPU0
0/5/CPU0:
Overall diagnostic result: PASS
Diagnostic level at card bootup: bypass
Test results: (. = Pass, F = Fail, U = Untested)
1 ) SFNPULoopback -----> .

Router#show diagnostic result location 0/5/CPU0 detail
0/5/CPU0:
Overall diagnostic result: PASS
Diagnostic level at card bootup: bypass
Test results: (. = Pass, F = Fail, U = Untested)

-----
1 ) SFNPULoopback -----> .

Error code -----> 0 (DIAG_SUCCESS)
Total run count -----> 31
Last test execution time ----> Fri Jun 9 08:28:39 2023
First test failure time -----> n/a
Last test failure time -----> n/a
```

```
Last test pass time -----> Fri Jun 9 08:28:39 2023
Total failure count -----> 0
Consecutive failure count ---> 0
```

## monitor dataplane-health

To monitor the health of data plane components including fabric and NPUs, use the **monitor dataplane-health** command in EXEC mode.

```
monitor dataplane-health [ module { all-modules | fabric | lookup | no-fabric } pattern { byte-pattern | default-patterns } duration test-duration gap time-gap report { detail | summary } location { all | node-id } stop-on-failure-for-lc { false | true } prompt ]
```

Syntax Description	
<b>all-modules</b>	(Optional) Checks the fabric path, NPU path, and lookup engine for issues.
<b>fabric</b>	(Optional) Checks the fabric path for issues.
<b>lookup</b>	(Optional) Checks the lookup engine for issues.
<b>no-fabric</b>	(Optional) Checks the NPU path for issues.
<b>pattern</b> { <i>byte-pattern</i>   <b>default-patterns</b> }	(Optional) Specifies the data pattern that the utility uses to detect datapath memory corruption. You can either provide a custom byte pattern as a hexadecimal value within the range 0x00 to 0xFF (0 to 255), or use one of the available default patterns: 0x00, 0xF0, 0x0F, 0xFF, or 0x55.
<b>duration</b> <i>test-duration</i>	(Optional) Specifies the duration for which the traffic tests are run for each pattern. The default duration is 10 seconds per pattern. For example, if the default pattern is used, and duration is specified as 10 seconds, the test traffic runs for 50 seconds. Range is 1–60 seconds.
<b>gap</b> <i>time-gap</i>	(Optional) Specifies the time interval between traffic test runs on consecutive NPU slices. Default gap is 5 seconds. Range is 1–30 seconds.
<b>report</b> { <b>detail</b>   <b>summary</b> }	(Optional) Displays the summary or detailed report. By default, the summary report is displayed. Detail option displays more detailed information. In both cases, a detailed report (regardless of the selected option) is saved at the location: <code>harddisk:/dataplane_health_detail_report.txt</code>  <b>Note</b> You must archive the report file before subsequent runs, as this file is overwritten on re-execution of the command.
<b>location</b> { <b>all</b>   <i>node-id</i> }	(Optional) Specifies the line card on which the utility is run. By default, the utility is executed on all LCs in the system. You can also choose a specific LC if necessary.
<b>stop-on-failure-for-lc</b> { <b>true</b>   <b>false</b> }	(Optional) Specifies if the testing must stop or continue when the utility detects an issue. If <b>true</b> (default) option is selected, the testing stops when an issue is detected. If <b>false</b> is selected, the testing continues to completion even after an issue is detected on the LC.

---

**prompt** (Optional) Displays a warning message on the impact of this utility, and prompts for your confirmation to run this utility. If you choose NO to the prompt, tests will not be executed. By default, the utility does not prompt for your confirmation.

---

**Command Default** Monitoring is disabled.

**Command Modes** EXEC mode

Command History	Release	Modification
	Release 25.4.1	Two new keywords, <b>all-modules</b> and <b>lookup</b> , were added to the <b>monitor dataplane-health module</b> command to monitor the data plane health for all paths and only lookup engines respectively.
	Release 7.3.5	This command was introduced.

**Usage Guidelines** Use the **monitor dataplane-health** command to run the data plane health check utility. Do not use this command on a router that carries live traffic, as this utility affects the system performance. Use this command only on an isolated router.

A router reload is required after the **monitor dataplane-health module all-modules** command to run fabric, NPU, and lookup engine tests and the **monitor dataplane-health module lookup** command to run the lookup engine test are completed.

Task ID	Task ID	Operations
	system	execute
	basic-services	

This example shows how to execute the data plane health check utility for fabric module.

```
RP/0/RP0/CPU0:Router# monitor dataplane-health
Wed Feb 28 15:08:15.659 EST
RP/0/RP0/CPU0:Feb 28 15:08:15.687 EST: dph_mon_bg[337]: %PLATFORM-DPH_MONITOR-6-STARTED :
Dataplane health monitoring started. Please check
harddisk:/dph_mon/dataplane_health_fabric_mode_report.txt for details of the result.
THIS COMMAND IMPACTS SYSTEM PERFORMANCE AND SHOULD IDEALLY BE RUN ON A ROUTER THAT IS
ISOLATED.
Progressive details of the test logged in
/harddisk:/dph_mon/dataplane_health_fabric_mode_report.txt
Previous log file is archived as
/harddisk:/dph_mon/dataplane_health_fabric_mode_report.txt.bak
Please save the archive with a different file name as needed
#####
Module: fabric
Patterns used: 0xf0,0x0f,0x00,0x55,0xff,
Duration per pattern: 10 seconds
Pause time between each slice/pattern test: 2 seconds
Best effort time for test completion: 1044 seconds
Depending on the overall dataplane health state, it may take additional time to complete
#####
```

```
Dataplane health monitoring will run in the background
Wait for completion log message from the process "dph_mon_bg"
OR
Use "show dataplane-health status" regularly to check for completion

RP/0/RP0/CPU0:Feb 28 15:08:15.687 EST: dph_mon_bg[337]: %PLATFORM-DPH_MONITOR-6-STARTED :
Dataplane health monitoring started. Please check
harddisk:/dph_mon/dataplane_health_fabric_mode_report.txt for details of the result.

RP/0/RP0/CPU0:Feb 28 15:28:54.965 EST: dph_mon_bg[337]: %PLATFORM-DPH_MONITOR-6-COMPLETED
: Dataplane health monitoring completed. Please check
harddisk:/dph_mon/dataplane_health_fabric_mode_report.txt for details of the result.
```

This example shows the output for data plane health check for fabric module.

```
RP/0/RP0/CPU0:Router# show dataplane-health status
Mon Jan 29 23:10:21.564 UTC
Dataplane health monitoring completed
Summary of results (Module: fabric):
#####
Output summary legend:
ERROR: Tests were not run for this slice due to some errors
GOOD: Tests were successful for this slice
LOSS: Packet loss was observed for this slice
CORRUPT: Packet corruption was observed for this slice
#####
  LC   NP   Slice      GOOD      LOSS      CORRUPT      ERROR
-----
      0   0     0    2526099      0         0         0
              1    2526856      0         0         0
              2    2526529      0         0         0
      1   0     0    2526590      0         0         0
              1    2526918      0         0         0
              2    2526421      0         0         0
      2   0     0    2526665      0         0         0
              1    2525818      0         0         0
              2    2526286      0         0         0
-----
      1   0     0    2526754      0         0         0
              1    2526328      0         0         0
              2    2526695      0         0         0
      1   1     0    2525892      0         0         0
              1    2526988      0         0         0
              2    2526215      0         0         0
#####
DATAPATH CHECK IS CLEAN (mode: fabric).
#####
```

This example shows how to run fabric, NPU, and lookup engine tests together to check the health of these modules. The test includes a warning to reload the router after the test completion.



**Warning** Run the test on a router in a non-production environment as this test impacts the system performance.

```
RP/0/RP0/CPU0:Router# monitor dataplane-health module all-modules
THIS COMMAND IMPACTS SYSTEM PERFORMANCE AND SHOULD IDEALLY BE RUN ON A ROUTER THAT IS
ISOLATED.
THIS COMMAND INCLUDES THE TESTING OF THE LOOKUP ENGINE MODULE.
TESTS ON THE LOOKUP ENGINE REQUIRE A RELOAD AFTER TEST COMPLETION.
```

```

Progressive details of the test logged in
/harddisk:/dph_mon/dataplane_health_fabric_mode_report.txt
Previous log file is archived as
/harddisk:/dph_mon/dataplane_health_fabric_mode_report.txt.bak
Please save the archive with a different file name as needed
#####
Module:fabric, lookup
Patterns used: 0xf0,0x55,0xff,
Duration per pattern: 10 seconds
Pause time between each slice/pattern test: 2 seconds
Best effort time for test completion: 492 seconds
Depending on the overall dataplane health state, it may take additional time to complete
#####
Dataplane health monitoring will run in the background
Wait for completion log message from the process "dph_mon_bg"
      OR
Use "show dataplane-health status" regularly to check for completion
RP/0/RP0/CPU0:Router#

```



**Note** Make sure to reload the router once the test is completed.

This example shows the output for data plane health check with fabric, NPU, and lookup engine tests.

```

RP/0/RP0/CPU0:Router# show dataplane-health status
Dataplane health monitoring completed

Datapath test on all requested LC/NPU/slice completed
Summary of results (Module: fabric/lookup):
#####
Output summary legend:
ERROR: Tests were not run for this slice due to some errors
GOOD: Tests were successful for this slice
LOSS: Packet loss was observed for this slice
CORRUPT: Packet corruption was observed for this slice
LE-FAULTS: Lookup Engine test results - On supported devices, 0 for no-failures,
           or a bit mask of faulty engines; n/a on unsupported devices
#####
-----
  LC   NP   Slice      GOOD      LOSS      CORRUPT      ERROR      LE-FAULTS
-----
  LC4   0     0      1663101      0         0         0         0x0000
         1      1661542      0         0         0         0x0200
         2      1662258      0         0         0         0x0000
         1     0      1667547      0         0         0         0x0000
         1     1      1661658      0         0         0         0x0000
         2     1      1661153      0         0         0         0x0000
         2     0      1661087      0         0         0         0x0000
         1     1      1661474      0         0         0         0x0000
         2     2      1660756      0         0         0         0x0000
         3     0      1661936      0         0         0         0x0000
         1     1      1661197      0         0         0         0x0000
         2     2      1661644      0         0         0         0x0000
#####
*****
DATAPATH CHECK IS CLEAN, LOOKUP ENGINE ERROR(S) DETECTED (mode: fabric/lookup).
*****

```

This example shows how to run lookup engine test. The test includes a warning to reload the router after the test completion.



**Warning** Run the test on a router in a non-production environment as this test impacts the system performance.

```
RP/0/RP0/CPU0:ios# monitor dataplane-health module lookup
Fri Oct 24 13:09:20.906 UTC
THIS COMMAND IMPACTS SYSTEM PERFORMANCE AND SHOULD IDEALLY BE RUN ON A ROUTER THAT IS
ISOLATED.
THIS COMMAND INCLUDES THE TESTING OF THE LOOKUP ENGINE MODULE.
TESTS ON THE LOOKUP ENGINE REQUIRE A RELOAD AFTER TEST COMPLETION.
Progressive details of the test logged in
/harddisk:/dph_mon/dataplane_health_lookup_mode_report.txt
Previous log file is archived as
/harddisk:/dph_mon/dataplane_health_lookup_mode_report.txt.bak
Please save the archive with a different file name as needed
#####
Module:lookup
Best effort time for test completion: 32 seconds
Depending on the overall dataplane health state, it may take additional time to complete
#####
Dataplane health monitoring will run in the background
Wait for completion log message from the process "dph_mon_bg"
OR
Use "show dataplane-health status" regularly to check for completion
```



**Note** Make sure to reload the router once the test is completed.

This example shows the output for data plane health check with lookup engine test.

```
RP/0/RP0/CPU0:Router# show dataplane-health status

Thur Nov 20 18:06:25.132 UTC
Dataplane health monitoring completed

Datapath test on all requested LC/NPU/slice completed
Summary of results (Module: lookup):
#####
Output summary legend:
LE-FAULTS: Lookup Engine test results - On supported devices, 0 for no-failures,
          or a bit mask of faulty engines; n/a on unsupported devices

#####
```

LC	NP	Slice	LE-FAULTS
4	0	0	0x0000
		1	0x0200
		2	0x0000
1	0	0	0x0000
		1	0x0000
		2	0x0000
2	0	0	0x0000
		1	0x0000
		2	0x0000
3	0	0	0x0000
		1	0x0000
		2	0x0000

**clear packet-trace conditions all**

```
*****
LOOKUP ENGINE ERROR(S) DETECTED (mode: lookup).
*****
```

This example shows the output for data plane health check with lookup engine test on unsupported devices.

```
RP/0/RP0/CPU0:Router# show dataplane-health status

Wed Feb 11 20:13:45.429 UTC
Dataplane health monitoring completed

Datapath test on all requested LC/NPU/slice completed
Summary of results (Module: lookup):
#####
Output summary legend:
LE-FAULTS: Lookup Engine test results - On supported devices, 0 for no-failures,
          or a bit mask of faulty engines; n/a on unsupported devices
#####
-----
   LC      NP      Slice  LE-FAULTS
-----
RP0      0          0          n/a
          1          1          n/a
#####

*****
DATAPATH CHECK IS CLEAN (mode: lookup).
*****
```

## clear packet-trace conditions all

To clear all buffered packet-trace conditions, use the **clear packet-trace conditions all** command in EXEC mode.

**clear packet-trace conditions all**

<b>Syntax Description</b>	This command has no keywords or arguments.	
<b>Command Default</b>	None	
<b>Command Modes</b>	XR Config mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 25.1.1	This command was introduced.
<b>Usage Guidelines</b>	You can use this command only when packet tracing is inactive.	
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	cisco-support	execute

**Example**

The following example shows how clear all buffered packet tracer conditions:

```
Router# clear packet-trace conditions all
```

## clear packet-trace counters all

To clear all packet trace counters and reset the counters to zero, use the **clear packet-trace counters all** command in EXEC mode.

```
clear packet-trace counters all
```

<b>Syntax Description</b>	This command has no keywords or arguments.
---------------------------	--

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	XR Config mode
----------------------	----------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 25.1.1	This command was introduced.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	cisco-support	execute

**Example**

The following example shows how clear all the packet tracer counters:

```
Router# clear packet-trace counters all
```

## packet-trace condition

To configure the defined conditions and to apply the conditions for packet tracing, use the **packet-trace condition** command in EXEC mode.

```
packet-trace condition { interface { all | interface-path-id } | n offset offset value value mask mask }
```

<b>Syntax Description</b>	<b>interface</b> <i>interface-path-id</i>	Physical interface.  <b>Note</b> Use the <b>show interfaces</b> command to see a list of all interfaces currently configured on the router.  For more information about the syntax for the router, use the question mark (?) online help function.
	<b>n</b>	Specifies the number of offset/value/mask set(s).
	<b>offset</b> <i>offset</i> <b>mask</b> <i>mask</i> <b>value</b> <i>value</i>	The offset/value/mask triplets that define a flow of interest.  <b>Note</b> Defining a flow as a set of Offset/Value/Mask triplets allows the packet tracer framework to remain entirely protocol-agnostic. These triplets can represent any segment of any header within the protocol stack. Ensure that both the value and mask do not exceed 4 bytes in size. You can configure conditions at any offset within the first 128 bytes of a given packet, using a value and mask of up to 4 bytes each.
<b>Command Default</b>	None	
<b>Command Modes</b>	XR Config mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 25.1.1	This command was introduced.
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	cisco-support	read, execute

### Example

The following example shows how to configure the defined conditions for packet tracing:

```
Router# packet-trace condition interface all
Router# packet-trace condition 1 offset 0 value 0xaabbcc mask 0xffffffff
Router# packet-trace condition 2 offset 3 value 0xdd mask 0xff
```



**Note** You must also use the **interface all** condition along with the defined conditions, as this feature is enabled on all NPUs rather a specific interface.

## packet-trace start

To start packet tracing, use the **packet-trace start** command in EXEC mode.

**packet-trace start**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 25.1.1	This command was introduced.

Task ID	Task ID	Operations
	cisco-support	execute

### Example

The following example shows how to start packet tracing:

```
Router# packet-trace start
```

## packet trace stop

To stop packet tracing, use the **packet-trace stop** command in EXEC mode.

**packet-trace stop**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 25.1.1	This command was introduced.

Task ID	Task ID	Operations
	cisco-support	execute

**Example**

The following example shows how to stop packet tracing:

```
Router# packet-trace stop
```

## show packet-trace decode

To view detailed decoded packet trace information for a specific instance and location, use the **show packet-trace decode** command in EXEC mode.

```
show packet-trace [ decode { all | raw | rxpp-forwarding | rxpp-termination | tm-pd | txpp-transmit } instance { instance-id | all } location { node-id | path | all } ]
```

Syntax Description	all	Decodes all packet trace data.
	<b>raw</b>	Dumps raw binary trace data.
	<b>rxpp-forwarding</b>	Decodes RXPP forwarding trace data.
	<b>rxpp-termination</b>	Decodes RXPP termination trace data.
	<b>tm-pd</b>	Decodes TM PD trace data.
	<b>txpp-transmit</b>	Decodes TXPP transmit trace data.
	<b>instance</b> <i>instance-id</i>	Displays decoded packet trace information for a given NPU instance.
	<b>instance</b> <i>all</i>	Displays decoded packet trace information for all NPU instances.
	<b>location</b> <i>node-id</i>	Specifies the node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. Displays the information about a specific node.
	<b>location</b> <i>all</i>	Displays decoded information for all nodes.

**Command Default** None

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 25.3.1	This command was introduced.

Task ID	Task ID	Operations
	cisco-support	read, write

## Example

The following example shows how to view detailed decoded packet trace information for the given instance and location:

```
Router# show packet-trace decode all instance 0 location 0/0/CPU0

Mon Aug 18 21:31:30.699 UTC
Decoding packet trace results for NPU id 0 on node id 0x0
Executing User File: /pkg/bin/packet_trace_decode.py
Writing decoded output to /tmp/decoded.txt and /tmp/decoded.json
##### Captured Packet #####
###[ Ethernet ]###
    dst      = 12:34:56:78:9a:bd
    src      = 00:ca:fe:de:ad:00
    type     = n_802_1Q
###[ 802.1Q ]###
    prio     = 0
    id       = 0
    vlan     = 0
    type     = 0x7103
###[ InjectUp ]###
    type     = 34
    sgt_trust = 0
    padding1 = 0
    phb_src  = 0
    phb_tc   = 3
    phb_dp   = 0
    qos_group = 0
    fwd_qos_tag = 0
    ssp_gid  = 4
    counter_ptr = 84
    padding2 = 0
    ts_opcode = 0
    ts_res2   = 0
    ts_offset = 0
    lm_opcode = 0
    lm_res2   = 0
    lm_offset = 0
    internal  = 0
    ext_type  = 0
###[ Ethernet ]###
    dst      = 04:bd:97:bc:fb:a0
    src      = 00:00:00:00:00:01
    type     = IPv4
###[ IP ]###
    version  = 4
    ihl     = 5
    tos     = 0x0
    len     = 328
    id      = 1
    flags   =
    frag    = 0
    ttl     = 64
    proto   = udp
    chksum  = 0x4f8f
    src     = 10.1.1.10
    dst     = 30.1.1.10
    \options \
###[ UDP ]###
    sport    = domain
    dport    = domain
    len      = 308
```



```

offset_in_bytes          0x0
protocol_type            PROTOCOL_TYPE_ETHERNET_VLAN

```

```
==== RXPP Termination Input ====
```

FIELD_NAME	=>	VALUE
padding_1	=>	0x0
pch_label	=>	0x0
unsch_rcy_code	=>	0x0
tx_to_rx_rcy_data	=>	0xeb
mtu_violation	=>	0x1
initial_tc	=>	0x0
offset_in_fragment	=>	0x0
slice_source_system_port	=>	0xc0
processing_code	=>	0x0
destination	=>	0x0
use_cache	=>	0x0
single_fragment_packet	=>	0x0
flow_signature_on_npuh	=>	0x0
phb	=>	0x0
reassembly_context	=>	0x6fc
learn_enable	=>	0x0
receive_time_from_nppd	=>	0x0
rxnpu_recycle_count	=>	0x0
rxnpu_recycle_data	=>	0x0

```
==== RXPP Termination Output ====
```

FIELD_NAME	=>	VALUE
learn_cmd_and_fwd_app_data	=>	0xeb800000
lb_command	=>	0x0
offset_in_fragment	=>	0x0
slice_source_system_port	=>	0xc0
processing_code	=>	0x0
destination	=>	0x0
use_cache	=>	0x0
single_fragment_packet	=>	0x0
flow_signature_on_npuh	=>	0x0
phb	=>	0x0
reassembly_context	=>	0x6fc
learn_enable	=>	0x0
receive_time_from_nppd	=>	0x0
rxnpu_recycle_count	=>	0x0
rxnpu_recycle_data	=>	0x0

```
==== RXPP Forwarding Output ====
```

FIELD_NAME	=>	VALUE
offset_in_fragment	=>	0x0
slice_source_system_port	=>	0xc0
processing_code	=>	0x0
destination	=>	0x74007
use_cache	=>	0x0
single_fragment_packet	=>	0x0
flow_signature_on_npuh	=>	0x0
phb	=>	0xc
reassembly_context	=>	0x6fc
learn_enable	=>	0x0

```

receive_time_from_nppd      =>          0x0
rxnpu_recycle_count        =>          0x0
rxnpu_recycle_data         =>          0x0
fllb_control_code          =>          0x0
first_hop_source_ip_learn  =>          0x0
ethernet_rate_limiter_type =>          0x7
fwd_offset_cmd             =>          0x2

```

## show packet trace description

To view all counters registered with the packet tracer framework along with their descriptions, use the **show packet-trace description** command in EXEC mode.

### show packet-trace description

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 25.1.1	This command was introduced.

Task ID	Task ID	Operations
	cisco-support	read

### Example

The following example shows how to view all counters registered with the packet tracer framework.

```
Router# show packet-trace description
```

## show packet-trace hw-status

To view the packet tracing filter configuration in hardware, use the **show packet-trace hw-status** command in EXEC mode.

### show packet-trace hw-status instance *instance-id* location *node-id*

Syntax Description	instance <i>instance-id</i>	Displays information about a given instance.
	location <i>node-id</i>	Specifies a location where packet trace was configured. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

<b>Command Default</b>	None				
<b>Command Modes</b>	XR Config mode				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 25.1.1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 25.1.1	This command was introduced.
Release	Modification				
Release 25.1.1	This command was introduced.				
<b>Task ID</b>	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>cisco-support</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	cisco-support	read, write
Task ID	Operations				
cisco-support	read, write				

### Example

The following example shows how to view packet tracing filter configuration in hardware:

```
Router# show packet-trace hw-status instance 0 location 0/RP0/CPU0
```

```
Mon Jul  7 20:57:47.488 UTC
Reading hardware packet trace status for NPU id 0 on node id 0x2000
=== HW filter cfg results for NPO ===
{
  "Rx Filter Config": [
    {
      "data_offset": 48,
      "data": [
        200
      ],
      "mask": [
        255
      ]
    },
    {
      "data_offset": 0,
      "data": [
        100
      ],
      "mask": [
        255
      ]
    }
  ],
  "Tx Filter Config": [
    {
      "data_offset": 48,
      "data": [
        200
      ],
      "mask": [
        255
      ]
    },
    {
      "data_offset": 0,
      "data": [
        100
      ]
    }
  ],
}
```

```

        "mask": [
            255
        ]
    }
]
}

```

## show packet-trace result

To view the packet tracing result, use the **show packet-trace result** command in EXEC mode.

### show packet-trace result

**Command Default** None

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 25.1.1	This command was introduced.

Task ID	Task ID	Operations
	cisco-support	read, write

### Example

The following example shows how to view packet tracing results:

```
Router# show packet-trace result
```

Location	Source	Counter	T	Last-Attribute	Count
0/RP0/CPU0	NP0	INGRESS	P		1
0/RP0/CPU0	NP0	EGRESS	P		1

The count value of 1 indicates that the incoming packet has matched the configured filter in both the ingress and egress pipelines.

## show packet trace status

To check the status of tracing (active/incative) and to view the conditions buffered so far by the packet tracing framework, use the **show packet-trace status** command in EXEC mode. To view more detailed status, such as processes that are registered with the packet tracer framework on every card in the router, use the **show packet-trace status detail** command.

### show packet-trace status [detail]

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 25.1.1	This command was introduced.

Task ID	Task ID	Operations
	cisco-support	read

### Example 1

The following example shows how to view the status of packet tracing.

```
Router# show packet-trace status
```

```
Packet Trace Master Process:
```

```
Buffered Conditions:
  Interface HundredGigE0/5/0/6
  1 offset 53 value 0x1 mask 0xff
  2 offset 56 value 0xc0a84d01 mask 0xffffffff
  3 offset 60 value 0xc0a84d02 mask 0xffffffff
```

```
Status: Active
```

The output displays the status as either **Active** or **Inactive**. The status will remain **Inactive** until tracing starts.

### Example 2

The following example shows how to view detailed status of packet tracing.

```
Router# show packet-trace status detail
```

```
Packet Trace Master Process:
```

```
Buffered Conditions:
```

```
Status: Inactive
```

```
-----
Location: 0/RP0/CPU0
```

```
Available Counting Modules: 5
```

```
#1 SPP
  Last errors:
```

```
#2 NETIO
  Last errors:
```

```
#3 UDP
  Last errors:

#4 TCP
  Last errors:

#5 ofa_npd_proxy
  Last errors:

Available Marking Modules: 1

#1 ofa_npd_proxy

  Interfaces: 0

  Conditions: 0

  Last errors:
```

The output displays the status as either **Active** or **Inactive**. The status will remain **Inactive** until tracing starts.



## CHAPTER 7

# Graceful Handling of Out of Resource Situations Commands

This module describes the Cisco IOS XR Software commands to configure graceful handling of out of resource situations for system monitoring on the router.

For detailed information about graceful handling of out of resource concepts, configuration tasks, and examples, see the *Graceful Handling of Out of Resource Situations* chapter in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [oor hw](#), on page 179
- [show ofa transport async stats client fib](#), on page 180
- [show cef object-queue](#), on page 181
- [show controllers npu resources](#), on page 182

## oor hw

To configure hardwares for Out of Resource (OOR) situations and to configure OOR threshold values, use the **oor hw** command in XR Config mode. To remove the **oor hw** configuration file, use the **no** form of this command.

```
oor hw { dampening timeout-value | threshold | { red red-threshold-value | yellow yellow-threshold-value } }
```

```
oor hw { dampening timeout-value | threshold { red yellow } threshold-value }
```

Syntax Description		
	<b>dampening</b> <i>timeout-value</i>	Configures the timeout value of dampening the OOR state.
	<b>threshold</b>	Configures the threshold values of OOR states.
	<b>red</b> <i>red-threshold-value</i>	Specifies the threshold value for OOR state, <b>Red</b> . This value indicates that the hardware and SDK resources are utilized over the permissible limits. You can configure this value as a percentage.

**show ofa transport async stats client fib****yellow** *yellow-threshold-value*

Specifies the threshold value for OOR state, **Yellow**. This value indicates that the hardware and SDK resources are close to being utilized over the permissible limits. You can configure this value as a percentage.

**Command Default**

By default, the threshold value for **Red** and **Yellow** OOR states are 95% and 80% respectively.

**Command Modes**

XR Config mode

**Task ID**

Task ID	Operations
config-services	read, write

**Examples**

This example shows how to configure threshold values for OOR states:

```
Router(config)#oor hw threshold red 96
Router(config)#oor hw threshold yellow 85
Router(config)#commit
```

## show ofa transport async stats client fib

To display the async response error stats that are sent through the out-of-band async channel from OFA npu\_drvr to FIM Mgr, you can use the **show ofa transport async stats client fib** command in XR EXEC mode.

```
show ofa transport async stats client fib
```

**Command Default**

None

**Command Modes**

XR Exec Mode

**Command History**

Release	Modification
Release 7.5.4	This command was updated to include support for Protection Groups.
Release 7.3.1	This command was introduced.

The following example displays entries that are queued in the FIB OOR retry queue based on the object queue ID, using the **show ofatransport async stats client fib** command:

```
RP/0/RP0/CPU0:PE1# show ofa transport async stats client fib <>
Client name: OfaAsyncFeedbackClientFib
```

```
Channel Type:
```

```

Async P2P Notification:

Message Type:
NoMemory rx:0 tx:0

HwFailure rx:0 tx:0

OutOfResource rx:0 tx:0

IssuV2Primary rx:0 tx:0

ReplayDone rx:0 tx:0

Dump rx:0 tx:0

DelayedDelete rx:8 tx:8

NpuUp rx:0 tx:0

NpuDown rx:0 tx:0

WbStart rx:0 tx:0

WbEnd rx:0 tx:0

DebugInfo rx:0 tx:0

AsyncProgramError rx:44 tx:44 → Default Async errors sent to PI-FIB

AsyncResolveError rx:0 tx:0

AsyncEnoent rx:0 tx:0

AsyncSWIDOutOfResource rx:0 tx:0

NpdEvent rx:0 tx:0

FabricUp rx:0 tx:0

FabricDown rx:0 tx:0

OorMsg rx:0 tx:0

CustomMsg rx:224 tx:224 → Custom Async errors sent to PI-FIB

```

## show cef object-queue

To display entries that are queued in the FIB OOR retry queue based on the object queue ID, you can use the **show cef object-queue location** command in XR EXEC mode.

```
show cef object-queue
```

<b>Syntax Description</b>	<b>location</b>	Displays the queued entries in the FIB OOR for all locations.
<b>Command Default</b>	None	

**Command Modes** XR Exec Mode

Command History	Release	Modification
	Release 7.5.4	This command was updated to include support for Protection Groups.
	Release 7.3.1	This command was introduced.

The following example displays entries that are queued in the FIB OOR retry queue based on the object queue ID, using the **show cef object-queue location** <> command:

```
RP/0/RP0/CPU0:PE1# show cef object-queue location 0/0/cpu0
Queue                               QID   No. of Markers  No. of Objects
-----
OOR FEC                              23     0                17

OOR LEAF                             24     1                 0
OOR NHINFO                           25     1                 0
OOR GENERIC                           26     1                 0
```

The following is an example usage of the **show cef object-queue queue** <queue-id> **location** <> command:

```
RP/0/RP0/CPU0:PE1#sh cef object-queue queue 23 location 0/0/cpu0
Wed Nov 18 21:39:04.432 EST
PATHLIST pl:0x309a912db0 paths:2 pl-type:Shared
1st prefix dependent: default 0xe0000000 202.1.10.16/32 leaf:0x309713a890
PATHLIST pl:0x309a912cc8 paths:2 pl-type:Shared
1st prefix dependent: default 0xe0000000 202.1.14.218/32 leaf:0x309e46c8b8
PATHLIST pl:0x309a912be0 paths:2 pl-type:Shared
1st prefix dependent: default 0xe0000000 202.1.17.63/32 leaf:0x309e469738
PATHLIST pl:0x309a912a10 paths:2 pl-type:Shared
1st prefix dependent: default 0xe0000000 202.1.22.9/32 leaf:0x309e503b00
PATHLIST pl:0x309a912928 paths:2 pl-type:Shared
1st prefix dependent: default 0xe0000000 202.1.24.110/32 leaf:0x309e4f1a40
PATHLIST pl:0x309a912758 paths:3 pl-type:Shared
1st prefix dependent: default 0xe0000000 202.0.0.182/32 leaf:0x30ad885fa0
PATHLIST pl:0x309a9124a0 paths:3 pl-type:Shared
1st prefix dependent: default 0xe0000000 202.0.19.208/32 leaf:0x30ad889228
PATHLIST pl:0x309a9123b8 paths:3 pl-type:Shared
1st prefix dependent: default 0xe0000000 202.0.26.46/32 leaf:0x30ad889c78
PATHLIST pl:0x309a905430 paths:3 pl-type:Shared
1st prefix dependent: default 0xe0000000 202.0.51.166/32 leaf:0x3096582798
```

## show controllers npu resources

To display the usage of Open Forwarding Abstraction (OFA) resources, use the **show controllers npu resources** command in the XR EXEC mode. OFA is an infrastructure layer which provides an abstraction interface for networking hardware.

```
show controllers npu resources { resource-type | all } location { all location-id }
```

<b>Syntax Description</b>	<b>all</b>	Use the <b>all</b> keyword to display the usage of all the OFA resources for a single location or all locations.
	<i>resource-type</i>	Specify the <b>resource-type</b> to display the usage of the particular OFA resource for a single location or all locations.
	<b>location all</b>	Use the <b>location all</b> keywords to display the usage of a single resource type or all resource types for all locations.
	<b>location</b> <i>location-id</i>	Specify the <i>location-id</i> to display the usage of a single resource type or all resource types for the particular location.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	The following resource types are added to the command: <ul style="list-style-type: none"> <li>• egresslargeencaptb</li> <li>• sipidxtbl</li> <li>• myipv4tbl</li> <li>• tunneltermination</li> </ul>
	Release 7.3.1	This command was introduced.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	interface	read
	cisco-support	read

The **show controllers npu resources lpm\_tcam location 0/0/CPU0** command displays that the lpm\_tcam resource has reached Out of Resource (OOR) state as it has exceeded the usage thresholds.

```
RP/0/RP0/CPU0:ios# show controllers npu resources lpm_tcam location 0/0/CPU0
HW Resource Information
  Name                : lpm_tcam
  Asic Type           : Pacific

NPU-0
OOR Summary
  Estimated Max Entries      : 100
  Red Threshold              : 95 %
  Yellow Threshold          : 80 %
```

```

OOR State                : Red
OOR State Change Time   : 2020.Dec.17 09:53:02 EST

```

This example displays the IPv6 shortening entry as highlighted below. With both the IPv6 LPM normal entries and IPv6 LPM shortening entries in the output, you can determine the total number of IPv6 routes.

```

RP/0/RP0/CPU0:ios# show controllers npu resources lpm_tcam location 0/0/CPU0
Thu Jan 18 00:59:50.488 UTC
HW Resource Information
  Name : lpm_tcam
  Asic Type : Q200

NPU-0
OOR Summary
  Estimated Max Entries : 100
  Red Threshold : 95 %
  Yellow Threshold : 80 %
  OOR State : Green

OFA Table Information
(May not match HW usage)
  iprte : 3
  ip6rte : 2
  ip6mcrte : 0
  ipmcrte : 0

Current Hardware Usage
Name: lpm_tcam
Estimated Max Entries : 100
Total In-Use : 0 (0 %)
OOR State : Green

Name: v4_lpm
Total In-Use : 6

Name: v6_lpm
Total In-Use : 4

Name: v6_shortening_lpm
Total In-Use : <>

```



## CHAPTER 8

# IP Service Level Agreements Commands

---

This module describes the Cisco IOS XR Software commands to implement IP service level agreements for system monitoring on the router.

For detailed information about IP service level agreements concepts, configuration tasks, and examples, see the *Implementing IP Service Level Agreements* chapter in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [access-list](#), on page 187
- [action \(IP SLA\)](#), on page 188
- [ageout](#), on page 189
- [buckets \(history\)](#), on page 190
- [buckets \(statistics hourly\)](#), on page 191
- [buckets \(statistics interval\)](#), on page 192
- [control disable](#), on page 193
- [datasize request](#) , on page 194
- [destination address \(IP SLA\)](#), on page 195
- [destination port](#), on page 196
- [distribution count](#), on page 197
- [distribution interval](#), on page 198
- [exp](#), on page 199
- [filter](#), on page 200
- [force explicit-null](#), on page 201
- [frequency \(IP SLA\)](#), on page 202
- [history](#), on page 203
- [hw-timestamp disable](#), on page 204
- [interval](#), on page 205
- [ipsla](#), on page 206
- [key-chain](#), on page 207
- [life](#), on page 207
- [lives](#), on page 208
- [local-ip](#), on page 209
- [low-memory](#), on page 210
- [lsp selector ipv4](#), on page 211
- [lsp-path](#), on page 212
- [maximum hops](#), on page 213

- maximum paths (IP SLA), on page 213
- monitor (IP SLA), on page 214
- mpls discovery vpn, on page 215
- mpls lsp-monitor, on page 216
- operation, on page 217
- output interface, on page 217
- output nexthop, on page 218
- packet count, on page 219
- packet interval, on page 220
- path discover, on page 221
- path discover echo, on page 222
- path discover path, on page 223
- path discover scan, on page 224
- path discover session, on page 225
- react, on page 226
- react lpd, on page 229
- reaction monitor, on page 230
- reaction operation, on page 231
- reaction trigger, on page 232
- reply dscp, on page 233
- reply mode, on page 234
- responder, on page 235
- responder twamp light, on page 236
- samples, on page 238
- scan delete-factor, on page 238
- scan interval, on page 239
- schedule monitor, on page 240
- schedule operation, on page 241
- schedule period, on page 242
- show ipsla application, on page 243
- show ipsla history, on page 244
- show ipsla mpls discovery vpn, on page 246
- show ipsla mpls lsp-monitor lpd, on page 247
- show ipsla mpls lsp-monitor scan-queue, on page 249
- show ipsla mpls lsp-monitor summary, on page 250
- show ipsla responder statistics, on page 252
- show ipsla statistics, on page 253
- show ipsla statistics aggregated, on page 256
- show ipsla statistics enhanced aggregated, on page 263
- show ipsla twamp connection, on page 266
- source address , on page 266
- source port , on page 267
- start-time , on page 268
- statistics, on page 270
- tag (IP SLA), on page 271
- target ipv4, on page 272

- [target pseudowire](#), on page 274
- [target traffic-eng](#) , on page 275
- [threshold](#), on page 276
- [threshold type average](#), on page 277
- [threshold type consecutive](#), on page 278
- [threshold type immediate](#), on page 279
- [threshold type xofy](#), on page 280
- [timeout \(IP SLA\)](#), on page 281
- [tos](#), on page 283
- [ttl](#), on page 284
- [type icmp echo](#), on page 285
- [type icmp path-echo](#), on page 285
- [type icmp path-jitter](#), on page 286
- [type mpls lsp ping](#), on page 287
- [type mpls lsp trace](#), on page 288
- [type udp echo](#), on page 290
- [type udp jitter](#), on page 290
- [type udp ipv4 address](#), on page 291
- [verify-data](#), on page 292
- [vrf \(IP SLA\)](#), on page 293
- [vrf \(IP SLA MPLS LSP monitor\)](#), on page 294

## access-list

To specify an access-list name to filter provider edge (PE) addresses to restrict operations that are automatically created by MPLS LSP monitor (MPLSLM) instance, use the **access-list** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

```
access-list acl-name
no access-list
```

<b>Syntax Description</b>	<i>acl-name</i> Filters an access-list name.				
<b>Command Default</b>	No access list is configured by default.				
<b>Command Modes</b>	IP SLA MPLS LSP monitor ping configuration IP SLA MPLS LSP monitor trace configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				
<b>Usage Guidelines</b>	Access-list changes are processed before the scan interval expires to display a planned list of changes in the scan-queue.				



**Note** There is no verification check between the access list and the IPSLA configuration.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **access-list** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsml)# monitor 1
Router(config-ipsla-mplsml-def)# type mpls lsp ping
Router(config-ipsla-mplsml-lsp-ping)# access-list ipsla
```

## action (IP SLA)

To specify what action or combination of actions the operation performs when you configure the **react** command or when threshold events occur, use the **action** command in the appropriate configuration mode. To clear action or combination of actions (no action can happen), use the **no** form of this command.

```
action { logging | trigger }
no action { logging | trigger }
```

### Syntax Description

<b>logging</b>	Sends a logging message when the specified violation type occurs for the monitored element. The IP SLA agent generates a syslog and informs SNMP. Then, it is up to the SNMP agent to generate a trap or not.
<b>trigger</b>	Determines that the operation state of one or more target operations makes the transition from pending to active when the violation conditions are met. The target operations to be triggered are specified using the <b>ipsla reaction trigger</b> command. A target operation continues until its life expires, as specified by the lifetime value of the target operation. A triggered target operation must finish its life before it can be triggered again.

### Command Default

None

### Command Modes

IP SLA reaction condition configuration  
IP SLA MPLS LSP monitor reaction configuration

### Command History

Release	Modification
Release 7.3.2	This command was introduced.

**Usage Guidelines**

For the **action** command to occur for threshold events, the threshold type must be defined. Absence of threshold type configuration is considered if the threshold check is not activated.

When the **action** command is used from IP SLA MPLS LSP monitor reaction configuration mode, only the **logging** keyword is available.

If the **action** command is used in IP SLA operation mode, the action defined applies to the specific operation being configured. If the **action** command is used in IP SLA MPLS LSP monitor mode, the action defined applies to all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **action** command with the **logging** keyword:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react connection-loss
Router(config-ipsla-react-cond)# action logging
```

The following example shows how to use the **action** command from the IP SLA MPLS LSP monitor reaction configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsml)# reaction monitor 1
Router(config-ipsla-mplsml-react)# react connection-loss
Router(config-ipsla-mplsml-react-cond)# action logging
```

# ageout

To specify the number of seconds to keep the operation in memory when it is not actively collecting information, use the **ageout** command in IP SLA schedule configuration mode. To use the default value so that the operation will never age out, use the **no** form of this command.

```
ageout seconds
no ageout
```

**Syntax Description**

*seconds* Age-out interval in seconds. The value 0 seconds means that the collected data is not aged out. Range is 0 to 2073600.

**Command Default**

The default value is 0 seconds (never aged out).

**buckets (history)**

<b>Command Modes</b>	IP SLA schedule configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.
<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.	
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

**Examples**

The following example shows how to use the **ageout** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# schedule operation 1
Router(config-ipsla-sched)# ageout 3600
```

## buckets (history)

To set the number of history buckets that are kept during the lifetime of the IP SLA operation, use the **buckets** command in IP SLA operation history configuration mode. To use the default value, use the **no** form of this command.

```
buckets buckets
no buckets
```

<b>Syntax Description</b>	<i>buckets</i> Number of history buckets that are kept during the lifetime of an IP SLA operation. Range is 1 to 60.
<b>Command Default</b>	The default value is 15 buckets.
<b>Command Modes</b>	IP SLA operation history configuration
<b>Command History</b>	<b>Release</b> <b>Modification</b>
	Release 7.3.2    This command was introduced.
<b>Usage Guidelines</b>	The <b>buckets</b> command is supported only to configure the following operations: <ul style="list-style-type: none"> <li>• IP SLA ICMP path-echo</li> <li>• IP SLA ICMP echo</li> </ul>

- IP SLA UDP echo

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **buckets** command in IP SLA UDP echo configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp echo
Router(config-ipsla-udp-echo)# history
Router(config-ipsla-op-hist)# buckets 30
```

## buckets (statistics hourly)

To set the number of hours for which statistics are kept, use the **bucket** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

```
buckets hours
no buckets
```

<b>Syntax Description</b>	<i>hours</i> Number of hours for which statistics are maintained for the IP SLA operations. Range is 0 to 25 in IP SLA operation statistics configuration mode, and 0 to 2 in IP SLA MPLS LSP monitor statistics configuration mode.				
<b>Command Default</b>	The default value is 2.				
<b>Command Modes</b>	IP SLA operation statistics configuration IP SLA MPLS LSP monitor statistics configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				
<b>Usage Guidelines</b>	The <b>buckets</b> command with the <i>hours</i> argument is valid only for the <b>statistics</b> command with the <b>hourly</b> keyword.				

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to set the number of hours in which statistics are maintained for the IP SLA UDP jitter operation for the **buckets** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# statistics hourly
Router(config-ipsla-op-stats)# buckets 10
```

## buckets (statistics interval)

To specify the maximum number of buckets in which the enhanced history statistics are kept, use the **buckets** command in IP SLA operation statistics configuration mode. To remove the statistics collection of the specified interval, use the **no** form of this command.

```
buckets bucket-size
no buckets
```

<b>Syntax Description</b>	<i>bucket-size</i> The bucket size is when the configured bucket limit is reached. Therefore, statistics gathering for the operation ends. Range is 1 to 100. Default is 100.
---------------------------	---

<b>Command Default</b>	The default value is 100.
------------------------	---------------------------

<b>Command Modes</b>	IP SLA operation statistics configuration
----------------------	---

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

<b>Usage Guidelines</b>	The <b>buckets</b> command with the <i>bucket-size</i> argument is valid only for the <b>statistics</b> command with the <b>interval</b> keyword.
-------------------------	---

### Examples

The following example shows how to collect statistics for a given time interval for the IP SLA UDP jitter operation for the **buckets** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# statistics interval 60
Router(config-ipsla-op-stats)# buckets 50
```

# control disable

To disable the control packets, use the **control disable** command in the appropriate configuration mode. To use the control packets again, use the **no** form of this command.

```
control disable
no control disable
```

**Syntax Description** This command has no keywords or arguments.

**Command Default** Control packets are enabled by default.

**Command Modes** IP SLA UDP echo configuration  
IP SLA UDP jitter configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** When you configure the **control disable** command on the agent side, you need to configure a permanent port on the responder side or the operation returns a timeout error. If you configure the **control disable** command, a permanent port of the IP SLA Responder or some other functionality, such as the UDP echo server, is required on the remote device.

The **control disable** command is valid for operations that require a responder.

The IP SLA control protocol is disabled, which is used to send a control message to the IP SLA Responder prior to sending an operation packet. By default, IP SLA control messages are sent to the destination device to establish a connection with the IP SLA Responder.

Task ID	Task ID	Operations
	monitor	read, write

**Examples** The following example shows how to use the **control disable** command in IP SLA UDP jitter configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# control disable
```

## datasize request

To set the protocol data size in the request packet in the payload of an operation, use the **datasize request** command in the appropriate configuration mode. To reset the default data size, use the **no** form of this command.

**datasize request** *size*  
**no datasize request**

### Syntax Description

*size* Specifies the following ranges and default values that are protocol dependent:

- For a UDP jitter operation, range is 16 to 1500 B.
- For a UDP echo operation, range is 4 to 1500 B.
- For an ICMP echo operation, range is 0 to 16384 B.
- For an ICMP path-echo operation, range is 0 to 16384 B.
- For an ICMP path-jitter operation, range is 0 to 16384 B.
- For an MPLS LSP ping operation, range is 100 to 17986 B.

### Command Default

For a UDP jitter operation, the default value is 32 B.

For a UDP echo operation, the default value is 16 B.

For an ICMP echo operation, the default value is 36 B.

For an ICMP path-echo operation, the default value is 36 B.

For an ICMP path-jitter operation, the default value is 36 B.

For an MPLS LSP ping operation, the default value is 100 B.

### Command Modes

IP SLA UDP echo configuration

IP SLA UDP jitter configuration

IP SLA ICMP path-jitter configuration

IP SLA ICMP path-echo configuration

IP SLA ICMP echo configuration

IP SLA MPLS LSP ping configuration

### Command History

Release	Modification
Release 7.3.2	This command was introduced.

### Usage Guidelines

No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **datasize request** command in IP SLA UDP jitter configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# datasize request 512
```

## destination address (IP SLA)

To identify the address of the target device, use the **destination address** command in the appropriate configuration mode. To unset the destination address, use the **no** form of this command.

```
destination address ipv4-address
no destination address
```

<b>Syntax Description</b>	<i>ipv4-address</i> IP address of the target device.				
<b>Command Default</b>	None				
<b>Command Modes</b>	IP SLA UDP echo configuration IP SLA UDP jitter configuration IP SLA ICMP path-jitter configuration IP SLA ICMP path-echo configuration IP SLA ICMP echo configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				

**Usage Guidelines** You must specify the address of the target device. The configuration for the **destination address** command is mandatory for all operations.

## destination port

Task ID	Task ID	Operations
	monitor	read, write

## Examples

The following example shows how to designate an IP address for the **destination address** command in IP SLA UDP jitter configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# destination address 192.0.2.12
```

## destination port

To identify the port of the target device, use the **destination port** command in the appropriate configuration mode. To unset the destination port, use the **no** form of this command.

```
destination port port
no destination port
```

Syntax Description	
	<i>port</i> Port number of the target device. Range is 1 to 65355.

Command Default	
	None

Command Modes	
	IP SLA UDP echo configuration IP SLA UDP jitter configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

Usage Guidelines	
	The <b>destination port</b> command is not supported when you configure an ICMP operation; it is supported only to configure UDP operations.

You must specify the port of the target device. The configuration for the **destination port** command is mandatory for both IP SLA UDP echo and IP SLA UDP jitter configurations.

Task ID	Task ID	Operations
	monitor	read, write

**Examples**

The following example shows how to designate a port for the **destination port** command in IP SLA UDP jitter configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# destination port 11111
```

## distribution count

To set the number of statistics distributions that are kept for each hop during the lifetime of the IP SLA operation, use the **distribution count** command in IP SLA operation statistics configuration mode. To use the default value, use the **no** form of this command.

```
distribution count slot
no distribution count
```

**Syntax Description**

**slot** Number of statistics distributions that are kept. Range is 1 to 20. Default is 1.

**Command Default**

The default value is 1.

**Command Modes**

IP SLA operation statistics configuration

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

**Usage Guidelines**

In most situations, you do not need to change the number of statistics distributions kept or the time interval for each distribution. Only change these parameters when distributions are needed, for example, when performing statistical modeling of your network. To set the statistics distributions interval, use the **distribution interval** command in IP SLA operation statistics configuration mode. The total number of statistics distributions captured is the value set by the **distribution count** command times the value set by the **maximum hops** command times the value set by the **maximum path** command times the value set by the **buckets** command.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to set the number of statistics distribution for the **distribution count** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
```

```
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# statistics hourly
Router(config-ipsla-op-stats)# distribution count 15
```

## distribution interval

To set the time interval (in milliseconds) for each statistical distribution, use the **distribution interval** command in IP SLA operation statistics configuration mode. To use the default value, use the **no** form of this command.

```
distribution interval interval
no distribution interval
```

<b>Syntax Description</b>	<i>interval</i> Number of milliseconds used for each statistics distribution that is kept. Range is 1 to 100. Default is 20.
---------------------------	--

<b>Command Default</b>	The default value is 20.
------------------------	--------------------------

<b>Command Modes</b>	IP SLA operation statistics configuration
----------------------	---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

<b>Usage Guidelines</b>	In most situations, you do not need to change the number of statistics distributions kept or the time interval for each distribution. Only change these parameters when distributions are needed, for example, when performing statistical modeling of your network. To set the statistics distributions count, use the <b>distribution count</b> command in IP SLA operation statistics configuration mode. The total number of statistics distributions captured is the value set by the <b>distribution count</b> command times the value set by the <b>maximum hops</b> command times the value set by the <b>maximum path</b> command times the value set by the <b>buckets</b> command.
-------------------------	---

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

<b>Examples</b>	The following example shows how to set the time interval for the <b>distribution interval</b> command:
-----------------	--

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# statistics hourly
Router(config-ipsla-op-stats)# distribution interval 50
```

## exp

To specify the MPLS experimental field (EXP) value in the header of echo request packets, use the **exp** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

```
exp exp-bits
no exp
```

### Syntax Description

*exp-bits* Experimental field value in the header of an echo request packet. Valid values are from 0 to 7. Default is 0.

### Command Default

The experimental field value is set to 0.

### Command Modes

IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

### Command History

Release	Modification
Release 7.3.2	This command was introduced.

### Usage Guidelines

Use the **exp** command to set the MPLS experimental field in the headers of echo request packets in an MPLS LSP ping or MPLS LSP trace operation. The experimental (EXP) field allows for eight different quality-of-service (QoS) markings that determine the treatment (per-hop behavior) that a transit LSR node gives to a request packet. You can configure different MPLS EXP levels for different operations to create differentiated levels of response.

If the **exp** command is used in IP SLA operation mode, it acts on the headers of echo request packets for the specific operation being configured. If the **exp** command is used in IP SLA MPLS LSP monitor mode, it acts on the headers of echo request packets for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to use the **exp** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
```

```
Router(config-ipsla-op)# type mpls lsp trace
Router(config-ipsla-mpls-lsp-trace)# exp 5
```

The following example shows how to use the **exp** command in MPLS LSP monitor mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# monitor 1
Router(config-ipsla-mplslm-def)# type mpls lsp trace
Router(config-ipsla-mplslm-lsp-trace)# exp 5
```

## filter

To define the type of information that are kept in the history table for the IP SLA operation, use the **filter** command in IP SLA operation history configuration mode. To unset the history filter, use the **no** form of this command.

```
filter { all | failures }
no filter
```

<b>Syntax Description</b>	<b>all</b>	Stores history data for all operations, if set.
	<b>failures</b>	Stores data for operations that failed, if set.

**Command Default** The default is not to collect the history unless the **filter** command is enabled.

**Command Modes** IP SLA operation history configuration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines** The **filter** command is supported only to configure the following operations:

- IP SLA ICMP path-echo
- IP SLA ICMP echo
- IP SLA UDP echo

If you use the **no** form of the **filter** command, the history statistics are not collected.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

**Examples** The following example shows how to use the **filter** command in IP SLA UDP echo configuration mode:

```

Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp echo
Router(config-ipsla-udp-echo)# history
Router(config-ipsla-op-hist)# filter all

```

## force explicit-null

To add an explicit null label to the label stack of an LSP when an echo request is sent, use the **force explicit-null** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

```

force explicit-null
no force explicit-null

```

<b>Syntax Description</b>	This command has no keywords or arguments.
<b>Command Default</b>	An explicit null label is not added.
<b>Command Modes</b>	IP SLA MPLS LSP ping configuration IP SLA MPLS LSP trace configuration IP SLA MPLS LSP monitor ping configuration IP SLA MPLS LSP monitor trace configuration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

<b>Usage Guidelines</b>	<p>Use the <b>force explicit-null</b> command to force an unsolicited explicit null label to be added to the MPLS label stack of the LSP when an echo request packet is sent in an MPLS LSP ping or MPLS LSP trace operation.</p> <p>If the <b>force explicit-null</b> command is used in IP SLA operation mode, it acts on the label stack of the LSP for the specific operation being configured. If the <b>force explicit-null</b> command is used in IP SLA MPLS LSP monitor mode, it acts on the label stack of all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.</p> <p>You cannot use the <b>force explicit-null</b> command if pseudowire is specified as the target to be used in an MPLS LSP ping operation.</p>
-------------------------	---

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

<b>Examples</b>	The following example shows how to use the <b>force explicit-null</b> command:
-----------------	--

```

Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp trace
Router(config-ipsla-mpls-lsp-trace)# force explicit-null

```

## frequency (IP SLA)

To set the frequency for probing, use the **frequency** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

```

frequency seconds
no frequency

```

### Syntax Description

*seconds* Rate at which the specific IP SLA operation is sent into the network. Range is 1 to 604800.

### Command Default

If the **frequency** command is not used, the default value is 60 seconds.

In IP SLA MPLS LSP monitor schedule configuration mode, the default value is equal to the schedule period that is set using the **schedule period** command.

### Command Modes

IP SLA UDP echo configuration  
 IP SLA UDP jitter configuration  
 IP SLA ICMP path-jitter configuration  
 IP SLA ICMP path-echo configuration  
 IP SLA ICMP echo configuration  
 IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor schedule configuration

### Command History

Release	Modification
Release 7.3.2	This command was introduced.

### Usage Guidelines

If this command is used in IP SLA MPLS LSP monitor schedule configuration mode, it represents the frequency for the schedule period. In other words, if the frequency is set to 1000 seconds and the schedule period is set to 600 seconds, every 1000 seconds the LSP operations are run. Each run takes 600 seconds. Use the **schedule period** command to specify the schedule period.

The frequency value must be greater than or equal to the schedule period.

This configuration is inherited automatically by all LSP operations that are created.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **frequency** command in IP SLA UDP jitter configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# frequency 300
```

The following example shows how to use the **frequency** command in IP SLA MPLS LSP monitor schedule configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# schedule monitor 1
Router(config-ipsla-mplslm-sched)# frequency 1200
Router(config-ipsla-mplslm-sched)# schedule period 600
```

## history

To configure the history parameters for the IP SLA operation, use the **history** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

```
history [ buckets buckets | filter { all | failures } | lives lives ]
no history
```

Syntax Description	
<b>buckets</b>	Sets the number of history buckets that are kept during the lifetime of the IP SLA operation.
<i>buckets</i>	Number of history buckets that are kept during the lifetime of an IP SLA operation. Range is 1 to 60.
<b>filter</b>	Defines the type of information that is kept in the history table for the IP SLA operation.
<b>all</b>	Stores history data for all operations, if set.
<b>failures</b>	Stores data for operations that failed, if set.
<b>lives</b>	Sets the number of lives that are maintained in the history table for an IP SLA operation.
<i>lives</i>	Number of lives that are maintained in the history table for an IP SLA operation. Range is 0 to 2.
<b>Command Default</b>	None

<b>Command Modes</b>	IP SLA UDP echo configuration
	IP SLA UDP jitter configuration
	IP SLA ICMP path-jitter configuration
	IP SLA ICMP path-echo configuration
	IP SLA ICMP echo configuration
	IP SLA MPLS LSP ping configuration
	IP SLA MPLS LSP trace configuration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines** The **history** command enters IP SLA operation history configuration mode in which you can configure more history configuration parameters.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

**Examples** The following example shows how to use the **history** command in IP SLA UDP echo configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp echo
Router(config-ipsla-udp-echo)# history
Router(config-ipsla-op-hist)#
```

## hw-timestamp disable

To disable hardware time stamp configuration, use the **hw-timestamp disable** command in the IP SLA configuration mode.

**hw-timestamp disable**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** IP SLA configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operation
	monitor	read, write

### Example

The following example shows how to disable hardware time stamping:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# hw-timestamp disable
```

## interval

To configure the refresh interval for MPLS label switched path (LSP) monitoring, use the **interval** command in IP SLA MPLS discovery VPN configuration mode. To use the default value, use the **no** form of this command.

```
interval refresh-interval
no interval
```

<b>Syntax Description</b>	<i>refresh-interval</i> Specifies the time interval, in minutes, after which routing entries that are no longer valid are removed from the Layer 3 VPN discovery database. Range is 30 to 70560.				
<b>Command Default</b>	The default refresh interval is 60 minutes.				
<b>Command Modes</b>	IP SLA MPLS discovery VPN configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				

---

**Usage Guidelines**


**Note** If the total number of routes is large, there is a negative impact on the performance during the refresh of the discovery database. Therefore, the value of the *refresh-interval* argument should be large enough that router performance is not affected. If there are a very large number of routes, we recommend that you set the value of the *refresh-interval* argument to be several hours.

---



---

**Task ID**

Task ID	Operations
monitor	read, write

---

**Examples**

The following example shows how to use the **interval** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls discovery vpn
Router(config-ipsla-mpls-discovery-vpn)# interval 120
```

# ipsla

To enter IP SLA configuration mode and configure IP Service Level Agreements, use the **ipsla** command in XR Config mode. To return to the default setting, use the **no** form of this command.

**ipsla**  
**no ipsla**

---

**Syntax Description**

This command has no keywords or arguments.

---

**Command Default**

None

---

**Command Modes**

XR Config mode

---

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

---

**Usage Guidelines**

The **ipsla** command enters IP SLA configuration mode where you can configure the various IP service level agreement options.

---

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to enter IP SLA configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)#
```

# key-chain

To configure the MD5 authentication for the IP SLA control message, use the **key-chain** command in IP SLA configuration mode. To unset the keychain name and not use MD5 authentication, use the **no** form of this command.

```
key-chain key-chain-name
no key-chain
```

**Syntax Description**

*key-chain-name* Name of the keychain.

**Command Default**

No default values are defined. No authentication is used.

**Command Modes**

IP SLA configuration

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

**Usage Guidelines**

When you configure the **key-chain** command, you must also configure the **key chain** command in global configuration mode to provide MD5 authentication.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **ipsla key-chain** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# key-chain ipsla-keys
```

# life

To specify the length of time to execute, use the **life** command in IP SLA schedule configuration mode. To use the default value, use the **no** form of this command.

```

life { forever seconds }
no life

```

**Syntax Description**

**forever** Schedules the operation to run indefinitely.

*seconds* Determines the number of seconds the operation actively collects information. Range is 1 to 2147483647. Default value is 3600 seconds (one hour).

**Command Default**

The default value is 3600 seconds.

**Command Modes**

IP SLA schedule configuration

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

**Usage Guidelines**

No specific guidelines impact the use of this command.

**Task ID**

Task ID	Task	Operations
	monitor	read, write

**Examples**

The following example shows how to use the **life** command:

```

Router# configure
Router(config)# ipsla
Router(config-ipsla)# schedule operation 1
Router(config-ipsla-sched)# life forever

```

# lives

To set the number of lives that are maintained in the history table for an IP SLA operation, use the **lives** command in IP SLA operation history configuration mode. To use the default value, use the **no** form of this command.

```

lives lives
no lives

```

**Syntax Description**

*lives* Number of lives that are maintained in the history table for an IP SLA operation. Range is 0 to 2.

**Command Default**

The default value is 0 lives.

**Command Modes**

IP SLA operation history configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

Usage Guidelines	The <b>lives</b> command is supported only to configure the following operations: <ul style="list-style-type: none"> <li>• IP SLA ICMP path-echo</li> <li>• IP SLA ICMP echo</li> <li>• IP SLA UDP echo</li> </ul>
------------------	--

If you use the **no** form of the **lives** command, the history statistics are not collected.

Task ID	Task ID	Operations
	monitor	read, write

Examples	The following example shows how to use the <b>lives</b> command in IP SLA UDP echo configuration mode:
----------	--

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp echo
Router(config-ipsla-udp-echo)# history
Router(config-ipsla-op-hist)# lives 2
```

## local-ip

To configure the test-session parameters for TWAMP-light responder, use the **local-ip** command in the **ipsla responder twamp-light** mode. To remove the set configuration, use the **no** form of the command.

**local-ip** *local-ip-address* **local-port** *local-port* **remote-ip** *remote-ip-address* **remote-port** *remote-port* **vrf** [**default** | *vrf-name*]

Syntax Description	<b>local-ip</b> <i>local-ip-address</i>	Configure IPv4/IPv6 address of the interface on the local router
	<b>local-port</b> <i>local-port</i>	Configure the UDP port number of the local router. Range is 1 - 65535
	<b>remote-ip</b> <i>remote-ip-address</i>	Configure IPv4/IPv6 address of the interface on the remote router
	<b>remote-port</b> <i>remote-port</i>	Configure the UDP port number of the remote router. Range is 1 - 65535
	<b>vrf</b> [ <b>default</b>   <i>vrf-name</i> ]	Configure the VRF that the interface on the local router is part of

Command Default	None
-----------------	------

Command Modes	IPSLA responder TWAMP-light configuration mode
---------------	--

## low-memory

Command History	Release	Modification
	Release 7.3.2	This command is introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

**Example**

This example shows how to run the **responder** command in order to configure TWAMP responder:

```
Router(config)# ipsla
Router(config-ipsla)# responder twamp-light test-session 1
Router(config-twamp-light-def)# local-ip 192.0.2.10 local-port 13001 remote-ip 192.0.2.186
remote-port 13002 vrf default
```

# low-memory

**low-memory** *value*  
**no low-memory**

**Syntax Description** *value* Low-water memory mark *value*. Range is 0 to 4294967295.

**Command Default** The default value is 20 MB (free memory).

**Command Modes** IP SLA configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** IP SLA ensures that the system provides the specified memory before adding new operations or scheduling the pending operation.

When the 0 value is used, no memory limitation is enforced.

Task ID	Task ID	Operations
	monitor	read, write

**Examples**

The following example shows how to use the **low-memory** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# low-memory 102400
```

## lsp selector ipv4

To specify the local host IPv4 address used to select an LSP, use the **lsp selector ipv4** command in the appropriate configuration mode. To clear the host address, use the **no** form of this command.

```
lsp selector ipv4 ip-address
no lsp selector ipv4
```

### Syntax Description

*ip-address* A local host IPv4 address used to select the LSP.

### Command Default

The local host IP address used to select the LSP is 127.0.0.1.

### Command Modes

IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

### Command History

Release	Modification
Release 7.3.2	This command was introduced.

### Usage Guidelines

Use the **lsp selector ipv4** command to force an MPLS LSP ping or MPLS LSP trace operation to use a specific LSP when there are multiple equal cost paths between provider edge (PE) routers. This situation occurs when transit label switching routers (LSRs) use the destination address in IP packet headers for load balancing.

The IPv4 address configured with the **lsp selector ipv4** command is the destination address in the User Datagram Protocol (UDP) packet sent as the MPLS echo request. Valid IPv4 addresses are defined in the subnet 127.0.0.0/8 and used to:

- Force the packet to be consumed by the router where an LSP breakage occurs.
- Force processing of the packet at the terminal point of the LSP if the LSP is intact.
- Influence load balancing during forwarding when the transit routers use the destination address in the IP header for load balancing.

If the **lsp selector ipv4** command is used in IP SLA operation mode, it acts on the MPLS echo requests for the specific operation being configured. If the **lsp selector ipv4** command is used in IP SLA MPLS LSP monitor mode, it acts on the MPLS echo requests for all operations associated with the monitored provider edge (PE) routers.

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to use the **lsp selector ipv4** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp trace
Router(config-ipsla-mpls-lsp-trace)# lsp selector ipv4 127.10.10.1
```

## lsr-path

To specify a loose source routing path in which to measure the ICMP, use the **lsr-path** command in the appropriate configuration mode. To use a path other than the specified one, use the **no** form of this command.

```
lsr-path ipaddress1 [ipaddress2 [. . . [ipaddress8]]]
no lsr-path
```

### Syntax Description

*ip address* IPv4 address of the intermediate node. Up to eight addresses can be entered.

### Command Default

No path is configured.

### Command Modes

IP SLA ICMP path-jitter configuration  
IP SLA ICMP path-echo configuration

### Command History

Release	Modification
Release 7.3.2	This command was introduced.

### Usage Guidelines

The **lsr-path** command applies only to ICMP path-echo and ICMP path-jitter operation types.

You can configure up to a maximum of eight hop addresses by using the **lsr-path** command, as shown in the following example:

```
lsr-path ipaddress1 [ipaddress2 [... [ipaddress8]]]
```

### Task ID

Task ID	Operations
monitor	read, write

### Examples

The following example shows how to use the **lsr-path** command in IP SLA ICMP Path-echo configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type icmp path-echo
Router(config-ipsla-icmp-path-echo)# lsr-path 192.0.2.40
```

## maximum hops

To set the number of hops in which statistics are maintained for each path for the IP SLA operation, use the **maximum hops** command in IP SLA operation statistics configuration mode. To use the default value, use the **no** form of this command.

```
maximum hops hops
no maximum hops
```

<b>Syntax Description</b>	<i>hops</i> Number of hops for which statistics are maintained for each path. Range is 1 to 30. Default value is 16 for path operations; for example, <i>pathecho</i> .				
<b>Command Default</b>	The default value is 16 hops.				
<b>Command Modes</b>	IP SLA operation statistics configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				
<b>Usage Guidelines</b>	The <b>maximum hops</b> command is supported only when you configure path operations and the IP SLA ICMP path-echo operation.				
<b>Task ID</b>	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>monitor</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	monitor	read, write
Task ID	Operations				
monitor	read, write				

### Examples

The following example shows how to set the number of hops for the statistics for the **maximum** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type icmp path-echo
Router(config-ipsla-icmp-path-echo)# statistics hourly
Router(config-ipsla-op-stats)# maximum hops 20
```

## maximum paths (IP SLA)

To set the number of paths in which statistics are maintained for each hour for an IP SLA operation, use the **maximum paths** command in IP SLA operation statistics configuration mode. To use the default value, use the **no** form of this command.

```
maximum paths paths
```

**no maximum paths**

<b>Syntax Description</b>	<i>paths</i> Number of paths for which statistics are maintained for each hour. Range is 1 to 128. Default value is 5 for path operations; for example, <i>pathecho</i> .				
<b>Command Default</b>	The default value is 5 paths.				
<b>Command Modes</b>	IP SLA operation statistics configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				
<b>Usage Guidelines</b>	The <b>maximum paths</b> command is supported only when you configure path operations and the IP SLA ICMP path-echo operation.				
<b>Task ID</b>	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>monitor</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	monitor	read, write
Task ID	Operations				
monitor	read, write				

**Examples**

The following example shows how to set the number of paths for the statistics for the **maximum paths** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type icmp path-echo
Router(config-ipsla-icmp-path-echo)# statistics hourly
Router(config-ipsla-op-stats)# maximum paths 20
```

## monitor (IP SLA)

To configure an MPLS LSP monitor instance, use the **monitor** command in IP SLA LSP monitor configuration mode. To remove the monitor instance, use the **no** form of this command.

```
monitor monitor-id
no monitor [monitor-id]
```

<b>Syntax Description</b>	<i>monitor-id</i> Number of the IP SLA LSP monitor instance to be configured. Range is 1 to 2048.
<b>Command Default</b>	No monitor instance is configured.
<b>Command Modes</b>	IP SLA LSP monitor configuration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.
<b>Usage Guidelines</b>	<p>The <b>monitor</b> command enters IP SLA MPLS LSP monitor configuration mode so that you can set the desired monitor type for all operations associated with the monitored provider edge (PE) routers.</p> <p>To remove all monitor instances, use the <b>no monitor</b> command with no argument.</p>	
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write
<b>Examples</b>	<p>The following example shows how to use the <b>monitor</b> command:</p> <pre>Router# configure Router(config)# ipsla Router(config-ipsla)# mpls lsp-monitor Router(config-ipsla-mplsmlm)# monitor 1 Router(config-ipsla-mplsmlm-def)#</pre>	

## mpls discovery vpn

To configure MPLS label switched path (LSP) provider edge (PE) router discovery, use the **mpls discovery vpn** command in IP SLA configuration mode. To use the default value, use the **no** form of this command.

```
mpls discovery vpn [ interval interval ]
no mpls discovery vpn
```

<b>Syntax Description</b>	<b>interval</b> Configures the refresh interval for MPLS label switched path (LSP) monitoring.	
<b>Command Default</b>	None	
<b>Command Modes</b>	IP SLA configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.
<b>Usage Guidelines</b>	Use the <b>mpls discovery vpn</b> command to configure provider edge (PE) router discovery. PE Discovery discovers the LSPs used to reach every routing next hop. Routing entities are stored in a Layer 3 VPN discover database.	

Task ID	Task ID	Operations
	monitor	read, write

**Examples**

The following example shows how to enter IP SLA MPLS discovery VPN mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls discovery vpn
Router(config-ipsla-mpls-discovery-vpn)#
```

## mpls lsp-monitor

To configure MPLS label switched path (LSP) monitoring, use the **mpls lsp-monitor** command in IP SLA configuration mode. To use the default value, use the **no** form of this command.

```
mpls lsp-monitor
no mpls lsp-monitor
```

<b>Syntax Description</b>	None
<b>Command Default</b>	None
<b>Command Modes</b>	IP SLA configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** Use the **mpls lsp-monitor** command to configure MPLS LSP PE monitoring on the router. This provides a means to configure all operations associated with the monitored provider edge (PE) routers. The configuration is inherited by all LSP operations that are created automatically by the PE discovery.

Task ID	Task ID	Operations
	monitor	read, write

**Examples**

The following example shows how to enter IP SLA MPLS LSP monitor mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)#
```

# operation

To configure an IP SLA operation, use the **operation** command in IP SLA configuration mode. To remove the operation, use the **no** form of this command.

```
operation operation-number
no operation operation-number
```

<b>Syntax Description</b>	<i>operation-number</i> Operation number. Range is 1 to 2048.
---------------------------	---

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	IP SLA configuration
----------------------	----------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task	Operations ID
	monitor	read, write

## Examples

The following example shows how to use the IP SLA **operation** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)#
```

# output interface

To specify the echo request output interface to be used for LSP ping or LSP trace operations, use the **output interface** command in IP SLA MPLS LSP ping or IP SLA MPLS LSP trace configuration mode. To return the output interface to the default, use the **no** form of this command.

```
output interface type interface-path-id
no output interface
```

<b>Syntax Description</b>	<i>type</i> Interface type. For more information, use the question mark (?) online help function.
---------------------------	---

---

*interface-path-id* Physical interface or virtual interface.

**Note**

Use the **show interfaces** command to see a list of all interfaces currently configured on the router.

For more information about the syntax for the router, use the question mark (?) online help function.

---



---

**Command Default** No default behavior or values.

---

**Command Modes** IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

---

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

---



---

**Usage Guidelines** Use the **output interface** command to help monitor path-to-target over the path if there are some ECMP routes in a topology.

You cannot use the **output interface** command if pseudowire is specified as the target to be used in an MPLS LSP ping operation.

---

Task ID	Task	Operations
	monitor	read, write

---



---

**Examples** The following example shows how to use the **output interface** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls ls output interface pos 0/1/0/0
```

## output nexthop

To specify the next-hop address to be used for a Label Switched Path (LSP) ping or LSP trace operations, use the **output nexthop** command in the appropriate configuration mode. To return the output next hop to the default, use the **no** form of this command.

**output nexthop** *ip-address*

**no output nexthop**

<b>Syntax Description</b>	<i>ip-address</i> IP address of the next hop.				
<b>Command Default</b>	No default behavior or values				
<b>Command Modes</b>	IP SLA MPLS LSP ping configuration IP SLA MPLS LSP trace configuration IP SLA MPLS LSP monitor ping configuration IP SLA MPLS LSP monitor trace configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				

**Usage Guidelines** When LSP Path Discovery (LPD) is enabled, the next-hop IP address is also used to filter out the paths that are not associated with the specified next-hop address.



**Note** After you configure the output next hop, you must also configure the output interface.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **output nexthop** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp trace
Router(config-ipsla-mpls-lsp-trace)# output nexthop 10.1.1.1
```

## packet count

To specify the number of packets that are to be transmitted during a probe, such as a sequence of packets being transmitted for a jitter probe, use the **packet count** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**packet count** *count*  
**no packet count**

**packet interval**


---

**Syntax Description**     *count* Number of packets to be transmitted in each operation. Range for a UDP jitter operation is 1 to 60000. Range for an ICMP path-jitter operation is 1 to 100.

---

**Command Default**     The default packet count is 10.

**Command Modes**     IP SLA UDP jitter configuration  
IP SLA ICMP path-jitter configuration

---

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

---

**Usage Guidelines**     No specific guidelines impact the use of this command.

---

Task ID	Task ID	Operations
	monitor	read, write

---

**Examples**     The following example shows how to use the **packet count** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# packet count 30
```

## packet interval

To specify the interval between packets, use the **packet interval** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

**packet interval** *interval*  
**no packet interval**

---

**Syntax Description**     *interval* Interpacket interval in milliseconds. Range is 1 to 60000 (in milliseconds).

---

**Command Default**     The default packet interval is 20 ms.

**Command Modes**     IP SLA UDP jitter configuration  
IP SLA ICMP path-jitter configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read, write

**Examples** The following example shows how to use the **packet interval** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# packet interval 30
```

## path discover

To enable path discovery and enter MPLS LSP monitor (MPLSLM) LPD submode, use the **path discover** command in IP SLA MPLS LSP monitor ping configuration mode. To use the default value, use the **no** form of this command.

```
path discover
no path discover
```

<b>Syntax Description</b>	None				
<b>Command Default</b>	No default behavior or values				
<b>Command Modes</b>	IP SLA MPLS LSP monitor ping configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				
<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.				
<b>Task ID</b>	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>monitor</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	monitor	read, write
Task ID	Operations				
monitor	read, write				

**Examples**

The following example shows how to enter path discover submode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsml)# monitor 1
Router(config-ipsla-mplsml-def)# type mpls lsp ping
Router(config-ipsla-mplsml-lsp-ping)# path discover
Router(config-ipsla-mplsml-lpd)#
```

## path discover echo

To configure MPLS LSP echo parameters, use the **path discover** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

```
path discover echo { interval time | maximum lsp selector ipv4 host address | multipath
bitmap size size | retry count | timeout value }
no path discover echo { interval time | maximum lsp selector ipv4 host address |
multipath bitmap size size | retry count | timeout value }
```

**Syntax Description**

<b>interval</b> <i>time</i>	Configures the interval (in milliseconds) between MPLS LSP echo requests sent during path discovery. Range is 0 to 3600000. Default is 0.
<b>maximum lsp selector</b> <b>ipv4</b> <i>host-address</i>	Configures a local host IP address (127.x.x.x) that is the maximum selector value to be used during path discovery. Default is 127.255.255.255.
<b>multipath bitmap</b> <i>size size</i>	Configures the maximum number of selectors sent in the downstream mapping of an MPLS LSP echo request during path discovery. Range is 1 to 256. Default is 32.
<b>retry</b> <i>count</i>	Configures the number of timeout retry attempts for MPLS LSP echo requests sent during path discovery. Range is 0 to 10. Default is 3.
<b>timeout</b> <i>value</i>	Configures the timeout value (in seconds) for MPLS LSP echo requests sent during path discovery. Range is 1 to 3600. Default is 5.

**Command Default**

```
interval time: 0
maximum lsp selector ipv4 host address: 127.255.255.255
multipath bitmap size size : 32
retry count: 3
timeout value: 5
```

**Command Modes**

Path discover configuration  
MPLS LSP ping configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

  

Usage Guidelines	<p>A retry occurs when either an echo reply was not received on time for an outstanding echo request, or when no selectors are found for a given path by a transit router.</p> <p>When a selector value is configured in MPLSLM configuration mode, the maximum selector specified must be larger than that value. In such a scenario, the range of selectors used for path discovery is set by the two values.</p> <p>When the <b>interval time</b> is zero, a new echo request is sent after the previous echo retry was received.</p>				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>monitor</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	monitor	read, write
Task ID	Operations				
monitor	read, write				

### Examples

The following example shows how to configure the path discover echo interval:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsml)# monitor 1
Router(config-ipsla-mplsml-def)# type mpls lsp ping
Router(config-ipsla-mplsml-lsp-ping)# path discover
Router(config-ipsla-mplsml-lsp-lpd)# echo interval 777
```

## path discover path

To configure MPLS LSP path parameters, use the **path discover path** command in MPLS LSP monitor (MPLSLM) LPD configuration submenu. To use the default value, use the **no** form of this command.

```
path discover path { retry range | secondary frequency { both | connection-loss | timeout } value }
no path-discover path
```

Syntax Description	retry range	Configures the number of attempts to be performed before declaring a path as down. Default is 1 (LSP group will not retry to perform the echo request if the previous attempt fails). Range is 1 to 16.
	secondary frequency	Configures a secondary frequency to use after a failure condition (that is, a connection-loss or timeout) occurs.
	both	Enable secondary frequency for a timeout and connection loss.
	connection-loss	Enable secondary frequency for only a connection loss.
	timeout	Enable secondary frequency for only a timeout.

---

*value* Frequency value range is 1 to 604800.

---

**Command Default** None

**Command Modes** MPLSLM LPD configuration

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

**Usage Guidelines** In the event of a path failure, the secondary frequency value is used instead of the normal frequency value. The normal frequency value is determined by a frequency value or schedule period value, and the LSP operations are scheduled to start periodically at this interval. By default, the secondary frequency value is disabled. When failure condition disappears, probing resumes at the regular frequency.



**Note** The **secondary** command works in tandem with the **retry** keyword. Both must be configured.

---

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to configure MPLS LSP path parameters:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsml)# monitor 1
Router(config-ipsla-mplsml-def)# type mpls lsp ping
Router(config-ipsla-mplsml-lsp-ping)# path discover
Router(config-ipsla-mplsml-lsp-lpd)# path retry 12
Router(config-ipsla-mplsml-lsp-lpd)# path secondary frequency both 10
```

## path discover scan

To configure MPLS LSP scan parameters, use the **path discover scan** command in MPLS LSP monitor (MPLSLM) LPD configuration submenu. To use the default value, use the **no** form of this command.

```
path discover scan period value
no path discover scan period value
```

Syntax Description	period <i>value</i>	Configures the time (in minutes) between consecutive cycles of path discovery requests per MPLSLM instance. Range is 0 to 7200. Default is 5.

<b>Command Default</b>	<b>period</b> <i>value</i> : 5				
<b>Command Modes</b>	MPLSLM LPD configuration submode				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				

**Usage Guidelines** MPLSLM instances periodically trigger path discovery requests for LSP groups. At certain intervals, an MPLSLM instance begins triggering path discovery requests for each group in ascending order (determined by group ID). By default, the path discovery requests are triggered sequentially, although some concurrency may occur if the session limit value is greater than 1. The cycle concludes when the last LSP group finishes path discovery.

If the duration of the discovery cycle is larger than the scan period, a new cycle starts as soon as the previous one completes.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to configure the path discovery scan period value:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# monitor 1
Router(config-ipsla-mplslm-def)# type mpls lsp ping
Router(config-ipsla-mplslm-lsp-ping)# path discover
Router(config-ipsla-mplslm-lsp-lpd)# scan period 2
```

## path discover session

To configure MPLS LSP session parameters, use the **path discover session** command in MPLS LSP monitor (MPLSLM) LPD configuration submode. To use the default value, use the **no** form of this command.

```
path discover session { limit value | timeout value }
no path discover session { limit value | timeout value }
```

<b>Syntax Description</b>	<b>limit</b> <i>value</i>	Configures the number of concurrent active path discovery requests the MPLSLM instance submits to the LSPV server. Range is 1 to 15. Default is 1.
	<b>timeout</b> <i>value</i>	Configures the time (in seconds) the MPLSLM instance will wait for the result of a path discovery request submitted to the LSPV server. Range is 1 to 900. Default is 120.

<b>Command Default</b>	<b>limit</b> <i>value</i> : 1
------------------------	-------------------------------

**timeout** *value* : 120

**Command Modes** MPLSLM LPD configuration submode

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** An MPLSLM instance considers the path discovery as a failure when it receives no response within the configured timeout configuration value.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to configure the path discovery session timeout value:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# monitor 1
Router(config-ipsla-mplslm-def)# type mpls lsp ping
Router(config-ipsla-mplslm-lsp-ping)# path discover
Router(config-ipsla-mplslm-lsp-lpd)# session timeout 22
```

## react

To specify an element to be monitored for a reaction, use the **react** command in the appropriate configuration mode. To remove the specified reaction type, use the **no** form of this command.

```
react { connection-loss | jitter-average [ dest-to-source | source-to-dest ] | packet-loss {
dest-to-source | source-to-dest } | rtt | timeout | verify-error }
no react { connection-loss | jitter-average [ dest-to-source | source-to-dest ] | packet-loss {
dest-to-source | source-to-dest } | rtt | timeout | verify-error }
```

Syntax Description	connection-loss	Specifies that a reaction occurs if there is a connection-loss for the monitored operation.
	<b>jitter-average</b> [dest-to-source   source-to-dest]	Specifies that a reaction occurs if the average round-trip jitter value violates the upper threshold or lower threshold. The following options are listed for the <b>jitter-average</b> keyword: <ul style="list-style-type: none"> <li>• <b>dest-to-source</b>—(Optional) Specifies the jitter average destination to source (DS).</li> <li>• <b>source-to-dest</b>—(Optional) Specifies the jitter average source to destination (SD).</li> </ul>

<b>packet-loss</b> { <b>dest-to-source</b>   <b>source-to-dest</b> }	Specifies the reaction on packet loss value violation. The following options are listed for the <b>packet-loss</b> keyword: <ul style="list-style-type: none"> <li>• <b>dest-to-source</b>—(Optional) Specifies the packet loss destination to source (DS) violation.</li> <li>• <b>source-to-dest</b>—(Optional) Specifies the packet loss source to destination (SD) violation.</li> </ul>
<b>rtt</b>	Specifies that a reaction occurs if the round-trip value violates the upper threshold or lower threshold.
<b>timeout</b>	Specifies that a reaction occurs if there is a timeout for the monitored operation.
<b>verify-error</b>	Specifies that a reaction occurs if there is an error verification violation.

**Command Default** If there is no default value, no reaction is configured.

**Command Modes** IP SLA reaction configuration  
IP SLA MPLS LSP monitor reaction configuration

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

**Usage Guidelines** For the **connection-loss** keyword, **jitter-average** keyword, and **rtt** keyword, the reaction does not occur when the value violates the upper or the lower threshold. The reaction condition is set when the upper threshold is passed, and it is cleared when values go below the lower threshold.

For the **connection-loss** keyword and **verify-error** keyword, thresholds do not apply to the monitored element.

For the **jitter-average** keyword, **packet-loss** keyword, and **rtt** keyword, if the upper threshold for react threshold type average 3 is configured as 5000 ms and the last three results of the operation are 6000, 6000, and 5000 ms, the average is  $6000 + 6000 + 5000 = 17000 / 3 = 5667$ —therefore violating the 5000-ms upper threshold. The threshold type average must be configured when setting the type. These keywords are not available if connection-loss, timeout, or verify-error is specified as the monitored element, because upper and lower thresholds do not apply to these options.

In IP SLA MPLS LSP monitor reaction configuration mode, only the **connection-loss** and **timeout** keywords are available. If the **react** command is used in IP SLA MPLS LSP monitor reaction configuration mode, it configures all operations associated with the monitored provider edge (PE) routers. The configuration is inherited by all LSP operations that are created automatically by the PE discovery.

This table lists the Supported Reaction Configuration, by IP SLA Operation.

**Table 25: Supported Reaction Configuration, by IP SLA Operation**

Operation	ICMP Echo	Path Echo	UDP Jitter	UDP Echo	ICMP Path Jitter	MPLS LSP Ping	MPLS LSP Trace
Failure	--	--	--	--	--	--	--
RTT	Y	Y	Y	Y	Y	Y	Y

Operation	ICMP Echo	Path Echo	UDP Jitter	UDP Echo	ICMP Path Jitter	MPLS LSP Ping	MPLS LSP Trace
RTTAvg	--	--	--	--	--	--	--
Timeout	Y	Y	Y	Y	Y	Y	Y
connectionLoss	--	--	Y	Y	--	Y	Y
verifyError	--	--	Y	Y	--	--	--
jitterSDAvg	--	--	Y	--	--	--	--
jitterDSAvg	--	--	Y	--	--	--	--
jitterAvg	--	--	Y	--	--	--	--
PacketLossDS	--	--	Y	--	--	--	--
PacketLossSD	--	--	Y	--	--	--	--
PacketLoss	--	--	Y	--	--	--	--

**Task ID****Task ID    Operations**


---

monitor read,  
write

---

**Examples**

The following example shows how to use the **react** command with the **connection-loss** keyword:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react connection-loss
Router(config-ipsla-react-cond)#
```

The following example shows how to use the **react** command with the **jitter-average** keyword:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react jitter-average
Router(config-ipsla-react-cond)#
```

The following example shows how to use the **react** command with the **packet-loss** keyword:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react packet-loss dest-to-source
Router(config-ipsla-react-cond)#
```

The following example shows how to use the **react** command with the **rtt** keyword:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react rtt
Router(config-ipsla-react-cond)#
```

The following example shows how to use the **react** command with the **timeout** keyword:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react timeout
Router(config-ipsla-react-cond)#
```

The following example shows how to use the **react** command with the **verify-error** keyword:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react verify-error
Router(config-ipsla-react-cond)#
```

## react lpd

To specify that a reaction should occur if there is an LSP Path Discovery (LPD) violation, use the **react lpd** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

```
react lpd { lpd-group | tree-trace } action logging
no react lpd { lpd-group | tree-trace }
```

<b>Syntax Description</b>	<b>lpd-group</b>	Specifies that a reaction should occur if there is a status violation for the monitored LPD group.
	<b>tree-trace</b>	Specifies that a reaction should occur if there is a path discovery violation for the monitored LPD group.
	<b>action</b>	Configures the action to be taken on threshold violation.
	<b>logging</b>	Specifies the generation of a syslog alarm on threshold violation.
<b>Command Default</b>	None	
<b>Command Modes</b>	IP SLA MPLS LSP monitor configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines**

A status violation for a monitored LPD group happens when the Label Switched Path (LSP) group status changes (with the exception of the status change from the initial state).

A path discovery violation for the monitored LPD group happens when path discovery to the target PE fails, or successful path discovery clears such a failure condition.

**Task ID****Task ID**

monitor read,  
write

**Examples**

The following example shows how to specify that a reaction should occur if there is a status violation for the monitored LPD group:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# reaction monitor 1
Router(config-ipsla-mplslm-react)# react lpd lpd-group action logging
```

## reaction monitor

To configure MPLS label switched path (LSP) monitoring reactions, use the **reaction monitor** command in IP SLA MPLS LSP monitor configuration mode. To remove the reaction so that no reaction occurs, use the **no** form of this command.

```
reaction monitor monitor-id
no reaction monitor [monitor-id]
```

**Syntax Description**

*monitor-id* Number of the IP SLA MPLS LSP monitor instance for the reactions to be configured. Range is 1 to 2048.

**Command Default**

No reaction is configured.

**Command Modes**

IP SLA MPLS LSP monitor configuration

**Command History****Release**      **Modification**

Release 7.3.2 This command was introduced.

**Usage Guidelines**

The **reaction monitor** command enters IP SLA LSP monitor reaction configuration mode so that you can set the desired threshold and action in the event of a connection loss or timeout.

To remove all reactions, use the **no reaction monitor** command with no *monitor-id* argument.

The **reaction monitor** command configures reactions for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

Task ID	Task ID	Operations
	monitor	read, write

**Examples**

The following example shows how to use the **reaction operation** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# reaction monitor 1
Router(config-ipsla-mplslm-react)#
```

## reaction operation

To configure certain actions that are based on events under the control of the IP SLA agent, use the **reaction operation** command in IP SLA configuration mode. To remove the reaction so that no reaction occurs, use the **no** form of this command.

```
reaction operation operation-id
no reaction operation operation-id
```

**Syntax Description**

*operation-id* Number of the IP SLA operation for the reactions to be configured. Range is 1 to 2048.

**Command Default**

No reaction is configured.

**Command Modes**

IP SLA configuration

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

**Usage Guidelines**

No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read, write

**Examples**

The following example shows how to use the **reaction operation** command:

```
Router# configure
Router(config)# ipsla
```

```
Router(config-ipsla)# reaction operation 1
Router(config-ipsla-react)#
```

## reaction trigger

To define a second IP SLA operation to make the transition from a pending state to an active state when one of the trigger-type options is defined with the **reaction operation** command, use the **reaction trigger** command in IP SLA configuration mode. To remove the reaction trigger when the *triggering-operation* argument does not trigger any other operation, use the **no** form of this command.

```
reaction trigger triggering-operation triggered-operation
no reaction trigger triggering-operation triggered-operation
```

<b>Syntax Description</b>	<i>triggering-operation</i> Operation that contains a configured action-type trigger and can generate reaction events. Range is 1 to 2048.
	<i>triggered-operation</i> Operation that is started when the <i>triggering-operation</i> argument generates a trigger reaction event. Range is 1 to 2048.

**Command Default** No triggered operation is configured.

**Command Modes** IP SLA configuration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines** Both the *triggering-operation* and *triggered-operation* arguments must be configured. The triggered operation must be in the pending state.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

**Examples** The following example shows how to use the **ipsla reaction trigger** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction trigger 1 2
```

# reply dscp

To specify the differentiated services codepoint (DSCP) value used in echo reply packets, use the **reply dscp** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

```
reply dscp dscp-bits
no reply dscp
```

## Syntax Description

*dscp-bits* Differentiated services codepoint (DSCP) value for an echo reply packet. Valid values are from 0 to 63.

Reserved keywords such as EF (expedited forwarding) and AF11 (assured forwarding class AF11) can be specified instead of numeric values.

## Command Default

No default behavior or values

## Command Modes

IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

## Command History

Release	Modification
Release 7.3.2	This command was introduced.

## Usage Guidelines

Use the **reply dscp** command to set the DCSP value used in the headers of IPv4 UDP packets sent as echo replies in an MPLS LSP ping or MPLS LSP trace operation.

The DSCP value consists of the six most significant bits of the 1-byte IP type of service (ToS) field. These bits determine the quality-of-service (QoS) treatment (per-hop behavior) that a transit LSR node gives to an echo reply packet. For information about how packets are classified and processed depending on the value you assign to the 6-bit DSCP field, refer to “The Differentiated Services Model (DiffServ)” at the following URL:

[http://www.cisco.com/en/US/products/ps6610/products\\_data\\_sheet09186a00800a3e30.html](http://www.cisco.com/en/US/products/ps6610/products_data_sheet09186a00800a3e30.html)

If the **reply dscp** command is used in IP SLA operation mode, it acts on the headers of echo replies for the specific operation being configured. If the **reply dscp** command is used in IP SLA MPLS LSP monitor mode, it acts on the headers of echo replies for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

## Task ID

Task ID	Operations
monitor	read, write

## Examples

The following example shows how to use the **reply dscp** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp ping
Router(config-ipsla-mpls-lsp-ping)# reply dscp 5
```

# reply mode

To specify how to reply to echo requests, use the **reply mode** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

```
reply mode { control-channel | router-alert }
no reply mode
```

## Syntax Description

**control-channel** Sets echo requests to reply by way of a control channel.

**Note**

This option is available only in IP SLA MPLS LSP ping configuration mode.

**router-alert** Sets echo requests to reply as an IPv4 UDP packet with IP router alert.

## Command Default

The default reply mode for an echo request packet is an IPv4 UDP packet without IP router alert set.

## Command Modes

IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

## Command History

Release	Modification
Release 7.3.2	This command was introduced.

## Usage Guidelines

Use the **reply mode** command with the **control-channel** keyword to send echo reply packets by way of a control channel in an MPLS LSP ping operation. If the target is not set to pseudowire, the configuration of the **control-channel** keyword is rejected. Refer to the **target pseudowire** command for information about setting the target.

Use the **reply mode** command with the **router-alert** keyword to set the reply mode of echo reply packets in an MPLS LSP ping or MPLS LSP trace operation. After you enter this command, echo reply packets are set to reply as an IPv4 UDP packet with the IP router alert option in the UDP packet header.

If the **reply mode** command is used in IP SLA operation mode, it sets the reply mode of echo reply packets for the specific operation being configured. If the **reply mode** command is used in IP SLA MPLS LSP monitor mode, it sets the reply mode of echo reply packets for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

The router-alert reply mode forces an echo reply packet to be specially handled by the transit LSR router at each intermediate hop as it moves back to the destination. Because this reply mode is more expensive, it is recommended only if the headend router does not receive echo replies using the default reply mode.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **reply mode** command with the **router-alert** keyword:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp trace
Router(config-ipsla-mpls-lsp-trace)# reply mode router-alert
```

The following example shows how to use the **reply mode** command with the **control-channel** keyword:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp ping
Router(config-ipsla-mpls-lsp-ping)# target pseudowire 192.168.1.4 4211
Router(config-ipsla-mpls-lsp-ping)# reply mode control-channel
```

## responder

To configure the responder for IP SLA, use the **responder** command in the **ipsla** mode. To remove the set configuration, use the **no** form of the command.

```
responder [ twamp | [ twamp-light test-session test-session-id ] ] [ timeout timeout-value ]
```

```
responder twamp [ timeout timeout-value ]
```

Syntax Description		
<b>twamp</b>		Configure TWAMP responder
<b>twamp-light</b>		Configure TWAMP-light responder
<b>test-session</b> <i>test-session-id</i>		Configure TWAMP-light test-session id. Range is 1 - 65535
<b>timeout</b> <i>timeout-value</i>		Configure the inactivity timeout period (in seconds) Range is 1 - 604800 For TWAMP, the range is 1 - 604800. For TWAMP-light, the range is 60 - 86400

**Command Default** Default timeout for TWAMP responder is 900 seconds.

By default, there is no timeout for TWAMP-light responder.

---

**Command Modes** IPSLA configuration mode

---

Command History	Release	Modification
	Release 7.3.2	This command is introduced.

---

**Usage Guidelines** No specific guidelines impact the use of this command.

### Example

This example shows how to configure the TWAMP responder:

```
Router(config)# ipsla
Router(config-ipsla)# responder twamp timeout 100
```

This example shows how to configure the TWAMP-light responder:

```
Router(config)# ipsla
Router(config-ipsla)# responder twamp-light test-session 1 timeout 100
```

## responder twamp light

To configure the TWAMP-light responder, use the **responder twamp-light** command in the **ipsla** configuration mode.

```
responder twamp-light test-session test-session-id [ local-ip { local-ip-address | any { ipv4 | ipv6 } } local-port local-port-number remote-ip { remote-ip-address | any { ipv4 | ipv6 } } remote-port { remote-port-number | any } vrf { vrf-name | any | default } | timeout timeout-value ]
```

---

Syntax Description	test-session <i>test-session-id</i>	Configure TWAMP-light test-session id. Range: 1 - 65535
	<b>local-ip</b> { <i>local-ip-address</i>   <b>any</b> { <b>ipv4</b>   <b>ipv6</b> } }	Configure the local ip-address or allow any local IPv4 or IPv6 address
	<b>local-port</b> <i>local-port-number</i>	Configure the local UDP port number. Range: 1 - 65535
	<b>remote-ip</b> { <i>remote-ip-address</i>   <b>any</b> { <b>ipv4</b>   <b>ipv6</b> } }	Configure the remote client's ip-address or allow connection from any remote IPv4 or IPv6 address
	<b>remote-port</b> { <i>remote-port-number</i>   <b>any</b> }	Configure the UDP port number of the remote client or allow connection from any remote port. Range: 1 - 65535

---

<b>vrf</b> { <i>vrf-name</i>   <b>any</b>   <b>default</b> }	Configure vrf for the local ip-address. Possible values for vrf: <ul style="list-style-type: none"> <li>• <i>vrf-name</i> of the vrf of the local ip-address</li> <li>• <b>any</b>: use this only when <b>local-ip</b> is configured as any</li> <li>• <b>default</b>: use this when the local ip-address belongs to default vrf</li> </ul>
<b>timeout</b> <i>timeout-value</i>	Configure the inactivity timeout period (in seconds) For TWAMP-light, the range is 60 - 86400

**Command Default** Default timeout is 900 seconds.

**Command Modes** IPSLA configuration mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

- Usage Guidelines**
- Caution must be taken by the administrator when using **any** option as this configuration opens up the specified **local-port** for packets from any IP address.
  - Configure **vrf** as **any** only when you configure **local-ip** as **any**.
  - Configure **vrf** with a valid vrf value, when you configure **local-ip** with a valid IPv4/IPv6 address.

<b>Task ID</b>	<b>Task ID</b>	<b>Operation</b>
	monitor	read, write

### Example

This example shows how to configure the twamp-light responder:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# responder twamp-light test-session 1 local-ip 192.0.2.10 local-port
13001 remote-ip 192.0.2.186 remote-port 13002 vrf default
Router(config-ipsla)# responder twamp-light test-session 1 timeout 60
Router(config-ipsla)# commit
```

## samples

To set the number of hop entries that are kept in the history table for an IP SLA ICMP path-echo operation, use the **samples** command in IP SLA operation ICMP path-echo history configuration mode. To use the default value, use the **no** form of this command.

```
samples sample-count
no samples
```

<b>Syntax Description</b>	<i>sample-count</i> Number of history samples that are kept in the history table for an IP SLA ICMP path-echo operation. Range is 1 to 30.
---------------------------	--

<b>Command Default</b>	The default value is 16.
------------------------	--------------------------

<b>Command Modes</b>	IP SLA operation ICMP path-echo history configuration
----------------------	---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

<b>Usage Guidelines</b>	The <b>samples</b> command is supported only when you configure an IP SLA ICMP path-echo operation.
-------------------------	---

<b>Task ID</b>	<b>Task</b>	<b>Operations</b>
	monitor	read, write

**Examples** The following example shows how to use the **samples** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type icmp path-echo
Router(config-ipsla-icmp-path-echo)# history
Router(config-ipsla-op-hist)# samples 30
```

## scan delete-factor

To specify the frequency with which the MPLS LSP monitor (MPLSLM) instance searches for provider edge (PE) routers to delete, use the **scan delete-factor** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

```
scan delete-factor factor-value
no scan delete-factor
```

<b>Syntax Description</b>	<i>factor-value</i> Specifies a factor that is multiplied by the scan interval to determine the frequency at which the MPLS LSP monitor instance deletes the provider edge (PE) routers that are no longer valid. Range is 0 to 2147483647.
---------------------------	---

<b>Command Default</b>	<i>factor-value</i> : 1
------------------------	-------------------------

<b>Command Modes</b>	IP SLA MPLS LSP monitor ping configuration IP SLA MPLS LSP monitor trace configuration
----------------------	---

<b>Command History</b>	<b>Release</b> <b>Modification</b>
	Release 7.3.2 This command was introduced.

<b>Usage Guidelines</b>	The <b>scan delete-factor</b> command specifies a factor value for automatic PE deletion. The specified <i>factor-value</i> is multiplied by the scan interval to acquire the frequency at which the MPLS LSP monitoring instance deletes not-found PEs. A scan delete factor of zero (0) means that provider edge (PE) routers that are no longer valid are never removed.
-------------------------	---

<b>Task ID</b>	<b>Task ID</b> <b>Operations</b>
	monitor read, write

### Examples

The following example shows how to use the **scan delete-factor** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# monitor 1
Router(config-ipsla-mplslm-def)# type mpls lsp ping
Router(config-ipsla-mplslm-lsp-ping)# scan delete-factor 214
```

## scan interval

To specify the frequency at which the MPLS LSP monitor (MPLSLM) instance checks the scan queue for updates, use the **scan interval** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

```
scan interval scan-interval
no scan interval
```

<b>Syntax Description</b>	<i>scan-interval</i> Time interval between provider edge (PE) router updates. Range is 1 to 70560.
---------------------------	--

<b>Command Default</b>	<i>interval</i> : 240 minutes
------------------------	-------------------------------

**Command Modes** IP SLA MPLS LSP monitor ping configuration  
IP SLA MPLS LSP monitor trace configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** Use the **scan interval** command to specify a frequency value in minutes at which the MPLS LSP monitoring instance checks the scan queue for PE updates. Updates from PE discovery are not processed immediately, but rather stored in a scan queue for batched processing at periodic intervals, specified by this value.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **scan** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mpls-lsp-monitor)# monitor 1
Router(config-ipsla-mpls-lsp-monitor-def)# type mpls lsp ping
Router(config-ipsla-mpls-lsp-monitor-lsp-ping)# scan interval 120
```

## schedule monitor

To schedule MPLS LSP monitoring instances, use the **schedule monitor** command in IP SLA LSP monitor configuration mode. To unschedule the monitoring instances, use the **no** form of this command.

```
schedule monitor monitor-id
no schedule monitor [monitor-id]
```

Syntax Description	
	<i>monitor-id</i> Number of the monitoring instance to schedule. Range is 1 to 2048.

**Command Default** No schedule is configured.

**Command Modes** IP SLA MPLS LSP monitor configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines**

The **schedule monitor** command enters IP SLA MPLS LSP monitor schedule configuration mode so that you can set the desired schedule parameters for the MPLS LSP monitor instance. This schedules the running of all operations created for the specified monitor instance.

To remove all configured schedulers, use the **no schedule monitor** command with no *monitor-id* argument.

**Task ID**

Task ID	Task	Operations
	monitor	read, write

**Examples**

The following example shows how to access and use the **schedule monitor** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsmlm)# schedule monitor 1
Router(config-ipsla-mplsmlm-sched)#
```

## schedule operation

To enter schedule configuration mode, use the **schedule operation** command in IP SLA configuration mode. To remove the scheduler, use the **no** form of this command.

```
schedule operation operation-number
no schedule operation operation-number
```

**Syntax Description**

operation-number Configuration number or schedule number that is used to schedule an IP SLA operation. Range is 1 to 2048.

**Command Default**

None

**Command Modes**

IP SLA configuration

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

**Usage Guidelines**

The **schedule operation** command enters the IP SLA schedule configuration mode. You can configure more schedule configuration parameters to schedule the operation. When an operation is scheduled, it continues collecting information until the configured life expires.

**Task ID**

Task ID	Task	Operations
	monitor	read, write

**Examples**

The following example shows how to use the **schedule operation** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# schedule operation 1
Router(config-ipsla-sched)#
```

## schedule period

To configure the amount of time during which all LSP operations are scheduled to start or run, use the **schedule period** command in IP SLA MPLS LSP monitor schedule configuration mode. To remove the scheduler, use the **no** form of this command.

```
schedule period seconds
no schedule period
```

<b>Syntax Description</b>	<i>seconds</i> Amount of time in seconds for which label switched path (LSP) operations are scheduled to run. Range is 1 to 604800.
---------------------------	---

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	IP SLA MPLS LSP monitor schedule configuration
----------------------	--

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines**

Use the **schedule period** command to specify the amount of time in seconds during which all LSP operations are scheduled to start running. All LSP operations are scheduled equally spaced throughout the schedule period.

For example, if the schedule period is 600 seconds and there are 60 operations to be scheduled, they are scheduled at 10-second intervals.

Use the **frequency** command to specify how often the entire set of operations is performed. The frequency value must be greater than or equal to the schedule period.

You must configure the schedule period before you can start MPLS LSP monitoring. Start MPLS LSP monitoring using the **start-time** command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

**Examples**

The following example shows how to use the **schedule period** command:

```

Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsmlm)# schedule monitor 20
Router(config-ipsla-mplsmlm-sched)# schedule period 6000

```

## show ipsla application

To display the information for the IP SLA application, use the **show ipsla application** command in XR EXEC mode.

### show ipsla application

<b>Syntax Description</b>	This command has no keywords or arguments.
---------------------------	--

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	XR EXEC mode
----------------------	--------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.
-------------------------	--

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read

### Examples

The following sample output is from the **show ipsla application** command:

```

Router# show ipsla application

Estimated system max number of entries: 2048
Number of Entries configured: 1
Number of active Entries      : 0
Number of pending Entries     : 0
Number of inactive Entries    : 1

Supported Operation Types: 7

    Type of Operation: ICMP ECHO
    Type of Operation: ICMP PATH JITTER
    Type of Operation: ICMP PATH ECHO
    Type of Operation: UDP JITTER
    Type of Operation: UDP ECHO
    Type of Operation: MPLS LSP PING
    Type of Operation: MPLS LSP TRACE

Number of configurable probes : 2047

```

**show ipsla history**

```
SA Agent low memory water mark: 20480 (KB)
```

This table describes the significant fields shown in the display.

**Table 26: show ipsla application Field Descriptions**

Field	Description
Estimated system max number of entries	Maximum number of operations that are configured in the system. The low-memory configured parameter and the available memory in the system are given.
Number of Entries configured	Total number of entries that are configured, such as active state, pending state, and inactive state.
Number of active Entries	Number of entries that are in the active state. The active entries are scheduled and have already started a life period.
Number of pending Entries	Number of entries that are in pending state. The pending entries have a start-time scheduled in the future. These entries either have not started the first life, or the entries are configured as recurring and completed one of its life.
Number of inactive Entries	Number of entries that are in the inactive state. The inactive entries do not have a start-time scheduled. Either the start-time has never been scheduled or life has expired. In addition, the entries are not configured as recurring.
Supported Operation Types	Types of operations that are supported by the system.
Number of configurable probes	Number of remaining entries that can be configured. The number is just an estimated value and it may vary over time according to the available resources.
SA Agent low memory water mark	Available memory for the minimum system below which the IP SLA feature does not configure any more operations.

## show ipsla history

To display the history collected for all IP SLA operations or for a specified operation, use the **show ipsla history** command in XR EXEC mode.

```
show ipsla history [operation-number]
```

<b>Syntax Description</b>	<i>operation-number</i> (Optional) Number of the IP SLA operation.
<b>Command Default</b>	None
<b>Command Modes</b>	XR EXEC mode

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** By default, history statistics are not collected. To have any data displayed by using the **show ipsla history** command, you must configure the history collection.

This table lists the response return values that are used in the **show ipsla history** command.

*Table 27: Response Return Values for the show ipsla history Command*

Code	Description
1	Okay
2	Disconnected
3	Over Threshold
4	Timeout
5	Busy
6	Not Connected
7	Dropped
8	Sequence Error
9	Verify Error
10	Application Specific

If the default tabular format is used, the response return description is displayed as code in the Sense column. The Sense field is always used as a return code.

Task ID	Task ID	Operations
	monitor	read

### Examples

The following sample output is from the **show ipsla history** command:

```
Router# show ipsla history 1
```

```
Point by point History
Multiple Lines per Entry
Line 1:
Entry      = Entry number
LifeI      = Life index
BucketI    = Bucket index
SampleI    = Sample index
SampleT    = Sample start time
CompT      = RTT (milliseconds)
```

**show ipsla mpls discovery vpn**

```

Sense = Response return code
Line 2 has the Target Address
Entry LifeI      BucketI      SampleI      SampleT      CompT      Sense      TargetAddr
1      0      0      0      1134419252539  9      1      192.0.2.6
1      0      1      0      1134419312509  6      1      192.0.2.6
1      0      2      0      1134419372510  6      1      192.0.2.6
1      0      3      0      1134419432510  5      1      192.0.2.6

```

This table describes the significant fields shown in the display.

**Table 28: show ipsla history Field Descriptions**

Field	Description
Entry number	Entry number.
LifeI	Life index.
BucketI	Bucket index.
SampleI	Sample index.
SampleT	Sample start time.
CompT	Completion time in milliseconds.
Sense	Response return code.
TargetAddr	IP address of intermediate hop device or destination device.

## show ipsla mpls discovery vpn

To display routing information relating to the BGP next-hop discovery database in the MPLS VPN network, use the **show ipsla mpls discovery vpn** command in XR EXEC mode.

```
show ipsla mpls discovery vpn
```

**Syntax Description** This command has no keywords or arguments.

**Command Default** No default behavior or values

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read

### Examples

The following sample output is from the **show ipsla mpls discovery vpn** command:

```
Router# show ipsla mpls discovery vpn

Next refresh after: 46 seconds

BGP next hop    Prefix          VRF             PfxCount
192.255.0.4     192.255.0.4/32 red              10
                192.255.0.4/32 blue             5
                192.255.0.4/32 green            7
192.255.0.5     192.255.0.5/32 red              5
                192.255.0.5/32 green            3
192.254.1.6     192.254.1.0/24 yellow           4
```

This table describes the significant fields shown in the display.

**Table 29: show ipsla mpls discovery vpn Field Descriptions**

Field	Description
BGP next hop	Identifier for the BGP next-hop neighbor.
Prefix	IPv4 Forward Equivalence Class (FEC) of the BGP next-hop neighbor to be used by the MPLS LSP ping or trace operation.
VRF	Names of the virtual routing and forwarding instances (VRFs) that contain routing entries for the specified BGP next-hop neighbor.
PfxCount	Count of the routing entries that participate in the VRF for the specified BGP next-hop neighbor.

## show ipsla mpls lsp-monitor lpd

To display LSP Path Discovery (LPD) operational status, use the **show ipsla mpls lsp-monitor lpd** command in XR EXEC mode.

```
show ipsla mpls lsp-monitor lpd { statistics [ group-ID | aggregated group-ID ] | summary group }
```

<b>statistics</b> <i>group-ID</i>	Displays statistics for the specified LPD group, including the latest LPD start time, return code, completion time, and paths.
<b>aggregated</b> <i>group-ID</i>	Displays the aggregated statistics of the LPD group.

## show ipsla mpls lsp-monitor lpd

<b>summary</b> <i>group- ID</i>	Displays the current LPD operational status, which includes LPD start time, return code, completion time, and all ECMP path information.
---------------------------------	--

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines** For the aggregated group ID, a maximum of two buckets are allowed.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read

**Examples**

The following sample output is from the **show ipsla mpls lsp-monitor lpd statistics** command:

```
Router# show ipsla mpls lsp-monitor lpd statistics 10001

Group ID: 100001
  Latest path discovery start time      : 00:41:01.129 UTC Sat Dec 10 2005
  Latest path discovery return code    : OK
  Latest path discovery completion time (ms): 3450
  Completion Time Values:
    NumOfCompT: 1      CompTMin: 3450      CompTMax : 3450      CompTAvg: 3450
  Number of Paths Values:
    NumOfPaths: 10    MinNumOfPaths: 10    MaxNumOfPaths: 10
```

This table describes the significant fields shown in the display.

**Table 30: show ipsla mpls lsp-monitor lpd statistics Field Descriptions**

<b>Field</b>	<b>Description</b>
Group ID	LPD group ID number.
Latest path discovery start time	LPD start time.
Latest path discovery return code	LPD return code.
Latest path discovery completion time	LPD completion time.
Completion Time Values	Completion time values, consisting of Number of Completion Time samples and Minimum Completion Time.
Number of Paths Values	Number of paths values, consisting of Minimum number of paths and Maximum number of paths.

## show ipsla mpls lsp-monitor scan-queue

To display information about BGP next-hop addresses that are waiting to be added to or deleted from the MPLS label switched path (LSP) monitor instance, use the **show ipsla mpls lsp-monitor scan-queue** command in XR EXEC mode.

```
show ipsla mpls lsp-monitor scan-queue [monitor-id]
```

### Syntax Description

*monitor-id* (Optional) Number of the IP SLA MPLS LSP monitor instance.

### Command Default

None

### Command Modes

XR EXEC mode

### Command History

Release	Modification
Release 7.3.2	This command was introduced.

### Usage Guidelines

If the *monitor-id* argument is not specified, the scan-queue is displayed for all MPLS LSP monitor instances.

### Task ID

Task ID	Operations
monitor	read

### Examples

The following sample output is from the **show ipsla mpls lsp-monitor scan-queue** command:

```
Router# show ipsla mpls lsp-monitor scan-queue 1

IPSLA MPLS LSP Monitor : 1

Next scan Time after      : 23 seconds
Next Delete scan Time after: 83 seconds

BGP Next hop   Prefix           Add/Delete?
192.255.0.2    192.255.0.2/32    Add
192.255.0.3    192.255.0.5/32    Delete
```

This table describes the significant fields shown in the display.

**Table 31: show ipsla responder statistics port Field Descriptions**

Field	Description
IPSLA MPLS LSP Monitor	Monitor identifier.
Next scan Time after	Amount of time before the MPLS LSP monitor instance checks the scan queue for adding BGP next-hop neighbors. At the start of each scan time, IP SLA operations are created for all newly discovered neighbors.

Field	Description
Next delete Time after	Amount of time left before the MPLS LSP monitor instance checks the scan queue for deleting BGP next-hop neighbors. At the start of each delete scan time, IP SLAs operations are deleted for neighbors that are no longer valid.
BGP next hop	Identifier for the BGP next-hop neighbor.
Prefix	IPv4 Forward Equivalence Class (FEC) of the BGP next-hop neighbor to be used.
Add/Delete	Indicates that the specified BGP next-hop neighbor will be added or removed.

## show ipsla mpls lsp-monitor summary

To display the list of operations that have been created automatically by the specified MPLS LSP monitor (MPLSLM) instance, use the **show ipsla mpls lsp-monitor summary** command in XR EXEC mod.

```
show ipsla mpls lsp-monitor summary [ monitor-id [ group [ group id ] ] ]
```

Syntax Description	
<i>monitor-id</i>	(Optional) Displays a list of LSP group, ping, and trace operations created automatically by the specified MPLSLM instance.
<b>group</b> <i>group-id</i>	(Optional) Displays the ECMP LSPs found through ECMP path discovery within the specified LSP group.

**Command Default** None

**Command Modes** XR EXEC mod

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** The **show ipsla mpls lsp-monitor summary** command shows the list of LSP operations that were created automatically by the specified MPLS LSP monitor instance. It also shows the current status and the latest operation time of each operation.

If the *monitor-id* argument is not specified, the list of operations is displayed for all MPLS LSP monitor instances.

The **show ipsla mpls lsp-monitor summary** command with the **group** option shows the list of ECMP paths that are found automatically by the specified LSP path discovery (LPD). In addition, this command with option shows the current status; the number of successes, failures; the most recent round trip time (RTT); and the latest operation time of each path.

If the *group-id* argument is not specified, the list of paths is displayed for all operations created by the MPLS LSP monitor instance.

Task ID	Task ID	Operations
	monitor	read

### Examples

The following sample output is from the **show ipsla mpls lsp-monitor summary** command. This output shows a pending status when an MPLS LSP ping operation is waiting to receive the timeout response from the LSP Verification (LSPV) process.

```
Router# show ipsla mpls lsp-monitor summary 1

MonID Op/GrpID TargetAddress      Status Latest Operation Time
1      100001  192.255.0.4/32    up     19:33:37.915 EST Mon Feb 28 2005
1      100002  192.255.0.5/32    down   19:33:47.915 EST Mon Feb 28 2005
1      100003  192.255.0.6/32    pending 19:33:35.915 EST Mon Feb 28 2005
```

The following sample output shows that a down status is displayed after a timeout response is received.

```
Router# show ipsla mpls lsp-monitor summary 1

MonID Op/GrpID TargetAddress      Status Latest Operation Time
1      100001  193.100.0.1/32    down   12:47:16.417 PST Tue Oct 23 2007
1      100002  193.100.0.2/32    partial 12:47:22.418 PST Tue Oct 23 2007
1      100003  193.100.0.3/32    partial 12:47:22.429 PST Tue Oct 23 2007
1      100004  193.100.0.4/32    down   12:47:16.429 PST Tue Oct 23 2007
1      100005  193.100.0.5/32    down   12:47:21.428 PST Tue Oct 23 2007
```

This table describes the significant fields shown in the display.

**Table 32: show ipsla mpls lsp-monitor summary Field Descriptions**

Field	Description
MonID	Monitor identifier.
Op/GrpID	Operation identifiers that have been created by this MPLS LSP monitor instance.
TargetAddress	IPv4 Forward Equivalence Class (FEC) to be used by this operation.
Status	Status of the paths. Values can be as follows: <ul style="list-style-type: none"> <li>• up—Indicates that the latest operation cycle was successful.</li> <li>• down—Indicates that the latest operation cycle was not successful.</li> <li>• pending—Indicates that the latest operation cycle is waiting for an LSP ping or trace response.</li> </ul>
Latest Operation Time	Time the latest operation cycle was issued.

The following sample output is from the **show ipsla mpls lsp-monitor summary group** command:

```
Router# show ipsla mpls lsp-monitor summary 1 group 100001

GrpID LSP-Selector Status Failure Success RTT Latest Operation Time
100001 127.0.0.13 up 0 78 32 20:11:37.895 EST Feb 28 2005
100001 127.0.0.15 retry 1 77 0 20:11:37.995 EST Feb 28 2005
```

## show ipsla responder statistics

```

100001 127.0.0.16      up      0       78      32      20:11:38.067 EST Feb 28 2005
100001 127.0.0.26      up      0       78      32      20:11:38.175 EST Feb 28 2005

```

This table describes the significant fields shown in the display.

**Table 33: show ipsla mpls lsp-monitor summary group Field Descriptions**

Field	Description
GrpID	Group identifier that has been created by this MPLS LSP monitor instance.
LSP-Selector	LSP selector address.
Status	Status of the paths. Values can be as follows: <ul style="list-style-type: none"> <li>• up—Indicates that all the paths were successful.</li> <li>• down—Indicates that all the paths were not successful.</li> <li>• partial—Indicates that only some paths were successful.</li> <li>• unknown—Indicates that some (or all) of the paths did not complete a single LSP echo request so the group status could not be identified.</li> </ul>
Failure	Number of failures.
Success	Number of successes.
RTT	Round Trip Time (RTT) in milliseconds of the latest LSP echo request for the path.
Latest Operation Time	Time the latest operation cycle was issued for the path.

## show ipsla responder statistics

To display the number of probes that are received or handled by the currently active ports on the responder, use the **show ipsla responder statistics ports** command in XR EXEC mode.

```
show ipsla responder statistics {all | permanent} ports
```

<b>Syntax Description</b>	<b>all</b>	Port statistics is displayed for all ports.
	<b>permanent</b>	Port statistics is displayed only for permanent ports.
<b>Command Default</b>	None	
<b>Command Modes</b>	XR EXEC mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.
<b>Usage Guidelines</b>	The output of the <b>show ipsla responder statistics port</b> command is available only for specific intervals of time in which only nonpermanent ports are being used at the responder. The reason is that the responder closes	

the nonpermanent ports after each operation cycle. However, if both permanent and nonpermanent ports are used, the output always contains rows for the permanent ports. The rows for the nonpermanent ports are displayed only if those nonpermanent ports are enabled at the instant the command is issued.

Task ID	Task ID	Operations
	monitor	read

### Examples

The following sample output is from the **show ipsla responder statistics port** command:

```
Router# show ipsla responder statistics all port

Port Statistics
-----

Local Address  Port   Port Type  Probes   Drops   CtrlProbes  Discard
172.16.5.1    3001   Permanent  0         0        0
172.16.5.1    10001  Permanent  728160   0        24272
172.16.5.5    8201   Dynamic    12132    0        12135       ON
172.16.5.1    4441   Dynamic    207216   0        3641        ON
```

This table describes the significant fields shown in the display.

**Table 34: show ipsla responder statistics port Field Descriptions**

Field	Description
Local Address	Local IP address of the responder device used to respond to IPSLA probes.
Port	UDP socket local to the responder device used to respond to IPSLA probes.
Port Type	It could be "permanent" or "dynamic"; depends upon whether a permanent port configuration is done.
Probes	Number of probe packets the responder has received.
Drops	Number of probes dropped.
CtrlProbes	Number of control packets the responder has received.
Discard	If the state is ON, the responder will not respond to probes.

## show ipsla statistics

To display the operational data and the latest statistics for the IP SLA operation in tabular format, use the **show ipsla statistics** command in XR EXEC mode.

```
show ipsla statistics [operation-number]
```

## show ipsla statistics

---

**Syntax Description**     *operation-number* (Optional) Operation for which the latest statistics are to be displayed. Range is 1 to 2048.

---

**Command Default**     None

**Command Modes**     XR EXEC mode

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

---

**Usage Guidelines**     No specific guidelines impact the use of this command.

**Task ID**

Task ID	Operations
monitor	read

---

**Examples**

The output of the **show ipsla statistics** command varies depending on the operation type.

The following sample output is from the **show ipsla statistics** command for an ICMP echo operation:

```
Router# show ipsla statistics 100025

Entry number: 100025
  Modification time: 00:36:58.602 UTC Sat Dec 10 2007
  Start time       : 00:36:58.605 UTC Sat Dec 10 2007
  Number of operations attempted: 5
  Number of operations skipped : 0
  Current seconds left in Life : Forever
  Operational state of entry   : Active
  Connection loss occurred    : FALSE
  Timeout occurred           : FALSE
  Latest RTT (milliseconds)   : 3
  Latest operation start time  : 00:41:01.129 UTC Sat Dec 10 2007
  Latest operation return code : OK
  RTT Values:
    RTTAvg : 71          RTTMin: 71          RTTMax : 71
    NumOfRTT: 1         RTTSum: 71          RTTSum2: 729
  Path Information:
    Path Path LSP           Outgoing   Nexthop    Downstream
    Idx  Sense Selector      Interface  Address    Label Stack
    1    1    127.0.0.13            PO0/2/5/0  192.12.1.2  38
    2    1    127.0.0.6              PO0/2/5/0  192.12.1.2  38
    3    1    127.0.0.1              PO0/2/5/0  192.12.1.2  38
    4    1    127.0.0.2              PO0/2/5/0  192.12.1.2  38
    5    1    127.0.0.13            PO0/2/5/1  192.12.2.2  38
    6    1    127.0.0.6              PO0/2/5/1  192.12.2.2  38
    7    1    127.0.0.1              PO0/2/5/1  192.12.2.2  38
    8    1    127.0.0.2              PO0/2/5/1  192.12.2.2  38
    9    1    127.0.0.4              Gi0/2/0/0  192.15.1.2  38
    10   1    127.0.0.5              Gi0/2/0/0  192.15.1.2  38
```

This table describes the significant fields shown in the display.

**Table 35: show ipsla statistics Field Descriptions**

Field	Description
Entry number	Entry number.
Modification time	Latest time the operation was modified.
Start time	Time the operation was started.
Number of operations attempted	Number of operation cycles that were issued.
Number of operations skipped	Number of operation cycles that were not issued because one of the cycles extended over the configured time interval.
Current seconds left in Life	Time remaining until the operation stops execution.
Operational state of entry	State of the operation, such as active state, pending state, or inactive state.
Connection loss occurred	Whether or not a connection-loss error happened.
Timeout occurred	Whether or not a timeout error happened.
Latest RTT (milliseconds)	Value of the latest RTT sample.
Latest operation start time	Time the latest operation cycle was issued.
Latest operation return code	Return code of the latest operation cycle
RTTAvg	Average RTT value that is observed in the last cycle.
RTTMin	Minimum RTT value that is observed in the last cycle.
RTTMax	Maximum RTT value that is observed in the last cycle.
NumOfRTT	Number of successful round trips.
RTTSum	Sum of all successful round-trip values in milliseconds.
RTTSum2	Sum of squares of the round-trip values in milliseconds.
Path Idx	Path index number.
Path Sense	Response return code for the path.
LSP Selector	LSP selector address of the path.
Outgoing Interface	Outgoing interface of the path.
Nexthop Address	Next hop address of the path.
Downstream Label Stack	MPLS label stacks of the path.

# show ipsla statistics aggregated

To display the hourly statistics for all the IP SLA operations or specified operation, use the **show ipsla statistics aggregated** command in XR EXEC mode.

```
show ipsla statistics aggregated [detail] [operation-number]
```

<b>Syntax Description</b>	<b>detail</b>	Displays detailed information.
	<i>operation-number</i>	(Optional) Number of IP SLA operations. Range is 1 to 2048.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines** The **show ipsla statistics aggregated** command displays information such as the number of failed operations and the reason for failure. Unless you configured a different amount of time for the **buckets** command (**statistics** command with **hourly** keyword), the **show ipsla statistics aggregated** command displays the information collected over the past two hours.

For one-way delay and jitter operations to be computed for UDP jitter operations, the clocks on local and target devices must be synchronized using NTP or GPS systems. If the clocks are not synchronized, one-way measurements are discarded. If the sum of the source to destination (SD) and the destination to source (DS) values is not within 10 percent of the round-trip time, the one-way measurement values are assumed to be faulty, and are discarded.

<b>Task ID</b>	<b>Task</b>	<b>Operations</b>
	ID	
	monitor	read

**Examples** The output of the **show ipsla statistics aggregated** command varies depending on operation type. The following sample output shows the aggregated statistics for UDP echo operation from the **show ipsla statistics aggregated** command:

```
Router# show ipsla statistics aggregated 1

Entry number: 1
Hour Index: 0
  Start Time Index: 21:02:32.510 UTC Mon Dec 12 2005
  Number of Failed Operations due to a Disconnect      : 0
  Number of Failed Operations due to a Timeout         : 0
  Number of Failed Operations due to a Busy           : 0
  Number of Failed Operations due to a No Connection  : 0
  Number of Failed Operations due to an Internal Error: 0
```

```

Number of Failed Operations due to a Sequence Error : 0
Number of Failed Operations due to a Verify Error   : 0
RTT Values:
  RTTAvg   : 6           RTTMin: 4           RTTMax : 38
  NumOfRTT: 36          RTTSum: 229          RTTSum2: 2563

```

The following sample output is from the **show ipsla statistics aggregated** command in which operation 10 is a UDP jitter operation:

```

Router# show ipsla statistics aggregated 10

Entry number: 10
Hour Index: 0
Start Time Index: 00:35:07.895 UTC Thu Mar 16 2006
Number of Failed Operations due to a Disconnect      : 0
Number of Failed Operations due to a Timeout        : 0
Number of Failed Operations due to a Busy           : 0
Number of Failed Operations due to a No Connection  : 0
Number of Failed Operations due to an Internal Error: 0
Number of Failed Operations due to a Sequence Error : 0
Number of Failed Operations due to a Verify Error   : 0
RTT Values:
  RTTAvg   : 14           RTTMin: 2           RTTMax : 99
  NumOfRTT: 70           RTTSum: 1034          RTTSum2: 60610
Packet Loss Values:
  PacketLossSD      : 0           PacketLossDS: 0
  PacketOutOfSequence: 0         PacketMIA   : 0
  PacketLateArrival : 0
  Errors            : 0           Busies      : 0
Jitter Values :
  MinOfPositivesSD: 1           MaxOfPositivesSD: 19
  NumOfPositivesSD: 17          SumOfPositivesSD: 65
  Sum2PositivesSD : 629
  MinOfNegativesSD: 1           MaxOfNegativesSD: 16
  NumOfNegativesSD: 24          SumOfNegativesSD: 106
  Sum2NegativesSD : 914
  MinOfPositivesDS: 1           MaxOfPositivesDS: 7
  NumOfPositivesDS: 17          SumOfPositivesDS: 44
  Sum2PositivesDS : 174
  MinOfNegativesDS: 1           MaxOfNegativesDS: 8
  NumOfNegativesDS: 24          SumOfNegativesDS: 63
  Sum2NegativesDS : 267
Interarrival jitterout: 0           Interarrival jitterin: 0
One Way Values :
  NumOfOW: 0
  OWMinSD : 0           OWMaxSD: 0           OWSumSD: 0
  OWSum2SD: 0
  OWMinDS : 0           OWMaxDS: 0           OWSumDS: 0

```

This table describes the significant fields shown in the display.

**Table 36: show ipsla statistics aggregated Field Descriptions**

Field	Description
Busies	Number of times that the operation cannot be started because the previously scheduled run was not finished.
Entry Number	Entry number.
Hop in Path Index	Hop in path index.

Field	Description
Errors	Number of internal errors.
Jitter Values	Jitter statistics appear on the specified lines. Jitter is defined as interpacket delay variance.
NumOfJitterSamples	Number of jitter samples that are collected. The number of samples are used to calculate the jitter statistics.
Number of Failed Operations due to a Disconnect	Number of failed operations due to a disconnect.
Number of Failed Operations due to a Timeout	Number of failed operations due to a timeout.
Number of Failed Operations due to a Busy	Number of failed operations due to a busy error.
Number of Failed Operations due to a No Connection	Error that refers to the case in which the control connection cannot be established.
Number of Failed Operations due to an Internal Error	Number of failed operations due to an internal error.
Number of Failed Operations due to a Sequence Error	Number of failed operations due to a sequence error.
Number of Failed Operations due to a Verify Error	Number of failed operations due to a verify error.
MaxOfNegativesSD	Maximum negative jitter values from the source to the destination. The absolute value is given.
MaxOfPositivesSD	Maximum jitter values from the source to the destination in milliseconds.
MaxOfPositivesDS	Maximum jitter values from the destination to the source in milliseconds.
MaxOfNegativesDS	Maximum negative jitter values from destination-to-source. The absolute value is given.
MinOfPositivesDS	Minimum jitter values from the destination to the source in milliseconds.
MinOfNegativesSD	Minimum negative jitter values from the source to the destination. The absolute value is given.
MinOfPositivesSD	Minimum jitter values from the source to the destination in milliseconds.
MinOfNegativesDS	Minimum negative jitter values from the destination to the source. The absolute value is given.

Field	Description
NumOfOW	Number of successful one-way time measurements.
NumOfNegativesDS	Number of jitter values from the destination to the source that are negative; for example, network latency decreases for two consecutive test packets.
NumOfNegativesSD	Number of jitter values from the source to the destination that are negative; for example, network latency decreases for two consecutive test packets.
NumOfPositivesDS	Number of jitter values from the destination to the source that are positive; for example, network latency increases for two consecutive test packets.
NumOfPositivesSD	Number of jitter values from the source to the destination that are positive; for example, network latency increases for two consecutive test packets.
NumOfRTT	Number of successful round trips.
One Way Values	One-way measurement statistics appear on the specified lines. One Way (OW) values are the amount of time that it took the packet to travel from the source router to the target router or from the target router to the source router.
OWMaxDS	Maximum time from the destination to the source.
OWMaxSD	Maximum time from the source to the destination.
OWMinDS	Minimum time from the destination to the source.
OWMinSD	Minimum time from the source to the destination.
OWSumDS	Sum of one-way delay values from the destination to the source.
OWSumSD	Sum of one-way delay values from the source to the destination.
OWSum2DS	Sum of squares of one-way delay values from the destination to the source.
OWSum2SD	Sum of squares of one-way delay values from the source to the destination.
PacketLateArrival	Number of packets that arrived after the timeout.
PacketLossDS	Number of packets lost from the destination to the source (DS).
PacketLossSD	Number of packets lost from the source to the destination (SD).
PacketMIA	Number of packets lost in which the SD direction or DS direction cannot be determined.
PacketOutOfSequence	Number of packets that are returned out of order.

Field	Description
Path Index	Path index.
Port Number	Target port number.
RTTSum	Sum of all successful round-trip values in milliseconds.
RTTSum2	Sum of squares of the round-trip values in milliseconds.
RTT Values	Round-trip time statistics appear on the specified lines.
Start Time	Start time, in milliseconds.
Start Time Index	Statistics that are aggregated for over 1-hour intervals. The value indicates the start time for the 1-hour interval that is displayed.
SumOfPositivesDS	Sum of the positive jitter values from the destination to the source.
SumOfPositivesSD	Sum of the positive jitter values from the source to the destination.
SumOfNegativesDS	Sum of the negative jitter values from the destination to the source.
SumOfNegativesSD	Sum of the negative jitter values from the source to the destination.
Sum2PositivesDS	Sum of squares of the positive jitter values from the destination to the source.
Sum2PositivesSD	Sum of squares of the positive jitter values from the source to the destination.
Sum2NegativesDS	Sum of squares of the negative jitter values from the destination to the source.
Sum2NegativesSD	Sum of squares of the negative jitter values from the source to the destination.
Target Address	Target IP address.

The output of the **show ipsla statistics aggregated detail** command varies depending on operation type. The following sample output is from the **show ipsla statistics aggregated detail** command in tabular format, when the output is split over multiple lines:

```
Router# show ipsla statistics aggregated detail 2

Captured Statistics
      Multiple Lines per Entry
Line1:
Entry      = Entry number
StartT     = Start time of entry (hundredths of seconds)
Pth        = Path index
Hop        = Hop in path index
Dst        = Time distribution index
Comps      = Operations completed
SumCmp     = Sum of RTT (milliseconds)

Line2:
```

```

SumCmp2H = Sum of RTT squared high 32 bits (milliseconds)
SumCmp2L = Sum of RTT squared low 32 bits (milliseconds)
TMax     = RTT maximum (milliseconds)
TMin     = RTT minimum (milliseconds)

```

```

Entry StartT      Pth Hop Dst Comps      SumCmp
      SumCmp2H    SumCmp2L  TMax  TMin
2      1134423910701 1  1  0  12      367
      0              1231      6      6
2      1134423851116 1  1  1  2      129
      0              2419      41     41
2      1134423070733 1  1  2  1      101
      0              1119      16     16
2      0              1  1  3  0      0
      0              0          0      0

```

This table describes the significant fields shown in the display.

**Table 37: show ipsla statistics aggregated detail Field Descriptions**

Field	Description
Entry	Entry number.
StartT	Start time of entry, in hundredths of seconds.
Pth	Path index.
Hop	Hop in path index.
Dst	Time distribution index.
Comps	Operations completed.
SumCmp	Sum of completion times, in milliseconds.
SumCmp2L	Sum of completion times squared low 32 bits, in milliseconds.
SumCmp2H	Sum of completion times squared high 32 bits, in milliseconds.
TMax	Completion time maximum, in milliseconds.
TMin	Completion time minimum, in milliseconds.

The following sample output is from the **show ipsla statistics aggregated** command when a path discovery operation is enabled. Data following the hourly index is aggregated for all paths in the group during the given hourly interval.

```
Router# show ipsla statistics aggregated 100041
```

```
Entry number: 100041
```

```
Hour Index: 13
```

```
<The following data after the given hourly index is aggregated for all paths in the group
during the given hourly interval.>
```

```

Start Time Index: 12:20:57.323 UTC Tue Nov 27 2007
Number of Failed Operations due to a Disconnect      : 0

```

## show ipsla statistics aggregated

```

Number of Failed Operations due to a Timeout      : 249
Number of Failed Operations due to a Busy        : 0
Number of Failed Operations due to a No Connection : 0
Number of Failed Operations due to an Internal Error: 0
Number of Failed Operations due to a Sequence Error : 0
Number of Failed Operations due to a Verify Error  : 0
<end>
RTT Values:
  RTTAvg : 21          RTTMin: 19          RTTMax : 73
  NumOfRTT: 2780      RTTSum: 59191      RTTSum2: 1290993

<The following data for LSP path information is available after path discovery is enabled.>

```

```

Path Information:
  Path Path LSP           Outgoing      Nexthop      Downstream
  Idx  Sense Selector      Interface     Address      Label Stack
  1    1    127.0.0.1          Gi0/4/0/0   192.39.1.1  677
  2    1    127.0.0.1          Gi0/4/0/0.1 192.39.2.1  677
  3    1    127.0.0.1          Gi0/4/0/0.2 192.39.3.1  677
  4    1    127.0.0.1          Gi0/4/0/0.3 192.39.4.1  677
  5    1    127.0.0.8          Gi0/4/0/0   192.39.1.1  677
  6    1    127.0.0.8          Gi0/4/0/0.1 192.39.2.1  677
  7    1    127.0.0.8          Gi0/4/0/0.2 192.39.3.1  677
  8    1    127.0.0.8          Gi0/4/0/0.3 192.39.4.1  677
<end>
Hour Index: 14

```

```

Start Time Index: 13:20:57.323 UTC Tue Nov 27 2007
Number of Failed Operations due to a Disconnect   : 0
Number of Failed Operations due to a Timeout     : 122
Number of Failed Operations due to a Busy        : 0
Number of Failed Operations due to a No Connection : 0
Number of Failed Operations due to an Internal Error: 0
Number of Failed Operations due to a Sequence Error : 0
Number of Failed Operations due to a Verify Error  : 0
RTT Values:
  RTTAvg : 21          RTTMin: 19          RTTMax : 212
  NumOfRTT: 3059      RTTSum: 65272      RTTSum2: 1457612

```

```

Path Information:
  Path Path LSP           Outgoing      Nexthop      Downstream
  Idx  Sense Selector      Interface     Address      Label Stack
  1    1    127.0.0.1          Gi0/4/0/0   192.39.1.1  677
  2    1    127.0.0.1          Gi0/4/0/0.1 192.39.2.1  677
  3    1    127.0.0.1          Gi0/4/0/0.2 192.39.3.1  677
  4    1    127.0.0.1          Gi0/4/0/0.3 192.39.4.1  677
  5    1    127.0.0.8          Gi0/4/0/0   192.39.1.1  677
  6    1    127.0.0.8          Gi0/4/0/0.1 192.39.2.1  677
  7    1    127.0.0.8          Gi0/4/0/0.2 192.39.3.1  677
  8    1    127.0.0.8          Gi0/4/0/0.3 192.39.4.1  677

```

This table describes the significant fields shown in the display.

**Table 38: show ipsla statistics aggregated (with Path Discovery enabled) Field Descriptions**

Field	Description
Entry Number	Entry number.
Start Time Index	Start time.
Number of Failed Operations due to a Disconnect	Number of failed operations due to a disconnect.

Field	Description
Number of Failed Operations due to a Timeout	Number of failed operations due to a timeout.
Number of Failed Operations due to a Busy	Number of failed operations due to a busy error.
Number of Failed Operations due to a No Connection	Error that refers to the case in which the control connection cannot be established.
Number of Failed Operations due to an Internal Error	Number of failed operations due to an internal error.
Number of Failed Operations due to a Sequence Error	Number of failed operations due to a sequence error.
Number of Failed Operations due to a Verify Error	Number of failed operations due to a verify error.
RTT Values	Round-trip time statistics appear on the specified lines.
RTT Min/Avg/Max	Maximum values of the RTT that are observed in the latest cycle (*).
NumOfRTT	Number of successful round trips.
RTT Sum	Sum of all successful round-trip values, in milliseconds.
RTT Sum2	Sum of squares of the round-trip values, in milliseconds.
RTT Min/Avg/Max	Maximum values of the RTT that are observed in the latest cycle (*).
NumOfRTT	Number of successful round trips.
Path Idx	Path index number.
Path Sense	Response return code for the path.
LSP Selector	LSP selector address of the path.
Outgoing Interface	Outgoing interface name of the path.
Nexthop Address	Next hop address of the path.
Downstream Label Stack	MPLS label stacks of the path.

## show ipsla statistics enhanced aggregated

To display the enhanced history statistics for all collected enhanced history buckets for the specified IP SLA operation, use the **show ipsla statistics enhanced aggregated** command in XR EXEC mode.

```
show ipsla statistics enhanced aggregated [operation-number] [interval seconds]
```

**show ipsla statistics enhanced aggregated**

<b>Syntax Description</b>	<i>operation-number</i> (Optional) Operation number for which to display the enhanced history distribution statistics.
	<b>interval</b> <i>seconds</i> (Optional) Specifies the aggregation interval in seconds for which to display the enhanced history distribution statistics.

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	XR EXEC mode
----------------------	--------------

<b>Command History</b>	<b>Release</b> <b>Modification</b>
	Release 7.3.2 This command was introduced.

<b>Usage Guidelines</b>	The <b>show ipsla statistics enhanced aggregated</b> command displays data for each bucket of enhanced history data shown individually; for example, one after the other. The number of buckets and the collection interval is set using the <b>interval</b> keyword, <i>seconds</i> argument, <b>buckets</b> keyword, and <i>number-of-buckets</i> argument.
-------------------------	---

<b>Task ID</b>	<b>Task</b> <b>Operations</b>
	<b>ID</b>
	monitor read

**Examples**

The output of the **show ipsla statistics enhanced aggregated** command varies depending on the operation type.

The following sample output is from the **show ipsla statistics enhanced aggregated** command for the UDP echo operation:

```
Router# show ipsla statistics enhanced aggregated 20

Entry number: 20
Interval : 300 seconds
Bucket : 1 (0 - 300 seconds)
  Start Time Index: 00:38:14.286 UTC Thu Mar 16 2006
  Number of Failed Operations due to a Disconnect      : 0
  Number of Failed Operations due to a Timeout        : 0
  Number of Failed Operations due to a Busy           : 0
  Number of Failed Operations due to a No Connection  : 0
  Number of Failed Operations due to an Internal Error: 0
  Number of Failed Operations due to a Sequence Error : 0
  Number of Failed Operations due to a Verify Error   : 0
  RTT Values:
    RTTAvg  : 2          RTTMin: 2          RTTMax : 5
    NumOfRTT: 5          RTTSum: 13         RTTSum2: 41
Bucket : 2 (300 - 600 seconds)
  Start Time Index: 00:43:12.747 UTC Thu Mar 16 2006
  Number of Failed Operations due to a Disconnect      : 0
  Number of Failed Operations due to a Timeout        : 0
  Number of Failed Operations due to a Busy           : 0
  Number of Failed Operations due to a No Connection  : 0
  Number of Failed Operations due to an Internal Error: 0
  Number of Failed Operations due to a Sequence Error : 0
  Number of Failed Operations due to a Verify Error   : 0
```

```

RTT Values:
  RTTAvg   : 2          RTTMin: 2          RTTMax : 2
  NumOfRTT: 1          RTTSum: 2         RTTSum2: 4

```

This table describes the significant fields shown in the display.

**Table 39: show ipsla statistics enhanced aggregated Field Descriptions**

Field	Description
Entry Number	Entry number.
Interval	Multiple of the frequency of the operation. The Enhanced interval field defines the interval in which statistics displayed by the <b>show ipsla statistics enhanced aggregated</b> command are aggregated. This field must be configured so that the enhanced aggregated statistics are displayed.
Bucket	Bucket index.
Start Time Index	Statistics that are aggregated depend on the interval configuration mode. The value depends on the interval configuration that is displayed.
RTT Values	Round-trip time statistics appear on the specified lines.
RTT Min/Avg/Max	Maximum values of the RTT that are observed in the latest cycle (*).
NumOfRTT	Number of successful round trips.
RTT Sum	Sum of all successful round-trip values, in milliseconds.
RTT Sum2	Sum of squares of the round-trip values, in milliseconds.
Number of Failed Operations due to a Disconnect	Number of failed operations due to a disconnect.
Number of Failed Operations due to a Timeout	Number of failed operations due to a timeout.
Number of Failed Operations due to a Busy	Number of failed operations due to a busy error.
Number of Failed Operations due to a No Connection	Error that refers to the case in which the control connection cannot be established.
Number of Failed Operations due to an Internal Error	Number of failed operations due to an internal error.
Number of Failed Operations due to a Sequence Error	Number of failed operations due to a sequence error.
Number of Failed Operations due to a Verify Error	Number of failed operations due to a verify error.

## show ipsla twamp connection

To display the Two-Way Active Management Protocol (TWAMP) connections, use the **show ipsla twamp connection** command in the XR EXEC mode.

**show ipsla twamp connection** [ **detail** *source-ip* | **requests** ]

<b>Syntax Description</b>	<b>detail</b> <i>source-ip</i> Displays details of the connection for a specified source-ip.
	<b>requests</b> Displays request details.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operation</b>
	ip-services	read

### Example

This example shows how to run the **show ipsla twamp connection** command with the **requests** keyword:

```
Router# show ipsla twamp connection requests
```

## source address

To identify the address of the source device, use the **source address** command in the appropriate configuration mode. To use the best local address, use the **no** form of this command.

**source address** *ipv4-address*  
**no source address**

**Syntax Description** *ipv4-address* IP address or hostname of the source device.

**Command Default** IP SLA finds the best local address to the destination and uses it as the source address.

**Command Modes** IP SLA UDP echo configuration

IP SLA UDP jitter configuration  
 IP SLA ICMP path-jitter configuration  
 IP SLA ICMP path-echo configuration  
 IP SLA ICMP echo configuration  
 IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to designate an IP address for the **source address** command in IP SLA UDP jitter configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# source address 192.0.2.9
```

## source port

To identify the port of the source device, use the **source port** command in the appropriate configuration mode. To use the unused port number, use the **no** form of this command.

```
source port port
no source port
```

Syntax Description	port	Identifies the port number of the source device. Range is 1 to 65535.
	port	

**Command Default** IP SLA uses an unused port that is allocated by system.

Command History	Releas	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines**

The **source port** command is not supported to configure ICMP operations; it is supported only to configure UDP operations.

The specified source port should not be used in other IPSLA operations configured on the same source IP address and source VRF.

**Task ID**

Task ID	Task	Operations
	monitor	read, write

**Examples**

The following example shows how to designate a port for the **source port** command in IP SLA UDP jitter configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# source port 11111
```

## start-time

To determine the time when the operation or MPLS LSP monitor instance starts, use the **start-time** command in the appropriate configuration mode. To stop the operation and place it in the default state, use the **no** form of this command.

**start-time** { *hh* : *mm* : *ss* [ *day* | *month* *day* *year* ] | **after** *hh* : *mm* : *ss* | **now** | **pending** }  
**no start-time**

**Syntax Description**

<i>hh:mm:ss</i>	Absolute start time in hours, minutes, and seconds. You can use the 24-hour clock notation. For example, the <b>start-time</b> <i>01:02</i> is defined as 1:02 am, or <b>start-time</b> <i>13:01:30</i> is defined as start at 1:01 pm. and 30 seconds. The current day is used; unless, you specify a <i>month</i> and <i>day</i> .
<i>month</i>	(Optional) Name of the month to start the operation. When you use the <i>month</i> argument, you are required to specify a day. You can specify the month by using the full English name or the first three letters of the month.
<i>day</i>	(Optional) Number of the day, in the range of 1 to 31, to start the operation. In addition, you must specify a month.
<i>year</i>	(Optional) Year in the range of 1993 to 2035.
<b>after</b> <i>hh:mm:ss</i>	Specifies that the operation starts at <i>hh</i> hours, <i>mm</i> minutes, and <i>ss</i> seconds after the <b>start-time</b> command is used.
<b>now</b>	Specifies that the operation should start immediately.
<b>pending</b>	Specifies that no information is collected. The default value is the <b>pending</b> keyword.

**Command Default** If a month and day are not specified, the current month and day are used.

**Command Modes** IP SLA schedule configuration  
IP SLA MPLS LSP monitor schedule configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** If the **start-time** command is used in IP SLA operation mode, it configures the start time for the specific operation being configured. If the **start-time** command is used in IP SLA MPLS LSP monitor mode, it configures the start time for all monitor instances associated with the monitored provider edge (PE) routers.

Task ID	Task ID	Operations
	monitor	read, write

## Examples

The following example shows how to use the **start-time** command option for the schedule operation:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# schedule operation 1
Router(config-ipsla-sched)# start-time after 01:00:00
```

The following example shows how to use the **start-time** command in IP SLA MPLS LSP monitor schedule configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# schedule monitor 1
Router(config-ipsla-mplslm-sched)# start-time after 01:00:00
```

The following example shows how to use the **start-time** command and specify a year for a scheduled operation:

```
Router# configure
Router(config)# ipsla operation 2
Router(config-ipsla-op)# type icmp echo
Router(config-ipsla-icmp-echo)# destination address 192.0.2.9
Router(config-ipsla-icmp-echo)# exit
Router(config-ipsla-op)# exit
Router(config-ipsla)# schedule operation 2
Router(config-ipsla-sched)# start 20:0:0 february 7 2008
Router(config-ipsla-sched)#
```

# statistics

To set the statistics collection parameters for the operation, use the **statistics** command in the appropriate configuration mode. To remove the statistics collection or use the default value, use the **no** form of this command.

```
statistics { hourly | interval seconds }
no statistics { hourly | interval seconds }
```

<b>Syntax Description</b>	<b>hourly</b>	Sets the distribution for statistics configuration that is aggregated for over an hour.
	<b>interval seconds</b>	Collects statistics over a specified time interval. Interval (in seconds) over which to collect statistics. Range is 1 to 3600 seconds.
<b>Command Default</b>	None	
<b>Command Modes</b>	IP SLA operation UDP jitter configuration IP SLA MPLS LSP ping configuration IP SLA MPLS LSP trace configuration IP SLA MPLS LSP monitor ping configuration IP SLA MPLS LSP monitor trace configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.
<b>Usage Guidelines</b>	<p>The <b>statistics interval</b> command is not supported for the configuration of ICMP path-echo and ICMP path-jitter operations, nor for the configuration of MPLS LSP monitor instances.</p> <p>If the <b>statistics</b> command is used in IP SLA operation mode, it configures the statistics collection for the specific operation being configured. If the <b>statistics</b> command is used in IP SLA MPLS LSP monitor mode, it configures the statistics collection for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.</p>	
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write
<b>Examples</b>	<p>The following example shows how to set the number of hours in which statistics are maintained for the IP SLA UDP jitter operation for the <b>statistics</b> command:</p> <pre>Router# configure Router(config)# ipsla</pre>	

```
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# statistics hourly
Router(config-ipsla-op-stats)#
```

The following example shows how to collect statistics for a specified time interval, using the **statistics** command in an IP SLA UDP jitter operation:

```
Router# configure
Router(config)# ipsla operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# statistics interval 60
Router(config-ipsla-op-stats)#
```

The following example shows how to set the number of hours in which statistics are maintained for the IP SLA MPLS LSP monitor ping operation, using the **statistics** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# monitor 1
Router(config-ipsla-mplslm-def)# type mpls lsp ping
Router(config-ipsla-mplslm-lsp-ping)# statistics hourly
Router(config-ipsla-mplslm-stats)#
```

## tag (IP SLA)

To create a user-specified identifier for an IP SLA operation, use the **tag** command in the appropriate configuration mode. To unset the tag string, use the **no** form of this command.

```
tag [text]
no tag
```

<b>Syntax Description</b>	<i>text</i> (Optional) Specifies a string label for the IP SLA operation.
<b>Command Default</b>	No tag string is configured.
<b>Command Modes</b>	IP SLA UDP echo configuration IP SLA UDP jitter configuration IP SLA ICMP path-jitter configuration IP SLA ICMP path-echo configuration IP SLA ICMP echo configuration IP SLA MPLS LSP ping configuration IP SLA MPLS LSP trace configuration IP SLA MPLS LSP monitor ping configuration

IP SLA MPLS LSP monitor trace configuration

---

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

---

**Usage Guidelines**

If the **tag** command is used in IP SLA operation mode, it configures the user-defined tag string for the specific operation being configured. If the **tag** command is used in IP SLA MPLS LSP monitor mode, it configures the user-defined tag string for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

---

**Task ID**

Task ID	Operations
monitor	read, write

---

**Examples**

The following example shows how to use the **tag** command in IP SLA UDP jitter configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# tag ipsla
```

The following example shows how to use the **tag** command in IP SLA MPLS LSP monitor ping configuration mode:

```
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsml)# monitor 1
Router(config-ipsla-mplsml-def)# type mpls lsp ping
Router(config-ipsla-mplsml-lsp-ping)# tag mplsml-tag
```

## target ipv4

To specify the IPv4 address of the target router to be used in an MPLS LSP ping or MPLS LSP trace operation, use the **target ipv4** command in the appropriate configuration mode. To unset the address, use the **no** form of this command.

```
target ipv4 destination-address destination-mask
no target ipv4
```

---

**Syntax Description**

<i>destination-address</i>	IPv4 address of the target device to be tested.
----------------------------	---

---

*destination-mask* Number of bits in the network mask of the target address. The network mask can be specified in either of two ways:

- The network mask can be a four-part dotted decimal address. For example, 255.0.0.0 indicates that each bit equal to 1 means the corresponding address bit belongs to the network address.
- The network mask can be indicated as a slash (/) and number. For example, /8 indicates that the first 8 bits of the mask are ones, and the corresponding bits of the address are network address.

**Command Default**

None

**Command Modes**

IP SLA MPLS LSP ping configuration

IP SLA MPLS LSP trace configuration

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

**Usage Guidelines**

Use the **target ipv4** command to specify the IPv4 address of the target router at the end of the LSP to be tested or traced and to indicate the destination as an Label Distribution Protocol (LDP) IPv4 address. The target IPv4 address identifies the appropriate label stack associated with the LSP.



**Note** Using the **target ipv4** command, you can configure only one LDP IPv4 address as the target in an MPLS LSP ping or trace operation. If you enter the command a second time and configure a different IPv4 target address, you overwrite the first IPv4 address.

An MPLS LSP ping operation tests connectivity in the LSP using verification on the specified Forwarding Equivalence Class (FEC)— in this case, LDP IPv4 prefix—between the ping origin and the egress node identified with the **target ipv4** command. This test is carried out by sending an MPLS echo request along the same data path as other packets belonging to the FEC. When the ping packet reaches the end of the path, it is sent to the control plane of the egress label switching router (LSR), which then verifies that it is indeed an egress for the LSP. The MPLS echo request contains information about the LSP that is being verified.

In an MPLS network, an MPLS LSP trace operation traces LSP paths to the target router identified with the **target ipv4** command. In the verification of LSP routes, a packet is sent to the control plane of each transit LSR, which performs various checks, including one that determines if it is a transit LSR for the LSP path. Each transit LSR also returns information related to the LSP being tested (that is, the label bound to the LDP IPv4 prefix).

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **target ipv4** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp ping
Router(config-ipsla-mpls-lsp-ping)# target ipv4 192.168.1.4 255.255.255.255
```

## target pseudowire

To specify the pseudowire as the target to be used in an MPLS LSP ping operation, use the **target pseudowire** command in IP SLA MPLS LSP ping configuration mode. To unset the target, use the **no** form of this command.

```
target pseudowire destination-address circuit-id
no target pseudowire
```

Syntax Description	
<i>destination-address</i>	IPv4 address of the target device to be tested.
<i>circuit-id</i>	Virtual circuit identifier. Range is 1 to 4294967295.

**Command Default** No default behavior or values

**Command Modes** IP SLA MPLS LSP ping configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** Use the **target pseudowire** command to specify a target router and to indicate the destination as a Layer 2 VPN pseudowire in an MPLS LSP ping operation. The **target pseudowire** command identifies the target address and the virtual circuit (VC) identifier.



**Note** Using the **target pseudowire** command, you can configure only one pseudowire address as the target in an MPLS LSP ping operation. If you use the command a second time and configure a different pseudowire target address, the first pseudowire address is overwritten.

A pseudowire target of the LSP ping operation allows active monitoring of statistics on Pseudowire Edge-to-Edge (PWE3) services across an MPLS network. PWE3 connectivity verification uses the Virtual Circuit Connectivity Verification (VCCV).

For more information on VCCV, refer to the VCCV draft, “Pseudowire Virtual Circuit Connectivity Verification (VCCV)” on the IETF web page.

Task ID	Task ID	Operations
	monitor	read, write

## Examples

The following example shows how to use the **target pseudowire** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp ping
Router(config-ipsla-mpls-lsp-trace)# target pseudowire 192.168.1.4 4211
```

## target traffic-eng

To specify the target MPLS traffic engineering tunnel to be used in an MPLS LSP ping or MPLS LSP trace operation, use the **target traffic-eng** command in the appropriate configuration mode. To unset the tunnel, use the **no** form of this command.

```
target traffic-eng tunnel tunnel-interface
no target traffic-eng
```

<b>Syntax Description</b>	<b>tunnel</b> <i>tunnel-interface</i> Tunnel ID of an MPLS traffic-engineering tunnel (for example, tunnel 10) configured on the router. Range is 0 to 65535.
---------------------------	---

<b>Command Default</b>	No default behavior or values
------------------------	-------------------------------

<b>Command Modes</b>	IP SLA MPLS LSP ping configuration IP SLA MPLS LSP trace configuration
----------------------	---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

<b>Usage Guidelines</b>	Use the <b>target traffic-eng</b> command to specify a target router and to indicate the destination as an MPLS traffic-engineering (TE) tunnel in an MPLS LSP ping or MPLS LSP trace operation. The <b>target traffic-eng</b> command identifies the tunnel interface and the appropriate label stack associated with the LSP to be pinged or traced. An LSP tunnel interface is the head-end of a unidirectional virtual link to a tunnel destination.
-------------------------	--



<b>Note</b>	Using the <b>target traffic-eng</b> command, you can configure only one MPLS TE tunnel as the target in an MPLS LSP ping or trace operation. If you enter the command a second time and configure a different tunnel interfaces, you overwrite the first tunnel ID.
-------------	---

An IP SLA ping operation tests connectivity in the LSP using verification on the specified Forwarding Equivalence Class (FEC)—in this case, MPLS TE tunnel—between the ping origin and the egress node identified with the **target traffic-eng** command. This test is carried out by sending an MPLS echo request along the same data path as other packets belonging to the tunnel. When the ping packet reaches the end of the path, it is sent to the control plane of the egress label switching router (LSR), which then verifies that it is indeed an egress for the MPLS TE tunnel. The MPLS echo request contains information about the tunnel whose LSP path is being verified.

In an MPLS network, an IP SLA trace operation traces the LSP paths to a target router identified with the **target traffic-eng** command. In the verification of LSP routes, a packet is sent to the control plane of each transit LSR, which performs various checks, including one that determines if it is a transit LSR for the LSP path. Each transit LSR also returns information related to the MPLS TE tunnel to see if the local forwarding information matches what the routing protocols determine as the LSP path.

MPLS traffic engineering automatically establishes and maintains LSPs across the backbone. The path that an LSP uses is determined by the LSP resource requirements and network resources, such as bandwidth.

For more information on MPLS traffic-engineering tunnels, refer to *MPLS Traffic Engineering and Enhancements*.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **target traffic-eng tunnel** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp trace
Router(config-ipsla-mpls-lsp-trace)# target traffic-eng tunnel 101
```

## threshold

To set the lower-limit and upper-limit values, use the **threshold** command in IP SLA reaction condition configuration mode. To use the default value, use the **no** form of this command.

```
threshold lower-limit value upper-limit value
no threshold lower-limit value upper-limit value
```

<b>Syntax Description</b>	<b>lower-limit</b> value	Specifies the threshold lower-limit value. Range is 1 to 4294967295 ms. Default <b>lower-limit</b> value is 3000 ms.
	<b>upper-limit</b> value	Specifies the threshold upper-limit value. Range is 5000 to 4294967295 ms. Default <b>upper-limit</b> value is 5000 ms.
<b>Command Default</b>	<b>lower-limit</b> value: 3000 ms	
	<b>upper-limit</b> value: 5000 ms	
<b>Command Modes</b>	IP SLA reaction condition configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines** The **threshold** command is supported only when used with the **react** command and **jitter-average** and **packet-loss** keywords.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to set the lower-limit and upper-limit values for the **react** command with the **jitter-average** keyword for the **threshold** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react jitter-average
Router(config-ipsla-react-cond)# threshold lower-limit 8000 upper-limit 10000
```

The following example shows how to set the lower-limit and upper-limit values for the **react** command with the **packet-loss** keyword for the **threshold** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react packet-loss dest-to-source
Router(config-ipsla-react-cond)# threshold lower-limit 8000 upper-limit 10000
```

## threshold type average

To take action on average values to violate a threshold, use the **threshold type average** command in IP SLA reaction condition configuration mode. To clear the threshold type (reaction will never happen), use the **no** form of this command.

```
threshold type average number-of-probes
no threshold type
```

Syntax Description	<i>number-of-probes</i>
	When the average of the last five values for the monitored element exceeds the upper threshold or the average of the last five values for the monitored element drops below the lower threshold, the action is performed as defined by the <b>action</b> command. Range is 1 to 16.

Command Default	If there is no default value, no threshold type is configured.
-----------------	--

Command Modes	IP SLA reaction condition configuration
---------------	---

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**threshold type consecutive**

**Usage Guidelines** The **threshold type average** command is supported only when used with the **react** command and **jitter-average**, **packet-loss**, and **rtt** keywords.

Task ID	Task ID	Operations
	monitor	read, write

**Examples**

The following example shows how to set the number of probes for the **react** command with the **jitter-average** keyword for the **threshold type average** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react jitter-average
Router(config-ipsla-react-cond)# threshold type average 8
```

The following example shows how to set the number of probes for the **react** command with the **packet-loss** keyword for the **threshold type average** command:

```
Router# configure
Router(config)# ipsla reaction operation 432
Router(config-ipsla-react)# react packet-loss dest-to-source
Router(config-ipsla-react-cond)# threshold type average 8
```

## threshold type consecutive

To take action after a number of consecutive violations, use the **threshold type consecutive** command in the appropriate configuration mode. To clear the threshold type (reaction will never happen), use the **no** form of this command.

```
threshold type consecutive occurrences
no threshold type
```

**Syntax Description** *occurrences* When the reaction condition is set for a consecutive number of occurrences, there is no default value. The number of occurrences is set when specifying the threshold type. The number of consecutive violations is 1 to 16.

**Command Default** No default behavior or values

**Command Modes** IP SLA reaction condition configuration  
IP SLA MPLS LSP monitor reaction condition configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** If the **threshold type consecutive** command is used in IP SLA reaction condition mode, it configures the threshold for the specific operation being configured. If the **threshold type consecutive** command is used in IP SLA MPLS LSP monitor reaction condition configuration mode, it configures the threshold for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **threshold type consecutive** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react jitter-average
Router(config-ipsla-react-cond)# threshold type consecutive 8
```

The following example shows how to use the **threshold type consecutive** command in IP SLA MPLS LSP monitor reaction condition configuration mode:

```
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# reaction monitor 2
Router(config-ipsla-mplslm-react)# react connection-loss
Router(config-ipsla-mplslm-react-cond)# threshold type consecutive 2
```

## threshold type immediate

To take action immediately upon a threshold violation, use the **threshold type immediate** command in the appropriate configuration mode. To clear the threshold type (reaction will never happen), use the **no** form of this command.

```
threshold type immediate
no threshold type
```

**Syntax Description** This command has no keywords or arguments.

**Command Default** If there is no default value, no threshold type is configured.

**Command Modes** IP SLA reaction condition configuration  
IP SLA MPLS LSP monitor reaction condition configuration

**threshold type xofy**

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** When the reaction conditions, such as threshold violations, are met for the monitored element, the action is immediately performed as defined by the **action** command.

If the **threshold type immediate** command is used in IP SLA reaction condition mode, it configures the threshold for the specific operation being configured. If the **threshold type immediate** command is used in IP SLA MPLS LSP monitor reaction condition configuration mode, it configures the threshold for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

Task ID	Task ID	Operations
	monitor	read, write

**Examples**

The following example shows how to use the **threshold type immediate** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react jitter-average
Router(config-ipsla-react-cond)# threshold type immediate
```

The following example shows how to use the **threshold type immediate** command in IP SLA MPLS LSP monitor reaction condition configuration mode:

```
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsmlm)# reaction monitor 2
Router(config-ipsla-mplsmlm-react)# react connection-loss
Router(config-ipsla-mplsmlm-react-cond)# threshold type immediate
```

## threshold type xofy

To take action upon X violations in Y probe operations, use the **threshold type xofy** command in IP SLA reaction condition configuration mode. To clear the threshold type (reaction will never happen), use the **no** form of this command.

```
threshold type xofy x-value y-value
no threshold type
```

<b>Syntax Description</b>	<i>x-value y-value</i> When the reaction conditions, such as threshold violations, are met for the monitored element after some <i>x</i> number of violations within some other <i>y</i> number of probe operations (for example, <i>x</i> of <i>y</i> ), the action is performed as defined by the <b>action</b> command. Default is 5 for both <i>x-value</i> and <i>y-value</i> ; for example, <b>xofy 5 5</b> . Range is 1 to 16.				
<b>Command Default</b>	If there is no default value, no threshold type is configured.				
<b>Command Modes</b>	IP SLA reaction condition configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				
<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.				
<b>Task ID</b>	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>monitor</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	monitor	read, write
Task ID	Operations				
monitor	read, write				

**Examples**

The following example shows how to use the **threshold type xofy** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# reaction operation 432
Router(config-ipsla-react)# react jitter-average
Router(config-ipsla-react-cond)# threshold type xofy 1 5
```

## timeout (IP SLA)

To set the probe or control timeout interval, use the **timeout** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

```
timeout milliseconds
no timeout
```

<b>Syntax Description</b>	<i>milliseconds</i> Sets the amount of time (in milliseconds) that the IP SLA operation waits for a response from the request packet. Range is 1 to 604800000.
<b>Command Default</b>	None.
<b>Command Modes</b>	IP SLA UDP echo configuration IP SLA UDP jitter configuration IP SLA ICMP path-jitter configuration

IP SLA ICMP path-echo configuration  
 IP SLA ICMP echo configuration  
 IP SLA MPLS LSP ping configuration  
 IP SLA MPLS LSP trace configuration  
 IP SLA MPLS LSP monitor ping configuration  
 IP SLA MPLS LSP monitor trace configuration

**Command History**

Release	Modification
Release 7.3.2	This command was introduced.

**Usage Guidelines**

If the **timeout** command is used in IP SLA operation mode, it configures the amount of time that a specific IP SLA operation waits for a response from the request packet. If the **timeout** command is used in IP SLA MPLS LSP monitor mode, it configures the amount of time that all operations associated with the monitored provider edge (PE) routers wait for a response from the request packet. This configuration is inherited by all LSP operations that are created automatically.



**Note** The IP SLA responder needs at least one second to open a socket and program Local Packet Transport Services (LPTS). Therefore, configure the IP SLA timeout to at least 2000 milli seconds.



**Note** If both the **frequency** and **timeout** values of an IPSLA UDP echo operation are the same, say, 1 s and 1000 ms respectively, the current probe iteration will exceed the configured frequency, say, 1002 ms, when the operation times out. As a result, the upcoming operation is skipped to ensure a correct operation interval cycle.

**Task ID**

Task ID	Operations
monitor	read, write

**Examples**

The following example shows how to use the **timeout** command in IP SLA UDP jitter configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# timeout 10000
```

The following example shows how to use the **timeout** command in IP SLA MPLS LSP monitor configuration mode:

```

Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsmlm)# monitor 2
Router(config-ipsla-mplsmlm-def)# type mpls lsp ping
Router(config-ipsla-mplsmlm-lsp-ping)# timeout 10000

```

## tos

To set the type of service (ToS) in a probe packet, use the **tos** command in the appropriate configuration mode. To use the default value, use the **no** form of this command.

```

tos number
no tos

```

<b>Syntax Description</b>	<i>number</i> Type of service number. Range is 0 to 255.
---------------------------	--

<b>Command Default</b>	The type of service number is 0.
------------------------	----------------------------------

<b>Command Modes</b>	<p>IP SLA UDP echo configuration</p> <p>IP SLA UDP jitter configuration</p> <p>IP SLA ICMP path-jitter configuration</p> <p>IP SLA ICMP path-echo configuration</p> <p>IP SLA ICMP echo configuration</p>
----------------------	---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

<b>Usage Guidelines</b>	The ToS value is an 8-bit field in IP headers. The field contains information, such as precedence and ToS. The information is useful for policy routing and for features like Committed Access Rate (CAR) in which routers examine ToS values. When the type of service is defined for an operation, the IP SLA probe packet contains the configured tos value in the IP header.
-------------------------	--

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

<b>Examples</b>	The following example shows how to use the <b>tos</b> command in IP SLA UDP jitter configuration mode:
-----------------	--

```

Router# configure
Router(config)# ipsla

```

```
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# tos 60
```

## ttl

To specify the time-to-live (TTL) value in the MPLS label of echo request packets, use the **ttl** command in the appropriate configuration mode. To return to the default value, use the **no** form of this command.

```
ttl time-to-live
no ttl
```

<b>Syntax Description</b>	<i>time-to-live</i> Maximum hop count for an echo request packet. Valid values are from 1 to 255.
---------------------------	---

<b>Command Default</b>	For an MPLS LSP ping operation, the default time-to-live value is 255. For an MPLS LSP trace operations, the default time-to-live value is 30.
------------------------	---

<b>Command Modes</b>	IP SLA MPLS LSP ping configuration IP SLA MPLS LSP trace configuration IP SLA MPLS LSP monitor ping configuration IP SLA MPLS LSP monitor trace configuration
----------------------	--

<b>Command History</b>	<b>Release</b> <b>Modification</b>
	Release 7.3.2 This command was introduced.

<b>Usage Guidelines</b>	Use the <b>ttl</b> command to set the maximum number of hops allowed for echo request packets in an MPLS LSP ping or MPLS LSP trace operation. Note that the number of possible hops differs depending the type of IP SLA operation:
-------------------------	--

- For MPLS LSP ping operations, valid values are from 1 to 255 and the default is 255.
- For MPLS LSP trace operations, valid values are from 1 to 30 and the default is 30.

If the **ttl** command is used in IP SLA operation mode, it configures the time-to-live value for the specific operation being configured. If the **ttl** command is used in IP SLA MPLS LSP monitor mode, it configures the time-to-live value for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

<b>Task ID</b>	<b>Task ID</b> <b>Operations</b>
	monitor read, write

<b>Examples</b>	The following example shows how to use the <b>ttl</b> command:
-----------------	--

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp ping
Router(config-ipsla-mpls-lsp-ping)# ttl 200
```

## type icmp echo

To use the ICMP echo operation type, use the **type icmp echo** command in IP SLA operation configuration mode. To remove the operation, use the **no** form of this command.

```
type icmp echo
no type icmp echo
```

<b>Syntax Description</b>	This command has no keywords or arguments.
---------------------------	--

<b>Command Default</b>	No default behavior or values
------------------------	-------------------------------

<b>Command Modes</b>	IP SLA operation configuration
----------------------	--------------------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.
-------------------------	--

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

### Examples

The following example shows how to use the **type icmp echo** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type icmp echo
Router(config-ipsla-icmp-echo)#
```

## type icmp path-echo

To use the ICMP path-echo operation type, use the **type icmp path-echo** command in IP SLA operation configuration mode. To remove the operation, use the **no** form of this command.

```
type icmp path-echo
```

**type icmp path-jitter**

**no type icmp path-echo**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** IP SLA operation configuration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write

**Examples**

The following example shows how to use the **type icmp path-echo** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type icmp path-echo
Router(config-ipsla-icmp-path-echo)#
```

## type icmp path-jitter

To use the ICMP path-jitter operation type, use the **type icmp path-jitter** command in IP SLA operation configuration mode. To remove the operation, use the **no** form of this command.

**type icmp path-jitter**  
**no type icmp path-jitter**

**Syntax Description** This command has no keywords or arguments.

**Command Default** No default behavior or values

**Command Modes** IP SLA operation configuration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.3.2	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **type icmp path-jitter** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type icmp path-jitter
Router(config-ipsla-icmp-path-jitter)#
```

## type mpls lsp ping

To verify the end-to-end connectivity of a label switched path (LSP) and the integrity of an MPLS network, use the **type mpls lsp ping** command in the appropriate configuration mode. To remove the operation, use the **no** form of this command.

```
type mpls lsp ping
no type mpls lsp ping
```

**Syntax Description** This command has no keywords or arguments.

**Command Default** No default behavior or values

**Command Modes** IP SLA operation configuration  
IP SLA MPLS LSP monitor definition configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** Use the **type mpls lsp ping** command to configure parameters for an IP SLA LSP ping operation. After you enter the command, you enter IP SLA MPLS LSP Ping configuration mode.

An MPLS LSP ping operation tests connectivity between routers along an LSP path in an MPLS network and measures round-trip delay of the LSP by using an echo request and echo reply.

The MPLS LSP ping operation verifies LSP connectivity by using one of the supported Forwarding Equivalence Class (FEC) entities between the ping origin and egress node of each FEC. The following FEC types are supported for an MPLS LSP ping operation:

- IPv4 LDP prefixes (configured with the [target ipv4, on page 272](#) command)
- MPLS TE tunnels (configured with the [target traffic-eng , on page 275](#) command)
- Pseudowire (configured with the [target pseudowire, on page 274](#) command)

For MPLS LSP monitor ping operations, only IPv4 LDP prefixes are supported.

If the **type mpls lsp ping** command is used in IP SLA operation configuration mode, it configures the parameters for the specific operation being configured. If the **type mpls lsp ping** command is used in IP SLA MPLS LSP monitor configuration mode, it configures the parameters for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **type mpls lsp ping** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp ping
Router(config-ipsla-mpls-lsp-ping)#
```

The following example shows how to use the **type mpls lsp ping** command in IP SLA MPLS LSP monitor configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# monitor 2
Router(config-ipsla-mplslm-def)# type mpls lsp ping
Router(config-ipsla-mplslm-lsp-ping)#
```

## type mpls lsp trace

To trace LSP paths and localize network faults in an MPLS network, use the **type mpls lsp trace** command in the appropriate configuration mode. To remove the operation, use the **no** form of this command.

```
type mpls lsp trace
no type mpls lsp trace
```

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** IP SLA operation configuration  
IP SLA MPLS LSP monitor definition configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

### Usage Guidelines

Use the **type mpls lsp trace** command to configure parameters for an IP SLA LSP trace operation. After you enter the command, you enter IP SLA MPLS LSP Trace configuration mode.

An MPLS LSP trace operation traces the hop-by-hop route of LSP paths to a target router and measures the hop-by-hop round-trip delay for IPv4 LDP prefixes and TE tunnel FECs in an MPLS network. Echo request packets are sent to the control plane of each transit label switching router (LSR). A transit LSR performs various checks to determine if it is a transit LSR for the LSP path. A trace operation allows you to troubleshoot network connectivity and localize faults hop-by-hop.

In an MPLS LSP trace operation, each transit LSR returns information related to the type of Forwarding Equivalence Class (FEC) entity that is being traced. This information allows the trace operation to check if the local forwarding information matches what the routing protocols determine as the LSP path.

An MPLS label is bound to a packet according to the type of FEC used for the LSP. The following FEC types are supported for an MPLS LSP trace operation:

- LDP IPv4 prefixes (configured with the [target ipv4, on page 272](#) command)
- MPLS TE tunnels (configured with the [target traffic-eng , on page 275](#) command)

For MPLS LSP monitor trace operations, only IPv4 LDP prefixes are supported.

If the **type mpls lsp trace** command is used in IP SLA operation configuration mode, it configures the parameters for the specific operation being configured. If the **type mpls lsp trace** command is used in IP SLA MPLS LSP monitor configuration mode, it configures the parameters for all operations associated with the monitored provider edge (PE) routers. This configuration is inherited by all LSP operations that are created automatically.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **type mpls lsp trace** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type mpls lsp trace
Router(config-ipsla-mpls-lsp-trace)#
```

The following example shows how to use the **type mpls lsp trace** command in IP SLA MPLS LSP monitor configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplslm)# monitor 2
```

```
Router(config-ipsla-mpls-lsp-def)# type mpls lsp trace
Router(config-ipsla-mpls-lsp-trace)#
```

## type udp echo

To use the UDP echo operation type, use the **type udp echo** command in IP SLA operation configuration mode. To remove the operation, use the **no** form of this command.

```
type udp echo
no type udp echo
```

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** IP SLA operation configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read, write

**Examples** The following example shows how to use the **type udp echo** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp echo
Router(config-ipsla-udp-echo)#
```

## type udp jitter

To use the UDP jitter operation type, use the **type udp jitter** command in IP SLA operation configuration mode. To remove the operation, use the **no** form of this command.

```
type udp jitter
no type udp jitter
```

**Syntax Description** This command has no keywords or arguments.

<b>Command Default</b>	None				
<b>Command Modes</b>	IP SLA operation configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				
<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.				
<b>Task ID</b>	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>monitor</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	monitor	read, write
Task ID	Operations				
monitor	read, write				

**Examples** The following example shows how to use the **type udp jitter** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)#
```

## type udp ipv4 address

To configure a permanent port in the IP SLA responder for UDP echo or jitter operations, use the **type udp ipv4 address** command in IP SLA responder configuration mode. To remove the specified permanent port, use the **no** form of this command.

```
type udp ipv4 address ip-address port port
no type udp ipv4 address ip-address port port
```

<b>Syntax Description</b>	<p><i>ip-address</i> Specifies the IPv4 address at which the operation is received.</p> <p><b>port</b> <i>port</i> Specifies the port number at which the operation is received. Range is identical to the one used for the subagent that is, 1 to 65355.</p>				
<b>Command Default</b>	If there is no default value, no permanent port is configured.				
<b>Command Modes</b>	IP SLA responder configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				
<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.				

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to configure a permanent port for the **type udp ipv4 address** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# responder
Router(config-ipsla-resp)# type udp ipv4 address 192.0.2.11 port 10001
```

## verify-data

To check each IP SLA response for corruption, use the **verify-data** command in the appropriate configuration mode. To disable data corruption checking, use the **no** form of this command.

**verify-data**  
**no verify-data**

**Syntax Description** This command has no keywords or arguments.

**Command Default** The **verify-data** command is disabled.

**Command Modes** IP SLA UDP echo configuration  
IP SLA UDP jitter configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **verify-data** command in IP SLA UDP jitter configuration mode:

```
Router# configure
Router(config)# ipsla
```

```
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# verify-data
```

## vrf (IP SLA)

To enable the monitoring of a Virtual Private Network (VPN) in an ICMP echo, ICMP path-echo, ICMP path-jitter, UDP echo, or UDP jitter operation, use the **vrf** command in the appropriate configuration mode. To disable VPN monitoring, use the **no** form of this command.

```
vrf vrf-name
no vrf
```

<b>Syntax Description</b>	<i>vrf-name</i> Name of the VPN. Maximum length is 32 alphanumeric characters.				
<b>Command Default</b>	VPN monitoring is not configured for an IP SLA operation.				
<b>Command Modes</b>	IP SLA ICMP path-jitter configuration IP SLA ICMP path-echo configuration IP SLA ICMP echo configuration IP SLA UDP echo configuration IP SLA UDP jitter configuration IP SLA MPLS LSP ping configuration IP SLA MPLS LSP trace configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.3.2	This command was introduced.
Release	Modification				
Release 7.3.2	This command was introduced.				

**Usage Guidelines** Use the **vrf** command to configure a non-default VPN routing and forwarding (VRF) table for an IP SLA operation. A VPN is commonly identified using the name of a VRF table. If you use the **vrf** command in the configuration of an IP SLA operation, the *vrf-name* value is used to identify the VPN for the particular operation.

The default VRF table is used if no value is specified with the **vrf** command. If you enter a VPN name for an unconfigured VRF, the IP SLA operation fails and the following information is displayed in the results for the [show ipsla statistics, on page 253](#) command:

```
Latest operation return code : VrfNameError
```

The **vrf** command is supported only to configure the following IP SLA operations:

- IP SLA ICMP echo
- IP SLA ICMP path-echo

- IP SLA ICMP path-jitter
- IP SLA UDP echo
- IP SLA UDP jitter
- IP SLA MPLS LSP ping
- IP SLA MPLS LSP trace

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **vrf** command:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# operation 1
Router(config-ipsla-op)# type udp jitter
Router(config-ipsla-udp-jitter)# vrf vpn2
```

## vrf (IP SLA MPLS LSP monitor)

To specify which virtual routing and forwarding instance (VRF) is monitored in an IP SLA MPLS LSP monitor ping or trace, use the **vrf** command in the the appropriate configuration mode. To revert to the monitoring of all VRFs, use the **no** form of this command.

```
vrf vrf-name
no vrf
```

Syntax Description	
	<i>vrf-name</i> Name of the VRF. Maximum length is 32 alphanumeric characters.

Command Default	
	All VRFs are monitored.

Command Modes	
	IP SLA MPLS LSP monitor ping configuration IP SLA MPLS LSP monitor trace configuration

Command History	Release	Modification
	Release 7.3.2	This command was introduced.

Usage Guidelines	
	The <b>vrf</b> command in IP SLA MPLS LSP monitor configuration mode specifies to monitor a specific VRF in ping and trace operations. The default is that all VRFs are monitored.

Task ID	Task ID	Operations
	monitor	read, write

### Examples

The following example shows how to use the **vrf** command in IP SLA MPLS LSP monitor configuration mode:

```
Router# configure
Router(config)# ipsla
Router(config-ipsla)# mpls lsp-monitor
Router(config-ipsla-mplsmlm)# monitor 2
Router(config-ipsla-mplsmlm-def)# type mpls lsp trace
Router(config-ipsla-mplsmlm-lsp-trace)# vrf vpn-lsp
```





## CHAPTER 9

# Traffic Monitoring Commands

This module describes the Cisco IOS XR Software commands to monitor traffic on the router.

For detailed information about monitoring packet drops concepts, configuration tasks, and examples, see the *Traffic Monitoring* chapter in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [clear controllers npu packet-latency instance](#), on page 297
- [hw-module profile packet-loss-alert](#), on page 299
- [hw-module profile port-rate-histogram](#), on page 299
- [show drops all](#), on page 300
- [show controllers npu debug-utils](#), on page 302
- [show controllers npu stats counters-all](#), on page 342
- [show controllers npu port-rate-histogram](#), on page 347
- [show controllers npu stats counters-detail](#), on page 348
- [show controllers npu stats counters-drop](#), on page 351
- [show controllers npu stats traps-all](#), on page 355
- [show controllers npu stats voq](#), on page 358
- [show spp node-counters](#), on page 361
- [show controllers npu card-fsm](#), on page 364
- [show controllers npu driver](#), on page 366
- [show controllers npu packet-latency instance](#), on page 368
- [show controllers npu retimer](#), on page 371
- [show controllers npu slice](#), on page 372
- [show controllers npu trace](#), on page 373
- [show controllers npu voq-usage](#), on page 376

## clear controllers npu packet-latency instance

To manually clear the cumulative packet count in the latency histogram bin for all Traffic Class (TC) or each TC since either system bootup or the last clear, use the **clear controllers npu packet-latency instance** command in the XR EXEC mode.

```
clear controllers npu packet-latency instance instance-id { location node-id | slice slice-id IFG interface-group-id traffic-class traffic-class-id location node-id }
```

<b>Syntax Description</b>	<b>instance</b> <i>instance-id</i>	Clears the information of all the slice, Inter-Frame Gap (IFG), and TC in the specific instance.
	<b>slice</b> <i>slice-id</i>	Clears the information of a specific slice id, ranging from 0-7.
	<b>IFG</b> <i>interface-group-id</i>	Clears the information of a specific interface group id, ranging from 0-1.
	<b>traffic-class</b> <i>traffic-class-id</i>	Clears the information of a specific traffic class id, ranging from 0-7.
	<b>location</b> <i>node-id</i>	Clears the information of a specific node. The node-id argument is entered in the <i>rack/slot/module</i> notation.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 25.3.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	interface	read
	filesystem	read, write
	cisco-support	read

## Examples

The **clear controllers npu packet-latency instance** command manually clears the cumulative packet count in the latency histogram bin for all TC or each TC since either system bootup or the last clear.

Below command manually clears the cumulative packet count in the latency histogram bin of all TC on slice 2, IFG 1, and location 0/2/CPU0 since either system bootup or the last clear:

```
Router# clear controller npu packet-latency instance 0 slice 2 ifg 1 location 0/2/CPU0
```

Below command manually clears the cumulative packet count in the latency histogram bin of a specific TC 6 on slice 2, IFG 1, and location 0/2/CPU0 since either system bootup or the last clear.

```
Router# clear controller npu packet-latency instance 0 slice 2 ifg 1 traffic-class 6 location 0/2/CPU0
```

Below command manually clears the cumulative packet count in the latency histogram bin of a specific location 0/2/CPU0:

```
Router# clear controller npu packet-latency instance 0 location 0/2/CPU0
```

## hw-module profile packet-loss-alert

To enable log message alerts for traffic-impacting NPU interrupts, use the **hw-module profile packet-loss-alert** command in the XR Config mode.

```
hw-module profile packet-loss-alert { 3Min | 5Min }
```

<b>Syntax Description</b>	<b>3Min</b>	Specifies a 3 minute duration of packet loss to begin generating log messages. There are atleast 10 error interrupts per minute.
	<b>5Min</b>	Specifies a 5 minute duration of packet loss to begin generating log messages. There are atleast 10 error interrupts per minute.
<b>Command Default</b>	This feature is disabled by default.	
<b>Command Modes</b>	XR Config mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 24.1.1	This command was introduced
<b>Usage Guidelines</b>	Only line cards and routers with the Q100, Q200, P100 or G100 based Silicon One ASIC support this feature	
<b>Task ID</b>	<b>Task ID</b>	<b>Operation</b>
	profile	read, write

### Example

Execute the **hw-module profile packet-loss-alert** command to enable system log alerts for packet loss:

```
Router# configure
Router(config)# hw-module profile packet-loss-alert 3Min
Router(config)# commit
```

## hw-module profile port-rate-histogram

To enable port rate histogram feature, use the **hw-module profile port-rate-histogram enable** command in XR EXEC mode.

To disable port rate histogram feature, use the **hw-module profile port-rate-histogram disable** command.

```
hw-module profile port-rate-histogram enable
```

## show drops all

**Syntax Description** This command has no keywords or arguments.

**Command Default** This feature is disabled by default.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 25.4.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	config-services	read, write
	profile	read, write

### Examples

The following example shows how to enable port rate histogram for all ports on location 0/7/CPU0:

```
Router# configure
Router(config)# hw-module profile port-rate-histogram location 0/7/CPU0 enable
Router(config)# commit
```

## show drops all

To display the packet drops, use the **show drops all** command in the XR EXEC mode.

```
show drops all { commands location | location | ongoing location } { node-id | all }
```

<b>Syntax Description</b>	<b>commands</b>	Displays commands executed.
	<b>location</b>	Specifies location of line-card or route processor.
	<b>ongoing</b>	Shows drops occurring since last executed.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.3.5	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read
	cisco-support	read

The **show packet drops all location all** command displays packet drops for all nodes on all locations

```
RP/0/RP0/CPU0:ios#show drops all location all
```

```
-----
Printing Drop Counters for node 0/RP0/CPU0
-----
```

```
-----
MODULE arp
-----
```

```
-----
MODULE mac
-----
```

```
-----
MODULE npu_traps
-----
```

Trap Type	Configured	Hardware	Policer	Avg-Pkt	Packets	NPU	Trap	Punt	Punt	Punt	Punt
Rate(pps)	Level	Size	Accepted	ID	ID	Dest	VoQ	VLAN	TC	Rate(pps)	

UNKNOWN_VLAN_OR_BUNDLE_MEMBER(D*)				0	4	RPLC_CPU	200	1586	0	67
134	IFG	64	0		1					

```
-----
MODULE voq_drops
-----
```

```
-----
MODULE cef
-----
```

```
-----
MODULE fabric
-----
```

```
-----
MODULE lpts
-----
```

```
-----
MODULE spp
-----
```

The **show packet drops all ongoing location** command displays the packet drops since last executed.

```
RP/0/RP0/CPU0:ios#show drops all ongoing location all
```

```
-----
Printing Drop Counters for node 0/RP0/CPU0
-----
```

```
-----
MODULE arp
-----
```

```
-----
MODULE mac
-----
```

```
-----
MODULE npu_traps
-----
```

```
-----
MODULE voq_drops
-----
```

```
-----
MODULE cef
-----
```

```
-----
MODULE fabric
-----
```

```
-----
MODULE lpts
-----
```

```
-----
MODULE spp
-----
```

## show controllers npu debug-utils

To display debug-utils information on controllers npu, use the **show controllers npu debug-utils** command in the XR EXEC mode.

```
show controllers npu debug-utils { counters-drops | fabric-debug | get-counters | oq-debug } instance
{ instance-id | all } { location node-id | path | all }
```

### Syntax Description

**counters-drops**

Displays information on the ASIC's slice level drop counters.

<b>fabric-debug</b>	Displays information on the fabric debug details.
<b>get-counters</b>	Displays information on the ASIC's slice level counters.
<b>oq-debug</b>	Displays information on the ASIC's output queue debug details.
<b>location <i>node-id</i></b>	Displays the information about a specific node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<b>location <i>all</i></b>	Displays information about all nodes

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 24.4.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read
	filesystem	read, write
	cisco-support	read

## Examples

The **show controllers npu debug-utils** command displays ASIC's debug utilities information.

```
Router# show controllers npu debug-utils oq-debug instance all location 0/0/CPU0
Rack/Slot/Asic: 0/0/0
```

#	Counter_name	val
0	FC from PDIF to TX-Scheduler per intf	0
-1		
1	FC from PDIF to TX-Scheduler for IFG0	0
0		
2	FC from PDIF to TX-Scheduler for IFG1	0
0		
3	FC from PDOQ to Scheduler per slice	0
0		
4	Slice PDVOQ biggest queue No.	0
0		
5	Slice PDVOQ biggest queue size BUFFERS	0
0		
6	Slice PDVOQ biggest queue dest device	511
0		

## show controllers npu debug-utils

```

|      7 |Slice PDVOQ biggest queue dest slice          |          0|
| 0|      -1|
|      8 |Slice PDVOQ biggest queue dest ifg            |          1|
| 0|      -1|
|      9 |Slice PDVOQ biggest queue dest port          |         20|
| 0|      -1|
|     10 |Slice PDVOQ biggest queue VSC                |          0|
| 0|      -1|
|     11 |Slice PDOQ biggest queue No.                 |          0|
| 0|      -1|
|     12 |Slice PDOQ biggest queue size BYTES          |          0|
| 0|      -1|
|     13 |Slice PDOQ Delete fifo watermark BYTES       |          0|
| 0|      -1|
|     14 |TX fifo largest size port No.                |          0|
| 0|        0|
|     15 |TX fifo largest size WORDS                   |          0|
| 0|        0|
|     16 |TX fifo largest size port No.                |          0|
| 0|        1|
|     17 |TX fifo largest size WORDS                   |          0|
| 0|        1|
|     18 |RX fifo largest size port No.                |          0|
| 0|        0|
|     19 |RX fifo largest size WORDS                   |          0|
| 0|        0|
|     20 |RX fifo largest size port No.                |          0|
| 0|        1|
|     21 |RX fifo largest size WORDS                   |          0|
| 0|        1|
|     22 |FC from PDIF to TX-Scheduler per intf       |          0|
| 1|      -1|
|     23 |FC from PDIF to TX-Scheduler for IFG0       |          0|
| 1|        0|
|     24 |FC from PDIF to TX-Scheduler for IFG1       |          0|
| 1|        1|
|     25 |FC from PDOQ to Scheduler per slice         |          0|
| 1|      -1|
|     26 |Slice PDVOQ biggest queue No.                 |          0|
| 1|      -1|
|     27 |Slice PDVOQ biggest queue size BUFFERS       |          0|
| 1|      -1|
|     28 |Slice PDVOQ biggest queue dest device        |         511|
| 1|      -1|
|     29 |Slice PDVOQ biggest queue dest slice          |          0|
| 1|      -1|
|     30 |Slice PDVOQ biggest queue dest ifg            |          1|
| 1|      -1|
|     31 |Slice PDVOQ biggest queue dest port          |         20|
| 1|      -1|
|     32 |Slice PDVOQ biggest queue VSC                |         16|
| 1|      -1|
|     33 |Slice PDOQ biggest queue No.                 |          0|
| 1|      -1|
|     34 |Slice PDOQ biggest queue size BYTES          |          0|
| 1|      -1|
|     35 |Slice PDOQ Delete fifo watermark BYTES       |          0|
| 1|      -1|
|     36 |TX fifo largest size port No.                |          0|
| 1|        0|
|     37 |TX fifo largest size WORDS                   |          0|
| 1|        0|
|     38 |TX fifo largest size port No.                |          0|
| 1|        1|

```

```

|   39 |TX fifo largest size WORDS |           0|
| 1|   1|
|   40 |RX fifo largest size port No. |           0|
| 1|   0|
|   41 |RX fifo largest size WORDS |           0|
| 1|   0|
|   42 |RX fifo largest size port No. |           0|
| 1|   1|
|   43 |RX fifo largest size WORDS |           0|
| 1|   1|
|   44 |FC from PDIF to TX-Scheduler per intf |           0|
| 2|  -1|
|   45 |FC from PDIF to TX-Scheduler for IFG0 |           0|
| 2|   0|
|   46 |FC from PDIF to TX-Scheduler for IFG1 |           0|
| 2|   1|
|   47 |FC from PDOQ to Scheduler per slice |           0|
| 2|  -1|
|   48 |Slice PDVOQ biggest queue No. |           0|
| 2|  -1|
|   49 |Slice PDVOQ biggest queue size BUFFERS |           0|
| 2|  -1|
|   50 |Slice PDVOQ biggest queue dest device |          511|
| 2|  -1|
|   51 |Slice PDVOQ biggest queue dest slice |           0|
| 2|  -1|
|   52 |Slice PDVOQ biggest queue dest ifg |           1|
| 2|  -1|
|   53 |Slice PDVOQ biggest queue dest port |          20|
| 2|  -1|
|   54 |Slice PDVOQ biggest queue VSC |          32|
| 2|  -1|
|   55 |Slice PDOQ biggest queue No. |           0|
| 2|  -1|
|   56 |Slice PDOQ biggest queue size BYTES |           0|
| 2|  -1|
|   57 |Slice PDOQ Delete fifo watermark BYTES |           0|
| 2|  -1|
|   58 |TX fifo largest size port No. |           0|
| 2|   0|
|   59 |TX fifo largest size WORDS |           0|
| 2|   0|
|   60 |TX fifo largest size port No. |           0|
| 2|   1|
|   61 |TX fifo largest size WORDS |           0|
| 2|   1|
|   62 |RX fifo largest size port No. |           0|
| 2|   0|
|   63 |RX fifo largest size WORDS |           0|
| 2|   0|
|   64 |RX fifo largest size port No. |           0|
| 2|   1|
|   65 |RX fifo largest size WORDS |           0|
| 2|   1|
|   66 |FC from PDIF to TX-Scheduler per intf |           0|
| 3|  -1|
|   67 |FC from PDIF to TX-Scheduler for IFG0 |           0|
| 3|   0|
|   68 |FC from PDIF to TX-Scheduler for IFG1 |           0|
| 3|   1|
|   69 |FC from PDOQ to Scheduler per slice |           0|
| 3|  -1|
|   70 |Slice PDVOQ biggest queue No. |           0|
| 3|  -1|

```

## show controllers npu debug-utils

```

| 71 |Slice PDVOQ biggest queue size BUFFERS | 0|
3| -1|
| 72 |Slice PDVOQ biggest queue dest device | 511|
3| -1|
| 73 |Slice PDVOQ biggest queue dest slice | 0|
3| -1|
| 74 |Slice PDVOQ biggest queue dest ifg | 0|
3| -1|
| 75 |Slice PDVOQ biggest queue dest port | 0|
3| -1|
| 76 |Slice PDVOQ biggest queue VSC | 0|
3| -1|
| 77 |Slice PDOQ biggest queue No. | 0|
3| -1|
| 78 |Slice PDOQ biggest queue size BYTES | 0|
3| -1|
| 79 |Slice PDOQ Delete fifo watermark BYTES | 0|
3| -1|
| 80 |TX fifo largest size port No. | 0|
3| 0|
| 81 |TX fifo largest size WORDS | 0|
3| 0|
| 82 |TX fifo largest size port No. | 0|
3| 1|
| 83 |TX fifo largest size WORDS | 0|
3| 1|
| 84 |RX fifo largest size port No. | 0|
3| 0|
| 85 |RX fifo largest size WORDS | 0|
3| 0|
| 86 |RX fifo largest size port No. | 0|
3| 1|
| 87 |RX fifo largest size WORDS | 0|
3| 1|
| 88 |FC from PDIF to TX-Scheduler per intf | 0|
4| -1|
| 89 |FC from PDIF to TX-Scheduler for IFG0 | 0|
4| 0|
| 90 |FC from PDIF to TX-Scheduler for IFG1 | 0|
4| 1|
| 91 |FC from PDOQ to Scheduler per slice | 0|
4| -1|
| 92 |Slice PDVOQ biggest queue No. | 0|
4| -1|
| 93 |Slice PDVOQ biggest queue size BUFFERS | 0|
4| -1|
| 94 |Slice PDVOQ biggest queue dest device | 511|
4| -1|
| 95 |Slice PDVOQ biggest queue dest slice | 0|
4| -1|
| 96 |Slice PDVOQ biggest queue dest ifg | 0|
4| -1|
| 97 |Slice PDVOQ biggest queue dest port | 0|
4| -1|
| 98 |Slice PDVOQ biggest queue VSC | 0|
4| -1|
| 99 |Slice PDOQ biggest queue No. | 0|
4| -1|
| 100 |Slice PDOQ biggest queue size BYTES | 0|
4| -1|
| 101 |Slice PDOQ Delete fifo watermark BYTES | 0|
4| -1|
| 102 |TX fifo largest size port No. | 0|
4| 0|

```

```

| 103 |TX fifo largest size WORDS | 0|
4| 0|
| 104 |TX fifo largest size port No. | 0|
4| 1|
| 105 |TX fifo largest size WORDS | 0|
4| 1|
| 106 |RX fifo largest size port No. | 0|
4| 0|
| 107 |RX fifo largest size WORDS | 0|
4| 0|
| 108 |RX fifo largest size port No. | 0|
4| 1|
| 109 |RX fifo largest size WORDS | 0|
4| 1|
| 110 |FC from PDIF to TX-Scheduler per intf | 0|
5| -1|
| 111 |FC from PDIF to TX-Scheduler for IFG0 | 0|
5| 0|
| 112 |FC from PDIF to TX-Scheduler for IFG1 | 0|
5| 1|
| 113 |FC from PDOQ to Scheduler per slice | 0|
5| -1|
| 114 |Slice PDVOQ biggest queue No. | 0|
5| -1|
| 115 |Slice PDVOQ biggest queue size BUFFERS | 0|
5| -1|
| 116 |Slice PDVOQ biggest queue dest device | 511|
5| -1|
| 117 |Slice PDVOQ biggest queue dest slice | 0|
5| -1|
| 118 |Slice PDVOQ biggest queue dest ifg | 0|
5| -1|
| 119 |Slice PDVOQ biggest queue dest port | 0|
5| -1|
| 120 |Slice PDVOQ biggest queue VSC | 16|
5| -1|
| 121 |Slice PDOQ biggest queue No. | 0|
5| -1|
| 122 |Slice PDOQ biggest queue size BYTES | 0|
5| -1|
| 123 |Slice PDOQ Delete fifo watermark BYTES | 0|
5| -1|
| 124 |TX fifo largest size port No. | 0|
5| 0|
| 125 |TX fifo largest size WORDS | 0|
5| 0|
| 126 |TX fifo largest size port No. | 0|
5| 1|
| 127 |TX fifo largest size WORDS | 0|
5| 1|
| 128 |RX fifo largest size port No. | 0|
5| 0|
| 129 |RX fifo largest size WORDS | 0|
5| 0|
| 130 |RX fifo largest size port No. | 0|
5| 1|
| 131 |RX fifo largest size WORDS | 0|
5| 1|
| 132 |TXCGM Watermark Total UNICAST BUFFERS (C+D) | 0|
-1| -1|
| 133 |TXCGM Watermark Total UNICAST Local BUFFERS (C) | 0|
-1| -1|
| 134 |TXCGM Watermark Total UNICAST Remote BUFFERS (D) | 0|
-1| -1|

```

## show controllers npu debug-utils

```

| 135 |TXCGM Watermark Total PDs | 0|
-1| -1|
| 136 |TXCGM Watermark Total deleted PDs | 0|
-1| -1|
| 137 |TXCGM Watermark Total Unicast PDs | 0|
-1| -1|
| 138 |TXCGM Watermark Total Multicast PDs | 0|
-1| -1|
| 139 |TXCGM Watermark Total Fabric PDs | 0|
-1| -1|
| 140 |TXCGM Watermark Total MS-VOQs PDs | 0|
-1| -1|
| 141 |TXCGM Watermark Total MS-OQs PDs | 0|
-1| -1|
| 142 |SMS Min total free BUFFERS | 0|
-1| -1|
| 143 |SMS Max occupied BUFFERS | 97920|
-1| -1|
| 144 |SMS Min free BUFFERS | 0|
-1| -1|
| 145 |SMS Min free buffers bank idx | 0|
-1| -1|
| 146 |SMS Max free BUFFERS | 0|
-1| -1|
| 147 |SMS Max free buffers bank idx | 0|
-1| -1|
| 148 |SMS Max FDOQ2SMS FIFO size | 0|
-1| -1|
| 149 |SMS Max FDOQ2SMS FIFO intf | 0|
-1| -1|
| 150 |number of non-empty Qs | 0|
-1| -1|
| 151 |Active port srd speed port_id 0 | 0|
0| 0|
| 152 |SDK device frequency | 0|
-1| -1|
Rack/Slot/Asic: 0/0/1

```

```

=====
| # | Counter_name | val |
slice | ifg |
=====
| 0 |FC from PDIF to TX-Scheduler per intf | 0|
0| -1|
| 1 |FC from PDIF to TX-Scheduler for IFG0 | 0|
0| 0|
| 2 |FC from PDIF to TX-Scheduler for IFG1 | 0|
0| 1|
| 3 |FC from PDOQ to Scheduler per slice | 0|
0| -1|
| 4 |Slice PDVOQ biggest queue No. | 0|
0| -1|
| 5 |Slice PDVOQ biggest queue size BUFFERS | 0|
0| -1|
| 6 |Slice PDVOQ biggest queue dest device | 511|
0| -1|
| 7 |Slice PDVOQ biggest queue dest slice | 0|
0| -1|
| 8 |Slice PDVOQ biggest queue dest ifg | 1|
0| -1|
| 9 |Slice PDVOQ biggest queue dest port | 20|
0| -1|
| 10 |Slice PDVOQ biggest queue VSC | 0|
0| -1|
| 11 |Slice PDOQ biggest queue No. | 0|

```

```

0| -1|
| 12 |Slice PDOQ biggest queue size BYTES | 0|
0| -1|
| 13 |Slice PDOQ Delete fifo watermark BYTES | 0|
0| -1|
| 14 |TX fifo largest size port No. | 0|
0| 0|
| 15 |TX fifo largest size WORDS | 0|
0| 0|
| 16 |TX fifo largest size port No. | 0|
0| 1|
| 17 |TX fifo largest size WORDS | 0|
0| 1|
| 18 |RX fifo largest size port No. | 0|
0| 0|
| 19 |RX fifo largest size WORDS | 0|
0| 0|
| 20 |RX fifo largest size port No. | 0|
0| 1|
| 21 |RX fifo largest size WORDS | 0|
0| 1|
| 22 |FC from PDIF to TX-Scheduler per intf | 0|
1| -1|
| 23 |FC from PDIF to TX-Scheduler for IFG0 | 0|
1| 0|
| 24 |FC from PDIF to TX-Scheduler for IFG1 | 0|
1| 1|
| 25 |FC from PDOQ to Scheduler per slice | 0|
1| -1|
| 26 |Slice PDVOQ biggest queue No. | 0|
1| -1|
| 27 |Slice PDVOQ biggest queue size BUFFERS | 0|
1| -1|
| 28 |Slice PDVOQ biggest queue dest device | 511|
1| -1|
| 29 |Slice PDVOQ biggest queue dest slice | 0|
1| -1|
| 30 |Slice PDVOQ biggest queue dest ifg | 1|
1| -1|
| 31 |Slice PDVOQ biggest queue dest port | 20|
1| -1|
| 32 |Slice PDVOQ biggest queue VSC | 16|
1| -1|
| 33 |Slice PDOQ biggest queue No. | 0|
1| -1|
| 34 |Slice PDOQ biggest queue size BYTES | 0|
1| -1|
| 35 |Slice PDOQ Delete fifo watermark BYTES | 0|
1| -1|
| 36 |TX fifo largest size port No. | 0|
1| 0|
| 37 |TX fifo largest size WORDS | 0|
1| 0|
| 38 |TX fifo largest size port No. | 0|
1| 1|
| 39 |TX fifo largest size WORDS | 0|
1| 1|
| 40 |RX fifo largest size port No. | 0|
1| 0|
| 41 |RX fifo largest size WORDS | 0|
1| 0|
| 42 |RX fifo largest size port No. | 0|
1| 1|
| 43 |RX fifo largest size WORDS | 0|

```

## show controllers npu debug-utils

```

1| 1|
| 44 |FC from PDIF to TX-Scheduler per intf | 0|
2| -1|
| 45 |FC from PDIF to TX-Scheduler for IFG0 | 0|
2| 0|
| 46 |FC from PDIF to TX-Scheduler for IFG1 | 0|
2| 1|
| 47 |FC from PDOQ to Scheduler per slice | 0|
2| -1|
| 48 |Slice PDVOQ biggest queue No. | 0|
2| -1|
| 49 |Slice PDVOQ biggest queue size BUFFERS | 0|
2| -1|
| 50 |Slice PDVOQ biggest queue dest device | 511|
2| -1|
| 51 |Slice PDVOQ biggest queue dest slice | 0|
2| -1|
| 52 |Slice PDVOQ biggest queue dest ifg | 1|
2| -1|
| 53 |Slice PDVOQ biggest queue dest port | 20|
2| -1|
| 54 |Slice PDVOQ biggest queue VSC | 32|
2| -1|
| 55 |Slice PDOQ biggest queue No. | 0|
2| -1|
| 56 |Slice PDOQ biggest queue size BYTES | 0|
2| -1|
| 57 |Slice PDOQ Delete fifo watermark BYTES | 0|
2| -1|
| 58 |TX fifo largest size port No. | 0|
2| 0|
| 59 |TX fifo largest size WORDS | 0|
2| 0|
| 60 |TX fifo largest size port No. | 0|
2| 1|
| 61 |TX fifo largest size WORDS | 0|
2| 1|
| 62 |RX fifo largest size port No. | 0|
2| 0|
| 63 |RX fifo largest size WORDS | 0|
2| 0|
| 64 |RX fifo largest size port No. | 0|
2| 1|
| 65 |RX fifo largest size WORDS | 0|
2| 1|
| 66 |FC from PDIF to TX-Scheduler per intf | 0|
3| -1|
| 67 |FC from PDIF to TX-Scheduler for IFG0 | 0|
3| 0|
| 68 |FC from PDIF to TX-Scheduler for IFG1 | 0|
3| 1|
| 69 |FC from PDOQ to Scheduler per slice | 0|
3| -1|
| 70 |Slice PDVOQ biggest queue No. | 0|
3| -1|
| 71 |Slice PDVOQ biggest queue size BUFFERS | 0|
3| -1|
| 72 |Slice PDVOQ biggest queue dest device | 511|
3| -1|
| 73 |Slice PDVOQ biggest queue dest slice | 0|
3| -1|
| 74 |Slice PDVOQ biggest queue dest ifg | 0|
3| -1|
| 75 |Slice PDVOQ biggest queue dest port | 0|

```

```

3| -1|
| 76 |Slice PDVOQ biggest queue VSC | 0|
3| -1|
| 77 |Slice PDOQ biggest queue No. | 0|
3| -1|
| 78 |Slice PDOQ biggest queue size BYTES | 0|
3| -1|
| 79 |Slice PDOQ Delete fifo watermark BYTES | 0|
3| -1|
| 80 |TX fifo largest size port No. | 0|
3| 0|
| 81 |TX fifo largest size WORDS | 0|
3| 0|
| 82 |TX fifo largest size port No. | 0|
3| 1|
| 83 |TX fifo largest size WORDS | 0|
3| 1|
| 84 |RX fifo largest size port No. | 0|
3| 0|
| 85 |RX fifo largest size WORDS | 0|
3| 0|
| 86 |RX fifo largest size port No. | 0|
3| 1|
| 87 |RX fifo largest size WORDS | 0|
3| 1|
| 88 |FC from PDIF to TX-Scheduler per intf | 0|
4| -1|
| 89 |FC from PDIF to TX-Scheduler for IFG0 | 0|
4| 0|
| 90 |FC from PDIF to TX-Scheduler for IFG1 | 0|
4| 1|
| 91 |FC from PDOQ to Scheduler per slice | 0|
4| -1|
| 92 |Slice PDVOQ biggest queue No. | 0|
4| -1|
| 93 |Slice PDVOQ biggest queue size BUFFERS | 0|
4| -1|
| 94 |Slice PDVOQ biggest queue dest device | 511|
4| -1|
| 95 |Slice PDVOQ biggest queue dest slice | 0|
4| -1|
| 96 |Slice PDVOQ biggest queue dest ifg | 0|
4| -1|
| 97 |Slice PDVOQ biggest queue dest port | 0|
4| -1|
| 98 |Slice PDVOQ biggest queue VSC | 0|
4| -1|
| 99 |Slice PDOQ biggest queue No. | 0|
4| -1|
| 100 |Slice PDOQ biggest queue size BYTES | 0|
4| -1|
| 101 |Slice PDOQ Delete fifo watermark BYTES | 0|
4| -1|
| 102 |TX fifo largest size port No. | 0|
4| 0|
| 103 |TX fifo largest size WORDS | 0|
4| 0|
| 104 |TX fifo largest size port No. | 0|
4| 1|
| 105 |TX fifo largest size WORDS | 0|
4| 1|
| 106 |RX fifo largest size port No. | 0|
4| 0|
| 107 |RX fifo largest size WORDS | 0|

```

## show controllers npu debug-utils

```

4| 0|
| 108 |RX fifo largest size port No. | 0|
4| 1|
| 109 |RX fifo largest size WORDS | 0|
4| 1|
| 110 |FC from PDIF to TX-Scheduler per intf | 0|
5| -1|
| 111 |FC from PDIF to TX-Scheduler for IFG0 | 0|
5| 0|
| 112 |FC from PDIF to TX-Scheduler for IFG1 | 0|
5| 1|
| 113 |FC from PDOQ to Scheduler per slice | 0|
5| -1|
| 114 |Slice PDVOQ biggest queue No. | 0|
5| -1|
| 115 |Slice PDVOQ biggest queue size BUFFERS | 0|
5| -1|
| 116 |Slice PDVOQ biggest queue dest device | 511|
5| -1|
| 117 |Slice PDVOQ biggest queue dest slice | 0|
5| -1|
| 118 |Slice PDVOQ biggest queue dest ifg | 0|
5| -1|
| 119 |Slice PDVOQ biggest queue dest port | 0|
5| -1|
| 120 |Slice PDVOQ biggest queue VSC | 16|
5| -1|
| 121 |Slice PDOQ biggest queue No. | 0|
5| -1|
| 122 |Slice PDOQ biggest queue size BYTES | 0|
5| -1|
| 123 |Slice PDOQ Delete fifo watermark BYTES | 0|
5| -1|
| 124 |TX fifo largest size port No. | 0|
5| 0|
| 125 |TX fifo largest size WORDS | 0|
5| 0|
| 126 |TX fifo largest size port No. | 0|
5| 1|
| 127 |TX fifo largest size WORDS | 0|
5| 1|
| 128 |RX fifo largest size port No. | 0|
5| 0|
| 129 |RX fifo largest size WORDS | 0|
5| 0|
| 130 |RX fifo largest size port No. | 0|
5| 1|
| 131 |RX fifo largest size WORDS | 0|
5| 1|
| 132 |TXCGM Watermark Total UNICAST BUFFERS (C+D) | 0|
-1| -1|
| 133 |TXCGM Watermark Total UNICAST Local BUFFERS (C) | 0|
-1| -1|
| 134 |TXCGM Watermark Total UNICAST Remote BUFFERS (D) | 0|
-1| -1|
| 135 |TXCGM Watermark Total PDs | 0|
-1| -1|
| 136 |TXCGM Watermark Total deleted PDs | 0|
-1| -1|
| 137 |TXCGM Watermark Total Unicast PDs | 0|
-1| -1|
| 138 |TXCGM Watermark Total Multicast PDs | 0|
-1| -1|
| 139 |TXCGM Watermark Total Fabric PDs | 0|

```

```

-1| -1|
| 140 |TXCGM Watermark Total MS-VOQs PDs | 0|
-1| -1|
| 141 |TXCGM Watermark Total MS-OQs PDs | 0|
-1| -1|
| 142 |SMS Min total free BUFFERS | 0|
-1| -1|
| 143 |SMS Max occupied BUFFERS | 97920|
-1| -1|
| 144 |SMS Min free BUFFERS | 0|
-1| -1|
| 145 |SMS Min free buffers bank idx | 0|
-1| -1|
| 146 |SMS Max free BUFFERS | 0|
-1| -1|
| 147 |SMS Max free buffers bank idx | 0|
-1| -1|
| 148 |SMS Max FDOQ2SMS FIFO size | 0|
-1| -1|
| 149 |SMS Max FDOQ2SMS FIFO intf | 0|
-1| -1|
| 150 |number of non-empty Qs | 0|
-1| -1|
| 151 |Active port srd speed port_id 0 | 0|
0| 0|
| 152 |SDK device frequency | 0|
-1| -1|
Rack/Slot/Asic: 0/FC0/0

```

```

=====
| # | Counter_name | val |
slice | ifg |
=====
| 0 |FC from PDIF to TX-Scheduler per intf | 0|
0| -1|
| 1 |FC from PDIF to TX-Scheduler for IFG0 | 0|
0| 0|
| 2 |FC from PDIF to TX-Scheduler for IFG1 | 0|
0| 1|
| 3 |FC from PDOQ to Scheduler per slice | 0|
0| -1|
| 4 |Slice PDVOQ biggest queue No. | 0|
0| -1|
| 5 |Slice PDVOQ biggest queue size BUFFERS | 0|
0| -1|
| 6 |Slice PDVOQ biggest queue dest device | 511|
0| -1|
| 7 |Slice PDVOQ biggest queue dest slice | 0|
0| -1|
| 8 |Slice PDVOQ biggest queue dest ifg | 0|
0| -1|
| 9 |Slice PDVOQ biggest queue dest port | 0|
0| -1|
| 10 |Slice PDVOQ biggest queue VSC | 0|
0| -1|
| 11 |Slice PDOQ biggest queue No. | 0|
0| -1|
| 12 |Slice PDOQ biggest queue size BYTES | 0|
0| -1|
| 13 |Slice PDOQ Delete fifo watermark BYTES | 0|
0| -1|
| 14 |TX fifo largest size port No. | 0|
0| 0|
| 15 |TX fifo largest size WORDS | 0|
0| 0|

```

## show controllers npu debug-utils

```

| 16 |TX fifo largest size port No. | 0|
| 0| 1|
| 17 |TX fifo largest size WORDS | 0|
| 0| 1|
| 18 |RX fifo largest size port No. | 0|
| 0| 0|
| 19 |RX fifo largest size WORDS | 0|
| 0| 0|
| 20 |RX fifo largest size port No. | 0|
| 0| 1|
| 21 |RX fifo largest size WORDS | 0|
| 0| 1|
| 22 |FC from PDIF to TX-Scheduler per intf | 0|
| 1| -1|
| 23 |FC from PDIF to TX-Scheduler for IFG0 | 0|
| 1| 0|
| 24 |FC from PDIF to TX-Scheduler for IFG1 | 0|
| 1| 1|
| 25 |FC from PDOQ to Scheduler per slice | 0|
| 1| -1|
| 26 |Slice PDVOQ biggest queue No. | 0|
| 1| -1|
| 27 |Slice PDVOQ biggest queue size BUFFERS | 0|
| 1| -1|
| 28 |Slice PDVOQ biggest queue dest device | 511|
| 1| -1|
| 29 |Slice PDVOQ biggest queue dest slice | 0|
| 1| -1|
| 30 |Slice PDVOQ biggest queue dest ifg | 0|
| 1| -1|
| 31 |Slice PDVOQ biggest queue dest port | 0|
| 1| -1|
| 32 |Slice PDVOQ biggest queue VSC | 0|
| 1| -1|
| 33 |Slice PDOQ biggest queue No. | 0|
| 1| -1|
| 34 |Slice PDOQ biggest queue size BYTES | 0|
| 1| -1|
| 35 |Slice PDOQ Delete fifo watermark BYTES | 0|
| 1| -1|
| 36 |TX fifo largest size port No. | 0|
| 1| 0|
| 37 |TX fifo largest size WORDS | 0|
| 1| 0|
| 38 |TX fifo largest size port No. | 0|
| 1| 1|
| 39 |TX fifo largest size WORDS | 0|
| 1| 1|
| 40 |RX fifo largest size port No. | 0|
| 1| 0|
| 41 |RX fifo largest size WORDS | 0|
| 1| 0|
| 42 |RX fifo largest size port No. | 0|
| 1| 1|
| 43 |RX fifo largest size WORDS | 0|
| 1| 1|
| 44 |FC from PDIF to TX-Scheduler per intf | 0|
| 2| -1|
| 45 |FC from PDIF to TX-Scheduler for IFG0 | 0|
| 2| 0|
| 46 |FC from PDIF to TX-Scheduler for IFG1 | 0|
| 2| 1|
| 47 |FC from PDOQ to Scheduler per slice | 0|
| 2| -1|

```

```

| 48 |Slice PDVOQ biggest queue No. | 0|
2| -1|
| 49 |Slice PDVOQ biggest queue size BUFFERS | 0|
2| -1|
| 50 |Slice PDVOQ biggest queue dest device | 511|
2| -1|
| 51 |Slice PDVOQ biggest queue dest slice | 0|
2| -1|
| 52 |Slice PDVOQ biggest queue dest ifg | 0|
2| -1|
| 53 |Slice PDVOQ biggest queue dest port | 0|
2| -1|
| 54 |Slice PDVOQ biggest queue VSC | 0|
2| -1|
| 55 |Slice PDOQ biggest queue No. | 0|
2| -1|
| 56 |Slice PDOQ biggest queue size BYTES | 0|
2| -1|
| 57 |Slice PDOQ Delete fifo watermark BYTES | 0|
2| -1|
| 58 |TX fifo largest size port No. | 0|
2| 0|
| 59 |TX fifo largest size WORDS | 0|
2| 0|
| 60 |TX fifo largest size port No. | 0|
2| 1|
| 61 |TX fifo largest size WORDS | 0|
2| 1|
| 62 |RX fifo largest size port No. | 0|
2| 0|
| 63 |RX fifo largest size WORDS | 0|
2| 0|
| 64 |RX fifo largest size port No. | 0|
2| 1|
| 65 |RX fifo largest size WORDS | 0|
2| 1|
| 66 |FC from PDIF to TX-Scheduler per intf | 0|
3| -1|
| 67 |FC from PDIF to TX-Scheduler for IFG0 | 0|
3| 0|
| 68 |FC from PDIF to TX-Scheduler for IFG1 | 0|
3| 1|
| 69 |FC from PDOQ to Scheduler per slice | 0|
3| -1|
| 70 |Slice PDVOQ biggest queue No. | 0|
3| -1|
| 71 |Slice PDVOQ biggest queue size BUFFERS | 0|
3| -1|
| 72 |Slice PDVOQ biggest queue dest device | 511|
3| -1|
| 73 |Slice PDVOQ biggest queue dest slice | 0|
3| -1|
| 74 |Slice PDVOQ biggest queue dest ifg | 0|
3| -1|
| 75 |Slice PDVOQ biggest queue dest port | 0|
3| -1|
| 76 |Slice PDVOQ biggest queue VSC | 0|
3| -1|
| 77 |Slice PDOQ biggest queue No. | 0|
3| -1|
| 78 |Slice PDOQ biggest queue size BYTES | 0|
3| -1|
| 79 |Slice PDOQ Delete fifo watermark BYTES | 0|
3| -1|

```

## show controllers npu debug-utils

```

|   80 |TX fifo largest size port No.           |           0|
|   3|   0|
|   81 |TX fifo largest size WORDS               |           0|
|   3|   0|
|   82 |TX fifo largest size port No.           |           0|
|   3|   1|
|   83 |TX fifo largest size WORDS               |           0|
|   3|   1|
|   84 |RX fifo largest size port No.           |           0|
|   3|   0|
|   85 |RX fifo largest size WORDS               |           0|
|   3|   0|
|   86 |RX fifo largest size port No.           |           0|
|   3|   1|
|   87 |RX fifo largest size WORDS               |           0|
|   3|   1|
|   88 |FC from PDIF to TX-Scheduler per intf   |           0|
|   4|  -1|
|   89 |FC from PDIF to TX-Scheduler for IFG0   |           0|
|   4|   0|
|   90 |FC from PDIF to TX-Scheduler for IFG1   |           0|
|   4|   1|
|   91 |FC from PDOQ to Scheduler per slice     |           0|
|   4|  -1|
|   92 |Slice PDVOQ biggest queue No.           |           0|
|   4|  -1|
|   93 |Slice PDVOQ biggest queue size BUFFERS  |           0|
|   4|  -1|
|   94 |Slice PDVOQ biggest queue dest device   |           511|
|   4|  -1|
|   95 |Slice PDVOQ biggest queue dest slice    |           0|
|   4|  -1|
|   96 |Slice PDVOQ biggest queue dest ifg      |           0|
|   4|  -1|
|   97 |Slice PDVOQ biggest queue dest port     |           0|
|   4|  -1|
|   98 |Slice PDVOQ biggest queue VSC           |           0|
|   4|  -1|
|   99 |Slice PDOQ biggest queue No.            |           0|
|   4|  -1|
|  100 |Slice PDOQ biggest queue size BYTES     |           0|
|   4|  -1|
|  101 |Slice PDOQ Delete fifo watermark BYTES  |           0|
|   4|  -1|
|  102 |TX fifo largest size port No.           |           0|
|   4|   0|
|  103 |TX fifo largest size WORDS               |           0|
|   4|   0|
|  104 |TX fifo largest size port No.           |           0|
|   4|   1|
|  105 |TX fifo largest size WORDS               |           0|
|   4|   1|
|  106 |RX fifo largest size port No.           |           0|
|   4|   0|
|  107 |RX fifo largest size WORDS               |           0|
|   4|   0|
|  108 |RX fifo largest size port No.           |           0|
|   4|   1|
|  109 |RX fifo largest size WORDS               |           0|
|   4|   1|
|  110 |FC from PDIF to TX-Scheduler per intf   |           0|
|   5|  -1|
|  111 |FC from PDIF to TX-Scheduler for IFG0   |           0|
|   5|   0|

```

```

| 112 |FC from PDIF to TX-Scheduler for IFG1 | 0|
5| 1|
| 113 |FC from PDOQ to Scheduler per slice | 0|
5| -1|
| 114 |Slice PDVOQ biggest queue No. | 0|
5| -1|
| 115 |Slice PDVOQ biggest queue size BUFFERS | 0|
5| -1|
| 116 |Slice PDVOQ biggest queue dest device | 511|
5| -1|
| 117 |Slice PDVOQ biggest queue dest slice | 0|
5| -1|
| 118 |Slice PDVOQ biggest queue dest ifg | 0|
5| -1|
| 119 |Slice PDVOQ biggest queue dest port | 0|
5| -1|
| 120 |Slice PDVOQ biggest queue VSC | 0|
5| -1|
| 121 |Slice PDOQ biggest queue No. | 0|
5| -1|
| 122 |Slice PDOQ biggest queue size BYTES | 0|
5| -1|
| 123 |Slice PDOQ Delete fifo watermark BYTES | 0|
5| -1|
| 124 |TX fifo largest size port No. | 0|
5| 0|
| 125 |TX fifo largest size WORDS | 0|
5| 0|
| 126 |TX fifo largest size port No. | 0|
5| 1|
| 127 |TX fifo largest size WORDS | 0|
5| 1|
| 128 |RX fifo largest size port No. | 0|
5| 0|
| 129 |RX fifo largest size WORDS | 0|
5| 0|
| 130 |RX fifo largest size port No. | 0|
5| 1|
| 131 |RX fifo largest size WORDS | 0|
5| 1|
| 132 |TXCGM Watermark Total UNICAST BUFFERS (C+D) | 0|
-1| -1|
| 133 |TXCGM Watermark Total UNICAST Local BUFFERS (C) | 0|
-1| -1|
| 134 |TXCGM Watermark Total UNICAST Remote BUFFERS (D) | 0|
-1| -1|
| 135 |TXCGM Watermark Total PDs | 0|
-1| -1|
| 136 |TXCGM Watermark Total deleted PDs | 0|
-1| -1|
| 137 |TXCGM Watermark Total Unicast PDs | 0|
-1| -1|
| 138 |TXCGM Watermark Total Multicast PDs | 0|
-1| -1|
| 139 |TXCGM Watermark Total Fabric PDs | 0|
-1| -1|
| 140 |TXCGM Watermark Total MS-VOQs PDs | 0|
-1| -1|
| 141 |TXCGM Watermark Total MS-OQs PDs | 0|
-1| -1|
| 142 |SMS Min total free BUFFERS | 0|
-1| -1|
| 143 |SMS Max occupied BUFFERS | 97920|
-1| -1|

```

## show controllers npu debug-utils

```

| 144 |SMS Min free BUFFERS | 0|
-1| -1|
| 145 |SMS Min free buffers bank idx | 0|
-1| -1|
| 146 |SMS Max free BUFFERS | 0|
-1| -1|
| 147 |SMS Max free buffers bank idx | 0|
-1| -1|
| 148 |SMS Max FDOQ2SMS FIFO size | 0|
-1| -1|
| 149 |SMS Max FDOQ2SMS FIFO intf | 0|
-1| -1|
| 150 |number of non-empty Qs | 0|
-1| -1|
| 151 |SDK device frequency | 0|
-1| -1|
Rack/Slot/Asic: 0/FC0/1

```

```

=====
| # | Counter_name | val |
slice | ifg |
=====
| 0 |FC from PDIF to TX-Scheduler per intf | 0|
0| -1|
| 1 |FC from PDIF to TX-Scheduler for IFG0 | 0|
0| 0|
| 2 |FC from PDIF to TX-Scheduler for IFG1 | 0|
0| 1|
| 3 |FC from PDOQ to Scheduler per slice | 0|
0| -1|
| 4 |Slice PDVOQ biggest queue No. | 0|
0| -1|
| 5 |Slice PDVOQ biggest queue size BUFFERS | 0|
0| -1|
| 6 |Slice PDVOQ biggest queue dest device | 511|
0| -1|
| 7 |Slice PDVOQ biggest queue dest slice | 0|
0| -1|
| 8 |Slice PDVOQ biggest queue dest ifg | 0|
0| -1|
| 9 |Slice PDVOQ biggest queue dest port | 0|
0| -1|
| 10 |Slice PDVOQ biggest queue VSC | 0|
0| -1|
| 11 |Slice PDOQ biggest queue No. | 0|
0| -1|
| 12 |Slice PDOQ biggest queue size BYTES | 0|
0| -1|
| 13 |Slice PDOQ Delete fifo watermark BYTES | 0|
0| -1|
| 14 |TX fifo largest size port No. | 0|
0| 0|
| 15 |TX fifo largest size WORDS | 0|
0| 0|
| 16 |TX fifo largest size port No. | 0|
0| 1|
| 17 |TX fifo largest size WORDS | 0|
0| 1|
| 18 |RX fifo largest size port No. | 0|
0| 0|
| 19 |RX fifo largest size WORDS | 0|
0| 0|
| 20 |RX fifo largest size port No. | 0|
0| 1|
| 21 |RX fifo largest size WORDS | 0|

```

```

0| 1|
| 22 |FC from PDIF to TX-Scheduler per intf | 0|
1| -1|
| 23 |FC from PDIF to TX-Scheduler for IFG0 | 0|
1| 0|
| 24 |FC from PDIF to TX-Scheduler for IFG1 | 0|
1| 1|
| 25 |FC from PDOQ to Scheduler per slice | 0|
1| -1|
| 26 |Slice PDVOQ biggest queue No. | 0|
1| -1|
| 27 |Slice PDVOQ biggest queue size BUFFERS | 0|
1| -1|
| 28 |Slice PDVOQ biggest queue dest device | 511|
1| -1|
| 29 |Slice PDVOQ biggest queue dest slice | 0|
1| -1|
| 30 |Slice PDVOQ biggest queue dest ifg | 0|
1| -1|
| 31 |Slice PDVOQ biggest queue dest port | 0|
1| -1|
| 32 |Slice PDVOQ biggest queue VSC | 0|
1| -1|
| 33 |Slice PDOQ biggest queue No. | 0|
1| -1|
| 34 |Slice PDOQ biggest queue size BYTES | 0|
1| -1|
| 35 |Slice PDOQ Delete fifo watermark BYTES | 0|
1| -1|
| 36 |TX fifo largest size port No. | 0|
1| 0|
| 37 |TX fifo largest size WORDS | 0|
1| 0|
| 38 |TX fifo largest size port No. | 0|
1| 1|
| 39 |TX fifo largest size WORDS | 0|
1| 1|
| 40 |RX fifo largest size port No. | 0|
1| 0|
| 41 |RX fifo largest size WORDS | 0|
1| 0|
| 42 |RX fifo largest size port No. | 0|
1| 1|
| 43 |RX fifo largest size WORDS | 0|
1| 1|
| 44 |FC from PDIF to TX-Scheduler per intf | 0|
2| -1|
| 45 |FC from PDIF to TX-Scheduler for IFG0 | 0|
2| 0|
| 46 |FC from PDIF to TX-Scheduler for IFG1 | 0|
2| 1|
| 47 |FC from PDOQ to Scheduler per slice | 0|
2| -1|
| 48 |Slice PDVOQ biggest queue No. | 0|
2| -1|
| 49 |Slice PDVOQ biggest queue size BUFFERS | 0|
2| -1|
| 50 |Slice PDVOQ biggest queue dest device | 511|
2| -1|
| 51 |Slice PDVOQ biggest queue dest slice | 0|
2| -1|
| 52 |Slice PDVOQ biggest queue dest ifg | 0|
2| -1|
| 53 |Slice PDVOQ biggest queue dest port | 0|

```

## show controllers npu debug-utils

```

2| -1|
| 54 |Slice PDVOQ biggest queue VSC | 0|
2| -1|
| 55 |Slice PDOQ biggest queue No. | 0|
2| -1|
| 56 |Slice PDOQ biggest queue size BYTES | 0|
2| -1|
| 57 |Slice PDOQ Delete fifo watermark BTYES | 0|
2| -1|
| 58 |TX fifo largest size port No. | 0|
2| 0|
| 59 |TX fifo largest size WORDS | 0|
2| 0|
| 60 |TX fifo largest size port No. | 0|
2| 1|
| 61 |TX fifo largest size WORDS | 0|
2| 1|
| 62 |RX fifo largest size port No. | 0|
2| 0|
| 63 |RX fifo largest size WORDS | 0|
2| 0|
| 64 |RX fifo largest size port No. | 0|
2| 1|
| 65 |RX fifo largest size WORDS | 0|
2| 1|
| 66 |FC from PDIF to TX-Scheduler per intf | 0|
3| -1|
| 67 |FC from PDIF to TX-Scheduler for IFG0 | 0|
3| 0|
| 68 |FC from PDIF to TX-Scheduler for IFG1 | 0|
3| 1|
| 69 |FC from PDOQ to Scheduler per slice | 0|
3| -1|
| 70 |Slice PDVOQ biggest queue No. | 0|
3| -1|
| 71 |Slice PDVOQ biggest queue size BUFFERS | 0|
3| -1|
| 72 |Slice PDVOQ biggest queue dest device | 511|
3| -1|
| 73 |Slice PDVOQ biggest queue dest slice | 0|
3| -1|
| 74 |Slice PDVOQ biggest queue dest ifg | 0|
3| -1|
| 75 |Slice PDVOQ biggest queue dest port | 0|
3| -1|
| 76 |Slice PDVOQ biggest queue VSC | 0|
3| -1|
| 77 |Slice PDOQ biggest queue No. | 0|
3| -1|
| 78 |Slice PDOQ biggest queue size BYTES | 0|
3| -1|
| 79 |Slice PDOQ Delete fifo watermark BTYES | 0|
3| -1|
| 80 |TX fifo largest size port No. | 0|
3| 0|
| 81 |TX fifo largest size WORDS | 0|
3| 0|
| 82 |TX fifo largest size port No. | 0|
3| 1|
| 83 |TX fifo largest size WORDS | 0|
3| 1|
| 84 |RX fifo largest size port No. | 0|
3| 0|
| 85 |RX fifo largest size WORDS | 0|

```

```

3| 0|
| 86 |RX fifo largest size port No. | 0|
3| 1|
| 87 |RX fifo largest size WORDS | 0|
3| 1|
| 88 |FC from PDIF to TX-Scheduler per intf | 0|
4| -1|
| 89 |FC from PDIF to TX-Scheduler for IFG0 | 0|
4| 0|
| 90 |FC from PDIF to TX-Scheduler for IFG1 | 0|
4| 1|
| 91 |FC from PDOQ to Scheduler per slice | 0|
4| -1|
| 92 |Slice PDVOQ biggest queue No. | 0|
4| -1|
| 93 |Slice PDVOQ biggest queue size BUFFERS | 0|
4| -1|
| 94 |Slice PDVOQ biggest queue dest device | 511|
4| -1|
| 95 |Slice PDVOQ biggest queue dest slice | 0|
4| -1|
| 96 |Slice PDVOQ biggest queue dest ifg | 0|
4| -1|
| 97 |Slice PDVOQ biggest queue dest port | 0|
4| -1|
| 98 |Slice PDVOQ biggest queue VSC | 0|
4| -1|
| 99 |Slice PDOQ biggest queue No. | 0|
4| -1|
| 100 |Slice PDOQ biggest queue size BYTES | 0|
4| -1|
| 101 |Slice PDOQ Delete fifo watermark BTYES | 0|
4| -1|
| 102 |TX fifo largest size port No. | 0|
4| 0|
| 103 |TX fifo largest size WORDS | 0|
4| 0|
| 104 |TX fifo largest size port No. | 0|
4| 1|
| 105 |TX fifo largest size WORDS | 0|
4| 1|
| 106 |RX fifo largest size port No. | 0|
4| 0|
| 107 |RX fifo largest size WORDS | 0|
4| 0|
| 108 |RX fifo largest size port No. | 0|
4| 1|
| 109 |RX fifo largest size WORDS | 0|
4| 1|
| 110 |FC from PDIF to TX-Scheduler per intf | 0|
5| -1|
| 111 |FC from PDIF to TX-Scheduler for IFG0 | 0|
5| 0|
| 112 |FC from PDIF to TX-Scheduler for IFG1 | 0|
5| 1|
| 113 |FC from PDOQ to Scheduler per slice | 0|
5| -1|
| 114 |Slice PDVOQ biggest queue No. | 0|
5| -1|
| 115 |Slice PDVOQ biggest queue size BUFFERS | 0|
5| -1|
| 116 |Slice PDVOQ biggest queue dest device | 511|
5| -1|
| 117 |Slice PDVOQ biggest queue dest slice | 0|

```

## show controllers npu debug-utils

```

5| -1|
| 118 |Slice PDVOQ biggest queue dest ifg | 0|
5| -1|
| 119 |Slice PDVOQ biggest queue dest port | 0|
5| -1|
| 120 |Slice PDVOQ biggest queue VSC | 0|
5| -1|
| 121 |Slice PDOQ biggest queue No. | 0|
5| -1|
| 122 |Slice PDOQ biggest queue size BYTES | 0|
5| -1|
| 123 |Slice PDOQ Delete fifo watermark BYTES | 0|
5| -1|
| 124 |TX fifo largest size port No. | 0|
5| 0|
| 125 |TX fifo largest size WORDS | 0|
5| 0|
| 126 |TX fifo largest size port No. | 0|
5| 1|
| 127 |TX fifo largest size WORDS | 0|
5| 1|
| 128 |RX fifo largest size port No. | 0|
5| 0|
| 129 |RX fifo largest size WORDS | 0|
5| 0|
| 130 |RX fifo largest size port No. | 0|
5| 1|
| 131 |RX fifo largest size WORDS | 0|
5| 1|
| 132 |TXCGM Watermark Total UNICAST BUFFERS (C+D) | 0|
-1| -1|
| 133 |TXCGM Watermark Total UNICAST Local BUFFERS (C) | 0|
-1| -1|
| 134 |TXCGM Watermark Total UNICAST Remote BUFFERS (D) | 0|
-1| -1|
| 135 |TXCGM Watermark Total PDs | 0|
-1| -1|
| 136 |TXCGM Watermark Total deleted PDs | 0|
-1| -1|
| 137 |TXCGM Watermark Total Unicast PDs | 0|
-1| -1|
| 138 |TXCGM Watermark Total Multicast PDs | 0|
-1| -1|
| 139 |TXCGM Watermark Total Fabric PDs | 0|
-1| -1|
| 140 |TXCGM Watermark Total MS-VOQs PDs | 0|
-1| -1|
| 141 |TXCGM Watermark Total MS-OQs PDs | 0|
-1| -1|
| 142 |SMS Min total free BUFFERS | 0|
-1| -1|
| 143 |SMS Max occupied BUFFERS | 97920|
-1| -1|
| 144 |SMS Min free BUFFERS | 0|
-1| -1|
| 145 |SMS Min free buffers bank idx | 0|
-1| -1|
| 146 |SMS Max free BUFFERS | 0|
-1| -1|
| 147 |SMS Max free buffers bank idx | 0|
-1| -1|
| 148 |SMS Max FDOQ2SMS FIFO size | 0|
-1| -1|
| 149 |SMS Max FDOQ2SMS FIFO intf | 0|

```

```

-1| -1|
| 150 |number of non-empty Qs | 0|
-1| -1|
| 151 |Active port srd speed port_id 0 | 0|
3| 1|
| 152 |SDK device frequency | 0|
-1| -1|
Rack/Slot/Asic: 0/FC0/2

```

```

=====
| # | Counter_name | val |
slice | ifg |
=====
| 0 |FC from PDIF to TX-Scheduler per intf | 0|
0| -1|
| 1 |FC from PDIF to TX-Scheduler for IFG0 | 0|
0| 0|
| 2 |FC from PDIF to TX-Scheduler for IFG1 | 0|
0| 1|
| 3 |FC from PDOQ to Scheduler per slice | 0|
0| -1|
| 4 |Slice PDVOQ biggest queue No. | 0|
0| -1|
| 5 |Slice PDVOQ biggest queue size BUFFERS | 0|
0| -1|
| 6 |Slice PDVOQ biggest queue dest device | 511|
0| -1|
| 7 |Slice PDVOQ biggest queue dest slice | 0|
0| -1|
| 8 |Slice PDVOQ biggest queue dest ifg | 0|
0| -1|
| 9 |Slice PDVOQ biggest queue dest port | 0|
0| -1|
| 10 |Slice PDVOQ biggest queue VSC | 0|
0| -1|
| 11 |Slice PDOQ biggest queue No. | 0|
0| -1|
| 12 |Slice PDOQ biggest queue size BYTES | 0|
0| -1|
| 13 |Slice PDOQ Delete fifo watermark BYTES | 0|
0| -1|
| 14 |TX fifo largest size port No. | 0|
0| 0|
| 15 |TX fifo largest size WORDS | 0|
0| 0|
| 16 |TX fifo largest size port No. | 0|
0| 1|
| 17 |TX fifo largest size WORDS | 0|
0| 1|
| 18 |RX fifo largest size port No. | 0|
0| 0|
| 19 |RX fifo largest size WORDS | 0|
0| 0|
| 20 |RX fifo largest size port No. | 0|
0| 1|
| 21 |RX fifo largest size WORDS | 0|
0| 1|
| 22 |FC from PDIF to TX-Scheduler per intf | 0|
1| -1|
| 23 |FC from PDIF to TX-Scheduler for IFG0 | 0|
1| 0|
| 24 |FC from PDIF to TX-Scheduler for IFG1 | 0|
1| 1|
| 25 |FC from PDOQ to Scheduler per slice | 0|
1| -1|

```

## show controllers npu debug-utils

```

| 26 |Slice PDVOQ biggest queue No. | 0|
| 1| -1|
| 27 |Slice PDVOQ biggest queue size BUFFERS | 0|
| 1| -1|
| 28 |Slice PDVOQ biggest queue dest device | 511|
| 1| -1|
| 29 |Slice PDVOQ biggest queue dest slice | 0|
| 1| -1|
| 30 |Slice PDVOQ biggest queue dest ifg | 0|
| 1| -1|
| 31 |Slice PDVOQ biggest queue dest port | 0|
| 1| -1|
| 32 |Slice PDVOQ biggest queue VSC | 0|
| 1| -1|
| 33 |Slice PDOQ biggest queue No. | 0|
| 1| -1|
| 34 |Slice PDOQ biggest queue size BYTES | 0|
| 1| -1|
| 35 |Slice PDOQ Delete fifo watermark BYTES | 0|
| 1| -1|
| 36 |TX fifo largest size port No. | 0|
| 1| 0|
| 37 |TX fifo largest size WORDS | 0|
| 1| 0|
| 38 |TX fifo largest size port No. | 0|
| 1| 1|
| 39 |TX fifo largest size WORDS | 0|
| 1| 1|
| 40 |RX fifo largest size port No. | 0|
| 1| 0|
| 41 |RX fifo largest size WORDS | 0|
| 1| 0|
| 42 |RX fifo largest size port No. | 0|
| 1| 1|
| 43 |RX fifo largest size WORDS | 0|
| 1| 1|
| 44 |FC from PDIF to TX-Scheduler per intf | 0|
| 2| -1|
| 45 |FC from PDIF to TX-Scheduler for IFG0 | 0|
| 2| 0|
| 46 |FC from PDIF to TX-Scheduler for IFG1 | 0|
| 2| 1|
| 47 |FC from PDOQ to Scheduler per slice | 0|
| 2| -1|
| 48 |Slice PDVOQ biggest queue No. | 0|
| 2| -1|
| 49 |Slice PDVOQ biggest queue size BUFFERS | 0|
| 2| -1|
| 50 |Slice PDVOQ biggest queue dest device | 511|
| 2| -1|
| 51 |Slice PDVOQ biggest queue dest slice | 0|
| 2| -1|
| 52 |Slice PDVOQ biggest queue dest ifg | 0|
| 2| -1|
| 53 |Slice PDVOQ biggest queue dest port | 0|
| 2| -1|
| 54 |Slice PDVOQ biggest queue VSC | 0|
| 2| -1|
| 55 |Slice PDOQ biggest queue No. | 0|
| 2| -1|
| 56 |Slice PDOQ biggest queue size BYTES | 0|
| 2| -1|
| 57 |Slice PDOQ Delete fifo watermark BYTES | 0|
| 2| -1|

```

```

| 58 |TX fifo largest size port No. | 0|
2| 0|
| 59 |TX fifo largest size WORDS | 0|
2| 0|
| 60 |TX fifo largest size port No. | 0|
2| 1|
| 61 |TX fifo largest size WORDS | 0|
2| 1|
| 62 |RX fifo largest size port No. | 0|
2| 0|
| 63 |RX fifo largest size WORDS | 0|
2| 0|
| 64 |RX fifo largest size port No. | 0|
2| 1|
| 65 |RX fifo largest size WORDS | 0|
2| 1|
| 66 |FC from PDIF to TX-Scheduler per intf | 0|
3| -1|
| 67 |FC from PDIF to TX-Scheduler for IFG0 | 0|
3| 0|
| 68 |FC from PDIF to TX-Scheduler for IFG1 | 0|
3| 1|
| 69 |FC from PDOQ to Scheduler per slice | 0|
3| -1|
| 70 |Slice PDVOQ biggest queue No. | 0|
3| -1|
| 71 |Slice PDVOQ biggest queue size BUFFERS | 0|
3| -1|
| 72 |Slice PDVOQ biggest queue dest device | 511|
3| -1|
| 73 |Slice PDVOQ biggest queue dest slice | 0|
3| -1|
| 74 |Slice PDVOQ biggest queue dest ifg | 0|
3| -1|
| 75 |Slice PDVOQ biggest queue dest port | 0|
3| -1|
| 76 |Slice PDVOQ biggest queue VSC | 0|
3| -1|
| 77 |Slice PDOQ biggest queue No. | 0|
3| -1|
| 78 |Slice PDOQ biggest queue size BYTES | 0|
3| -1|
| 79 |Slice PDOQ Delete fifo watermark BYTES | 0|
3| -1|
| 80 |TX fifo largest size port No. | 0|
3| 0|
| 81 |TX fifo largest size WORDS | 0|
3| 0|
| 82 |TX fifo largest size port No. | 0|
3| 1|
| 83 |TX fifo largest size WORDS | 0|
3| 1|
| 84 |RX fifo largest size port No. | 0|
3| 0|
| 85 |RX fifo largest size WORDS | 0|
3| 0|
| 86 |RX fifo largest size port No. | 0|
3| 1|
| 87 |RX fifo largest size WORDS | 0|
3| 1|
| 88 |FC from PDIF to TX-Scheduler per intf | 0|
4| -1|
| 89 |FC from PDIF to TX-Scheduler for IFG0 | 0|
4| 0|

```

## show controllers npu debug-utils

```

|   90 |FC from PDIF to TX-Scheduler for IFG1           |           0|
| 4|   1|
|   91 |FC from PDOQ to Scheduler per slice               |           0|
| 4|  -1|
|   92 |Slice PDVOQ biggest queue No.                    |           0|
| 4|  -1|
|   93 |Slice PDVOQ biggest queue size BUFFERS           |           0|
| 4|  -1|
|   94 |Slice PDVOQ biggest queue dest device            |          511|
| 4|  -1|
|   95 |Slice PDVOQ biggest queue dest slice             |           0|
| 4|  -1|
|   96 |Slice PDVOQ biggest queue dest ifg              |           0|
| 4|  -1|
|   97 |Slice PDVOQ biggest queue dest port             |           0|
| 4|  -1|
|   98 |Slice PDVOQ biggest queue VSC                    |           0|
| 4|  -1|
|   99 |Slice PDOQ biggest queue No.                     |           0|
| 4|  -1|
|  100 |Slice PDOQ biggest queue size BYTES              |           0|
| 4|  -1|
|  101 |Slice PDOQ Delete fifo watermark BYTES           |           0|
| 4|  -1|
|  102 |TX fifo largest size port No.                    |           0|
| 4|   0|
|  103 |TX fifo largest size WORDS                       |           0|
| 4|   0|
|  104 |TX fifo largest size port No.                    |           0|
| 4|   1|
|  105 |TX fifo largest size WORDS                       |           0|
| 4|   1|
|  106 |RX fifo largest size port No.                    |           0|
| 4|   0|
|  107 |RX fifo largest size WORDS                       |           0|
| 4|   0|
|  108 |RX fifo largest size port No.                    |           0|
| 4|   1|
|  109 |RX fifo largest size WORDS                       |           0|
| 4|   1|
|  110 |FC from PDIF to TX-Scheduler per intf           |           0|
| 5|  -1|
|  111 |FC from PDIF to TX-Scheduler for IFG0           |           0|
| 5|   0|
|  112 |FC from PDIF to TX-Scheduler for IFG1           |           0|
| 5|   1|
|  113 |FC from PDOQ to Scheduler per slice               |           0|
| 5|  -1|
|  114 |Slice PDVOQ biggest queue No.                    |           0|
| 5|  -1|
|  115 |Slice PDVOQ biggest queue size BUFFERS           |           0|
| 5|  -1|
|  116 |Slice PDVOQ biggest queue dest device            |          511|
| 5|  -1|
|  117 |Slice PDVOQ biggest queue dest slice             |           0|
| 5|  -1|
|  118 |Slice PDVOQ biggest queue dest ifg              |           0|
| 5|  -1|
|  119 |Slice PDVOQ biggest queue dest port             |           0|
| 5|  -1|
|  120 |Slice PDVOQ biggest queue VSC                    |           0|
| 5|  -1|
|  121 |Slice PDOQ biggest queue No.                     |           0|
| 5|  -1|

```

```

| 122 |Slice PDOQ biggest queue size BYTES | 0|
5| -1|
| 123 |Slice PDOQ Delete fifo watermark BYTES | 0|
5| -1|
| 124 |TX fifo largest size port No. | 0|
5| 0|
| 125 |TX fifo largest size WORDS | 0|
5| 0|
| 126 |TX fifo largest size port No. | 0|
5| 1|
| 127 |TX fifo largest size WORDS | 0|
5| 1|
| 128 |RX fifo largest size port No. | 0|
5| 0|
| 129 |RX fifo largest size WORDS | 0|
5| 0|
| 130 |RX fifo largest size port No. | 0|
5| 1|
| 131 |RX fifo largest size WORDS | 0|
5| 1|
| 132 |TXCGM Watermark Total UNICAST BUFFERS (C+D) | 0|
-1| -1|
| 133 |TXCGM Watermark Total UNICAST Local BUFFERS (C) | 0|
-1| -1|
| 134 |TXCGM Watermark Total UNICAST Remote BUFFERS (D) | 0|
-1| -1|
| 135 |TXCGM Watermark Total PDs | 0|
-1| -1|
| 136 |TXCGM Watermark Total deleted PDs | 0|
-1| -1|
| 137 |TXCGM Watermark Total Unicast PDs | 0|
-1| -1|
| 138 |TXCGM Watermark Total Multicast PDs | 0|
-1| -1|
| 139 |TXCGM Watermark Total Fabric PDs | 0|
-1| -1|
| 140 |TXCGM Watermark Total MS-VOQs PDs | 0|
-1| -1|
| 141 |TXCGM Watermark Total MS-OQs PDs | 0|
-1| -1|
| 142 |SMS Min total free BUFFERS | 0|
-1| -1|
| 143 |SMS Max occupied BUFFERS | 97920|
-1| -1|
| 144 |SMS Min free BUFFERS | 0|
-1| -1|
| 145 |SMS Min free buffers bank idx | 0|
-1| -1|
| 146 |SMS Max free BUFFERS | 0|
-1| -1|
| 147 |SMS Max free buffers bank idx | 0|
-1| -1|
| 148 |SMS Max FDOQ2SMS FIFO size | 0|
-1| -1|
| 149 |SMS Max FDOQ2SMS FIFO intf | 0|
-1| -1|
| 150 |number of non-empty Qs | 0|
-1| -1|
| 151 |SDK device frequency | 0|
-1| -1|
Rack/Slot/Asic: 0/FC1/3

```

```

=====
| # | Counter_name | val |
slice | ifg |

```

## show controllers npu debug-utils

```

=====
|   0 |FC from PDIF to TX-Scheduler per intf          |           0|
|   0| -1|
|   1 |FC from PDIF to TX-Scheduler for IFG0          |           0|
|   0|  0|
|   2 |FC from PDIF to TX-Scheduler for IFG1          |           0|
|   0|  1|
|   3 |FC from PDOQ to Scheduler per slice             |           0|
|   0| -1|
|   4 |Slice PDVOQ biggest queue No.                  |           0|
|   0| -1|
|   5 |Slice PDVOQ biggest queue size BUFFERS         |           0|
|   0| -1|
|   6 |Slice PDVOQ biggest queue dest device          |           511|
|   0| -1|
|   7 |Slice PDVOQ biggest queue dest slice           |           0|
|   0| -1|
|   8 |Slice PDVOQ biggest queue dest ifg            |           0|
|   0| -1|
|   9 |Slice PDVOQ biggest queue dest port           |           0|
|   0| -1|
|  10 |Slice PDVOQ biggest queue VSC                  |           0|
|   0| -1|
|  11 |Slice PDOQ biggest queue No.                   |           0|
|   0| -1|
|  12 |Slice PDOQ biggest queue size BYTES            |           0|
|   0| -1|
|  13 |Slice PDOQ Delete fifo watermark BYTES        |           0|
|   0| -1|
|  14 |TX fifo largest size port No.                  |           0|
|   0|  0|
|  15 |TX fifo largest size WORDS                     |           0|
|   0|  0|
|  16 |TX fifo largest size port No.                  |           0|
|   0|  1|
|  17 |TX fifo largest size WORDS                     |           0|
|   0|  1|
|  18 |RX fifo largest size port No.                  |           0|
|   0|  0|
|  19 |RX fifo largest size WORDS                     |           0|
|   0|  0|
|  20 |RX fifo largest size port No.                  |           0|
|   0|  1|
|  21 |RX fifo largest size WORDS                     |           0|
|   0|  1|
|  22 |FC from PDIF to TX-Scheduler per intf          |           0|
|   1| -1|
|  23 |FC from PDIF to TX-Scheduler for IFG0          |           0|
|   1|  0|
|  24 |FC from PDIF to TX-Scheduler for IFG1          |           0|
|   1|  1|
|  25 |FC from PDOQ to Scheduler per slice             |           0|
|   1| -1|
|  26 |Slice PDVOQ biggest queue No.                  |           0|
|   1| -1|
|  27 |Slice PDVOQ biggest queue size BUFFERS         |           0|
|   1| -1|
|  28 |Slice PDVOQ biggest queue dest device          |           511|
|   1| -1|
|  29 |Slice PDVOQ biggest queue dest slice           |           0|
|   1| -1|
|  30 |Slice PDVOQ biggest queue dest ifg            |           0|
|   1| -1|
|  31 |Slice PDVOQ biggest queue dest port           |           0|

```

```

1| -1|
| 32 |Slice PDVOQ biggest queue VSC | 0|
1| -1|
| 33 |Slice PDOQ biggest queue No. | 0|
1| -1|
| 34 |Slice PDOQ biggest queue size BYTES | 0|
1| -1|
| 35 |Slice PDOQ Delete fifo watermark BYTES | 0|
1| -1|
| 36 |TX fifo largest size port No. | 0|
1| 0|
| 37 |TX fifo largest size WORDS | 0|
1| 0|
| 38 |TX fifo largest size port No. | 0|
1| 1|
| 39 |TX fifo largest size WORDS | 0|
1| 1|
| 40 |RX fifo largest size port No. | 0|
1| 0|
| 41 |RX fifo largest size WORDS | 0|
1| 0|
| 42 |RX fifo largest size port No. | 0|
1| 1|
| 43 |RX fifo largest size WORDS | 0|
1| 1|
| 44 |FC from PDIF to TX-Scheduler per intf | 0|
2| -1|
| 45 |FC from PDIF to TX-Scheduler for IFG0 | 0|
2| 0|
| 46 |FC from PDIF to TX-Scheduler for IFG1 | 0|
2| 1|
| 47 |FC from PDOQ to Scheduler per slice | 0|
2| -1|
| 48 |Slice PDVOQ biggest queue No. | 0|
2| -1|
| 49 |Slice PDVOQ biggest queue size BUFFERS | 0|
2| -1|
| 50 |Slice PDVOQ biggest queue dest device | 511|
2| -1|
| 51 |Slice PDVOQ biggest queue dest slice | 0|
2| -1|
| 52 |Slice PDVOQ biggest queue dest ifg | 0|
2| -1|
| 53 |Slice PDVOQ biggest queue dest port | 0|
2| -1|
| 54 |Slice PDVOQ biggest queue VSC | 0|
2| -1|
| 55 |Slice PDOQ biggest queue No. | 0|
2| -1|
| 56 |Slice PDOQ biggest queue size BYTES | 0|
2| -1|
| 57 |Slice PDOQ Delete fifo watermark BYTES | 0|
2| -1|
| 58 |TX fifo largest size port No. | 0|
2| 0|
| 59 |TX fifo largest size WORDS | 0|
2| 0|
| 60 |TX fifo largest size port No. | 0|
2| 1|
| 61 |TX fifo largest size WORDS | 0|
2| 1|
| 62 |RX fifo largest size port No. | 0|
2| 0|
| 63 |RX fifo largest size WORDS | 0|

```

## show controllers npu debug-utils

```

2| 0|
| 64 |RX fifo largest size port No. | 0|
2| 1|
| 65 |RX fifo largest size WORDS | 0|
2| 1|
| 66 |FC from PDIF to TX-Scheduler per intf | 0|
3| -1|
| 67 |FC from PDIF to TX-Scheduler for IFG0 | 0|
3| 0|
| 68 |FC from PDIF to TX-Scheduler for IFG1 | 0|
3| 1|
| 69 |FC from PDOQ to Scheduler per slice | 0|
3| -1|
| 70 |Slice PDVOQ biggest queue No. | 0|
3| -1|
| 71 |Slice PDVOQ biggest queue size BUFFERS | 0|
3| -1|
| 72 |Slice PDVOQ biggest queue dest device | 511|
3| -1|
| 73 |Slice PDVOQ biggest queue dest slice | 0|
3| -1|
| 74 |Slice PDVOQ biggest queue dest ifg | 0|
3| -1|
| 75 |Slice PDVOQ biggest queue dest port | 0|
3| -1|
| 76 |Slice PDVOQ biggest queue VSC | 0|
3| -1|
| 77 |Slice PDOQ biggest queue No. | 0|
3| -1|
| 78 |Slice PDOQ biggest queue size BYTES | 0|
3| -1|
| 79 |Slice PDOQ Delete fifo watermark BYTES | 0|
3| -1|
| 80 |TX fifo largest size port No. | 0|
3| 0|
| 81 |TX fifo largest size WORDS | 0|
3| 0|
| 82 |TX fifo largest size port No. | 0|
3| 1|
| 83 |TX fifo largest size WORDS | 0|
3| 1|
| 84 |RX fifo largest size port No. | 0|
3| 0|
| 85 |RX fifo largest size WORDS | 0|
3| 0|
| 86 |RX fifo largest size port No. | 0|
3| 1|
| 87 |RX fifo largest size WORDS | 0|
3| 1|
| 88 |FC from PDIF to TX-Scheduler per intf | 0|
4| -1|
| 89 |FC from PDIF to TX-Scheduler for IFG0 | 0|
4| 0|
| 90 |FC from PDIF to TX-Scheduler for IFG1 | 0|
4| 1|
| 91 |FC from PDOQ to Scheduler per slice | 0|
4| -1|
| 92 |Slice PDVOQ biggest queue No. | 0|
4| -1|
| 93 |Slice PDVOQ biggest queue size BUFFERS | 0|
4| -1|
| 94 |Slice PDVOQ biggest queue dest device | 511|
4| -1|
| 95 |Slice PDVOQ biggest queue dest slice | 0|

```

```

4| -1|
| 96 |Slice PDVOQ biggest queue dest ifg | 0|
4| -1|
| 97 |Slice PDVOQ biggest queue dest port | 0|
4| -1|
| 98 |Slice PDVOQ biggest queue VSC | 0|
4| -1|
| 99 |Slice PDOQ biggest queue No. | 0|
4| -1|
| 100 |Slice PDOQ biggest queue size BYTES | 0|
4| -1|
| 101 |Slice PDOQ Delete fifo watermark BTYES | 0|
4| -1|
| 102 |TX fifo largest size port No. | 0|
4| 0|
| 103 |TX fifo largest size WORDS | 0|
4| 0|
| 104 |TX fifo largest size port No. | 0|
4| 1|
| 105 |TX fifo largest size WORDS | 0|
4| 1|
| 106 |RX fifo largest size port No. | 0|
4| 0|
| 107 |RX fifo largest size WORDS | 0|
4| 0|
| 108 |RX fifo largest size port No. | 0|
4| 1|
| 109 |RX fifo largest size WORDS | 0|
4| 1|
| 110 |FC from PDIF to TX-Scheduler per intf | 0|
5| -1|
| 111 |FC from PDIF to TX-Scheduler for IFG0 | 0|
5| 0|
| 112 |FC from PDIF to TX-Scheduler for IFG1 | 0|
5| 1|
| 113 |FC from PDOQ to Scheduler per slice | 0|
5| -1|
| 114 |Slice PDVOQ biggest queue No. | 0|
5| -1|
| 115 |Slice PDVOQ biggest queue size BUFFERS | 0|
5| -1|
| 116 |Slice PDVOQ biggest queue dest device | 511|
5| -1|
| 117 |Slice PDVOQ biggest queue dest slice | 0|
5| -1|
| 118 |Slice PDVOQ biggest queue dest ifg | 0|
5| -1|
| 119 |Slice PDVOQ biggest queue dest port | 0|
5| -1|
| 120 |Slice PDVOQ biggest queue VSC | 0|
5| -1|
| 121 |Slice PDOQ biggest queue No. | 0|
5| -1|
| 122 |Slice PDOQ biggest queue size BYTES | 0|
5| -1|
| 123 |Slice PDOQ Delete fifo watermark BTYES | 0|
5| -1|
| 124 |TX fifo largest size port No. | 0|
5| 0|
| 125 |TX fifo largest size WORDS | 0|
5| 0|
| 126 |TX fifo largest size port No. | 0|
5| 1|
| 127 |TX fifo largest size WORDS | 0|

```

## show controllers npu debug-utils

```

5| 1|
| 128 |RX fifo largest size port No. | 0|
5| 0|
| 129 |RX fifo largest size WORDS | 0|
5| 0|
| 130 |RX fifo largest size port No. | 0|
5| 1|
| 131 |RX fifo largest size WORDS | 0|
5| 1|
| 132 |TXCGM Watermark Total UNICAST BUFFERS (C+D) | 0|
-1| -1|
| 133 |TXCGM Watermark Total UNICAST Local BUFFERS (C) | 0|
-1| -1|
| 134 |TXCGM Watermark Total UNICAST Remote BUFFERS (D) | 0|
-1| -1|
| 135 |TXCGM Watermark Total PDs | 0|
-1| -1|
| 136 |TXCGM Watermark Total deleted PDs | 0|
-1| -1|
| 137 |TXCGM Watermark Total Unicast PDs | 0|
-1| -1|
| 138 |TXCGM Watermark Total Multicast PDs | 0|
-1| -1|
| 139 |TXCGM Watermark Total Fabric PDs | 0|
-1| -1|
| 140 |TXCGM Watermark Total MS-VOQs PDs | 0|
-1| -1|
| 141 |TXCGM Watermark Total MS-OQs PDs | 0|
-1| -1|
| 142 |SMS Min total free BUFFERS | 0|
-1| -1|
| 143 |SMS Max occupied BUFFERS | 97920|
-1| -1|
| 144 |SMS Min free BUFFERS | 0|
-1| -1|
| 145 |SMS Min free buffers bank idx | 0|
-1| -1|
| 146 |SMS Max free BUFFERS | 0|
-1| -1|
| 147 |SMS Max free buffers bank idx | 0|
-1| -1|
| 148 |SMS Max FDOQ2SMS FIFO size | 0|
-1| -1|
| 149 |SMS Max FDOQ2SMS FIFO intf | 0|
-1| -1|
| 150 |number of non-empty Qs | 0|
-1| -1|
| 151 |SDK device frequency | 0|
-1| -1|

```

Rack/Slot/Asic: 0/FC1/4

```

=====
| # | Counter_name | val |
slice | ifg |
=====
| 0 |FC from PDIF to TX-Scheduler per intf | 0|
0| -1|
| 1 |FC from PDIF to TX-Scheduler for IFG0 | 0|
0| 0|
| 2 |FC from PDIF to TX-Scheduler for IFG1 | 0|
0| 1|
| 3 |FC from PDOQ to Scheduler per slice | 0|
0| -1|
| 4 |Slice PDVOQ biggest queue No. | 0|
0| -1|

```

```

|   5 |Slice PDVOQ biggest queue size BUFFERS |           0|
0| -1|
|   6 |Slice PDVOQ biggest queue dest device |           511|
0| -1|
|   7 |Slice PDVOQ biggest queue dest slice |           0|
0| -1|
|   8 |Slice PDVOQ biggest queue dest ifg |           0|
0| -1|
|   9 |Slice PDVOQ biggest queue dest port |           0|
0| -1|
|  10 |Slice PDVOQ biggest queue VSC |           0|
0| -1|
|  11 |Slice PDOQ biggest queue No. |           0|
0| -1|
|  12 |Slice PDOQ biggest queue size BYTES |           0|
0| -1|
|  13 |Slice PDOQ Delete fifo watermark BTYES |           0|
0| -1|
|  14 |TX fifo largest size port No. |           0|
0|  0|
|  15 |TX fifo largest size WORDS |           0|
0|  0|
|  16 |TX fifo largest size port No. |           0|
0|  1|
|  17 |TX fifo largest size WORDS |           0|
0|  1|
|  18 |RX fifo largest size port No. |           0|
0|  0|
|  19 |RX fifo largest size WORDS |           0|
0|  0|
|  20 |RX fifo largest size port No. |           0|
0|  1|
|  21 |RX fifo largest size WORDS |           0|
0|  1|
|  22 |FC from PDIF to TX-Scheduler per intf |           0|
1| -1|
|  23 |FC from PDIF to TX-Scheduler for IFG0 |           0|
1|  0|
|  24 |FC from PDIF to TX-Scheduler for IFG1 |           0|
1|  1|
|  25 |FC from PDOQ to Scheduler per slice |           0|
1| -1|
|  26 |Slice PDVOQ biggest queue No. |           0|
1| -1|
|  27 |Slice PDVOQ biggest queue size BUFFERS |           0|
1| -1|
|  28 |Slice PDVOQ biggest queue dest device |           511|
1| -1|
|  29 |Slice PDVOQ biggest queue dest slice |           0|
1| -1|
|  30 |Slice PDVOQ biggest queue dest ifg |           0|
1| -1|
|  31 |Slice PDVOQ biggest queue dest port |           0|
1| -1|
|  32 |Slice PDVOQ biggest queue VSC |           0|
1| -1|
|  33 |Slice PDOQ biggest queue No. |           0|
1| -1|
|  34 |Slice PDOQ biggest queue size BYTES |           0|
1| -1|
|  35 |Slice PDOQ Delete fifo watermark BTYES |           0|
1| -1|
|  36 |TX fifo largest size port No. |           0|
1|  0|

```

## show controllers npu debug-utils

```

| 37 |TX fifo largest size WORDS | 0|
| 1| 0|
| 38 |TX fifo largest size port No. | 0|
| 1| 1|
| 39 |TX fifo largest size WORDS | 0|
| 1| 1|
| 40 |RX fifo largest size port No. | 0|
| 1| 0|
| 41 |RX fifo largest size WORDS | 0|
| 1| 0|
| 42 |RX fifo largest size port No. | 0|
| 1| 1|
| 43 |RX fifo largest size WORDS | 0|
| 1| 1|
| 44 |FC from PDIF to TX-Scheduler per intf | 0|
| 2| -1|
| 45 |FC from PDIF to TX-Scheduler for IFG0 | 0|
| 2| 0|
| 46 |FC from PDIF to TX-Scheduler for IFG1 | 0|
| 2| 1|
| 47 |FC from PDOQ to Scheduler per slice | 0|
| 2| -1|
| 48 |Slice PDVOQ biggest queue No. | 0|
| 2| -1|
| 49 |Slice PDVOQ biggest queue size BUFFERS | 0|
| 2| -1|
| 50 |Slice PDVOQ biggest queue dest device | 511|
| 2| -1|
| 51 |Slice PDVOQ biggest queue dest slice | 0|
| 2| -1|
| 52 |Slice PDVOQ biggest queue dest ifg | 0|
| 2| -1|
| 53 |Slice PDVOQ biggest queue dest port | 0|
| 2| -1|
| 54 |Slice PDVOQ biggest queue VSC | 0|
| 2| -1|
| 55 |Slice PDOQ biggest queue No. | 0|
| 2| -1|
| 56 |Slice PDOQ biggest queue size BYTES | 0|
| 2| -1|
| 57 |Slice PDOQ Delete fifo watermark BYTES | 0|
| 2| -1|
| 58 |TX fifo largest size port No. | 0|
| 2| 0|
| 59 |TX fifo largest size WORDS | 0|
| 2| 0|
| 60 |TX fifo largest size port No. | 0|
| 2| 1|
| 61 |TX fifo largest size WORDS | 0|
| 2| 1|
| 62 |RX fifo largest size port No. | 0|
| 2| 0|
| 63 |RX fifo largest size WORDS | 0|
| 2| 0|
| 64 |RX fifo largest size port No. | 0|
| 2| 1|
| 65 |RX fifo largest size WORDS | 0|
| 2| 1|
| 66 |FC from PDIF to TX-Scheduler per intf | 0|
| 3| -1|
| 67 |FC from PDIF to TX-Scheduler for IFG0 | 0|
| 3| 0|
| 68 |FC from PDIF to TX-Scheduler for IFG1 | 0|
| 3| 1|

```

```

|   69 |FC from PDOQ to Scheduler per slice           |           0|
3|   -1|
|   70 |Slice PDVOQ biggest queue No.                 |           0|
3|   -1|
|   71 |Slice PDVOQ biggest queue size BUFFERS       |           0|
3|   -1|
|   72 |Slice PDVOQ biggest queue dest device        |          511|
3|   -1|
|   73 |Slice PDVOQ biggest queue dest slice         |           0|
3|   -1|
|   74 |Slice PDVOQ biggest queue dest ifg          |           0|
3|   -1|
|   75 |Slice PDVOQ biggest queue dest port         |           0|
3|   -1|
|   76 |Slice PDVOQ biggest queue VSC                |           0|
3|   -1|
|   77 |Slice PDOQ biggest queue No.                 |           0|
3|   -1|
|   78 |Slice PDOQ biggest queue size BYTES          |           0|
3|   -1|
|   79 |Slice PDOQ Delete fifo watermark BYTES       |           0|
3|   -1|
|   80 |TX fifo largest size port No.                |           0|
3|    0|
|   81 |TX fifo largest size WORDS                  |           0|
3|    0|
|   82 |TX fifo largest size port No.                |           0|
3|    1|
|   83 |TX fifo largest size WORDS                  |           0|
3|    1|
|   84 |RX fifo largest size port No.                |           0|
3|    0|
|   85 |RX fifo largest size WORDS                  |           0|
3|    0|
|   86 |RX fifo largest size port No.                |           0|
3|    1|
|   87 |RX fifo largest size WORDS                  |           0|
3|    1|
|   88 |FC from PDIF to TX-Scheduler per intf        |           0|
4|   -1|
|   89 |FC from PDIF to TX-Scheduler for IFG0       |           0|
4|    0|
|   90 |FC from PDIF to TX-Scheduler for IFG1       |           0|
4|    1|
|   91 |FC from PDOQ to Scheduler per slice           |           0|
4|   -1|
|   92 |Slice PDVOQ biggest queue No.                 |           0|
4|   -1|
|   93 |Slice PDVOQ biggest queue size BUFFERS       |           0|
4|   -1|
|   94 |Slice PDVOQ biggest queue dest device        |          511|
4|   -1|
|   95 |Slice PDVOQ biggest queue dest slice         |           0|
4|   -1|
|   96 |Slice PDVOQ biggest queue dest ifg          |           0|
4|   -1|
|   97 |Slice PDVOQ biggest queue dest port         |           0|
4|   -1|
|   98 |Slice PDVOQ biggest queue VSC                |           0|
4|   -1|
|   99 |Slice PDOQ biggest queue No.                 |           0|
4|   -1|
|  100 |Slice PDOQ biggest queue size BYTES          |           0|
4|   -1|

```

## show controllers npu debug-utils

```

| 101 |Slice PDOQ Delete fifo watermark BYTES | 0|
4| -1|
| 102 |TX fifo largest size port No. | 0|
4| 0|
| 103 |TX fifo largest size WORDS | 0|
4| 0|
| 104 |TX fifo largest size port No. | 0|
4| 1|
| 105 |TX fifo largest size WORDS | 0|
4| 1|
| 106 |RX fifo largest size port No. | 0|
4| 0|
| 107 |RX fifo largest size WORDS | 0|
4| 0|
| 108 |RX fifo largest size port No. | 0|
4| 1|
| 109 |RX fifo largest size WORDS | 0|
4| 1|
| 110 |FC from PDIF to TX-Scheduler per intf | 0|
5| -1|
| 111 |FC from PDIF to TX-Scheduler for IFG0 | 0|
5| 0|
| 112 |FC from PDIF to TX-Scheduler for IFG1 | 0|
5| 1|
| 113 |FC from PDOQ to Scheduler per slice | 0|
5| -1|
| 114 |Slice PDVOQ biggest queue No. | 0|
5| -1|
| 115 |Slice PDVOQ biggest queue size BUFFERS | 0|
5| -1|
| 116 |Slice PDVOQ biggest queue dest device | 511|
5| -1|
| 117 |Slice PDVOQ biggest queue dest slice | 0|
5| -1|
| 118 |Slice PDVOQ biggest queue dest ifg | 0|
5| -1|
| 119 |Slice PDVOQ biggest queue dest port | 0|
5| -1|
| 120 |Slice PDVOQ biggest queue VSC | 0|
5| -1|
| 121 |Slice PDOQ biggest queue No. | 0|
5| -1|
| 122 |Slice PDOQ biggest queue size BYTES | 0|
5| -1|
| 123 |Slice PDOQ Delete fifo watermark BYTES | 0|
5| -1|
| 124 |TX fifo largest size port No. | 0|
5| 0|
| 125 |TX fifo largest size WORDS | 0|
5| 0|
| 126 |TX fifo largest size port No. | 0|
5| 1|
| 127 |TX fifo largest size WORDS | 0|
5| 1|
| 128 |RX fifo largest size port No. | 0|
5| 0|
| 129 |RX fifo largest size WORDS | 0|
5| 0|
| 130 |RX fifo largest size port No. | 0|
5| 1|
| 131 |RX fifo largest size WORDS | 0|
5| 1|
| 132 |TXCGM Watermark Total UNICAST BUFFERS (C+D) | 0|
-1| -1|

```

```

| 133 |TXCGM Watermark Total UNICAST Local BUFFERS(C) | 0|
-1| -1|
| 134 |TXCGM Watermark Total UNICAST Remote BUFFERS(D) | 0|
-1| -1|
| 135 |TXCGM Watermark Total PDs | 0|
-1| -1|
| 136 |TXCGM Watermark Total deleted PDs | 0|
-1| -1|
| 137 |TXCGM Watermark Total Unicast PDs | 0|
-1| -1|
| 138 |TXCGM Watermark Total Multicast PDs | 0|
-1| -1|
| 139 |TXCGM Watermark Total Fabric PDs | 0|
-1| -1|
| 140 |TXCGM Watermark Total MS-VOQs PDs | 0|
-1| -1|
| 141 |TXCGM Watermark Total MS-OQs PDs | 0|
-1| -1|
| 142 |SMS Min total free BUFFERS | 0|
-1| -1|
| 143 |SMS Max occupied BUFFERS | 97920|
-1| -1|
| 144 |SMS Min free BUFFERS | 0|
-1| -1|
| 145 |SMS Min free buffers bank idx | 0|
-1| -1|
| 146 |SMS Max free BUFFERS | 0|
-1| -1|
| 147 |SMS Max free buffers bank idx | 0|
-1| -1|
| 148 |SMS Max FDOQ2SMS FIFO size | 0|
-1| -1|
| 149 |SMS Max FDOQ2SMS FIFO intf | 0|
-1| -1|
| 150 |number of non-empty Qs | 0|
-1| -1|
| 151 |Active port srd speed port_id 0 | 0|
3| 1|
| 152 |SDK device frequency | 0|
-1| -1|
Rack/Slot/Asic: 0/FC1/5

```

```

=====
| # | Counter_name | val |
slice | ifg |
=====
| 0 |FC from PDIF to TX-Scheduler per intf | 0|
0| -1|
| 1 |FC from PDIF to TX-Scheduler for IFG0 | 0|
0| 0|
| 2 |FC from PDIF to TX-Scheduler for IFG1 | 0|
0| 1|
| 3 |FC from PDOQ to Scheduler per slice | 0|
0| -1|
| 4 |Slice PDVOQ biggest queue No. | 0|
0| -1|
| 5 |Slice PDVOQ biggest queue size BUFFERS | 0|
0| -1|
| 6 |Slice PDVOQ biggest queue dest device | 511|
0| -1|
| 7 |Slice PDVOQ biggest queue dest slice | 0|
0| -1|
| 8 |Slice PDVOQ biggest queue dest ifg | 0|
0| -1|
| 9 |Slice PDVOQ biggest queue dest port | 0|

```

## show controllers npu debug-utils

```

0| -1|
| 10 |Slice PDVOQ biggest queue VSC | 0|
0| -1|
| 11 |Slice PDOQ biggest queue No. | 0|
0| -1|
| 12 |Slice PDOQ biggest queue size BYTES | 0|
0| -1|
| 13 |Slice PDOQ Delete fifo watermark BYTES | 0|
0| -1|
| 14 |TX fifo largest size port No. | 0|
0| 0|
| 15 |TX fifo largest size WORDS | 0|
0| 0|
| 16 |TX fifo largest size port No. | 0|
0| 1|
| 17 |TX fifo largest size WORDS | 0|
0| 1|
| 18 |RX fifo largest size port No. | 0|
0| 0|
| 19 |RX fifo largest size WORDS | 0|
0| 0|
| 20 |RX fifo largest size port No. | 0|
0| 1|
| 21 |RX fifo largest size WORDS | 0|
0| 1|
| 22 |FC from PDIF to TX-Scheduler per intf | 0|
1| -1|
| 23 |FC from PDIF to TX-Scheduler for IFG0 | 0|
1| 0|
| 24 |FC from PDIF to TX-Scheduler for IFG1 | 0|
1| 1|
| 25 |FC from PDOQ to Scheduler per slice | 0|
1| -1|
| 26 |Slice PDVOQ biggest queue No. | 0|
1| -1|
| 27 |Slice PDVOQ biggest queue size BUFFERS | 0|
1| -1|
| 28 |Slice PDVOQ biggest queue dest device | 511|
1| -1|
| 29 |Slice PDVOQ biggest queue dest slice | 0|
1| -1|
| 30 |Slice PDVOQ biggest queue dest ifg | 0|
1| -1|
| 31 |Slice PDVOQ biggest queue dest port | 0|
1| -1|
| 32 |Slice PDVOQ biggest queue VSC | 0|
1| -1|
| 33 |Slice PDOQ biggest queue No. | 0|
1| -1|
| 34 |Slice PDOQ biggest queue size BYTES | 0|
1| -1|
| 35 |Slice PDOQ Delete fifo watermark BYTES | 0|
1| -1|
| 36 |TX fifo largest size port No. | 0|
1| 0|
| 37 |TX fifo largest size WORDS | 0|
1| 0|
| 38 |TX fifo largest size port No. | 0|
1| 1|
| 39 |TX fifo largest size WORDS | 0|
1| 1|
| 40 |RX fifo largest size port No. | 0|
1| 0|
| 41 |RX fifo largest size WORDS | 0|

```

```

1| 0|
| 42 |RX fifo largest size port No. | 0|
1| 1|
| 43 |RX fifo largest size WORDS | 0|
1| 1|
| 44 |FC from PDIF to TX-Scheduler per intf | 0|
2| -1|
| 45 |FC from PDIF to TX-Scheduler for IFG0 | 0|
2| 0|
| 46 |FC from PDIF to TX-Scheduler for IFG1 | 0|
2| 1|
| 47 |FC from PDOQ to Scheduler per slice | 0|
2| -1|
| 48 |Slice PDVOQ biggest queue No. | 0|
2| -1|
| 49 |Slice PDVOQ biggest queue size BUFFERS | 0|
2| -1|
| 50 |Slice PDVOQ biggest queue dest device | 511|
2| -1|
| 51 |Slice PDVOQ biggest queue dest slice | 0|
2| -1|
| 52 |Slice PDVOQ biggest queue dest ifg | 0|
2| -1|
| 53 |Slice PDVOQ biggest queue dest port | 0|
2| -1|
| 54 |Slice PDVOQ biggest queue VSC | 0|
2| -1|
| 55 |Slice PDOQ biggest queue No. | 0|
2| -1|
| 56 |Slice PDOQ biggest queue size BYTES | 0|
2| -1|
| 57 |Slice PDOQ Delete fifo watermark BTYES | 0|
2| -1|
| 58 |TX fifo largest size port No. | 0|
2| 0|
| 59 |TX fifo largest size WORDS | 0|
2| 0|
| 60 |TX fifo largest size port No. | 0|
2| 1|
| 61 |TX fifo largest size WORDS | 0|
2| 1|
| 62 |RX fifo largest size port No. | 0|
2| 0|
| 63 |RX fifo largest size WORDS | 0|
2| 0|
| 64 |RX fifo largest size port No. | 0|
2| 1|
| 65 |RX fifo largest size WORDS | 0|
2| 1|
| 66 |FC from PDIF to TX-Scheduler per intf | 0|
3| -1|
| 67 |FC from PDIF to TX-Scheduler for IFG0 | 0|
3| 0|
| 68 |FC from PDIF to TX-Scheduler for IFG1 | 0|
3| 1|
| 69 |FC from PDOQ to Scheduler per slice | 0|
3| -1|
| 70 |Slice PDVOQ biggest queue No. | 0|
3| -1|
| 71 |Slice PDVOQ biggest queue size BUFFERS | 0|
3| -1|
| 72 |Slice PDVOQ biggest queue dest device | 511|
3| -1|
| 73 |Slice PDVOQ biggest queue dest slice | 0|

```

## show controllers npu debug-utils

```

3| -1|
| 74 |Slice PDVOQ biggest queue dest ifg | 0|
3| -1|
| 75 |Slice PDVOQ biggest queue dest port | 0|
3| -1|
| 76 |Slice PDVOQ biggest queue VSC | 0|
3| -1|
| 77 |Slice PDOQ biggest queue No. | 0|
3| -1|
| 78 |Slice PDOQ biggest queue size BYTES | 0|
3| -1|
| 79 |Slice PDOQ Delete fifo watermark BYTES | 0|
3| -1|
| 80 |TX fifo largest size port No. | 0|
3| 0|
| 81 |TX fifo largest size WORDS | 0|
3| 0|
| 82 |TX fifo largest size port No. | 0|
3| 1|
| 83 |TX fifo largest size WORDS | 0|
3| 1|
| 84 |RX fifo largest size port No. | 0|
3| 0|
| 85 |RX fifo largest size WORDS | 0|
3| 0|
| 86 |RX fifo largest size port No. | 0|
3| 1|
| 87 |RX fifo largest size WORDS | 0|
3| 1|
| 88 |FC from PDIF to TX-Scheduler per intf | 0|
4| -1|
| 89 |FC from PDIF to TX-Scheduler for IFG0 | 0|
4| 0|
| 90 |FC from PDIF to TX-Scheduler for IFG1 | 0|
4| 1|
| 91 |FC from PDOQ to Scheduler per slice | 0|
4| -1|
| 92 |Slice PDVOQ biggest queue No. | 0|
4| -1|
| 93 |Slice PDVOQ biggest queue size BUFFERS | 0|
4| -1|
| 94 |Slice PDVOQ biggest queue dest device | 511|
4| -1|
| 95 |Slice PDVOQ biggest queue dest slice | 0|
4| -1|
| 96 |Slice PDVOQ biggest queue dest ifg | 0|
4| -1|
| 97 |Slice PDVOQ biggest queue dest port | 0|
4| -1|
| 98 |Slice PDVOQ biggest queue VSC | 0|
4| -1|
| 99 |Slice PDOQ biggest queue No. | 0|
4| -1|
| 100 |Slice PDOQ biggest queue size BYTES | 0|
4| -1|
| 101 |Slice PDOQ Delete fifo watermark BYTES | 0|
4| -1|
| 102 |TX fifo largest size port No. | 0|
4| 0|
| 103 |TX fifo largest size WORDS | 0|
4| 0|
| 104 |TX fifo largest size port No. | 0|
4| 1|
| 105 |TX fifo largest size WORDS | 0|

```

```

4| 1|
| 106 |RX fifo largest size port No. | 0|
4| 0|
| 107 |RX fifo largest size WORDS | 0|
4| 0|
| 108 |RX fifo largest size port No. | 0|
4| 1|
| 109 |RX fifo largest size WORDS | 0|
4| 1|
| 110 |FC from PDIF to TX-Scheduler per intf | 0|
5| -1|
| 111 |FC from PDIF to TX-Scheduler for IFG0 | 0|
5| 0|
| 112 |FC from PDIF to TX-Scheduler for IFG1 | 0|
5| 1|
| 113 |FC from PDOQ to Scheduler per slice | 0|
5| -1|
| 114 |Slice PDVOQ biggest queue No. | 0|
5| -1|
| 115 |Slice PDVOQ biggest queue size BUFFERS | 0|
5| -1|
| 116 |Slice PDVOQ biggest queue dest device | 511|
5| -1|
| 117 |Slice PDVOQ biggest queue dest slice | 0|
5| -1|
| 118 |Slice PDVOQ biggest queue dest ifg | 0|
5| -1|
| 119 |Slice PDVOQ biggest queue dest port | 0|
5| -1|
| 120 |Slice PDVOQ biggest queue VSC | 0|
5| -1|
| 121 |Slice PDOQ biggest queue No. | 0|
5| -1|
| 122 |Slice PDOQ biggest queue size BYTES | 0|
5| -1|
| 123 |Slice PDOQ Delete fifo watermark BYTES | 0|
5| -1|
| 124 |TX fifo largest size port No. | 0|
5| 0|
| 125 |TX fifo largest size WORDS | 0|
5| 0|
| 126 |TX fifo largest size port No. | 0|
5| 1|
| 127 |TX fifo largest size WORDS | 0|
5| 1|
| 128 |RX fifo largest size port No. | 0|
5| 0|
| 129 |RX fifo largest size WORDS | 0|
5| 0|
| 130 |RX fifo largest size port No. | 0|
5| 1|
| 131 |RX fifo largest size WORDS | 0|
5| 1|
| 132 |TXCGM Watermark Total UNICAST BUFFERS (C+D) | 0|
-1| -1|
| 133 |TXCGM Watermark Total UNICAST Local BUFFERS (C) | 0|
-1| -1|
| 134 |TXCGM Watermark Total UNICAST Remote BUFFERS (D) | 0|
-1| -1|
| 135 |TXCGM Watermark Total PDs | 0|
-1| -1|
| 136 |TXCGM Watermark Total deleted PDs | 0|
-1| -1|
| 137 |TXCGM Watermark Total Unicast PDs | 0|

```

```

-1| -1|
| 138 |TXCGM Watermark Total Multicast PDs | 0|
-1| -1|
| 139 |TXCGM Watermark Total Fabric PDs | 0|
-1| -1|
| 140 |TXCGM Watermark Total MS-VOQs PDs | 0|
-1| -1|
| 141 |TXCGM Watermark Total MS-OQs PDs | 0|
-1| -1|
| 142 |SMS Min total free BUFFERS | 0|
-1| -1|
| 143 |SMS Max occupied BUFFERS | 97920|
-1| -1|
| 144 |SMS Min free BUFFERS | 0|
-1| -1|
| 145 |SMS Min free buffers bank idx | 0|
-1| -1|
| 146 |SMS Max free BUFFERS | 0|
-1| -1|
| 147 |SMS Max free buffers bank idx | 0|
-1| -1|
| 148 |SMS Max FDOQ2SMS FIFO size | 0|
-1| -1|
| 149 |SMS Max FDOQ2SMS FIFO intf | 0|
-1| -1|
| 150 |number of non-empty Qs | 0|
-1| -1|
| 151 |SDK device frequency | 0|
-1| -1|

```

## show controllers npu stats counters-all

To display the various statistics for the NPU, use the **show controllers npu stats counters-all** command in the XR EXEC mode.

```

show controller npu stats counters-all { detail instance { instance-id location { node-id | path | all } } | all location { node-id | path | all } } | instance { instance-id location { node-id | path | all } } | all location { node-id | path | all } } [ output-modifiers { begin line | exclude line | file | include line | utility line } ]

```

Syntax Description	Description
<b>detail instance</b> <i>instance-id</i>	Displays detailed information about a given instance.
<b>detail instance</b> <i>all</i>	Displays detailed information about all instances.
<b>instance</b> <i>instance-id</i>	Displays information about a given instance.
<b>instance</b> <i>all</i>	Displays information about all instances.
<b>location</b> <i>node-id</i>	Specifies the node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. Displays the information about a specific node.
<b>location</b> <i>all</i>	Displays information about all nodes.

---

<i>output-modifiers</i> <b>begin</b> <i>line</i>	<p>Displays information from the line that matches to the given content.</p> <p>For example, if you want to display the running configuration starting from the interface configurations, you can enter as   <b>begin interface</b>.</p>
<i>output-modifiers</i> <b>exclude</b> <i>line</i>	<p>Displays information by filtering out lines that contain the given content.</p> <p>For example, if you want to view a configuration but skip all lines that mention "interface", you can enter as   <b>exclude interface</b>.</p>
<i>output-modifiers</i> <b>include</b> <i>line</i>	<p>Displays information that includes the content that you have given.</p> <p>For example, if you want to view lines that contain the word "interface" within a configuration, you can enter as   <b>include interface</b>.</p>
<i>output-modifiers</i> <b>utility</b> <i>line</i>	<p>Specifies various Unix command-line tools to manipulate or analyze the command's output.</p> <p>For example, if you want to sort the output of a command alphabetically, you can enter as   <b>utility sort</b>.</p>

---

---

*output-modifiers* **file**

Saves the information to a specific file.

For example, if you want to save information to a specific file, you can enter as | **file filename vrf vrfname**.

You can save the content in the following locations:

- *filename* - Save the output to a specified filename in VRF.
- *append* - Add the output to the end of an existing file.
- *config* - Save the output to the device's configuration.
- *disk0* - Store the output on the device's disk0 storage.
- *ftp* - Transfer and save the output to an FTP server.
- *harddisk* - Save the output to the device's internal hard disk.
- *http* - Send the output to an HTTP server.
- *https* - Send the output to an HTTPS server.
- *rootfs* - Save the output to the root file system of the device.
- *scp* - Securely copy the output to a remote server using SCP.
- *sftp* - Securely transfer the output to a remote server using SFTP.
- *tftp* - Transfer the output to a TFTP server.

---

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 24.4.1	Starting from Cisco IOS XR Release 24.4.1, the <b>show controllers npu stats counters-all</b> command is deprecated and will not be supported in future releases. Instead, you can use <b>show controllers npu debug-utils get-counters instance &lt;&gt; loc &lt;&gt;</b> command.  The <b>show controllers npu stats counters-all detail instance &lt;&gt; loc &lt;&gt;</b> command is now replaced by <b>show controllers npu stats counters-detail instance &lt;&gt;loc &lt;&gt;</b> command.
	Release 7.3.5	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read
	filesystem	read, write
	cisco-support	read

### Examples

The **show controllers npu stats counters-all** command displays the NPU statistics for all instance and all locations.

```
Router# show controller npu stats counters-all instance all location all
```

```
FIA Statistics Rack: 0, Slot: 0, Asic instance: 0
```

```
Per Block Statistics:
Slice 0 RX Summary counters:
IFG_RX 0 packets : 0
IFG_RX 0 bytes : 0
IFG_RX 1 packets : 0
IFG_RX 1 bytes : 0
Slice 0 TX Summary counters:
TXCGM MC packets : 0
IFGB_TX 0 packets : 0
IFG_TX 0 good packets : 0
IFG_TX 0 good bytes : 0
IFGB_TX 1 packets : 0
IFG_TX 1 good packets : 0
IFG_TX 1 good bytes : 0
Slice 1 RX Summary counters:
IFG_RX 2 packets : 0
```

## show controllers npu stats counters-all

```
IFG_RX 2 bytes : 0
IFG_RX 3 packets : 0
IFG_RX 3 bytes : 0
Slice 1 TX Summary counters:
TXCGM MC packets : 0
IFGB_TX 2 packets : 0
IFG_TX 2 good packets : 0
IFG_TX 2 good bytes : 0
IFGB_TX 3 packets : 0
IFG_TX 3 good packets : 0
IFG_TX 3 good bytes : 0

Slice 2 RX Summary counters:
IFG_RX 4 packets : 0
IFG_RX 4 bytes : 0
IFG_RX 5 packets : 0
IFG_RX 5 bytes : 0
Slice 2 TX Summary counters:
TXCGM MC packets : 0
IFGB_TX 4 packets : 0
IFG_TX 4 good packets : 0
IFG_TX 4 good bytes : 0
IFGB_TX 5 packets : 0
IFG_TX 5 good packets : 0
IFG_TX 5 good bytes : 0
Slice 3 RX Summary counters:
IFG_RX 6 packets : 0
IFG_RX 6 bytes : 0
IFG_RX 7 packets : 0
IFG_RX 7 bytes : 0
Slice 3 TX Summary counters:
TXCGM MC packets : 0
IFGB_TX 6 packets : 0
IFG_TX 6 good packets : 0
IFG_TX 6 good bytes : 0
IFGB_TX 7 packets : 0
IFG_TX 7 good packets : 0
IFG_TX 7 good bytes : 0
Slice 4 RX Summary counters:
IFG_RX 8 packets : 0
IFG_RX 8 bytes : 0
IFG_RX 9 packets : 0
IFG_RX 9 bytes : 0
Slice 4 TX Summary counters:
TXCGM MC packets : 0
IFGB_TX 8 packets : 0
IFG_TX 8 good packets : 0
IFG_TX 8 good bytes : 0
IFGB_TX 9 packets : 0
IFG_TX 9 good packets : 0
IFG_TX 9 good bytes : 0
Slice 5 RX Summary counters:
IFG_RX 10 packets : 0
IFG_RX 10 bytes : 0
IFG_RX 11 packets : 0
IFG_RX 11 bytes : 0
Slice 5 TX Summary counters:
TXCGM MC packets : 0
IFGB_TX 10 packets : 0
IFG_TX 10 good packets : 0
IFG_TX 10 good bytes : 0
IFGB_TX 11 packets : 0
IFG_TX 11 good packets : 0
IFG_TX 11 good bytes : 0
```

# show controllers npu port-rate-histogram

To view detailed port rate histogram data, use the **show controllers npu port-rate-histogram** command in the XR EXEC mode.

**show controllers npu port-rate-histogram** { **location** *node-id* | *all* }

Syntax Description	location <i>node-id</i>	Displays the port rate information for a specific node. The node-id argument is entered in the <i>rack/slot/module</i> notation.
	location <i>all</i>	Displays the port rate information for all nodes.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 25.4.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read
	filesystem	read, write
	cisco-support	read

## Examples

The **show controllers npu port-rate-histogram** displays detailed port rate histogram data for specific interfaces or port ranges.

```
Router# show controllers npu port-rate-histogram avg-samples location 0/0/CPU0
```

Sample Output:

```
Tue Nov 25 16:50:20.173 EST
```

```
=====
```

```
Port rate Histogram
```

```
=====
```

```
HW Polling Period      : 1 Seconds
```

```
HW Snapshot Interval  : 32 Microseconds
```

```
Description:
```

```
=====
```

```
Cumulative  : Accumulated samples since the port is up
```

```
Delta       : Delta samples between the cli's
```

```
avg-samples - aggregation of samples from various time window
```

```
avg-percentage - aggregation of samples percentage from various time window
```

## show controllers npu stats counters-detail

```

+-----+
Interface      Directions  Durations  5<-35%  35-<60%  60-<80%
80-<90%        90-<95%    95-<99%    >99%
+-----+
last Rx snapshot timestamp:1764107377549798104 [Local time: 2025-11-25 16:49:37]
+-----+
0/0/0/0        Rx          30sec      0         0         0
0              0           0          0         0
0/0/0/0        Rx          5mins      0         0         0
0              0           0          0         0
0/0/0/0        Rx          1hour      0         0         0
0              0           0          0         0
0/0/0/0        Rx          24hours    0         0         0
0              0           0          0         0
0/0/0/0        Rx          Delta      0         0         0
0              0           0          0         0
0/0/0/0        Rx          Cumm       0         0         0
0              0           0          0         0
+-----+
last Tx snapshot timestamp:1764107377549798104 [Local time: 2025-11-25 16:49:37]
+-----+
0/0/0/0        Tx          30sec      0         0         0
0              0           0          0         0
0/0/0/0        Tx          5mins      0         0         0
0              0           0          0         0
0/0/0/0        Tx          1hour      0         0         0
0              0           0          0         0
0/0/0/0        Tx          24hours    0         0         0
0              0           0          0         0
0/0/0/0        Tx          Delta      0         0         0
0              0           0          0         0
0/0/0/0        Tx          Cumm       0         0         0
0              0           0          0         0
+-----+
last Rx snapshot timestamp:1764107377549782105 [Local time: 2025-11-25 16:49:37]
+-----+
0/0/0/1        Rx          30sec      0         0         0
0              0           0          0         0
0/0/0/1        Rx          5mins      0         0         0
0              0           0          0         0
0/0/0/1        Rx          1hour      0         0         0
0              0           0          0         0
0/0/0/1        Rx          24hours    0         0         0
0              0           0          0         0
0/0/0/1        Rx          Delta      0         0         0
0              0           0          0         0
0/0/0/1        Rx          Cumm       0         0         0
0              0           0          0         0
+-----+

```

## show controllers npu stats counters-detail

To display the various statistics for the NPU, use the **show controllers npu stats counters-detail** command in the XR EXEC mode.

```

show controller npu stats counters-detail { detail instance { instance-id location { node-id | path | all } | all } location { node-id | path | all } } | instance { instance-id location { node-id | path | all } }

```

| *all* **location** { *node-id* | *path* | *all* } } } [ *output-modifiers* { **begin** *line* | **exclude** *line* | **file** | **include** *line* | **utility** *line* } ]

Syntax	Description
<b>detail instance</b> <i>instance-id</i>	Displays detailed information about a given instance.
<b>detail instance</b> <i>all</i>	Displays detailed information about all instances.
<b>instance</b> <i>instance-id</i>	Displays information about a given instance.
<b>instance</b> <i>all</i>	Displays information about all instances.
<b>location</b> <i>node-id</i>	Specifies the node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. Displays the information about a specific node.
<b>location</b> <i>all</i>	Displays information about all nodes.
<i>output-modifiers</i> <b>begin</b> <i>line</i>	Displays information from the line that matches to the given content.  For example, if you want to display the running configuration starting from the interface configurations, you can enter as   <b>begin interface</b> .
<i>output-modifiers</i> <b>exclude</b> <i>line</i>	Displays information by filtering out lines that contain the given content.  For example, if you want to view a configuration but skip all lines that mention "interface", you can enter as   <b>exclude interface</b> .
<i>output-modifiers</i> <b>include</b> <i>line</i>	Displays information that includes the content that you have given.  For example, if you want to view lines that contain the word "interface" within a configuration, you can enter as   <b>include interface</b> .
<i>output-modifiers</i> <b>utility</b> <i>line</i>	Specifies various Unix command-line tools to manipulate or analyze the command's output.  For example, if you want to sort the output of a command alphabetically, you can enter as   <b>utility sort</b> .

**output-modifiers file**

Saves the information to a specific file.

For example, if you want to save information to a specific file, you can enter as | **file filename vrf vrfname**.

You can save the content in the following locations:

- *filename* - Save the output to a specified filename in VRF.
- *append* - Add the output to the end of an existing file.
- *config* - Save the output to the device's configuration.
- *disk0* - Store the output on the device's disk0 storage.
- *ftp* - Transfer and save the output to an FTP server.
- *harddisk* - Save the output to the device's internal hard disk.
- *http* - Send the output to an HTTP server.
- *https* - Send the output to an HTTPS server.
- *rootfs* - Save the output to the root file system of the device.
- *scp* - Securely copy the output to a remote server using SCP.
- *sftp* - Securely transfer the output to a remote server using SFTP.
- *tftp* - Transfer the output to a TFTP server.

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	XR EXEC mode
----------------------	--------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 24.4.1	This command was introduced.

<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.
-------------------------	--

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	interface	read

Task ID	Operations
filesystem	read, write
cisco-support	read

## Examples

The **show controllers npu stats counters-detail** command displays the NPU statistics for all instance and all locations.

```
Router# show controller npu stats counters-detail instance all location all

FIA Statistics Rack: 0, Slot: 0, Asic instance: 0

Total number of blocks: 419
Per Block Statistics:
slice[0]/ifg[0]/ifgb_24p counters:
ecc_1b_err_debug/ecc_1b_err_counter : 0
ecc_2b_err_debug/ecc_2b_err_counter : 0
rx_filter_hit_counter[0]/rx_filter_hit_cnt : 0
rx_filter_hit_counter[1]/rx_filter_hit_cnt : 0
rx_filter_hit_counter[2]/rx_filter_hit_cnt : 0
rx_prot_err_counter/rx_prot_err_cnt : 0
```

## show controllers npu stats counters-drop

To display the packets that have been dropped by the NPU, use the **show controllers npu stats counters-drop** command in the XR EXEC mode.

```
show controller npu stats counters-drop { description instance { instance-id location { node-id | path | all } | all } | location { node-id | path | all } } | instance { instance-id location { node-id | path | all } } | all location { node-id | path | all } } | latest instance { instance-id location { node-id | path | all } } | all location { node-id | path | all } } } [ output-modifiers { begin line | exclude line | file | include line | utility line } ]
```

Syntax Description		
<b>description instance</b> <i>instance-id</i>		Displays the counter description about a given instance.
<b>description instance</b> <i>all</i>		Displays the counter description about all instances.
<b>instance</b> <i>instance-id</i>		Displays NPU information about a given instance.
<b>instance</b> <i>all</i>		Displays NPU information about all instances.
<b>latest instance</b> <i>instance-id</i>		Displays the most recent non zero ASIC statistics about a given instance.
<b>latest instance</b> <i>all</i>		Displays the most recent non zero ASIC statistics about all instances.

---

<b>location</b> <i>node-id</i>	Specifies the node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. Displays the information about a specific node.
<b>location</b> <i>all</i>	Displays information about all nodes.
<i>output-modifiers</i> <b>begin</b> <i>line</i>	Displays information from the line that matches to the given content.  For example, if you want to display the running configuration starting from the interface configurations, you can enter as   <b>begin interface</b> .
<i>output-modifiers</i> <b>exclude</b> <i>line</i>	Displays information by filtering out lines that contain the given content.  For example, if you want to view a configuration but skip all lines that mention "interface", you can enter as   <b>exclude interface</b> .
<i>output-modifiers</i> <b>include</b> <i>line</i>	Displays information that includes the content that you have given.  For example, if you want to view lines that contain the word "interface" within a configuration, you can enter as   <b>include interface</b> .
<i>output-modifiers</i> <b>utility</b> <i>line</i>	Specifies various Unix command-line tools to manipulate or analyze the command's output.  For example, if you want to sort the output of a command alphabetically, you can enter as   <b>utility sort</b> .

---

*output-modifiers* **file**

Saves the information to a specific file.

For example, if you want to save information to a specific file, you can enter as | **file filename vrf vrfname**.

You can save the content in the following locations:

- *filename* - Save the output to a specified filename.
- *append* - Add the output to the end of an existing file.
- *config* - Save the output to the device's configuration.
- *disk0* - Store the output on the device's disk0 storage.
- *ftp* - Transfer and save the output to an FTP server.
- *harddisk* - Save the output to the device's internal hard disk.
- *http* - Send the output to an HTTP server.
- *https* - Send the output to an HTTPS server.
- *rootfs* - Save the output to the root file system of the device.
- *scp* - Securely copy the output to a remote server using SCP.
- *sftp* - Securely transfer the output to a remote server using SFTP.
- *tftp* - Transfer the output to a TFTP server.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.3.5	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read

Task ID	Operations
filesystem	read, write
cisco-support	read

## Examples

The **show controllers npu stats counters-drop** command displays the NPU statistics for all instance and all locations.

```
Router# show controllers npu stats counters-drop instance all location all
```

```
Statistics Rack: 0, Slot: 0(0x0), Asic instance: 0, Total Counters: 675
```

#	Counter_name	val
0	Fwd drop counter (DSP==1): pkts	0
1	Fwd drop counter (DSP==1): bytes	0
2	RX IFGB0 Port0 drop_counter TC0	0
3	RX IFGB0 Port0 drop_counter TC1	0
4	RX IFGB0 Port0 drop_counter TC2	0
5	RX IFGB0 Port0 drop_counter TC3	0
6	RX IFGB0 Port8 drop_counter TC0	0
7	RX IFGB0 Port8 drop_counter TC1	0
8	RX IFGB0 Port8 drop_counter TC2	0
9	RX IFGB0 Port8 drop_counter TC3	0
10	RX IFGB0 Port16 drop_counter TC0	0
11	RX IFGB0 Port16 drop_counter TC1	0
12	RX IFGB0 Port16 drop_counter TC2	0
13	RX IFGB0 Port16 drop_counter TC3	0
14	RX IFGB 10th fabric link full pkt drop counter ifg0	0
15	RX IFGB0 Port0 partial_drop_counter TC0	0
16	RX IFGB0 Port0 partial_drop_counter TC1	0

The above sample displays only a part of the actual output; the actual output displays more details.

# show controllers npu stats traps-all

To display all the trap events statistics within the NPU, use the **show controllers npu stats traps-all** command in the XR EXEC mode.

```
show controller npu stats traps-all { detail instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | latest instance instance-id location { node-id | path | all } | nonzero instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } } [ output-modifiers { begin line | exclude line | file | include line | utility line } ]
```

## Syntax Description

<b>detail instance</b> <i>instance-id</i>	Displays detailed information about a given instance.
<b>detail instance</b> <i>all</i>	Displays detailed information about all instances.
<b>instance</b> <i>instance-id</i>	Displays NPU information about a given instance.
<b>instance</b> <i>all</i>	Displays NPU information about all instances.
<b>latest instance</b> <i>instance-id</i>	Displays the most recent hardware statistics about a given instance.
<b>nonzero instance</b> <i>instance-id</i>	Displays information about a given instance by excluding traps with both zero packets accepted and zero packets dropped.
<b>nonzero instance</b> <i>all</i>	Displays information about all instances by excluding traps with zero packets accepted and zero packets dropped.
<b>location</b> <i>node-id</i>	Specifies the node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. Displays the information about a specific node.
<b>location</b> <i>all</i>	Displays information about all nodes.
<i>output-modifiers</i> <b>begin line</b>	Displays information from the line that matches to the given content.  For example, if you want to display the running configuration starting from the interface configurations, you can enter as   <b>begin interface</b> .
<i>output-modifiers</i> <b>exclude line</b>	Displays information by filtering out lines that contain the given content.  For example, if you want to view a configuration but skip all lines that mention "interface", you can enter as   <b>exclude interface</b> .

<i>output-modifiers</i> <b>include</b> <i>line</i>	<p>Displays information that includes the content that you have given.</p> <p>For example, if you want to view lines that contain the word "interface" within a configuration, you can enter as   <b>include interface</b>.</p>
<i>output-modifiers</i> <b>utility</b> <i>line</i>	<p>Specifies various Unix command-line tools to manipulate or analyze the command's output.</p> <p>For example, if you want to sort the output of a command alphabetically, you can enter as   <b>utility sort</b>.</p>
<i>output-modifiers</i> <b>file</b>	<p>Saves the information to a specific file.</p> <p>For example, if you want to save information to a specific file, you can enter as   <b>file filename vrf vrfname</b>.</p> <p>You can save the content in the following locations:</p> <ul style="list-style-type: none"> <li>• <i>WORD</i> - Save the output to a specified filename.</li> <li>• <i>append</i> - Add the output to the end of an existing file.</li> <li>• <i>config</i> - Save the output to the device's configuration.</li> <li>• <i>disk0</i> - Store the output on the device's disk0 storage.</li> <li>• <i>ftp</i> - Transfer and save the output to an FTP server.</li> <li>• <i>harddisk</i> - Save the output to the device's internal hard disk.</li> <li>• <i>http</i> - Send the output to an HTTP server.</li> <li>• <i>https</i> - Send the output to an HTTPS server.</li> <li>• <i>rootfs</i> - Save the output to the root file system of the device.</li> <li>• <i>scp</i> - Securely copy the output to a remote server using SCP.</li> <li>• <i>sftp</i> - Securely transfer the output to a remote server using SFTP.</li> <li>• <i>tftp</i> - Transfer the output to a TFTP server.</li> </ul>

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.3.5	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read
	filesystem	read, write
	cisco-support	read

### Examples

The **show controllers npu stats traps-all** command displays packets that are locally processed and packets that are dropped by the CPU.

```
Router# show controllers npu stats traps-all instance all location 0/RP0/CPU0
```

Trap Type	NPU ID	Trap ID	TrapStats ID	Policer	Packet Accepted	Packet Dropped
RxTrapMimSaMove (CFM_DOWM_MEP_DMM)	0	6	0x6	32037	0	0
RxTrapMimSaUnknown (RCY_CFM_DOWN_MEP_DMM)	0	7	0x7	32037	0	0
RxTrapAuthSaLookupFail (IPMC default)	0	8	0x8	32033	0	0
RxTrapSaMulticast	0	11	0xb	32018	0	0
RxTrapArpMyIp	0	13	0xd	32001	0	0
RxTrapArp	0	14	0xe	32001	11	0
RxTrapDhcpv4Server	0	18	0x12	32022	0	0
RxTrapDhcpv4Client	0	19	0x13	32022	0	0
RxTrapDhcpv6Server	0	20	0x14	32022	0	0
RxTrapDhcpv6Client	0	21	0x15	32022	0	0
RxTrapL2Cache_LACP	0	23	0x17	32003	0	0
RxTrapL2Cache_LLDP1	0	24	0x18	32004	0	0
RxTrapL2Cache_LLDP2	0	25	0x19	32004	1205548	0
RxTrapL2Cache_LLDP3	0	26	0x1a	32004	0	0

The above sample displays only a part of the actual output; the actual output displays more details.

## show controllers npu stats voq

To display statistics related to the Virtual Output Queues (VOQs) on the NPU, use the **show controllers npu stats voq** command in the XR EXEC mode.

```
show controller npu stats voq { base voq-base number { instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | src-slice slice-id instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | ingress interface { voq-Interface-handle-number instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | CEM R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | EH R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | Fi R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | Fo R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | FH R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | Gi R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | Hu R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | Mg R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | PTP R/S/I/P instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | Te R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | TF R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | TH R/S/I/P/B instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } | all instance { instance-id location { node-id | path | all } | all location { node-id | path | all } } } [ output-modifiers { begin line | exclude line | file | include line | utility line } ]
```

### Syntax Description

<b>base</b> <i>voq-base number</i>	Specifies the voq-base number.
<b>src-slice</b> <i>slice-id</i> <b>instance</b>	Specifies the slice id.
<b>ingress interface</b> <i>&lt;voq-Interface handle number&gt;</i>	Specifies voq-Interface handle number.
<b>ingress interface</b> <i>CEM</i>	Specifies circuit emulation interface.
<b>ingress interface</b> <i>EH</i>	Specifies 800 Gigabit ethernet interface type.
<b>ingress interface</b> <i>Fi</i>	Specifies 50 Gigabit ethernet interface type.
<b>ingress interface</b> <i>Fo</i>	Specifies 40 Gigabit ethernet interface type.
<b>ingress interface</b> <i>FH</i>	Specifies 400 Gigabit ethernet interface type.
<b>ingress interface</b> <i>Gi</i>	Specifies Gigabit ethernet interface type.
<b>ingress interface</b> <i>Hu</i>	Specifies 100 Gigabit ethernet interface type.
<b>ingress interface</b> <i>Mg</i>	Specifies ethernet interface type.
<b>ingress interface</b> <i>PTP</i>	Specifies ethernet interface type.
<b>ingress interface</b> <i>Te</i>	Specifies 10 Gigabit ethernet interface type.

<b>ingress interface</b> <i>TF</i>	Specifies 25 Gigabit ethernet interface type.
<b>ingress interface</b> <i>TH</i>	Specifies 200 Gigabit ethernet interface type.
<b>ingress interface</b> <i>all</i>	Specifies all interface type.
<i>R/S/I/P/B</i>	Specifies the Rack/Slot/Instance/Port/Breakout of the voq.
<b>location</b> <i>node-id</i>	Specifies the node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. Displays the information about a specific node.
<b>location</b> <i>all</i>	Displays information about all nodes.
<i>output-modifiers</i> <b>begin</b> <i>line</i>	<p>Displays information from the line that matches to the given content.</p> <p>For example, if you want to display the running configuration starting from the interface configurations, you can enter as   <b>begin interface</b>.</p>
<i>output-modifiers</i> <b>exclude</b> <i>line</i>	<p>Displays information by filtering out lines that contain the given content.</p> <p>For example, if you want to view a configuration but skip all lines that mention "interface", you can enter as   <b>exclude interface</b>.</p>
<i>output-modifiers</i> <b>include</b> <i>line</i>	<p>Displays information that includes the content that you have given.</p> <p>For example, if you want to view lines that contain the word "interface" within a configuration, you can enter as   <b>include interface</b>.</p>
<i>output-modifiers</i> <b>utility</b> <i>line</i>	<p>Specifies various Unix command-line tools to manipulate or analyze the command's output.</p> <p>For example, if you want to sort the output of a command alphabetically, you can enter as   <b>utility sort</b>.</p>

**output-modifiers file**

Saves the information to a specific file.

For example, if you want to save information to a specific file, you can enter as | **file filename vrf vrfname**.

You can save the content in the following locations:

- *filename* - Save the output to a specified filename in VRF.
- *append* - Add the output to the end of an existing file.
- *config* - Save the output to the device's configuration.
- *disk0* - Store the output on the device's disk0 storage.
- *ftp* - Transfer and save the output to an FTP server.
- *harddisk* - Save the output to the device's internal hard disk.
- *http* - Send the output to an HTTP server.
- *https* - Send the output to an HTTPS server.
- *rootfs* - Save the output to the root file system of the device.
- *scp* - Securely copy the output to a remote server using SCP.
- *sftp* - Securely transfer the output to a remote server using SFTP.
- *tftp* - Transfer the output to a TFTP server.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.3.5	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read

Task ID	Operations
filesystem	read, write
cisco-support	read

## Examples

The **show controllers npu stats voq** command displays packets that are processed on the NPU and dropped in the interface VoQs.

```
Router# show controllers npu stats voq ingress interface hundredGigE 0/0/0/16 instance all
location 0/RP0/CPU0
```

```
Interface Name      = Hu0/0/0/16
Interface Handle    = f0001b0
Location            = 0/RP0/CPU0
Asic Instance       = 0
VOQ Base            = 10288
Port Speed(kbps)    = 100000000
Local Port          = local
VOQ Mode            = 8
Shared Counter Mode = 2
-----
ReceivedPkts      ReceivedBytes    DroppedPkts      DroppedBytes
-----
TC_{0,1} = 114023724      39908275541      113945980        39881093000
TC_{2,3} = 194969733      68239406550      196612981        68814543350
TC_{4,5} = 139949276      69388697075      139811376        67907466750
TC_{6,7} = 194988538      68242491778      196612926        68814524100
```

## show spp node-counters

To display the node counters for the Software Packet Path (SPP), use the **show spp node-counters** command in the XR EXEC mode.

```
show spp node-counters { [drops] location { node-id | path | all } } [ output-modifiers ] } [
output-modifiers { begin line | exclude line | file | include line | utility line } ]
```

### Syntax Description

<b>location</b> <i>node-id</i>	Specifies the node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. Displays the information about a specific node.
<b>location</b> <i>all</i>	Displays information about all nodes.
<i>output-modifiers</i> <b>begin line</b>	Displays information from the line that matches to the given content.  For example, if you want to display the running configuration starting from the interface configurations, you can enter as   <b>begin interface</b> .

---

<i>output-modifiers</i> <b>exclude</b> <i>line</i>	<p>Displays information by filtering out lines that contain the given content.</p> <p>For example, if you want to view a configuration but skip all lines that mention "interface", you can enter as   <b>exclude interface</b>.</p>
<i>output-modifiers</i> <b>include</b> <i>line</i>	<p>Displays information that includes the content that you have given.</p> <p>For example, if you want to view lines that contain the word "interface" within a configuration, you can enter as   <b>include interface</b>.</p>
<i>output-modifiers</i> <b>utility</b> <i>line</i>	<p>Specifies various Unix command-line tools to manipulate or analyze the command's output.</p> <p>For example, if you want to sort the output of a command alphabetically, you can enter as   <b>utility sort</b>.</p>

---

*output-modifiers* **file**

Saves the information to a specific file.

For example, if you want to save information to a specific file, you can enter as | **file filename vrf vrfname**.

You can save the content in the following locations:

- *filename* - Save the output to a specified filename in VRF.
- *append* - Add the output to the end of an existing file.
- *config* - Save the output to the device's configuration.
- *disk0* - Store the output on the device's disk0 storage.
- *ftp* - Transfer and save the output to an FTP server.
- *harddisk* - Save the output to the device's internal hard disk.
- *http* - Send the output to an HTTP server.
- *https* - Send the output to an HTTPS server.
- *rootfs* - Save the output to the root file system of the device.
- *scp* - Securely copy the output to a remote server using SCP.
- *sftp* - Securely transfer the output to a remote server using SFTP.
- *tftp* - Transfer the output to a TFTP server.

**drops**

(Optional) From Release 25.4.1, displays aggregated drop counters filtered for the Software Packet Path (SPP).

**Command Default**

None

**Command Modes**

XR EXEC mode

**Command History**

Release	Modification
Release 25.4.1	This command was modified to introduce the <b>drops</b> keyword.
Release 6.0.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	transport	read
	optical	read

### Examples

The **show spp node-counters** command displays the node counters for the SPP on a particular node or location.

```
Router# show spp node-counters location 0/0/CPU0
fretta/classify
    forwarded to spp clients:          10006
    forwarded NPU packet to NetIO:    10006
    dropped in classify node:          22
    Fwded to CoPP sampler:             2
        PUNT ARP:                      2
        PUNT IFIB:                      10006
    IFIB IPv4_STACK:                  10000
    IFIB RAWIP6_FM:                   6
-----
client/inject
    pkts injected into spp:           10002
    NetIO->NPU injected into spp:     10002
        NetIO->NPU PROTO ARP:           2
        NetIO->NPU PROTO IPV4:         10000
-----
socket/rx
    ether raw pkts:                   10030
-----
socket/tx
    ce pkts:                           10002
-----
client/punt
    punted to client:                 10008
-----
```

The above sample displays only a part of the actual output; the actual output displays more details.

From Release 25.4.1, the **show spp node-counters drops** command displays aggregated drop counters filtered for the SPP.

```
Router# show spp node-counters drops
0/0/CPU0:
socket/rx
aggr-drop-counter: 371
-----
socket/tx
aggr-drop-counter: 372
```

## show controllers npu card-fsm

To display card-fsm state transition information on controllers npu, use the **show controllers npu card-fsm** command in the XR EXEC mode.

**show controllers npu card-fsm history** [ *slot number* ] **location** *node-id*

<b>Syntax Description</b>	<b>history</b>	Displays history information of the card state transition from selected location.
	<b>slot</b>	Displays history information of the card state transition from selected slot.  Slot number ranges from 0-7.
	<b>location</b>	Displays history information of the card state transition from selected node.
<b>Command Default</b>	None	
<b>Command Modes</b>	XR EXEC mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 24.3.1	This command was introduced.
<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.	
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	interface	read
	filesystem	read, write
	cisco-support	read

**Examples**

The **show controllers npu card-fsm history location** command displays the history information of card state transition for the selected location.

```
Router# show controllers npu card-fsm history location 0/0/CPU0
Node ID: 0/0/CPU0
```

```
+-----+
| ASIC BMAP FROM SM           : 0x3          ASIC BMAP DEINIT DONE           :
0x0                            |
| ASIC BMAP OFFLINE DONE      : 0x0          ASIC BMAP DEINIT IN PROG        :
0x0                            |
| ASIC BMAP FOR OFA CLEANUP   : 0x0          ASIC BMAP FOR OFA CLEANUP ACK   :
0x0                            |
+-----+
| IS_CARD_SHUTDOWN_NOTIF_REQ  : 0            IS_CARD_SHUTDOWN_NOTIFIED     : 0
|                               |
+-----+
| Timestamp                    | Event                               | Next State                    | Description
|                               |                               |                               |
+-----+
| Nov 11 12:20:40.779170 | EV_ASIC_INIT_DONE                 | UP_DONE                       | Pon init
done for asic 0
| Nov 11 12:20:34.719699 | EV_ASIC_INIT_DONE                 | UP_IN_PROG                    | Pon init
done for asic 1
| Nov 11 12:20:05.590391 | EV_UP_DEVICE_INIT                 | UP_IN_PROG                    | Card state
update notified to main for device handing
|
```

```

| Nov 11 12:20:04.896060 | EV_UP_MODULE_DONE           | UP_RCVD           | Card up
retimer, GPIO & MDIO init is done
| Nov 11 12:20:04.774786 | EV_UP           | UP_RCVD           | Card state
update received from slicemgr
|
|

```

## show controllers npu driver

To display driver information on controllers npu, use the **show controllers npu driver** command in the XR EXEC mode.

```

show controllers npu driver { debug [ hook { add { hook-id number value number } | clear | dump
} | | reload | { enable | disable } ] | location { node-id | all } }

```

Syntax Description	debug	Displays commands to debug driver information.
	<b>hook</b>	Displays hook information to change the router behaviors.
	<b>add</b> <i>hook-id value</i>	Adds hook entry to the specific location table.
	<b>clear</b>	Clears hook table from the specific location.
	<b>dump</b>	Dumps hook table from the specific location.
	<b>reload</b>	Enables or disables line card reload during driver restart.
	<b>location</b> <i>node-id</i>	Displays the information about a specific node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
	<b>location</b> <i>all</i>	Displays information about all nodes.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 24.3.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read

Task ID	Operations
filesystem	read, write
cisco-support	read

## Examples

The **show controllers npu driver location all** command displays all driver information.

```
Router# show controllers npu driver location all
NPU Driver Information
```

```
=====
Driver Version: 1
SDK Version: 24.5.0.2.12_mig_xr_v1

Functional role: Active,      Rack: 8812, Type: lcc, Node: 0/0/CPU0
Driver ready      : Yes
NPU first started : Mon Nov 11 12:20:00 2024
Fabric Mode: FABRIC/8FC
NPU Power profile: NA
Driver Scope: Node
Respawn count    : 1
Availability masks :
      card: 0x1,     asic: 0x3,      exp asic: 0x3
Weight distribution:
      Unicast: 80,      Multicast: 20
```

```
+-----+
| Process | Connection | Registration | Connection | DLL      |
| /Lib    | status    | status      | requests   | registration|
+-----+
| FSDB    | Active    | Active      |           1| n/a      |
| FGID    | Inactive  | Inactive    |           0| n/a      |
| AEL     | n/a       | n/a         |           n/a| Yes     |
| SM      | n/a       | n/a         |           n/a| Yes     |
+-----+
```

```
Asics :
HP - HotPlug event, PON - Power On reset
HR - Hard Reset,      WB - Warm Boot
```

```
+-----+
| Asic inst. | fap|HP|Slice|Asic|Admin|Oper | Asic state | Last |PON|HR | FW |
| (R/S/A)   | id | |state|type|state|state|           | init |(#)|(#)| Rev |
+-----+
| 0/0/0     | 0 | 1| UP | npu | UP  | UP  |NRML      |PON  | 1 | 0|0x0000|
| 0/0/1     | 1 | 1| UP | npu | UP  | UP  |NRML      |PON  | 1 | 0|0x0000|
+-----+
```

```
SI Info :
```

```
+-----+
| Card  | Board      | SI Board | SI Param | Retimer SI  | Retimer SI  | Front Panel |
|      | HW Version | Version  | Version  | Board Version | Param Version | PHY         |
+-----+
| LC0   | 0.31      | 2        | 24       | NA           | NA           | DEFAULT     |
+-----+
```

```
=====
NPU Driver Information
```

## show controllers npu packet-latency instance

```

=====
Driver Version: 1
SDK Version: 24.5.0.2.12_mig_xr_v1

Functional role: Active,      Rack: 8812, Type: lcc, Node: 0/RP0/CPU0
Driver ready      : Yes
NPU first started : Mon Nov 11 12:18:31 2024
Fabric Mode: FABRIC/8FC
NPU Power profile: NA
Driver Scope: Rack
Respawn count    : 1
Availability masks :
      card: 0x3,      asic: 0x3f,      exp asic: 0x3f
Weight distribution:
      Unicast: 80,      Multicast: 20
+-----+
| Process | Connection | Registration | Connection | DLL      |
| /Lib    | status     | status       | requests   | registration|
+-----+
| FSDB    | Active     | Active       |            | 1| n/a      |
| FGID    | Active     | Active       |            | 1| n/a      |
| AEL     | n/a       | n/a         |            | n/a| Yes     |
| SM      | n/a       | n/a         |            | n/a| Yes     |
+-----+

Asics :
HP - HotPlug event, PON - Power On reset
HR - Hard Reset,      WB - Warm Boot
+-----+
| Asic inst. | fap|HP|Slice|Asic|Admin|Oper | Asic state | Last |PON|HR | FW |
| (R/S/A)   | id | |state|type|state|state|           | init |(#)|(#)| Rev |
+-----+
| 0/FC0/0   | 200| 1| UP  |s123| UP  | UP  |NRML      |PON  | 1| 0|0x0000|
| 0/FC0/1   | 201| 1| UP  |s123| UP  | UP  |NRML      |PON  | 1| 0|0x0000|
| 0/FC0/2   | 202| 1| UP  |s123| UP  | UP  |NRML      |PON  | 1| 0|0x0000|
| 0/FC1/3   | 203| 1| UP  |s123| UP  | UP  |NRML      |PON  | 1| 0|0x0000|
| 0/FC1/4   | 204| 1| UP  |s123| UP  | UP  |NRML      |PON  | 1| 0|0x0000|
| 0/FC1/5   | 205| 1| UP  |s123| UP  | UP  |NRML      |PON  | 1| 0|0x0000|
+-----+

SI Info :
+-----+
| Card | Board | SI Board | SI Param | Retimer SI | Retimer SI | Front Panel |
|      |      |          |          |            |            |             |
|      | HW Version | Version | Version | Board Version | Param Version | PHY |
+-----+
| FC0 | 0.51 | 4 | 29 | 4 | 29 | NA |
| FC1 | 0.51 | 4 | 29 | 4 | 29 | NA |
+-----+

```

## show controllers npu packet-latency instance

To view the cumulative packet count in the latency histogram bin for all Traffic Class (TC) or each TC since either system bootup or the last clear, use the **show controllers npu packet-latency instance** command in the XR EXEC mode.

**show controllers npu packet-latency instance** *instance-id* { **location** *node-id* | **slice** *slice-id* **IFG** *interface-group-id* **traffic-class** *traffic-class-id* **location** *node-id* }

Syntax Description	Parameter	Description
	<b>instance</b> <i>instance-id</i>	Displays cumulative information about all the slice, Inter-Frame Gap (IFG), and TC in the specific instance.
	<b>slice</b> <i>slice-id</i>	Specifies the slice id, ranging from 0-7.
	<b>IFG</b> <i>interface-group-id</i>	Specifies the interface group id, ranging from 0-1.
	<b>traffic-class</b> <i>traffic-class-id</i>	Specifies the traffic class id, ranging from 0-7.
	<b>location</b> <i>node-id</i>	Displays the information about a specific node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 25.3.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read
	filesystem	read, write
	cisco-support	read

## Examples

The **show controllers npu packet-latency instance** command displays the cumulative packet count in the latency histogram bin with granularity for slice, IFG, location, and traffic class.

The following output displays cumulative packet count in the latency histogram bin for all TCs on slice 2, IFG 1, and location 0/2/CPU0:

For example, in the below output you can see that

- 1,627,324,790 packets experienced a latency around 6000 nanoseconds
- while 387,009 packets experienced latency around 7000 nanoseconds, and
- the maximum observed delay for this traffic class in this instance was 6400 nanoseconds.

```
Router# show controllers npu packet-latency instance 0 slice 2 ifg 1 location 0/2/CPU0
```

## show controllers npu packet-latency instance

```

Packet Latency Histogram Bin Range In nanosecond: Node ID: 0/2/CPU0
Time          NPU  Slice IFG TC          5000          6000          7000          8000
9000          10000          15000          40000000000 Max_delay
-----
14:43:50.043 EDT 0  2  1  0          0          0          0          0
0              0          0          0          0          0          0          0
14:43:50.043 EDT 0  2  1  1          0          0          0          0
0              0          0          0          0          0          0          0
14:43:50.043 EDT 0  2  1  2          0          1627324790          387009          0
0              0          0          0          6400          0          0          0
14:43:50.043 EDT 0  2  1  3          0          0          0          0          0
0              0          0          0          0          0          0          0
14:43:50.043 EDT 0  2  1  4          0          0          0          0          0
0              0          0          0          0          0          0          0
14:43:50.043 EDT 0  2  1  5          0          0          0          0          0
0              0          0          0          0          0          0          0
14:43:50.043 EDT 0  2  1  6          0          102965743          28788249          10708
0              0          0          0          7936          0          0          0
14:43:50.043 EDT 0  2  1  7          38680          15          1          1
0              0          0          0          7680          0          0          0

```

The following output displays the cumulative packet count in the latency histogram bin for a specific TC 6 on slice 2, IFG 1, and location 0/2/CPU0:

```

Router# show controllers npu packet-latency instance 0 slice 2 ifg 1 traffic-class 6 location
0/2/CPU0

```

```

Packet Latency Histogram Bin Range In nanosecond: Node ID: 0/2/CPU0
Time          NPU  Slice IFG TC          5000          6000          7000          8000
9000          10000          15000          40000000000 Max_delay
-----
14:48:49.383 EDT 0  2  1  6          0          2249220704          667817683          238920
52              0          0          0          8192          0          0          0

```

The following output displays the cumulative packet count in the latency histogram bin for a specific location 0/2/CPU0:

```

Router# show controllers npu packet-latency instance 0 location 0/2/CPU0

```

```

Packet Latency Histogram Bin Range In nanosecond: Node ID: 0/2/CPU0
Time          NPU  Slice IFG TC          5000          6000          7000          8000
9000          10000          15000          40000000000 Max_delay
-----
12:54:27.657 EDT 0  0  0  0          0          0          0          0
0              0          0          0          0          0          0          0
12:54:27.657 EDT 0  0  0  1          0          0          0          0
0              0          0          0          0          0          0          0
12:54:27.657 EDT 0  0  0  2          0          0          0          0
0              0          0          0          0          0          0          0
12:54:27.657 EDT 0  0  0  3          0          0          0          0
0              0          0          0          0          0          0          0
12:54:27.657 EDT 0  0  0  4          0          0          0          0
0              0          0          0          0          0          0          0
12:54:27.657 EDT 0  0  0  5          0          0          0          0
0              0          0          0          0          0          0          0
12:54:27.657 EDT 0  0  0  6          0          3110652746          3246447410          963357617
25638          0          0          0          8704          0          0          0
12:54:27.657 EDT 0  0  0  7          8357          9249          15          15
0              0          0          0          7680          0          0          0

```

# show controllers npu retimer

To display number of retimer retrieved on npu controllers, use the **show controllers npu retimer** command in the XR EXEC mode.

**show controllers npu retimer** { **id** [ **number** | **all** ] | **slot** *number* | *all* }

Syntax Description	number	Specifies the number of retimers retrieved from a selected instance.  Retimer number ranges from 0-47.
	<b>all</b>	Specifies the number of retimers retrieved from all instance.
	<b>slot</b> <i>number</i>	Displays retrieved retimer information for the selected slot number.  Slot number ranges from 0-7.
	<b>slot</b> <i>all</i>	Displays retrieved retimer information for all the slots.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 24.3.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read
	filesystem	read, write
	cisco-support	read

## Examples

The **show controllers npu retimer id** command displays the information on the retrieved retimers.

```
Router# show controllers npu retimer id all slot all
=====
Retimer information
Number of retimers retrieved : 0
=====
```

# show controllers npu slice

To display components to manage npu slice, use the **show controllers npu slice** command in the XR EXEC mode.

```
show controllers npu slice { health | info [ slice { id | all } ] location { node-id | all } }
```

Syntax Description	health	Displays the health check results for a specific location.
	info	Displays the slice information of the specified card.
	location <i>node-id</i>	Displays the information about a specific node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
	location <i>all</i>	Displays information about all nodes.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 24.3.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read
	filesystem	read, write
	cisco-support	read

## Examples

The **show controllers npu slice** command displays the slice manager component.

```
Router# show controllers npu slice health location all
=====
slice check, node: 0/0/CPU0
=====
phy slot number:      0
logical slot number:  0
board type:           0x470636
card state:           Operational
oper state:           Up
number of slices:     2
== No issue found on this card ==
```

```

=====
slice check, node: 0/RP0/CPU0
=====
phy slot number:      30
logical slot number:  0
board type:          0x450614
card state:          Operational
oper state:          Up
number of slices:    0
== No issue found on this card ==

phy slot number:      18
logical slot number:  0
board type:          0x460621
card state:          Operational
oper state:          Up
number of slices:    3
== No issue found on this card ==

phy slot number:      19
logical slot number:  1
board type:          0x460621
card state:          Operational
oper state:          Up
number of slices:    3
== No issue found on this card ==

```

## show controllers npu trace

To display trace data for npu component on controllers npu, use the **show controllers npu trace** command in the XR EXEC mode.

```

show controllers npu trace { aipc-error | aipc-info | all | connection | connection-error | device-error
| device-info | fgid | fgid-error | fm-msgs | fm-msgs-error | fsdb | fsdb-error | fsm-error | fsm-info
| initialization | initialization-error | intr | intr-error | link-error | link-info | main | main-error
| pfc-error | pfc-info | ras-error | sdk | sdk-error } location node-id

```

Syntax Description		
<b>aipc-error</b>		Displays trace data for aipc-error.
<b>aipc-info</b>		Displays trace data for aipc-info.
<b>all</b>		Displays trace data for all events.
<b>connection</b>		Displays trace data for connection management processing events.
<b>connection-error</b>		Displays trace data for connection error management processing events.
<b>device-error</b>		Displays trace data for device error events.
<b>device-info</b>		Displays trace data for device events such as traffic and time_sync.

<b>fgid</b>	Displays trace data for feature group id (fgid) server processing events.
<b>fgid-error</b>	Displays trace data for feature group id error processing events.
<b>fm-msgs</b>	Displays trace data for fault management (fm) events.
<b>fm-msgs-error</b>	Displays trace data for fault management error events.
<b>fsdb</b>	Displays trace data for fabric state database (fsdb) message processing events.
<b>fsdb-error</b>	Displays trace data for fabric state database error processing events.
<b>fsm-error</b>	Displays trace data for finite state machine (fsm) error events.
<b>fsm-info</b>	Displays trace data for finite state machine event information.
<b>initialization</b>	Displays trace data for initialization management processing events.
<b>initialization-error</b>	Displays trace data for initialization error management processing events.
<b>intr</b>	Displays trace data for inter message processing events
<b>intr-error</b>	Displays trace data for inter error processing events
<b>link-error</b>	Displays trace data for link error events.
<b>link-info</b>	Displays trace data information for link events.
<b>main</b>	Displays trace data for main events.
<b>main-error</b>	Displays trace data for main error events.
<b>pfc-error</b>	Displays trace data for policy feature card (pfc) error events.
<b>pfc-info</b>	Displays trace data for policy feature card event information.
<b>ras-error</b>	Displays trace data for remote access service (ras) errors.
<b>ras-info</b>	Displays trace data for remote access service information.
<b>sdk</b>	Displays trace data for software development kit (sdk) events.

<b>sdk-error</b>	Displays trace data for software development kit error events.
<b>location</b> <i>node-id</i>	Displays the information about a specific node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 24.3.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	interface	read
	filesystem	read, write
	cisco-support	read

## Examples

The **show controllers npu trace** command displays the trace data for npu components.

```
Router# show controllers npu trace connection location 0/0/CPU0
2024-11-12:21.13.37.291482112:4908:1859349056:npu_inv_filter_ds_endpoints:NPU_TRACE_INV_SERV_FILTER_INF01:npu_inv_filter_ds_endpoints:
NPU Driver connected to Inventory service in rack scope
2024-11-12:21.13.37.293459712:4908:1859349056:npu_inv_connect_cb:NPU_TRACE_AMBIENT_INF895:npu_inv_connect_cb():
from ip ac001e01, port 36787
2024-11-12:21.13.39.457122560:4908:1859349056:npu_envmon_client_init:NPU_TRACE_ENVMON_INIT_INF01:npu_envmon_client_init:
SPI envmon handle created 0x0x55c384bf38a0
2024-11-12:21.13.39.458469120:4908:1859349056:npu_envmon_client_init:NPU_TRACE_ENVMON_INIT_INF02:npu_envmon_client_init:
Successfully connected to SPI envmon
2024-11-12:21.13.39.749300992:4908:1859349056:npu_inv_resp_register_event_cb:NPU_TRACE_AMBIENT_INF957:npu_inv_resp_register_event_cb():
flags 0x00000001 rc 0 (ack REG_OK) received from ip ac001e01, port 36787
2024-11-12:21.13.39.751215360:4908:1859349056:npu_inv_resp_register_event_cb:NPU_TRACE_AMBIENT_INF957:npu_inv_resp_register_event_cb():
flags 0x00000001 rc 0 (ack REG_OK) received from ip ac001e01, port 36787
2024-11-12:21.13.39.758479616:4908:1859349056:npu_envmon_filter_cb:NPU_TRACE_ENVMON_FILTER_INF01:npu_envmon_filter_cb:NPU
Driver connected to node scope Envmon service
2024-11-12:21.13.39.759417856:4908:1859349056:npu_fsdb_connect_cb:NPU_TRACE_CONN1:Called:
Driver-FSDB
connected2024-11-12:21.13.39.759440896:4908:1859349056:npu_fsdb_connect_cb:NPU_TRACE_CONN2:NPU
to FSDB Slot mask: 0x1
2024-11-12:21.13.39.759500288:4908:1859349056:npu_fsdb_connect_cb:NPU_TRACE_CONN3:NPU driver
client registration request to FSDB.
2024-11-12:21.13.39.759523328:4908:1859349056:npu_envmon_connect_cb:NPU_TRACE_ENVMON_CONN_INF01:npu_envmon_connect_cb:
NPU Driver-SPI envmon connected
2024-11-12:21.13.39.773804800:4908:1859349056:npu_sm_connect:NPU_TRACE_CM_506:Successfully
registered with slice manager using pid: 8800-LC-48H
2024-11-12:21.13.39.773830912:4908:1859349056:npu_fsdb_registered_cb:NPU_TRACE_CONN9:Called
Driver-FSDB registered
```

```
2024-11-12:21.13.39.773831680:4908:1859349056:npu_fsdb_registered_cb:NPU_TRACE_CONN21:Received
fabric_mode : 3 from FSDB. Is fabric_mode pending: 0
2024-11-12:21.13.39.773832192:4908:1859349056:npu_fsdb_registered_cb:NPU_TRACE_CONN10:NPU
driver registered as client with FSDB.
```

## show controllers npu voq-usage

To display usage data related to Virtual Output Queues (VOQs) on an NPU, use the **show controllers npu voq-usage** command in the XR EXEC mode.

```
show controllers npu voq-usage { { interface number | interface | all resource-manager local } |
instance id | all }
```

<b>Syntax Description</b>	<b>interface</b>	Displays voq data usage for a selected interface.
	<b>resource-manager</b>	Displays number of voq data available for each interface.
<b>Command Default</b>	None	
<b>Command Modes</b>	XR EXEC mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 24.3.1	This command was introduced.
<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.	

Task ID	Task ID	Operations
	interface	read
	filesystem	read, write
	cisco-support	read

### Examples

The **show controllers npu voq-usage** command displays usage data related to Virtual Output Queues (VOQs) on an npu.

```
Router# show controllers npu voq-usage interface all instance all location 0/0/CPU0
```

```
-----
Node ID: 0/0/CPU0
Intf      Intf      NPU Slice IFG  Sys  VOQ  Flow  VOQ  Port  Global
name      handle   #   #   #   Port base base port speed IFG #
          (hex)
-----
Hu0/0/0/0 190      0   1   0   4  1296  0   local 100G  2
Hu0/0/0/1 198      0   2   1   5  1312  0   local 100G  5
Hu0/0/0/2 1a0      0   2   1   6  1320  0   local 100G  5
```

Hu0/0/0/3	1a8	0	1	0	7	1304	0	local	100G	2
Hu0/0/0/4	1b0	0	2	1	8	1328	0	local	100G	5
Hu0/0/0/5	1b8	0	2	1	9	1336	0	local	100G	5
Hu0/0/0/6	1c0	0	1	0	10	1344	0	local	100G	2
Hu0/0/0/7	1c8	0	2	0	11	1360	0	local	100G	4
Hu0/0/0/8	1d0	0	2	0	12	1368	0	local	100G	4
Hu0/0/0/9	1d8	0	1	0	13	1352	0	local	100G	2
Hu0/0/0/10	1e0	0	2	0	14	1376	0	local	100G	4
Hu0/0/0/11	1e8	0	2	0	15	1384	0	local	100G	4
Hu0/0/0/12	1f0	0	1	1	16	1392	0	local	100G	3
Hu0/0/0/13	1f8	1	2	1	17	1408	0	local	100G	5
Hu0/0/0/14	200	1	2	1	18	1416	0	local	100G	5
Hu0/0/0/15	208	0	1	1	19	1400	0	local	100G	3
Hu0/0/0/16	210	1	2	1	20	1424	0	local	100G	5
Hu0/0/0/17	218	1	2	1	21	1432	0	local	100G	5
Hu0/0/0/18	220	0	1	1	22	1440	0	local	100G	3
Hu0/0/0/19	228	1	2	0	23	1456	0	local	100G	4
Hu0/0/0/20	230	1	2	0	24	1464	0	local	100G	4
Hu0/0/0/21	238	0	1	1	25	1448	0	local	100G	3
Hu0/0/0/22	240	1	2	0	26	1472	0	local	100G	4
Hu0/0/0/23	248	1	2	0	27	1480	0	local	100G	4
Hu0/0/0/24	250	0	0	1	28	1488	0	local	100G	1
Hu0/0/0/25	258	1	1	1	29	1504	0	local	100G	3
Hu0/0/0/26	260	1	1	1	30	1512	0	local	100G	3
Hu0/0/0/27	268	0	0	1	31	1496	0	local	100G	1
Hu0/0/0/28	270	1	1	1	32	1520	0	local	100G	3
Hu0/0/0/29	278	1	1	1	33	1528	0	local	100G	3
Hu0/0/0/30	280	0	0	1	34	1536	0	local	100G	1
Hu0/0/0/31	288	1	1	0	35	1552	0	local	100G	2
Hu0/0/0/32	290	1	1	0	36	1560	0	local	100G	2
Hu0/0/0/33	298	0	0	1	37	1544	0	local	100G	1
Hu0/0/0/34	2a0	1	1	0	38	1568	0	local	100G	2
Hu0/0/0/35	2a8	1	1	0	39	1576	0	local	100G	2
Hu0/0/0/36	2b0	0	0	0	40	1584	0	local	100G	0
Hu0/0/0/37	2b8	1	0	1	41	1600	0	local	100G	1
Hu0/0/0/38	2c0	1	0	1	42	1608	0	local	100G	1
Hu0/0/0/39	2c8	0	0	0	43	1592	0	local	100G	0
Hu0/0/0/40	2d0	1	0	1	44	1616	0	local	100G	1
Hu0/0/0/41	2d8	1	0	1	45	1624	0	local	100G	1
Hu0/0/0/42	2e0	0	0	0	46	1632	0	local	100G	0
Hu0/0/0/43	2e8	1	0	0	47	1648	0	local	100G	0
Hu0/0/0/44	2f0	1	0	0	48	1656	0	local	100G	0
Hu0/0/0/45	2f8	0	0	0	49	1640	0	local	100G	0
Hu0/0/0/46	300	1	0	0	50	1664	0	local	100G	0
Hu0/0/0/47	308	1	0	0	51	1672	0	local	100G	0

■ `show controllers npu voq-usage`



# CHAPTER 10

## Monitoring Fabric Links Commands

This module describes the Cisco IOS XR software commands related to monitoring fabric links.

For detailed information about monitoring fabric links concepts, configuration tasks, and examples, see the *Traffic Monitoring* chapter in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [hw-module fabric-tsmon-port-reset disable](#), on page 379
- [show controller fabric dashboard](#), on page 380
- [show controller fabric dashboard capacity](#), on page 381
- [show controller fabric dashboard link-all](#), on page 383
- [show controller fabric health](#), on page 385
- [show controller fabric plane](#), on page 386

### hw-module fabric-tsmon-port-reset disable

To disable the maximum port-reset threshold value of five, use the **hw-module fabric-tsmon-port-reset disable** command in XR EXEC mode.

```
hw-module fabric-tsmon-port-reset disable
```

<b>Syntax Description</b>	This command has no keywords or arguments.
---------------------------	--

<b>Command Default</b>	By default, keepalive monitoring is enabled on routers.
------------------------	---

<b>Command Modes</b>	XR EXEC mode
----------------------	--------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 24.2.11	This command was introduced.

#### Usage Guidelines



<b>Caution</b>	We recommend that you troubleshoot and resolve the reason for the fabric port shutdown instead of using the <b>hw-module fabric-tsmon-port-reset disable</b> command to prevent the fabric port shutdown.
----------------	---

Use the **hw-module fabric-tsmon-port-reset disable** command to disable the maximum port-reset threshold value of five.

Task ID	Task ID	Operations
	config-services	read, write
	root-lr	read, write

### Examples

The following example shows how to disable the maximum port-reset threshold value of five:

```
Router# configuration terminal
Router(config)# hw-module fabric-tsmon-port-reset disable
Router(config)# commit
```

## show controller fabric dashboard

To display each NPU's capacity and detail only down or potentially bad fabric links. To display NPU capacity and problematic links, use the **show controller fabric dashboard** command in the XR EXEC mode.

**show controller fabric dashboard** [ **instance** *id* | **all** **location** *location* | **all** ]

Syntax Description	dashboard	Provides options to filter the displayed information.
	<b>instance</b> <i>id</i>   <b>all</b>	Specifies that you want to filter the output based on a specific NPU instance. <ul style="list-style-type: none"> <li>• Replace <i>id</i> with a specific Network Processing Unit (NPU) instance number. This displays information only for that particular NPU.</li> <li>• <b>all</b> displays information for all available NPU instances.</li> </ul>
	<b>location</b> <i>location</i>   <b>all</b>	Specifies that you want to filter the output based on a specific hardware location. <ul style="list-style-type: none"> <li>• Replace <i>location</i> with a specific hardware location identifier. For example, <i>0/5/CPU0</i>. This displays information only for components at that location.</li> <li>• <b>all</b> displays information for components at all available hardware locations.</li> </ul>

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 25.3.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read
	filesystem	read, write
	cisco-support	read

## Examples

The **show controller fabric dashboard** display each NPU's capacity and detail only down or potentially bad fabric links.

```
Router#show controllers fabric dashboard
Sun Jun 2 06:08:35.980 UTC
```

```
Node: 0/5/CPU0(8800-LC-36FH-M, SN:FOC2403P47R),NPU[0](Asic Type: Q200)
```

R/S/A	Network BW(Gbps)	Required/Available Fabric BW (Gbps)	Fabric Capacity (percent)
0/5/0	4800	5280/6400	121

```
Node: 0/5/CPU0(8800-LC-36FH-M, SN:FOC2403P47R),NPU[1](Asic Type: Q200)
```

R/S/A	Network BW(Gbps)	Required/Available Fabric BW (Gbps)	Fabric Capacity (percent)
0/5/1	4800	5280/6000	113

Port Extra	Far-end Comment	Oper state	Port state	Cap. Impact	Flap Count	High BER	NZ-CW-Bin length	UCE	CRC	SNR
R/S/A/L Pol.BER	R/S/A/L									

```
0/5/1/170 0/FC0/0/40 DN ACTIVATED T 0 F 0 196908 0 20
-1.000e+00 [MAC]Bad Link Quality
0/5/1/177 0/FC0/0/52 UP UP F 0 F 7 0 0 23
3.579e-07 [MAC]High extra pol ber
```

## show controller fabric dashboard capacity

To display each NPU's available fabric capacity, use the **show controller fabric dashboard capacity** command in the XR EXEC mode.

```
show controller fabric dashboard capacity [ instance id | all location LC_location | all ]
```

<b>Syntax Description</b>	<b>dashboard capacity</b>	Displays only each NPU's available fabric capacity.
	<b>instanceid</b>   <i>all</i>	Specifies that you want to filter the output based on a specific NPU instance. <ul style="list-style-type: none"> <li>• Replace <i>id</i> with a specific Network Processing Unit (NPU) instance number. This displays information only for that particular NPU.</li> <li>• <i>all</i> displays information for all available NPU instances.</li> </ul>
	<b>location</b> <i>LC_location</i>   <i>all</i>	Specifies that you want to filter the output based on a specific hardware location. <ul style="list-style-type: none"> <li>• Replace <i>LC_location</i> with a specific line card location. For example, <i>0/5/CPU0</i>. This displays capacity information only for the NPU(s) on the Line Card at that location.</li> <li>• <i>all</i> displays capacity information for NPUs at all available line card locations.</li> </ul>

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 25.3.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	interface	read
	filesystem	read, write
	cisco-support	read

### Examples

The **show controller fabric dashboard capacity** display only each NPU's available fabric capacity.

```
Router#show controllers fabric dashboard capacity instance all location all
```

```
Sun Jun 2 06:08:35.980 UTC
Node: 0/5/CPU0(8800-LC-36FH-M, SN:FOC2403P47R), (Asic Type: Q200)
```

```
R/S/A Network Required/Available Fabric Capacity
```

```

          BW(Gbps)   Fabric BW (Gbps)           (percent)
=====
0/5/0      4800      5280/6200                117
0/5/1      4800      5280/6200                117
0/5/2      4800      5280/6200                117

Node: 0/11/CPU0 (8800-LC-48H, SN:FOC2329P657), (Asic Type: Q100)

R/S/A   Network   Required/Available   Fabric Capacity
      BW(Gbps)   Fabric BW (Gbps)           (percent)
=====
0/11/0     2400     2640/3200             121
0/11/1     2400     2640/3200             121

Node: 0/0/CPU0 (8800-LC-48H, SN:FOC2317PACY), (Asic Type: Q100)

R/S/A   Network   Required/Available   Fabric Capacity
      BW(Gbps)   Fabric BW (Gbps)           (percent)
=====
0/0/0     2400     2640/3200             121
0/0/1     2400     2640/3200             121

Router#

```

## show controller fabric dashboard link-all

To display each NPU's capacity and quality information for all fabric links, use the **show controller fabric dashboard link-all** command in the XR EXEC mode.

```
show controller fabric dashboard link-all [ instance id | all location location | all ]
```

Syntax	Description
<b>dashboard link-all</b>	Display each NPU's capacity and quality information for all fabric links.
<b>instance</b> <i>id</i>   <b>all</b>	Specifies that you want to filter the output based on a specific NPU instance. <ul style="list-style-type: none"> <li>Replace <i>id</i> with a specific Network Processing Unit (NPU) instance number. This displays information for all fabric links connected to that particular NPU.</li> <li><b>all</b> displays information for all fabric links across all available NPU instances.</li> </ul>
<b>location</b> <i>location</i>   <b>all</b>	Specifies that you want to filter the output based on a specific hardware location. <ul style="list-style-type: none"> <li>Replace <i>LC_location</i> with a specific line card location. For example, <i>0/5/CPU0</i>. This displays information for all fabric links associated with components at that location.</li> <li><b>all</b> information for all fabric links across all available hardware locations.</li> </ul>

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 25.3.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	interface	read
	filesystem	read, write
	cisco-support	read

## Examples

The **show controller fabric dashboard link-all** displays each NPU's capacity and quality information for all fabric links.

```
Router#show controllers fabric dashboard link-all instance all location all
```

```
Sun Jun  2 06:08:35.980 UTC
Node: 0/5/CPU0(8800-LC-36FH-M, SN:FOC2403P47R), (Asic Type: Q200)
```

R/S/A	Network BW(Gbps)	Required/Available Fabric BW (Gbps)	Fabric Capacity (percent)
0/5/0	4800	5280/6200	117
0/5/1	4800	5280/6200	117
0/5/2	4800	5280/6200	117

```
Node: 0/11/CPU0(8800-LC-48H, SN:FOC2329P657), (Asic Type: Q100)
```

R/S/A	Network BW(Gbps)	Required/Available Fabric BW (Gbps)	Fabric Capacity (percent)
0/11/0	2400	2640/3200	121
0/11/1	2400	2640/3200	121

```
Node: 0/0/CPU0(8800-LC-48H, SN:FOC2317PACY), (Asic Type: Q100)
```

R/S/A	Network BW(Gbps)	Required/Available Fabric BW (Gbps)	Fabric Capacity (percent)
0/0/0	2400	2640/3200	121
0/0/1	2400	2640/3200	121

```
Router#
```

# show controller fabric health

To display the general fabric health information, use the **show controller fabric health** command in the XR EXEC mode.

## show controller fabric health

<b>Syntax Description</b>	<b>health</b>	Displays the general health information of the fabric, such as <b>fabric system health</b> and <b>collaborator process state</b> .
<b>Command Default</b>	None	
<b>Command Modes</b>	XR EXEC mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 24.3.1	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	interface	read
	filesystem	read, write
	cisco-support	read

## Examples

The **show controller fabric health** command displays general fabric health information, such as **Fabric System Health** and **Collaborator Process State**.

```
Router# show controller fabric health
```

### Fabric System Health

```
-----
Flags: T - Total,      U - Up,          A - Admin Down
       L - LCC,        M - Mcast Down, Y - Yes
       F - FCC,        D - Down,       N - No or Not Ok
       V - Valid,
```

### Collaborator Process State:

```
-----
FSDB Aggregator: OK
+-----+
|Rack id   | 0|
+-----+
|FSDB status|Ok|
+-----+
|SFE status|Ok|
```

```

+-----+
Router Health:
-----

Rack      Planes      SFE Asics    Fia Asics
T/L/F    U/M/D/A    T/U/D        T/U/D
-----
1/1/0    2/0/6/0    6/6/0        2/2/0

Plane Admin Plane  Racks   Data
id   state state  in issue drop/error
-----
0     UP   UP    0      No    No
1     UP   UP    0      No    No
2     UP   DN    1      No    No
3     UP   DN    1      No    No
4     UP   DN    1      No    No
5     UP   DN    1      No    No
6     UP   DN    1      No    No
7     UP   DN    1      No    No
-----

Rack Health:
-----

Rack: 0, Type: LCC

SFE Asics  FIA Asics  Planes  Valid
T/U/D      T/U/D      U/M/D   fab ids
-----
6/6/0     2/2/0     2/0/6   2

PLA Health:
-----

Description:
planes      : p0-p7
plane mask  : Asic #0-3
Asic value  1: destination reachable via asic
           .: destination unreachable via asic
           x: asic not connected to LC (for S3)
           -: plane not configured (for S2) or asic missing
=====
Destination p0    p1    p2    p3    p4    p5    p6    p7    Reach-mask
Oper Up
Address      mask  mask  mask  mask  mask  mask  mask  mask  links/asic
links/asic
Fapid(R/S/A) 0123  0123  0123  0123  0123  0123  0123  0123  Mn/Mx Tota
l Mn/Mx Total
-----
0(0/0/0)     111   111   ---   ---   ---   ---   ---   ---   2/4   22
8/8         48
1(0/0/1)     111   111   ---   ---   ---   ---   ---   ---   2/4   22
8/8         48

```

## show controller fabric plane

To display plane state information on fabric plane, use the **show controller fabric plane** command in the XR EXEC mode.

**show controller fabric plane { plane id | all }**

<b>Syntax Description</b>	<b>plane-id</b>	Displays the information on selected fabric plane, such as <b>admin state</b> and <b>plane state</b> .
	<b>all</b>	Displays the information on all fabric plane.
<b>Command Default</b>	None	
<b>Command Modes</b>	XR EXEC mode	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 24.3.1	This command was introduced.
<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.	
<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	interface	read
	filesystem	read, write
	cisco-support	read

### Examples

The **show controller fabric plane all** command displays plane state information on fabric planes, such as **admin state** and **plane state**.

```
Router# show controller fabric plane all
Plane Admin Plane up->dn up->mcast
Id   State State   counter  counter
-----
0    UP   UP       0         0
1    UP   UP       0         0
2    UP   DN       0         0
3    UP   DN       0         0
4    UP   DN       0         0
5    UP   DN       0         0
6    UP   DN       0         0
7    UP   DN       0         0
```

**show controller fabric plane**



# CHAPTER 11

## Tech-Support Commands

This module describes commands used to collect the **show** command outputs using Cisco IOS XR software.

The **show tech-support** commands collect common data from commands such as **show version**. Each **show tech-support** command also generates and gathers relevant data for a specific area. This data includes trace output to collect debugging information available in the specific area of interest.

To use commands of this module, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using any command, contact your AAA administrator for assistance.

- [show tech-support custom, on page 389](#)

### show tech-support custom

To generate and gather tech-support information related to a specific area such as network traffic, control-plane, and the system, use the **show tech-support custom** command in EXEC mode.

```
show tech-support custom { traffic | control-plane | system }
```

Syntax Description	traffic	Generates tech-support information related to network traffic.
	control-plane	Generates tech-support information related to the control-plane.
	system	Generates tech-support information related to the system.
Command Default	None	
Command Modes	EXEC mode Config mode	
Command History	Release	Modification
	Release 7.3.5	This command was introduced.

---

**Usage Guidelines**

This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server\_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.

*Table 40: List of Commands collected by each custom option*

<b>Custom Option</b>	<b>Release</b>	<b>List of commands outputs collected</b>
Control-plane	Release 7.3.6	

Custom Option	Release	List of commands outputs collected
		show tech-support ipv6 nd show tech-support arp show tech-support ofa show tech-support routing bgp show tech-support routing isis show tech-support routing bfd show tech-support routing ospf show tech-support routing ospfv3 show tech-support mpls ldp show tech-support bcdl show tech-support bcdlv2 show tech-support rib show tech-support mpls lsd show tech-support cef show tech-support cef platform show tech-support gsp show tech-support l2rib show tech-support l2vpn show tech-support lpts show tech-support spp show tech-support clns show tech-support multicast address-family ipv4 show tech-support multicast address-family ipv6 show tech-support grpc show tech-support service-layer show tech-support appmgr show tech-support netconf show tech-support yserver show tech-support grid show tech-support tunnel-ip show tech-support pbr show tech-support bfdhwoff show tech-support flowspec

Custom Option	Release	List of commands outputs collected
		show tech-support access-lists ipv4 show tech-support access-lists ipv6 show tech-support ds show tech-support os show tech-support placed show tech-support qos pi show tech-support processmgr show tech-support spio show tech-support sysdb show tech-support telemetry model-driven show tech-support bundles show tech-support dhcp ipv4 base show tech-support dhcp ipv4 client show tech-support dhcp ipv4 proxy show tech-support dhcp ipv4 relay show tech-support dhcp ipv4 server show tech-support dhcp ipv4 snoop show tech-support dhcp ipv6 base show tech-support dhcp ipv6 client show tech-support dhcp ipv6 proxy show tech-support dhcp ipv6 relay show tech-support dhcp ipv6 server show tech-support ipinfra show tech-support protection-notif show tech-support raw show tech-support rsi show tech-support statsd show tech-support tcp nsr show tech-support udp show tech-support pfi show tech-support cfgmgr show tech-support tty show tech-support rdsfs

Custom Option	Release	List of commands outputs collected
	Release 24.2.11	

Custom Option	Release	List of commands outputs collected
		show tech-support aib show tech-support ipv6 nd show tech-support arp show tech-support ofa show tech-support routing bgp show tech-support routing isis show tech-support routing bfd show tech-support routing ospf show tech-support routing ospfv3 show tech-support mpls ldp show tech-support bcdl show tech-support bcdlv2 show tech-support rib show tech-support mpls lsd show tech-support cef show tech-support cef platform show tech-support gsp show tech-support l2rib show tech-support l2vpn show tech-support l2vpn platform show tech-support lpts show tech-support spp show tech-support clns show tech-support multicast address-family show tech-support multicast address-family show tech-support mgbl show tech-support service-layer show tech-support appmgr show tech-support grid show tech-support tunnel-ip show tech-support pbr show tech-support bfdhwoff show tech-support flowspec

Custom Option	Release	List of commands outputs collected
		show tech-support access-lists ipv4 show tech-support access-lists ipv6 show tech-support ds show tech-support os show tech-support placed show tech-support qos pi show tech-support processmgr show tech-support spio show tech-support sysdb show tech-support bundles show tech-support dhcp ipv4 show tech-support dhcp ipv4 show tech-support dhcp ipv4 show tech-support dhcp ipv4 show tech-support dhcp ipv4 show tech-support dhcp ipv4 show tech-support dhcp ipv6 show tech-support dhcp ipv6 show tech-support dhcp ipv6 show tech-support dhcp ipv6 show tech-support dhcp ipv6 show tech-support ipinfra show tech-support protection-notif show tech-support raw show tech-support rsi show tech-support statsd show tech-support tcp nsr show tech-support udp show tech-support pfi show tech-support cfgmgr show tech-support tty show tech-support rdsfs

Custom Option	Release	List of commands outputs collected
Traffic	Release 7.3.6	

Custom Option	Release	List of commands outputs collected
		show tech-support platform-fwd show tech-support ofa show tech-support cef show tech-support cef platform show tech-support aib show tech-support grid show tech-support bcdl show tech-support bcdlv2 show tech-support mpls lsd show tech-support rib show tech-support fabric link-include show tech-support mpls traffic-eng show tech-support segment-routing traffic-eng show tech-support optics show tech-support qos platform show tech-support platform-pfc show tech-support qos pi show tech-support arp show tech-support ipv6 nd show tech-support gsp show tech-support access-lists platform show tech-support tunnel-ip show tech-support pbr show tech-support bfdhwoff show tech-support flowspec show tech-support ds show tech-support placed show tech-support service-layer show tech-support processmgr show tech-support os show tech-support grpc show tech-support sysdb show tech-support telemetry model-driven

Custom Option	Release	List of commands outputs collected
		show tech-support bundles show tech-support dhcp ipv4 base show tech-support dhcp ipv4 client show tech-support dhcp ipv4 proxy show tech-support dhcp ipv4 relay show tech-support dhcp ipv4 server show tech-support dhcp ipv4 snoop show tech-support dhcp ipv6 base show tech-support dhcp ipv6 client show tech-support dhcp ipv6 proxy show tech-support dhcp ipv6 relay show tech-support dhcp ipv6 server show tech-support ipinfra show tech-support protection-notif show tech-support raw show tech-support rsi show tech-support spio show tech-support statsd show tech-support tcp nsr show tech-support udp show tech-support pfi show tech-support static show tech-support cfgmgr show tech-support snmp ifmib show tech-support resmon
	Release 24.2.11	

Custom Option	Release	List of commands outputs collected
		show tech-support platform-fwd show tech-support ofa show tech-support cef show tech-support cef platform show tech-support aib show tech-support grid show tech-support bcdl show tech-support bcdlv2 show tech-support mpls lsd show tech-support rib show tech-support fabric link-include show tech-support mpls traffic-eng show tech-support mpls rsvp show tech-support mpls static show tech-support mpls oam show tech-support segment-routing traffic-eng show tech-support optics show tech-support qos platform show tech-support platform-pfc show tech-support qos pi show tech-support arp show tech-support ipv6 nd show tech-support gsp show tech-support l2vpn show tech-support l2vpn platform show tech-support access-lists platform show tech-support tunnel-ip show tech-support pbr show tech-support bfdhwoff show tech-support flowspec show tech-support ds show tech-support placed show tech-support service-layer

Custom Option	Release	List of commands outputs collected
		show tech-support processmgr show tech-support os show tech-support mgb1 show tech-support sysdb show tech-support bundles show tech-support dhcp ipv4 base show tech-support dhcp ipv4 client show tech-support dhcp ipv4 proxy show tech-support dhcp ipv4 relay show tech-support dhcp ipv4 server show tech-support dhcp ipv4 snoop show tech-support dhcp ipv6 base show tech-support dhcp ipv6 client show tech-support dhcp ipv6 proxy show tech-support dhcp ipv6 relay show tech-support dhcp ipv6 server show tech-support ipinfra show tech-support protection-notif show tech-support raw show tech-support rsi show tech-support spio show tech-support statsd show tech-support tcp nsr show tech-support udp show tech-support pfi show tech-support static show tech-support cfgmgr show tech-support snmp ifmib show tech-support resmon

Custom Option	Release	List of commands outputs collected
System	Release 7.3.6	

Custom Option	Release	List of commands outputs collected
		show tech-support os show tech-support spi show tech-support fpd show tech-support fabric link-include show tech-support interface show tech-support ofa show tech-support optics show tech-support macsec show tech-support gsp show tech-support platform timing show tech-support ptp show tech-support frequency synchronization show tech-support ethernet controllers show tech-support ethernet interfaces show tech-support pfi show tech-support cfgmgr show tech-support sysdb show tech-support processmgr show tech-support grpc show tech-support linux networking show tech-support telemetry model-driven show tech-support parser show tech-support statsd show tech-support ctrace show tech-support control-ethernet show tech-support pmengine show tech-support ptah show tech-support ds show tech-support pam show tech-support placed show tech-support service-layer show tech-support shmwin show tech-support cpa

Custom Option	Release	List of commands outputs collected
		show tech-support install show tech-support keychain show tech-support alarm-mgr show tech-support ntp show tech-support pool show tech-support protection-notif show tech-support rdsfs show tech-support resmon show tech-support snmp show tech-support ssh show tech-support system-recovery show tech-support tacacs show tech-support tam show tech-support tty show tech-support type6 show tech-support ztp show tech-support bmc show tech-support bundles show tech-support snmp ifmib show tech-support ipinfra show tech-support cef show tech-support cef platform show tech-support rsi
	Release 24.2.11	

Custom Option	Release	List of commands outputs collected
		show tech-support os show tech-support spi show tech-support fpd show tech-support fabric link-include show tech-support interface show tech-support ofa show tech-support optics show tech-support macsec show tech-support gsp show tech-support platform timing show tech-support ptp show tech-support frequency synchronization show tech-support ethernet controllers show tech-support ethernet interfaces show tech-support control-ethernet show tech-support pfi show tech-support cfgmgr show tech-support sysdb show tech-support processmgr show tech-support mgbl show tech-support linux networking show tech-support parser show tech-support statsd show tech-support bundles show tech-support ctrace show tech-support control-ethernet show tech-support pmengine show tech-support ptah show tech-support ds show tech-support pam show tech-support placed show tech-support service-layer show tech-support shmwin

Custom Option	Release	List of commands outputs collected
		show tech-support cpa show tech-support install show tech-support keychain show tech-support alarm-mgr show tech-support ntp show tech-support pool show tech-support protection-notif show tech-support rdsfs show tech-support resmon show tech-support snmp show tech-support ssh show tech-support system-recovery show tech-support tacacs show tech-support tam show tech-support tty show tech-support type6 show tech-support ztp show tech-support bmc show tech-support snmp ifmib show tech-support ipinfra show tech-support cef show tech-support cef platform show tech-support rsi



**Note** This command is not required during normal use of the router.

Task ID	Task ID	Operations
	basic-services or cisco-support	read

The following example shows the output of the **show tech-support custom traffic** command:

```
Router# show tech-support custom traffic
++ Show tech start time: 2023-Jun-16.195852.UTC ++
Fri Jun 16 19:58:52 UTC 2023 Waiting for gathering to complete
.....
```

```
Fri Jun 16 20:05:45 UTC 2023 Compressing show tech output
Show tech output available at 0/RP0/CPU0 :
/harddisk:/showtech/showtech-custom-traffic-2023-Jun-16.195852.UTC.tgz
++ Show tech end time: 2023-Jun-16.200546.UTC ++
```

The following example shows the output of the **show tech-support custom control-plane** command:

```
Router# show tech-support custom control-plane
++ Show tech start time: 2023-Jun-16.194006.UTC ++
Fri Jun 16 19:40:06 UTC 2023 Waiting for gathering to complete
.....
Fri Jun 16 19:44:59 UTC 2023 Compressing show tech output
Show tech output available at 0/RP0/CPU0 :
/harddisk:/showtech/showtech-custom-control-2023-Jun-16.194006.UTC.tgz
++ Show tech end time: 2023-Jun-16.194459.UTC ++
```

The following example shows the output of the **show tech-support custom system** command:

```
Router# show tech-support custom system
++ Show tech start time: 2023-Jun-16.194549.UTC ++
Fri Jun 16 19:45:50 UTC 2023 Waiting for gathering to complete
.....
Fri Jun 16 19:54:24 UTC 2023 Compressing show tech output
Show tech output available at 0/RP0/CPU0 :
/harddisk:/showtech/showtech-custom-system-2023-Jun-16.194549.UTC.tgz
++ Show tech end time: 2023-Jun-16.195425.UTC ++
```

■ show tech-support custom



# CHAPTER 12

## System Health Check Commands

This module describes the system health check commands available on the router. These commands are used to proactively monitor the health of the router.

For detailed information about system health check concepts, configuration tasks, and examples, see the *System Health Check* chapter in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [healthcheck](#), on page 409
- [healthcheck metric](#), on page 410
- [show healthcheck metric](#), on page 411
- [show healthcheck report](#), on page 413
- [show healthcheck status](#), on page 414
- [show healthcheck use-case packet-drop](#), on page 415
- [show smart-monitor](#), on page 417
- [use-case](#), on page 420

### healthcheck

To configure the health check cadence and metrics of a system, use the **healthcheck** command in Configuration mode. To disable health check, use the **no** form of this command.



**Note** Health check service is an optional RPM. You must download and install the package explicitly to use the service.

```
healthcheck cadence <cadence-configuration> {enable} {metric | cpu | fabric-health | filesystem | fpd  
| free-mem | shared-mem}  
no healthcheck metric <metric-name>
```

#### Syntax Description

<b>cadence</b>	Collects data about system health for enabled metrics at a configured time interval. The cadence can range from 30 to 1800 seconds.
<b>enable</b>	Enables health check service on the Route Processor (RP).

---

**metric** { **cpu** | **fabric-health** | **filesystem** | **fpd** | **free-mem** | **shared-mem** } Specifies the configurable metrics based on a threshold that applies only to system resources (CPU, free-mem, shared-mem and filesystem).

---

**Command Default** Health check is disabled.

**Command Modes** XR Config mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** None

Task ID	Task ID	Operations
	root-system or diag or cisco-support or monitor or root-lr	read, write

### Examples

This example shows how to enable health check service:

```
Router (config) #healthcheck enable
```

This example shows how to configure cadence (in seconds) at which data about system health is collected:

```
Router (config) #healthcheck cadence 30
```

This example shows how to configure the average utilization threshold of CPU metric:

```
Router (config) #healthcheck metric cpu avg-util 15-minute
```

## healthcheck metric

To disable the health check for the metrics of a system, use the **healthcheck metric** command in Configuration mode.

**healthcheck metric** { **cpu** | **fabric-health** | **filesystem** | **fpd** | **free-mem** | **shared-mem** | **platform** | **redundancy** | **interface-counters** | **asic-errors** | **fabric-stats** } **disable**

Syntax Description	Parameter	Description
	<b>cpu</b>	Specifies system health data for cpu configurations
	<b>fabric-health</b>	Specifies system health data for fabric configurations
	<b>filesystem</b>	Specifies system health data for file-system usage configurations
	<b>fpd</b>	Specifies system health data for fpd configurations
	<b>free-mem</b>	Specifies system health data for free memory

<b>shared-mem</b>	Specifies system health data for shared memory
<b>platform</b>	Specifies system health data for platform configuration
<b>redundancy</b>	Specifies system health data for redundancy configuration
<b>interface-counters</b>	Specifies system health data for interface counters
<b>asic-errors</b>	Specifies system health data for asic-errors
<b>fabric-stats</b>	Specifies system health data for fabric statistics
<b>disable</b>	Disables the collection of health-check information

**Command Default** Health-check for metrics is enabled.

**Command Modes** XR Config mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.
	Release 7.0.14	Command options for platform and redundancy infrastructure services and counters were added.

**Usage Guidelines** None

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read, write, execute

### Examples

This example shows how to disable health check service for platform:

```
Router(config)#healthcheck metric platform disable
Router(config)#commit
```

This example shows how to disable health check service for interface-counters:

```
Router(config)#healthcheck metric intf-counters disable
Router(config)#commit
```

## show healthcheck metric

To view the detailed information about the utilization and state of each metric used to check the health of the system, use the **show healthcheck metric** command in EXEC mode.

## show healthcheck metric

```
show healthcheck metric cpu | free-mem | shared-mem | filesystem | fpd | fabric-health |
platform | redundancy | interface-counters { summary | detail } | asic-errors { summary
| detail } | fabric-stats { summary | detail }
```

<b>Syntax Description</b>	<b>cpu   free-mem   shared-mem   filesystem</b>	Name of the system resource for which the metric is viewed.
	<b>fpd   fabric-health   platform   redundancy</b>	Name of the infrastructure service for which the metric is viewed.
	<b>interface-counters   asic-errors   fabric-stats</b>	Name of the counters for which the metric is viewed.

**Command Default** None

**Command Modes** XR EXEC mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 7.0.12	This command was introduced.
	Release 7.0.14	Health-check for the platform and redundancy infrastructure services and counters were added.

**Usage Guidelines** No specific guidelines impact the use of this command.

<b>Task ID</b>	<b>Task ID</b>	<b>Operations</b>
	monitor	read

**Examples** This is sample output from the **show healthcheck metric** command to view the CPU usage:

```
Router#show healthcheck metric cpu
CPU Metric State: Normal
Last Update Time: <date-time>
CPU Service State: Enabled
Number of Active Nodes: 2
Configured Thresholds:
  Minor: 20%
  Severe: 50%
  Critical: 75%
Node Name: 0/RP0/CPU0
  CPU 1 Minute Average Usage: 6%
  CPU 5 Minute Average Usage: 5%
  CPU 15 Minute Average Usage: 5% *
Node Name: 0/0/CPU0
  CPU 1 Minute Average Usage: 4%
  CPU 5 Minute Average Usage: 4%
  CPU 15 Minute Average Usage: 3% *
'*' indicates the traceked average CPU utilization
```

**Examples** This is sample output from the **show healthcheck metric platform**:

```

Router#show healthcheck metric platform
Platform Metric State: Normal =====> Health of the metric
Last Update Time: 25 Jun 05:17:03.508172 =====> Timestamp at which the metric data was
collected
Platform Service State: Enabled =====> Service state of Platform
Number of Racks: 1 =====> Total number of racks in the testbed
Rack Name: 0
Number of Slots: 12
Slot Name: RP0
Number of Instances: 2
Instance Name: CPU0
Node Name 0/RP0/CPU0
Card Type 8800-RP
Card Redundancy State Active
Admin State NSHUT
Oper State IOS XR RUN

```

## Examples

This is sample output from the **show healthcheck metric interface-counters**:

```

Router#show healthcheck interface-counters summary
Interface-counters Health State: Normal =====> Health of the metric
Last Update Time: 25 Jun 05:59:33.965851 =====> Timestamp at which the metric data was
collected
Interface-counters Service State: Enabled =====> Service state of the metric
Interface MgmtEth0/RP0/CPU0/0 =====> Configured interface for healthcheck monitoring
Counter-Names Count Average Consistently-Increasing
-----
output-buffers-failures 0 0 N
Counter-Names =====> Name of the counters
Count =====> Value of the counter collected at "Last Update Time"
Average =====> Average of all values available in buffer
Consistently-Increasing =====> Trend of the counter values, as per data available in buffer
Router#show healthcheck interface-counters detail all
Last Update Time: 25 Jun 06:01:35.217089 =====> Timestamp at which the metric data was
collected
Interface MgmtEth0/RP0/CPU0/0 =====> Configured interface for healthcheck monitoring
Following table displays data for last <x=5> values collected in periodic cadence intervals
-----
Counter-name Last 5 values
LHS = Earliest RHS = Latest
-----
output-buffers-failures 0 0 0 0 0
parity-packets-received 0 0 0 0 0

```

## show healthcheck report

To view the health check report for enabled metrics in the system, use the **show healthcheck report** command in XR EXEC mode.

**show healthcheck report**

<b>Syntax Description</b>	This command has no keywords or arguments.
<b>Command Default</b>	None
<b>Command Modes</b>	XR EXEC mode

## show healthcheck status

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read

### Examples

This is sample output from the **show healthcheck report** command:

```
Router#show healthcheck report
Healthcheck report for enabled metrics
cpu
  State: Normal
free-memory
  State: Normal
filesystem
  State: Normal
shared-memory
  State: Normal
fpd
  State: Warning
One or more FPDs are in NEED UPGD state
fabric-health
  State: Normal
```

## show healthcheck status

To view the status of health check service and configured parameters for each of the enabled metrics, use the **show healthcheck status** command in XR EXEC mode.

**show healthcheck status**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read

### Examples

This is sample output from the **show healthcheck status** command:

```
Router#show healthcheck status
Healthcheck status: Enabled

Collector Cadence: 60 seconds

System Resource metrics
  cpu
    Thresholds: Minor: 10%
                Severe: 20%
                Critical: 30%

    Tracked CPU utilization: 15 min avg utilization

  free-memory
    Thresholds: Minor: 10%
                Severe: 8%
                Critical: 5%

  filesystem
    Thresholds: Minor: 80%
                Severe: 95%
                Critical: 99%

  shared-memory
    Thresholds: Minor: 80%
                Severe: 95%
                Critical: 99%

Infra Services metrics
  fpd

  fabric-health
```

## show healthcheck use-case packet-drop

To view the packet-drop use-case trends, use the **show healthcheck use-case packet-drop** command in XR EXEC mode.

```
show healthcheck use-case packet-drop { summary | detail { npu npn | location location } | history { npu npn | location location } }
```

Syntax Description	<i>npn npn</i>	Specify the npn
	<i>location location</i>	Specify the slot location
Command Default	None	

## show healthcheck use-case packet-drop

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 24.4.1	This command was modified to introduce the <b>history</b> keyword.
	Release 7.3.4	This command was introduced.

**Usage Guidelines** No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	monitor	read

**Examples**

This is sample output from the **show healthcheck use-case packet-drop summary** command:

```
Router# show healthcheck use-case packet-drop summary
Mon Jun 5 10:38:25.885 IST
Use Case Name: packet_drop
Timestamp : Mon 2023-06-05 10:38:25 IST
State : Normal
```

This is sample output from the **show healthcheck use-case packet-drop detail** command:

```
Router# show healthcheck use-case packet-drop detail npu all location all
Mon Nov 25 08:35:47.701 UTC
Node: 0/0/CPU0 NPU Instance: 0
Timestamp : Mon 2024-11-25 08:35:29 UTC
Alerts :
1. npu-traps location: node-name: 0/0/CPU0 npu-id: 0 trap-string:
V4_CHECKSUM_ERROR(D*) tolerance: LOW trend: PEAK at 2024-11-25 08:35:26
```

This is sample output from the **show healthcheck use-case packet-drop history** command:

```
Router# show healthcheck use-case packet-drop history npu 0 location 0/0/CPU0
Node: 0/0/CPU0 NPU Instance: 0
Timestamp:
Alerts :
  1. npu-traps location: node-name: 0/0/CPU0 npu-id: 0 trap-string:
UNKNOWN_VLAN_OR_BUNDLE_MEMBER(D*) trend: PEAK at 2023-11-28 07:11:37
  2. npu-drops location: node-name: 0/0/CPU0 npu-id: 0 field-name:
counters.drop.slice[0].ifg[0].ifgb.port_4.rx_undersize_pkt_ severity: ERROR trend: PEAK at
2023-11-28 07:11:37
  3. npu-traps location: node-name: 0/0/CPU0 npu-id: 0 trap-string:
V4_CHECKSUM_ERROR(D*) trend: PLATEAU at 2023-11-28 07:13:37
  4. npu-traps location: node-name: 0/0/CPU0 npu-id: 0 trap-string:
UNKNOWN_VLAN_OR_BUNDLE_MEMBER(D*) trend: PLATEAU at 2023-11-28 07:13:37
  5. npu-drops location: node-name: 0/0/CPU0 npu-id: 0 field-name:
counters.drop.slice[0].ifg[0].ifgb.port_4.rx_undersize_pkt_ severity: ERROR trend: PLATEAU
at 2023-11-28 07:21:37
  6. npu-traps location: node-name: 0/0/CPU0 npu-id: 0 trap-string:
UNKNOWN_VLAN_OR_BUNDLE_MEMBER(D*) trend: PLATEAU at 2023-11-28 07:31:09
  7. npu-traps location: node-name: 0/0/CPU0 npu-id: 0 trap-string:
V4_CHECKSUM_ERROR(D*) trend: PLATEAU at 2023-11-28 07:52:39
  8. npu-traps location: node-name: 0/0/CPU0 npu-id: 0 trap-string:
UNKNOWN_VLAN_OR_BUNDLE_MEMBER(D*) trend: PLATEAU at 2023-11-28 07:52:39
  9. npu-traps location: node-name: 0/0/CPU0 npu-id: 0 trap-string:
UNKNOWN_VLAN_OR_BUNDLE_MEMBER(D*) trend: RECOVERY at 2023-11-28 08:04:40
```

```
10. npu-traps location: node-name: 0/0/CPU0 npu-id: 0 trap-string:
V4_CHECKSUM_ERROR(D*) trend: RECOVERY at 2023-11-28 08:04:40
```

## show smart-monitor

To display the health monitoring information, SMART metrics, and raw diagnostic data for all Solid State Drives (SSDs) on the router, use the **show smart-monitor** command in the XR EXEC mode.

**show smart-monitor**

<b>Syntax Description</b>	<b>smart-monitor</b> Self-Monitoring, Analysis, and Reporting Technology (SMART) is an integrated monitoring system in storage devices such as SSDs and hard drives. SMART tracks the health of these devices and anticipates hardware failures.
---------------------------	--

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	XR EXEC mode
----------------------	--------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 26.1.1	This command was introduced.

<b>Usage Guidelines</b>	No specific guidelines impact the use of this command.
-------------------------	--

<b>Task ID</b>	<b>Task ID</b>	<b>Operation</b>
	system	read

### Command output fields

Field	Description
Location	Indicates the specific Route Processor (RP) or line card where the disk is physically located.
Disk	The identifier for the drive.
Model & Serial	Manufacturer's model number and unique serial number for the drive.
Health (PASSED)	Overall status of the drive. "PASSED" indicates the drive is operating within normal parameters.
Read_Err (0)	Soft Read Error Rate. A value of 0 means there are no uncorrected read errors reported to the operating system.

Field	Description
Realloc (0)	Reallocated Sectors count. This parameter tracks bad sectors that have been found and remapped. A value of 0 is ideal, as it means no sectors have failed.
E2E_Err (0)	End-to-End Error count. This parameter tracks parity errors occurring in the data path to the media. A value of 0 indicates no data path errors.
Offline (0)	Offline Uncorrectable Sectors count. This parameter shows the total count of uncorrectable errors when reading or writing a sector.
Life (95%)	Life Left metric. A new drive starts at 100%. At 95%, this drive has approximately 95% of its program/erase cycles or reserved blocks remaining.
Used (5%)	Percentage Used. This parameter is a vendor-specific estimate of the percentage of the drive's life that has been consumed. Since Life Left is 95%, the Used value is 5%.

This example displays the health monitoring information, SMART metrics, and raw diagnostic data for the Solid State Drives (SSDs) at a specific hardware location on the router.

```
Router#show smart-monitor
Thu Aug 28 23:28:13.940 UTC

SMART Monitor Info for Location: node0_RP0_CPU0

Disk  Model                Serial          Health  Read_Err  Realloc  E2E_Err  Offline  Life
Used
-----
nvme0 SRMP8480GF1S1B73C  STP26040GJR  PASSED    0          0         0         0        95%
5%
```

```
Raw SMART data for nvme0:
-----
smartctl 7.4 2023-08-01 r5530 [x86_64-linux-6.6.69-yocto-standard] (local build)
Copyright (C) 2002-23, Bruce Allen, Christian Franke, www.smartmontools.org

[node0_RP0_CPU0:~]$smartctl -a /dev/sda1
smartctl 7.4 2023-08-01 r5530 [x86_64-linux-6.6.84-yocto-standard] (local build)
Copyright (C) 2002-23, Bruce Allen, Christian Franke, www.smartmontools.org

=== START OF INFORMATION SECTION ===
Model Family:      Intel S3520 Series SSDs
Device Model:      INTEL SSDSCKJB150G7
Serial Number:     PHDW72440104150A
LU WWN Device Id: 5 5cd2e4 14e0elaac
Firmware Version: N2010121
User Capacity:     150,039,945,216 bytes [150 GB]
Sector Sizes:      512 bytes logical, 4096 bytes physical
Rotation Rate:     Solid State Device
Form Factor:       M.2
TRIM Command:      Available, deterministic, zeroed
Device is:         In smartctl database 7.3/5528
```

```
ATA Version is: ACS-3 T13/2161-D revision 5
SATA Version is: SATA 3.1, 6.0 Gb/s (current: 6.0 Gb/s)
Local Time is: Fri Jan 16 17:46:18 2026 UTC
SMART support is: Available - device has SMART capability.
SMART support is: Enabled
```

```
=== START OF READ SMART DATA SECTION ===
```

```
SMART overall-health self-assessment test result: PASSED
```

```
General SMART Values:
```

```
Offline data collection status: (0x02) Offline data collection activity
was completed without error.
Auto Offline Data Collection: Disabled.

Self-test execution status: ( 0) The previous self-test routine completed
without error or no self-test has ever
been run.

Total time to complete Offline
data collection: ( 23) seconds.
Offline data collection
capabilities: (0x79) SMART execute Offline immediate.
No Auto Offline data collection support.
Suspend Offline collection upon new
command.
Offline surface scan supported.
Self-test supported.
Conveyance Self-test supported.
Selective Self-test supported.

SMART capabilities: (0x0003) Saves SMART data before entering
power-saving mode.
Supports SMART auto save timer.

Error logging capability: (0x01) Error logging supported.
General Purpose Logging supported.

Short self-test routine
recommended polling time: ( 1) minutes.
Extended self-test routine
recommended polling time: ( 2) minutes.
Conveyance self-test routine
recommended polling time: ( 2) minutes.
SCT capabilities: (0x003d) SCT Status supported.
SCT Error Recovery Control supported.
SCT Feature Control supported.
SCT Data Table supported.
```

```
SMART Attributes Data Structure revision number: 1
```

```
Vendor Specific SMART Attributes with Thresholds:
```

ID#	ATTRIBUTE_NAME	FLAG	VALUE	WORST	THRESH	TYPE	UPDATED	WHEN_FAILED
RAW_VALUE								
5	Reallocated_Sector_Ct	0x0032	100	100	000	Old_age	Always	- 0
9	Power_On_Hours	0x0032	100	100	000	Old_age	Always	- 66495
12	Power_Cycle_Count	0x0032	100	100	000	Old_age	Always	- 17115
170	Available_Reservd_Space	0x0033	100	100	010	Pre-fail	Always	- 0
171	Program_Fail_Count	0x0032	100	100	000	Old_age	Always	- 0
172	Erase_Fail_Count	0x0032	100	100	000	Old_age	Always	- 0
174	Unsafe_Shutdown_Count	0x0032	100	100	000	Old_age	Always	- 5967
175	Power_Loss_Cap_Test	0x0033	100	100	010	Pre-fail	Always	- 18660
	(17132 839)							
183	SATA_Downshift_Count	0x0032	100	100	000	Old_age	Always	- 0
184	End-to-End_Error_Count	0x0033	100	100	090	Pre-fail	Always	- 0
187	Uncorrectable_Error_Cnt	0x0032	100	100	000	Old_age	Always	- 0
190	Case_Temperature	0x0022	084	083	000	Old_age	Always	- 16
	(Min/Max 14/19)							
192	Unsafe_Shutdown_Count	0x0032	100	100	000	Old_age	Always	- 5967
194	Drive_Temperature	0x0022	100	100	000	Old_age	Always	- 25

```

197 Pending_Sector_Count      0x0012   100   100   000   Old_age   Always   -     0
199 CRC_Error_Count          0x003e   100   100   000   Old_age   Always   -    137
225 Host_Writes_32MiB        0x0032   100   100   000   Old_age   Always   -
3036753
226 Workld_Media_Wear_Indic  0x0032   100   100   000   Old_age   Always   -
102400
227 Workld_Host_Reads_Perc   0x0032   100   100   000   Old_age   Always   -     4
228 Workload_Minutes         0x0032   100   100   000   Old_age   Always   -
3132873606
232 Available_Reservd_Space  0x0033   100   100   010   Pre-fail  Always   -     0
233 Media_Wearout_Indicator  0x0032   083   083   000   Old_age   Always   -     0
234 Thermal_Throttle_Status  0x0032   100   100   000   Old_age   Always   -    0/0
241 Host_Writes_32MiB        0x0032   100   100   000   Old_age   Always   -
3036753
242 Host_Reads_32MiB         0x0032   100   100   000   Old_age   Always   -
1979969
243 NAND_Writes_32MiB       0x0032   100   100   000   Old_age   Always   -
4804894

```

```

SMART Error Log Version: 1
No Errors Logged

```

```
SMART Self-test log structure revision number 1
```

Num	Test_Description	Status	Remaining	LifeTime (hours)
LBA_of_first_error				
# 1	Extended offline	Completed without error	00%	47
# 2	Extended offline	Completed without error	00%	46
# 3	Extended offline	Completed without error	00%	40

```
SMART Selective self-test log data structure revision number 1
```

SPAN	MIN_LBA	MAX_LBA	CURRENT_TEST_STATUS
1	0	0	Not_testing
2	0	0	Not_testing
3	0	0	Not_testing
4	0	0	Not_testing
5	0	0	Not_testing

```
Selective self-test flags (0x0):
```

```
After scanning selected spans, do NOT read-scan remainder of disk.
```

```
If Selective self-test is pending on power-up, resume after 0 minute delay.
```

## use-case

To configure a system healthcheck use-case, use the **use-case** command in the healthcheck configuration mode.

Prior to Cisco IOS XR Release 24.1.1:

```
use-case { asic-reset { disable | drop-tolerance drop-tolerance-value } | packet-drop { disable | drop-tolerance drop-tolerance-value } }
```

From Cisco IOS XR Release 24.1.1 onwards:

```
use-case { asic-reset { disable | drop-tolerance drop-tolerance-value } | packet-drop { disable | window-size window-size-value | tolerance { high | medium | low } drop-tolerance-value } }
```

### Syntax Description

<b>asic-reset</b>	Specify ASIC reset system healthcheck use-case
-------------------	--

<b>disable</b>	Disable ASIC reset or packet-drop use-case. By default the use-case is enabled.
<b>drop-tolerance</b> <i>drop-tolerance-value</i>	Configure packet-drop tolerance value Default value: 10 Range for <i>drop-tolerance-value</i> : 0 - 100 This option is removed from Release 24.1.1 onwards
<b>packet-drop</b>	Specify packet-drop system healthcheck use-case
<b>window-size</b> <i>window-size-value</i>	Configure the number of cadence intervals to alert you of packet-drops. Default value: 10 Range for <i>window-size-value</i> : 5-20 This option is available from Release 24.1.1 onwards
<b>tolerance</b> { <b>high</b>   <b>medium</b>   <b>low</b> } <i>drop-tolerance-value</i>	Specify the NPU trap tolerance level and the drop-tolerance value. Range for <i>drop-tolerance-value</i> : 0-1000000 This option is available from Release 24.1.1 onwards

**Command Default**

Health check use-case is enabled.

**Command Modes**

healthcheck configuration mode

**Command History**

Release	Modification
Release 24.1.1	<b>window-size</b> and <b>tolerance</b> keywords are introduced <b>drop-tolerance</b> keyword is removed
Release 7.3.3 / Release 7.5.4	This command was introduced

**Usage Guidelines**System Health check and use-cases are not part of the base package and you must explicitly install the '*xr-healthcheck*' optional package to use this service.**Task ID**

Task ID	Operations
root-system or diag or cisco-support or monitor or root-lr	read, write

**Example**

This example shows you how to configure the ASIC reset use-case:

```
Router(config)# healthcheck
Router(config-healthcheck)# use-case asic-reset drop-tolerance 10
Router(config-healthcheck)# enable
```

This example shows you how to configure the packet-drop use-case prior to Cisco IOS XR Release 24.1.1:

```
Router(config)# healthcheck
Router(config-healthcheck)# use-case packet-drop drop-tolerance 10
Router(config-healthcheck)# enable
```

This example shows you how to configure the packet-drop use-case from Cisco IOS XR Release 24.1.1 onwards:

```
Router# conf t
Router(config)# healthcheck
Router(config-healthcheck)# use-case packet-drop window-size 5
Router(config-healthcheck)# use-case packet-drop tolerance high 100
Router(config-healthcheck)# enable
Router(config-healthcheck)# commit
```



## CHAPTER 13

# Hardware Module Commands

---

This module lists the hardware module commands to monitor traffic on the router.

For detailed information about monitoring packet drops concepts, configuration tasks, and examples, see the *Traffic Monitoring* chapter in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [Hardware Module Commands, on page 423](#)

## Hardware Module Commands

### Traffic Monitoring Commands

- [hw-module profile packet-loss-alert](#)

### Fabric Links Monitoring Commands

- [hw-module fabric-tsmon-port-reset disable](#)





# CHAPTER 14

## Audit Monitoring Commands

This module describes the audit monitoring commands available on the router. These commands are used to proactively monitor the security and compliance of the router by enabling audit monitoring.

For detailed information about system health check concepts, configuration tasks, and examples, see the *Implementing Audit Monitoring* chapter in the *System Monitoring Configuration Guide for Cisco 8000 Series Routers*.

- [linux security audit, on page 425](#)
- [show linux security audit, on page 429](#)

### linux security audit

To enable the Linux audit monitoring and logging capabilities, use the **linux security audit** command in XR Config mode.

```
linux security audit { monitor { all | authlog-files | cron-files | dns-client-files | docker | file-deletion | file-perm-changes | kernel-module-mgmt | process-audits | system-login-reboot | system-software | system-time-change | user-group-config-files | user-privilege-mgmt | xr-software } | logging syslog }
```

#### Syntax Description

<b>monitor</b>	Enable audit monitoring.
<b>all</b>	Enable audit monitoring for all rule groups.
<b>authlog-files</b>	Enable audit monitoring for changes in authlog files.
<b>cron-files</b>	Enable audit monitoring for changes in cron files.
<b>dns-client-files</b>	Enable audit monitoring for changes in DNS client files.
<b>docker</b>	Enable audit monitoring for changes in docker.
<b>file-deletion</b>	Enable audit monitoring for file deletion.
<b>file-perm-changes</b>	Enable audit monitoring for changes in file permissions.
<b>kernel-module-mgmt</b>	Enable audit monitoring for kernel module management.
<b>process-audits</b>	Enable audit monitoring for process audits.

<b>system-login-reboot</b>	Enable audit monitoring for system login and reboot.
<b>system-software</b>	Enable audit monitoring for changes in system software.
<b>system-time-change</b>	Enable audit monitoring for changes in system time.
<b>user-group-config-files</b>	Enable audit monitoring for changes in user group configuration files.
<b>user-privilege-mgmt</b>	Enable audit monitoring for changes in user privileges.
<b>xr-software</b>	Enable audit monitoring for changes in IOS XR software.
<b>logging syslog</b>	Enable forwarding of audit logs to a remote syslog server.

**Command Default** Audit monitoring is disabled.

**Command Modes** XR Config mode

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 25.3.1	This command was introduced.

**Usage Guidelines** The router stores audit logs locally at **/var/log/audit/audit.log**, unless you enable log forwarding. The table lists the rules within each of the rule-groups.

<b>Rule-group</b>	<b>Rules</b>
xr-software	-a always,exit -F arch=b64 -F dir=/pkg/bin -F perm=wa -k xr_bin_changes -a always,exit -F arch=b64 -F dir=/pkg/sbin -F perm=wa -k xr_sbin_changes -a always,exit -F arch=b64 -F dir=/pkg/lib -F perm=wa -k xr_lib_changes
user-group-config-files	-a always,exit -F arch=b64 -F path=/etc/passwd -F perm=wa -k passwd_changes -a always,exit -F arch=b64 -F path=/etc/shadow -F perm=wa -k shadow_changes -a always,exit -F arch=b64 -F path=/etc/group -F perm=wa -k group_changes -a always,exit -F arch=b64 -F path=/etc/sudoers -F perm=wa -k sudoers_changes

Rule-group	Rules
dns-client-files	-a always,exit -F arch=b64 -F path=/etc/hosts -F perm=wa -k hosts_changes -a always,exit -F arch=b64 -F path=/etc/resolv.conf -F perm=wa -k dns_changes -a always,exit -F arch=b64 -F path=/var/run/resolv.conf -F perm=wa -k dns_changes
authlog-files	-a always,exit -F arch=b64 -F path=/var/log/auth.log -F perm=wa -k authlog_changes
system-time-change	-a always,exit -F arch=b64 -F path=/etc/localtime -F perm=wa -k time_changes
system-login-reboot	-a always,exit -F arch=b64 -F path=/var/log/wtmp -F perm=wa -k shutdown_reboot
cron-files	-a always,exit -F arch=b64 -F path=/etc/crontab -F perm=wa -k cron_changes -a always,exit -F arch=b64 -F dir=/etc/cron.d -F perm=wa -k cron_changes -a always,exit -F arch=b64 -F dir=/etc/cron.daily -F perm=wa -k cron_changes -a always,exit -F arch=b64 -F dir=/etc/cron.hourly -F perm=wa -k cron_changes -a always,exit -F arch=b64 -F dir=/etc/cron.weekly -F perm=wa -k cron_changes -a always,exit -F arch=b64 -F dir=/etc/cron.monthly -F perm=wa -k cron_changes
kernel-module-mgmt	-a always,exit -F arch=b64 -F path=/sbin/insmod -F perm=x -k modules -a always,exit -F arch=b64 -F path=/sbin/rmmod -F perm=x -k modules -a always,exit -F arch=b64 -F path=/sbin/modprobe -F perm=x -k modules -a always,exit -F arch=b64 -F path=/usr/bin/kmod -F perm=x -k modules
system-software	-a always,exit -F arch=b64 -F dir=/bin -F perm=wa -k bin_changes -a always,exit -F arch=b64 -F dir=/sbin -F perm=wa -k sbin_changes -a always,exit -F arch=b64 -F dir=/usr/bin -F perm=wa -k usr_bin_changes -a always,exit -F arch=b64 -F dir=/usr/sbin -F perm=wa -k usr_sbin_changes

Rule-group	Rules
docker	-a always,exit -F arch=b64 -F path=/lib/systemd/system/docker.service -F perm=wa -k docker_service  -a always,exit -F arch=b64 -F path=/lib/systemd/system/docker.socket -F perm=wa -k docker_socket  -a always,exit -F arch=b64 -F path=/usr/bin/dockerd -F perm=xa -k docker_daemon  -a always,exit -F arch=b64 -F path=/etc/docker/daemon.json -F perm=wa -k docker_config  -a always,exit -F arch=b64 -F dir=/var/lib/docker -F perm=wa -k docker_storage  -a always,exit -F arch=b64 -S execve -F path=/usr/bin/docker -k docker_commands
process-audits	-a always,exit -F arch=b64 -S execve -F auid>=1000 -F auid!=1 -k process_audit
file-perm-changes	-a always,exit -F arch=b64 -S fchmodat -k file_perm_changes
user-privilege-mgmt	-a always,exit -F arch=b64 -S setuid,setresuid,streuid,setfsuid,setgid,setresgid,setregid,setfsgid -k user_group_management
file-deletion	-a always,exit -F arch=b64 -S unlink,unlinkat -k file_deletion

This table provides the description of the various components of the rules:

Component	Description
-a	Action, e.g., <code>always,exit</code> means always log on exit of syscall
-F	Field match, e.g., <code>arch=b64</code> (architecture), <code>dir=</code> , <code>path=</code> , <code>perm=</code> , etc.
<code>arch=b64</code>	Architecture: 64-bit
<code>dir=</code>	Directory to monitor (e.g., <code>/pkg/bin</code> , <code>/etc/cron.d</code> )
<code>path=</code>	File to monitor (e.g., <code>/etc/passwd</code> , <code>/usr/bin/docker</code> )
<code>perm=</code>	Permissions watched: <code>r</code> (read), <code>w</code> (write), <code>x</code> (execute), <code>a</code> (attribute change)
-k	Key: Custom tag for easier filtering/searching in audit logs (e.g., <code>xr_bin_changes</code> , <code>cron_changes</code> )
-S	Syscall(s) to monitor (e.g., <code>execve</code> , <code>fchmodat</code> , <code>unlink</code> )
auid	Audit user ID; <code>auid&gt;=1000</code> means all regular (non-system) users
<code>always,exit</code>	Log every time the rule is matched on syscall exit

Task ID	Task ID	Operation
	network	read, write
	interface	read, write
	system	read, write

### Example

This example shows how you can enable audit monitoring with the **linux security audit monitor** command.

```
Router# conf t
Router(config)# linux security audit monitor xr-software
Router(config)# linux security audit monitor user-group-config-files
Router(config)# commit
```

This example shows how you can enable audit log forwarding with the **linux security audit logging syslog** command.

```
Router# conf t
Router(config)# linux security audit logging syslog
Router(config)# logging 10.0.1.2 vrf default port 514
Router(config)# commit
```

## show linux security audit

To view the details of the Linux security audit information, use the **show linux security audit** command in XR EXEC mode.

```
show linux security audit { monitor status { rule-group | detail rule-group } | logging syslog }
```

Syntax Description	
<b>monitor</b>	Displays the audit monitor information.
<b>status</b>	Displays the audit monitor status.
<i>rule-group</i>	Displays the status of the specified rule group.  This field can take these values: <b>all</b> , <b>authlog-files</b> , <b>cron-files</b> , <b>dns-client-files</b> , <b>docker</b> , <b>file-deletion</b> , <b>file-perm-changes</b> , <b>kernel-module-mgmt</b> , <b>process-audits</b> , <b>system-login-reboot</b> , <b>system-software</b> , <b>system-time-change</b> , <b>user-group-config-files</b> , <b>user-privilege-mgmt</b> , <b>xr-software</b>
<b>detail</b>	Displays the detailed status of the specified rule group.
<b>logging</b>	Displays the audit logging information.
<b>syslog</b>	Displays the remote syslog server information.

**Command Default** None

**Command Modes** XR EXEC mode

Command History	Release	Modification
	Release 25.3.1	This command was introduced.

**Usage Guidelines** This table specifies the command usage:

Command	Description
show linux security audit monitor status	Shows all currently enabled rules.
show linux security audit monitor status detail	Shows all currently enabled rules with per-location status.
show linux security audit monitor status	Shows status and rules for any key (enabled or disabled).
show linux security audit monitor status detail	Shows per-location status for any key (enabled or disabled).
show linux security audit logging syslog	Shows syslog forwarding status and configured servers.

Task ID	Task ID	Operation
	system	read

### Example

The example displays the status of the audit rule-groups.

```
Router# show linux security audit monitor status
key name: xr-software          status: enabled
rules:
-a always,exit -F arch=b64 -F dir=/pkg/bin -F perm=wa -k xr_bin_changes
-a always,exit -F arch=b64 -F dir=/pkg/sbin -F perm=wa -k xr_sbin_changes
-a always,exit -F arch=b64 -F dir=/pkg/lib -F perm=wa -k xr_lib_changes
-----
key name: user-group-config-files  status: enabled
rules:
-a always,exit -F arch=b64 -F path=/etc/passwd -F perm=wa -k passwd_changes
-a always,exit -F arch=b64 -F path=/etc/shadow -F perm=wa -k shadow_changes
-a always,exit -F arch=b64 -F path=/etc/group -F perm=wa -k group_changes
-a always,exit -F arch=b64 -F path=/etc/sudoers -F perm=wa -k sudoers_changes
-----
```

This example displays the audit log forwarding details.

```
Router# show linux security audit logging syslog
status: enabled
syslog-server(s):
ipaddr: 10.0.1.2 vrf: default port: 514
ipaddr: 2001:db8::1 vrf: default port: 514
```



## INDEX

### A

access-list command [187](#)  
action (IP SLA) command [188](#)  
ageout command [189](#)

### B

buckets (history) command [190](#)  
buckets (statistics hourly) command [191](#)  
buckets (statistics interval) command [192](#)

### C

clear logging onboard command [103](#)  
control disable command [193](#)

### D

datsize request command [194](#)  
destination address (IP SLA) command [195](#)  
destination port command [196](#)  
distribution count command [197](#)  
distribution interval command [198](#)

### E

exp command [199](#)

### F

filter command [200](#)  
force explicit-null command [201](#)  
frequency (IP SLA) command [202](#)

### H

history command [203](#)  
hw-timestamp disable command [204](#)

### I

interval command [205](#)

### K

key-chain command [207](#)

### L

life command [207](#)  
lives command [208](#)  
low-memory command [210](#)  
lsp selector ipv4 command [211](#)  
lsr-path command [212](#)

### M

maximum hops command [213](#)  
maximum paths (IP SLA) command [213](#)  
monitor command [107, 214](#)  
monitor interface command [110](#)  
mpls discovery vpn command [215](#)  
mpls lsp-monitor command [216](#)

### O

operation command [217](#)  
output interface command [217](#)  
output nexthop command [218](#)

### P

packet count command [219](#)  
packet interval command [220](#)  
path discover command [221](#)  
path discover echo command [222](#)  
path discover path command [223](#)  
path discover scan command [224](#)  
path discover session command [225](#)

### R

react command [226](#)  
react lpd command [229](#)  
reaction monitor command [230](#)  
reaction operation command [231](#)  
reaction trigger command [232](#)

reply dscp command [233](#)  
 reply mode command [234](#)

## S

samples command [238](#)  
 scan delete-factor command [238](#)  
 scan interval command [239](#)  
 schedule monitor command [240](#)  
 schedule operation command [241](#)  
 schedule period command [242](#)  
 show alarms [27](#)  
 show event manager environment command [56](#)  
 show ipsla application command [243](#)  
 show ipsla history command [244](#)  
 show ipsla mpls discovery vpn command [246](#)  
 show ipsla mpls lsp-monitor lpd command [247](#)  
 show ipsla mpls lsp-monitor scan-queue command [249](#)  
 show ipsla mpls lsp-monitor summary command [250](#)  
 show ipsla responder statistics ports command [252](#)  
 show ipsla statistics aggregated command [256](#)  
 show ipsla statistics command [253](#)  
 show ipsla statistics enhanced aggregated command [263](#)  
 source address command [266](#)  
 source port command [267](#)  
 start-time command [268](#)  
 statistics command [270](#)

## T

tag (IP SLA) command [271](#)  
 target ipv4 command [272](#)  
 target pseudowire command [274](#)  
 target traffic-eng command [275](#)  
 threshold command [276](#)  
 threshold type average command [277](#)  
 threshold type consecutive command [278](#)  
 threshold type immediate command [279](#)  
 threshold type xofy command [280](#)  
 timeout command [281](#)  
 tos command [283](#)  
 ttl command [284](#)  
 type icmp echo command [285](#)  
 type icmp path-echo command [285](#)  
 type icmp path-jitter command [286](#)  
 type mpls lsp ping command [287](#)  
 type mpls lsp trace command [288](#)  
 type udp echo command [290](#)  
 type udp ipv4 address command [291](#)  
 type udp jitter command [290](#)

## V

verify-data command [292](#)  
 vrf (IP SLA MPLS LSP monitor) command [294](#)  
 vrf (IP SLA) command [293](#)