

Configuring Object Tracking

This module describes the configuration of object tracking on your Cisco IOS XR network. For complete descriptions of the commands listed in this module, see **Additional References** section. To locate documentation for other commands that might appear in the course of performing a configuration task, see **Technical Documentation** section in the Additional References topic.

- Configuring Object Tracking, on page 1
- Prerequisites for Implementing Object Tracking, on page 1
- Information about Object Tracking, on page 2
- How to Implement Object Tracking, on page 2
- Configuration Examples for Configuring Object Tracking, on page 13
- Additional References, on page 15

Configuring Object Tracking

This module describes the configuration of object tracking on your Cisco IOS XR network. For complete descriptions of the commands listed in this module, see **Additional References** section. To locate documentation for other commands that might appear in the course of performing a configuration task, see **Technical Documentation** section in the Additional References topic.

Prerequisites for Implementing Object Tracking

You must be in a user group associated with a task group that includes the proper task IDs. The command reference guides include the task IDs required for each command. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.



Note

Object Tracking is an optional package. You must check if this package is installed on your system by running the command **show install active summary**.

Information about Object Tracking

Object tracking is a mechanism to track an object and to take an action on another object with no relationship to the tracked objects, based on changes to the properties of the object being tracked.

Each tracked object is identified by a unique name specified on the tracking command-line interface (CLI). Cisco IOS XR processes then use this name to track a specific object.

The tracking process periodically polls the tracked object and reports any changes to its state in terms of its being up or down, either immediately or after a delay, as configured by the user.

Multiple objects can also be tracked by means of a list, using a flexible method for combining objects with Boolean logic. This functionality includes:

- **Boolean AND function**—When a tracked list has been assigned a Boolean AND function, each object defined within a subset must be in an up state, so that the tracked object can also be in the up state.
- **Boolean OR function**—When the tracked list has been assigned a Boolean OR function, it means that at least one object defined within a subset must also be in an up state, so that the tracked object can also be in the up state.

How to Implement Object Tracking

This section describes the various object tracking procedures.

Tracking the Line Protocol State of an Interface

Perform this task in global configuration mode to track the line protocol state of an interface.

A tracked object is considered up when a line protocol of the interface is up.

After configuring the tracked object, you may associate the interface whose state should be tracked and specify the number of seconds to wait before the tracking object polls the interface for its state.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- 3. type line-protocol state
- **4. interface** *type interface-path-id*
- 5. exit
- **6.** (Optional) **delay** { **up** seconds | **down** seconds }
- **7.** Use one of the following commands:
 - end
 - commit

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example:	
	RP/0/RP0/CPU0:router# configure	
Step 2	track track-name	Enters track configuration mode.
	Example:	• <i>track-name</i> —Specifies a name for the object to be tracked.
	RP/0/RP0/CPU0:router(config)# track track1	Note Special characters are not allowed in a <i>track-name</i> .
Step 3	type line-protocol state	Creates a track based on the line protocol of an interface.
	Example:	
	<pre>RP/0/RP0/CPU0:router(config-track)# type line-protocol state</pre>	
Step 4	interface type interface-path-id	Specifies the interface to track the protocol state.
	<pre>Example: RP/0/RP0/CPU0:router(config-track-line-prot)# interface atm 0/2/0/0.1</pre>	 type—Specifies the interface type. For more information, use the question mark (?) online help function. interface-path-id—Identifies a physical interface or a virtual interface.
		Note Use the show interfaces command to see a list of all possible interfaces currently configured on the router.
		Note The loopback and null interfaces are always in the up state and, therefore, cannot be tracked.
Step 5	exit	Exits the track line protocol configuration mode.
	<pre>Example: RP/0/RP0/CPU0:router(config-track-line-prot)# exit</pre>	
Step 6	(Optional) delay {up seconds down seconds} Example:	Schedules the delay that can occur between tracking whether the object is up or down.
	RP/0/RP0/CPU0:router(config-track)# delay up 10	
Step 7	Use one of the following commands:	Saves configuration changes.

Command or Action	Purpose
• end	• When you issue the end command, the system prompts
• commit	you to commit changes:
<pre>Example: RP/0/RP0/CPU0:router(config-track)# end</pre>	Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:
<pre>or RP/0/RP0/CPU0:router(config-track)# commit</pre>	• Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.
	• Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes.
	 Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes.
	Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Tracking IP Route Reachability

When a host or a network goes down on a remote site, routing protocols notify the router and the routing table is updated accordingly. The routing process is configured to notify the tracking process when the route state changes due to a routing update.

A tracked object is considered up when a routing table entry exists for the route and the route is accessible.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- 3. type route reachability
- **4.** Use one of the following commands:
 - vrf vrf-table-name
 - route ipv4 IP-prefix/mask
- 5. exit
- **6.** (Optional) **delay** { **up** seconds | **down** seconds }
- **7.** Use the **commit** or **end** command.

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example:	
	RP/0/RP0/CPU0:router# configure	
Step 2	track track-name	Enters track configuration mode.
	Example:	• <i>track-name</i> —Specifies a name for the object to be tracked.
	RP/0/RP0/CPU0:router(config)# track track1	Note Special characters are not allowed in a <i>track-name</i> .
Step 3	type route reachability	Configures the routing process to notify the tracking process when the state of the route changes due to a routing update.
	Example:	when the state of the route changes due to a routing update.
	RP/0/RP0/CPU0:router(config-track)# type route reachability vrf internet	
Step 4	Use one of the following commands:	Configures the type of IP route to be tracked, which can
	• vrf vrf-table-name	consist of either of the following, depending on your router
	• route ipv4 IP-prefix/mask	type:
	Example:	 vrf-table-name—A VRF table name. IP-prefix/mask—An IP prefix consisting of the network
	<pre>RP/0/RP0/CPU0:router(config-track-route) # vrf vrf-table-4</pre>	and subnet mask (for example, 10.56.8.10/16).
	or	
	RP/0/RP0/CPU0:router(config-track-route)# route ipv4 10.56.8.10/16	
Step 5	exit	Exits the track line protocol configuration mode.
	Example:	
	RP/0/RP0/CPU0:router(config-track-line-prot)# exit	
Step 6	(Optional) delay {up seconds down seconds}	Schedules the delay that can occur between tracking whether
	Example:	the object is up or down.
	RP/0/RP0/CPU0:router(config-track)# delay up 10	
Step 7	Use the commit or end command.	commit —Saves the configuration changes, and remains within the configuration session.
		end —Prompts user to take one of these actions:
		• Yes — Saves configuration changes and exits the configuration session.

Command or Action	Purpose
	• No —Exits the configuration session without committing the configuration changes.
	• Cancel — Remains in the configuration mode, without committing the configuration changes.

Building a Track Based on a List of Objects

Perform this task in the global configuration mode to create a tracked list of objects (which, in this case, are lists of interfaces or prefixes) using a Boolean expression to determine the state of the list.

A tracked list contains one or more objects. The Boolean expression enables two types of calculations by using either AND or OR operators. For example, when tracking two interfaces, using the AND operator, up means that *both* interfaces are up, and down means that *either* interface is down.



Note

An object must exist before it can be added to a tracked list.

The NOT operator is specified for one or more objects and negates the state of the object.

After configuring the tracked object, you must associate the interface whose state should be tracked and you may optionally specify the number of seconds to wait before the tracking object polls the interface for its state.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- 3. type list boolean $\{$ and | or $\}$
- **4. object** *object-name* [**not**]
- exit
- **6.** (Optional) **delay** { **up** seconds | **down** seconds }
- **7.** Use one of the following commands:
 - end
 - commit

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example:	
	RP/0/RP0/CPU0:router# configure	
Step 2	track track-name	Enters track configuration mode.

	Command or Action	Purpose
	Example:	• <i>track-name</i> —Specifies a name for the object to be tracked.
	RP/0/RP0/CPU0:router(config)# track track1	Note Special characters are not allowed in a <i>track-name</i> .
Step 3	type list boolean { and or } Example:	Configures a Boolean list object and enters track list configuration mode.
	RP/0/RP0/CPU0:router(config-track)# type list	• boolean —Specifies that the state of the tracked list is based on a Boolean calculation.
	boolean and	• and—Specifies that the list is up if all objects are up, or down if one or more objects are down. For example when tracking two interfaces, up means that both interfaces are up, and down means that either interface is down.
		• or—Specifies that the list is up if at least one object is up. For example, when tracking two interfaces, up means that either interface is up, and down means that both interfaces are down.
Step 4	object object-name [not]	Specifies the object to be tracked by the list
	Example:	• obect-name—Name of the object to track.
	<pre>RP/0/RP0/CPU0:router(config-track-list)# object 3 not</pre>	• not—Negates the state of the object.
Step 5	exit	Exits the track line protocol configuration mode.
	<pre>Example: RP/0/RP0/CPU0:router(config-track-line-prot) # exit</pre>	
Step 6	(Optional) delay {up seconds down seconds} Example:	Schedules the delay that can occur between tracking whether the object is up or down.
	RP/0/RP0/CPU0:router(config-track)# delay up 10	
Step 7	Use one of the following commands:	Saves configuration changes.
	• end • commit	When you issue the end command, the system prompts you to commit changes:
	Example: RP/0/RP0/CPU0:router(config-track)# end	Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:
	<pre>or RP/0/RP0/CPU0:router(config-track)# commit</pre>	 Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.

Command or Action	Purpose
	Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes.
	• Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes.
	Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Building a Track Based on a List of Objects - Threshold Percentage

Perform this task in the global configuration mode to create a tracked list of objects (which, in this case, are lists of interfaces or prefixes) using a threshold percentage to determine the state of the list.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- 3. type list threshold percentage
- **4. object** object-name
- **5.** threshold percentage up percentage down percentage
- **6.** Use one of the following commands:
 - end
 - commit

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example:	
	RP/0/RP0/CPU0:router# configure	
Step 2	track track-name	Enters track configuration mode.
	Example:	• <i>track-name</i> —Specifies a name for the object to be tracked.
	RP/0/RP0/CPU0:router(config)# track track1	Note Special characters are not allowed in a <i>track-name</i> .
		track-name.

	Command or Action	Purpose
Step 3	type list threshold percentage	Configures a track of type threshold percentage list.
	Example:	
	RP/0/RP0/CPU0:router(config-track)# type list threshold percentage	
Step 4	object object-name	Configures object 1, object 2, object 3 and object 4 as
	Example:	members of track type track1.
	<pre>RP/0/RP0/CPU0:router(config-track-list-threshold)# object 1 RP/0/RP0/CPU0:router(config-track-list-threshold)# object 2</pre>	
	RP/0/RP0/CPU0:router(config-track-list-threshold)#	
	<pre>object 3 RP/0/RP0/CPU0:router(config-track-list-threshold)# object 4</pre>	
Step 5	threshold percentage up percentage down percentage	Configures the percentage of objects that need to be UP or
-	Example:	DOWN for the list to be considered UP or Down respectively.
	<pre>RP/0/RP0/CPU0:router(config-track-list-threshold) # threshold percentage up 50 down 33</pre>	For example, if object 1, object 2, and object 3 are in the UP state and object 4 is in the DOWN state, the list is considered to be in the UP state.
Step 6	Use one of the following commands:	Saves configuration changes.
	• end	• When you issue the end command, the system prompts you to commit changes:
	• commit	you to commit changes.
	<pre>Example: RP/0/RP0/CPU0:router(config-track)# end</pre>	Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:
	or	• Entering yes saves configuration changes to the running configuration file, exits the configuration
	RP/0/RP0/CPU0:router(config-track)# commit	session, and returns the router to EXEC mode.
		 Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes.
		• Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes.
		• Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Building a Track Based on a List of Objects - Threshold Weight

Perform this task in the global configuration mode to create a tracked list of objects (which, in this case, are lists of interfaces or prefixes) using a threshold weight to determine the state of the list.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- 3. type list threshold weight
- 4. object object-name weight weight
- 5. threshold weight up weight down weight
- **6.** Use one of the following commands:
 - end
 - commit

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example:	
	RP/0/RP0/CPU0:router# configure	
Step 2	track track-name	Enters track configuration mode.
	Example:	• <i>track-name</i> —Specifies a name for the object to be tracked.
	RP/0/RP0/CPU0:router(config)# track track1	Note Special characters are not allowed in a <i>track-name</i> .
Step 3	type list threshold weight	Configures a a track of type, threshold weighted list.
	Example:	
	RP/0/RP0/CPU0:router(config-track)# type list threshold weight	
Step 4	object object-name weight weight	Configures object 1, object 2 and object 3 as members of
	Example:	track t1 and with weights 10, 5 and 3 respectively.
	RP/0/RP0/CPU0:router(config-track-list-threshold) object 1 weight 10 RP/0/RP0/CPU0:router(config-track-list-threshold) object 2 weight 5 RP/0/RP0/CPU0:router(config-track-list-threshold) object 3 weight 3	<u></u>

	Command or Action	Purpose
Step 5	threshold weight up weight down weight Example: RP/0/RP0/CPU0:router(config-track-list-threshold) # threshold weight up 10 down 5	Configures the range of weights for the objects that need to be UP or DOWN for the list to be considered UP or DOWN respectively. In this example, the list is considered to be in the DOWN state because objects 1 and 2 are in the UP state and the cumulative weight is 15 (not in the 10-5 range).
Step 6	Use one of the following commands:	Saves configuration changes.
	• end • commit	When you issue the end command, the system prompts you to commit changes:
	Example: RP/0/RP0/CPU0:router(config-track) # end or RP/0/RP0/CPU0:router(config-track) # commit	Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]: • Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode. • Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. • Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. • Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Tracking IPSLA Reachability

Use this task to enable the tracking of the return code of IP service level agreement (SLA) operations.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- 3. type rtr ipsla-no reachability
- **4.** Use the **commit** or **end** command.

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example:	

	Command or Action	Purpose	
	RP/0/RP0/CPU0:router# configure		
Step 2	track track-name	Enters track configuration mode.	
	Example:	Note Special characters are not allowed in a	
	RP/0/RP0/CPU0:router(config)# track t1	track-name.	
Step 3	type rtr ipsla-no reachability	Specifies the IP SLA operation ID to be tracked for	
	Example:	reachability. Values for the <i>ipsla-no</i> can range from 1 to 2048.	
	<pre>RP/0/RP0/CPU0:router(config-track)# type rtr 100 reachability</pre>		
Step 4	Use the commit or end command.	commit —Saves the configuration changes and remains within the configuration session.	
		end —Prompts user to take one of these actions:	
		• Yes — Saves configuration changes and exits the configuration session.	
		No —Exits the configuration session without committing the configuration changes.	
		• Cancel —Remains in the configuration session, without committing the configuration changes.	

Configuring IPSLA Tracking: Example

This example shows the configuration of IPSLA tracking:

```
RP/0/RP0/CPU0:router(config) # track track1
RP/0/RP0/CPU0:router(config-track) # type rtr 1 reachability
RP/0/RP0/CPU0:router(config-track) # delay up 5
RP/0/RP0/CPU0:router(config-track) # delay down 10
```

Tracking BGP Neighbor Address-Family State

Perform this task in global configuration mode to track the BGP neighbor address-family state.

By tracking this object, you can detect the connectivity state of the neighbor. A tracked object is up when a state of the neighbor is up. Associate the neighbor whose state must be tracked after configuring the tracked object. Based on the state of the neighbor you can reroute the traffic.

Configuration Example

```
/* Track neighbor address-family state */
Router# configure
Router(config)# track neighbor-A
Router(config-track)# type bgp neighbor address-family state
```

```
Router(config-track-bgp-nbr-af)# address-family 12vpn evpn Router(config-track-bgp-neighbor)# neighbor 172.16.0.1 Router(config-track-bgp-neighbor)# exit
```

Configuration Examples for Configuring Object Tracking

Tracking Whether the Interface Is Up or Down: Running Configuration Example

```
track connection100
  type list boolean and
   object object3 not
  delay up 10
  !
interface service-ipsec 23
  line-protocol track connection100
    '
```

Tracking the Line Protocol State of an Interface: Running Configuration Example

In this example, traffic arrives from interface service-ipsec1 and exits through interface gigabitethernet0/0/0/3:

```
track IPSec1
  type line-protocol state
    interface gigabitethernet0/0/0/3
    !
interface service-ipsec 1
  ipv4 address 70.0.0.1 255.255.255.0
  profile vrf1_profile_ipsec
  line-protocol track IPSec1
  tunnel source 80.0.0.1
  tunnel destination 80.0.0.2
  service-location preferred-active 0/0/1
!
```

This example displays the output from the **show track** command after performing the previous example:

Tracking IP Route Reachability: Running Configuration Example

In this example, traffic arriving from interface service-ipsec1 has its destination in network 7.0.0.0/24. This tracking procedure follows the state of the routing protocol prefix to signal when there are changes in the routing table.

```
track PREFIX1
  type route reachability
    route ipv4 7.0.0.0/24
   !
  interface service-ipsec 1
  vrf 1
  ipv4 address 70.0.0.2 255.255.255.0
  profile vrf_1_ipsec
  line-protocol track PREFIX1
  tunnel source 80.0.0.2
  tunnel destination 80.0.0.1
  service-location preferred-active 0/2/0
```

Building a Track Based on a List of Objects: Running Configuration Example

In this example, traffic arriving from interface service-ipsec1 exits through interface gigabitethernet0/0/0/3 and interface ATM 0/2/0/0.1. The destination of the traffic is at network 7.0.0.0/24.

If either one of the interfaces or the remote network goes down, the flow of traffic must stop. To do this, we use a Boolean AND expression.

```
track C1
type route reachability
 route ipv4 3.3.3.3/32
!
track C2
type route reachability
 route ipv4 1.2.3.4/32
track C3
type route reachability
 route ipv4 10.0.20.2/32
track C4
type route reachability
 route ipv4 10.0.20.0/24
1
track OBJ
type list boolean and
 object C1
 object C2
 1
track OBJ2
type list boolean or
 object C1
```

```
object C2
```

Configuring IPSLA based Object Tracking: Configuration Example

This example shows the configuration of IPSLA based object tracking, including the ACL and IPSLA configuration:

ACL configuration:

```
RP/0/RP0/CPU0:router(config) # ipv4 access-list abf-track
RP/0/RP0/CPU0:router(config-ipv4-acl) # 10 permit any nexthop track track1 1.2.3.4
```

Object tracking configuration:

```
RP/0/RP0/CPU0:router(config) # track track1
RP/0/RP0/CPU0:router(config-track) # type rtr 1 reachability
RP/0/RP0/CPU0:router(config-track) # delay up 5
RP/0/RP0/CPU0:router(config-track) # delay down 10
```

IPSLA configuration:

```
RP/0/RP0/CPU0:router(config) # ipsla
RP/0/RP0/CPU0:router(config-ipsla) # operation 1
RP/0/RP0/CPU0:router(config-ipsla-op) # type icmp echo
RP/0/RP0/CPU0:router(config-ipsla-icmp-echo) # source address 2.3.4.5
RP/0/RP0/CPU0:router(config-ipsla-icmp-echo) # destination address 1.2.3.4
RP/0/RP0/CPU0:router(config-ipsla-icmp-echo) # frequency 60
RP/0/RP0/CPU0:router(config-ipsla-icmp-echo) # exit
RP/0/RP0/CPU0:router(config-ipsla-op) # exit
RP/0/RP0/CPU0:router(config-ipsla) # schedule operation 1
RP/0/RP0/CPU0:router(config-ipsla-sched) # start-time now
RP/0/RP0/CPU0:router(config-ipsla-sched) # life forever
```

Additional References

The following sections provide references related to implementing object tracking for IPSec network security.

Related Documents

Related Topic	Document Title
IP SLA configuration information	Implementing IP Service Level Agreements on module in System Monitoring Configuration Guide for Cisco NCS 5500 Series Routers
IP SLA commands	IP Service Level Agreement Commands on module in System Monitoring Command Reference for Cisco NCS 5500 Series Routers and Cisco NCS 540 and NCS 560 Series Routers
Object tracking commands	Object Tracking Commands on module in

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	_
occi modified by this reduce.	

MIBs

MIBs	MIBs Link
	To locate and download MIBs using Cisco IOS XR software, use the Cisco MIB Locator found at the following URL and choose a platform under the Cisco Access Products menu: https://cfnng-stg.cisco.com/mibs.

RFCs

RFCs	Title
RFC 2401	Security Architecture for the Internet Protocol

Technical Assistance

Description	Link
The Cisco Technical Support website contains thousands of pages of searchable technical content, including links to products, technologies, solutions, technical tips, and tools. Registered Cisco.com users can log in from this page to access even more content.	http://www.cisco.com/cisco/web/support/index.html