



Perform Preliminary Checks

After successfully logging into the console, you must perform some preliminary checks to verify the default setup. If any setup issue is detected when these checks are performed, take corrective action before making further configurations. These preliminary checks are:

- [Verify Status of Hardware Modules, on page 1](#)
- [Verify Node Status, on page 1](#)
- [Verify Software Version, on page 3](#)
- [Verify Firmware Version, on page 4](#)
- [Verify Interface Status, on page 5](#)

Verify Status of Hardware Modules

Hardware modules include RPs, fan trays, and so on. On the router, multiple hardware modules are installed. Perform this task to verify that all hardware modules are installed correctly and are operational.

Before you begin

Ensure that all required hardware modules have been installed on the router.

Verify Node Status

Each card on the router represents a node. The operational status of the node is verified using the **show platform** command. This command is to be executed independently from both XR and System Admin mode CLIs.

Procedure

Step 1 **show platform**

Example:

```
RP/0/RP0/CPU0:router#show platform
```

The **show platform** command when executed from the XR EXEC mode displays the status of XR console running on various RPs and LCs.

```
RP/0/RP0/CPU0:ios#show platform
Wed Mar 13 22:35:22.679 IST
Node                Type                State                Config state
-----
0/0/CPU0            A900-IMA8CS1Z-M    OPERATIONAL         NSHUT
0/1/CPU0            A900-IMA8CS1Z-M    OPERATIONAL         NSHUT
0/2/CPU0            A900-IMA8CS1Z-M    OPERATIONAL         NSHUT
0/3/CPU0            A900-IMA8CS1Z-M    OPERATIONAL         NSHUT
0/4/CPU0            A900-IMA8Z          OPERATIONAL         NSHUT
0/5/CPU0            A900-IMA8Z          OPERATIONAL         NSHUT
0/7/CPU0            N560-IMA1W          OPERATIONAL         NSHUT
0/9/CPU0            N560-IMA2C          OPERATIONAL         NSHUT
0/10/CPU0           A900-IMA8Z          OPERATIONAL         NSHUT
0/11/CPU0           A900-IMA8Z          OPERATIONAL         NSHUT
0/12/CPU0           A900-IMA8CS1Z-M    OPERATIONAL         NSHUT
0/13/CPU0           A900-IMA8CS1Z-M    OPERATIONAL         NSHUT
0/14/CPU0           A900-IMA8CS1Z-M    OPERATIONAL         NSHUT
0/15/CPU0           A900-IMA8CS1Z-M    OPERATIONAL         NSHUT
0/RP0/CPU0          N560-RSP4-E (Active)  IOS XR RUN          NSHUT
0/RP1/CPU0          N560-RSP4-E (Standby) IOS XR RUN          NSHUT
0/FT0/CPU0          N560-FAN-H          OPERATIONAL         NSHUT
0/PM0/CPU0          A900-PWR1200-A      OPERATIONAL         NSHUT
0/PM2/CPU0          A900-PWR1200-A      OPERATIONAL         NSHUT
RP/0/RP0/CPU0:ios#
```

Verify that all RPs are listed and their state is OPERATIONAL. This indicates that the XR console is operational on the cards.

Step 2 admin

Example:

```
RP/0/RP0/CPU0:router# admin
```

Enters mode.

Step 3 show platform

Example:

```
sysadmin-vm:0_RP0#show platform
```

The **show platform** command when executed from the System Admin EXEC mode displays the status of all hardware units like cards (RPs, IMs) and hardware modules (fan trays) on the router.

This is an example for single-chassis system:

```
sysadmin-vm:0_RP0# show platform
Thu Mar 28 08:19:08.640 UTC+00:00
Location  Card Type                HW State    SW State    Config State
-----
0/0       NCS4200-1T16G-PS        OPERATIONAL N/A         NSHUT
0/1       NCS4200-1T16G-PS        OPERATIONAL N/A         NSHUT
0/2       NCS4200-1T16G-PS        OPERATIONAL N/A         NSHUT
0/3       NCS4200-1T16G-PS        OPERATIONAL N/A         NSHUT
0/4       A900-IMA8Z               OPERATIONAL N/A         NSHUT
0/5       A900-IMA8Z               OPERATIONAL N/A         NSHUT
0/7       N560-IMA1W               OPERATIONAL N/A         NSHUT
0/9       N560-IMA2C               OPERATIONAL N/A         NSHUT
0/10      A900-IMA8Z               OPERATIONAL N/A         NSHUT
0/11      A900-IMA8Z               OPERATIONAL N/A         NSHUT
0/12      NCS4200-1T16G-PS        OPERATIONAL N/A         NSHUT
0/13      NCS4200-1T16G-PS        OPERATIONAL N/A         NSHUT
0/14      NCS4200-1T16G-PS        OPERATIONAL N/A         NSHUT
0/15      NCS4200-1T16G-PS        OPERATIONAL N/A         NSHUT
```

0/RP0	N560-RSP4-E	OPERATIONAL	OPERATIONAL	NSHUT
0/RP1	N560-RSP4-E	OPERATIONAL	OPERATIONAL	NSHUT
0/FT0	N560-FAN-H	OPERATIONAL	N/A	NSHUT
0/PM0	A900-PWR1200-A	OPERATIONAL	N/A	NSHUT
0/PM2	A900-PWR1200-A	OPERATIONAL	N/A	NSHUT

```
sysadmin-vm:0_RP0#
```

Verify that all cards installed on the router are displayed in the result. The software state of LCs/IMs and RPs and the hardware state of FTs and power modules should be "OPERATIONAL". Various hardware and software states are listed here.

Hardware states:

- OPERATIONAL—Card is operating normally and is fully functional
- POWERED_ON—Power is on and the card is booting up
- FAILED—Card is powered on but has experienced some internal failure
- PRESENT—Card is in the shutdown state
- OFFLINE—User has changed the card state to OFFLINE. The card is accessible for diagnostics

Software states:

- OPERATIONAL—Software is operating normally and is fully functional
- SW_INACTIVE—Software is not completely operational
- FAILED—Software is operational but the card has experienced some internal failure

Verify Software Version

The router is shipped with the Cisco IOS XR software pre-installed. Verify that the latest version of the software is installed. If a newer version is available, perform a system upgrade. This will install the newer version of the software and provide the latest feature set on the router.

Perform this task to verify the version of Cisco IOS XR software running on the router.

Procedure

show version

Example:

```
RP/0/RP0/CPU0:router# show version
```

Displays the version of the various software components installed on the router. The result includes the version of Cisco IOS XR software and its various components.

Example**What to do next**

Verify the result to ascertain whether a system upgrade or additional package installation is required. If that is required, refer to the tasks in the chapter [Perform System Upgrade and Install Feature Packages](#).

Verify Firmware Version

The firmware on various hardware components of the router must be compatible with the Cisco IOS XR image installed. Incompatibility might cause the router to malfunction. Complete this task to verify the firmware version.

Procedure**show hw-module fpd****Example:**

```
RP/0/RP0/CPU0:N560_SYSPSV#show hw-module fpd
Wed Mar 13 22:35:40.387 IST
```

Location	Card type	HWver	FPD device	ATR Status	FPD Versions	
					Running	Programd
0/0	NCS4200-1T16G-PS	0.0	IMFPGA	CURRENT	1.76	1.76
0/1	NCS4200-1T16G-PS	0.0	IMFPGA	CURRENT	1.76	1.76
0/2	NCS4200-1T16G-PS	0.0	IMFPGA	CURRENT	1.76	1.76
0/3	NCS4200-1T16G-PS	0.0	IMFPGA	CURRENT	1.76	1.76
0/4	A900-IMA8Z	0.0	IMFPGA	CURRENT	17.02	17.02
0/5	A900-IMA8Z	0.0	IMFPGA	CURRENT	17.02	17.02
0/7	N560-IMA2C	0.0	IMFPGA	CURRENT	3.04	3.04
0/9	N560-IMA2C	0.0	IMFPGA	CURRENT	3.04	3.04
0/10	A900-IMA8Z	0.0	IMFPGA	CURRENT	17.02	17.02
0/11	A900-IMA8Z	0.0	IMFPGA	CURRENT	17.02	17.02
0/12	NCS4200-1T16G-PS	0.0	IMFPGA	CURRENT	1.76	1.76
0/13	NCS4200-1T16G-PS	0.0	IMFPGA	CURRENT	1.76	1.76
0/14	NCS4200-1T16G-PS	0.0	IMFPGA	CURRENT	1.76	1.76
0/15	NCS4200-1T16G-PS	0.0	IMFPGA	CURRENT	1.76	1.76
0/RP0	N560-RSP4-E	0.0	IOFPGA	CURRENT	0.53	0.53
0/RP0	N560-RSP4-E	0.0	PRIMARY-BIOS	CURRENT	0.14	0.14
0/RP1	N560-RSP4-E	0.0	IOFPGA	CURRENT	0.53	0.53
0/RP1	N560-RSP4-E	0.0	PRIMARY-BIOS	CURRENT	0.14	0.14
0/FT0	N560-FAN-H	0.256	PSOC	CURRENT	2.01	2.01
0/PM0	A900-PWR1200-A	0.0	PrimMCU	NOT READY	0.00	0.00
0/PM0	A900-PWR1200-A	0.0	SecMCU	NOT READY	0.00	0.00
0/PM2	A900-PWR1200-A	0.0	PrimMCU	NOT READY	0.00	0.00
0/PM2	A900-PWR1200-A	0.0	SecMCU	NOT READY	0.00	0.00

Note Ensure that the CFP2-DCO firmware version is also compatible with Cisco IOS XR Release 7.2.1.

Note To upgrade firmware on CFP2-DCO, controller optics (R/S/I/P) must be shut down.

Displays the list of hardware modules detected on the router.

Note This command can be run from both XR VM and System Admin VM modes.

In the above output, some of the significant fields are:

- FPD Device—Name of the hardware component, such as IO FPGA, IM FPGA, and BIOS.
- Status—Upgrade status of the firmware. The different states are:
 - CURRENT—The firmware version is the latest version.
 - READY—The firmware of the FPD is ready for an upgrade.
 - NOT READY—The firmware of the FPD is not ready for an upgrade.
 - NEED UPGD—A newer firmware version is available in the installed image. It is recommended that an upgrade be performed.
 - RLOAD REQ—The upgrade has been completed, and the ISO image requires a reload.
 - UPGD DONE—The firmware upgrade is successful.
 - UPGD FAIL—The firmware upgrade has failed.
 - BACK IMG—The firmware is corrupted. Reinstall the firmware.
 - UPGD SKIP—The upgrade has been skipped because the installed firmware version is higher than the one available in the image.
- Running—Current version of the firmware running on the FPD.
- Programmd—Version of the FPD programmed on the module.

What to do next

- Upgrade the required firmware by using the **upgrade hw-module location all fpd** command in the EXEC mode. For the FPD upgrade to take effect, the router needs a power cycle.



Note BIOS and IOFPGA upgrades require power cycle of the router for the new version to take effect.

Verify Interface Status

After the router has booted, all available interfaces must be discovered by the system. If interfaces are not discovered, it might indicate a malfunction in the unit. Complete this task to view the number of discovered interfaces.

Procedure

show ipv4 interface summary

Example:

```
RP/0/RP0/CPU0:router#show ipv4 interface summary
```

When a router is turned on for the first time, all interfaces are in the 'unassigned' state. Verify that the total number of interfaces displayed in the result matches with the actual number of interfaces present on the router.

In the above result:

- **Assigned**— An IP address is assigned to the interface.
- **Unnumbered**— Interface which has borrowed an IP address already configured on one of the other interfaces of the router.
- **Unassigned**—No IP address is assigned to the interface.

You can also use the **show interfaces brief** and **show interfaces summary** commands in the XR EXEC mode to verify the interface status.
