



CHAPTER 16

Troubleshooting Broadband Access Center

This chapter provides details on how to troubleshoot with Broadband Access Center (BAC). This chapter describes:

- [Troubleshooting Checklist, page 16-1](#)
- [Troubleshooting Devices by Device ID, page 16-2](#)
- [Troubleshooting Using the Diagnostics Tool, page 16-5](#)
- [Bundling Server State for Support, page 16-10](#)
- [Troubleshooting DOCSIS Networks, page 16-10](#)
- [Troubleshooting PacketCable eMTA Provisioning, page 16-11](#)

For a list of FAQs related to BAC provisioning, see [Appendix E, “FAQs on Provisioning Broadband Access Center.”](#)

Troubleshooting Checklist

While troubleshooting with BAC, use the checklist described in [Table 16-1](#).

Table 16-1 *Troubleshooting Checklist*

| Procedure | Refer to... | Check Off |
|--|--|--------------------------|
| 1. Check if the BAC processes are up on all systems on which BAC components are installed. | Using the BAC Process Watchdog from the Command Line, page 9-2 | <input type="checkbox"/> |
| 2. Check the BAC component logs for indications of high-severity errors. These include the information logged for: <ul style="list-style-type: none">– RDU– DPE | RDU Logs, page 10-4 DPE Log, page 10-7 | <input type="checkbox"/> |
| 3. View server uptime from the administrator user interface to confirm that the servers are not bouncing. | Viewing Servers, page 12-21 | <input type="checkbox"/> |
| 4. View the RDU and DPE service performance statistics from the administrator user interface. Observe any abnormal numbers, such as extended transaction times. | Viewing Servers, page 12-21 | <input type="checkbox"/> |

Table 16-1 Troubleshooting Checklist (continued)

| Procedure | Refer to... | Check Off |
|---|---|--------------------------|
| 5. Check the syslog alerts log. | Appendix A, “Alert and Error Messages” | <input type="checkbox"/> |
| 6. Check the operating system and hardware resources, such as: <ul style="list-style-type: none"> – Disk space – CPU time – Memory | Solaris documentation for specific commands. | <input type="checkbox"/> |
| 7. If troubleshooting a specific device, view the device instructions that are cached at the DPE. | The show device-config command described in the <i>Cisco Broadband Access Center DPE CLI Reference 4.0</i> . | <input type="checkbox"/> |
| 8. Configure individual device troubleshooting from the administrator user interface and, after a period of time, inspect the troubleshooting log. | Configuring Devices for Troubleshooting, page 16-3 | <input type="checkbox"/> |
| 9. Configure a higher level of logging on the RDU or the appropriate DPE for detailed logging information. | Using the RDU Log Level Tool, page 10-4 The log level command described in the <i>Cisco Broadband Access Center DPE CLI Reference 4.0</i> . | <input type="checkbox"/> |

Troubleshooting Devices by Device ID

You can use this feature to collect detailed diagnostics about one or more specific devices. Troubleshooting information includes all server interactions related to a given device or a group of devices. This information includes administrator user interface operations, RDU application programming interface (API) operations, DPE interactions with devices, and interserver DPE-to-RDU interactions.

You can enable or disable diagnostics via node management for one or more specific devices without turning logging on, and without searching through log files for specific device information.

BAC maintains a list of devices, based on device identifiers (MAC addresses and DUIDs), for which detailed diagnostics are collected. Troubleshooting information is stored centrally at the RDU and is maintained on a per-device basis. Neither DPEs nor Cisco Network Registrar extensions store this data. Rather, they forward this information to the RDU, which, upon receiving information, writes it to the *troubleshooting.log* file in the *BPR_DATA/rdu/logs* directory.

The *troubleshooting.log* file is different from other log files such as *rdu.log*, *dpe.log*, and *audit.log*. It only logs detailed troubleshooting information relating to a specific set of devices in the diagnostics mode.

If the connection from the DPE or Network Registrar extension to the RDU is lost, any new troubleshooting events occurring on the DPE or Network Registrar extension are discarded. The logging of troubleshooting information resumes only after the connection to the RDU is restored.

The DPE maps MAC addresses and DUIDs of a specific device being diagnosed to the IP address for that device. The DPE receives IP updates from the Network Registrar extensions for the devices being diagnosed.

Any modifications to the device tracking list, such as the addition of a new device or a group, take place immediately at all servers; you do not have to reboot the RDU or the DPE. The log files on the respective servers list the current list of devices in the diagnostics mode.


Caution

Additional memory and disk space is required whenever the device troubleshooting feature is used. As the number of tracked devices increases, so does the amount of memory and disk space that is required to support the number of logs that are created.

Configuring Devices for Troubleshooting

Device diagnostics is disabled until one or more devices are set in diagnostics mode.

To enable diagnostics for a device, the device must be preregistered in the BAC RDU. If the device is not yet preregistered, add the device from the Manage Devices page by clicking the Add button. For information on adding devices, see [Adding Device Records, page 12-13](#).

You can configure a maximum number of devices in diagnostics mode to prevent inadvertently putting too many devices in this mode and thus diminishing server performance. By default, this number is set at 25. To configure the maximum number of devices allowed in troubleshooting mode from the administrator user interface, click the Systems Defaults page via the **Configuration > Defaults** tabs. Enter a value in the Maximum Diagnostics Device Count field.

Relating a Device to a Node

You can troubleshoot a device by relating it to a specific node. Use the Relate function to associate a device, using its MAC address or its DUID, to a specific node, which is in turn associated with a specific node type. (See [Relating and Unrelating Devices, page 12-15](#).) Doing so records an extraordinarily large volume of information for a device; you can then use the information to troubleshoot potential problems.

[Table 16-2](#) identifies a possible workflow using the Relate and Unrelate functions.

Table 16-2 Sample Relate/Unrelate Process

| Step | Action |
|------|--|
| 1. | Determine whether or not a problem exists and identify which devices are affected. |
| 2. | Relate the devices to a node. |
| 3. | Wait a few minutes to ensure that device traffic is passing, or perform a hard boot of the device. |
| 4. | Open the <i>BPR_DATA/rdu/logs/troubleshooting.log</i> file in a word processing application and locate the entries for the MAC address or the DUID of the specific device. |
| 5. | Identify, correct, test, and verify the problem. |
| 6. | Unrelate the device from the node. |

Viewing List of Devices in Diagnostics Mode

When you enable troubleshooting for a device, the device is automatically added to a special device node that contains a list of devices in troubleshooting mode. The node type is **system** and the node name is **system-diagnostics**. You can access the list of devices in this group from the API or the administrator user interface.

To view a list of devices currently enabled for diagnostics:

-
- Step 1** From the Manage Devices page, click the Search Type drop-down list and select Node Search.
 - Step 2** From the Node Name (Node Type) drop-down list, select the **system-diagnostics (system)** option to view all the devices in diagnostics mode.
 - Step 3** Click **Search**.



Note An alternative way to view the list of devices in diagnostics mode is to consult the RDU log (*rdu.log*) and the DPE log (*dpe.log*) files. The list of devices is logged whenever the server is started and whenever there is a change in the list of devices enabled for diagnostics.

The devices enabled for diagnostics appear in the log files with the log level of 5-notification. For details on log files, see [Logging Events, page 10-1](#).

Examples

This example features log output while troubleshooting an MTA:

```

bac-test.example.com:2005 03 04 18:38:24 EST:%BAC-DIAGNOSTICS-3-4055:[##MTA-9a Unconfirmed
FQDN Request Received from [/10.10.10.5 ['kdcquery']]. Client with IP Address [10.10.20.2]
and MAC Address [1,6,00:00 :ca:b7:7e:91]]]
bac-test.example.com:2005 03 04 18:38:24 EST:%BAC-DIAGNOSTICS-3-4082:[Results of BACC
Lookup. FQDN: [1-6-00-00-ca-b7-7e-91.example.com MAC: 1,6,00:00:ca:b7:7e:91. Client with
IP Address [10.10.20.2] and MAC Address [1,6,00:00:ca:b7:7e:91]]]
bac-test.example.com:2005 03 04 18:38:24 EST:%BAC-DIAGNOSTICS-3-4070:[##MTA-9b FQDN Reply
Sent to [/10.10.20.2(41142) for MTA 1,6,00:00:ca:b7:7e:91. Client with IP Address
[10.10.20.2] and MAC Address [1,6, 00:00:ca:b7:7e:91]]]
bac-test.example.com:2005 03 04 18:38:26 EST:%BAC-DIAGNOSTICS-3-4132:[##MTA-13 Incoming
APREQ received from [/10.10.20.2:1293. Client with IP Address [10.10.20.2] and MAC
Address [1,6,00:00:ca:b7:7e:91]]]
bac-test.example.com:2005 03 04 18:38:26 EST:%BAC-DIAGNOSTICS-3-4141:[##MTA-13 APREP sent
to [/10.10.20.2(1293) For MTA 1,6,00:00:ca:b7:7e:91. Client with IP Address [10.10.20.2]
and MAC Address [1,6,00:00: ca:b7:7e:91]]]
bac-test.example.com:2005 03 04 18:38:26 EST:%BAC-DIAGNOSTICS-3-0764:[##MTA-15 SNMPv3
INFORM Received From 10.10.20.2. Client with IP Address [10.10.20.2] and MAC Address
[1,6,00:00:ca:b7:7e:91]]]
bac-test.example.com:2005 03 04 18:38:26 EST:%BAC-DIAGNOSTICS-3-0764:[##MTA-19 SNMPv3 SET
Sent to 10.10.20.2. Client with IP Address [10.10.20.2] and MAC Address
[1,6,00:00:ca:b7:7e:91]]]
bac-test.example.com:2005 03 04 18:38:26 EST:%BAC-DIAGNOSTICS-3-1092:[Received a TFTP
[read] request from [10.10.20.2:1271] for [bpr01060000cab77e910002]; Client with MAC
Address [1,6,00:00:ca:b7:7e:91] and IP Address [10.10.20.2]]]
bac-test.example.com:2005 03 04 18:38:26 EST:%BAC-DIAGNOSTICS-3-1155:[##MTA-23 Finished
handling [read] request from [10.10.20.2:1271] for [bpr01060000cab77e910002]; Transferred
[236] bytes to Client with MAC Address [1,6,00:00:ca:b7:7e:91] and IP Address
[10.10.20.2]]]

```

```

bac-test.example.com:2005 03 04 18:38:27 EST:%BAC-DIAGNOSTICS-3-0764:[[#MTA-25 SNMP
Provisioning State INFORM Received from 10.10.20.2. Client with IP Address [10.10.20.2]
and MAC Address [1,6,00:00:ca:b7:7e:91]]]
bac-test.example.com:2005 03 04 18:38:27 EST:%BAC-DIAGNOSTICS-3-0764:[MTA Configuration
Confirmed, Returned 'pass' as the final MTA provisioning state for 10.10.20.2. Client with
IP Address [10.10.20.2] and MAC Address [1,6,00:00:ca:b7:7e:91]]]

```

Troubleshooting Using the Diagnostics Tool

You can use the diagnostics tool to collect performance statistics—down to a specific type of statistic—for BAC servers. Using individual scripts for each task that this tool performs, you can:

- Gather diagnostics concurrently (**startDiagnostics.sh**)
- Stop diagnostics prematurely (**stopDiagnostics.sh**)
- Determine the status of diagnostics collection (**statusDiagnostics.sh**)

You can run the diagnostic tool concurrently when you face an issue and need additional data for troubleshooting, or you can set it to run periodically on a given schedule via a cron job.



Caution

When using the diagnostics tool, ensure that sufficient space is available on your systems for storing the diagnostic data.

The diagnostic tool resides in the following locations for the:

- RDU—*BPR_HOME/rdu/diagnostics/bin*
- DPE—*BPR_HOME/dpe/diagnostics/bin*
- Cisco Network Registrar—*BPR_HOME/cnr_ep/diagnostics/bin*



Note

You can bundle the collected diagnostics using the **bundleState.sh** script. For details, see [Bundling Server State for Support, page 16-10](#).

Using the startDiagnostics.sh Tool

You can run the **startDiagnostics.sh** tool in two modes:

- Interactive—In this mode, you can select the diagnostic data that you require from a list of options.
- Noninteractive—In this mode, you first generate a response file that contains arguments. Then, when you run the **startDiagnostics.sh** script, the tool collects diagnostics data based on the arguments specified in the response file.

Syntax Description

startDiagnostics.sh [-r *response_file*] | [-g *response_file*] [-help]

- **startDiagnostics.sh**—Runs diagnostics in the interactive mode
- *response_file*—Identifies the response file
- **-r** *response_file*—Uses the response file generated to run the diagnostics tool in the noninteractive mode

- **-g response_file**—Generates the response file without running diagnostics
- **-help**—Displays help for the tool. You must use the **-help** option exclusively. Do not use this with any other option.

Running startDiagnostics.sh in Interactive Mode

When you enter **startDiagnostics.sh** without specifying any argument, the diagnostics tool runs in the interactive mode and prompts you to select the statistics that you want from the RDU, the DPE, and the Network Registrar servers.



Caution

Ensure that you process statistics with caution because doing so could severely impact system performance.

Syntax Description

startDiagnostics.sh [-help]

- **startDiagnostics.sh**—Runs diagnostics in the interactive mode
- **-help**—Displays help for the tool. You must use the **-help** option exclusively. Do not use this with any other option.

Examples

```
# ./startDiagnostics.sh
```

```
Please enter directory where to put output files [] /var/CSCObac
Please enter the duration of the diagnostic (sec) [600]
```

```
Please select statistics you would like to gather on RDU
```

```
CPU statistics (y/n/q)? [y]
Process statistics (y/n/q)? [n]
IO statistics (y/n/q)? [y]
Memory statistics (y/n/q)? [y]
Network statistics (y/n/q)? [y]
RDU API traffic (y/n/q)? [y]
RDU CNR traffic (y/n/q)? [y]
RDU DPE traffic (y/n/q)? [y]
RDU CNR extension traffic (y/n/q)? [y]
RDU SNMP traffic (y/n/q)? [y]
System Configuration (y/n/q)? [y]
```

```
Enter addition argument for RDU API traffic
Please enter RDU Server port [49187]
```

```
Enter addition arguments for RDU DPE traffic
Enter DPE ip addr if you want to capture traffic by ip addr [] 10.10.29.1
Enter DPE port number if you want to capture traffic by port number [] 49186
```

```
Enter addition arguments for RDU CNR_EX traffic
Enter Ip addr if you want to capture traffic by Cnr Extension IP addr [] 10.10.85.2
Enter port number if you want to capture traffic by Cnr Extension port []
```

```
You could run statusDiagnostics.sh to find out the status of the diagnostics.
You could run stopDiagnostics.sh to stop the diagnostics.
You could run bundleState.sh to bundle the output when diagnostics is complete.
```

**Note**

If you do not enable statistics for the following options, the tool does not request values for additional arguments, as featured in the example:

- RDU-API traffic
- RDU-DPE traffic
- RDU-Network Registrar extension traffic

After you run the **startDiagnostics.sh** tool, output files for each statistic are created under the directory in which you run the tool. You can also bundle the output files and forward them to the Cisco Technical Assistance Center for support. To do so, enter **y** at the System Diagnostics Capture prompt.

For example:

```
System Configuration (y/n/q)? [y]
```

For more details on bundling server state, see [Bundling Server State for Support, page 16-10](#).

Running startDiagnostics.sh in Noninteractive Mode

Before running the **startDiagnostics.sh** tool in the noninteractive mode for the first time, you must generate the response file. Thereafter, you only need to run a single command, which collects diagnostics based on the arguments contained in the response file.

Syntax Description

```
startDiagnostics.sh {-g response_file | -r response_file} [-help]
```

- **-g**—Generates the response file. You need to use this option only when generating a response file for the first time.
- **-r**—Runs the diagnostics tool using the response file
- *response_file*—Specifies the name of the response file
- **-help**—Displays help for the tool. You must use the **-help** option exclusively. Do not use this with any other option.

Examples

This results occurs when you generate the response file.

```
# ./startDiagnostics.sh -g response.txt

Please enter directory where to put output files [] /var/CSCObac
Please enter the duration of the diagnostic (sec) [600]

Please select statistics you would like to gather on RDU

CPU statistics (y/n/q)? [y]
Process statistics (y/n/q)? [n]
IO statistics (y/n/q)? [y]
Memory statistics (y/n/q)? [y]
Network statistics (y/n/q)? [y]
RDU API traffic (y/n/q)? [y] n
RDU CNR traffic (y/n/q)? [y]
RDU DPE traffic (y/n/q)? [y] n
```

```
RDU CNR extension traffic (y/n/q)? [y] n
RDU SNMP traffic (y/n/q)? [y]
System Configuration (y/n/q)? [y]
```

Finished generate response file (response.txt).

The *response.txt* is generated under the directory in which you run the **startDiagnostics.sh** script; in this case, *BPR_HOME/rdu/diagnostics/bin*. A sample response file generated for RDU diagnostics is featured here:

```
test.bundle.diracotry=/var/CSCObac
test.bundle.duration.sec=100
test.cpu.enable=true
test.process.enable=false
test.io.enable=true
test.memory.enable=true
test.network.enable=true
test.rdu_api_traffic.enable=true
test.rdu_cnr_traffic.enable=true
test.rdu_dpe_traffic.enable=true
test.rdu_cnr_ex_traffic.enable=true
test.rdu_snmp_traffic.enable=true
test.system_config.enable=true
test.rdu.port=49187
test.dpe.port=49186
test.dpe.ip=10.10.29.1
test.cnr_ex.ip=10.10.85.2
test.cnr_ex.port=
EOF
```

This result occurs when you run the diagnostics tool using the response file that you have generated.

```
# ./startDiagnostics.sh -r response.txt
```

You could run `statusDiagnostics.sh` to find out the status of the diagnostics.
You could run `stopDiagnostics.sh` to stop the diagnostics.

After you run the **startDiagnostics.sh** tool, output files for each statistic are created under the directory in which you run the tool.

Using the statusDiagnostics.sh Tool

Use the **statusDiagnostics.sh** tool to determine the status of diagnostic collection for the statistics that you require.

Syntax Description

statusDiagnostics.sh, which displays the status of diagnostic collection for each statistic.



Note You cannot use the **-help** option with the **statusDiagnostics.sh** tool.

Examples

```
# ./statusDiagnostics.sh
CPU diagnostic is running.
Process diagnostics stopped.
IO diagnostic is running.
Memory diagnostic is running.
Network diagnostic is running.
```

```
Rdu api traffic diagnostic is running.  
Rdu cnr traffic diagnostic is running.  
Rdu dpe traffic diagnostic is running.  
Rdu cnr_ex traffic diagnostic is running.  
Rdu snmp traffic diagnostic is running.
```

Using the stopDiagnostics.sh Tool

Use the **stopDiagnostics.sh** tool to stop running diagnostics for any one statistic or for all statistics. You can run this tool in the interactive mode or noninteractive mode.

Running stopDiagnostics.sh in Interactive Mode

Running **stopDiagnostics.sh** in the interactive mode, without any argument, prompts you to specify if you want to stop diagnostics for all statistics or for specific statistics.

Syntax Description

stopDiagnostics.sh [-help]

- **stopDiagnostics.sh**—Stops diagnostic collection in the interactive mode.
- **-help**—Displays help for the tool. You must use the **-help** option exclusively. Do not use this with any other option.

Examples

```
# ./stopDiagnostics.sh
```

```
This script allowed to stop specific diagnostic or all diagnostics.  
If you would like to stop specific diagnostics, say no to question below.
```

```
Would you like to stop all diagnostics (y/n/q)? [y]
```

Running stopDiagnostics.sh in Noninteractive Mode

Running **stopDiagnostics.sh** in the noninteractive mode stops diagnostics for all statistics.

Syntax Description

stopDiagnostics.sh -a [-help]

- **-a**—Stops diagnostics for all statistics without prompting you.
- **-help**—Displays help for the tool. You must use the **-help** option exclusively. Do not use this with any other option.

Examples

```
# ./stopDiagnostics.sh -a  
#
```

Bundling Server State for Support

You can generate server configuration and other diagnostics information using the diagnostics tools in the `BPR_HOME/{rdu | dpe}/diagnostics/bin` directory. (For information on how to run these tools, see [Troubleshooting Using the Diagnostics Tool, page 16-5](#).) To make this diagnostic information available for support to the Cisco Technical Assistance Center, you must bundle the output directory that is created using the diagnostics tools into an archive. To perform this task, you use the `bundleState.sh` tool.

Note that the `bundleState.sh` tool does not gather diagnostics; it only zips and tars the data that tools such as `startDiagnostics.sh` collect.

At a minimum, the diagnostics that you bundle must include information related to system configuration. To generate system information, use either:

- `captureConfiguration.sh`—Collects system configuration information such as mount and disk setup, memory, and operating system and hardware data. When running this script, you must specify the output directory.
- `startDiagnostics.sh`—Collects performance statistics for BAC servers. When running this script to capture system configuration, you must enter `y` at the System Configuration prompt. For example:

```
System Configuration (y/n/q)? [y]
```

For details, see [Using the startDiagnostics.sh Tool, page 16-5](#).

For specific problems, Cisco support personnel may instruct you to collect additional diagnostics and add it to the bundle.

Syntax Description

`bundleState.sh archive_directory output_directory [-help]`

- `archive_directory`—Directory where you want to bundle.
- `output_directory`—Directory where you want to output the bundle.
- `-help`—Displays help for the tool. You must use the `-help` option exclusively. Do not use this with any other option.

Examples

```
# ./bundleState.sh /var/CSCObac /var/CSCObac
/var/CSCObac/state-20071129-064042
Creating state bundle for Cisco support...
+ /var/CSCObac/state-20071129-064042.bpr
+ Compressing state bundle...
+ Size: 3736K compressed, 83776K uncompressed
```

Troubleshooting DOCSIS Networks

For information on troubleshooting the DOCSIS technology with respect to BAC and the Cisco uBR7246 CMTS, refer to *Troubleshooting uBR Cable Modems Not Coming Online* at: http://www.cisco.com/en/US/tech/tk86/tk89/technologies_tech_note09186a0080094eb1.shtml

Troubleshooting PacketCable eMTA Provisioning

This section features information that will help you solve possible issues in a PacketCable voice technology deployment.

- [Troubleshooting Tools](#), page 16-14
- [Troubleshooting Scenarios](#), page 16-15
- [Certificate Trust Hierarchy](#), page 16-18

This section assumes that you are familiar with the PacketCable Multimedia Terminal Adapter (MTA) Device Provisioning Specification, PKT-SPPROV1.5-I01-050128. See the PacketCable website for details.

Provisioning PacketCable embedded MTAs (eMTAs) is a relatively complex process; however, with the right tools and “tricks of the trade,” getting eMTAs operational can be straightforward.

This section assumes that Network Registrar and BAC are both in use; however, much of the information also applies for other deployments. Basic knowledge of Network Registrar (scopes, policies, basic DNS zone setup, and record entry) and BAC (Class of Service, DHCP Criteria, files, and BAC directory structure) is assumed.

The PacketCable eMTA provisioning process consists of 25 steps for the Secure flow; the Basic flow has far fewer steps. To troubleshoot eMTAs, knowledge of these 25 steps from the PacketCable provisioning specification is absolutely essential. See [Chapter 7, “PacketCable Voice Configuration.”](#)

This section contains the following topics:

- [Components](#), page 16-11
- [Key Variables](#), page 16-13

Components

Before troubleshooting eMTAs, you should be familiar with the following system components.

- [eMTA](#)
- [DHCP Server](#)
- [DNS Server](#)
- [KDC](#)
- [PacketCable Provisioning Server](#)
- [Call Management Server](#)

eMTA

The eMTA is a cable modem and an MTA in one box, with a common software image. The CM and MTA each have their own MAC addresses and each performs DHCP to get its own IP address. The eMTA contains, at minimum, three certificates. One certificate is a unique MTA certificate. A second certificate identifies the MTA manufacturer. Both the device and manufacture certificates are sent by the MTA to authenticate itself to the KDC. The third certificate is a telephony root certificate used to verify the certificates sent by the KDC to the MTA. The KDC certificates will be chained from the telephony root, therefore the telephony root must reside on the MTA to validate the authenticity of the KDC certificates. The MTA portion receives its own configuration file, which it uses to identify its controlling call agent, among other things.

DHCP Server

The DOCSIS specifications mandate that cable modems negotiate their IP addresses using DHCP. The MTA, like most CPE on a DOCSIS network, must use DHCP to obtain its IP address and other crucial information (DNS servers, PacketCable Option 122 for Kerberos realm name, provisioning server FQDN).

**Note**

The cable modem portion, in addition to its normally required DHCP options, also requests, and must receive, Option 122 suboption 1, which it passes to the MTA portion as the IP address of the correct DHCP server from which to accept offers.

When using BAC with PacketCable support, be aware that a correctly configured BAC will automatically populate the ToD server, DNS servers, TFTP server, as well as the Option 122 fields; these do not need to be explicitly set in the Network Registrar policy.

DNS Server

The Domain Name System (DNS) server is fundamental in PacketCable provisioning. The PacketCable provisioning server, which is the device provisioning engine (DPE) in a BAC architecture, must have an address (A) record in the appropriate zone, because its fully qualified domain name (FQDN) is provided to the MTA in Option 122 by the DHCP server. The KDC realm must have a zone of the same name as the realm name containing a server (SRV) record that contains the FQDN of the Kerberos server.

The Kerberos server identified in the SRV record must itself have an A record in the appropriate zone. The call management server (CMS) identified in the MTA configuration file must also have an A record in the appropriate zone. Lastly, the MTAs themselves must have A records in the appropriate zone, because the CMS reaches the MTA by resolving its FQDN. Dynamic DNS (DDNS) is the preferred method of creating A records for the MTA. Refer to Cisco Network Registrar documentation for information on configuring and troubleshooting DDNS.

KDC

The KDC is responsible for authenticating MTAs. As such, it must check the MTA certificate, and provide its own certificates so that the MTA can authenticate the KDC. It also communicates with the DPE (the provisioning server) to validate that the MTA is provisioned on the network.

PacketCable Provisioning Server

The PacketCable provisioning server is responsible for communicating the location of the MTA configuration file to the MTA, and/or provisioning MTA parameters via SNMP. SNMPv3 is used for all communication between the MTA and the provisioning server. The keys used to initiate SNMPv3 communication are obtained by the MTA during its authentication phase with the KDC. Provisioning server functionality is provided by the DPE in a BAC architecture.

Call Management Server

The call management server (CMS) is essentially a soft switch, or call-agent, with additional PacketCable functionality to control, among other things, quality of service on a cable network. The MTA sends a network call signaling (NCS) restart in progress (RSIP) message to the CMS upon successful PacketCable provisioning.

Key Variables

This section describes the key variables required to provision an eMTA correctly.

- [Certificates, page 16-13](#)
- [Scope-Selection Tags, page 16-14](#)
- [MTA Configuration File, page 16-14](#)

Certificates

The *MTA_Root.cer* file contains the MTA root certificate (a certificate that is rooted in the official PacketCable MTA root).

You must know in advance what telephony root certificate is required for the MTAs you want to provision. Deployments in production networks use telephony certificates rooted in the PacketCable real root. There is also a PacketCable test root used in testing environments.

The KDC certificates used by the KDC to authenticate itself to the MTA must be rooted in the same telephony root that is stored on the MTA (PacketCable real or test root). Most MTA vendors support test images that have Telnet and/or HTTP login capabilities so that you can determine which telephony root is enabled, and change the root used (in most cases, you can only select between the PacketCable real or test root).

The most common scenario has the KDC loaded with certificates (from the *BPR_HOME/kdc/solaris/packetcable/certificates* directory) as follows:

- *CableLabs_Service_Provider_Root.cer*
- *Service_Provider.cer*
- *Local_System.cer*
- *KDC.cer*
- *MTA_Root.cer*

The first four certificates comprise the telephony certificate chain. The *MTA_Root.cer* file contains the MTA root used by the KDC to validate the certificates sent by the MTA.



Note

Refer to [Using the PKCert.sh Tool, page 14-2](#), for information on installing and managing KDC certificates.

To determine if you are using PacketCable test root, open the *CableLabs_Service_Provider_Root.cer* file in Windows, and validate that the Subject OrgName entry is **O = CableLabs**, and/or check that the Subject Alternative name reads **CN=CABLELABS GENERATED TEST ROOT FOR EQUIPMENT TEST PURPOSES ONLY**.

The KDC certificate (*KDC.cer*) contains the realm name to use. The realm name that BAC (and the corresponding DNS zone) is configured to use must match this realm name. Additionally, the MTA configuration file realm org name must match the organization name as seen in the telephony root.

The KDC certificate has a corresponding private key that must be installed in the *BPR_HOME/kdc/solaris* directory. Usually it is named *KDC_private_key.pkcs8* or *KDC_private_key_proprietary*. When changing certificates, you must also change the private key.

Scope-Selection Tags

In most scenarios, BAC is involved in processing all DHCP requests from scopes with scope-selection tags that match selection criteria specified in the DHCP Criteria page of the BAC administrator user interface. Client class can also be used to tie scopes to BAC processing; ensure you make this association before you attempt to provision devices.

MTA Configuration File

The MTA configuration file contains the location of the CMS. Additionally, it must contain an entry for Realm Name. This value must match that of the certificate chain in use.

Certain table entries within the MTA configuration file are indexed by the realm name delivered to the MTA in Option 122. This realm name entry in the MTA configuration file must match that delivered in Option 122. For example, if **DEF.COM** was the realm name delivered in Option 122, MTA configuration file entries in the `pktcMtaDevRealm` table would be indexed with a suffix made up of the ASCII-coded character values (in dot-delimited decimal format when using the Cisco Broadband Configurator) of the realm name; for example `68.69.70.46.67.79.77`. There are many free ASCII conversion pages available on the web to make this conversion easier.

Troubleshooting Tools

The 25 eMTA Secure provisioning steps contained in the PacketCable MTA Device Provisioning Specification are shown in [Figure 7-1](#). This section describes:

- [Logs, page 16-14](#)
- [Ethereal, SnifferPro, or Other Packet Capture Tools, page 16-15](#)

Logs

These log files are used to maintain the following information:

- The Network Registrar has two logs (*name_dhcp_1_log* and *name_dns_1_log*), which contain the most recent logging entries from Network Registrar. Look in these files for DHCP- or DNS-related problems.
- The *BPR_HOME/kdc/logs/kdc.log* file shows all KDC interactions with MTAs, and KDC interactions with the DPE.
- The *BPR_DATA/dpe/logs/dpe.log* file shows the major steps related to SNMPv3 interaction with the MTA.



Note

Turning on the tracing of snmp, registration server, and registration server detail messages, using the command-line interface (CLI), helps to troubleshoot potential PacketCable problems. For information on the appropriate troubleshooting commands, refer to the *Cisco Broadband Access Center DPE CLI Reference 4.0*.

Ethereal, SnifferPro, or Other Packet Capture Tools

A packet capture tool is indispensable when troubleshooting the eMTAs. The Ethereal version, as packaged by CableLabs, includes numerous packet decoders specific to PacketCable. These include the Kerberos AS and AP packets.

- If you suspect that a specific failure is DHCP-related, capture packets while filtering on packets sourced from, or destined to, the CMTS cable interface IP address and the DHCP server IP address.
- If you suspect that a specific failure is related to any of the 25 steps occurring after DHCP, filter all packets to and from the eMTA IP address. This provides a very concise, easy-to-follow trace of provisioning steps 5 through 25, as shown in [Figure 7-1](#).

Troubleshooting Scenarios

The scenarios listed in [Table 16-3](#) are possible failures involving eMTAs.

Table 16-3 Troubleshooting Scenarios

| If this problem occurs... | Which indicates this potential cause... | To correct it, you should... |
|---|---|---|
| The KDC does not start. | The KDC certificate does not correspond to the private key. | Ensure that you have matching certificates and private key. |
| | The KDC license expired or is missing. | Restore KDC license to <i>BPR_HOME/kdc</i> directory. |
| The MTA device does not appear in the BAC Devices page. | An incorrect cable helper address may have been configured. | Fix the helper address. |
| | The scope-selection tags do not match the DHCP Criteria selected in the BAC user interface. | Verify that the MTA scope-selection tags match those in the PacketCable DHCP Criteria created, in BAC, for the relevant MTAs. |
| | The Network Registrar extension point is not properly installed. | Reinstall the Network Registrar extension point. Refer to the <i>Installation and Setup Guide for Cisco Broadband Access Center 4.0</i> . |
| | The cable modem portion did not receive Option 122. | Verify that the tags on the scope of the cable modem portion match the DOCSIS DHCP Criteria configured for BAC. |
| The MTA device does not accept the DHCP offer and continually cycles through the DHCP flow. | There are invalid DHCP options configured. | Check that scope policy includes the DNS server option, and/or check that the <i>cnr_ep.properties</i> file includes entries for primary and secondary DNS servers. |
| | The DHCP offer may have come from a DHCP server different from the one indicated in the cable modem portion's Option 122 suboption 1. | Check the <i>cnr_ep.properties</i> file to ensure that the main and backup DHCP servers are set correctly. |

Table 16-3 Troubleshooting Scenarios (continued)

| If this problem occurs... | Which indicates this potential cause... | To correct it, you should... |
|--|--|--|
| Both the <i>kdc.log</i> file and the ethereal trace indicate that the MTA device never contacts the KDC. | An incorrect DNS server is specified in the <i>cnr_ep.properties</i> file or the MTA scope policy, or both. | Check or correct <i>cnr_ep.properties</i> DNS servers. |
| | A zone is missing or has been incorrectly set up for the Kerberos realm. | Make sure a zone with same name as realm is created and contains an 'SRV' record of format '_kerberos._udp 0 0 88 KDC FQDN'. |
| | There is a missing or incorrect KDC 'A' record entry. | Ensure that an 'A' record exists for the FQDN contained in the Kerberos zone's 'SRV' record. |
| | The DPE FQDN cannot be resolved. | Ensure that the provFQDNs entry in <i>dpe.properties</i> has the correct FQDN and IP of the DPE. |
| The KDC reports failure during the Kerberos AS-Request. | The MTA certificate does not match the MTA root used by KDC. | Verify that the <i>MTA_Root.cer</i> is correct by comparing the <i>MTA_Root.cer</i> against that used on a working system. If it is correct, the MTA itself could have a certificate problem. This situation is extremely rare and if this is the case, contact the MTA manufacturer. |
| | FQDN lookup by KDC to Prov Server failed. The device may not yet be provisioned in BAC. | Verify that the device appears. It should be given both a Class of Service and a DHCP Criteria. |
| | A clock skew error. See PacketCable Workflows, page 3-6 , for additional information. | Ensure that all BAC network elements are clock-synced via NTP. Refer to the <i>Broadband Access Center DPE CLI Reference 4.0</i> . |
| | A mismatch may exist between the KDC and the DPE. | Check that these three entries exist in the <i>BPR_HOME/kdc/solaris/keys</i> directory: |
| | Note If other devices are provisioned correctly, this is probably not the cause of the problem. | <ul style="list-style-type: none"> • mtafqdnmap,dpe.abc.com@DEF.COM • mtaprovsrvr,dpe.abc.com@DEF.COM • krbtgt,DEF.COM@DEF.COM <p>The DPE FQDN and realm name on your system will be different from this example. Contents of these entries must match the entry in either the <i>dpe.properties</i> 'KDCServiceKey' entry, or the keys generated using the KeyGen utility.</p> |
| The KDC reports success at the AS-Request/Reply (steps 9 and 10 in Figure 7-1), but the MTA device never moves past step 9. | There is a certificate mismatch between the telephony root loaded or enabled on the MTA, and that loaded on the KDC. | Check certificates on MTA and KDC. |
| | Although highly unlikely, it is possible that there is a corrupted telephony certificate chain. Note If other devices are provisioned correctly, this is not the cause of the problem. | Ensure that the correct certificate is loaded or enabled on MTA. If no devices can be provisioned correctly, try a different certificate on the KDC. |

Table 16-3 Troubleshooting Scenarios (continued)

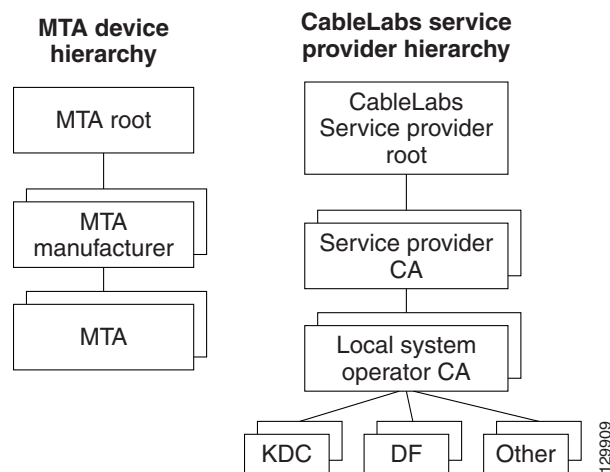
| If this problem occurs... | Which indicates this potential cause... | To correct it, you should... |
|--|---|--|
| Failure at AP Request/Reply (step 14 in Figure 7-1). | A clock skew error. See PacketCable Workflows, page 3-6 , for additional information. | Ensure that all BAC network elements are clock-synced via NTP. Refer to the <i>Broadband Access Center DPE CLI Reference</i> . |
| | Cannot resolve Prov Server FQDN. | Make sure that the provisioning server (DPE) has a correct DNS entry. Ensure that dpe.properties provFQDNs entry has the correct FQDN and IP of the provisioning server (DPE). |
| | There is no route from the MTA to the DPE. | Correct the routing problem. |
| The MTA device never issues a TFTP request for a configuration file. | There is no route to the TFTP server running on the DPE. | Correct the routing problem. |
| The MTA device never receives the TFTP configuration file. | The configuration file is not cached at the DPE. | Wait until the next provisioning attempt, at which time the file should be cached. If this fails, reset the MTA. |
| | A conflicting TFTP server option is included in the network registrar MTA scope policy. | Because BAC inserts the DPE address for the TFTP server, you can safely remove this option from the policy. |
| The MTA device receives a configuration file, but the DPE fails to receive the SNMP Inform (step 25 in Figure 7-1) as seen in the <i>dpe.log</i> file. | One of: <ul style="list-style-type: none"> An internal conflict in the configuration file. A conflict with Realm origin of the telephony certificate chain. A conflict with the Realm Name provided in Option 122. | Ensure that the MTA configuration file is consistent. |
| The MTA device reports success (step 25 in Figure 7-1) although an RSIP is not sent. | The MTA cannot resolve the IP address of the CMS FQDN given in the MTA configuration file. | Verify that a DNS entry exists for the CMS. |
| | The MTA cannot reach the IP address(es) of the CMS. This is an indication that no route is configured. | Resolve all routing problems. |
| The MTA device reports success (step 25 in Figure 7-1), although it proceeds to contact the KDC again for CMS service. | The MTA configuration file points to an incorrect cable modem. | Correct the configuration file, or reconfigure the Cisco BTS 10200 to use the FQDN listed in the configuration file. |
| | The MTA configuration file has its pktcMtaDevCmsIPsecCtrl value missing, or it is set to 1. This means it will perform secure NCS call signaling, or it will use an ASCII suffix that does not match that of the CMS FQDN. | Correct the configuration file. If you intend to perform secure signaling, take the necessary steps to configure the KDC and the BTS for support. |

Table 16-3 Troubleshooting Scenarios (continued)

| If this problem occurs... | Which indicates this potential cause... | To correct it, you should... |
|---|---|---|
| The MTA device reports success (step 25 in Figure 7-1), RSIPs, but gets no response or gets an error in response from the soft switch. | The MTA is unprovisioned or has been incorrectly provisioned on the Cisco BTS 10200. An eMTA DNS entry does not exist. | Provision MTA on the Cisco BTS 10200. Place an entry in the correct DNS zone for the eMTA. Dynamic DNS is the preferred method. Refer to Cisco Network Registrar documentation for information on enabling DDNS. |

Certificate Trust Hierarchy

There are two certificate hierarchies affiliated with BAC PacketCable, the MTA Device Certificate Hierarchy and the CableLabs Service Provider Certificate Hierarchy, as shown in [Figure 16-1](#).

Figure 16-1 PacketCable Certificate Hierarchy

Before implementing PacketCable in BAC, you should thoroughly familiarize yourself with these technology documents:

- *RFC 2459 Internet X.509 Public Key Infrastructure Certificate and CRL Profile*
- *DOCSIS Baseline Privacy Plus Interface Specification, SP-BPI+-I11-040407, April 7, 2004*

**Note**

While Euro PacketCable uses the security specifications from PacketCable [PKT-SP-SEC-I08-030415], some changes are needed in relation to the digital certificates that are used in a Euro-PacketCable environment. To keep Euro PacketCable and PacketCable as alike as possible, Euro PacketCable uses all PacketCable security technology, including new revisions of the security specifications [PKTSP-SEC-I08-030415].

The elements of the Euro-PacketCable certificates that are different from the PacketCable certificates are indicated in the tables below.

For Euro PacketCable, the Euro-PacketCable certificates are the only valid certificates; any requirements that are stated in [PKT-SP-SEC-I08-030415] for PacketCable that refer to PacketCable Certificates are changed to the corresponding requirements for the Euro-PacketCable certificates.

Euro-PacketCable-compliant eMTAs must have the Euro-DOCSIS root CVC CA's public key stored in the cable modem's nonvolatile memory instead of in the DOCSIS CVC CA's public key. Standalone MTAs that comply with Euro PacketCable must have the tComLabs CVC Root Certificate and the tComLabs CVC CA certificate stored in non-volatile memory. The CVC of manufacturers are verified by checking the certificate chain.

Certificate Validation

PacketCable certificate validation in general involves validation of an entire chain of certificates. For example, when the provisioning server validates an MTA Device certificate, the following chain of certificates is validated:

MTA Root Certificate + MTA Manufacturer Certificate + MTA Device Certificate

The signature on the MTA Manufacturer Certificate is verified with the MTA Root Certificate and the signature on the MTA Device Certificate is verified with the MTA Manufacturer Certificate. The MTA Root Certificate is self-signed and is known in advance to the provisioning server. The public key present in the MTA Root Certificate is used to validate the signature on this same certificate.

Usually the first certificate in the chain is not explicitly included in the certificate chain that is sent over the wire. In the cases where the first certificate is explicitly included it must already be known to the verifying party ahead of time and must *not* contain any changes to the certificate with the possible exception of the certificate serial number, validity period, and the value of the signature. If changes other than these exist in the CableLabs Service Provider Root Certificate that was passed over the wire in comparison to the known CableLabs Service Provider Root Certificate, the device making the comparison must fail the certificate verification.

The exact rules for certificate chain validation must fully comply with RFC 2459, where they are referred to as Certificate Path Validation. In general, X.509 certificates support a liberal set of rules for determining if the issuer name of a certificate matches the subject name of another. The rules are such that two name fields may be declared to match even though a binary comparison of the two name fields does not indicate a match. RFC 2459 recommends that certificate authorities restrict the encoding of name fields so that an implementation can declare a match or mismatch using simple binary comparison.

PacketCable security follows this recommendation. Accordingly, the DER-encoded `tbsCertificate.issuer` field of a PacketCable certificate must be an exact match to the DER-encoded `tbsCertificate.subject` field of its issuer certificate. An implementation may compare an issuer name to a subject name by performing a binary comparison of the DER-encoded `tbsCertificate.issuer` and `tbsCertificate.subject` fields.

The sections below specify the required certificate chain, which must be used to verify each certificate that appears at the leaf node (at the bottom) in the PacketCable certificate trust hierarchy illustrated in [Figure 16-1](#).

Validity period nesting is not checked and intentionally not enforced. Thus, the validity period of a certificate need not fall within the validity period of the certificate that issued it.

MTA Device Certificate Hierarchy

The device certificate hierarchy exactly mirrors that of the DOCSIS1.1/BPI+ hierarchy. It is rooted at a CableLabs-issued PacketCable MTA Root Certificate, which is used as the issuing certificate of a set of manufacturer certificates. The manufacturer certificates are used to sign the individual device certificates.

The information contained in the following tables contains the PacketCable-specific values for the required fields according to RFC 2459. These PacketCable-specific values must be followed according to [Table 16-4](#), except that Validity Periods should be as given in the respective tables. If a required field is not specifically listed for PacketCable, then follow the guidelines in RFC 2459.

MTA Root Certificate

This certificate must be verified as part of a certificate chain containing the MTA Root Certificate, the MTA Manufacturer Certificate, and the MTA Device Certificate.

[Table 16-4](#) lists the values relevant to the MTA Root Certificate.

Table 16-4 MTA Root Certificate

| MTA Root Certificate | | |
|----------------------|--|---|
| Subject Name Form | PacketCable | Euro PacketCable |
| | C=US | C=BE |
| | O=CableLabs | O=tComLabs |
| | OU=PacketCable | OU=Euro-PacketCable |
| | CN=PacketCable Root Device Certificate Authority | CN=Euro-PacketCable Root Device Certificate Authority |
| Intended Usage | This certificate is used to sign MTA Manufacturer Certificates and is used by the KDC. This certificate is not used by the MTAs and thus does not appear in the MTA MIB. | |
| Signed By | Self-signed | |
| Validity Period | 20+ years. It is intended that the validity period is long enough that this certificate is never reissued. | |
| Modulus Length | 2048 | |
| Extensions | keyUsage[c,m](keyCertSign, cRLSign) subjectKeyIdentifier[n,m] basicConstraints[c,m](cA=true, pathLenConstraint=1) | |

MTA Manufacturer Certificate

This certificate must be verified as part of a certificate chain containing the MTA Root Certificate, the MTA Manufacturer Certificate, and the MTA Device Certificate. The state/province, city, and manufacturer's facility are optional attributes. A manufacturer may have more than one manufacturer's certificate, and there may exist one or more certificates per manufacturer. All certificates for the same manufacturer may be provided to each MTA either at manufacture time or during a field update. The MTA must select an appropriate certificate for its use by matching the issuer name in the MTA Device Certificate with the subject name in the MTA Manufacturer Certificate. If present, the authorityKeyIdentifier of the device certificate must match the subjectKeyIdentifier of the manufacturer certificate as described in RFC 2459. The *CompanyName* field that is present in O and CN may be different in the two instances.

Table 16-5 lists the values relevant to the MTA Manufacturer Certificate.

Table 16-5 MTA Manufacturer Certificates

| MTA Manufacturer Certificate | | |
|------------------------------|---|--|
| Subject Name Form | PacketCable C=US O=CableLabs OU=PacketCable CN=PacketCable Root Device Certificate Authority | Euro PacketCable C=Country of Manufacturer O=Company Name [stateOrProvinceName = State/Province] [localityName=City] OU=Euro-PacketCable [organizationalUnitName= Manufacturing Location] CN=Company Name Euro-PacketCable CA |
| Intended Usage | This certificate is issued to each MTA manufacturer and can be provided to each MTA as part of the secure code download as specified by the PacketCable Security Specification (either at manufacture time, or during a field update). This certificate appears as a read-only parameter in the MTA MIB. This certificate along with the MTA Device Certificate is used to authenticate the MTA device identity (MAC address) during authentication by the KDC. | |
| Signed By | MTA Root Certificate CA | |
| Validity Period | 20 years | |
| Modulus Length | 2048 | |
| Extensions | keyUsage[c,m](keyCertSign, cRLSign), subjectKeyIdentifier[n,m], authorityKeyIdentifier[n,m](keyIdentifier=subjectKeyIdentifier value from CA certificate), basicConstraints[c,m](cA=true, pathLenConstraint=0) | |

MTA Device Certificate

This certificate must be verified as part of a certificate chain containing the MTA Root Certificate, the MTA Manufacturer Certificate, and the MTA Device Certificate. The state/province, city, and manufacturer's facility are optional attributes. The MAC address must be expressed as six pairs of

hexadecimal digits separated by colons; for example, “00:60:21:A5:0A:23”. The alpha hexadecimal characters (A-F) must be expressed as uppercase letters. The MTA device certificate should not be replaced or renewed.

Table 16-6 lists the values relevant to the MTA Device Certificate.

Table 16-6 MTA Device Certificates

| MTA Device Certificate | | |
|-------------------------------|--|--|
| Subject Name Form | PacketCable C= <i>Country</i> O= <i>Company Name</i> [ST= <i>State/Province</i>] [L= <i>City</i>], OU=PacketCable [OU= <i>Product Name</i>] [OU= <i>Manufacturer's Facility</i>] CN= <i>MAC Address</i> | Euro PacketCable C= <i>Country of Manufacturer</i> O= <i>Company Name</i> [ST= <i>State/Province</i>] [L= <i>City</i>] OU=Euro-PacketCable [OU= <i>Product Name</i>] [OU= <i>Manufacturing Location</i>] CN= <i>MAC Address</i> |
| Intended Usage | This certificate is issued by the MTA manufacturer and installed in the factory. The provisioning server cannot update this certificate. This certificate appears as a read-only parameter in the MTA MIB. This certificate is used to authenticate the MTA device identity (MAC address) during provisioning. | |
| Signed By | MTA Manufacturer Certificate CA | |
| Validity Period | At least 20 years | |
| Modulus Length | 1024, 1536, or 2048 | |
| Extensions | keyUsage[c,o](digitalSignature, keyEncipherment) authorityKeyIdentifier[n,m](keyIdentifier= <i>subjectKeyIdentifier value from CA certificate</i>) | |

MTA Manufacturer Code Verification Certificates

Code Verification Certificate (CVC) specification for eMTAs must be identical to the DOCSIS 1.1 CVC, specified in DOCSIS specification SP-BPI+-I11-040407.

CableLabs Service Provider Certificate Hierarchy

The Service Provider Certificate Hierarchy is rooted at a CableLabs-issued CableLabs Service Provider Root certificate. That certificate is used as the issuing certificate of a set of service provider's certificates. The service provider's certificates are used to sign an optional local system certificate. If the local system certificate exists then that is used to sign the ancillary equipment certificates; otherwise, the ancillary certificates are signed by the Service Provider's CA.

The information contained in Table 16-7 contains the specific values for the required fields according to RFC 2459. These specific values must be followed. If a required field is not specifically listed, then the guidelines in RFC 2459 must be followed exactly.

CableLabs Service Provider Root Certificate

Before any Kerberos key management can be performed, an MTA and a KDC need to perform mutual authentication using the PKINIT extension to the Kerberos protocol. An MTA authenticates a KDC after it receives a PKINIT Reply message containing a KDC certificate chain. In authenticating the KDC, the MTA verifies the KDC certificate chain, including the KDC's Service Provider Certificate signed by the CableLabs Service Provider Root CA.

Table 16-7 lists the values relevant to the CableLabs Service Provider Root Certificate.

Table 16-7 CableLabs Service Provider Root Certificates

| CableLabs Service Provider Root Certificate | | |
|---|--|---|
| Subject Name Form | PacketCable C=US O=CableLabs CN=CableLabs Service Provider Root CA | Euro PacketCable C=BE O=tComLabs CN=tComLabs Service Provider Root CA |
| Intended Usage | This certificate is used to sign Service Provider CA certificates. This certificate is installed into each MTA at the time of manufacture or with a secure code download as specified by the PacketCable Security Specification and cannot be updated by the provisioning server. Neither this root certificate nor the corresponding public key appears in the MTA MIB. | |
| Signed By | Self-signed | |
| Validity Period | 20+ years. It is intended that the validity period is long enough that this certificate is never reissued. | |
| Modulus Length | 2048 | |
| Extensions | keyUsage[c,m](keyCertSign, cRLSign) subjectKeyIdentifier[n,m] basicConstraints[c,m](cA=true) | |

Service Provider CA Certificate

This is the certificate held by the service provider, signed by the CableLabs Service Provider Root CA. It is verified as part of a certificate chain that includes the CableLabs Service Provider Root Certificate, the Telephony Service Provider Certificate, an optional Local System Certificate, and an end-entity server certificate. The authenticating entities normally already possess the CableLabs Service Provider Root Certificate and it is not transmitted with the rest of the certificate chain.

The fact that a Service Provider CA Certificate is always explicitly included in the certificate chain allows a Service Provider the flexibility to change its certificate without requiring reconfiguration of each entity that validates this certificate chain (for example, an MTA validating a PKINIT Reply). Each time the Service Provider CA Certificate changes, its signature must be verified with the CableLabs Service Provider Root Certificate. However, a new certificate for the same Service Provider must preserve the same value of the OrganizationName attribute in the SubjectName. The *Company* field that is present in O and CN may be different in the two instances.

Table 16-8 lists the values relevant to the CableLabs Service Provider CA Certificate.

Table 16-8 CableLabs Service Provider CA Certificates

| CableLabs Service Provider Root Certificate | | |
|--|--|---|
| Subject Name Form | PacketCable | Euro PacketCable |
| | C= <i>Country</i> | C= <i>Country</i> |
| | O= <i>Company</i> | O= <i>Company</i> |
| | CN= <i>Company</i> CableLabs Service Provider CA | CN= <i>Company</i> tComLabs Service Provider CA |
| Intended Usage | This certificate is used to sign Service Provider CA certificates. This certificate is installed into each MTA at the time of manufacture or with a secure code download as specified by the PacketCable Security Specification and cannot be updated by the provisioning server. Neither this root certificate nor the corresponding public key appears in the MTA MIB. | |
| Signed By | Self-signed | |
| Validity Period | 20+ years. It is intended that the validity period is long enough that this certificate is never reissued. | |
| Modulus Length | 2048 | |
| Extensions | keyUsage[c,m](keyCertSign cRLSign), subjectKeyIdentifier[n,m] basicConstraints[c,m](cA=true) | |

Local System CA Certificates

A Service Provider CA may delegate the issuance of certificates to a regional Certification Authority called Local System CA (with the corresponding Local System Certificate). Network servers are allowed to move freely between regional Certification Authorities of the same Service Provider. Therefore, the MTA MIB does not contain any information regarding a Local System Certificate (which might restrict an MTA to KDCs within a particular region).

Table 16-9 lists the values relevant to the Local System CA Certificate.

Table 16-9 Local System CA Certificates

| Local System CA Certificate | | |
|------------------------------------|--|---|
| Subject Name Form | PacketCable | Euro PacketCable |
| | C= <i>Country</i> | C= <i>Country</i> |
| | O= <i>Company</i> | O= <i>Company</i> |
| | OU= <i>Local System Name</i> | OU= <i>Local System Name</i> |
| | CN= <i>Company</i> CableLabs Local System CA | CN= <i>Company</i> tComLabs Local System CA |
| Intended Usage | A Service Provider CA may delegate the issuance of certificates to a regional Certification Authority called a Local System CA (with the corresponding Local System Certificate). Network servers are allowed to move freely between regional Certification Authorities of the same Service Provider. Therefore, the MTA MIB does not contain any information regarding a Local System Certificate (which might restrict an MTA to KDCs within a particular region). | |

Table 16-9 Local System CA Certificates (continued)

| Local System CA Certificate | |
|-----------------------------|---|
| Signed By | Service Provider CA Certificate |
| Validity Period | 20 years. |
| Modulus Length | 1024, 1536, 2048 |
| Extensions | keyUsage[c,m](keyCertSign, cRLSign), subjectKeyIdentifier[n,m], authorityKeyIdentifier[n,m](keyIdentifier= <i>subjectKeyIdentifier value from CA certificate</i>), basicConstraints[c,m](cA=true, pathLenConstraint=0) |

Operational Ancillary Certificates

All these are signed by either the Local System CA or by the Service Provider CA. Other ancillary certificates may be added to this standard at a later time.

KDC Certificate

This certificate must be verified as part of a certificate chain containing the CableLabs Service Provider Root Certificate, the Service Provider CA Certificate, and the Ancillary Device Certificates. The PKINIT specification requires the KDC certificate to include the subjectAltName v.3 certificate extension, the value of which must be the Kerberos principal name of the KDC.

[Table 16-10](#) lists the values relevant to the KDC Certificate.

Table 16-10 KDC Certificates

| Key Distribution Center Certificate | | |
|-------------------------------------|--|--|
| Subject Name Form | PacketCable C= <i>Country</i> O= <i>Company</i> , [OU= <i>Local System Name</i>] OU= CableLabs Key Distribution Center CN= <i>DNS Name</i> | Euro PacketCable C= <i>Country</i> O= <i>Company</i> [OU= <i>Local System Name</i>] OU=tComLabs Key Distribution Center CN= <i>DNS Name</i> |
| Intended Usage | To authenticate the identity of the KDC server to the MTA during PKINIT exchanges. This certificate is passed to the MTA inside the PKINIT replies and is therefore not included in the MTA MIB and cannot be updated or queried by the provisioning server. | |
| Signed By | Service Provider CA Certificate or Local System Certificate | |
| Validity Period | 20 years | |
| Modulus Length | 1024, 1536, or 2048 | |
| Extensions | keyUsage[c,o](digitalSignature)authorityKeyIdentifier[n,m](keyIdentifier= <i>subjectKeyIdentifier value from CA certificate</i>)subjectAltName[n,m] | |

Delivery Function (DF)

This certificate must be verified as part of a certificate chain containing the CableLabs Service Provider Root Certificate, the Service Provider CA Certificate, and the Ancillary Device Certificates. This certificate is used to sign phase 1 IKE intradomain exchanges between DFs (which are used in electronic surveillance). Although the Local System Name is optional, it is required when the Local System CA signs this certificate. The IP address must be specified in standard dotted-quad notation; for example, 245.120.75.22.

Table 16-11 lists the values relevant to the DF Certificate.

Table 16-11 DF Certificates

| DF Certificate | | |
|-------------------|---|---|
| Subject Name Form | PacketCable | Euro PacketCable |
| | C=Country | C=Country |
| | O=Company | O=Company |
| | [OU=Local System Name] | [OU=Local System Name] |
| | OU=PacketCable Electronic Surveillance | OU=Euro-PacketCable Electronic Surveillance |
| | CN=IP address | CN=IP address |
| Intended Usage | To authenticate IKE key management, used to establish IPsec Security Associations between pairs of DFs. These Security Associations are used when a subject that is being legally wiretapped forwards the call, and event messages containing call information have to be forwarded to a new wiretap server (DF). | |
| Signed By | Service Provider CA Certificate or Local System CA Certificate | |
| Validity Period | 20 years | |
| Modulus Length | 2048 | |
| Extensions | keyUsage[c,o](digitalSignature) authorityKeyIdentifier[n,m](keyIdentifier=subjectKeyIdentifier value from CA certificate) subjectAltName[n,m] (dNSName=DNSName) | |

PacketCable Server Certificates

These certificates must be verified as part of a certificate chain containing the CableLabs Service Provider Root Certificate, the Service Provider Certificate, the Local System Operator Certificate (if used), and the Ancillary Device Certificates. These certificates are used to identify various servers in the PacketCable system. For example, they may be used to sign phase 1 IKE exchanges or to authenticate a PKINIT exchange. Although the Local System Name is optional, it is required when the Local System CA signs this certificate. 2IP address values must be specified in standard dotted decimal notation; for example, 245.120.75.22. DNS Name values must be specified as a fully qualified domain name (FQDN); for example, device.packetcable.com.

Table 16-12 lists the values relevant to the PacketCable Server Certificate.

Table 16-12 PacketCable Server Certificates

| PacketCable Server Certificates | | |
|--|--|---|
| | PacketCable | Euro PacketCable |
| Subject Name Form | <p>C=<i>Country</i></p> <p>O=<i>Company</i></p> <p>OU=PacketCable</p> <p>OU=[<i>Local System Name</i>]</p> <p>OU=<i>Sub-System Name</i></p> <p>CN=<i>Server Identifier[:Element ID]</i></p> <p>The value of <i>Server Identifier</i> must be the server's FQDN or its IP address, optionally followed by a colon (:) and an Element ID with no spaces before or after the colon.</p> <p><i>Element ID</i> is the identifier that appears in billing event messages. It must be included in the certificate of every server that is capable of generating event messages. This includes a CMS, CMTS, and MGC. [8] defines the Element ID as a 5-octet right-justified, space-padded, ASCII-encoded, numerical string. When converting the Element ID for use in a certificate, spaces must be converted to ASCII zeros (0x48).</p> <p>For example, a CMTS with Element ID 311 and IP address 123.210.234.12 will have a common name "123.210.234.12: 00311".</p> <p>The value of <i>Sub-System Name</i> must be one of the following:</p> <ul style="list-style-type: none"> • For Border Proxy: bp • For Cable Modem Termination System: cmts • For Call Management Server: cms • For Media Gateway: mg • For Media Gateway Controller: mgc • For Media Player: mp • For Media Player Controller: mpc • For Provisioning Server: ps • For Record Keeping Server: rks • For Signaling Gateway: sg | <p>C=<i>Country</i></p> <p>O=<i>Company</i></p> <p>OU=Euro-PacketCable</p> <p>[OU=<i>Local System Name</i>]</p> <p>OU=<i>Sub-system Name</i></p> <p>CN=<i>Server Identifier[:Element ID]</i></p> <p>Refer to [PKT-SP-SEC-IO8-030415] for additional specifications on the commonName.</p> |
| Intended Usage | These certificates are used to identify various servers in the PacketCable system. For example, they may be used to sign phase 1 IKE exchanges or to authenticate a device in a PKINIT exchange. | |
| Signed By | Telephony Service Provider Certificate or Local System Certificate | |

Table 16-12 PacketCable Server Certificates (continued)

| PacketCable Server Certificates | |
|--|--|
| Validity Period | Set by MSO policy |
| Modulus Length | 2048 |
| Extensions | keyUsage[c,o](digitalSignaturekeyEncipherment) authorityKeyIdentifier[n,m](keyIdentifier= <i>subjectKeyIdentifier</i> value from CA cert) subjectAltName[n,m](dNSName= <i>DNSName</i> iPAddress= <i>IP AddressName</i>) The keyUsage tag is optional. When it is used it must be marked as critical. Unless otherwise described below, the subjectAltName extension must include the corresponding name value as specified in the CN field of the subject. |

The CN attribute value for CMS certificates must be the Element ID. The subjectAltName extension must include either the IP address or the FDQN of the CMS. The CN attribute value for CMTS certificates must be the Element ID. The subjectAltName extension must include either the IP address or the FDQN of the CMTS.

The CN attribute value for MGC certificates must be the Element ID. The subjectAltName extension must include either the IP address or the FDQN of the MGC.

Certificate Revocation

Out of scope for PacketCable at this time.

Code Verification Certificate Hierarchy

The CableLabs Code Verification Certificate (CVC) PKI is generic in nature and applicable to all CableLabs projects needing CVCs. This means the basic infrastructure can be re-used for every CableLabs project. There may be differences in the end-entity certificates required for each project, but in the cases where end-entity certificates overlap, one end-entity certificate could be used to support the overlap.

The CableLabs CVC hierarchy does not apply to eMTAs.

Common CVC Requirements

The following requirements apply to all Code Verification Certificates:

- Certificates must be DER encoded.
- Certificates must be version 3.
- Certificates must include the extensions that are specified in the following tables and must *not* include any additional extensions.
- The public exponent must be F4 (65537 decimal).

CableLabs Code Verification Root CA Certificate

This certificate must be validated as part of the certificate chain containing the CableLabs Code Verification Root CA Certificate, the CableLabs Code Verification CA, and the Code Verification Certificates. See [Certificate Validation, page 16-19](#), for additional information on how to validate certificates.

[Table 16-13](#) lists the values relevant to the CableLabs Code Verification Root CA Certificate.

Table 16-13 CableLabs Code Verification Root CA Certificates

| CableLabs Code Verification Root CA Certificate | | |
|---|--|--|
| Subject Name Form | PacketCable C=US O=CableLabs CN=CableLabs CVC Root CA | Euro PacketCable C = BE O = tComLabs CN = tComLabs CVC Root CA |
| Intended Usage | This certificate is used to sign Code Verification CA Certificates. This certificate must be included in the S-MTA's nonvolatile memory at manufacture time. | |
| Signed By | Self-signed | |
| Validity Period | 20+ years | |
| Modulus Length | 2048 | |
| Extensions | KeyUsage [c,m] (keyCertSign, cRL Sign) subjectkeyidentifier [n,m] basicConstraints [c,m](cA=true) | |

CableLabs Code Verification CA Certificate

The CableLabs Code Verification CA Certificate must be validated as part of a certificate chain containing the CableLabs Code Verification Root CA Certificate, the CableLabs Code Verification CA Certificate, and the Code Verification Certificate. See [Certificate Validation, page 16-19](#), for additional information on how to validate certificates. There may be more than one CableLabs Code Verification CA. An S-MTA must support one CableLabs CVC CA at a time.

[Table 16-14](#) lists the values relevant to the CableLabs Code Verification CA Certificate.

Table 16-14 CableLabs Code Verification CA Certificates

| CableLabs Code Verification CA Certificate | | |
|--|--|---|
| Subject Name Form | PacketCable C=US O=CableLabs CN=CableLabs CVC CA | Euro PacketCable C = BE O = tComLabs CN = tComLabs CVC CA |
| Intended Usage | This certificate is issued to CableLabs by the CableLabs Code Verification Root CA. This certificate issues Code Verification Certificates. This certificate must be included in the S-MTA's nonvolatile memory at manufacture time. | |
| Signed By | CableLabs Code Verification Root CA | |
| Validity Period | Set by CableLabs policy | |

Table 16-14 CableLabs Code Verification CA Certificates (continued)

| CableLabs Code Verification CA Certificate | |
|---|--|
| Modulus Length | 2048 |
| Extensions | KeyUsage [c,m] (keyCertSign, cRL Sign) subjectKeyIdentifier [n,m] authorityKeyIdentifier [n,m] basicConstraints [c,m](cA=true, pathLenConstraint=0) |

Manufacturer Code Verification Certificate

The CableLabs Code Verification CA issues this certificate to each authorized Manufacturer. It is used in the policy set by the cable operator for secure software download.

[Table 16-15](#) lists the values relevant to the Manufacturer Code Verification Certificate.

Table 16-15 Manufacturer Code Verification Certificates

| Manufacturer Code Verification Certificate | | |
|---|--|--|
| Subject Name Form | PacketCable C= <i>Country</i> O= <i>Company Name</i> [ST= <i>State/Province</i>] [L= <i>City</i>] CN= <i>Company Name</i> Mfg CVC | Euro PacketCable C= <i>Country</i> O= <i>Company Name</i> [ST= <i>state/province</i>] [L= <i>City</i>] CN= <i>Company Name</i> Mfg CVC |
| Intended Usage | The CableLabs Code Verification CA issues this certificate to each authorized Manufacturer. It is used in the policy set by the cable operator for secure software download. | |
| Signed By | CableLabs Code Verification CA | tComLabs Code Verification CA Certificate |
| Validity Period | Set by CableLabs policy | |
| Modulus Length | 1024, 1536, 2048 | |
| Extensions | extendedKeyUsage [c,m] (id-kp-codeSigning) authorityKeyIdentifier [n,m] | |

The Company Name in the Organization may be different than the Company Name in the Common Name.

Service Provider Code Verification Certificate

The Service Provider Code Verification Certificate must be validated as part of a certificate chain containing the CableLabs Code Verification Root CA Certificate, the CableLabs Code Verification CA Certificate, and the Service Provider Code Verification Certificate. Refer to [Certificate Validation, page 16-19](#), for additional information on how to validate certificates.

Table 16-16 lists the values relevant to the Service Provider Code Verification Certificate.

Table 16-16 Service Provider Code Verification Certificates

| Service Provider Code Verification Certificate | | |
|---|--|---|
| Subject Name Form | C= <i>Country</i> O= <i>Company Name</i> [ST= <i>State/Province</i>] [L= <i>City</i>] CN= <i>Company Name</i> Service Provider CVC | C= <i>Country</i> O= <i>Company Name</i> [ST= <i>State/Province</i>] [L= <i>City</i>] CN= <i>Company Name</i> Service Provider CVC |
| Intended Usage | The CableLabs Code Verification CA issues this certificate to each authorized Service Provider. It is used in the policy set by the cable operator for secure software download. | |
| Signed By | CableLabs Code Verification CA | tComLabs Code Verification CA Certificate |
| Validity Period | Set by CableLabs policy | |
| Modulus Length | 1024, 1536, 2048 | |
| Extensions | extendedKeyUsage [c,m] (id-kp-codeSigning) authorityKeyIdentifier [n,m] | |

The Company Name in the Organization may be different than the Company Name in the Common Name.

Certificate Revocation Lists for CVCs

The S-MTA is not required to support Certificate Revocation Lists (CRLs) for CVCs.

