



INDEX

A

accounts

- applications billing server [B-4](#)
- casuser [B-10](#)
- Microsoft SQLServer CDR database [B-9](#)
- NAM web administrator [C-1](#)
- smuser [B-4](#)
- Windows [B-10](#)

ACS [A-1](#)

adding

- call category name [3-29](#)
- Cisco 1040 [4-7](#)
- credentials
 - NAM [3-8](#)
 - Unified Communications Manager [3-7](#)
- gateway code [3-30](#)
- TFTP server [4-2](#)
- threshold group
 - CVTQ [5-4](#)
 - sensor [5-9](#)

adjusted packet loss, definition [2-11](#)

application billing server. *See* accounts.

archiving call metrics [4-4](#)

authentication

- Microsoft SQLServer user accounts [B-9](#)
- SQL [B-8](#)
- Windows [B-10](#)

AXL

- Cisco Web Service, activating [B-5](#)
- standard AXL API access privilege [3-9](#)

B

backing up

- call metrics files [6-5](#)
- database [6-3](#)

bandwidth [2-31](#)

C

call

- failure, defined [2-28](#)
- metrics files
 - archiving, enabling and disabling [4-4](#)
 - maintaining [6-5](#)
- release code
 - documentation for [2-31](#)
 - reported by cluster [2-20, 2-31](#)
- signaling start time, reported by cluster [2-19, 2-31](#)
- success, defined [2-28](#)
- termination cause
 - documentation for [2-31](#)
 - reported by cluster [2-20, 2-31](#)

call admission control location [2-31](#)

call category

- name
 - Conference Bridge [3-19](#)
 - H.323 Gateway Incoming [3-20](#)
 - H.323 Gateway Outgoing [3-20](#)
 - H.323 Trunk Incoming [3-20](#)
 - H.323 Trunk Outgoing [3-20](#)
 - ICT GateKeeper Controlled [3-19](#)
 - ICT Non-Gatekeeper Controlled [3-19](#)
 - Internal [3-20](#)

- MGCP Gateway Incoming [3-20](#)
- MGCP Gateway Outgoing [3-20](#)
- OnNet H.323 Trunk [3-20](#)
- OnNet SIP Trunk [3-20](#)
- SIP Trunk Incoming [3-20](#)
- SIP Trunk Outgoing [3-20](#)
- Tandem [3-20](#)
- Unity Voicemail [3-19](#)
- Unknown [3-20](#)
 - user-defined, adding [3-29](#)
 - system-defined [3-19](#)
 - types [3-28](#)
- call category type definition
 - Conference [3-19](#)
 - ICT [3-19](#)
 - Internal [3-20](#)
 - Tandem [3-20](#)
 - Unknown [3-20](#)
 - VG/Trunk-Incoming [3-20](#)
 - VG/Trunk-Outgoing [3-20](#)
 - Voicemail [3-19](#)
- call class report filter [2-24](#)
- CallManager. *See* Cisco Unified Communications Manager (Unified Communications Manager)
- call termination type report filter [2-24](#)
- cautions
 - CDRs not written [B-2](#), [B-8](#), [B-9](#)
 - cluster ID, space in [3-9](#)
 - reports not exported [3-17](#)
 - smuser password, updating [3-35](#)
 - zero duration flag, do not enable [B-3](#)
- CDR database
 - credential status [3-4](#)
 - SQL authentication [B-9](#)
- CDRM database [3-4](#)
- Cisco 1040
 - diagnostic information [4-15](#)
 - editing [4-10](#)
 - failover [4-17](#)
 - registration [4-16](#)
 - resetting [4-10](#)
 - time synchronization [4-12](#)
 - web interface [4-14](#)
- Cisco Secure ACS [A-1](#)
- Cisco Unified Communications Manager (Unified Communications Manager)
 - call data status [3-2](#)
 - configuration collection status [3-2](#)
 - configuring [B-1](#)
 - credentials [3-2](#)
 - version used [3-14](#)
- Cisco Unified Operations Manager
 - IP address, entering in Service Monitor [3-35](#)
 - trap receiver, configuring as [3-2](#)
- Cisco Unity, call category for [3-19](#)
- Cisco Unity Connection, call category for [3-19](#)
- cluster, dial plan assigned to [3-30](#)
- cluster ID
 - configuring [B-4](#)
 - duplicate, avoiding [3-9](#)
 - See also* Cisco Unified Communications Manager (Unified Communications Manager)
- codecs
 - in MOS violation SNMP trap [D-3](#)
 - reports, filtered by [2-3](#), [2-14](#), [2-21](#)
 - thresholds, setting
 - for CVTQ groups [5-4](#)
 - for sensor groups [5-9](#)
 - global values [5-3](#)
- concealment
 - ratio [2-20](#)
 - seconds [2-20](#)
 - severely concealed seconds [2-20](#)
- Conference Bridge [3-19](#)
- Conference call category type, defined [3-19](#)

- configuration collection
 - impact of [3-6](#)
 - initiating [3-6](#)
 - status of [3-3](#)
- configuring
 - Cisco 1040 [4-9, 4-10](#)
 - default configuration file [4-3](#)
 - primary Service Monitor [4-3](#)
 - secondary Service Monitor [4-3](#)
 - DHCP for Cisco 1040 [4-5](#)
 - DNS [3-2, 4-5](#)
 - NAM [C-1](#)
 - Service Monitor
 - as a billing server [B-4](#)
 - initially [2-2](#)
 - SNMP service [6-10](#)
 - trunk utilization [3-33](#)
 - Unified Communications Manager [B-1](#)
- credentials, NAM
 - adding [3-8](#)
 - deleting [3-3, 3-13](#)
 - editing [3-11](#)
 - verifying [3-3](#)
- credentials, Unified Communications Manager
 - adding [3-7](#)
 - deleting [3-3, 3-13](#)
 - editing [3-11](#)
 - verifying [3-2](#)
- CVTQ threshold group
 - adding [5-4](#)
 - deleting [5-8](#)
- govr password, changing [6-5](#)
- Service Monitor, purging [6-1](#)
- data collection status
 - call data [3-3](#)
 - device type [3-3](#)
 - gateway [3-3](#)
- data purge schedule, updating [6-2](#)
- debugging, enabling [6-6](#)
- deleting
 - call metrics archive files [6-5](#)
 - Cisco1040 [4-11](#)
 - credentials [3-13](#)
 - files from TFTP server [4-11](#)
 - TFTP server from Service Monitor [4-3](#)
 - threshold groups [5-8, 5-12](#)
- device database, SQL authentication [B-9](#)
- device type,data collection status [3-3](#)
- DHCP, configuring for Cisco 1040 [4-5](#)
- diagnostic information, Cisco 1040 [4-15](#)
- diagnostic report
 - CVTQ [2-14](#)
 - sensor [2-3](#)
- dial pattern
 - adding [3-27](#)
 - definitions [3-27](#)
 - deleting [3-28](#)
 - editing [3-27](#)
- dial pattern, default
 - International [3-24](#)
 - Local [3-24](#)
 - Long Distance [3-24](#)
 - Toll Free [3-24](#)
- dial plan
 - adding [3-23](#)
 - cluster, assigning to [3-30](#)
 - default [3-24](#)
 - default, understanding [3-24](#)
 - deleting [3-26](#)
 - editing [3-25](#)

D

- daemon manager, starting and stopping [6-15](#)
- database
 - backup, performing [6-3](#)
 - cmf password, changing [6-13](#)
 - directory and virus scanning software [A-3](#)

NANP [3-24](#)

directory number

entering, as endpoint [5-11](#)

wildcard

in report definition [2-6](#)

in threshold definition [5-11](#)

disabling

call metrics archiving [4-4](#)

debugging [6-6](#)

DN. *See* directory number

DNS configuration

and Cisco 1040s [4-5](#)

and Unified Communications Manager [3-2](#)

documentation [i-x](#)

E

editing

Cisco 1040

configuration [4-9, 4-10](#)

default configuration [4-17](#)

NAM credentials [3-11](#)

threshold groups

CVTQ [5-4](#)

sensor [5-9](#)

Unified Communications Manager credentials [3-11](#)

enabling

call metrics archiving [4-4](#)

debugging [6-6](#)

endpoint

IP address [5-11](#)

wildcard

in report definition [2-6](#)

in threshold definition [5-6, 5-7](#)

exporting

CSV files, limits [2-3, 3-35](#)

most-impacted endpoints reports, automatically [3-16](#)

reports, manually [2-3](#)

F

failover, Cisco 1040 [4-17](#)

file, sensor-specific configuration [4-10](#)

filenames

call metrics archive [4-17](#)

Cisco 1040 configuration

default [4-16](#)

sensor-specific [4-16](#)

Cisco 1040 sensor image [4-8](#)

history log [6-6](#)

reports, automatically generated [3-18](#)

syslog [6-6](#)

G

gateway

data collection status [3-3](#)

finding [3-31](#)

gateway code

configuration report [3-32](#)

configuring [3-30](#)

dial pattern for [3-27](#)

gateway, finding to configure [3-31](#)

updating [3-32](#)

global thresholds [5-3](#)

restoring default [5-3](#)

updating [5-3](#)

H

H.323 Gateway Incoming [3-20](#)

H.323 Gateway Outgoing [3-20](#)

H.323 Trunk Incoming [3-20](#)

H.323 Trunk Outgoing [3-20](#)

hostname, changing [6-12, 6-15](#)

HTTP

server, configuring for NAM [C-1](#)

username and password [3-11](#)

HTTPS

- server, configuring for NAM [C-1](#)
- username and password [3-11](#)

I

ICT call category type, defined [3-19](#)

ICT GateKeeper Controlled [3-19](#)

ICT Non-GateKeeper Controlled [3-19](#)

Internal

- call category name [3-20](#)
- call category type, defined [3-20](#)

International

- call category type [3-28](#)
- default dial pattern [3-24](#)

IP address

- endpoint, entering as [5-11](#)
- Operations Manager [3-35](#)
- Service Monitor system, changing [6-15](#)
- wildcard
 - in report definition [2-6](#)
 - in threshold definition [5-6, 5-7](#)

J**jitter**

- reported by cluster [2-20](#)
- reported by sensor [2-11](#)

K

keepalive [4-17](#)

K-factor

- and software versions [1-3](#)
- endpoints that support [1-2](#)
- See also* CVTQ

known phone count

- updating [3-16](#)

L

latency, reported by cluster [2-20](#)

license limit [3-14](#)

Local

- call category type [3-28](#)
- default dial pattern [3-24](#)

location [2-31](#)

log files [6-5](#)

login page

- NAM software [3-2](#)
- Service Monitor [1-6](#)

Long Distance

- call category type [3-28](#)
- default dial pattern [3-24](#)

M

MGCP Gateway Incoming [3-20](#)

MGCP Gateway Outgoing [3-20](#)

MGCP voice gateway, configuring [B-12](#)

MIBs

- system application, log file [6-12](#)
- used by Service Monitor [D-1](#)

mixed mode, definition [B-7](#)

MOS

- reported by cluster [2-19](#)
- reported by sensor
 - average [2-10](#)
 - minimum [2-10](#)

most-impacted endpoints report

- CVTQ [2-22](#)
- exporting automatically [3-16](#)
- sensor [2-21](#)
- settings, configuring [3-16](#)

N

NAM. *See* Network Analysis Module.

NANP [3-24](#)

Network Analysis Module

configuring [C-2](#)

login page, launching [3-2](#)

supported hardware and software [1-3](#)

North American Numbering Plan [3-23](#)

notification

enabling [6-7](#)

port blocking, and [6-8](#)

process restart [6-7](#)

recipient, configuring [6-8](#)

SMTP server for [6-8](#)

NTP server [C-3](#)

O

OffNet

call definition [3-22](#)

report filter [2-24](#)

OnNet

call category type, defined [3-20](#)

call definition [3-22](#)

report filter [2-24](#)

OnNet H.323 Trunk [3-20](#)

OnNet SIP Trunk [3-20](#)

Operations Manager. *See* Cisco Unified Operations Manager

P

packet loss

reported by cluster [2-20](#)

reported by sensor

actual [2-11](#)

adjusted [2-11](#)

percent [2-11](#)

password

casuser [B-8](#)

CDR database [3-7, B-9](#)

cmf database [6-13](#)

device database [3-7](#)

Service Monitor database [6-5](#)

SFTP [B-4](#)

smuser [B-6](#)

phone count

understanding [3-14](#)

phones

license limit [3-14](#)

total count [3-14](#)

updating known phone count [3-16](#)

popup blockers, disabling [A-3](#)

port

blocking and e-mail [6-8](#)

Service Monitor web server [1-6](#)

SSL [1-6](#)

primary Service Monitor

configuring default [4-3](#)

updating [4-9, 4-10](#)

viewing [4-12](#)

processes

Service Monitor [6-9, 6-10](#)

starting and stopping [6-9](#)

properties, configuring

CSV export limit [3-35](#)

data purge [6-2](#)

diagnostic report wait [3-35](#)

low-volume schedule [6-2](#)

Provisioning Manager synchronization [3-11](#)

Q

QOVRDbEngine process [6-9](#)

QOVRDbMonitor process [6-9](#)

QOVRMultitProcLogger process [6-9](#)

QOVR process [6-9](#)

R

- registering Cisco 1040 [4-16](#)
- reports
 - accessing more than 2,000 records [2-7](#)
 - configuring
 - number of CSV records to export [3-35](#)
 - number of endpoints for [3-16](#)
 - search time [3-35](#)
 - filenames, automatically generated [3-18](#)
 - most-impacted endpoints, exporting [3-16](#)
- resetting Cisco 1040 [4-10](#)
- restoring database [6-4](#)
- resuming
 - sensor for monitoring [3-15](#)
 - Unified Communications Manager cluster for monitoring [3-15](#)
- RSPAN port, reconfiguring [4-11](#)

S

- schedule
 - data purge, updating [6-2](#)
 - low-volume
 - updating [6-2](#)
- secondary Service Monitor
 - configuring [4-3](#)
 - updating [4-9, 4-10](#)
 - viewing [4-12](#)
- security
 - certificate [6-14](#)
 - configuring [A-1](#)
 - SNMP queries [6-12](#)
- sensor
 - diagnostic report [2-3](#)
 - most-impacted endpoints report [2-21](#)
 - SNMP trap
 - reconnect [D-6](#)
 - unreachable [D-5](#)
- severely concealed seconds, definition [2-20](#)
- SFTP
 - directory path [B-4](#)
 - password [B-4](#)
 - server process [6-9](#)
- short call, definition [2-19](#)
- SIP Trunk Incoming [3-20](#)
- SIP Trunk Outgoing [3-20](#)
- SMTP server
 - configuring for notifications [6-8](#)
 - configuring for report export [3-16](#)
 - message [3-2](#)
- smuser
 - password, updating [B-6](#)
 - username [B-4](#)
- SNMP
 - MIBs, Service Monitor support for [E-1](#)
 - queries, configuring security for [6-12](#)
 - trap details [D-1](#)
 - trap receivers [3-2](#)
 - using to manage Service Monitor [6-10](#)
 - Windows service [6-10](#)
- SPAN port, reconfiguring [4-11](#)
- SQL authentication on Unified Communications Manager [B-9](#)
- SSRC [2-11, 2-13](#)
- starting
 - daemon manager [6-15](#)
 - Service Monitor
 - processes [6-9](#)
 - user interface [1-6](#)
- stopping
 - daemon manager [6-15](#)
 - QOVR process [4-6](#)
 - Service Monitor processes [6-9](#)
- stream
 - correlation [2-11](#)
 - details [2-14](#)
 - summary [2-12](#)

supported

- endpoints [1-2](#)
- NAM software and hardware [1-3](#)
- Unified Communications Manager software [1-2](#)

suspending

- sensor from monitoring [3-15](#)
- Unified Communications Manager cluster from monitoring [3-15](#)

switch

- IP address for [4-14](#)
- port, shutting [4-11](#)

synchronization, Provisioning Manager [3-11](#)system application MIB implementation [E-1](#)

- resource MIB tables [E-1](#)
 - element status information [E-4](#)
 - installed elements [E-2](#)
 - installed packages [E-2](#)
 - package status information [E-3](#)
 - process map [E-7](#)
 - scalar variables [E-6](#)
 - status of elements previously run [E-5](#)
 - status of packages previously run [E-5](#)
- sample MIB walk [E-7](#)

T

Tandem

- call category name [3-20](#)
- call category type, defined [3-20](#)

termination cause, reported by cluster [2-20, 2-31](#)

TFTP server

- adding to Service Monitor [4-2](#)
- deleting from Service Monitor [4-3](#)
- Unified Communications Manager as a [4-2](#)

TFTP service

- CWCS, disabling [6-9](#)
- Unified Communications Manager, restarting [B-13](#)

thresholds

- CVTQ

- group [5-4](#)

- priority [5-8](#)

global [5-3](#)

sensor

- group [5-9](#)

- priority [5-12](#)

time

- synchronization [4-12, C-3](#)

- updating on the server [6-15](#)

Toll Free

- call category type, defined [3-28](#)
- default dial pattern [3-24](#)

toll-free

- call, dial pattern for [3-27](#)
- numbers, configuring [3-22](#)

TOS [2-13](#)

trap receiver

- configuring [3-2](#)
- default port number for [3-2](#)
- Operations Manager, as a [3-2](#)

traps, SNMP

- from Cisco 1040s, suppressing [4-4](#)
- MOS violation [D-1](#)
- sensor reconnect [D-6](#)
- sensor unreachable [D-5](#)

trunk utilization, configuration [3-33](#)**U**Unavailable device type, reason for [2-9](#)Unity Voicemail [3-19](#)

Unknown

- call category name [3-20](#)
- call category type, defined [3-20](#)

updating

- server time [6-15](#)

thresholds

- CVTQ group [5-6](#)
- global [5-3](#)

sensor group [5-10](#)
users, configuring [A-1](#)

V

VAD

effect on MOS [2-18, 2-29](#)
voice gateway configuration [B-12](#)
verifying credentials [3-3](#)
versions, Unified Communications Manager [3-7, B-1](#)
VG/Trunk-Incoming call category type, defined [3-20](#)
VG/Trunk-Outgoing call category type, defined [3-20](#)
viewing
 Cisco 1040 configuration
 in Service Monitor [4-12](#)
 on Cisco 1040 [4-14](#)
 on TFTP server [4-13](#)
virus scanning software [A-3](#)
voice gateway
 Detailed Device View, launching for [2-9](#)
 MGCP, configuring [B-12](#)
 MOS calculation on [1-2](#)
 VAD, configuring [B-12](#)
Voicemail call category type, defined [3-19](#)

W

warning, Cisco 1040 safety information [4-16](#)
Windows authentication on Unified Communications Manager [B-8](#)
Windows SNMP Service [6-11](#)

