



A

- accessing LMS server [6-51](#)
- application scaling numbers [3-12](#)

B

- before installation [3-2](#)

C

- cautions, significance of [i-xvi](#)
- cautions regarding
 - daemon manager, starting and stopping [8-2](#)
- Cisco Prime LMS 4.1
 - install and upgrade behavior [1-2](#)
- Cisco Prime LMS 4.2
 - processes [6-50](#)
 - product overview [1-1](#)
- concurrent users [3-15](#)
- configuring SNMP Traps [7-23](#)

D

- database password rules [A-4](#)
- data migration
 - Inventory, Config and Image Management [8-18](#)
 - normal backup [7-2](#)
 - overview [1-14](#)
 - scope [7-2](#)
 - selective backup [7-2](#)
- debugging CAM [8-17](#)
- device credentials, required [2-27](#)

- device package updates [1-18](#)
- disabling FIPS [2-19](#)

E

- enabling FIPS [2-19](#)
- evaluation mode [3-8](#)

F

- FIPS, enabling/disabling [2-19](#)

H

- high availability, setting up
 - on Windows [4-5](#)
 - overview [4-1](#)
 - system requirements [4-4](#)
 - Veritas components [4-3](#)

I

- install, preparing to [3-1](#)
- installation
 - new installations
 - password rules for [A-4](#)
 - notes
 - general [3-2](#)
 - Solaris [3-3](#)
 - Windows [3-4](#)
 - prerequisites [2-1](#)
 - terms and definitions [3-1](#)
- installation terms

Admin password [3-1](#)
 Application database password [3-1](#)
 Cisco.com user ID and password [3-2](#)
 installation terms overview
 Self signed certificate [3-1](#)
 installing RSAC (see RSAC) [C-1](#)
 Integration Utility
 supported NMS [1-16](#)

L

license file [3-7](#)
 license file, installing [3-11](#)
 license information [3-5](#)
 licensing LMS 4.2
 evaluation license [3-8](#)
 license file [3-7](#)
 NFR license [3-10](#)
 product ordering and PAK [3-5](#)
 LMS
 AAA Methods [7-25](#)
 before uninstalling [6-54](#)
 concurrent users [3-15](#)
 license information [3-5](#)
 new installation [6-1](#)
 prerequisites [2-1](#)
 reinstallation [6-56](#)
 uninstallation
 Solaris [6-54](#)
 Windows [6-55](#)
 uninstalling [6-54](#)
 logging into LMS [6-53](#)

M

messages, installation [8-4](#)
 migration errors, troubleshooting
 Common Services [8-17](#)

Device Performance Management [8-23](#)
 Fault Management [8-21](#)
 IPSLA Performance Management [8-22](#)
 Network Topology, Layer 2 Services and User Tracking [8-19](#)
 Migration From 2.6 or 2.6 SP1
 Remote [7-16](#)
 Migration From LMS 3.0 or LMS 3.0 December 2007 Update or LMS 3.1
 Remote [7-16](#)
 Migration Scope
 CiscoWorks Assistant [7-13](#)
 migration scope
 CiscoView [7-11](#)
 Common Services [7-3](#)
 Device Performance Management [7-11](#)
 Fault Management [7-9](#)
 Inventory, Config and Image Management [7-6](#)
 IPSLA Performance Management [7-10](#)
 Network Topology, Layer 2 Services and User Tracking [7-5](#)
 Portal [7-13](#)

N

new features
 Template Center [1-14](#)
 third-party software and tool changes [1-14](#)
 new installation
 silent mode [6-43](#)
 Solaris [6-37](#)
 verifying installation [6-49](#)
 Windows [6-40](#)
 NFR license [3-10](#)

P

PAK [3-5](#)
 password information

- database password [A-4](#)
- new installation rules [A-4](#)
- port usage [2-21](#)
- post-upgrade activities, CS [7-25](#)
- processors, supported
 - Solaris [2-11](#)
 - Windows [2-15](#)

R

- Recovering Admin Password [8-2](#)
- required device credentials [2-27](#)
- RSAC (Remote Syslog Analyzer Collector)
 - Common Syslog Collector, subscribing to [C-6](#)
 - installing [C-1](#)
 - Remote Syslog Collector [C-4](#)
 - Syslog Analyzer Collector [C-4](#)
 - uninstalling RSAC [C-7](#)
 - properties file [C-8](#)
 - COLLECTOR_PORT [C-10](#)
 - COUNTRY_CODE [C-8](#)
 - DEBUG_CATEGORY_NAME [C-9](#)
 - DEBUG_FILES [C-9](#)
 - DEBUG_LEVEL [C-9](#)
 - DEBUG_MAX_BACKUPS [C-9](#)
 - DEBUG_MAX_FILE_SIZE [C-9](#)
 - FILTER_THREADS [C-10](#)
 - PARSER_FILE [C-10](#)
 - QUEUE_CAPACITY [C-10](#)
 - READ_INTERVAL_IN_SECS [C-10](#)
 - SUBSCRIPTION_DATA_FILES [C-10](#)
 - SYSLOG_FILES [C-9](#)
 - TIMEZONE [C-8](#)
 - TIMEZONE_FILE [C-8](#)
 - server requirements, verifying [C-2](#)
 - stopping [C-7](#)
 - uninstalling [C-7](#)
 - upgrading [C-3](#)

S

- scaling numbers [3-12](#)
- scope of data migration [7-2](#)
- selftest tool [8-17](#)
- Server [2-9, 2-12](#)
- Solaris patches
 - cluster patches [2-21](#)
 - required and recommended [2-19](#)
- stopping RSAC [C-7](#)
- supported devices [1-18](#)
- supported Network Management Systems [1-15](#)
- System [2-16](#)
- system and browser requirements
 - disk space [2-2](#)
 - on client systems [2-16](#)
 - operating system [2-3](#)
 - server requirements
 - on Solaris [2-9](#)
 - on Virtualization Systems [2-16](#)
 - on Windows [2-12](#)
 - Storage Area Network [2-9](#)

T

- terminal server support
 - about Terminal Services [2-17](#)
 - enabling or disabling Terminal Services
 - on Windows 2003 [2-17](#)
 - on Windows 2008 [2-17](#)
- troubleshooting installation
 - messages, understanding [8-4](#)
 - process status, viewing and changing [8-1](#)

U

- UCS support [2-16](#)
- uninstalling LMS 4.2
 - before you begin [6-54](#)

- on Solaris [6-54](#)
- on Windows [6-55](#)
- uninstalling RSAC [C-7](#)
- upgrading LMS
 - remote upgrade on Solaris [6-48](#)
 - remote upgrade on Windows [6-49](#)
- upgrading RSAC [C-3](#)
- UTU
 - access [B-5](#)
 - configure [B-6](#)
 - download [B-3](#)
 - install [B-3](#)
 - requirements [B-2](#)
 - search patterns [B-13](#)
 - uninstall [B-14](#)
 - upgrade [B-14](#)
 - users, hosts or IP phones search [B-6](#)