



A

accessing

CiscoWorks2000 Server **2-6**

troubleshooting access (see
troubleshooting Essentials
installation)

adding device passwords, in Software
Management **2-21**

administrators (see network administrators)

at and cron, allowing user bin to use **2-27**

audience for this document **ix**

Availability, verifying **2-15 to 2-16**

available drive space requirements for
server **1-3**

B

backing up

a converted database **1-17**

a previous database **1-14**

browser

client requirements **1-5**

problems, troubleshooting (see
troubleshooting Essentials
installation)

server requirements **1-3**

C

Catalyst devices, configuring for Syslog
Analysis **2-18 to 2-19**

cautions

regarding

backup and restore options among versions
of Essentials **1-13**

correct method of upgrading **1-13**

Essentials upgrades and IDS **1-13**

removing Essentials **1-21**

upgrading Netsys Integration **2-31**

significance of **x**

CD-ROM, mounting and
unmounting **B-1 to B-5**

mounting

local drive **B-1 to B-3**

remote drive **B-3 to B-5**

ummounting **B-5**

CD-ROM, obtaining documentation on a **xi**

Cisco.com

accessing **xiii**

features and services **xii to xiii**

ordering documentation from **xii**

CiscoWorks2000 CD One, required for
successful installation **1-8**

CiscoWorks2000 Server

- accessing 2-6
- configuring 2-7 to 2-9
- performance, improving A-8

client requirements 1-5

- browser 1-5
- memory (RAM) 1-5
- system hardware 1-5
- system software 1-5

Configuration Management, setup 2-28 to 2-37

device

- configurations, modifying 2-28 to 2-29
- credentials (attributes), entering 2-28
- security, modifying 2-29 to 2-30

NetConfig, setup 2-35 to 2-37

- device configurations, verifying 2-35 to 2-36
- device credentials (attributes), verifying 2-36
- device prompts, verifying 2-37
- device security, modifying 2-36 to 2-37

Netsys Integration, setup 2-30 to 2-35

- on a remote system 2-32 to 2-34
- troubleshooting 2-34 to 2-35
- upgrading 2-30 to 2-31
- versions supported 2-30

configuring the CiscoWorks2000 Server 2-7 to 2-9

country code, specifying 2-16 to 2-17

cron and at, allowing user bin to use 2-27

D

Daemon Manager not running, troubleshooting A-6 to A-7

daemons

Daemon Manager not running, troubleshooting A-6 to A-7

rcp daemon, enabling 2-26

TFTP daemon, enabling 2-22 to 2-24

vold, and mounting the CD-ROM B-3

database

backing up

- converted 1-17
- previous 1-14

password, changing in updating Essentials 1-14 to 1-15

deinstalling Essentials (see removing Essentials)

deleting Essentials (see removing Essentials)

device

configurations, verifying in NetConfig setup 2-35 to 2-36

credentials (attributes)

- changing in Inventory 2-14 to 2-15
- entering 2-28
- verifying in NetConfig setup 2-36

passwords, adding in Software Management 2-21

prompts, verifying in NetConfig setup 2-37

security, modifying 2-29 to 2-30

serial numbers, changing in Inventory 2-14 to 2-15

views, creating for Inventory **2-14**

devices supported **1-7**

documentation

- audience **ix**
- feedback (reader comment) form, submitting electronically **xii**
- obtaining the latest **xi to xii**
 - from Cisco.com **xi**
 - from Networking Products MarketPlace **xi**
 - from the online Subscription Store **xi**
 - on CD-ROM **xi**
 - on the web **xi**
- related **x to xi**

downloaded files in Software Management, space required for **2-21**

F

files, space required for downloaded, in Software Management **2-21**

files-transfer servers, setup in Software Management **2-22 to 2-24**

- /tftpboot directory, creating **2-24**
- TFTP daemon, enabling **2-22 to 2-24**

H

help

- (see also troubleshooting Essentials installation)

online **x**

technical assistance **xii to xiv**

IDS, conditions leading to overwrites **1-17**

importing device information for Inventory **2-13**

Incremental Device Support (see IDS)

installation status, viewing **A-7**

installing Essentials **1-8 to 1-20**

- CiscoWorks2000, required **1-8**
- importing data after installation **1-20 to 1-21**
- new installations **1-8 to 1-12**
 - running the installation program **1-9 to 1-10**
 - upgrading Essentials data from a remote machine **1-10 to 1-12**

prerequisites (see prerequisites)

reinstallations **1-17 to 1-20**

- backing up a previous database **1-18**
- IDS, conditions leading to overwrites **1-17**
- running the installation program **1-18 to 1-20**

removing Essentials (see removing Essentials)

task overview (table) **1-2**

upgrades (see upgrading Essentials)

Inventory, setup **2-10 to 2-15**

- adding or importing device information **2-10 to 2-13**
- adding manually **2-10 to 2-12**

- importing 2-13
- device attributes (credentials, serial numbers), changing 2-14 to 2-15
- device views, creating 2-14
- IOS devices, configuring for Syslog Analysis 2-17 to 2-18

M

- memory (RAM)
 - client requirements 1-5
 - server requirements 1-3
- messages, installation, understanding A-2 to A-4
- Microsoft Internet Explorer, and the Login Manager dialog box A-2
- minimum requirements (see prerequisites)
- mounting and unmounting the CD-ROM B-1 to B-5
 - mounting
 - local drive B-1 to B-3
 - remote drive B-3 to B-5
 - unmounting B-5

N

- NetConfig, setup 2-35 to 2-37
 - device configurations, verifying 2-35 to 2-36
 - device credentials (attributes), verifying 2-36
 - device prompts, verifying 2-37

- device security, modifying 2-36 to 2-37
- Netscape Navigator, and the Login Manager dialog box A-2
- Netsys Integration
 - setting up 2-30 to 2-35
 - on a remote system 2-32 to 2-34
 - troubleshooting 2-34 to 2-35
 - upgrading 2-30 to 2-31
 - caution regarding 2-31
 - versions supported 2-30
- Netsys versions supported 1-7
- network administrators
 - logging in 2-6 to 2-7
 - logging out 2-38
- Networking Products MarketPlace, ordering documentation from xi
- NMS environments supported for device import 1-6

O

- overviews
 - Essentials 1-1
 - installation tasks (table) 1-2

P

- passwords, device, adding in Software Management 2-21
- preferences in Software Manager, setup 2-22

prerequisites

- client requirements 1-5

- browser 1-5

- hardware 1-5

- memory (RAM) 1-5

- software 1-5

- server recommendations 1-4

- server requirements 1-3 to 1-4

- additional software 1-3

- available drive space 1-3

- memory (RAM) 1-3

- system hardware 1-3

- product overview 1-1

- proxy server, troubleshooting A-6

R

rcp

- daemon, enabling 2-26

- rcp-enabled devices, setting up for
Configuration Management 2-29

- remote user accounts, creating 2-25

- selecting as active file transfer method 2-27

- servers, setup in Software
Management 2-24 to 2-27

- creating the rcp remote user account 2-25

- enabling the rcp daemon 2-26

- selecting rcp as active file transfer
method 2-27

- reader comment form, submitting
electronically xii

remote

- machine, upgrading Essentials data from
a 1-10 to 1-12

- system, setting up Netsys Integration
on 2-32 to 2-34

- user accounts for rcp, creating 2-25

- removing Essentials 1-21 to 1-23

- caution regarding 1-21

S

- serial numbers of devices, changing in
Inventory 2-14 to 2-15

server

- Essentials (see CiscoWorks2000 Server)

- file-transfer, setup in Software
Management 2-22 to 2-24

- TFTP daemon, enabling 2-22 to 2-24

- rcp, setup in Software
Management 2-24 to 2-25

requirements

- available drive space 1-3

- browser 1-3

- memory (RAM) 1-3

- system hardware 1-3

- Software Management, setup 2-21 to 2-22

- at and cron, allowing user bin to use 2-27

- device passwords, adding 2-21

- file-transfer servers 2-22 to 2-24

- enabling the TFTP daemon **2-22 to 2-24**
 - /tftpboot directory, creating **2-24**
 - preferences **2-22**
 - rcp servers **2-24 to 2-27**
 - creating the rcp remote user account **2-25**
 - enabling the rcp daemon **2-26**
 - selecting rcp as active file transfer method **2-27**
 - space required for downloaded files **2-21**
 - Subscription Store, ordering documentation from **xi**
 - supported devices **1-7**
 - Syslog Analysis
 - setup **2-16 to 2-20**
 - Catalyst devices, configuring **2-18 to 2-19**
 - configuring devices for **2-29**
 - devices, configuring **2-17 to 2-20**
 - IOS devices, configuring **2-17 to 2-18**
 - Syslog Analyzer, verifying **2-20**
 - troubleshooting if Essentials installation fails **A-5**
 - warning regarding **A-5**
 - syslog configuration file settings, verifying **2-19**
 - system
 - hardware requirements
 - client **1-5**
 - server **1-3**
 - software requirements
 - client **1-5**
 - server **1-3**
-
- T
- TAC (Technical Assistance Center) **xiii to xiv**
 - accessing
 - by telephone **xiv**
 - website **xiii**
 - features and services **xiii**
 - Technical Assistance Center (see TAC)
 - technical support, obtaining **xii to xiv**
 - (see also troubleshooting Essentials installation)
 - customers and partners (Cisco.com) **xii to xiii**
 - accessing **xiii**
 - services and features **xiii**
 - warranty or maintenance contract customers (TAC) **xiii to xiv**
 - accessing **xiii to xiv**
 - features and services **xiii**
 - telephone numbers for TAC **xiv**
 - /tftpboot directory, creating **2-24**
 - TFTP daemon, enabling **2-22 to 2-24**
 - troubleshooting Essentials installation **A-1 to A-8**
 - browser
 - general problems **A-7**
 - Microsoft Internet Explorer, after upgrade **A-2**
 - Netscape Navigator, after upgrade **A-2**
 - CiscoWorks2000 Server access **A-5 to A-7**
 - Daemon Manager not running **A-6 to A-7**

- proxy server problems **A-6**
- verifying that server is running **A-6**
- failure of package to delete during
 - uninstallation **A-5**
- Login Manager dialog box does not appear
 - after upgrade
 - in Microsoft Internet Explorer **A-2**
 - in Netscape Navigator **A-2**
- messages, understanding **A-2 to A-4**
- Netsys Integration setup **2-34 to 2-35**
- server performance, improving **A-8**
- Syslog Analysis, and failure during
 - installation of Essentials **A-5**
 - warning regarding **A-5**
 - viewing process status **A-7**
- typographical conventions used in this
 - document **ix to x**

U

- uninstalling Essentials (see removing
 - Essentials)
- unmounting a CD-ROM drive (see mounting
 - and unmounting a CD-ROM drive)
- upgrade paths **1-3**
- upgrading Essentials
 - from previous versions **1-12 to 1-17**
 - backing up a converted database **1-17**
 - backing up a previous database **1-14**
 - changing your database
 - password **1-14 to 1-15**
 - IDS, required **1-13**
 - running the installation
 - program **1-15 to 1-16**
 - from the evaluation version **1-17 to 1-20**
 - backing up a previous database **1-18**
 - running the installation
 - program **1-18 to 1-20**
 - upgrade paths **1-3**
 - upgrading Essentials data from a remote
 - machine **1-10 to 1-12**
 - upgrading Netsys Integration **2-30 to 2-31**
- URLs for
 - CiscoWorks2000 Server access **2-6**

V

- verifying
 - Availability **2-15 to 2-16**
 - device
 - configurations, in NetConfig
 - setup **2-35 to 2-36**
 - credentials (attributes), in NetConfig
 - setup **2-36**
 - prompts, in NetConfig setup **2-37**
 - Syslog Analyzer **2-20**
 - syslog configuration file settings **2-19**
 - viewing installation status **A-7**
 - views, device, creating for Inventory **2-14**
 - vold
 - daemon process manager **B-3**
 - process, and mounting the local drive **B-2**

W

warning regarding installation failure during
Syslog Analysis installation **A-5**

World Wide Web

ordering documentation over **xi**

using to access

Cisco.com **xiii**

CiscoWorks2000 Server **2-6**

TAC **xiii**