



View Device Details

The following topics explain how to get more information about your network devices. You can also generate a variety of device reports that provide hardware and software details, CPU and memory utilization, general device health, and so forth. For information on these reports, see [Device Reports](#). For information on inventory collection, see [How Often Is Inventory Collected?](#).

- [Find Devices](#), page 1
- [Get Basic Device Information: Device 360 View](#), page 2
- [View a Device's Local Topology from the Device 360 View](#), page 5
- [View the Network's Hardware Inventory](#), page 6
- [Get Complete Device Information: Device Details Page](#), page 6
- [View and Manage Devices Using the Chassis View](#), page 10
- [View Device Ports](#), page 21
- [View Device Interfaces](#), page 22
- [View Device Modules](#), page 25
- [View Environment Information \(Power Supplies, Fans\)](#), page 26
- [View Device Neighbors](#), page 26
- [Get More Information About Links](#), page 27
- [View Circuits/VCs](#), page 27
- [View Satellites](#), page 27

Find Devices

The quickest way to find a device is to use the quick search text boxes displayed at the top of the Network Devices table (**Inventory > Device Management > Network Devices**). You can enter partial strings for a device name, IP address, or software version, or choose from the values for reachability, admin status, and Inventory Collection. Devices are also organized into device groups, which you can view by choosing **Inventory > Device Management > Network Devices** and selecting a device type from the **Device Group** list.

Get Basic Device Information: Device 360 View

The Device 360 view is a pop-up window that provides quick information about a device, its inventory, and its status. This includes device alarms, modules, interfaces, neighbors, and chassis.

To launch a Device 360 view:

- Click the "i" icon next to an IP address in almost any device table
- From the network topology, click a device in an expanded group, then click **View**

The Device 360 view provides general device and performance information at the top of the view, and more detailed interface information in tabs in the lower part of the view. The information the Device 360 view displays depends on the device type and configuration. The Device 360 view provides the following information.

Information Provided in Device 360 View	Description

General information and tools	<p>Device type, its OS type and version, its last configuration change, and its last inventory collection. Icons convey the status of the device.</p> <p>Note If you have opened the Device 360 view for a Cisco NCS 6000 device that houses a Secure Domain Router (SDR), the SDR's name is also listed. Using the menus in the top right of the popup window, you can also perform these tasks:</p> <ul style="list-style-type: none"> • Troubleshoot—Perform a ping or traceroute, launch the Alarm browser, open a Cisco support case, or get information from the Cisco Support Community (Actions menu) • Performance—Check device CPU and memory (View > Performance Graphs) • Topology—View the network topology and the device's local topology, up to 3 hops (Actions menu) • Check the device's routing table (Actions menu) • Open the Device Console to enter commands you want to run on the device (Actions menu) • View the configuration that is currently running on the device (Actions > Show Command) • Collect the device's inventory and save it to the database using Sync Now (Actions menu) • Open an HTTP, HTTPS, SSH, or Telnet session with the device (Actions menu) • Launch Cisco Transport Controller for optical devices (Actions menu) • Enable the automatic refresh of the view every 20 seconds (Actions menu) • Open the Device Details page to view details about software image and configuration file management, and use the device's Chassis View (by clicking the device IP address hyperlink or choosing View > Details) • Select a device for a side-by-side comparison with another device on the basis of information such as raised alarms and the current status of circuits, interfaces, and modules (Actions menu)—see Compare Device Information and Status
Performance data	<p>Charts reflecting various aspects of the device performance. If a device has multiple memory pools, the Device 360 view will display the average utilization for all of the memory pools. If you want to see information about individual memory pools, use the memory utilization dashlets in the Network Summary dashboard. See Network Summary Dashboard Overview.</p>
Alarms tab	<p>Current alarms for the device, including their severity, status, and the time they were generated. Depending on the alarm source, you can also launch other 360 views from this tab.</p>
Modules tab	<p>Modules that are configured on the device, including their name, type, state, ports, and location.</p>

Interfaces tab	Interfaces that are configured on the device, including status information. You can also launch an Interface 360 view for a specific interface.
Neighbors tab	NEs that are connected to this device through CDP (Cisco Discovery Protocol). If the selected device does not support CDP, this tab is empty. Displayed information includes device type and name, and the local port and device port. To view the neighbors in a popup topology map, choose Actions > N Hop Topology from the top right of the Device 360 view (see View a Device's Local Topology from the Device 360 View , on page 5).
Circuit/VCS tab	Circuit/VC name, type, customer, status, and creation date for each circuit provisioned on the device. You can also launch a Circuit/VC 360 view for specific circuits/VCS.
Satellites tab	For Cisco ASR 9000 devices in a cluster configuration, lists a satellite's name, type, description, status, and IP and MAC addresses. You can also launch a Satellite 360 view for a specific satellite.
Civic Location	Geographical information about device's location.
Recent Changes	The last five changes made on the device, classified as: Inventory, Config (Configuration Archive), or SWIM (Software Images). (These are the same types of changes that are displayed when you choose Inventory > Network Audit .)
SRRGs	Lists the Shared Risk Resource Groups (SRRGs) assigned to the device. Click this tab's ? (help) icon to view its legend. For more information about SRRGs, see View and Manage Shared Risk Resource Groups (SRRG) in the Geo Map .

You can also view a specific device in the topology map by choosing **Actions > Network Topology** (at the top right of the Device 360 view).

Compare Device Information and Status

From the **Comparison View**, you can perform a side-by-side comparison of multiple devices, viewing information such as raised alarms, the status of modules, interfaces, and circuits on those devices, and a summary of recent changes that have been made. To compare devices, do the following:

Step 1 Choose one of the following to open the **Network Devices** page:

- **Monitor > Managed Elements > Network Devices**
- **Inventory > Device Management > Network Devices**

Step 2 For each device you want to compare:

- a) Open its **Device 360** view by clicking the *i* (**information**) icon in the **IP Address** column.
- b) Choose **Actions > Add to Compare**.
The device you selected is displayed at the bottom of the page. You can select a maximum of 4 devices.

- Step 3** Click **Compare**.
The **Comparison View** opens.
- Step 4** From the drop-down list at the top of the view, specify whether the view will show all available information or just the information that is unique to each device.
- Step 5** Click **Comparison View**, check the check box for the categories you want the view to display, and then click **Save**.
By default, all of the categories are already selected.
- Step 6** Scroll down the page to view the information provided for each category you selected.
Note the following:
- The **Comparison View** only displays information for two devices at a time. If you selected more than two, you will need to toggle to the devices that are not currently displayed.
 - To reorder the devices you have selected, click **Rearrange**.
 - Each device's **View** and **Actions** menu is identical to the ones provided in their **Device 360** view. If you select an option, the corresponding page opens.
 - You can minimize and maximize the categories displayed, as needed.
 - The **Comparison View** is also available for circuits and VCs, interfaces, and links. Whenever you select any of these elements from their respective 360 view for comparison, they are displayed in the corresponding tab. This allows you to switch between element types, as needed.
 - When you are done comparing devices, click **Back** at the top of the view and then click **Clear All** at bottom of the page. If tabs for other element types are still displayed, you will need to clear them as well.
-

View a Device's Local Topology from the Device 360 View

You can launch a small topology window from the Device 360 view that displays the network topology around a device, up to 3 hops.

-
- Step 1** Open the Device 360 View for the device in which you are interested.
- Click the "i" icon next to an IP address in almost any device table.
 - From the network topology, click a device in an expanded group, then click **View**.
- Step 2** Choose **N-Hop Topology** from the Actions drop-down menu (at the top right of the Device 360 view).
- Step 3** Adjust the popup window to show the information you need.
- Click the edit icon
 - Select a hop count (1-3) from the Hop drop-down list.
 - Select a topology map layout from the Layout drop-down list.

Step 4 Save your changes, and use the pan and zoom tools to view the results.

View the Network's Hardware Inventory

Use this procedure to view basic hardware information for all devices in the network—the product name, physical location, serial number, manufacture date, and so forth.

Step 1 To view device-level information:

- 1 Choose **Inventory > Device Management > Network Inventory**.
- 2 Use the Quick Filters to locate specific devices. For example, to list the hardware information for all ASR devices, enter ***ASR*** in the Product Name field.

Step 2 To view element-level information, use one of these methods:

- Get the information from the Device Details page. See [Get Complete Device Information: Device Details Page, on page 6](#).
 - Get the information from the Chassis View. See [Open the Chassis View, on page 10](#).
 - Run a hardware report. See [Device Reports](#).
-

Get Complete Device Information: Device Details Page

For the most comprehensive information about a device, view the Device Details page. It provides in-depth inventory information and configuration options.

The screenshot shows the 'Device Details' page for a device named 'NCS2006-2'. The interface includes a navigation breadcrumb: [...](#) / [Inventory Network Devices](#) / [Device Groups](#) / [All Devices](#) / [NCS2006-2](#). There are three tabs: 'Chassis View', 'Logical View', and 'Device Details'. The 'Device Details' tab is active, showing a summary of alarm counts: 1 All, 0 Critical, 0 Major, 1 Minor, 0 Warning, and 0 Information. Below this is an 'Export' button and a 'Show' dropdown menu. A table of alarms is displayed with the following data:

Severity	Condition	Timestamp	Affected Objects	Alarm ID
Warning	EQPT-MISS	12/5/16, 1:31 PM Pacific S...	NCS2006-2	2029027

To launch the Device Details Page:

- From a Device 360 view—Click the IP address hyperlink or choose **View > Details**.
- From a network devices table—Click the device name hyperlink in a device table.

The tabs that are displayed here depend on your selection in the Chassis View:

- The **Image** and **Configuration Archive** tabs are only available when a top-level chassis is selected.
- The **Interfaces** and **Performance** tabs are new to this release. The **Performance** tab is only available when a card or port is selected.

The following table describes the tabs that the Device Details page provides:

Tab Name	Description
Chassis View	Provides inventory, service, and alarm information that is contextualized to the element you select. Also serves as launch point for configuration, Image management, and Configuration Archive features. (To configure logical elements, click the Logical View tab.) For information on using the Chassis View features, see Overview of the Chassis View Window, on page 11 .
Logical View	Provides logical inventory information. Also provides configuration options for logical elements.
Device Details	Provides system information (environment, modules ports, interfaces, and other settings).

Tab Name	Description
Alarms	Get information about the alarms that have been raised on a device, a card, or a port. See View an Alarm's Details .
Configuration	Configure a device, card, or port. Elements are grouped by their physical location. (To configure elements that are grouped according to their logical function, click the Logical View tab.) See Ways to Configure Devices Using Cisco Evolved Programmable Network Manager .
Inventory	View detailed hardware information such as serial numbers and manufacture dates for a device or card.
Interfaces	View the status of interfaces configured on a device, card, or port. From here, you can also open the Interface 360 view for a particular interface. For links to topics that describe other ways to view interface information in Cisco EPN Manager, see View Device Interfaces .
Performance	View summary information and high-level performance metrics for the selected interface on a card or port. The dashlets displayed in addition to the Interface Details dashlet will vary, depending on the interface type you chose. After choosing an interface from the Interface drop-down list, make sure to click Apply in order to refresh the information that is displayed.
Circuits	View the circuits a device, card, or port participates in. For links to topics that describe other ways to view circuit information in Cisco EPN Manager, see View Circuits/VCS .
Image	Manage the software image that is running on the device. See View the Images That Are Saved in the Image Repository .
Configuration Archive	Manage the device configuration file that is running on the device. See View All Archived Files .

Configure Interfaces from the Device Details Page

Complete the following procedure to configure an interface from the Device Details page:

-
- Step 1** With a device's Chassis View open, click the **Launch Configuration** link. The Device Details page opens.
- Step 2** Click the **Logical View** tab.
- Step 3** From the **Features** pane, choose **Interfaces** > the interface type you want to configure.
- Step 4** Complete the instructions specific to the interface type you chose to add or edit an interface (see [Configure Interfaces](#)).
-

Update Cisco NCS 1000 Interface Settings

You can quickly update the **Admin Status**, **Wavelength (nm)**, and **Loopback** settings for interfaces configured on a Cisco NCS 1000 Series device from its Device Details page. To do so, complete the following procedure.

-
- Step 1** Open the Device Details page for a Cisco NCS 1000 Series device, as described in [Get Complete Device Information: Device Details Page, on page 6](#).
- Step 2** Click the **Configuration** tab.
The page updates, displaying 3 sub-tabs: **Optics**, **Ethernet**, and **Coherent DSP**.
- Step 3** Click the sub-tab for the interface type you want to update.
- Step 4** Make the necessary changes:

Method 1

- 1 In the interfaces table, locate the interface you want to update.
- 2 Click the parameter you want to change to open a drop-down list.
- 3 Choose the value you want to set, then click **Save**.

Method 2

- 1 Click the radio button for the interface you want to update, then click the pencil (**Edit**) icon.
The **Edit interface type** dialog box opens.
- 2 Choose the value you want to set from the available drop-down lists, then click **Apply**.
- 3 Click **OK** to confirm your changes.

Note the following:

- For Optics interfaces:
 - You can update the **Admin Status** and **Wavelength (nm)** parameters.
 - You can only set a new wavelength value if the **Optics Type** parameter is set to **DWDM**.
- For Coherent DSP and Ethernet interfaces:
 - You can update the **Admin Status** and **Loopback** parameters.
 - You can only set a new loopback value if the **Admin Status** parameter is set to **Testing**.
 - If you set the **Loopback** parameter to **Line**, Cisco EPN Manager applies the same configuration applied for a facility loopback. A facility loopback tests the line interface unit (LIU) of a card, the electrical interface assembly (EIA), and related cabling.
 - If you set the **Loopback** parameter to **Internal**, Cisco EPN Manager applies the same configuration applied for a terminal loopback. A terminal loopback tests a circuit path as it passes through a TXP, MXP, or ADM-10G card and loops back.

View and Manage Devices Using the Chassis View

The Chassis View provides an interactive model of a device chassis and its hardware elements. From the Chassis View you can:

- View the contents of a chassis.
- Check the state of chassis elements and quickly locate problems.
- View alarmed elements and launch views that provide alarm details.
- Configure interfaces (using the launch point that opens the Device Details page).


The elements that are displayed in the Chassis View depend on the device type and the elements that are configured on the device.

Note that Admin users do *not* have read/write access to chassis views by default. To enable access for this user group, open the **Users, Roles & AAA** page, choose **User Groups**, and then check the **Chassis View Read and Write** check box (under **Network Monitoring** in the **Tasks Permissions** tab). See [View and Change the Tasks a Group Can Perform](#).

See these topics for information about how to launch and use the Chassis View:

Open the Chassis View

The following table describes the various ways you can open the Chassis View. If a device does not provide these launch points, it means the device does not support the Chassis View. For a list of devices that support the Chassis View, see [Device Support for the Chassis View in This Release of Cisco EPN Manager](#), on page 15.

To open a Chassis View from:	Do the following:	The Chassis View is displayed in:
Network Devices table	Click  next to the device IP address.	A pop-up window
	Click a device name hyperlink.	A full-page view
Device 360 view	Choose View > Chassis View from the top right of the Device 360 view.	A pop-up window
	Choose View > Details from the top right of the Device 360 view.	A full-page view
Device Details page	Click the Chassis View tab.	A full-page view

To open a full-page Chassis View from a Chassis View pop-up window, click the **Launch Configuration** link in the top right corner of the window.

Permissions Required to View and Configure Devices Using the Chassis View


The following table describes the Chassis View permissions that are granted to members of the Cisco EPN Manager user groups. These permissions cannot be edited. For more information on user groups, see [Control the Tasks Users Can Perform \(User Groups\)](#)

- Full access (read and write)—Users in this group can view and configure devices using the Chassis View.
- Read-only access—Users in this group can use the Chassis View to view devices but not to configure them.
- Write-only access—Users in this group can use the Chassis View to configure devices but not view them (only applies to the NBI Write group).
- No access—Users in this group cannot access or use the Chassis View.


Group Type		Read	Write
Web UI	Root	X	X
	Super Users	X	X
	Admin	—	—
	Config Managers	X	X
	System Monitoring	X	—
	User-Defined 1-4	X	—
	Monitor Lite	X	—
NBI	NBI Credential	—	—
	NBI Read	X	—
	NBI Write	—	X
	North Bound API	X	X

Overview of the Chassis View Window


The following illustration shows the Chassis View for a Cisco ASR 903 router.

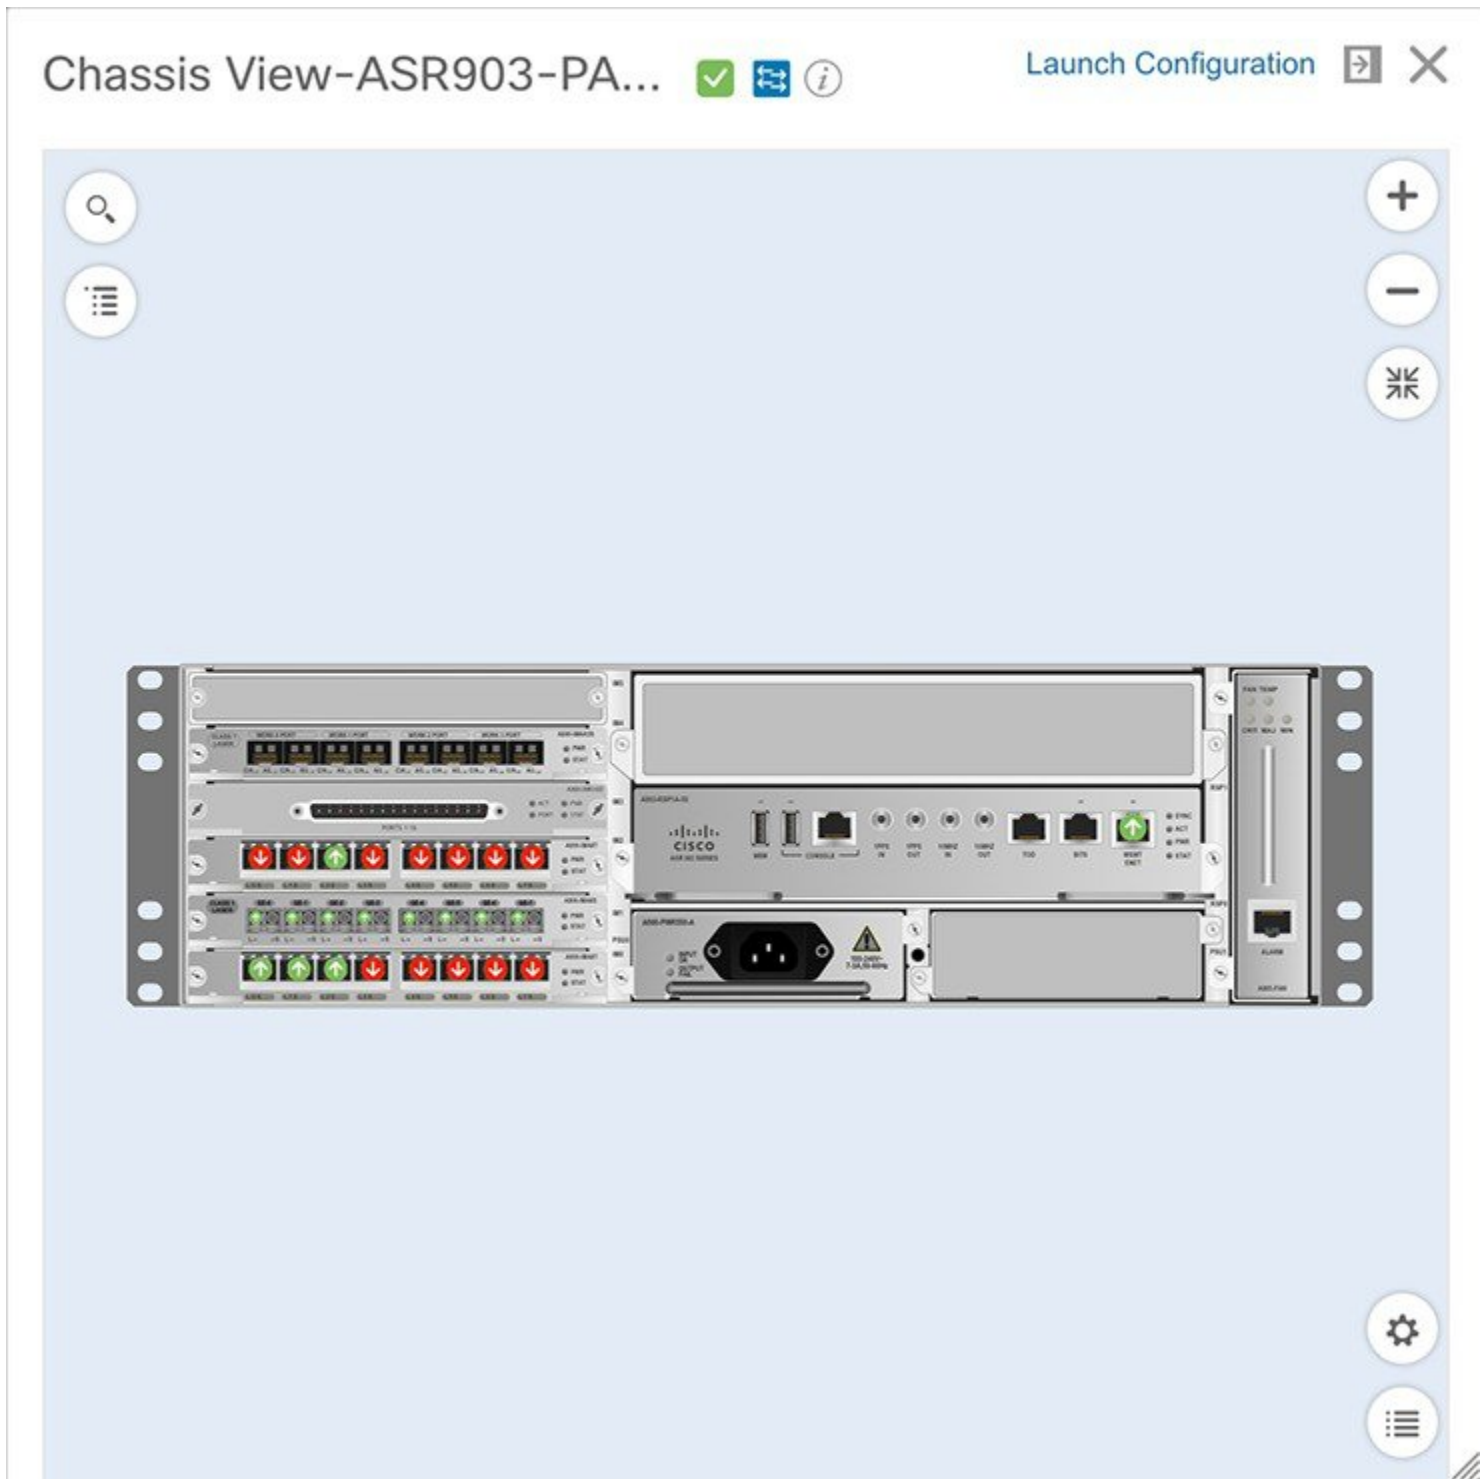

In this example, the user then clicked a port that is currently down.

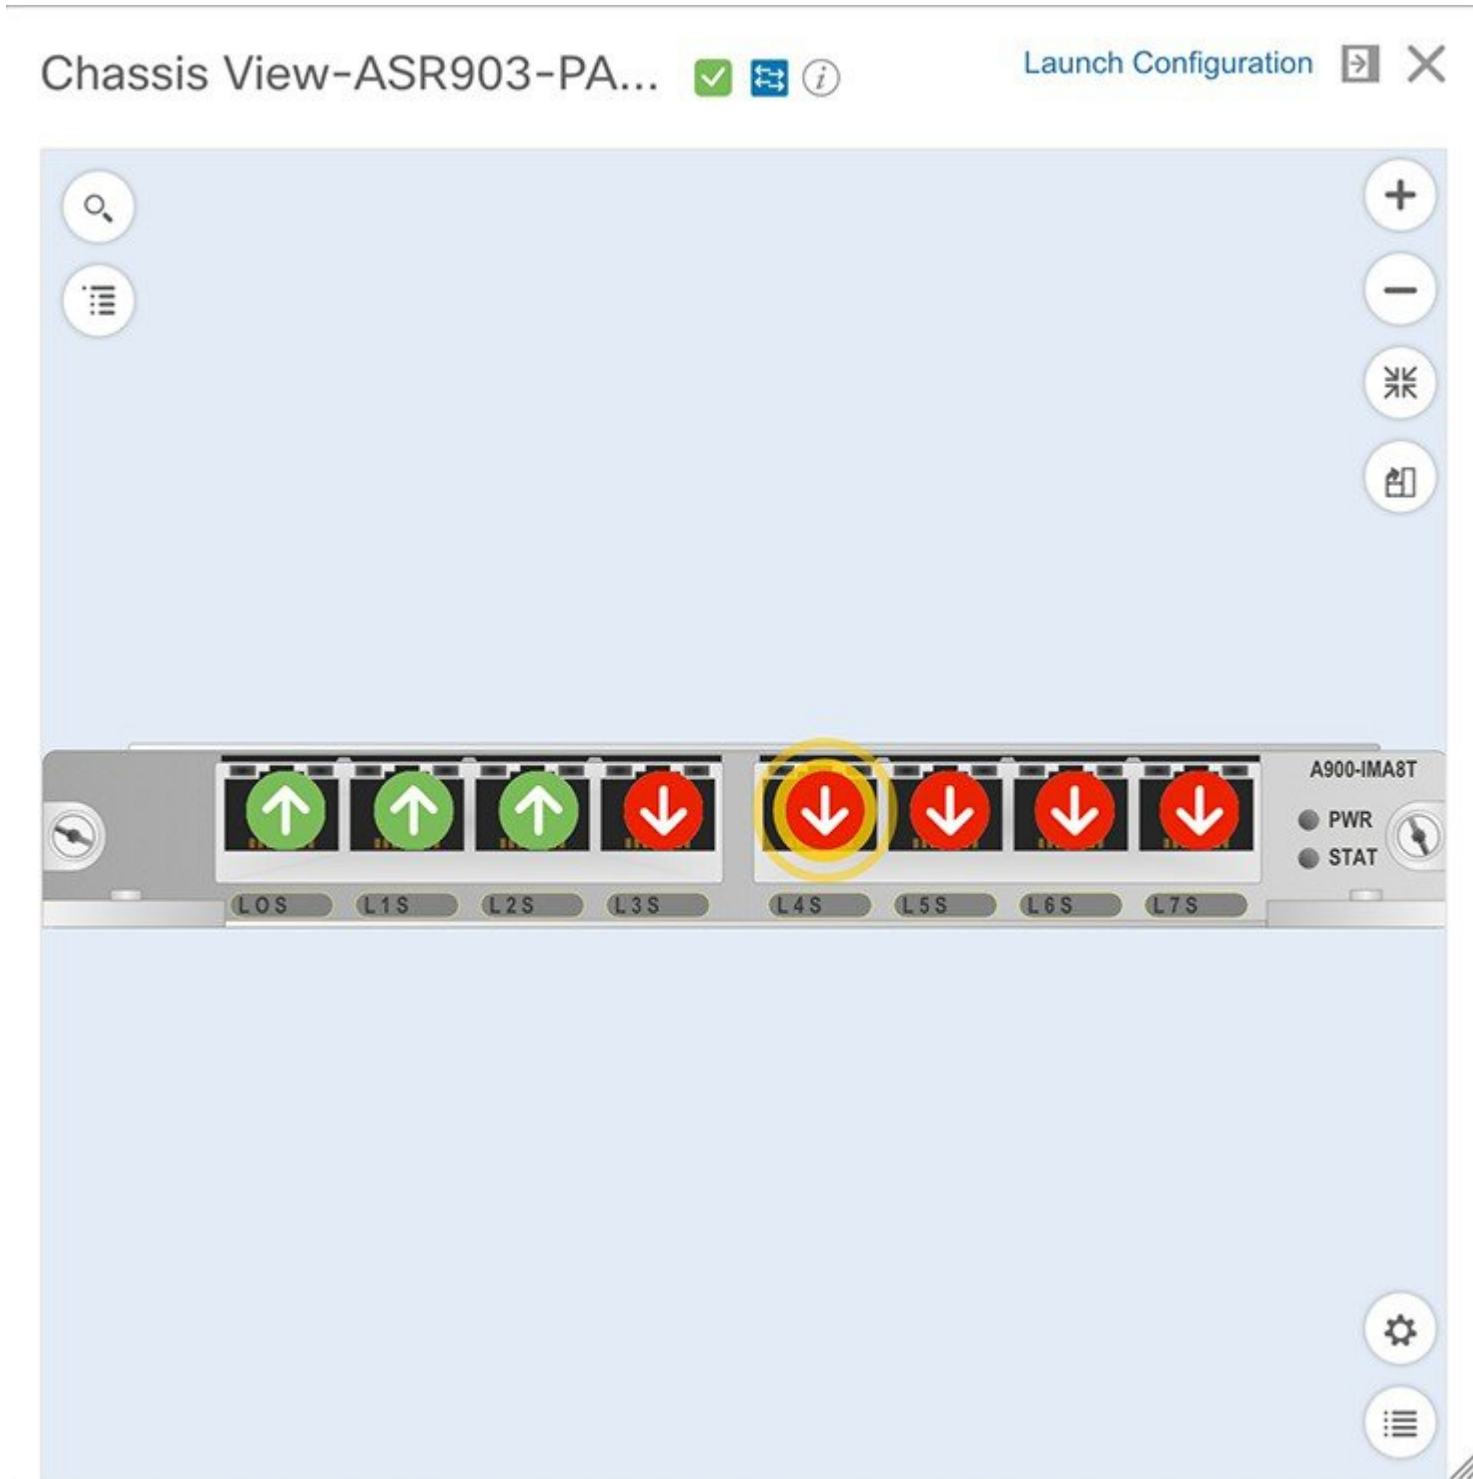

The Chassis View updates, displaying only the line card module that the port resides on and zooming in on it. The port pulsates in the Chassis View to help the user locate it. The badges displayed on the ports in this module indicate the primary status of those port (see [Port and Interface States](#), on page 17). Some elements may be surrounded by colored lines to indicate their state (out of service, pre-provisioned, and so forth). To









open a key that explains the meaning of the badges and these other indicators, click  at the bottom right of the Chassis View.







If a device has multiple chassis or shelves, each chassis or shelf is displayed in the same Chassis View (for an example, see [View Mixed Chassis, Multi-Chassis, and Multi-Shelf Devices in the Chassis View](#), on page 18). If a card image cannot be retrieved, the Chassis View displays a question mark alongside the card name.

Note the following:

- The colors rendered in the Chassis View may not match your physical device because the Chassis View displays a generic image that is packaged with Cisco EPN Manager .
- If you have opened the Chassis View for a Cisco NCS 6000 device that houses a Secure Domain Router (SDR), both the device type and the SDR's name are displayed at the top of the Chassis View. Keep in mind that there may be cases where the SDR label for a device that belongs to a cluster or a user-defined group is not displayed (since auto-clustering is applied to devices based on their proximity).

The following table describes the Chassis View's components and their function:

Chassis View Component	Description
	Opens a field you can use to search for a particular rack, shelf, module, or interface on a device.
	Opens the Chassis Explorer .
	Indicates the device's reachability state (see Device Reachability and Admin States). This example indicates the device is reachable.
	Indicates the device's administrative status (see Device Reachability and Admin States). This example indicates the device is managed.
	Opens the device's Device 360 view. See Get Basic Device Information: Device 360 View .
Launch Configuration link	Opens the device's Device Details page. The tabs displayed on this page will vary, depending on whether a device, module, or port is currently selected in the Chassis View. See Get Complete Device Information: Device Details Page .
	Adds a shortcut to the device's Chassis View in the Dock window. See Customize the Dock Window .
	Closes the Chassis View .
	Zooms in on an image.

Chassis View Component	Description
	Zooms out from an image.
	Resizes an image so it can be viewed in its entirety within the Chassis View .
	<p>Toggles between the front and rear Chassis View for a device that supports this feature. A callout that appears when you place your cursor over this icon indicates which view you are opening.</p> <p>This feature is supported by the following Cisco devices:</p> <ul style="list-style-type: none"> • ASR 901S • cBR-8 • NCS 1001, 1002, 5001, 5002, and 5008
	Rotates the image of the module that is currently displayed. This icon is not available when an entire device is displayed.
	Click to access the Enable Alarm Blinking check box. When checked, any alarm badges displayed for a module or port will blink in order to draw attention to them and make them easier to locate.
	Opens a key that explains the significance of badges and colored lines displayed in the Chassis View .

Device Support for the Chassis View in This Release of Cisco EPN Manager

The following table lists the Chassis View features and the devices on which they are supported. This means the feature has been tested and verified on that device. While you can launch the Chassis View from other devices, it has only been verified on the devices below.

Feature	Supported on:

General features	<p>Cisco NCS 1001 device</p> <p>Cisco NCS 1002 device</p> <p>Cisco NCS 2000 devices</p> <p>Cisco NCS 4000 and 4200 devices</p> <p>Cisco NCS 5001 device</p> <p>Cisco NCS 5002 device</p> <p>Cisco NCS 6008 device</p> <p>Cisco ONS devices</p> <p>Cisco Catalyst 6504-E device</p> <p>Cisco ASR 900 devices</p> <p>Cisco ASR 9000 devices</p> <p>Cisco cBR-8 device</p>
Multi-chassis information	<p>Cisco NCS 2000 devices</p> <p>Cisco ONS devices</p> <p>Cisco ASR 9000 devices</p>
Operational States	<p>Cisco NCS 1002 device</p> <p>Cisco NCS 2000 devices</p> <p>Cisco NCS 4000 and 4200 devices</p> <p>Cisco ONS devices</p> <p>Cisco ASR 900 devices</p> <p>Cisco ASR 9000 devices</p> <p>Cisco cBR-8 device</p>
Alarms	<p>Cisco NCS 1002 device—Port, card, module, equipment alarms</p> <p>Cisco NCS 2000 devices—Port, card, module, equipment alarms</p> <p>Cisco NCS 4000 and 4200 devices—Port alarms</p> <p>Cisco ONS devices</p> <p>Cisco ASR 900 devices—Port, card, module, equipment alarms</p> <p>Cisco ASR 9000 devices—Port, card, module, equipment alarms</p> <p>Cisco cBR-8 device</p>

View Network Element State Information in the Chassis View

Badges, lines, and colors provide state information about elements and components in a device. To display a key that lists what the badges, lines, and colors mean, click the Legends icon at the bottom right of the Chassis View.

See these topics for more information:

- [Equipment Operational States \(Chassis View\)](#), on page 17
- [Port and Interface States](#), on page 17






Note

Port state information is not shown for the CFP ports on an A9K-400G-DWDM-TR line card as these ports are not yet supported.




Equipment Operational States (Chassis View)




Equipment Operational State—The equipment operational state represents the running state of the network element.

Equipment Operational State	Icon	Description
In Service	(none)	Equipment is operating properly.
Pre-provisioned		(Cisco NCS 2000 and Cisco ONS devices only) Equipment has been configured but is not physical present in the chassis.
Failed/Disabled/Down/Out of Service/Out of Service Maintenance		Equipment is not operating properly.
Unknown		Equipment operational state is unknown. No response (or insufficient response) from the device.





Port and Interface States

Port/Interface Primary States—A port/interface's primary state conveys the most important state information for a port/interface by combining the admin and operational states. The Multilayer Trace displays either a port primary state or alarm status. For the Chassis View, if an element in the Chassis View does not support changing color to indicate a state change, you can still get the state change information from the alarm that is generated for the state change.





Port/Interface Primary State	Icon	Admin Status	Operational State
Unknown		Unknown	Unknown
Down		Up	Down
Test		Test	—

Admin Down		Admin Down	—
Up		Up	Up
Auto Up		Up	Auto Up

Port/Interface Admin Status—The port/interface admin status represents the configured state of the port or interface (for example, if an administrator has manually shut down a port).

Port/Interface Admin Status	Icon	Description
Unknown		Port/interface admin status is unknown. There is no response (or insufficient response) from the device.
Admin Down		Port/interface was manually shut down by the administrator.
Up		Port/interface is enabled by administrator.
Test		Port/interface is being tested by the administrator.

Port/Interface Operational State—A port/interface's operational state conveys the port or interface's running state and whether it is working properly.

Port/Interface Operational State	Icon	Description
Unknown		Port/interface operational state is unknown. There is no response (or insufficient response) from the device.
Down		Port/interface is not working properly.
Up		Port/interface is receiving and transmitting data.
Auto Up		Port/interface is receiving and transmitting data (only certain devices support this state; other devices use "Up").

View Mixed Chassis, Multi-Chassis, and Multi-Shelf Devices in the Chassis View

The following example shows a mixed Chassis View that has both Cisco NCS 2000 and Cisco ONS 15454 chassis. Shelf numbers are not consecutive because of the different types of chassis.

The screenshot shows the Cisco EPN Manager interface for device NCS2KE. The left pane displays a 3D rack view with two racks, RACK1 and RACK2, containing various modules. The right pane shows the 'Inventory' tab with a table of components.


Location	Product ID	Oper...	Product N...	Type	Seri...	CLEL...
0				RACK		
RACK-1[38-1]		Enabled		Module		
RACK-1[39-1]		Enabled		Module		
RACK-1[37-1]		Enabled		Module		
▶ RACK-1[07]	15454-M6-SA	Enabled	NC	Chassis		
▶ SHELF-1	15454-M-TNC-I9	Enabled	TNC	Module	CAT16...	WOCU...
SHELF-1		Disabled		Module		
SHELF-1	15454-M6-DC	Unknown	M6-DC	Module	SAL16...	WOPU...
SHELF-1	15454-M6-SA	Unknown	M6-SA	Module	SAL16...	WOM...
SHELF-1	15454-M6-ECU	Unknown	M6-ECU	Module	SAL16...	WOM...
SHELF-1	15454-M6-FTA	Unknown	M6-FTA	Module	SAL16...	WOCU...
SHELF-1	15454-M6-LCD	Unknown	M6-LCD	Module	SAL16...	WOP...
▶ SHELF-1		Disabled		Module		
SHELF-1		Disabled		Module		
▶ SHELF-1		Disabled		Module		
SHELF-1		Disabled		Module		
SHELF-1		Disabled		Module		


For mixed-chassis, multi-chassis, and multi-shelf devices, Cisco EPN Manager aggregates alarms to a chassis or shelf as explained in [View Alarms in the Chassis View](#), on page 19.

For multi-chassis devices in a cluster, the Device 360 view's **Chassis** tab identifies which chassis is the primary and which is the backup.



View Alarms in the Chassis View

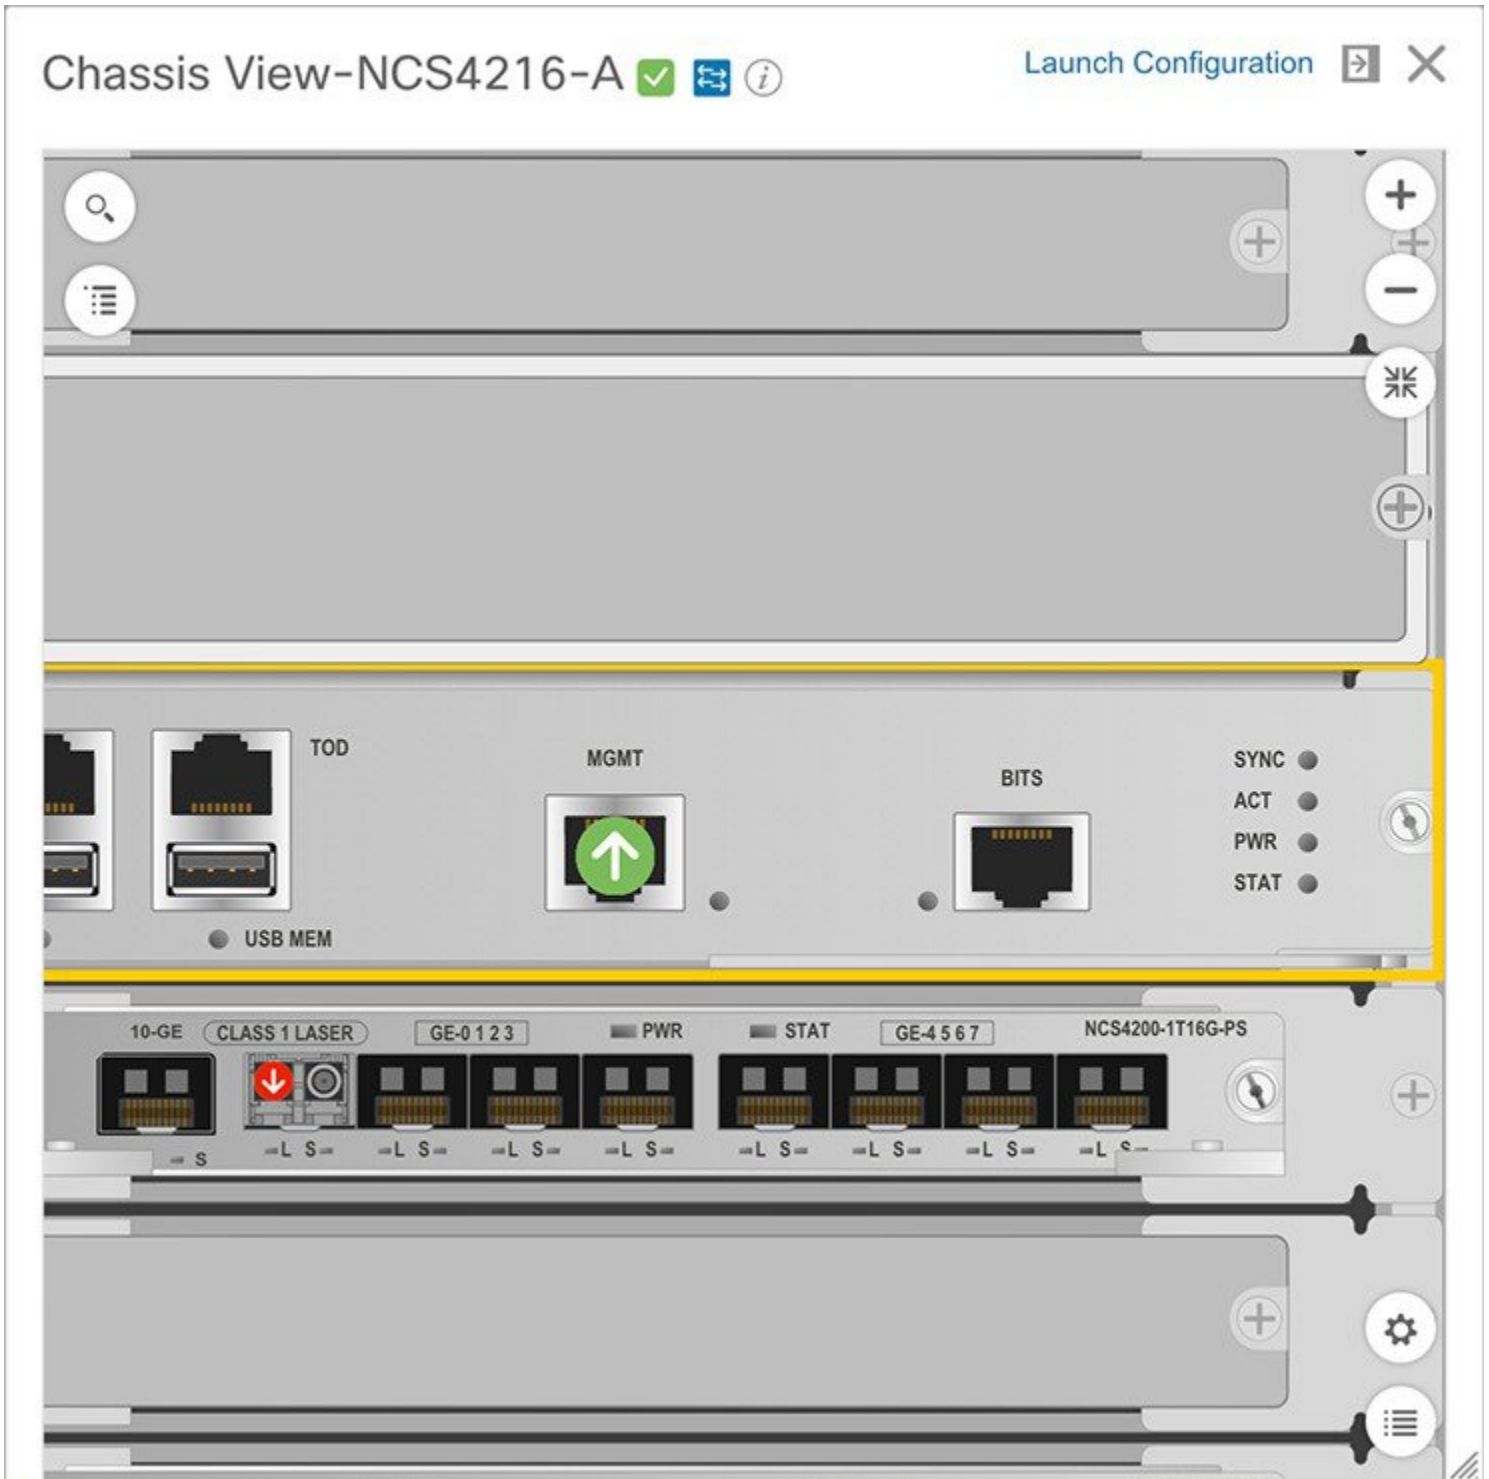An alarm badge in the Chassis View represents one or more alarms that have been localized to a piece of equipment. For an element with multiple alarms, the badge icon will convey the most severe alarm.



To customize the Chassis View so that alarm icons blink (to bring your attention them), click  from the bottom right of the view, then check the **Enable Alarm Blinking** check box.

To view the alarms specific to a device, do the following:

-
- Step 1** With a device's Chassis View open, click the **Launch Configuration** link. The Device Details page opens.
- Step 2** If not already selected, click the **Alarms** tab. All of the alarms that have been raised for the device are listed here.
- Step 3** To view the alarms for a specific device component (such as a line card or port), do one of the following:
- Double-click the component in the Chassis View.
 -  Click  to open the **Chassis Explorer**, then click its entry.
-

View Device Ports

You can get in-depth information about a device's physical ports from the Device Details page. You can also get basic port information from various 360 views.

To view a device chassis with its modules and ports, use the Chassis View. See [Open the Chassis View, on page 10](#).

To view this port information:	Do the following:
All Physical ports on a device (including port alias and residing module)	<ol style="list-style-type: none"> 1 Open the Device Details page. <ul style="list-style-type: none"> • Choose View > Details from the top right of the Device 360 view. • Click the device name hyperlink in a device table. 2 Under the Device Details tab, choose System > Physical Ports.
An interface's ports	Check the Interface tab on a 360 view
Ports connected to a module	Check the Modules tab on a Device 360 view
Ports connected to a neighbor	Check the Neighbors tab on a Device 360 view

For a matrix of ports states and icons, see [Port and Interface States, on page 17](#).

View Device Interfaces

Cisco EPN Manager provides the following ways to view device interfaces:

Ways to View Interfaces	For more information, see:
View details about a specific interface	Get a Quick Look at a Device Interface: Interface 360 View , on page 22
View a specific device's interfaces	<ul style="list-style-type: none"> • View a Specific Device's Interfaces: Device 360 View, on page 22 • Get Comprehensive Information About a Device's Interfaces Using the Device Details Page, on page 25

View a Specific Device's Interfaces: Device 360 View

Use the Device 360 view to quickly check the status of a device's interfaces.

-
- Step 1** Open the Device 360 view:
- Click the "i" icon next to an IP address in almost any device table
 - From the network topology, click a device in an expanded group, then click **View**
- Step 2** Click the **Interfaces** tab.
-

Get a Quick Look at a Device Interface: Interface 360 View

The Interface 360 view gives you a quick details about a specified interface. In addition to status, performance, and general interface information, you can enable and disable the interface from the Interface 360 view. The Interfaces 360 view also provides ways to open 360 views for circuits/VCs (depending on the interface configuration).

You can launch the Interface 360 view wherever you see an "i" icon next to an interface name—for example, in an alarms table, or in the various 360 views under the Interfaces or Endpoints tabs.

You can also view a specific interface in the topology map by choosing **Actions > Show in Topology** (at the top right of the Interface 360 view).

The Interface 360 view provides general interface and performance information at the top of the view, and more detailed interface information in tabs in the lower part of the view. The information the Interface 360 view displays depends on the interface configuration.



Note The tabs displayed will vary, depending on the type of interface you launched this view for.

Information Provided in Interface 360 View	Description
General information	<p>The interface name, status, description, type, device name; IP address, MAC address, and so forth. Using the menus in the top right of the pop-up window, you can also perform these tasks:</p> <ul style="list-style-type: none"> • Open a chassis view that highlights the port or line card the interface is associated with (View menu). This feature comes in handy when you need to describe to an onsite technician where to find the source of an issue. • Select the interface for a side-by-side comparison with another interface on the basis of information such as raised alarms and the current status of associated circuits and VCs (Actions menu)—see Compare Interface Information and Status. • View performance information for optical devices by opening the DWDM/OTN Performance dashboard from the View menu. See DWDM/OTN Performance Dashboard Overview. • Enable and disable the interface from the Actions menu. • Enable and disable the lockout of an MPLS interface from the Actions menu. You would lock out an MPLS interface before doing maintenance work on the TE Tunnel link that the interface belongs to. After you lock out an MPLS interface, be sure to manually sync the device. Otherwise, you will not have the option to disable the lockout later. • View the device on which the interface is located in a topology map (Actions menu).
Performance data	Graphs or charts reflecting various aspects of interface performance.
Alarms	Current alarms for the interface, including their severity, status, and the time they were generated. Also provides a launch point to the Alarm Browser.
Interfaces	Name, operational and admin status for each associated interface. Also provides a launch point for the Interface 360 view.
Circuit/VCS	(For interfaces that participate in provisioned circuits) Circuit/VC name, type, customer, status, and creation date. Also provides a launch point for the Circuit/VC 360 view.
EFPs	All EFPs associated with the interface. Also provides their operational status, admin status, and EFP type.

Optical Physical	Real-time performance monitoring data for the interface. This data is collected every 10 seconds, and the results of the last 10 pollings are displayed here. For a listing of the counters that can be displayed, see Reference—Performance Counters for Physical Interfaces .
------------------	---

Compare Interface Information and Status

From the **Comparison View**, you can perform a side-by-side comparison of multiple interfaces, viewing information such as IP and MAC address, raised alarms, and associated circuits and VCs. To compare interfaces, do the following:

-
- Step 1** For each interface you want to compare:
- a) Open its **Interface 360** view, as described in [Get a Quick Look at a Device Interface: Interface 360 View](#).
 - b) Choose **Actions > Add to Compare**.
The interface you selected is displayed at the bottom of the page. You can select a maximum of 4 interfaces.
- Step 2** Click **Compare**.
The **Comparison View** opens.
- Step 3** From the drop-down list at the top of the view, specify whether the view will show all available information or just the information that is unique to each device.
- Step 4** Click **Comparison View**, check the check box for the categories you want the view to display, and then click **Save**.
By default, all of the categories are already selected.
- Step 5** Scroll down the page to view the information provided for each category you selected.
Note the following:
- The **Comparison View** only displays information for two interfaces at a time. If you selected more than two, you will need to toggle to the interfaces that are not currently displayed.
 - To reorder the interfaces you have selected, click **Rearrange**.
 - Each interface's **View** and **Actions** menu is identical to the ones provided in its **Interface 360** view. If you select an option, the corresponding page opens.
 - You can minimize and maximize the categories displayed, as needed.
 - The **Comparison View** is also available for circuits and VCs, devices, and links. Whenever you select any of these elements from their respective 360 view for comparison, they are displayed in the corresponding tab. This allows you to switch between element types, as needed.
 - When you are done comparing interfaces, click **Back** at the top of the view and then click **Clear All Items** at bottom of the page. If tabs for other element types are still displayed, you will need to clear them as well.
-

Get Comprehensive Information About a Device's Interfaces Using the Device Details Page

Use the Device Details page to get extensive information about all of the interfaces that are configured on a device. For easier navigation, interfaces are grouped together by type.

-
- Step 1** Open the Device Details page.
- Click the device name hyperlink which appears in many of the device tables
 - Choose **View > Details** at the top right of the Device 360 view
- Step 2** Under the Device Details tab, double-click **Interfaces** to display a list of all interfaces (of all types) that are configured on the device.
- Step 3** To display all interfaces of the same type, click the type (such as **Ethernet Interfaces**).
- Step 4** To get details about a specific interface, click the interface name hyperlink.
-

View Device Modules

To view device module information, choose **Inventory > Device Management > Network Devices**, then launch a Device 360 or Device Details page, depending on how much information you want.

To get this information:	Use this navigation:
Basic module information: Status, type, ports	From the Device 360 view, click the Modules tab. To open the Device 360 view: <ul style="list-style-type: none"> • Click the “i” icon next to the device name in almost any device table • From the Network Topology, click a device (in an expanded view), then click View
Module equipment type and power information	From the Device Details page, choose System > Modules under the Device Details tab. To open the Device Details page: <ul style="list-style-type: none"> • Click the device name hyperlink which appears in many device tables • Choose View > Details from the top right of the Device 360 view

View Environment Information (Power Supplies, Fans)

Environment-related information, such as details about power supplies and fans, is displayed in a device's **Device Details** page. To access this information:


-
- Step 1** Do one of the following:
- Click the device name hyperlink that appears in many Cisco EPN Manager device tables and then click the **Device Details** tab (if it is not already selected).
 - Choose **View > Details** from the top right of a **Device 360** view and then click the **Device Details** tab (if it is not already selected).
- Step 2** From the **Features** pane, choose **System > Power Options & Fans**.
-

View Device Neighbors

Device neighbor information, such as the neighbor name, port number, index, and duplex setting, is displayed in a device's **Device 360** view.

-
- Step 1** Open the **Device 360** view:
- Click the *i* (**information**) icon next to the device name in almost any device table
 - From the network topology, click a device in an expanded group and click **View**
- Step 2** Click the **Neighbors** tab.
-

For example:

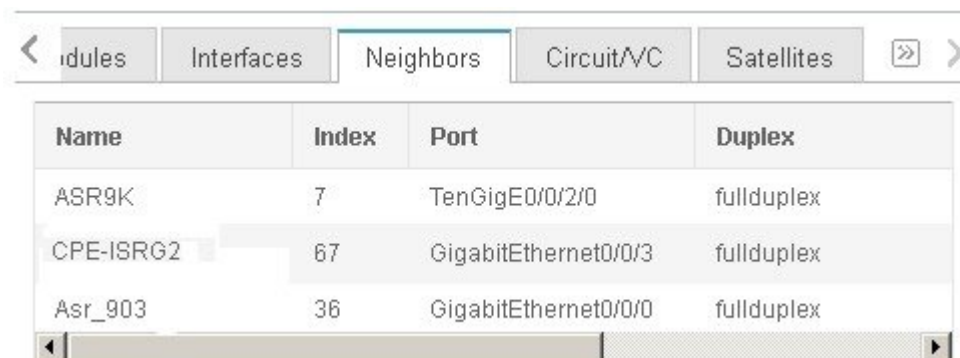

Name	Index	Port	Duplex
ASR9K	7	TenGigE0/0/2/0	fullduplex
CPE-ISRG2	67	GigabitEthernet0/0/3	fullduplex
Asr_903	36	GigabitEthernet0/0/0	fullduplex

Get More Information About Links

Cisco EPN Manager provides a variety of ways that you can view links and get more details about them:

To view link information for:	See the procedures in:
A specific link	Get a Quick Look at a Specific Link: Link 360 View
A specific link in a topology map	View a Specific Link in the Topology Map
A group in a topology map	View a Device Group's Links in a Network Topology Map
All of Cisco EPN Manager	View All Links in Cisco EPN Manager

View Circuits/VCs

Cisco EPN Manager provides a variety of ways that you can view circuits/VCs:

To view circuit/VC information for:	See the procedures in:
A specific circuit/VC in a topology map, in a Circuit/VC 360 view, or in a Circuit/VC Details page	<ul style="list-style-type: none"> • Get Quick Information About a Circuit/VC: Circuit/VC 360 View • Get Comprehensive Information About a Circuit/VC: Circuit/VC Details Window
A device	View a Specific Device's Circuits/VCs
A device group in a topology map or in an expanded table	View a Device Group's Circuits/VCs
All of Cisco EPN Manager	View All Circuits/VCs in Cisco EPN Manager

View Satellites

Cisco EPN Manager provides the following ways to view satellite information for host-satellite configurations:

Ways to View Satellites	For more information, see:
View all satellites in a location group using a topology map	View Cisco ASR 9000 Host-Satellite Topologies in the Topology Map

View a specific device's satellites from a Device 360 view	<ul style="list-style-type: none">• Identify the Satellites Connected to a Cisco ASR 9000 Host• Get Basic Device Information: Device 360 View, on page 2
View details about a specific satellite, including the hosts it is connected to, using the Satellite 360 view	Identify the Hosts Connected to a Satellite