

# **Manage Reports**

- Reports Overview, on page 1
- Available Reports, on page 1
- Create, Schedule, and Run a New Report, on page 18
- Customize Report Results, on page 20
- Filter and Customize Report Data Using User Defined Fields, on page 20
- Report Output Examples: Web GUI Output and CSV File Output, on page 24
- Troubleshooting Tips for an Empty Report, on page 26

## **Reports Overview**

Cisco EPN Manager reports provide information about system and network health as well as fault information. You can customize and schedule reports to run on a regular basis. Reports can present data in a tabular, or graphical format (or a mixture of these formats). You can also save reports in CSV or PDF format. The CSV or PDF files can be saved on the Cisco EPN Manager server for later download, or sent to an e-mail address.

Cisco EPN Manager provide the following type of data:

- Current—Provides a snapshot of data that is not time-dependent.
- Historical—Periodically retrieves data from the device and stores it in the Cisco EPN Manager database.
- Trend—Generates a report using aggregated data, which is collected and summarized as minimums, maximums, and averages.

With Cisco EPN Manager, you can filter these reports based on a specific criteria. For example, IPSLA Y.1731 reports can be filtered based on probes and PWE3 reports can be filtered based on Virtual Connection Identifier (VCID). You can also export reports, sort reports into logical groups, and archive reports for long-term storage.

## **Available Reports**

The Reports Launch Pad provides access to the following Cisco EPN Manager reports:

- Carrier Ethernet Performance Reports, on page 2
- Optical Performance Reports, on page 9
- Performance Reports, on page 14
- Network Summary Reports, on page 15
- Device Reports, on page 16

### **Carrier Ethernet Performance Reports**

This section lists the Carrier Ethernet (CE) Performance reports supported by Cisco EPN Manager. It also includes the monitoring policies that must be enabled so that the proper report data is collected. For more information about monitoring policies, see How Device Health and Performance Is Monitored: Monitoring Policies.

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
IPSLA Graphs	Graphical representation of average delay backward, average delay forward, average delay two-way, jitter forward, jitter backward, average backward packet loss ratio, average forward packet loss ratio, and availability.	<i>IPSLA</i> For details about the IPSLA monitoring policy, see IP SLA Monitoring Policy.	Response Time Avg, Response Time Max,Response Time Min, Jitter Neg DS Avg, Jitter Neg SD Avg, Jitter Pos DS Avg, Jitter Pos SD Avg, Packet Loss Overall Util Avg, Packet Loss DS Util Avg, Packet Loss SD Util Avg, Latency One Way SD Avg, Latency One Way SD Max, Latency One Way SD Min, Latency One Way DS Avg, Latency One Way DS Max, Latency One Way DS Min
IPSLA Statistics	Tabular representation of probe index, IPSLA probe type, TOS, target IP, VRF name, average delay two-way, average delay forward, average delay backward, packet loss ratio forward, packet loss ratio backward, average jitter forward, average jitter backward, average backward packet loss ratio, average forward packet loss ratio, and availability.	<i>IPSLA</i> For details about the IPSLA monitoring policy, see IP SLA Monitoring Policy.	Jitter Neg DS Avg, Jitter Neg SD Avg, Jitter Pos DS Avg, Jitter Pos SD Avg, Packet Loss Overall Util Avg, Packet Loss DS Util Avg, Packet Loss SD Util Avg, Latency One Way SD Avg, Latency One Way SD Max, Latency One Way SD Min, Latency One Way DS Avg, Latency One Way DS Max, Latency One Way DS Min

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
IPSLA Top N	Tabular representation of probe index, IPSLA probe type, TOS, target IP, VRF name, average delay two-way, maximum delay two-way, average delay two-way, average delay forward, maximum delay forward, maximum delay forward, average delay backward, maximum delay backward, minimum delay backward, average forward packet loss ratio, average backward packet loss ratio, jitter forward, jitter backward and availability.	<i>IPSLA</i> For details about the IPSLA monitoring policy, see IP SLA Monitoring Policy.	Response Time Avg, Response Time Max,Response Time Min, Jitter Neg DS Avg, Jitter Neg SD Avg, Jitter Pos DS Avg, Jitter Pos SD Avg, Packet Loss Overall Util Avg, Packet Loss DS Util Avg, Packet Loss SD Util Avg, Latency One Way SD Avg, Latency One Way SD Max, Latency One Way SD Min, Latency One Way DS Avg, Latency One Way DS Max, Latency One Way DS Min
IPSLA Y.1731 Graphs	Graphical representation of average delay backward, average delay forward, jitter two-way, jitter forward, jitter backward, average backward frame-loss ratio, average forward frame-loss ratio, and availability of the Y.1731 probe.	<i>IPSLA Y.1731</i> For details about the IPSLA Y.1731 monitoring policy, see IP SLA Y.1731 Monitoring Policy.	Average Delay Two Way, Average Delay Forward, Average Delay Backward, Average Positive Jitter Forward, Average Negative Jitter Backward, Average Positive Jitter Backward, Average Negative Jitter Backward, Average Forward Frame Loss Ratio, Average Backward Frame Loss Ratio
IPSLA Y.1731 Statistics	Tabular representation of operation type, CFM domain, source, destination, frame type, average delay two-way, average delay forward, average delay backward, average delay backward, average jitter, forward frame loss ratio, backward frame loss ratio, average forward jitter, average backward jitter, and availability of the Y.1731 probe.	<i>IPSLA Y.1731</i> For details about the IPSLA Y.1731 monitoring policy, see IP SLA Y.1731 Monitoring Policy.	Average Delay Two Way, Average Delay Forward, Average Delay Backward, Average Forward Frame Loss Ratio, Average Backward Frame Loss Ratio, Average Jitter

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
IPSLA Y.1731 Top N	Tabular representation of operation type, CFM domain, source, destination, frame type, average delay two-way, maximum delay two-way, minimum delay two-way, average delay forward, maximum delay forward, maximum delay forward, average delay backward, average delay backward, average delay backward, average delay backward, average forward frame loss ratio, maximum forward frame loss ratio, minimum forward frame loss ratio, average backward frame loss ratio, maximum backward frame loss ratio, jitter forward, jitter backward, and availability of the devices that are configured using the Y.1731 technology.	<i>IPSLA Y.1731</i> For details about the IPSLA Y.1731 monitoring policy, see IP SLA Y.1731 Monitoring Policy.	Average Delay Two Way, Average Delay Forward, Average Delay Backward, Average Positive Jitter Forward, Average Negative Jitter Backward, Average Negative Jitter Backward, Average Forward Frame Loss Ratio, Average Backward Frame Loss Ratio
Interface Availability	Displays the interface details for the devices in the network.	Interface Health For details about the Interface Health monitoring policy, see Interface Health Monitoring Policy.	Statistics
Interface Graphs	Graphical representation of the interface traffic statistics over time: in traffic, out traffic, in utilization and out utilization.	Interface Health For details about the Interface Health monitoring policy, see Interface Health Monitoring Policy.	Statistics

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
Interface Top N	Tabular representation of Top N reports of interface traffic statistics: maximum in traffic, average in traffic, average out traffic, average out traffic, maximum out utilization, maximum out utilization, and current in utilization, current out utilization, in errors, out errors, in discards, out discards and interface availability.	Interface Health For details about the Interface Health monitoring policy, see Interface Health Monitoring Policy.	Statistics
Interface Traffic	Tabular representation of interface traffic statistics: in traffic rate, out traffic rate, in utilization, out utilization, in errors, out errors, in discards, out discards, in packets rate, out packets rate (including L3 packets), CRC errors and percentage.	Interface Health For details about the Interface Health monitoring policy, see Interface Health Monitoring Policy.	Statistics and CRC
Link Optical SFP Power Level Reports	Tabular representation ofthe A end device, A endinterface, Z end device,Z end interface, and theirTx and Rx power levels.NoteTheprerequisitefor this reportis to haveCDP/LLDPenabled linksin thenetwork.	<i>Optical SFP</i> For more details about the Optical SFP monitoring policy, see Optical SFP Monitoring Policy.	Optical Tx Power, Optical Rx Power

I

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
Link Utilization	Tabular representation of A end device, A end interface, A member of, A end in utilization, A end out utilization, Z end device, Z end interface, Z member of, event time, and the interface utilization of the interfaces participating in the link, including the link aggregate group they belong to.	Interface Health For details about the Interface Health monitoring policy, see Interface Health Monitoring Policy.	Statistics
	Note The prerequisite for this report is to have CDP/LLDP enabled links in the network.		
MPLS Link Statistics	Representation of link delay and jitter in MPLS segment routing.	MPLS Link Performance For more details about the MPLS monitoring policy, see MPLS Link Performance Monitoring Policy.	Average Delay, Min Delay, Max Delay, RX Packets, TX Packets
Optical SFP interface report	Tabular representation of transmit/receive power levels of the devices for interfaces. Includes device name, interface name, RxPower, TxPower, EVENTTIME.	<i>Optical SFP</i> For more details about the Optical SFP monitoring policy, see Optical SFP Monitoring Policy.	Optical Tx Power, Optical Rx Power

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
PWE3 Statistics	Tabular representation of PWE3 traffic and availability statistics including device name, IP address, VC ID, peer address, VC type, current in bit rate, current out bit rate, current in byte rate, current out byte rate, current in packet rate, current out packet rate, global availability, in availability and out availability.	<i>Pseudowire Emulation</i> <i>Edge to Edge</i> For details about the Pseudowire Emulation Edge to Edge monitoring policy, see Pseudowire Emulation Edge to Edge Monitoring Policy.	PW VC Perf Total In HC Packets Rate, PW VC Perf Total In HC Bytes Rate, PW VC Perf Total Out HC Packets Rate, PW VC Perf Total Out HC Bytes Rate, PW VC Oper Status Up, PW VC Inbound Oper Status Up, PW VC Outbound Oper Status Up, PW VC Oper Status Down, PW VC Perf Total In HC Packets, PW VC Perf Total In HC Bytes, PW VC Perf Total Out HC Packets, PW VC Perf Total Out HC Bytes, PW VC Inbound Oper Status Down, PW VC Outbound Oper Status Down
PWE3 Top N	Tabular representation of Top N reports of PWE3 statistics including device name, IP address, VC ID, peer address, VC type, average in byte rate, average out byte rate, maximum in byte rate, maximum out byte rate, average in bit rate, average out bit rate, maximum in bit rate, maximum out bit rate, average in packet rate, average out packet rate, maximum in packet rate, maximum out packet rate, global inbound availability and global outbound availability.	<i>Pseudowire Emulation</i> <i>Edge to Edge</i> For details about the Pseudowire Emulation Edge to Edge monitoring policy, see Pseudowire Emulation Edge to Edge Monitoring Policy.	PW VC Perf Total In HC Packets Rate,PW VC Perf Total In HC Bytes Rate, PW VC Perf Total Out HC Packets Rate, PW VC Perf Total Out HC Bytes Rate, PW VC Oper Status Up, PW VC Inbound Oper Status Up, PW VC Outbound Oper Status Up, PW VC Oper Status Down, PW VC Perf Total In HC Packets, PW VC Perf Total In HC Bytes, PW VC Perf Total Out HC Packets, PW VC Perf Total Out HC Bytes, PW VC Inbound Oper Status Down, PW VC Outbound Oper Status Down

I

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
PWE3 Traffic Graphs	Graphical representation of PWE3 traffic including average in bit rate, average out bit rate, average in byte rate, average out byte rate, average out byte rate, average out packet rate, average out packet rate, global availability, in availability and out availability.	<i>Pseudowire Emulation</i> <i>Edge to Edge</i> For details about the Pseudowire Emulation Edge to Edge monitoring policy, see Pseudowire Emulation Edge to Edge Monitoring Policy.	PW VC Perf Total In HC Packets Rate, PW VC Perf Total In HC Bytes Rate, PW VC Perf Total Out HC Packets Rate, PW VC Perf Total Out HC Bytes Rate, PW VC Oper Status Up, PW VC Inbound Oper Status Up, PW VC Outbound Oper Status Up, PW VC Oper Status Down, PW VC Perf Total In HC Packets, PW VC Perf Total In HC Bytes, PW VC Perf Total Out HC Packets, PW VC Perf Total Out HC Bytes, PW VC Inbound Oper Status Down, PW VC Outbound Oper Status Down
QoS Policing	Tabular representation of the details about the policy map: ClassMap. The details include, direction of the policy map, average exceed byte rate, maximum exceed byte rate, maximum exceed date, average violate byte rate, maximum violate byte rate, maximum violate date, average conformed byte rate, maximum conformed byte rate, maximum conformed date, CIR current rate and PIR current rate. Also, graphical representation of exceed, violate and conformed byte rates.	<i>Quality of Service</i> For details about the Quality of Service monitoring policy, see Quality of Service Monitoring Policy.	Conformed Bytes Rate, Exceeded Bytes Rate, Violated Bytes Rate, Exceeded Packets, Violated Bytes, CIR, Conformed Bytes, Exceeded Bytes, PIR

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
QoS Policy	Graphical and tabular representation of the details about the policy map: ClassMap. The details include, direction of the policy map, average pre-policy byte rates, maximum pre-policy byte rates, average post-policy byte rates, maximum post-policy byte rates, maximum pre-policy dates, maximum post-policy dates, average drop in percentage, maximum drop in percentage, maximum drop date, average pre-policy of CIR, average interface speed in percentage, maximum pre-policy of CIR, maximum interface speed in percentage, average pre-policy of CIR, maximum pre-policy of CIR and interface speed date. Also, graphical representation of pre-policy, post-policy, drop bit rate, and drop percentage.	Quality of Service For details about the Quality of Service monitoring policy, see Quality of Service Monitoring Policy.	Drop Bytes Rate, Drop Percent, Post-Policy Bytes Rate, Pre-Policy Bytes Rate, Pre-Policy Percent of CIR, Post-Policy Percent of CIR, CIR, Post-Policy Rate (Bytes/Sec),Pre-Policy Bytes

#### **Optical Performance Reports**

Table 1: Optical Performance Reports lists the Optical Performance reports supported by Cisco EPN Manager. For all the graphical reports, ensure that you select a maximum of four interfaces when you schedule or run these reports. For all the tabular reports, use the Show field to specify the number of records to be displayed in a page when you schedule or run these reports.

The performance data displayed when you generate these reports depend on the monitoring policy parameter that you activate when you enable the monitoring policy. For a detailed list of monitoring type and the associated performance counters, see Monitoring Policies Reference. For more information about monitoring policies, see Monitor Device and Network Health and Performance. For information about how to interpret the report results, see Report Output Examples: Web GUI Output and CSV File Output, on page 24.



**Note** Enable the *Optical 1 day*, *Optical 15 mins*, or *Optical 30 secs* monitoring policies to populate data for these reports.

#### Table 1: Optical Performance Reports

Report	Report Type	Provides:	Monitoring Policy Parameters That Must Be Activated	Parameters That Must Be Polled
Ethernet	Ethernet Reports–NCS1K, NCS2K and NCS4K	Graphical and tabular reports that lists the total number of packets requested by the higher-level protocols to be transmitted, and which were not addressed to a multicast or broadcast address at this sub-layer, including those that were discarded or not sent. The details also include total number of multicast frames transmitted error free, total number of packets requested by higher-level protocols, total number of transmitted octects, total number of octets received on the interface and number of received packets that were discarded because of errors. To customize the report output for a new report, choose <b>Reports &gt; Report Launch Pad &gt; Optical</b> <b>Performance &gt; Ethernet</b> , click <b>New</b> , and then click <b>Customize</b> in the <b>Settings</b> area . To customize the report output for an existing report, choose <b>Reports &gt; Report Launch Pad &gt; Optical</b> <b>Performance &gt; Ethernet</b> , click the required report link, and then click <b>Customize</b> in the <b>Settings</b> area.	<i>Optical 1 day</i> , <i>Optical 15 mins</i> , or <i>Optical 30 secs</i> For details about the information collected by optical monitoring policies, see Monitoring Policies Reference. For information about how to interpret the report results, see Report Output Examples: Web GUI Output and CSV File Output, on page 24.	Ethernet

Report	Report Type	Provides:	Monitoring Policy Parameters That Must Be Activated	Parameters That Must Be Polled
OTN	Section Monitoring NEnd & FEnd Reports- NCS1K, NCS2K and NCS4K	Graphical and tabular reports that list the OTN section monitoring details of devices and interfaces in the OTN circuit type. The details include number of background block errors and its ratio, number of errored seconds and its ratio, number of severely errored seconds and its ratio, number of unavailable seconds, and number of failure counts.	N dOptical 15 mins, or Optical 30 secsO oFor details about the information collected by optical monitoring policies, see Monitoring Policies Reference.O d dFor information about how to interpret the report results, see Report Output Examples: Web GUI Output and CSV File Output, on page 24.O e e e e e e fD e e f e eD e e e eD e e eD e e eD e e eD e 	OTN DWDM Infrastructure <sup>1</sup>
	Path Monitoring NEnd & FEnd Reports	Graphical and tabular reports that list the OTN path monitoring details of devices and interfaces in OTN circuit type. They provide details such as number of background block errors and its ratio, number of errored seconds and its ratio, number of severely errored seconds and its ratio, number of unavailable seconds, and number of failure counts.		
	Forward Error Correction Reports- NCS1K, NCS2K and NCS4K	Graphical and tabular reports that list the OTN forward error correction details of devices and interfaces in the OTN circuit type. The details include ECW, UCW, the number of bit errors corrected, number of uncorrectable words, and Pre-forward error correction based bit error counts detected during the performance monitoring time interval.		
	Tandem Connection Monitoring NEnd & FEnd Reports	Graphical and tabular reports that provide the tandem connection monitoring details for the devices and interfaces in the OTN circuit type. The details include number of background block errors and its ratio, number of errored seconds and its ratio, number of severely errored seconds and its ratio, number of unavailable seconds, and number of failure counts.		OTN
	GFP Statistics Reports–NCS2K and NCS4K	Graphical and tabular reports that provide the generic framing procedure (GFP) statistics for the devices in the OTN circuit type. The GFP statistics include number of GFP frames and bytes received and transmitted, number of single and multiple bit errors received, number of packets received with CRC errors, invalid GFP type, and invalid CID, number of CMF frames received and transmitted, and number of cHEC and tHEC multiple bit errors.		OTN DWDM Infrastructure <sup>1</sup>

I

Report	Report Type	Provides:	Monitoring Policy Parameters That Must Be Activated	Parameters That Must Be Polled
Physical	Optical Power Reports-NCS1K, NCS2K, and NCS4K Laser Bias Current Reports-NCS1K,	minimum, and maximum percentage of laser bias current.	Optical 1 day, Optical 15 mins, or Optical 30 secs For details about the information collected by optical monitoring	Physical DWDM Infrastructure <sup>1</sup>
	NCS2K, and NCS4K Optical Physical Report -NCS1K, NCS2K, NCS4K	The laser bias current is the normalized value expressed as the integer percentage. Graphical and tabular reports that provide the average, minimum, and maximum value of optical power on the unidirectional port. The details include the average, minimum and maximum Optical Service Channel power level The details of average, minimum and maximum optical signal-to-noise ratio, optical power warning, chromatic dispersion, second order polarization mode dispersion, polarization dependent loss, differential group delay, polarization change rate, and phase noise.	policies, see Monitoring Policies Reference. For information about how to interpret the report results, see Report Output Examples: Web GUI Output and CSV File Output, on page 24.	

Report	Report Type	Provides:	Monitoring Policy Parameters That Must Be Activated	Parameters That Must Be Polled
SDH Or SONET	SDH Regenerator Section Report	Graphical and tabular reports that provide the performance monitoring details of the SDH regenerator section layer for the devices in your network. The details include the number of background block errors and its ratio, number of errored seconds and its ratio, number of severely errored seconds and its ratio, number of unavailable seconds, number of errored block, and number of out-of-frame seconds.	<i>Optical 1 day</i> or <i>Optical 15 mins</i> For details about the information collected by optical monitoring policies, see Monitoring Policies Reference.	SDH/SONET DWDM Infrastructure <sup>1</sup>
	SDH Multiplex Section NEnd & FEnd Reports - NCS2K	Graphical and tabular reports that provide the performance monitoring details of SDH multiplex section layer for the devices in your network. The details include number of background block errors and its ratio, number of errored seconds and its ratio, number of severely errored seconds and its ratio, number of unavailable seconds, number of errored blocks, number of failure counts, protection switching — Switching count, ring count, span count, working count, duration, ring duration, span duration and working duration.	For information about how to interpret the report results, see Report Output Examples: Web GUI Output and CSV File Output, on page 24.	
	SDH Multiplex Section NEnd & FEnd Reports - NCS4K	Graphical and tabular reports that provide the performance monitoring details of SDH multiplex section layer for the devices in your network. The details include number of background block errors and its ratio, number of errored seconds and its ratio, number of severely errored seconds and its ratio, number of unavailable seconds, and number of errored blocks.		
	SONET Section Report	Graphical and tabular reports that provide performance monitoring details of SONET section layer for the devices in your network. The details include number of coding violations, number of errored seconds, number of severely errored seconds, and number severely errored frame seconds.		
	SONET Line NEnd & FEnd Reports - NCS2K	Graphical and tabular reports that provide performance monitoring details of SONET line layer for the devices in your network. The details include number of coding violations, number of errored seconds, number of severely errored seconds, number of unavailable seconds, number of failure counts, protection switching— Switching count, ring count, span count, working count, duration, ring duration, span duration and working duration.		
	SONET Line NEnd & FEnd Reports - NCS4K			

Report	Report Type	Provides:	Monitoring Policy Parameters That Must Be Activated	Parameters That Must Be Polled
		Graphical and tabular reports that provide performance monitoring details of SONET line layer for the devices in your network. The details include number of coding violations, number of errored seconds, number of severely errored seconds, number of unavailable seconds, and number of failure counts.		

1. You must activate this parameter for all Cisco Optical Networking Services (ONS) and Cisco Network Convergence System (NCS) 2000 series devices.

## **Performance Reports**

This section lists the basic performance reports supported by Cisco EPN Manager. It also lists the monitoring policies and parameters that must be enabled for each of the report type. These reports are applicable for both Optical and Carrier Ethernet technologies.



Note These reports are not supported for Cisco NCS 2000 devices.

For more information about monitoring policies, see Monitor Device and Network Health and Performance.

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
Application Summary	Representation of the application configuration details.	NA	NA
Conversations	Displays the conversation details.	NA	NA
End User Summary	Displays the end user summary reports for each client.	NA	NA
Environmental Temperature	Tabular representation of Device IP Address, name, Sensor Name, Sensor Type, Maximum Inlet Temp, Maximum Other Temp, and Eventtime for network devices.	<i>Device Health</i> For details about the Device Health monitoring policy, see Device Health Monitoring Policy.	

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
Summarized Temperature Report	Tabular representation of Device IP Address, Device Name, Sensor Name, Sensor Type, Max Time Stamp, Maximum (Celsius), Min Time Stamp, and Minimum (Celsius) for network devices.	<i>Device Health</i> For details about the Device Health monitoring policy, see Device Health Monitoring Policy.	Environment Temperature
Current Temperature Report	Tabular representation of Device IP Address, Device Name, Sensor Name, Sensor Type, Temp (Celsius), and Current Time Stamp for network devices.	Device Health For details about the Device Health monitoring policy, see Device Health Monitoring Policy.	Environment Temperature
Site Summary	Displays the site summary reports in the network.	NA	NA
Threshold Violations	Lists the threshold violation alarms data (source, event type, category and description) for your network in a table.	Interface Health For details about the Device Health monitoring policy, see Device Health Monitoring Policy.	Admin Status Up/Down Operational Status Up/Down Admin Status Up and Operational Status Down Percentage
Voice Video Summary	Lists the voice video summary reports in the network.	NA	NA
WAN Performance Analysis	Lists the WAN Application Performance Analysis in the network.	NA	NA
WAN Traffic Analysis Summary	Displays the WAN traffic details.	NA	NA

## **Network Summary Reports**

This section lists the Network Summary reports supported by Cisco EPN Manager. These reports provide information about the health of the network.

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Polled
Link Flap Report	Tabular representation of the A end device, A end interface, Z end device, Z end interface, link name and the number of flaps.		NA

### **Device Reports**

This section lists the device reports supported by Cisco EPN Manager. It also lists the monitoring policies and parameters that must be enabled for each of the report type. These reports are applicable for both Optical and Carrier Ethernet technologies.

Note

Device reports are not supported for Cisco NCS 2000 devices.

For more information about monitoring policies, see Monitor Device and Network Health and Performance.

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
Alarm Report	List of alarms for devices in the network. Includes severity, message, status, failure source, time stamp, creation time, device timestamp, owner, category, condition, location, service affecting, satellite ID.	NA	NA
CPU Utilization	Table listing all devices with their average CPU usage for a specified time period.	Device Health For details about the Device Health monitoring policy, see Device Health Monitoring Policy.	CPU Utilization
Detailed Hardware	Hardware information for the entire inventory or device types (for example, Switches and Hubs, Routers, and Optical Transport).	NA	NA
Detailed Software	Software information for the entire inventory or device types (for example, Switches and Hubs, Routers, and Optical Transport).	NA	NA
Device Availability	Table listing all the available devices in the network and their reachability percentage.	NA	NA
Device Credential Verification	The credential status of the devices in your network. Includes the login, reachability, and protocol statuses of each device. Also, includes the last modified date and time for the device.	NA	NA

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
Device Health	CPU utilization, memory utilization, and availability information of the network devices for a specified time period. Includes minimum, maximum, and average for all CPU modules and memory pools on a device.	<i>Device Health</i> For details about the Device Health monitoring policy, see Device Health Monitoring Policy.	CPU Utilization
DMVPN Reports	DMVPN information for the devices in the network.	NA	NA
Event Report       List of events for devices in your network. Includes description, failure source, time stamp, device timestamp, severity, category, condition.		NA	NA
GET VPN Network Status	VPN Network Status for the devices in the network.	NA	NA
Identity Capability	Identity capability summary information for the switches in the network.	NA	NA
Interface Detail	Interface details for the devices in your network. Includes device name, port name, port description, MAC address, admin status, operational status.	NA	NA
Inventory	Basic inventory data for the devices in your network. Includes count of controllers by model, count of controllers by software version, controller inventory, count of APs by model, count of APs by software version, AP inventory, disassociated AP(s), autonomous AP inventory, maintenance mode AP(s), count of MSEs by version, MSEs, count of switches by model, count of switches by version, switch inventory, switch devices software images, count of routers by model, count of routers by version, router inventory, router devices software images, count of Cisco Interfaces and Modules devices by model, count of Cisco Interfaces and Modules devices inventory, Cisco Interfaces and Modules - software images, count of storage networking devices by model, count of storage networking devices by software version, storage networking devices inventory, storage networking devices - software images, count of security and VPN by model, count of security and VPN by software version, security and VPN inventory.	NA	NA
Link Report	Link Utilization for OTU, OTS, ODU, OMS enabled link in network.	Device Health For details about the Device Health monitoring policy, see Device Health Monitoring Policy.	NA
Memory Utilization	Memory utilization information for a specified time period. Includes information for all memory pools/modules.	NA	Memory Pool Utilization

Report Type	Provides:	Monitoring Policies That Must Be Enabled	Parameters That Must Be Activated
Port Capacity	Interface utilization percentages for the devices in the network.	NA	NA
PTP State	PTP Clock Class, PTP Servo, Port Index and PTP Boundary Clock data.	PTP/SyncE Monitoring Policy	NA
		For details about the PTP/SyncE Monitoring Policy, see PTP/SyncE Monitoring Policy.	
PWID Inventory	Displays and exports the PWID of the local device and peer device. Lists all PWID for all services per domain and per router.	Device Health For details about the Device Health monitoring policy, see Device Health Monitoring Policy.	NA
VLAN	VLAN information for the switches in the network.	NA	NA
Wired Detailed Device Inventory	Detailed inventory data for the wired devices in your network. Includes system information, chassis information, module information, module port interfaces, VLAN interfaces, software image information, memory pool information, flash devices, flash partition, flash file.	NA	NA
	<b>Note</b> Up to 5 devices can be selected if you want to run the report immediately without saving it. To include more than 5 devices, save or schedule the report.		
Wired Device Availability	List of wired devices with highest availability in your network. Includes device name, average availability (%).	NA	NA
Wired Module Detail	Table listing detailed module information for wired devices in the network including device name, device IP, equipment name, number of ports, operational status, vendor equipment type, manufacturer, serial number, and UDI.	NA	NA
Wired Port Attribute	Port attribute information such as admin status, operational status, mac address, etc. Includes VLAN ID, access mode VLAN, device IP address, Interface IP address, description, MAC address, Admin status, operational status, type, MTU, speed, duplex, IsTrunk, trunk encapsulation	Device Health For details about the Device Health monitoring policy, see Device Health Monitoring Policy.	NA

# Create, Schedule, and Run a New Report

The Report Launch Pad provides access to all Cisco EPN Manager reports from a single page. From this page, you can perform all report operations: Create, save, view, schedule, and customize.

To see more report details, hover the cursor over the tooltip next to the report type.

To create, schedule, and run a new report:

- **Step 1** From the left sidebar, choose **Reports** > **Report Launch Pad**.
- **Step 2** Locate the report you want to launch, then click New.

A new text box, **Last**, is added as part of the **Reporting Period** field which allows users to generate reports for the last 24 hours.

**Note** You must enter a value between 1 to 24, i.e. for the last 24 hours.

- Step 3In the Report Details page, enter the report title.You can edit the Report Title field.
- **Step 4** Choose the appropriate **Report By** category from the drop down list.
- **Step 5** The **Report Criteria** field allows you to sort your results depending on the previous **Report By** selection made.
  - **Note** If you select the virtual domain checkbox at the top, edit button is enabled when one or more values present in the report criteria filter.
- **Step 6** Click Edit to open the device selection wizard and select the required device. Click on Preview tab to confirm the selected devices and click Ok. You can also remove the selected devices.

The parameters shown in the Report Details page depend on the report type you chose. With some reports, you are required to customize the report results. For more information about how to customize a report result, see Customize Report Results, on page 20.

**Note** In Client reports, SSIDs are listed only if their Wireless LAN Controllers are mapped to a Virtual Domain.

- **Step 7** If you plan to run this report later or as a recurring report, enter the required Schedule parameters.
- **Step 8** To run the report, choose one of the following options:
  - Run—Runs the report without saving the report setup.
  - Save—Saves this report setup without immediately running the report. If you have entered Schedule parameters, the report runs automatically at the scheduled date and time.
  - Run and Save—Saves this report setup and runs the report immediately.
  - Save and Export—Saves the report, runs it, and exports the results to a file. You will be prompted to:
    - Select the exported report's file format (CSV or PDF). Exported CSV file is a single .csv file which has capability to hold one million records. If the number of records exceeds one million, then another CSV file will be generated accomodating the remaining records. Finally, both the CSV files will be provided in zip format.
    - **Note** Above mentioned condition is applicable only for the reports listed under Reports Launchpad which is called as simple reports, while the custom reports will not have this conditional check.
    - In Export Delimiter field, enter any one of the following characters \* # @ % ^ & |, ! \$ to view the exported data separated by a delimiter.
    - **Note** The **Export Delimiter** field is available only when the selected export file format is CSV.
    - Choose whether to send an email when the report has been generated. If you choose this option, you must enter the destination email address and the email subject line content, and choose whether you want the exported file included as an attachment to the email.

When you are finished, click **OK**.

- Save and Email—Saves the report, runs it, exports the results as a file, and emails the file. You will be prompted to:
  - Select the exported report file format.
  - Enter the destination email address and the email subject line content.
    - **Note** In Cisco EPN Manager, selecting the **Export Format** as CSV and clicking the **Save and Email** option will send the CSV file in the zip format, if the file holds more than 15k records. A file with less than 15k records will be sent as a plain CSV file.

When you are finished, click OK.

Cancel—Returns to the previous page without running or saving this report.

## **Customize Report Results**

Many reports allow you to customize their results, letting you include or exclude different types of information. Reports that support this feature display a Customize button. Click this button to access the Create Custom Report page and customize the report results.

To customize a report result:

- **Step 1** Choose the report you want to customize:
  - a) Create a new report. Click **Reports** > **Report Launch Pad**.
  - b) Customize a recurring report. Click **Reports > Saved Report Templates** and, then click the report name hyperlink.
- **Step 2** In the Report Details page, click **Customize**.
- **Step 3** On the Create Custom Report page, complete the required information, then click **Apply** to confirm the changes.
- **Step 4** Click **Save** in the Report Details page.

## Filter and Customize Report Data Using User Defined Fields

You can create custom attributes and assign values to them. See Create User Defined Fields for Custom Values for information about how to create user defined fields (UDF). You can then use the UDFs to filter and customize the report results.

Cisco EPN Manager scans the values of UDFs created every two minutes and generates a UDF.json file, in which the metadata are saved. You can access this file from the

/opt/CSCOlumos/conf/rfm/classes/com/cisco/server/reports/conf/UDF.json location.

Here is an example of how the metadata for the UDFs are displayed in the UDF.json file:

[ {

```
"label": "internal",
  "hidden": true,
  "displayName": "Internal",
  "fixedColumn": false
},
{
  "label": "location",
  "hidden": true,
  "displayName": "Location",
  "fixedColumn": false
},
{
  "label": "quality",
  "hidden": true,
  "displayName": "Quality",
  "fixedColumn": false
},
```

In this example:

- the attribute, *label* is the user defined field created in the Administration > Settings > System Settings > General > User Defined Fields page.
- the attribute, *hidden* is set to True, by default. If this attribute is set to False, the UDF is hidden on the Reports page. You need to set this attribute to False so that the UDF is available for selection when you customize the report results.
- the attribute, *displayName* is used to change the UDF name that will be displayed in the report results.
- The attribute, *fixedColumn* is applicable only when the hidden attribute is set to False.

After you have made the required changes in the UDF.json file, you can customize the report results. See Customize Report Results, on page 20.

You can filter and customise reports based on UDFs for the following reports:

Report Category	Report Name	Report Type
CE Performance	Interface Graphs	Interface In Utilization Graph
		Interface In Traffic Graph
		Interface Out Utilization Graph
		Interface Out Traffic Graph
	Interface Top N	Interface TopN In Utilization
		Interface TopN In Traffic
		Interface TopN Out Utilization
		Interface TopN Out Traffic
		Interface Bottom N Availability
	Interface Traffic	Interface Errors and Discards
		Interface Traffic Report
		Interface CRC Errors Report
Performance	Environmental Temperature	Summarized Environmental Temperature
		Current Environmental Temperature
Device	CPU Utilization	CPU Utilization
		Top CPU Utilization
		Bottom CPU Utilization
	Memory Utilization	Memory Utilization
		Top Memory Utilization
		Bottom Memory Utilization
	Wired Module Detail	Wired Module Detail Report Details
	Wired Detailed Device Inventory	Wired Detailed Device Inventory Report Details

You can also change the filter type of the UDF in the UDF.json file. The default filter type is String.

Here are few examples of filter types and their definitions:

```
[
  {
    "label": "internal",
    "displayName": "Internal",
```

L

```
"hidden": false,
  "fixedColumn": false,
  "filterMetadata": {
   "sqlDataType": "Boolean",
    "attr": "internal",
    "label": "UDF: Internal Used",
    "filterType": "boolean"
 }
},
  "label": "location",
  "displayName": "Location",
  "hidden": false,
  "fixedColumn": false
},
{
  "label": "quality",
  "displayName": "Quality",
  "hidden": false,
  "fixedColumn": false,
  "filterMetadata": {
    "sqlDataType": "Number",
    "selectItems": {
      "1": "High Quality",
      "2": "Mid Quality",
     "3": "Low Quality"
    },
    "attr": "quality",
    "label": "UDF: Quality",
   "filterType": "enumeration"
  }
},
{
  "label": "sapid",
  "displayName": "SAP ID",
  "hidden": false,
  "fixedColumn": true,
  "filterMetadata": {
   "sqlDataType": "Number",
    "attr": "sapid",
   "label": "UDF: SAP ID",
   "filterType": "numeric"
  }
},
{
  "label": "startTime",
 "displayName": "Start Time",
  "hidden": false,
  "fixedColumn": false,
  "filterMetadata": {
   "sqlDataType": "Timestamp",
   "attr": "startTime",
   "label": "UDF: Start Time",
   "filterType": "datetime"
  }
},
{
 "label": "vendor",
  "displayName": "Vendor",
  "hidden": false,
  "fixedColumn": true,
  "filterMetadata": {
   "sqlDataType": "String",
   "selectItems": {
```

]

```
"huawei": "Hua Wei",
    "alu": "Alcatel Lucent",
    "cisco": "Cisco"
    },
    "attr": "vendor",
    "label": "UDF: Vendor",
    "filterType": "enumeration"
  }
}
```

After you have made the required changes in the UDF.json file, use the **Advanced Filter** option in the Report Details page to filter the report data.

## **Report Output Examples: Web GUI Output and CSV File Output**

In this example, a section monitoring report is generated for Cisco NCS 2000 series devices that are available in the near end of the network. You can choose to view the result, either at the bottom of the Report Details page, or export the results to a CSV or PDF file. For more information about how to create and run a report, see Create, Schedule, and Run a New Report, on page 18.

The following figure shows how the results are displayed at the bottom of the Report Details page.

SectionMonitoringNearEndNCS2K Generated: 2015-Apr-02, 17:52:03 IST			Cisco EPN Manager								
Report By: Interfa Devices: M6-235-1 Report Interval: 1 Reporting Period: Show: All records Section Monitori	40;nmtgte-m6-159;M6-23 i minutes Last 6 hours	5-139									
Device Name	Device IP Address	Interface	DateTime	BBE-SM	BBER-SM	ES-SM	ESR-SM	SES-SM	SESR-SM		FC-SM
Device Name	Device IP Address	interrace	paternine	EBE 3N	DDERSH	and and	ESR-SM	585-5M	SESR-SM	UAS-SM	I-C-S01
a secondario de la compañía de la c	10.58.235.140	CHAN-2-2-2	2015-Apr-02, 12:00:00 IST	0	0.00000	0	8.00000	0	0.00000	0	0
M6-235-140					Start Start						and the second state
M6-235-140 M6-235-140 M6-235-140	10.58.235.140	CHAN-2-2-2	2015-Apr-02, 12:00:00 IST	0	0.00000	0	8.00000	0	0.0000	o	o

If scheduling is enabled and you choose to export the result to a CSV file, the report is saved in the repository named /localdisk/ftp/reports. You can adjust the location of the report repository. For more information, see Report Purging.



Note

If scheduling is disabled and you choose to export the result to a CSV file, the report is saved in the repository named /localdisk/ftp/reportsOnDemand.

The file naming convention for the CSV file is *ReportTitle\_yyyymmdd\_hhmmss.csv*, where *yyyymmdd* is the year, month, and date, and *hhmmss* is the hours, minutes, and seconds when the report result was exported.

1	A	В	С	D	E	F	G	Н	I I	J	K	L
1	Section Monit	toring Report for Ci	sco NCS 2000	Series Devices								
2	Generated: 20	17:52:03 IST										
3	Report By: Int	erfaces By Device										
4	Devices: M6-2	235-140;nmtgte-m6	-159;M6-235-	139								
5	Report Interva	al: 15 minutes										
6	Reporting Per	riod: Last 6 hours										
7	Show: All reco	ords										
8												
9	Section Monit	oring NEnd Report										
10	Device Name	Device IP Address	Interface	DateTime	BBE-SM	BBER-SM	ES-SM	ESR-SM	SES-SM	SESR-SM	UAS-SM	FC-SM
11	M6-235-140	10.58.235.140	CHAN-2-2-2	2015-Apr-02, 12:00:00 IST	0	0	0	0	0	0	0	
12	M6-235-140	10.58.235.140	CHAN-2-2-2	2015-Apr-02, 12:15:00 IST	0	0	0	0	0	0	0	
13	M6-235-140	10.58.235.140	CHAN-2-2-2	2015-Apr-02, 12:30:00 IST	0	0	0	0	0	0	0	
14	M6-235-140	10.58.235.140	CHAN-2-2-2	2015-Apr-02, 13:00:00 IST	0	0	0	0	0	0	0	

The following figure shows how the results are displayed in a CSV file.

The following table explains how you can interpret the section monitoring report result.

Column Name	Description
Device Name	Name of the device that is in the near end of the network.
Device IP Address	IP address of the device.
Interface	Interface name of the device.
DateTime	Date and time when the section monitoring data was collected for the device. The value in this column depends on the report interval that you chose when you created the report. The report interval can be 15 minutes or 24 hours.
BBE-SM	Number of background block errors for the device.
BBER-SM	Background block error ratio for the device.
ES-SM	Number of errored seconds for the device.
ESR-SM	Errored seconds ratio for the device.
SES-SM	Number of severely errored seconds for the device.
SESR-SM	Severely errored seconds ratio for the device.
UAS-SM	Number of unavailable seconds for the device.
FC-SM	Number of failure counts (AIS/RFI detected) for the device.

For detailed descriptions of performance counters that are displayed in the results of other optical performance reports, see Performance Counters for Optical Monitoring Policies.

# **Troubleshooting Tips for an Empty Report**

If the report was run successfully but you do not have an output file that can be exported, you can try one of the following troubleshooting tips:

Check if you have	For example:
enabled the correct monitoring policy. For details on what monitoring policies must be enabled, see Monitoring Policies Reference.	For QoS reports, QoS monitoring policy must be enabled.
enabled the periodic collection.	For any System Monitoring Periodic reports (CPU/Disk/Memory), the periodic collection must be enabled. Once enabled, the report must be generated after 12 hours to see the output.
	Note Periodic collection can be enabled by clicking <b>Periodic Collection Enable</b> button under System Monitoring Setting in https:// <i>Server</i> IP>/webacs/ncsDiag.do.
chosen the correct device type for a particular report.	Do not choose NCS devices for generating CE Performance reports as they are optical devices.
selected the correct time period while generating a report.	You cannot choose a 2-week time period if you enabled the policy only 2 days ago.
configured the device properly. For more details, see Configure Devices So They Can Be Modeled and Monitored.	For QoS reports, QoS must be configured/enabled on the device.
successful device inventory collection. For more details, see Find Devices With Inventory Collection or Discovery Problems	For the reports to have data, the inventory collection status must be <b>Completed</b> .