



Monitor and Troubleshoot Circuits/VCs

- [Check Circuits/VCs for Faults, on page 1](#)
- [Identify Which Circuits/VCs are Affected by a Specific Fault, on page 2](#)
- [Get More Information About a Circuit/VC Failure, on page 3](#)
- [Troubleshoot a Service Failure Using OAM Commands, on page 4](#)
- [Use EOAM Templates to Troubleshoot EVCs, on page 8](#)
- [Run a Performance Test on a Circuit/VC, on page 9](#)
- [View Performance Metrics and Reports for Circuits/VCs, on page 16](#)
- [Trace and Visualize the Full Route of Circuits/VCs, on page 18](#)

Check Circuits/VCs for Faults

Cisco EPN Manager provides several ways to see, at a glance, if there are any problems with circuits/VCs:

- **Circuit list**—The colored icon to the left of each circuit/VC name indicates the primary state of the circuit/VC. If the primary state indicates a problem with the circuit/VC, you can access detailed alarm information for the circuit/VC, as described below.
- **Circuit/VC 360 view**—The Alarms tab in the Circuit/VC 360 view shows all alarms on all devices over which the circuit/VC is configured. Click the information icon next to the circuit/VC name to access the Circuit/VC 360 view.
- **Alarm Table**—The alarm table shows all alarms for all devices, for a specific device group, or for a specific device. Choose **Monitor > Monitoring Tools > Alarms and Events** to access the alarm table. If you have identified an alarm in the Circuit/VC 360 view, you can get more details about the alarm in the alarm table. You can search for the alarm or for the device/link that generated the alarm using the quick filter or the advanced filter. Each alarm in the table can be expanded to show detailed information about the alarm, including which circuits/VCs are affected by the alarm.
- **Circuit/VC Overlay in the Network Topology**—When a circuit/VC is selected in the Circuits/VCs list, it is represented on the network topology as an overlay on top of the existing topology. If the alarm is on a specific device, the alarm badge will appear on the device as usual. If the alarm is on the link between the circuit/VC endpoints, the alarm badge will appear on the link.
- **Multi-layer trace for optical circuits**—See [Trace and Visualize the Full Route of Circuits/VCs, on page 18](#).

Identify Which Circuits/VCS are Affected by a Specific Fault

To identify which circuits/VCS are affected by a specific fault:

-
- Step 1** From the left side bar, choose **Monitor > Monitoring Tools > Alarms and Events**.
 - Step 2** In the alarm table, locate the required alarm. You can use the simple or advanced filters to locate the alarm, if necessary.
 - Step 3** Click on the arrow to the left of the row to expand the row and display the alarm details.
 - Step 4** Locate the Impacted Circuits/VCS pane. All circuits/VCS that are affected by the selected alarm are listed in this pane, with basic information for each circuit/VC. You can access the Circuit/VC 360 view to get more details about the circuit/VC by clicking the *i* icon.
 - Step 5** If necessary, you can modify or delete the circuit/VC from the Impacted Circuits/VCS pane by selecting a circuit/VC and clicking the Modify or Delete button. This opens the Provisioning Wizard. See [Modify a Circuit/VC](#) and [Delete a Circuit/VC](#) for more information.
-

Selected 1 / Total 19

Change Status Assign Annotation Delete Show Quick Filter

Severity	Message	Status	Failure Source	Timestamp	Owner	Categ...	Condition
Major	Device 'ME3800X-PAN-1.cisco.com'. Pseudowire tunnel with Local IP '4.4.4.4', PwId '115', and Remote IP '9.9.9.9' is down	Not Ac...	ME3800X-PAN...	March 4, 2015 ...		Switch...	Pseudowire...

General Information

Source 10.56.23.27

Acknowledged No

Category Switches and Hubs

Alarm Found At March 4, 2015 4:44:02 PM IST

Alarm Last Updated At March 4, 2015 4:50:33 PM IST

Alarm Detected Through Carrier Ethernet

Severity Major

Previous Severity Cleared

Messages

Device 'ME3800X-PAN-1.cisco.com'. Pseudowire tunnel with Local IP '4.4.4.4', PwId '115', and Remote IP '9.9.9.9' is down

Impacted Circuits/VCS

Alarms	Name	Type	Date Created	Last Modified	Customer
Major	EvcLink_EthPw...	EVC	March 04, 2015 16:...	March 04, 2015 16:...	Unknown

Get More Information About a Circuit/VC Failure

Cisco EPN Manager provides information about why the provisioning operation of a circuit/VC has failed so that you can troubleshoot the issues. In the Circuits/VCS table, you can identify problems with a circuit/VC by looking at the Provisioning state and the Serviceability and Discovery states. If there has been an error during the provisioning of a circuit/VC and the circuit/VC could not be created, the Provisioning state will be Create Failed. You can click the *i* icon in the Provisioning column to see the configuration of the devices involved in the failure, as well as details about the specific error(s) that occurred.

For optical circuits, the combination of Serviceability state Down and Discovery state Partial can indicate a problem with the circuit. In this case, you can click the *i* icon in the Serviceability column to see the reason that the Serviceability state is Down.



Note Information about a circuit/VC failure can also be accessed from the Circuit/VC 360 view. See [Get Quick Information About a Circuit/VC: Circuit/VC 360 View](#).

To view additional information about a circuit/VC provisioning failure from the Circuits/VCS table:

- Step 1** From the left sidebar, choose **Maps > Topology Maps > Network Topology**.
- Step 2** In the **Network Topology** window, click the **Circuits/VCS** tab, and then click the **Circuits/VCS** hyperlink. A table listing all the circuits is launched in a separate window.
- Step 3** Locate the circuit for which the provisioning operation has failed. The Provisioning state will be **Create Failed**.
- Step 4** Click the *i* icon next to the **Provisioning** column. A popup window is displayed and lists the devices on which the provisioning errors occurred.
- Step 5** Select a device to see its configuration and error details.
- Step 6** Click the *i* icon next to the **Serviceability** column to view the **Serviceability Details** data pop-up window that displays information about why the provisioning operation has failed for the circuit.

Note The *i* icon is available only if the serviceability status is down and the discovery status is partial.

For optical circuits, if the Serviceability state is Down and the Discovery state is Partial, click the *i* icon next to the Serviceability column to view the Serviceability Details data pop-up window that displays information about why the circuit's serviceability state is Down. You can also view the Serviceability Details data pop-up window from the Circuit/VC 360 view. For information about how to access the Circuit/VC 360 view, see [Get Quick Information About a Circuit/VC: Circuit/VC 360 View](#).

Primary...	Alarms	Name	Provisioning	Serviceability	Discovery	Type	Customer	Date Created
	Cleared	prova	Create succee...	Unavailable	Missing	OCHNC	Unknown	June 06, 2016 01:26:10 PM
	Critical	Mimma-edit-cepm2	None	Admin Down	Full	OCHCC	Unknown	June 01, 2016 10:29:26 AM
	Critical	TRAIL-MIMMA-FIXATO	None	Admin Down	Full	OCH-Trail	Unknown	June 01, 2016 10:29:26 AM
	Critical	TEST-OCHNC	None	Admin Down	Full	OCHNC	Unknown	June 01, 2016 10:29:28 AM
	Minor	WWWWW	None	Admin Down				
	Cleared	QQQQQ	None	Admin Down				
	Cleared	prova	None	Admin D...				
	Cleared	MXP-IS-IMPLICIT	None	Admin Down				
	Cleared	TRAIL-MXP-IS-IMPLICIT	None	Admin Down	Full	OCH-Trail	Unknown	June 06, 2016 01:31:23 PM
	Cleared	OCHCC_NCS2KE-235-160_2	None	Up	Partial	OCHCC	Unknown	June 06, 2016 01:31:23 PM
	Cleared	OCHCC_NCS2KE-235-160_1	None	Up	Partial	OCHCC	Unknown	June 06, 2016 01:31:23 PM
	Cleared	OCHCC_NCS2KE-235-160_6	None	Up	Partial	OCHCC	Unknown	June 06, 2016 01:31:23 PM

Serviceability Details

NO-AVAILABLE-TXP-MATCHING-REQUEST

Message Details:
CPS-1620: Alien wavelength not provisioned on port Unit-4 ADD 14 (AID: PCHAN-4-14-RX)

Troubleshoot a Service Failure Using OAM Commands

Cisco EPN Manager provides the ping and traceroute features to troubleshoot service failures. You can use OAM commands to access these features and monitor the connectivity and path between two endpoints in a

service. You can then isolate and resolve the failure. The technologies that are supported for the different IOS devices are:

- MPLS LSP, Pseudowire and CFM: Cisco IOS-XE and Cisco IOS-XR
- MPLS Bidirectional TE Flex LSP and VRFs: Cisco IOS-XE

The launch points for the OAM command vary based on:

- Technology type—[Launching from Network Devices Table, on page 5](#) (This launch point for OAM commands is supported only for the **MPLS LSP** technology.)
- Service type—[Launching from Circuit 360, on page 5](#)
- Event type—[Launching from Alarm Browser, on page 6](#)

You can perform ping or traceroute using the OAM commands to troubleshoot a service failure. See [Perform a Ping or Traceroute Using OAM Command, on page 7](#)

Launching from Network Devices Table

To launch MPLS LSP technology OAM command from Network Devices table:

-
- Step 1** Choose **Inventory > Device Management > Network Devices**.
- Step 2** In the Network Devices table, select a MPLS enabled device.
- Step 3** Click the >> icon above the Network Devices table and select **OAM Commands**.
-

Launching from Circuit 360

If you are launching OAM command from the Service/Circuit 360, the service type is the criteria that determines the technology that is supported. See [Overview of Circuit/VC Discovery and Provisioning](#) to know in detail about the different service types.

To launch OAM command from Circuit 360:

-
- Step 1** Choose **Maps > Topology Maps > Network Topology**.
- Step 2** In the **Network Topology** window, click the **Circuits/VCS** tab and click the *i* icon next to the circuit to view the Circuit 360. Based on the service type of the circuit you selected, the supported technology OAM commands as mentioned in this table are displayed.

Service Type for which you can launch the OAM command:	Technology supported
Carrier Ethernet	<ul style="list-style-type: none"> • Segment Routing LSP • Pseudowire • CFM
Circuit Emulation (CEM)	<ul style="list-style-type: none"> • MPLS LSP • Pseudowire • Bidirectional TE (Flex LSP)

Service Type for which you can launch the OAM command:	Technology supported
L3VPN	<ul style="list-style-type: none"> • MPLS LSP • VRF
Bidirectional TE Tunnel (Flex LSP)	<ul style="list-style-type: none"> • MPLS LSP • Bidirectional TE (Flex LSP)

Step 3 Click **Actions** and select the **Technology OAM** that is displayed for the service type you chose.

Launching from Alarm Browser

If you are launching OAM command from the alarm browser, the event type is the criteria that determines the technology that is supported.

To launch OAM command from an alarm browser:

Step 1 Choose **Monitor > Monitoring Tools > Alarms and Events**.

Step 2 In the Alarms table, select an alarm with an event type listed in the "Event Type for which you can launch the OAM command" column in this table.

Technology supported	Event Type for which you can launch the OAM command:
MPLS Bidirectional TE Tunnel (Flex LSP)	<ul style="list-style-type: none"> • mplsTunnelUp • mplsTunnelDown • mplstunnelReoptimized • ROUTING-MPLS_TE-5-LSP_UPDOWN • MPLS_TE-5-TUN • MPLS_TE-5-LSP
VRFs in L3VPN	<ul style="list-style-type: none"> • mplsL3VpnVrfUp • mplsL3VpnVrfDown • mplsL3VpnNumVrfRouteMaxThreshCleared • mplsL3VpnVrfNumVrfRouteMaxThreshExceeded • mplsL3VpnVrfRouteMidThreshExceeded
Pseudowires in Carrier Ethernet and Circuit Emulation	<ul style="list-style-type: none"> • cpwVcDown • cpwVcUp • XCONNECT-5-PW_STATUS Down • L2-L2VPN_PW-3-UPDOWN
CFM in Carrier Ethernet	<ul style="list-style-type: none"> • E_CFM-3-REMOTE_MEP_DOWN_TIME_OUT • L2-CFM-6-MEP_CHANGE

Step 3 Click **Troubleshoot** above the Alarms table and select **OAM Commands**.

Perform a Ping or Traceroute Using OAM Command

To perform a ping or traceroute or multipath (only for SR) using OAM command:

Step 1 Launch the *Technology*OAM Command window. See [Troubleshoot a Service Failure Using OAM Commands, on page 4](#) for the OAM command launch points for the supported technologies.

Step 2 Based on the launch point, select the required fields as displayed in this table for the selected technology type.

Technology Type	Launched from Alarm Browser	Launched from Service/Circuit 360
Pseudowire	Details are auto-populated	From the Pesudowire Endpoint drop-down list, choose the endpoint participating in the service.
LSP	From the Destination LDP ID drop-down list, choose the LDP ID of the destination endpoint participating in the service.	Specify the Source and Destination from the drop-down lists. In the Destination field, <ul style="list-style-type: none"> • If a LDP enabled device is selected, then Ping and Traceroute options are enabled. • If SR enabled device is selected, then Ping, Traceroute, Multipath, Nil FEC Ping and Nil FEC Traceroute options are enabled. (Nil FEC options are enabled only if Label, OutputInterface and NextHop fields are populated)
MPLS Bidirectional TE Tunnel (Flex LSP)	Choose the tunnel's path as Active , Working , or Path-Protect for which you want to perform a ping or traceroute. Cisco EPN Manager performs the ping or traceroute on both directions, that is, from headend to tailend and vice versa.	Choose the tunnel's path as Active , Working , or Path-Protect for which you want to perform a ping or traceroute. Cisco EPN Manager performs the ping or traceroute on both directions, that is, from headend to tailend and vice versa.
VRF in L3VPN	From the End Points drop-down list, choose the endpoint of another VRF that belongs to the same VPN.	From the Source End Points and Destination End Points drop-down lists, choose the source and destination endpoints of another VRF that belongs to the same VPN.
CFM in Carrier Ethernet	From the Destination MEP ID drop-down list, choose the MEP ID of the destination endpoint participating in the service.	From the Source MEP ID and Destination MEP ID drop-down lists, choose the MEP IDs of the source and destination endpoints participating in the service.

Technology Type	Launched from Alarm Browser	Launched from Service/Circuit 360
SR TE		From the Policy Name drop-down list, choose a policy. Note: This option is enabled for devices configured over static and dynamic SR policies or EVPN technology.

Step 3 Choose **Actions > Ping** to perform a ping, choose **Actions > Traceroute** to perform a traceroute, and choose **Actions > Multipath** to perform a multipath action.

The results of the ping, traceroute and multipath commands are displayed in the following formats:

**Note**

- For MPLS bidirectional TE tunnels, the results are displayed for both directions, that is, from headend to tailend and vice versa.
- For Pseudowire, the results are displayed in visual and tabular formats and as raw data.

- Visual—The service with the endpoints and its hops is displayed on a map. Hover your mouse cursor over the endpoints to view additional information such as the outgoing and incoming interfaces.

**Note**

The traceroute command results for all the technologies are displayed in visual format.

- Table Data—The information such as the outgoing and incoming interfaces, device names, and labels of the endpoints participating in the service are displayed in a tabular format.

**Note**

The traceroute and multipath command results are displayed in tabular format.

- Raw Data—The information about the endpoints participating in the service is displayed as unformatted source data.

**Note**

Ping, traceroute and multipath command results are displayed as raw data.

Use EOAM Templates to Troubleshoot EVCs

Cisco EPN Manager provides several predefined templates that can be used to monitor the connectivity and performance of virtual connections (VCs) in a Carrier Ethernet network. To use these templates, choose **Configuration > Templates > Features & Technologies > CLI Templates > System Templates - CLI**. See [Perform EOAM Connectivity and Performance Checks](#) for more information.

Run a Performance Test on a Circuit/VC

When you run a performance test, Cisco EPN Manager connects to the network elements to provide real-time data. To get historical information, see [View Performance Metrics and Reports for Circuits/VCS, on page 16](#).

- [Performance Test Based on Y.1564 for EVCs, on page 9](#)
- [Performance Test Based on Y1731 for EVCs, on page 11](#)
- [Performance Test for Optical Circuits, on page 13](#)
- [Performance Test for Circuit Emulation Services, on page 15](#)

Performance Test Based on Y.1564 for EVCs

CE performance tests verify the correct configuration and performance of CE EVCs at the time of activation. You can also use the CE performance tests to troubleshoot an EVC that is already in operation.

The Y.1564 Ethernet service activation or performance test methodology allows turning up, installing, and troubleshooting Ethernet-based services. Using this test, you can verify the service configuration and performance from UNI to UNI. This ensures that the SLA will be met according to the bandwidth profile purchased, and the promised class of service.

These tests provide complete validation of Ethernet service-level agreements (SLAs) in a single test. Using a traffic generator performance profile, you can create the traffic based on your requirements. The network performance, such as throughput, loss, and availability, are analyzed using Layer 2 traffic with various bandwidth profiles.



Note You can only run performance tests on EVCs that are configured on the network and discovered by Cisco EPN Manager.

Supported Devices

The Y.1564 performance test is supported on the following devices running IOS 15.4(S) or IOS-XE 3.12S and higher:

- List of devices that can be specified as either source or destination:
 - Cisco ASR 920
 - Cisco ASR907 with RSP3 as both source and destination (loopback)
 - Cisco ASR903 with RSP2, RSP3 as both source and destination (loopback)
 - Cisco ASR 901
 - Cisco ASR9K (as loopback)
 - Cisco NCS 4201
 - Cisco NCS 4202
 - Cisco NCS 4206

- Cisco NCS 4216
- NCS 540 (as a loopback)
- Cisco NCS55xx (as loopback)
- Cisco ME 1200
- List of devices that can be specified only as destination (loopback):
 - Cisco NCS 4206
 - Cisco ASR 903 RSP/RSP1

Running a Y.1564 Performance Test

To run a Y.1564 performance test on an EVC, do the following:

Before you begin

If you want to run a Y.1564 performance test on an EVC that resides on a ME1200 device, enter the following QoS configuration on both the source and destination interfaces before you run the test:

```
Interface <interface-name>
qos map tag-cos pcp 0 dei 0 cos 0 dpl 0
qos map tag-cos pcp 0 dei 1 cos 0 dpl 1
qos map tag-cos pcp 1 dei 0 cos 1 dpl 0
qos map tag-cos pcp 1 dei 1 cos 1 dpl 1
qos map cos-tag cos 0 dpl 0 pcp 0 dei 0
qos map cos-tag cos 0 dpl 1 pcp 0 dei 1
qos map cos-tag cos 1 dpl 0 pcp 1 dei 0
qos map cos-tag cos 1 dpl 1 pcp 1 dei 1
```

-
- Step 1** Choose **Maps > Topology Maps > Network Topology** to open the **Network Topology** page.
- Step 2** From the toolbar, click **Device Groups** to open the **Device Groups** pop-up window.
- Step 3** Locate and click the device group that contains the circuit/VC you want to test, then close the pop-up window.
- Step 4** Click the **Circuits/VCS** tab, locate the relevant service, and then click its *i* (**information**) icon to open its **Circuit/VC 360** view.
- Step 5** From the top right corner of the view, choose **Actions > Y.1564 Test** to open the Y.1564 performance test settings page.
- Note** This test can also be initiated from the **Circuit/VC** tab in a device's **Device 360** view and the **Circuits/VCS & Network Interfaces** page. See [View a Device Group's Circuits/VCS](#) and [View Circuits/VCS](#).
- Step 6** Configure the settings for the performance test:
- a) In the **Test Mode** field, specify whether this will be a one- or two-way test by clicking the appropriate radio button. Note that in the case of a two-way test, loopback will be created on the service instance of the destination device.
 - b) In the **End Points** area, choose the source and destination device, interface, and EFP ID from the drop-down lists.
 - c) In the **Service Configuration Test** area, specify the duration of each iteration, the size of packets to be generated, and the rate at which traffic will be generated.
 - If you choose the **CIR/EIR** radio button, specify values (in kilobits per second) for the Committed Information Rate (CIR) and Excess Information Rate (EIR). The CIR is the long-term average transmission rate, whereas the EIR is the long-term average excess transmission rate.

- If you select the **Color Aware Test** check-box, specify the Class of Service (CoS) values between 0 to 7 for the **Conform Action** and **Exceed Action**. The CoS values must be set different for **Conform Action** and **Exceed Action** to differentiate and prioritize the traffic. Also, you may specify the values (in kilobytes per second) for the Committed Burst Size (CBS) and Excess Burst Size (EBS) to define the committed or excess traffic that can be transmitted in bursts at temporary rates above the CIR.

Note The **Color Aware Test** check-box will be enabled only for FPGA enabled devices with 10G ports. “Color Aware” is used to describe the mode where the customer is marking each frame as green or yellow, and the network takes this marking into account at the bandwidth profiler and traffic policer.

- If you check the **Step Load CIR** check box, the test will generate traffic at four different levels: 25, 50, 75, and 100% of the CIR value you specify. Note that this option is not available if the CIR is set to a value lower than 8 kbps.
- If you choose the **Custom Rates** radio button, 1000 kbps is set by default. Change this value, if necessary.
- If you are running a one-way performance test, you can only specify a custom traffic rate.

d) In the **Service Acceptance Criteria** area, enter the highest acceptable frame loss ratio value (in percent) in the **FLR** field.

- If you also want to set a frame transfer delay (FTD) and frame delay variation (FDV) value, check the corresponding check box and then enter the appropriate value (in milliseconds).

Note The **FTD** and **FDV** check-boxes will be enabled only for FPGA enabled devices with 10G ports.

- If any of the thresholds you set are exceeded during the performance test, the EVC will be deemed as having failed the test.

e) (Optional) In the **Frame Settings** area, specify values for the following parameters:

- IP version—IPv4 or IPv6
- Inner and outer VLAN ID—Identify the source and destination VLAN ID you want to test

Step 7 Click **Run Test**.

When the test is completed, the results are displayed at the bottom of the Y.1564 performance test settings page.

Performance Test Based on Y1731 for EVCs

The Y.1731 Performance Monitoring (PM) provides a standard ethernet PM function that includes measurement of ethernet frame delay, frame delay variation, frame loss, and frame throughput measurements specified by the ITU-T Y-1731 standard and interpreted by the Metro Ethernet Forum (MEF) standards group. Using this test, you can verify the delay and loss measurements such as the delay and loss probe status, delay and loss probe availability, two-way delay, two-way jitter, loss forward, and loss backward for your circuit/VC.



Note This performance test is supported on Cisco IOS, IOS-XR and IOS-XE devices.

Before you begin

Following are the prerequisites that must be met before you run a performance test based on Y.1731 for a circuit/VC:

- The circuit/VC, along with the participating devices, on which you want to run the performance test, must be operationally up.
- Ensure that the MEP ID matches the domain name for all the devices participating in the circuit/VC.

Step 1 From the left sidebar, choose **Maps > Topology Maps > Network Topology**.

Step 2 Click **Device Groups**, and then select the location that contains the circuit/VC you want to test.

Step 3 In the **Network Topology** window, click **Circuits/VCs**.

Step 4 Locate the required circuit/VC, and then click the information icon to access its Circuit/VC 360 view.

Step 5 Choose **Actions > Y.1731 Test**.

Note The performance test can also be initiated from the circuit/VC details window and from the expanded list of circuits/VCs. See [View a Device Group's Circuits/VCs](#) and [View Circuits/VCs](#).

Step 6 Choose the required source and destination devices and their corresponding interfaces.

Step 7 From the **CoS** drop-down list, choose the priority of the probe. The default value is 0.

Step 8 Choose the required measurement type. The options are **Delay**, **Loss**, and **Loss & Delay**.

Note While delay measurement is done using Delay Measurement Message (DMM) probe, loss measurement is done by Synthetic Loss Measurement Message (SLM) probe. In case of ASR 1K devices, delay measurement using Loss Measurement Message (LLM) probe is only supported.

Step 9 If required, define the advanced performance test parameters as follows:

- **Probe Length**—Choose the length of the probe in seconds. For example, if the probe length is set to 30 seconds, the statistical data is collected every 30 seconds and displayed in the test results area.
- **Packet Size**—Enter the size (in bytes) of the packets that you want to send for each probe.
- **Burst Interval**—Choose the burst interval in seconds. This defines the time interval between two sets of packets that are sent for a probe.
- **Packet Interval**—Choose the packet interval in milliseconds. This defines the time interval between two packets that are sent for a burst.
- **Packet Count**—Enter the number of packets that will be sent for a burst.

For example, if the burst interval, packet interval, and packet count are set to 30 sec, 1000 ms, and 10 respectively, 10 packets will be sent in the interval of 1000 ms between one packet and the next packet. Once all the 10 packets are sent, there will be an interval of 30 sec after which the next set of 10 packets will be sent.

Step 10 Click **Run Test**. When the test is completed, the results will be displayed at the bottom of the Performance Test page, under the Test Results area.

Performance Test for Optical Circuits

Cisco EPN Manager performance test for optical circuits is based on the ITU-T recommendations as defined in G.709 and G.798.

Cisco EPN Manager supports the following performance tests for Optical Circuits:

- [Optical Performance Monitoring Parameters, on page 13](#)
- [Run PRBS Test on Circuits \(ODU UNI\), on page 13](#)

Optical Performance Monitoring Parameters

Optical Performance Monitoring Parameters monitor the quality of optical signals and are used to measure the average optical power transmitted and received between end points in optical circuits. From these measurements, you can derive critical network performance parameters such as channel presence verification, channel wavelength, ASE noise, optical signal power, optical signal to noise ratio (OSNR), and electrical signal to noise ratio (eSNR) per channel. You can then use these parameters to manage the network reliability and quality of service.

Follow the steps below to view the performance monitoring parameters for an optical circuit:

-
- Step 1** From the left sidebar, choose **Maps > Topology Maps > Network Topology**.
- Step 2** Select the device group that contains the circuit/VC you want to test.
- Step 3** In the Circuits/VCS pane on the left, locate the required service and click the *i* icon to access its Circuit/VC 360 view.
- Step 4** Choose **Actions > Optical PM Parameters**.
- Note** The performance test can also be initiated from the circuit/VC details window and from the expanded list of circuits/VCS. See [View a Device Group's Circuits/VCS](#) and [View Circuits/VCS](#).
- Step 5** Select an optical monitoring type based on which the performance data will be displayed. For more information about the optical monitoring types and the associated performance counters, see [Performance Counters for Optical Monitoring Policies](#).
- Step 6** Choose the performance monitoring time interval as 15 minutes or 24 hours to collect the performance data from the device.
- Step 7** Specify the time interval to automatically refresh the performance data.
- Step 8** Click **Auto Refresh**. The performance data for the circuit is displayed as a tabular representation. For the detailed descriptions of the performance data, see [Performance Counters for Optical Monitoring Policies](#).

Based on the time interval specified to refresh the performance data, the newly retrieved data is displayed at the beginning of the table. For example, if the time interval specified is 10 seconds, the performance data is automatically refreshed every 10 seconds and the newly retrieved data is displayed at the beginning of the table. The table displays the last 20 entries of the performance data retrieved.

Run PRBS Test on Circuits (ODU UNI)

PRBS test is supported for OTN Circuits of type ODU UNI. PRBS bit error count measures the reliability of the link between the endpoints. This test is supported for NCS4K-20T-O-S cards. When PRBS test is run between 2 endpoints (ODU Controller or sub-controller), the source device sends a bit pattern through one

or more midpoints (intermediate controller or sub-controller) and the same bit pattern is received by the destination device, the test results can be viewed from both the endpoints. You can also run the PRBS test on a controller, configuring the other endpoint as a loopback, source, or source-sink.

For information on configuring PRBS on an ODU controller, see [Configure PRBS on ODU Controllers](#).

To run a PRBS performance test for an optical circuit:

-
- Step 1** From the left sidebar, choose **Maps > Topology Maps > Network Topology**.
- Step 2** Select the device group that contains the circuit/VC of type ODU UNI you want to test.
- Step 3** In the Circuits/VCS pane on the left, locate the required service and click the *i* icon to access its Circuit/VC 360 view.
- Step 4** Choose **Actions > PRBS Test**.
- Step 5** To assign roles to the endpoints, in the **Endpoint** table, click the endpoint's role and select one of the following options from the drop-down list:
- SOURCE—To set this role to either A or Z side.
 - SINK—To set this role to either A or Z side.
 - SOURCESINK—To set this role either to A side, Z side, or both.
 - INVALID—To disable PRBS on the endpoint.
- Step 6** To assign patterns to the endpoints, in the **Endpoint** table, click the endpoint's pattern and select the desired pattern from the drop-down list.
- Following patterns are supported for NCS4K-20T-O-S cards:
- PRBS 31
 - PRBS 31 Inverted
 - PRBS 11
 - PRBS 11 Inverted
- Step 7** To change the loopback mode, in the Loopbacks table, click the endpoint's or midpoint's loopback mode and select one of the following options from the drop-down:
- NO_LOOPBACK—For testing without loopback.
 - INTERNAL—For testing within the same network.
 - LINE—For testing across different network.
- Step 8** In the **Test Results** area, select the endpoint from the **Sink Controller** drop-down list.
- Step 9** Click one of the following **Interval** radio button, to set the time interval to collect the data from the device:
- Current (every 10 seconds)—Displays past 15 minutes results every 10 seconds.
 - 15 Minutes—Displays past 15 minutes historic performance data.
 - 1 Day—Displays past 1 day historic performance data.
- Step 10** Click **Go**.
- Step 11** Click **Auto Refresh**. The test result for the endpoints is displayed as a tabular representation which includes bit error count, packets lost and found timestamps and packet lost and found counts.

Based on the time interval specified to refresh the test, the newly retrieved data is displayed at the beginning of the table. For example, if the time interval specified is 10 seconds, the data is automatically refreshed every 10 seconds and the newly retrieved data is displayed at the beginning of the table.

Performance Test for Circuit Emulation Services

Bit error rate test (BERT) allows you to test cables and diagnose signal problems in the field. This testing mechanism is supported on the Cisco NCS 42xx Series (T1/E1 Ports and T3/E3 Ports). This test generates a specific pattern onto the outgoing data stream of a circuit controller and then analyzes the incoming data stream for the same pattern. The bits that do not match the expected pattern are counted as bit errors.

The bit error rate is determined by comparing the erroneous bits received and the total number of bits received. You can view and analyze the total number of error bits transmitted and the total number of bits received on the circuit. You can retrieve error statistics anytime during the test.

The following table lists the test patterns that are supported in Cisco NCS 42xx series (T1/E1 Ports and T3/E3 Ports) devices.

BERT Pattern	Description
2 ¹¹	Pseudo-random repeating test pattern that consists of 2,048 bits.
2 ¹⁵	Pseudo-random repeating test pattern that consists of 32,767 bits.
2 ²⁰ -O151	Pseudo-random repeating test pattern that consists of 1,048,575 bits.
2 ²⁰ -O153	Pseudo-random repeating test pattern that consists of 1,048,575 bits.
2 ²³	Pseudo-random 0.151 test pattern that is 8,388,607 bits in length.
2 ⁹	Pseudo-random 0.151 test pattern that is 511 bits in length.

To run a BERT performance test for a CEM circuit:

- Step 1** From the left sidebar, choose **Inventory > Others > Circuits/VCS & Network Interfaces**.
- Step 2** In the **Circuits/VCS** tab, locate the required CEM service and click the *i* icon to access its Circuit/VC 360 view. In the Circuit/VC 360 view, choose **Actions > Performance Test > BERT**.
Alternatively, you can reach this page through **Maps > Topology Maps > Network Topology** and in the **Circuits/VCS** pane, access the Circuit/VC 360 view of the required CEM circuit.
- Step 3** In the **Test** tab, select the test direction, source, and destination.
For easy understanding, the pictorial representation of the test in the circuit is displayed, once the source and destination are selected.
- Step 4** To refresh the test data automatically for a defined time interval, in the **Settings** area, enter the time interval in minutes.
- Step 5** Select the pattern from the **BERT Pattern** drop-down list.
- Step 6** Click **Run Test**. The test result is displayed in the **Test Results** area. See [View and Export the Results of the Performance Test on Circuit Emulation Services, on page 16](#)

Step 7 To terminate the test, in the **Settings** area, click **Stop** and click **Clear Counters** to reset the values in the **Test Results** area.

In case of SONET interfaces, the **Clear Counters** button is disabled once you terminate the test.

View and Export the Results of the Performance Test on Circuit Emulation Services

At a time, BERT performance test can be performed on any number of CEM circuits but only one test can be performed on a single CEM circuit. The results of the BERT performance test on a CEM circuit is displayed in the **Test Results** area.

- At any point in time, the results of last run/currently running BERT performance test on a CEM circuit is displayed in the **Test Results** area in the **Test** tab.
- If the **Auto-refresh** is enabled (ON), then the test results are auto-refreshed at the specified time period.
- In the **Test Results** area:
 - No test results are displayed, when an Unmanaged Endpoint is chosen as destination for a test.
 - Two set of test results are displayed, each for an endpoint, when a Managed Endpoint is chosen as destination.
- Choose **Monitor > Performance Tests > BERTs**. Here, only a single entry for each CEM circuit is available and it shows either the last run/currently running test on that CEM circuit. Select the required CEM circuit to view its test results.
- To view the historical records of BERT performance results for a specific CEM circuit, in the **History** tab, select the required test from the **Test** drop-down list to view the configuration and its result.

You can export the results of a BERT performance test by clicking the Export icon at the top right corner of the **Test** and **History** tabs of the BERT page (from the Circuit/VC 360 view, choose **Actions > Performance Test > BERT**).

You can also export the list of BERT performance tests from the following pages:

- **Select BERT Test** pop-up window (from the BERT page, click the **History** tab, and then click the **Test** drop-down list to open the **Select BERT Test** pop-up window).
- BERT listing page (choose **Monitor > Performance Tests > BERTs**).

View Performance Metrics and Reports for Circuits/VCs

The Circuit/VC 360 view provides information about the circuit's recent history. Reports, on the other hand, can retrieve all historical data stored in the database. For real-time information, run a performance test (see [Run a Performance Test on a Circuit/VC, on page 9](#)).

- [View Performance Graphs in the Circuit/VC 360 View , on page 17](#)
- [Use Performance Reports to Monitor and Troubleshoot Circuits/VCs, on page 17](#)
- [Use Service Performance Dashboard to Monitor Circuits/VCs, on page 17](#)

View Performance Graphs in the Circuit/VC 360 View

The Circuit/VC 360 view contains graphs showing various aspects of the circuit/VC performance. This view is helpful if you want to see, at-a-glance, if there are any major issues with circuit/VC performance. For more information, see [Get Quick Information About a Circuit/VC: Circuit/VC 360 View](#).

To access the Circuit/VC 360 view:

-
- Step 1** From the left side bar, choose **Maps > Topology Maps > Network Topology**. The network topology window opens. See [Visualize the Network Topology](#) for a description of the Network Topology window and its functionality.
- Step 2** In the Locations pane on the left, select the device group within which the required circuit/VC was created.
- Step 3** In the Circuits/VCS pane, locate the required circuit/VC and click on the *i* icon next to the circuit/VC name. The Circuit/VC 360 view appears in a separate popup window.
-

Use Performance Reports to Monitor and Troubleshoot Circuits/VCS

Cisco EPN Manager provides extensive reporting capabilities that enable you to retrieve in-depth performance information for optical circuits and EVCs. The Report Launch Pad provides access to all Cisco EPN Manager reports. From the Report Launch Pad, you can create and save new reports, view current reports, open specific types of reports, schedule a report to run later, and customize the results of a report.

Choose **Reports > Report Launch Pad** in the left navigation pane to access the reports and the reporting functionality.

For information about Carrier Ethernet performance reports, see [Carrier Ethernet Performance Reports](#).

For information about Optical performance reports, see [Optical Performance Reports](#).

Use Service Performance Dashboard to Monitor Circuits/VCS

Service Performance dashboard provides a collection of graphical and tabular representation of Performance measurement for the selected circuit/VC over time. This information is available in the form of customized dashlets. The dashboard menu provides access to all the available Cisco EPN Manager dashboards.

From Service Performance Dashboard, you must select a circuit/VC from the Circuits/VCS drop-down list to view the following information (dashlets):

- Average availability of service endpoints over time.
- Incoming and outgoing traffic measured in bits per second, for services over a specified time period.
- Average delay between the service endpoints over time.
- Average packet loss ratio between the service endpoints over time.
- List of services with highest incoming and outgoing traffic.

To launch the dashboard for a specific service from its Circuit/VC 360 view, click **View** and then choose **Dashboard**.

For more information on the Service Performance dashboards and dashlets, see [Service Performance Dashboard Overview](#).

Trace and Visualize the Full Route of Circuits/VCS

Use the Multilayer Trace view (MLT) to visualize a circuit in a graphical manner. This view displays the complete circuit span and service trace between two endpoints and can be used to trace the connectivity of a circuit by displaying the source node, destination node, and any intermediate nodes in graphical format.

Note the following:

- Multilayer Trace view is not supported for Multipoint Carrier Ethernet circuits/VCS, Serial - Raw Socket, and L3VPN services.
- You can launch the Multilayer Trace view for optical circuits only when LMP is configured on the A end device and also between devices participating in the optical circuit.
- For MPLS-TE and SR-TE tunnels, physical topology is required for the Multilayer Trace view, which means that the physical links must have been discovered using one of the supported protocols, for example, CDP or LLDP.


To trace and visualize the full route of a circuit:

-
- Step 1** From the left side bar, choose **Maps > Topology Maps > Network Topology**.
- Step 2** Click **Device Groups** and then select the location in which the required circuit/VC was created.
- Step 3** On the Network Topology page, click **Circuits/VCS**. The list of circuits/VCS associated with the selected device group is displayed.
- Step 4** Select a circuit/VC for which you want to view the full route. The overlay of the circuit is displayed on the map.
- Step 5** Use one of the following ways to switch to the Multilayer Trace view:
- Click the **Multilayer Trace** hyperlink on the notification that appears right below the topology toolbar.
- Note** The **Multilayer Trace** hyperlink appears only if the Multilayer Trace view is supported for the selected circuit/VC and if the primary state of the circuit/VC is not 'Missing'.
- You can view the partial multilayer trace even when a full route of a circuit/VCS is not completely modeled or if the route is broken. You can identify the root cause and the suggestions to overcome the error.
- Click the information icon adjacent to the circuit/VC to open the Circuit/VC 360 view, and then click **View>Multilayer Trace**.

The simplified three-dimensional view of the selected circuit/VC is displayed. In the simplified view, only the source and destination endpoints of the participating devices are displayed. You can choose to either expand or collapse the different layers in the circuit/VC. The animation of the route direction between the endpoints is displayed for some circuit types. For more information, see [View Specific Information of a Circuit in a Multilayer Trace View, on page 22](#).

Note In the case of a device with a circuit being traversed more than once (more incoming and outgoing connections), the collapse option is disabled in both three-dimensional and linear views.

The following figure shows the simplified view of a circuit/VC with the expand and collapse options.

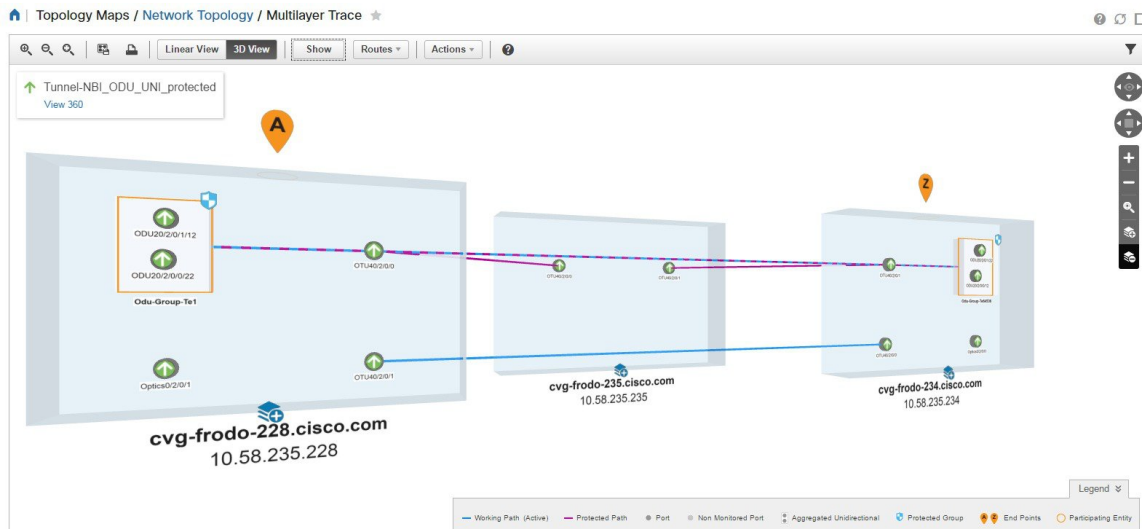


For more information about the details displayed in a three-dimensional view, see [Three-Dimensional View of a Circuit V/C Trace, on page 20](#).

To switch to the linear view, click **Linear View**. For more information about the details displayed in a linear view, see [Linear View of a Circuit/VC Trace, on page 21](#).

The Multilayer Trace view displays a graphical map that:

- Uses high-level span information such as NEs and links to display the circuit trace.
- Displays logical high-level view where the circuit is traced on the map using logical links, for example, OCHCC circuits use OCH trail links for the trace.
- Displays physical high-level view where the circuit is traced on the map using physical links, for example, OCHCC circuits use OTS links for the trace.
- Displays badges on the devices that represent the most severe alarm on the device, irrespective of the selected circuit. The alarm badges within the trace view show the alarms on each entity (for example, a link, node, or point).
- Highlights links according to the high-level view that you select.
- Highlights the layers with different shades and displays border lines that delineate the different layers in the circuit. If a layer is not applicable for a device, that layer appears in gray color.
- Displays a collapsible legend that lists the different icons and descriptions of each icon displayed in the Multilayer Trace view.
- For optical circuits, indicates whether the devices or links in the circuit have Shared Risk Resource Groups (SRRGs) assigned to them. Click on the SRRG label on the link or device to see a list of all the SRRGs on that link/device. The SRRGs are color-coded based on whether they are the default on the device, assigned, or yet to be assigned. Click on the question mark icon to see the legend.
- For OCHCC circuits, displays the LMP links between the source or destination node and the DWDM controller.

If one or more devices participating in the circuit/VC is not part of your virtual domain, the Multilayer Trace will be partial. Instead of the inaccessible device, you will see an inaccessible device icon in the Multilayer Trace view (as shown in the figure below).

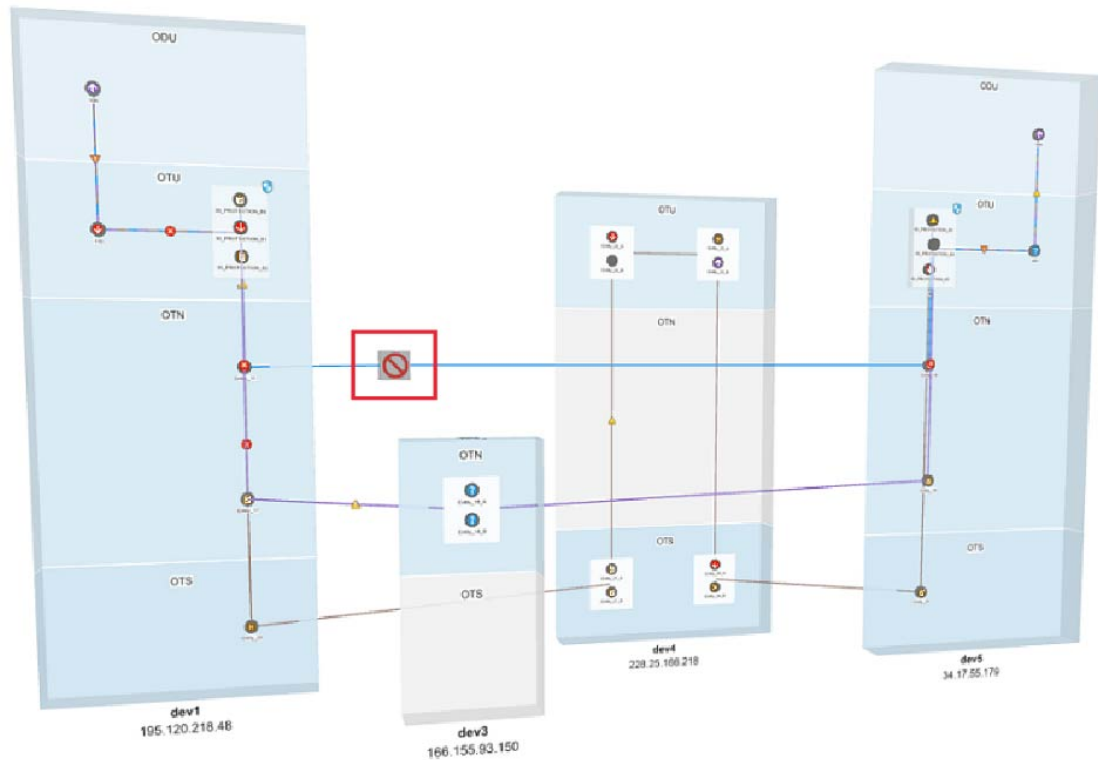


408271

Three-Dimensional View of a Circuit V/C Trace

This is the default view. It displays a three-dimensional view of the full route of a circuit/VC. For information about how to access this view, see [Trace and Visualize the Full Route of Circuits/VCS](#), on page 18.

This view displays the different paths available for the selected circuit. For example, if an optical circuit has working path, protected path, and restoration path, the paths are color-coded and displayed in this view.

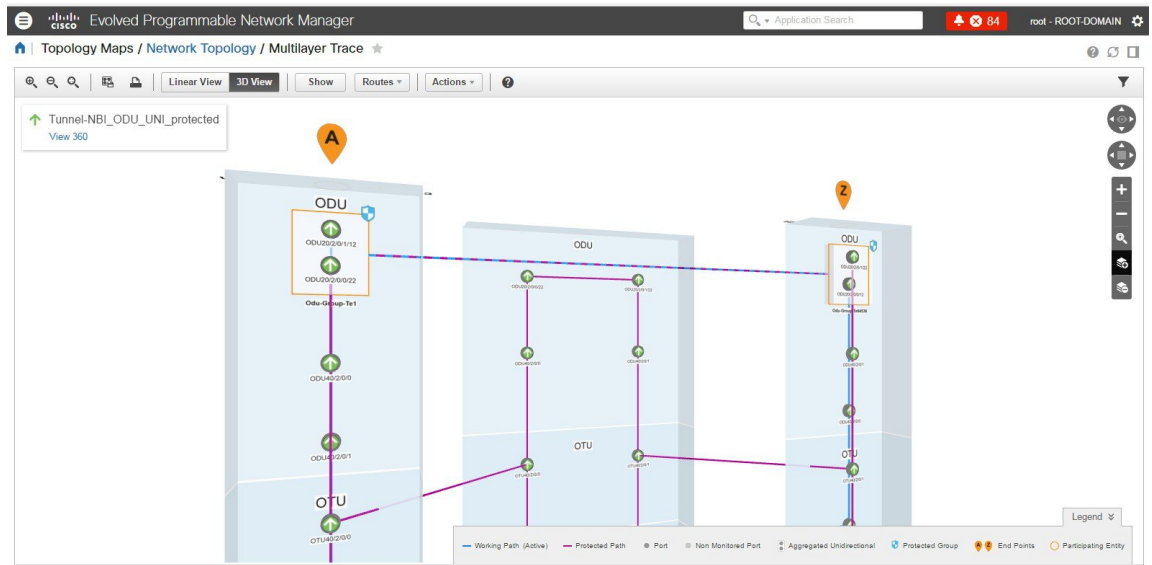

To know about the navigation controls in the three-dimensional view, click the help icon in the tool bar. The Navigation Controls data popup window shows the mouse, MAC Trackpad, and keyboard controls to pan, zoom, and rotate in this view.




Note The MAC Trackpad controls are displayed only for MAC users.

Linear View of a Circuit/VC Trace

Using the linear view, you can trace and visualize the route of a circuit/VC in a two-dimensional view. For information about how to access this view, see [Trace and Visualize the Full Route of Circuits/VCS, on page 18](#).


View Specific Information of a Circuit in a Multilayer Trace View

This view displays only one path of the circuit at a time. Choose **Route**, and then select **Working**, **Protected**, or **Restored** to view the required path in the circuit trace. The path options will vary depending on the type of circuit/VC you selected.

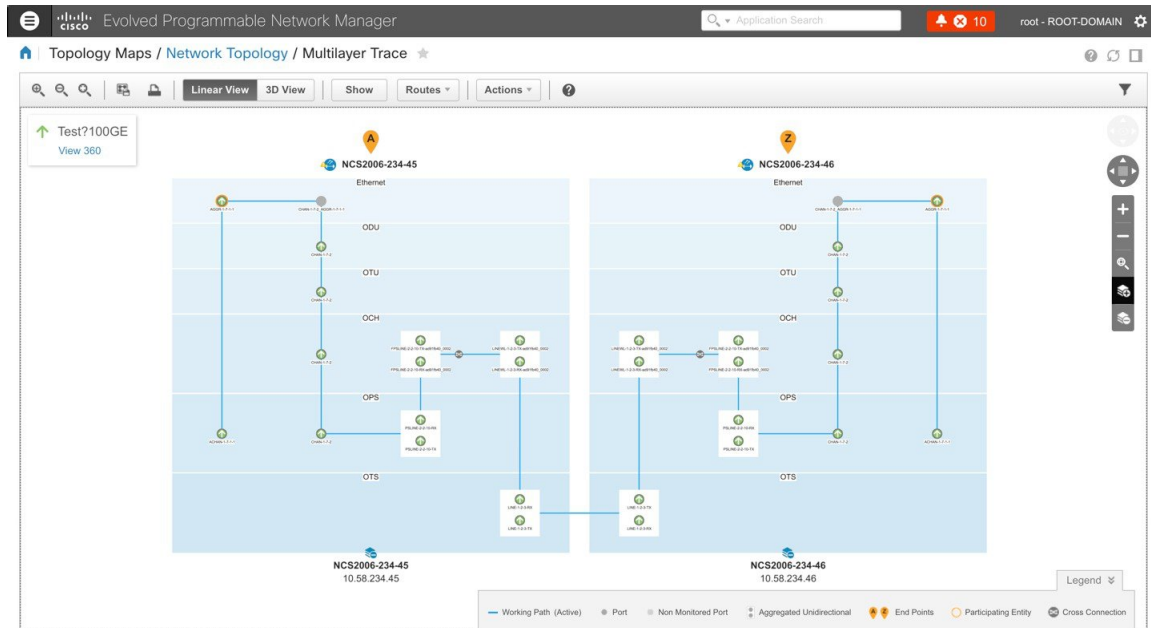

View Specific Information of a Circuit in a Multilayer Trace View

In the multilayer trace view of a circuit, you can choose what information you want to view by enabling the specific check box from the **Show** menu. You can choose to view the labels, physical flows, links, route directions, SRRG, port states, power levels, span loss, and faults in the circuit. The check boxes vary depending on the type of circuit/VC you selected.

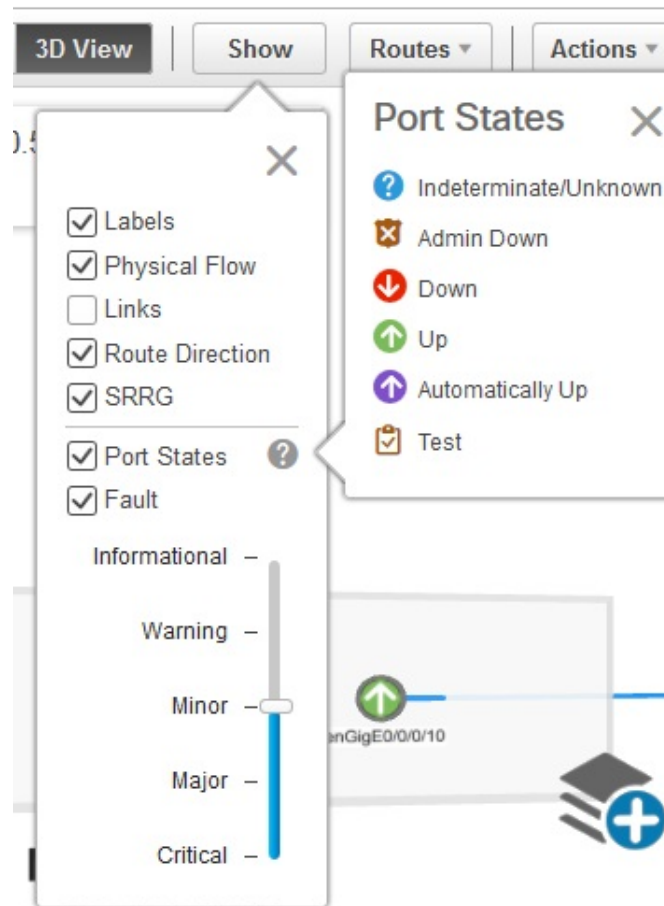

You can view either the alarm status or the primary state of the ports. For a list of the port primary state icons and a description of the states, see [Port or Interface States](#).


The **Route Direction** check box to view the animation of the route direction in a circuit, will be enabled by default, only for those circuits which have non-symmetrical paths:

- Unidirectional circuits with path from A to Z. For example, Unidirectional TE Tunnels.
- Bidirectional non-symmetrical circuits with the paths from A to Z and Z to A not being the same. For example, a Carrier Ethernet or a CEM circuit traversing over a unidirectional TE Tunnel.



Note The **Route Direction** check box will not appear in the **Show** menu for circuits that have exactly the same path from A to Z and Z to A i.e., bidirectional symmetrical circuits.

By default, the route direction from A to Z end will appear. To view the animation in the opposite direction,

click the  icon. But this icon will be enabled only for those circuits (bidirectional non-symmetrical circuit) that has different A to Z and Z to A paths. For example, a Carrier Ethernet or a CEM circuit traversing over two different unidirectional TE Tunnels. The switch icon does not appear for these circuits:

- Unidirectional circuits with path from A to Z. For example, Unidirectional TE Tunnels.

- Bidirectional symmetrical circuits with the paths from A to Z and Z to A being exactly the same. For example, Bidirectional Core Routed TE Tunnel (or Flex LSP).

When you apply filter to the layers, the **Route Direction** check box gets disabled depending on the chosen layer. Once disabled, it does not get auto-enabled and you have to manually enable the check box to view the route direction animation again.

In case of a partially discovered circuit or a problematic/unsupported circuit configuration, the default route direction from A to Z might not launch. But these circuits may have a potential Z to A direction, which traverses a different path. Click the **Change Endpoints** hyperlink to configure the endpoints to launch the multilayer trace view in the opposite direction.

Actions You Can Perform from the Multilayer Trace View

You can do the following from the Multilayer Trace view:

- Choose **Show**, and then check the appropriate check boxes to view the labels, physical flows, links, port states, power levels, span loss, and faults in the circuit. For more information, see [View Specific Information of a Circuit in a Multilayer Trace View, on page 22](#).
- Hover over a link, interface, or circuit to view the link name, card name, or the circuit name respectively.



Note Card name is not displayed for cross-connection interfaces in the circuit.

- Click the **View 360** hyperlink that appears right below the toolbar in the Multilayer Trace to open the Circuit/VC 360 view. See [Get Quick Information About a Circuit/VC: Circuit/VC 360 View](#).
- Click the Port icon on the circuit trace to open the Interface 360 view. See [Get a Quick Look at a Device Interface: Interface 360 View](#).
- Click the device name or device IP address that appears at the top of the device to open the Device 360 view. See [Get Basic Device Information: Device 360 View](#).
- Click a link in the Multilayer Trace to open the Link 360 view. See [Get a Quick Look at a Specific Link: Link 360 View](#).
- Click the Cross Connection icon on the circuit trace to open the Link Details pop up window.



Note The Cross Connection icon appears on the links where internal ports are used by the circuit/VC. The internal ports are not displayed in the Multilayer Trace view.

The following figure shows the Link Details pop up window that lists the affected internal ports, port status, layer, and power levels. These details are listed for all the affected internal ports in both directions, that is from A side to Z side and vice versa.

The screenshot shows the Cisco Evolved Programmable Network Manager interface. The main window displays a network topology with a selected circuit. A 'Link Details' window is open on the right, showing the name of the circuit and a table of port states and power levels for both A-Z and Z-A sides.

Link Details

Name: NCS2KA-235-143:FPLINE-2-6-RX-d96b7920_029e&FPLINE-2-6-TX-d96b7920_029e - NCS2KA-235-143:LINEWL-1-2-3-RX-d96b7920_029e&LINEWL-1-2-3-TX-d96b7920_029e

Type: Cross Connection

A Side: NCS2KA-235-143:FPLINE-2-6-RX-d96b7920_029e&FPLINE-2-6-TX-d96b7920_029e

Z Side: NCS2KA-235-143:LINEWL-1-2-3-RX-d96b7920_029e&LINEWL-1-2-3-TX-d96b7920_029e

A - Z

Port State/Fault	Port Name	Layer	Power Level
Up	PLINE-1-4-TX	OPS	
Up	LINEWL-1-4-4-RX-d96b7920_029e	OCH	Rx -43.2
Up	LINE-1-4-4-RX	OPS	Rx -6.7
Up	LINEWL-1-4-18-TX-d96b7920_029e	OCH	Tx -45.1
Up	LINE-1-4-18-TX	OPS	Tx -15.2
Up	LINEWL-1-2-3-RX-d96b7920_029e	OCH	

Z - A

Port State/Fault	Port Name	Layer	Power Level
Up	LINEWL-1-3-1-RX-d96b7920_029e	OCH	
Up	LINE-1-3-1-RX	OPS	Rx -50
Up	LINEWL-1-3-3-TX-d96b7920_029e	OCH	
Up	LINE-1-3-3-TX	OPS	Tx -50
Up	LINEWL-1-4-18-RX-d96b7920_029e	OCH	Rx -43.5

- Choose **Actions** > **Y.1564 Test** to test the performance of the CE circuit/VC end to end. See [Running a Y.1564 Performance Test](#), on page 10.
- Choose **Actions** > **BERT** to test the performance of the Circuit Emulation Services. See [Performance Test for Circuit Emulation Services](#), on page 15.
- Choose **Actions** > **Optical PM Parameters** to view the real time performance monitoring data of the optical circuit/VC. See [Optical Performance Monitoring Parameters](#), on page 13.
- Choose **Actions** > **PRBS Test** to test the performance of the optical circuit/VC end to end. See [Run PRBS Test on Circuits \(ODU UNI\)](#), on page 13.
- Choose **Actions** > **Details** to view further details about the circuit. See [Get Comprehensive Information About a Circuit/VC: Circuit/VC Details Window](#).
- Choose **Actions** > **Restoration Actions** > **Upgrade Restore** to upgrade the failed optical circuit to an active route and delete the old route where the failure occurred. See [Restore a Circuit \(Optical\)](#).
- Choose **Actions** > **Resync** to resync the conditions for the circuit or VCs.
- Choose **Actions** > **Restoration Actions** > **Manual Revert** to revert the optical circuit to its original route when the route is recovered from the failure. See [Restore a Circuit \(Optical\)](#).
- Choose **Actions** > **Reroute Actions** > **Working Path** or **Protected Path** to reroute the traffic through the working path or protected path defined for the circuit. See [Reroute a Circuit \(Optical\)](#).
- Choose **Actions** > **Activate** to allow the traffic to pass through the optical circuit. See [Activate a Circuit \(Optical\)](#).
- Choose **Actions** > **Deactivate** to stop the traffic passing through the optical circuit. See [Activate a Circuit \(Optical\)](#).
- Choose **Actions** > **Protection Actions**, and then choose the required protection switch action to switch over the traffic from one path to another path in a protected optical circuit. See [Initiate a Protection Switch Action on a Circuit \(Optical\)](#).

- Click the filter icon in the Multilayer Trace view toolbar to view the various layers in the circuit. Choose the layers that you want to be displayed.