



INDEX

A

- access, node [4](#)
- accessing
 - MWTM web browser [24](#)
 - accounting FAQs [16](#)
- address
 - information [8](#)
- address tables [1](#)
- editor
 - launching [2](#)
 - startup options [2](#)
 - files
 - basic information [15](#)
 - creating [5](#)
 - deploying [15](#)
 - loading, from file [6](#)
 - loading, from ITP [8](#)
 - reverting [20](#)
 - saving [18](#)
 - semantics [14](#)
 - working [10](#)
 - listing [15](#)
 - menu [3](#)
 - properties
 - editing [13](#)
- administrative page
 - displaying [1](#)
 - alarm filter
 - dialog buttons [13](#)
 - loading [19](#)
 - saving [20](#)
 - setting [12](#)
- alarms
 - displaying [3, 19](#)
 - right-click menu [11](#)
 - viewing [41](#)
- application server
 - tabs [15](#)
 - application server process
 - tabs [15](#)
- application server process association
 - configuration
 - general information [10](#)
 - tabs [16](#)
- application server process associations
 - table [29](#)
- application server processes
 - export files, daily [243](#)
 - table [28](#)
- application servers
 - configuration
 - associations [9](#)
 - export files, hourly [243](#)
- reports
 - daily [242](#)
 - hourly [242](#)
 - statistics details window [73](#)
 - table [25](#)
- AS
 - accounting reports [210](#)
 - ASP accounting reports [210](#)
- asterisks
- FAQs [16](#)
- attaching notes [54](#)
- audience
 - document [xxxviii](#)

B

backup

- MWTM files [30](#)
- secondary server [9](#)

basic object functions

- understanding [1](#)

browser

- FAQs [6](#)

BWG

- traps [23](#)

C

capacity planning

- FAQs [21](#)

card

- naming information [16](#)
- table [36](#)
- tabs [18](#)

changing

- client preference, settings [1](#)
- poller settings [2](#)
- web preference, settings [1](#)

charts

- settings, changing [11](#)

CiscoWorks

- integrating with MWTM [36](#)
- SNMP [1](#)

client

- disconnect sound [25](#)
- preferences, changing [1](#)

client A configuration

- MWTM [13](#)

client B configuration

- MWTM [14](#)

client, MWTM

- access, limiting [29](#)
- connection timer [10](#)

downloading (see MWTM web interface)

exiting [30](#)

launching from Windows Start menu [27](#)

starting

- on Solaris/Linux [3](#)
- on Windows [4](#)
- prerequisites [3](#)

client/server architecture, overview [11](#)

color

severity, customizing [16](#)

command line interface, using [43](#)

command reference [1](#)

commands

- general [1](#)
- ITP [97](#)

configuring

- firewalls [7](#)
- port numbers and parameters [5](#)
- sample firewall [9](#)

connection settings [6](#)

connection timer [10](#)

content area

MWTM client [17](#)

conventions

document [xxxix](#)

conversion entry

table [13](#)

counters, resetting [20](#)

CPU

performance, viewing [55](#)

credentials, login

setting up [19](#)

CSG

MIBS [6](#)

CSG1, traps [17](#)

CSG2, traps [18](#)

custom reports

generating [282](#)

customizing view [8](#)

D

data

- accessing, from web 1
- exporting 35

MWTM

- exporting current, for node names 36
- exporting current, for SNMP community names 36
- removing from server 32

default

- server name, changing 26
- view, loading 14

deleting

- data from server 32
- objects 56

deploying

- GTT 34

deployment

- FAQs 16
- details, viewing 7

device configuration

- buttons 21
- commands 21
- dialog box 14
- menu 14

diagram, network 1

disconnect sound 25

discovering ITP networks

- dialog menu 6
- discovered nodes 14
- running discovery 12
- settings 12
- verifying discovery 14

discovery

- FAQs 15

DISPLAY variable, setting 3

display, customizing 8

displaying 20

- administrative page 1

alarms 3, 19

error statistics 38

events 3, 19

RAN data export files 40

software versions 20

document

audience xxxviii

conventions xxxix

objectives xxxviii

organization xxxviii

documentation

related xl

DOS prompt, launching 27

dual-interface machine

MWTM, configuring 12

E

editing

ITP route table file 1

properties 49

error data, viewing 114

error statistics, displaying 38

event

adding sound files 41

attaching notes 23

categories 31

filter

loading 19

setting 12

forwarding as traps 37

limits 26

managing 1

playing or muting sounds 42

properties

viewing 21

settings

categories 9

changing 7

- colors 8
 - date 8
 - time 8
 - SNMP servers and traps 30
 - sound filters
 - creating new 39
 - deleting 42
 - listing 38
 - sounds, setting 38
 - traps 32
 - event editor 25
 - categories 31
 - launching 27
 - limits 26
 - SNMP servers and traps 30
 - traps 32
 - event files
 - archived 24
 - event filter
 - dialog
 - buttons 13
 - selected objects 16
 - example 19
 - loading 19
 - saving 20
 - setting 12
 - Event Sounds 25
 - events
 - displaying 3, 19
 - settings
 - other 10
 - severities 9
 - sound filters
 - changing 42
 - window
 - toolbar buttons 8
 - events and alarms
 - FAQs 7
 - excluding
 - objects
 - ITP reports 284
 - exit settings 3
 - export files
 - application server process archived reports 243
 - MLR, daily 245
 - point code, inventory 248
 - exporting current MWTM data
 - for network objects 35
 - node names 36
 - SNMP community names 36
 - exporting data 35
-
- ## F
- FAQs 1
 - accounting 16
 - applications, other 10
 - asterisks 16
 - browser 6
 - capacity planning 21
 - deployment 16
 - discovery 15
 - events and alarms 7
 - HSRP 22
 - in-band management 19
 - installation 2
 - ITP reports 17
 - Java RMI 11
 - limited functionality 18
 - link totals 16
 - linkset totals 16
 - locked up display 5
 - MIBs 10
 - moving servers 3
 - out-of-band management 19
 - percentages 16
 - polling 9
 - rebooting 5

- requirements 3
- server communication 21
- server messages 4
- sounds 8
- SSL, installing 5
- status 11
- superuser 11
- syncing 22
- syslog 11
- text entry fields 5
- timing service 8
- topology maps 7
- traps 15
- uninstallation 2
- user password 11
- Windows 11
- workstations 3
- yellow nodes 23

features

- customization 5
- GUI 2
- integration 5
- monitoring 3
- navigational 15
- performance 3
- provisioning 3
- security 4
- server and network 2
- topology 4
- troubleshooting 5
- web 2

file

- node
 - MWTM panel 28
 - panel 29

file menu 19

files

- ITP
 - deploying 33

- managing 24
- loading 25
- saving MWTM 25

filtering view 8

firewalls 5

- configuring 7

G

General commands

- mwtm datadir 24

general commands 1

- mwtm 6
- mwtm addcreds 6
- mwtm adduser 7
- mwtm authtype 8
- mwtm backup 9
- mwtm backupdir 11
- mwtm badloginalarm 12
- mwtm badlogindisable 12
- mwtm browserpath 13
- mwtm certgui 13
- mwtm certtool 14
- mwtm changes 14
- mwtm checksystem 15
- mwtm clean 15
- mwtm cleanall 16
- mwtm cleandb 17
- mwtm cleandiscover 17
- mwtm cliconntimer 18
- mwtm client 19
- mwtm clientlogs 19
- mwtm clitimeout 20
- mwtm cmdlog 21
- mwtm console 22
- mwtm countnodes 22
- mwtm countobjects 23
- mwtm cwsetup 23
- mwtm dbtool 25

- mwtm delete 25
- mwtm deletecreds 26
- mwtm deluser 27
- mwtm disablepass 27
- mwtm disableuser 28
- mwtm discover 28
- mwtm diskmonitor 29
- mwtm enableuser 29
- mwtm eventautolog 30
- mwtm eventconfig 30
- mwtm eventeditor 30
- mwtm eventtool 31
- mwtm evilstop 33
- mwtm export 33
- mwtm export cw 34
- mwtm groups 34
- mwtm help 36
- mwtm inactiveuserdays 37
- mwtm installlog 37
- mwtm inventorytool 38
- mwtm iosreport 40
- mwtm ipaccess 41
- mwtm jsport 41
- mwtm keytool 42
- mwtm killclients 42
- mwtm listusers 43
- mwtm logger 43
- mwtm logtimemode 45
- mwtm manage 46
- mwtm maxascirows 46
- mwtm maxevhist 47
- mwtm maxhtmlrows 47
- mwtm mldebug 48
- mwtm motd 49
- mwtm msglog 49
- mwtm msglogage 50
- mwtm msglogdir 50
- mwtm msglogsize 44
- mwtm netlog 51
- mwtm netlogger 51
- mwtm newlevel 51
- mwtm osinfo 52
- mwtm passwordage 52
- mwtm patchlog 53
- mwtm poll 53
- mwtm pollertimeout 53
- mwtm print 54
- mwtm props 54
- mwtm provisiontool 54
- mwtm purgedb 55
- mwtm readme 56
- mwtm reboot 56
- mwtm rephelp 57
- mwtm restart 58
- mwtm restore 58
- mwtm restoreprops 59
- mwtm rootvars 60
- mwtm sechelp 60
- mwtm seclogmwtm seclog 60
- mwtm secondaryserver 61
- mwtm servername 62
- mwtm setpath 63
- mwtm showcreds 64
- mwtm snmpcomm 65
- mwtm snmpconf 66
- mwtm snmpget 66
- mwtm snmphelp 68
- mwtm snmpnext 69
- mwtm snmpwalk 72
- mwtm sounddir 74
- mwtm ssl 75
- mwtm sslstatus 75
- mwtm start 76
- mwtm start client 76
- mwtm start jsp 76
- mwtm start pm 76
- mwtm start web 77
- mwtm statreps 77

- mwtm status [84](#)
- mwtm stop [84](#)
- mwtm stop jsp [85](#)
- mwtm stop pm [85](#)
- mwtm stop web [85](#)
- mwtm stopclients [84](#)
- mwtm superuser [85](#)
- mwtm syncusers [86](#)
- mwtm tac [86](#)
- mwtm termproxy [86](#)
- mwtm trapaccess [87](#)
- mwtm traprate limit abate [87](#)
- mwtm trapratelimit count [88](#)
- mwtm trapratelimit interval [88](#)
- mwtm trapratelimit minor [89](#)
- mwtm trapsetup [89](#)
- mwtm trapstatus [90](#)
- mwtm tshootlog [90](#)
- mwtm uninstall [90](#)
- mwtm unknownage [91](#)
- mwtm updateuser [91](#)
- mwtm useraccess [92](#)
- mwtm userpass [92](#)
- mwtm version [93](#)
- mwtm viewlog [93](#)
- mwtm wall [93](#)
- mwtm webaccesslog [94](#)
- mwtm weberrorlog [94](#)
- mwtm weblogupdate [94](#)
- mwtm webnames [95](#)
- mwtm webport [95](#)
- mwtm webutil [95](#)
- mwtm who [96](#)
- mwtm xtermpath [96](#)
- generating
 - custom reports [282](#)
 - reports [2](#)
- getting started [1](#)
- GGSN
 - MIBS [7](#)
 - traps [20](#)
- Global Title Translation (see [GTT](#))
- go menu [21](#)
- GTT
 - address conversion [13](#)
 - selector table [14](#)
 - tab [12](#)
 - table [12](#)
 - address conversion table
 - adding [24](#)
 - entries, adding [25](#)
 - app group tab [9](#)
 - application groups
 - adding [21](#)
 - basic information [1, 34](#)
 - CPC
 - lists, adding [23](#)
 - tab [11](#)
 - tab, concerned pt code name list [12](#)
 - deploying [34](#)
 - editor
 - launching [2](#)
 - menu [3](#)
 - files
 - creating [27](#)
 - cross-instance [36](#)
 - editing [15](#)
 - loading [29, 30](#)
 - loading from archive [31](#)
 - reverting [40](#)
 - saving [38](#)
 - GTA
 - entries, adding [17](#)
 - searching [19](#)
 - MAP
 - adding entries [22](#)
 - tab [10](#)
 - MAP status

- viewing [124](#)
- network name configuration [36](#)
 - menu [37](#)
 - table [38](#)
- progress dialog [32](#)
- reports, daily [211](#)
- rows, deleting [26](#)
- selectors and GTA tab [5](#)
 - CPC [9](#)
- selectors and GTA table
 - app group [8](#)
 - GTA [7](#)
 - MAP [9](#)
 - selector [6](#)
- selectors, adding [16](#)
- semantics [33](#)
- statistics, viewing [126](#)

GTT accounting reports [211](#)

H

- HA traps [23](#), [24](#), [27](#), [29](#)
- help menu [23](#)
- home page
 - MWTM web interface [12](#)
- HSRP
 - FAQs [22](#)

I

- ignoring and unignoring objects [60](#)
- in-band management
 - FAQs [19](#)
- including objects
 - ITP reports [284](#)
- indexexas [242](#), [246](#)
- indexexasp [243](#)
- indxpwe3peak [185](#)

- indxwb019 [244](#)
- indxwb026 [245](#)
- information
 - address [8](#)
 - bandwidth
 - RAN-O backhauls [9](#)
 - ITP
 - application server process associations [17](#)
 - application servers [11](#), [17](#)
 - linksets [12](#)
 - links [13](#)
 - naming
 - card [16](#)
 - interfaces [16](#)
 - ITP application servers [17](#)
 - ITP links [17](#)
 - ITP linkset [18](#)
 - ITP signaling points [18](#)
 - ITP signaling-gateway mated pairs [18](#)
 - nodes [15](#)
 - polling nodes [20](#)
 - protection
 - ONS nodes [21](#)
 - QoS, ITP signaling points [21](#)
 - RAN [22](#)
 - remote IP address [22](#)
 - status
 - interface and card [24](#)
 - ITP application server process [29](#)
 - ITP application server process associations [29](#)
 - ITP application servers [27](#)
 - ITP links [31](#)
 - ITP linksets [32](#)
 - ITP signaling gateway mated pairs [33](#)
 - ITP signaling points [34](#)
 - node [23](#)
 - threshold (RAN-O only) [35](#)
 - uptime
 - node [23](#)

- information, in a window
 - finding 22
- installation
 - FAQs 2
- integration
 - with CiscoWorks 36
- interface
 - tabs 17
 - UMTS and GSM tabs (RAN-O only) 18
- interface and card, status information 24
- interface content
 - MWTM web interface 5
- interfaces
 - naming 16
 - packet size 11
 - table 33
- introduction to SGM 1
- inventory
 - point code 48
- IOS
 - commands, troubleshooting 4
 - server load balancing 16
- IP addresses accounting
 - reports 48
- IP Transfer Point (see ITP)
- ITP
 - application server processes 17
 - application server process
 - status, information 29
 - application server process associations 17
 - application servers 11
 - naming, information 17
 - status, information 27
 - commands 97
 - files
 - deploying 33
 - managing 24
 - linkset
 - naming, information 18
 - linksets
 - information 12
 - overview 6
 - signaling gateway-mated pairs
 - naming, information 18
 - signaling points
 - naming, information 18
- ITP application server process associations
 - status 29
- ITP commands
 - mwtm 15minage 83
 - mwtm acstats 98
 - mwtm archivedir 100
 - mwtm atbleclient 100, 125
 - mwtm atbldir 101
 - mwtm autosynconfig 102
 - mwtm chartwindow 15
 - mwtm checkgtt 102
 - mwtm checkmlr 103
 - mwtm checkroute 103
 - mwtm countas 103
 - mwtm countasp 103
 - mwtm countaspa 104
 - mwtm countlinks 104
 - mwtm countlinksets 104
 - mwtm countsgmp 104
 - mwtm countsps 104
 - mwtm deletearchive 105
 - mwtm deploarchive 105
 - mwtm deplocomments 106
 - mwtm evreps clean 106
 - mwtm evreps cleancustom 106
 - mwtm evreps diskcheck 107
 - mwtm evreps enable 107
 - mwtm evreps hourlyage 108
 - mwtm evreps mtp 108
 - mwtm evreps status 108
 - mwtm evrepstimer 109
 - mwtm gttclient 110, 126

[mwtm gttddir](#) 111
[mwtm gttstats](#) 112
[mwtm linkstats](#) 113
[mwtm listarchive](#) 115
[mwtm listgtt](#) 115
[mwtm listhistory](#) 115
[mwtm listmlr](#) 116
[mwtm listroute](#) 116
[mwtm mlrstats](#) 116
[mwtm mtpevents](#) 118
[mwtm pformat](#) 119
[mwtm pclist](#) 120
[mwtm pushgtt](#) 120
[mwtm pushmlr](#) 121
[mwtm pushroute](#) 122
[mwtm q752stats](#) 122
[mwtm repcustage](#) 123
[mwtm repdir](#) 56
[mwtm replog](#) 57
[mwtm routedir](#) 124
[mwtm routetabledefs](#) 125
[mwtm statreps monthlyage](#) 84
[mwtm xuastats](#) 126

ITP links

naming
 [information](#) 17
 status
 [information](#) 31

ITP linkset

[access lists, viewing](#) 121
[status](#) 32

ITP MIBS

9

ITP MSU

[errors, viewing](#) 98

ITP MTP3

[errors, viewing](#) 97

ITP networks

[discovery](#)
 [dialog menu](#) 6

[dialog tabs](#) 7

[nodes](#) 14

[running](#) 12

[settings](#) 12

[verifying](#) 14

ITP reports

[excluding objects](#) 284

[FAQs](#) 17

[including objects](#) 284

[locating](#) 281

ITP signaling gateway mated pairs

[status](#) 33

ITP signaling point

[description](#) 10

[specific data, viewing](#) 123

ITP signaling points

[managing](#) 58

[QoS](#) 21

[status](#) 34

[unmanaging](#) 58

ITP traps

J

JAVA RMI

[FAQs](#) 11

L

launching

[discovery dialog](#) 6

limited functionality

[FAQs](#) 18

link

[configuration](#)

[interfaces](#) 12

[reports](#)

[daily](#) 70

- hourly [67](#)
 - tabs [14](#)
- link totals
 - FAQs [16](#)
- links
 - configuration
 - IP addresses [14](#)
 - information [13](#)
 - reports [67](#)
 - table [23](#)
- linkset
 - archived reports
 - daily [245](#)
 - hourly [245](#)
 - description [10](#)
 - reports
 - daily [82](#)
 - daily peaks [85](#)
 - hourly [79](#)
 - table [20](#)
 - tabs [14](#)
- linkset totals
 - FAQs [16](#)
- Linux MWTM client, starting [3](#)
- locating
 - ITP reports [281](#)
- locked up display
 - FAQs [5](#)
- login credentials, setting up [19](#)

M

- management interface folder
 - tabs [20](#)
- managing
 - event [1](#)
 - ITP signaling points [58](#)
 - nodes [58](#)
 - reports [1](#)
- mapping files, network name [16](#)
- MaxAlarmAge [28](#)
- menu
 - address tables [3](#)
- menus
 - file [19](#)
 - go [21](#)
 - help [23](#)
 - tools [22](#)
- messages
 - display, changing [4](#)
 - log file
 - age [4](#)
 - dates [4](#)
 - location [4](#)
 - size [4](#)
 - of the day [15](#)
- MIBs
 - common [2](#)
 - FAQs [10](#)
- MLR
 - details [129](#)
 - export files, daily [245](#)
 - reports [88](#)
 - aborts [89](#)
 - continues [90](#)
 - daily [89](#)
 - processed [90](#)
 - result invokes [91](#)
 - rule matches [92](#)
 - subtriggers [92](#)
 - triggers [93](#)
- mobile Services Exchange Framework (see mSEF)
- Mobile Wireless Transport Manager (see MWTM)
- moving servers
 - FAQs [3](#)
- mSEF
 - overview [9](#)
 - traps [16](#)

MSU

- archived reports
 - daily [247](#)
 - hourly [246](#)
- load
 - reports [94](#)
- peaks
 - reports [94](#)
- rates
 - reports [93](#)

MTP3

- event log
 - viewing [129](#)
- reports
 - daily [212](#)

MTP3 event reports [247](#)

multiple-instance ITPs, connecting [6](#)

MWTM

- about [xxxvii](#)
- backup [30](#)
- client and server communication
 - dynamic NAT [15](#)
 - firewalls [5](#)
 - NAT [4](#)
 - port-forwarding [10](#)
 - SSL [15](#)
 - TCP [15](#)
 - VPN [3](#)
- integration [36](#)
- ITP route table file
 - editing [1](#)
- main menu, using [18](#)
- main window [14](#)
- MIB reference [1](#)
- networking options (see MWTM, client and server communication) [1](#)
- overview [1](#)
- restoring [30](#)
- sessions, running simultaneous [39](#)

- traps, supported [1](#)
- troubleshooting (see troubleshooting)
- uninstalling [28](#)
- web browser, accessing [24](#)

MWTM process

- events, changing [24](#)

MWTM server (see server, MWTM)

MWTM web interface

- additional information [17](#)
- archived messages [6](#)
- home page [12](#)
- interface content [5](#)
- logs
 - command [10](#)
 - console [9](#)
 - event automation [11](#)
 - security [11](#)
 - web access [12](#)
 - web server error [12](#)

messages [3](#)

- action [4](#)
- error [4](#)
- info [3](#)

MWTM client, downloading [15](#)

navigation tree [3](#)

software updates [17](#)

system

- clients [8](#)
- information [17](#)
- status [8](#)
- versions [8](#)

technical documentation [17](#)

MWTM windows

printing [24](#)

N

navigating

table columns [23](#)

- navigation tree
 - MWTM client [16](#)
 - MWTM web interface [3](#)
 - navigational features [15](#)
 - network
 - topology [1](#)
 - views
 - topology [1](#)
 - network name mapping files, creating [16](#)
 - network objects
 - viewing a summary [17](#)
 - node
 - access [4](#)
 - archive
 - management [31](#)
 - BWG tabs [2](#)
 - CSG tabs [3](#)
 - CSR tabs [4](#)
 - file
 - management [24](#)
 - menu, management [25](#)
 - MWTM panel [28](#)
 - files
 - ITP panel [29](#)
 - GGSN tabs [5](#)
 - HA tabs [5](#)
 - ITP tabs [7](#)
 - naming information [15](#)
 - ONS tabs [9](#)
 - polling information [20](#)
 - RAN service module tabs [12](#)
 - status information [23](#)
 - uptime information [23](#)
 - node and ONS card details window
 - configuration data
 - descriptive information [10](#)
 - node details window
 - configuration data
 - IP addresses for SNMP [13](#)
 - node name settings [5](#)
 - nodes
 - deleting
 - from MWTM discovery database [58](#)
 - excluding from view [60](#)
 - managing [58](#)
 - polling [50](#)
 - SNMP IP addresses
 - editing [38](#)
 - trap
 - processing [52](#)
 - unmanaging [58](#)
 - window [3](#)
 - menus, right-click [4](#)
 - node table [8](#)
 - nodes and files, seed
 - loading [7](#)
 - notes
 - attaching [54](#)
 - event [23](#)
 - viewing [55](#)
-
- O**
- object details window
 - configuration data
 - naming [14](#)
 - object functions
 - detailed
 - understanding [1](#)
 - object map
 - reference [1](#)
 - objectives
 - document [xxxviii](#)
 - objects
 - deleting [56](#)
 - from MWTM database [56](#)
 - from network [56](#)
 - ignoring and unignoring [60](#)

online help, viewing [21](#)

ONS nodes

- protection information [21](#)

operations

- basic server performance [39](#)

organization

- document [xxxviii](#)

out-of-band management

- FAQs [19](#)

overview

- discovery [5](#)

P

passwords (see security)

peak

- reports [74](#)

percentages

- FAQs [16](#)

physical folder

- tabs [20](#)

point code

- export files, inventory [248](#)
- inventory [48](#)
- reports [48](#)
- setting format [4](#)

poller

- settings [5](#)
- settings, changing [2](#)

poller settings window [110](#)

polling

- FAQs [9](#)

polling nodes [50](#)

port numbers and parameters

- configuring [5](#)

ports

- MWMT [1](#)

preference settings

- default, restoring [18](#)

- web, changing [18](#)

preferences

- menu [2](#)
- settings

 - CiscoWorks server [13](#)
 - deploy [15](#)
 - troubleshooting [6](#)

printing

- MWMT windows [24](#)

products menu [22](#)

properties, editing [49](#)

provisioning

- prerequisites [47](#)
- using [42](#)
- wizard

 - using [48](#)

R

Radio Access Network Optimization (see RAN-O)

RAN

- information [22](#)

RAN backhaul

- table [38](#)
- tabs [18](#)
- virtual

 - creating [143](#)

RAN data export files

- displaying [40](#)

RAN shorthauls

- viewing [142](#)

RAN-O

- backhaul

 - properties, editing [53](#)

- MIBS

 - specific [11](#)

- overview [8](#)
- traps [11](#)

RAN-O only

- threshold
 - information [35](#)
- README file [27](#)
- real-time data
 - ITP objects
 - viewing [73](#)
 - objects
 - viewing [53](#)
- real-time poller
 - settings
 - changing [20](#)
- rebooting
 - FAQs [5](#)
- recent events
 - viewing [41](#)
- reference
 - command [1](#)
 - object map [1](#)
- remote IP address
 - information [22](#)
- reports
 - archived
 - custom [238](#)
 - rolling [241](#)
 - AS accounting [210](#)
 - ASP accounting [210](#)
 - custom (see custom reports)
 - directory [281](#)
 - generating [2](#)
 - GTT accounting [211](#)
 - GTT, daily [211](#)
 - IP addresses accounting [48](#)
 - link [67](#)
 - five day [77](#)
 - linkset [78](#)
 - log [275](#)
 - managing [1](#)
 - MLR [88](#)
 - aborts [89](#)
 - continues [90](#)
 - processed [90](#)
 - subtriggers [92](#)
 - MSU load [94](#)
 - MSU peaks [94](#)
 - MSU rates [93](#)
 - MTP3 accounting [212](#)
 - MTP3 event [247](#)
 - MTP3 events
 - hourly [247](#)
 - MTP3, daily [212](#)
 - point code [48](#)
 - point code, inventory [48](#), [210](#)
 - system
 - parameters [275](#)
 - timers [275](#)
 - system log [13](#)
 - viewing [3](#)
- reports properties
 - viewing [17](#)
- reports, accounting
 - viewing [210](#)
- requirements
 - FAQs [3](#)
- restoring
 - MWTM files [30](#)
- RMI
 - how does it work [2](#)
 - root user, becoming [2](#)
- route detail
 - viewing [123](#)
- route table files [1](#)
 - deploying [12](#)
 - editing [5](#)
 - loading [11](#)
 - non-MWTM [14](#)
 - opening
 - from archive [4](#)
 - from file [2](#)

- from ITP 3
- reverting to last saved 14
- route table dialog
 - menu 5
 - menus, right-click 7
 - table 7
- saving 12

S

- sample firewall
 - configuration 9
- saving
 - address table files 18
 - alarm filter 20
 - event filter 20
 - GTT files 38
 - MWTM files 25
 - route table files 12
 - seed files 8
 - topology 16
 - view 5
- security 1
 - client access, limiting 29
 - data, restoring 18
 - logs, system 17
 - message of the day 15
 - overview 1
 - passwords
 - changing 13
 - creating 7
 - disabling, automatically 10
 - disabling, manually 12
 - re-enabling 13
 - synchronizing 16
 - SSL 21
 - enabling 21
 - support, disabling 28
 - support, managing 27
 - SSL certificates
 - details 26
 - downloading 23
 - exporting 26
 - importing 25
 - tool 24
 - superuser 19
 - user levels 7
 - (level 1) basic user 8
 - (level 2) power user 8
 - (level 3) network operator 9
 - (level 4) network administrator 9
 - (level 5) system administrator 9
 - user-based access
 - disabling 18
 - implementing 2
 - users
 - changing 13
 - disabling, automatically 10
 - disabling, manually 12
 - listing current 16
 - re-enabling 13
- seed files
 - changing 11
 - creating 10
 - loading 8
 - saving 8
 - using a text editor 11
- seed nodes, loading 7
- semantics
 - address table files 14
 - GTT files 33
- server
 - setting up 1
- server communication
 - FAQs 21
- server configuration, MWTM 13
- server messages
 - FAQs 4

- server properties
 - viewing 15
- server status information
 - viewing 40
- server, MWTM
 - changing default name 26
 - connecting new 40
 - IOS server load balancing 16
 - removing data 32
- sessions, MWTM, running simultaneous 39
- setting
 - alarm filter 12
 - CiscoWorks server
 - changing 13
 - deploy
 - changing 15
 - event filter 12
- settings
 - charts
 - changing 11
 - connection 6
 - event
 - changing 7
 - exit 3
 - general, displaying 4
 - GUI, changing 3
 - node name 5
 - poller 5
 - repaint 6
 - startup 3
 - status, changing 11
 - topology
 - changing 13
- severity alarm 18
- SGM
 - commands 1
 - FAQs (see FAQs)
 - status definitions (see status, definitions)
- shorthaul table 40
- signaling gateway mated pairs
 - table 31
- signaling gateway-mated pair
 - tabs 16
- signaling point
 - tabs 13
- signaling point details window
 - configuration data
 - capability point code 9
 - point code 19
- signaling points
 - window
 - signaling point information 18
- single-instance ITPs, connecting 6
- SNMP
 - settings
 - buttons 17
 - commands 17
 - configuring 15
 - table 15
 - trap, enabling 7
- software versions
 - displaying 20
- Solaris MWTM client, starting 3
- sound files, adding 41
- sound filters, event
 - creating new 39
 - deleting 42
 - listing for 38
 - setting 38
- sound filters, events
 - changing 42
- sounds
 - FAQs 8
- SSL (see also security)
- SSL certificate tool, launching 27
- SSL, downloading module
 - from web server 23
- starting MWTM

- client [3](#)
 - server [1](#)
- startup settings [3](#)
- statistics
 - archived reports
 - daily [244](#)
 - hourly [244](#)
- status
 - FAQs [11](#)
 - settings, changing [11](#)
- status contributors, viewing [36](#)
- Summary lists [17](#)
- summary lists [18, 20](#)
 - displaying [20](#)
- superuser [19](#)
 - FAQs [11](#)
- syncing
 - FAQs [22](#)
- syslog
 - FAQs [11](#)
 - viewing [54](#)
- system properties
 - viewing [13](#)

TT

- table
 - application server process [28](#)
 - application server process associations [29](#)
 - application servers [25](#)
 - card [36](#)
 - interfaces [33](#)
 - linkset [20](#)
 - RAN backhaul [38](#)
 - RAN shorthaul [40](#)
 - signaling gateway mated pairs [31](#)
- table columns
 - navigating [23](#)
- table file

- address
- loading [9](#)
- tabs
 - application server [15](#)
 - application server process [15](#)
 - application server process association [16](#)
 - BWG node [2](#)
 - card [18](#)
 - CSG node [3](#)
 - CSR node [4](#)
 - GGSN node [5](#)
 - HA node [5](#)
 - interface [17](#)
 - UMTS and GSM (RAN-O only) [18](#)
 - ITP node [7](#)
 - link [14](#)
 - linkset [14](#)
 - management interface folder [20](#)
 - ONS node [9](#)
 - physical folder [20](#)
 - RAN backhaul [18](#)
 - RAN service module node [12](#)
 - signaling gateway-mated pair [16](#)
 - signaling point [13](#)
- technical documentation (see MWTM web interface)
- terminal
 - enabling proxy [11](#)
 - text entry fields
 - FAQs [5](#)
- TFTP
 - server (ITP only), setting up [11](#)
- timing service
 - FAQs [8](#)
- topology maps
 - FAQs [7](#)
- topology
 - centering [15](#)
 - color [20](#)
 - directories [17](#)

- hiding 24
- icons, locking 23
- layouts, creating custom 14
- magnetic grid 18, 19
- map 8
- map menu 13
- menu 2
- network 1
- objects
 - aligning 22
 - details 16
 - finding 14
 - hiding 23
 - redrawing 24
- printing 16
- RAN-O 5
- redrawing 24
- restoring 25
- saving 16, 24
- settings
 - changing 13
- toolbar buttons 3
- viewing 1
- views menu 13
- trap
 - event, forwarding 37
 - IP address, limiting by 8
 - nodes, processing 52
 - server, forwarding 38
 - settings
 - viewing 63
 - SNMP, enabling 7
- trap forwarding properties
 - viewing 18
- TRAP_RATE_ABATE_OFFSET 43
- TRAP_RATE_LIMIT_COUNT 43, 44
- traps
 - FAQs 15
 - supported, SGM 1

- troubleshooting 39
 - data 1
 - diagnosing ITP problems 5
 - diagnosing RAN-O problems 8
 - error messages 2
 - data model mediator service 2
 - demand poller manager service 2
 - events 5
 - IOS commands 4
 - locked up display 1
 - pane 6
 - server processes 3
 - web pages 3

U

- uninstalling
 - FAQs 2
 - MWTM 28
- unmanaging
 - ITP signaling points 58
 - nodes 58
- user password
 - FAQs 11
- user-based access (see security)
- users (see security)
- using
 - MWTM main menu 18
 - provisioning 42
 - Windows Start menu 26

V

- view
 - basic information 2
 - client-specific 14
 - creating 7
 - creating (see view editor window)

- custom [2](#)
- default
 - loading [14](#)
- detailed information
 - viewing [5](#)
- editing [5](#)
- including objects in [11](#)
- managing [1](#)
- right-click menu [3](#)
- saving [5](#)
- table [3](#)
- view editor window [7](#)
 - closing [13](#)
 - left pane [9](#)
 - menu [8](#)
 - objects, right-click menu [10](#)
 - views, right-click menu [10](#)
- viewing [39](#)
 - accounting reports [210](#)
 - alarms [41](#)
 - details [7](#)
 - error data [114](#)
 - MLR
 - details [129](#)
 - MTP3
 - event log [129](#)
 - notes [55](#)
 - online help [21](#)
 - RAN shorthauls [142](#)
 - recent events [41](#)
 - reports [3](#)
 - route detail [123](#)
 - server properties [15](#)
 - server status information [40](#)
 - status contributors [36](#)
 - syslog [54](#)
 - system properties [13](#)
 - topology [1](#)
 - trap forward properties [18](#)

- troubleshooting [39](#)
- web configuration properties [15](#)
- viewing reports properties [17](#)

W

- web configuration properties
 - viewing [15](#)
- web pages
 - troubleshooting [3](#)
- web preference, settings
 - changing [1](#)
- web server
 - downloading SSL module [23](#)
- Windows
 - FAQs [11](#)
- Windows Start menu
 - changing default
 - MWTM server name [26](#)
 - launching
 - DOS prompt [27](#)
 - MWTM client [27](#)
 - MWTM event editor [27](#)
 - MWTM README file [27](#)
 - SSL Certificate Tool [27](#)
 - uninstalling MWTM [28](#)
 - using [26](#)

Y

- yellow nodes
 - FAQs [23](#)