



# APPENDIX **A**

## Client Object Map Reference

In the Mobile Wireless Transport Manager (MWTM) web interface, if you click on a node in the left pane, the associated tabs appear in the content area in the right pane. This appendix provides an overview of the tabs available for each MWTM object, and contains:



**Note**

The MWTM client has a subset of the tabs described in this section.

Object Type	Related Content	Applicable To
Nodes	<ul style="list-style-type: none"> <li>• <a href="#">BWG Node Tabs, page A-2</a></li> <li>• <a href="#">CSG1 and CSG2 Node Tabs, page A-3</a></li> <li>• <a href="#">CSR Node Tabs, page A-4</a></li> <li>• <a href="#">Generic Node Tabs, page A-4</a></li> <li>• <a href="#">GGSN Node Tabs, page A-5</a></li> <li>• <a href="#">HA Node Tabs, page A-5</a></li> <li>• <a href="#">IP-RAN Node Tabs, page A-6</a></li> <li>• <a href="#">ITP Node Tabs, page A-7</a></li> <li>• <a href="#">Metro Ethernet Node Tabs, page A-8</a></li> <li>• <a href="#">mSEF Node Tabs, page A-8</a></li> <li>• <a href="#">ONS Node Tabs, page A-9</a></li> <li>• <a href="#">PDNGW Node Tabs, page A-9</a></li> <li>• <a href="#">SGW Node Tabs, page A-10</a></li> <li>• <a href="#">SPGW Node Tabs, page A-10</a></li> <li>• <a href="#">PDSN Node Tabs, page A-11</a></li> <li>• <a href="#">PCRF Node Tabs, page A-13</a></li> <li>• <a href="#">RAN Service Card Node Tabs, page A-13</a></li> <li>• <a href="#">Unknown Node Tabs, page A-14</a></li> </ul>	<ul style="list-style-type: none"> <li>• BWG: mSEF networks</li> <li>• CSG1 and CSG2: mSEF networks</li> <li>• CSR: IP-RAN networks</li> <li>• Generic: All networks</li> <li>• GGSN: mSEF networks</li> <li>• HA: mSEF networks</li> <li>• IP-RAN: IP-RAN networks</li> <li>• ITP: ITP networks</li> <li>• Metro Ethernet: IP-RAN networks</li> <li>• mSEF: mSEF networks</li> <li>• ONS: IP-RAN networks</li> <li>• PDNGW: mSEF networks</li> <li>• SGW: mSEF networks</li> <li>• SPGW: mSEF networks</li> <li>• PDSN: mSEF networks</li> <li>• PCRF: PCRF networks</li> <li>• RAN Service: IP-RAN networks</li> <li>• Unknown: All networks</li> </ul>

## BWG Node Tabs

Object Type	Related Content	Applicable To
Signaling Points	<a href="#">Signaling Point Tabs, page A-14</a>	ITP networks only
Linksets	<a href="#">Linkset Tabs, page A-15</a>	
Links	<a href="#">Link Tabs, page A-15</a>	
Application Servers	<a href="#">Application Server Tabs, page A-16</a>	
Application Server Processes	<a href="#">Application Server Process Tabs, page A-16</a>	
Application Server Process Associations	<a href="#">Application Server Process Association Tabs, page A-17</a>	
Signaling Gateway-Mated Pairs	<a href="#">Signaling Gateway-Mated Pair Tabs, page A-17</a>	
Interfaces	<a href="#">Interface Tabs, page A-18</a>	All networks
Cards	<a href="#">Card Tabs, page A-19</a>	IP-RAN networks
RAN Backhauls	<a href="#">RAN Backhaul Tabs, page A-19</a>	IP-RAN networks
RAN Shorthauls	<a href="#">UMTS and GSM Interface Tabs, page A-19</a>	
PWE3 Backhauls	<a href="#">PWE3 Backhaul Tabs, page A-20</a>	
PWE3 Virtual Circuits	<a href="#">PWE3 Virtual Circuits Tabs, page A-20</a>	
Access Point Names (APN)	<a href="#">Access Point Name Node Tabs, page A-21</a>	mSEF networks
Access Point Name Instance (APMN Instance)	<a href="#">Access Point Name Node Tabs, page A-21</a>	mSEF networks
Folders	<a href="#">Physical and Management Interface Folder Tabs, page A-21</a>	All networks

## BWG Node Tabs

Clicking a Broadband Wireless Gateway (BWG) node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Chassis	<a href="#">Viewing Chassis, page 7-144</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Statistics	<a href="#">Displaying BWG Real-Time Statistics, page 11-55</a>
NSO	<a href="#">Viewing Non-Stop Operation, page 7-101</a>

Tab	Related Content
HSRP <b>Note</b> This tab is available only for the BWG devices having 7600 chassis and the SAMI cards.	<a href="#">Viewing HSRP details, page 7-141</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

**Note**

To view all nodes in your system, see [Nodes Table, page 8-8](#).

## CSG1 and CSG2 Node Tabs

Clicking a CSG node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Chassis	<a href="#">Viewing Chassis, page 7-144</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Statistics <b>Note</b> This tab is available only for CSG2 devices.	<a href="#">Displaying CSG2 Real-Time Statistics, page 11-42</a>
NSO <b>Note</b> This tab is available only for CSG2 devices.	<a href="#">Viewing Non-Stop Operation, page 7-101</a>
HSRP <b>Note</b> This tab is available only for the CSG2 devices having 7600 chassis and the SAMI cards.	<a href="#">Viewing HSRP details, page 7-141</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

**Note**

To view all nodes in your system, see [Nodes Table, page 8-8](#).

## CSR Node Tabs

Clicking a Cell Site Router (CSR) node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
PWE3 Stats	<a href="#">Viewing PWE3 Statistics, page 7-121</a>
<b>Note</b> This tab is only available for CSR nodes operating Pseudo Wires.	
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Traps	<a href="#">Viewing Trap Settings, page 7-65</a>
QOS	<a href="#">Displaying QoS Statistics, page 11-113</a>
PWE3 Stats	<a href="#">Viewing PWE3 Statistics, page 7-121</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

**Note**

To view all nodes in your system, see [Nodes Table, page 8-8](#).

## Generic Node Tabs

Clicking a generic node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>

Tab	Related Content
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

## GGSN Node Tabs

Clicking a GGSN node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Chassis	<a href="#">Viewing Chassis, page 7-144</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
<b>Note</b> The syslog tab is available for GGSN R8 and later.	
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Statistics	<a href="#">Displaying GGSN Real-Time Statistics, page 11-69</a>
<b>Note</b> The Statistics tab is available for GGSN R8 and later.	
APNs	<a href="#">Viewing APNs, page 7-147</a>
NSO	<a href="#">Viewing Non-Stop Operation, page 7-101</a>
HSRP	<a href="#">Viewing HSRP details, page 7-141</a>
<b>Note</b> This tab is available only for the GGSN devices having 7600 chassis and the SAMI cards.	
Reports	<a href="#">Viewing Reports, page 13-4</a>



### Note

To view all nodes in your system, see [Nodes Table, page 8-8](#).

## HA Node Tabs

Clicking an HA node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Chassis	<a href="#">Viewing Chassis, page 7-144</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Statistics	<a href="#">Displaying HA Real-Time Statistics, page 11-66</a>
NSO	<a href="#">Viewing Non-Stop Operation, page 7-101</a>
HSRP	<a href="#">Viewing HSRP details, page 7-141</a>
<b>Note</b> This tab is available only for the HA devices having 7600 chassis and the SAMI cards.	
Reports	<a href="#">Viewing Reports, page 13-4</a>

**Note**

To view all nodes in your system, see [Nodes Table, page 8-8](#).

## IP-RAN Node Tabs

Clicking an IP-RAN node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Chassis	<a href="#">Viewing Chassis, page 7-144</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>

Tab	Related Content
PWE3 Stats <b>Note</b> The PWE3 Statistics tab is only available for devices running Pseudo Wire.	<a href="#">Viewing PWE3 Statistics, page 7-121</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

**Note**

To view all nodes in your system, see [Nodes Table, page 8-8](#).

## ITP Node Tabs

Clicking an IP Transfer Point (ITP) node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Chassis <b>Note</b> This tab is available for the 7600 devices.	<a href="#">Viewing Chassis, page 7-144</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Traps	<a href="#">Viewing Trap Settings, page 7-65</a>
MTP3 Errors	<a href="#">Viewing ITP MTP3 Errors, page 7-99</a>
MSU Rates <b>Note</b> Only available for ITPs that have an IOS that implements the CISCO-ITP-MSU-RATES-MIB.	<a href="#">Viewing ITP MSU Rates, page 7-100</a>
NSO	<a href="#">Viewing Non-Stop Operation, page 7-101</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

**Note**

To view all nodes in your system, see [Nodes Table, page 8-8](#).

# Metro Ethernet Node Tabs

Clicking a Metro Ethernet node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

# mSEF Node Tabs

This is a 7600 supervisor card in a chassis that contains SAMI cards.

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Chassis	<a href="#">Viewing Chassis, page 7-144</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Statistics	<a href="#">Viewing Statistics, page 11-35</a>
<b>Note</b> Only available for mSEF devices supporting Server Load Balancing (SLB).	
NSO	<a href="#">Viewing Non-Stop Operation, page 7-101</a>
HSRP	<a href="#">Viewing HSRP details, page 7-141</a>
<b>Note</b> This tab is available only for the mSEF devices having 7600 chassis and the SAMI cards.	
Reports	<a href="#">Viewing Reports, page 13-4</a>



**Note**

To view all nodes in your system, see [Nodes Table](#), page 8-8.

## ONS Node Tabs

Clicking an Optical Networking System (ONS) node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details</a> , page 7-7
Status	<a href="#">Viewing Status</a> , page 7-37
Notes	<a href="#">Viewing Notes</a> , page 8-55
Events	<a href="#">Viewing Alarms and Recent Events</a> , page 7-42
Alarms	<a href="#">Viewing Alarms and Recent Events</a> , page 7-42

**Note**

To view all nodes in your system, see [Nodes Table](#), page 8-8.

## PDNGW Node Tabs

Clicking a Packet Data Node Gateway (PDNGW) in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details</a> , page 7-7
Status	<a href="#">Viewing Status</a> , page 7-37
Syslog	<a href="#">Viewing the Syslog</a> , page 7-56
Notes	<a href="#">Viewing Notes</a> , page 8-55
Troubleshoot	<a href="#">Viewing Troubleshoot</a> , page 7-40
Events	<a href="#">Viewing Alarms and Recent Events</a> , page 7-42
Alarms	<a href="#">Viewing Alarms and Recent Events</a> , page 7-42
Chassis	<a href="#">Viewing Chassis</a> , page 7-144
CPU/Mem	<a href="#">Viewing CPU and Memory Performance</a> , page 7-58
Statistics	<a href="#">Viewing Statistics</a> , page 11-35
APNs	<a href="#">Viewing APNs</a> , page 7-147
NSO	<a href="#">Viewing Non-Stop Operation</a> , page 7-101

Tab	Related Content
HSRP <b>Note</b> This tab is available only for the PDNGW devices having 7600 chassis and the SAMI cards.	<a href="#">Viewing HSRP details, page 7-141</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

## SGW Node Tabs

Clicking a Serving Gateway (SGW) in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Chassis	<a href="#">Viewing Chassis, page 7-144</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Statistics	<a href="#">Viewing Statistics, page 11-35</a>
APNs	<a href="#">Viewing APNs, page 7-147</a>
NSO	<a href="#">Viewing Non-Stop Operation, page 7-101</a>
HSRP <b>Note</b> This tab is available only for the SGW devices having 7600 chassis and the SAMI cards.	<a href="#">Viewing HSRP details, page 7-141</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

## SPGW Node Tabs

Clicking a Serving Gateway/PDN Gateway (SPGW) in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Chassis	<a href="#">Viewing Chassis, page 7-144</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Statistics	<a href="#">Viewing Statistics, page 11-35</a>
APNs	<a href="#">Viewing APNs, page 7-147</a>
NSO	<a href="#">Viewing Non-Stop Operation, page 7-101</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

## PDSN Node Tabs

Clicking a Packet Data Serving Node (PDSN) in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Chassis	<a href="#">Viewing Chassis, page 7-144</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Statistics	<a href="#">Viewing Statistics, page 11-35</a>
NSO	<a href="#">Viewing Non-Stop Operation, page 7-101</a>

Tab	Related Content
HSRP <b>Note</b> This tab is available only for the PDSN devices having 7600 chassis and the SAMI cards.	<a href="#">Viewing HSRP details, page 7-141</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

## PCRF Node Tabs

Clicking a Policy and Charging Rules Function (PCRF) node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Statistics	<a href="#">Displaying PCRF Real Time Statistics, page 11-129</a>

## RAN Service Card Node Tabs

Clicking a Radio Access Network (RAN) Service Card (SVC) node in MWTM provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Syslog	<a href="#">Viewing the Syslog, page 7-56</a>
CPU/Mem	<a href="#">Viewing CPU and Memory Performance, page 7-58</a>
Traps	<a href="#">Viewing Trap Settings, page 7-65</a>
QOS	<a href="#">Displaying QoS Statistics, page 11-113</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>



### Note

To view all nodes in your system, see [Nodes Table, page 8-8](#).

## CDT Node Tabs

Clicking a CDT node tab provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>

**Note**

To view all nodes in your system, see [Nodes Table, page 8-8](#).

## Unknown Node Tabs

**Note**

Unknown nodes will show a performance tab when the unknown node implements the CISCO-PROCESS-MIB and either the CISCO-ENHANCED-MEMPOOL-MIB or CISCO-MEMORY-POOL-MIB.

Clicking a node in a MWTM view with unknown node status provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>

**Note**

To view all nodes in your system, see [Nodes Table, page 8-8](#).

## Signaling Point Tabs

Clicking on a signaling point in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>

Tab	Related Content
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
ITP Access Lists	<a href="#">Viewing Route Detail, page 7-125</a>
Route Detail	<a href="#">Viewing Route Detail, page 7-125</a>
GTT MAP Status	<a href="#">Viewing GTT MAP Status, page 7-126</a>
GTT Statistics	<a href="#">Viewing GTT Statistics, page 7-128</a>
MLR Details	<a href="#">Viewing MLR Details, page 7-131</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

**Note**

To view all signaling points in your system, see [Signaling Points Table, page 8-18](#).

## Linkset Tabs

Clicking on a linkset in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Linkset Access Lists	<a href="#">Viewing ITP Linkset Access Lists, page 7-123</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>
Statistics	<a href="#">Viewing ITP Linkset Statistics, page 7-124</a>

**Note**

To view all linksets in your system, see [Linksets Table, page 8-20](#).

## Link Tabs

Clicking on a link in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>

Tab	Related Content
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>
Interface Details	<a href="#">Interface Details, page 7-81</a>
Statistics	<a href="#">Statistics: Application Server Process Associations, page 7-90</a>
SCTP Assoc. Config Details	<a href="#">SCTP Association Configuration Details, page 7-86</a>
SCTP Assoc. Stats Details	<a href="#">SCTP Association Statistics Details, page 7-88</a>
Q.752 Measurements	<a href="#">Q.752 Measurements, page 7-84</a>
Status Details	<a href="#">Status Details, page 7-95</a>

**Note**

To view all links in your system, see [Links Table, page 8-23](#).

## Application Server Tabs

Clicking on an application server in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Statistics	<a href="#">Statistics: Application Servers, page 7-89</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

**Note**

To view all application servers in your system, see [Application Servers Table, page 8-25](#).

## Application Server Process Tabs

Clicking on an application server process in a MWTM view provides you with the following tabs:



Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>

**Note**

To view all application server processes in your system, see [Application Server Processes Table, page 8-28](#).

## Application Server Process Association Tabs

Clicking on an application server process association in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Statistics	<a href="#">Statistics: Application Server Process Associations, page 7-90</a>
SCTP Assoc. Config Details	<a href="#">SCTP Association Configuration Details, page 7-86</a>
SCTP Assoc. Stats Details	<a href="#">SCTP Association Statistics Details, page 7-88</a>
Interface Details	<a href="#">Interface Details, page 7-81</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

**Note**

To view all application server process associations in your system, see [Application Server Process Associations Table, page 8-29](#).

## Signaling Gateway-Mated Pair Tabs

Clicking on a signaling gateway-mated pair in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>

Tab	Related Content
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
SCTP Assoc. Config Details	<a href="#">SCTP Association Configuration Details, page 7-86</a>
SCTP Assoc. Stats Details	<a href="#">SCTP Association Statistics Details, page 7-88</a>
Interface Details	<a href="#">Interface Details, page 7-81</a>

**Note**

To view all signaling gateway-mated pairs in your system, see [Signaling Gateway Mated Pairs Table, page 8-31](#).

## Interface Tabs

Clicking on an interface in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Performance <sup>1</sup>	<a href="#">Viewing Data for Interfaces, page 7-67</a>
Errors/Discards <sup>2</sup>	<a href="#">Viewing Data for Interfaces, page 7-67</a>
Advanced Details <sup>3</sup>	<a href="#">Viewing Data for Interfaces, page 7-67</a>
TDM Stats	<a href="#">Viewing TDM Statistics, page 7-107</a>
<b>Note</b> TDM statistics are available only on some interfaces on nodes that implement either the CISCO-ICSUDSU-MIB or RFC1406-MIB.	

1. May not be applicable for interfaces that do not collect statistics.
2. May not be applicable for interfaces that do not collect statistics.
3. May not be applicable for interfaces that do not collect statistics.

**Note**

To view all interfaces in your system, see [Interfaces Table, page 8-33](#).

## UMTS and GSM Interface Tabs

Clicking on a RAN shorthaul (either UMTS or GSM) in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Shorthaul Performance	<a href="#">Viewing Shorthaul Performance Data, page 7-112</a>
Shorthaul Errors	<a href="#">Viewing Shorthaul Errors, page 7-117</a>



**Note**

To view all interfaces in your system, see [Interfaces Table, page 8-33](#).

## Card Tabs

Clicking on a card in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
<b>Note</b> Only available when the card has child objects such as interfaces.	
Notes	<a href="#">Viewing Notes, page 8-55</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>



**Note**

To view all cards in your system, see [Cards Table, page 8-36](#).

## RAN Backhaul Tabs

Clicking on a RAN backhaul in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
RAN Shorthauls	<a href="#">Viewing RAN Shorthauls, page 7-144</a>
Backhaul Performance	<a href="#">Viewing Backhaul Performance Data, page 7-113</a> (Real-time data on the MWTM client) <a href="#">Displaying Backhaul Performance Statistics, page 11-37</a> (Historical data on the MWTM web interface)
Backhaul Errors	<a href="#">Viewing Backhaul Errors, page 7-121</a> (Real-time data on the MWTM client) <a href="#">Displaying Backhaul Error Statistics, page 11-41</a> (Historical data on the MWTM web interface)

**Note**

To view all RAN backhauls in your system, see [RAN Backhauls Table, page 8-38](#).

## PWE3 Backhaul Tabs

Clicking on a PWE3 backhaul in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
PWE3 VCs	<a href="#">PWE3 Virtual Circuits Table, page 8-44</a>
PWE3 Stats	<a href="#">Viewing PWE3 Statistics, page 7-121</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

## PWE3 Virtual Circuits Tabs

Clicking on a PWE3 virtual circuit in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
PWE3 Stats	<a href="#">Viewing PWE3 Statistics, page 7-121</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>

## Access Point Name Node Tabs

This section provides information about the tabs available for Access Point Name nodes.

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Troubleshoot	<a href="#">Viewing Troubleshoot, page 7-40</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Reports	<a href="#">Viewing Reports, page 13-4</a>
APNs	<a href="#">Viewing APNs, page 7-147</a>
Nodes	<a href="#">Viewing APN Specific Nodes, page 7-148</a>

## Physical and Management Interface Folder Tabs

The Physical folder that contains a list of the physical interfaces and cards that belong to the node. The Management Interface folder contains a list of interfaces that the MWTM uses to manage the node.

Clicking on a Physical or Management Interface folder in a MWTM view provides you with the following tabs:

Tab	Related Content
Details	<a href="#">Viewing Details, page 7-7</a>
Status	<a href="#">Viewing Status, page 7-37</a>
Notes	<a href="#">Viewing Notes, page 8-55</a>
Events	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>
Alarms	<a href="#">Viewing Alarms and Recent Events, page 7-42</a>

