



INDEX

Numerics

- 2-post hardware kit
 - rack-mount [3-5](#)
- 2-post rack, mid-mounting appliance on [3-6](#)
- 4-post hardware kit
 - rack-mount [3-9](#)
- 4-post rack, mounting appliance on [3-8](#)

A

- AC power up
 - procedure [3-24](#)
- adapter cards
 - troubleshooting [C-4](#)
- adapter pinouts [1-11](#)
- ADE 2130 and 2140 Series appliance
 - front view [1-4](#)
 - rear view [1-6](#)
- airflow
 - guidelines [2-9](#)
- altitude
 - guidelines [A-4](#)
- auxiliary port
 - pinouts [1-11](#)

B

- Backing up appliance configuration [6-1](#)
- back panel [1-6](#), [3-16](#), [3-18](#), [3-20](#)
- blank (power supply) filler panel, removing [4-20](#)
- Boot loader [F-1](#)
- bootloader [5-15](#)

C

- cable
 - management [3-23](#)
- checking
 - LEDs [3-25](#)
- checklist, installation [2-16](#)
- CLI commands
 - exsession [5-4](#)
 - ip broadcast [5-4](#)
 - ip domain [5-4](#)
 - ip gateway [5-4](#)
 - ip host [5-5](#)
 - ip interface [5-3](#)
 - ip nameserver [5-5](#)
 - ping [5-5](#)
 - show ip [5-6](#)
- Configuration
 - backing up [6-1](#)
 - checking [5-5](#)
 - restoring [6-2](#)
- configuration
 - site [2-8](#)
- Configuring
 - broadcast address [5-4](#)
 - ip address [5-3](#)
 - NAM interface for management traffic [5-3](#)
- connecting
 - network interface [3-20](#)
- connections
 - console port [2-17](#)
 - Ethernet [2-17](#)
 - troubleshooting [C-4](#)

- considerations
 - power [2-10](#)
- Console [3-21](#)
- console port
 - connections [2-17](#)
 - pinouts
 - serial [1-10](#)
 - serial [1-10](#)
- console port signaling cabling, DB-9 (table) [1-11](#)
- Console terminal configuration [3-21](#)
- conventions, document [iii-xi](#)
- cooling system
 - troubleshooting [C-3](#)
- corrosion
 - preventing damage [A-2](#)
- CPI tool
 - identification [1-5, C-7](#)

D

- DC power up
 - procedure [3-25](#)
- document
 - conventions [iii-xi](#)
- dust
 - preventing damage [A-4](#)

E

- electricity
 - safety with [2-3](#)
- electromagnetic interference
 - See* EMI
- electrostatic discharge
 - See* ESD
- EMI
 - preventing effects of [A-4](#)
- environment

- maintaining [A-1](#)
 - site [2-8](#)
- environmental
 - features [C-3](#)
 - specifications (table) [2-9](#)
- equipment
 - racks
 - rack-mounting [2-9](#)
 - safety with [2-3](#)
- ESD
 - preventing damage [2-5, A-4](#)
 - preventing effects of [A-4](#)
- Ethernet
 - connections [2-17](#)
- Ethernet ports
 - NIC [1-9](#)

F

- features
 - environmental reporting [C-3](#)
- front panel
 - LEDs and switches [1-5](#)
- front view
 - ADE 2130 and 2140 Series appliance [1-4](#)

G

- general
 - precautions [2-2](#)
- GNU GRUB [F-1](#)
- guidelines
 - airflow [2-9](#)
 - lifting [2-6](#)
 - rack installation [2-7](#)
 - rack-mounting configuration [3-4](#)
 - safety [2-2](#)
 - temperature and humidity [2-9](#)

temperature maintenance [A-3](#)

H

hardware

installing [3-1](#)

options [4-2](#)

troubleshooting procedures [C-1](#)

helper utility [F-1](#)

humidity

maintenance guidelines [A-4](#)

I

identification

CPI [1-5, C-7](#)

information

packet [2-14](#)

installation

checklist [2-16](#)

hardware [3-1](#)

K

kit

2-post rack-mount (table) [3-6](#)

4-post rack-mount (table) [3-9](#)

L

LEDs

checking [3-25](#)

front panel [1-5](#)

front panel and NIC [C-5](#)

NIC [1-7](#)

power supply [1-8](#)

lifting guidelines [2-6](#)

location

serial number [1-4, C-7](#)

log, site [2-16, D-1](#)

Login prompt [5-2](#)

logging in for the first time [5-1](#)

M

magnetism

preventing effects of [A-5](#)

maintenance [A-1](#)

temperature [A-3](#)

management

cable [3-23](#)

method of procedures

See MOP

MOP [2-6, 2-11](#)

N

network interface

connecting [3-20](#)

NIC

Ethernet ports [1-9](#)

LEDs [1-7](#)

RJ-45 pinout [1-10](#)

O

options

hardware [4-2](#)

overcurrent

protection [1-13](#)

overtemperature

protection [1-13](#)

overview

product [1-2](#)

overvoltage

protection [1-13](#)

P

packet

- information [2-14](#)

- packing list (table) [2-12](#)

Password

- default [5-16](#)

planning

- site [2-6](#)

power

- considerations [2-10](#)

power source interruptions

- preventing damage from [A-5](#)

power supply

- about [4-17](#)

- description [1-12](#)

- LEDs [1-8](#)

- redundant, adding new [4-20](#)

- replacing nonredundant [4-19](#)

- replacing redundant [4-18](#)

power system

- troubleshooting [C-3](#)

precautions

- general [2-2](#)

preventing

- electrostatic discharge damage [2-5](#)

problem solving

- See* troubleshooting

procedure

- AC power up [3-24](#)

- DC power up [3-25](#)

- method of [2-11](#)

product

- overview [1-2](#)

protection

- overcurrent [1-13](#)

- overtemperature [1-13](#)

- overvoltage [1-13](#)

R

rack

- 2-post (telco) [2-7](#)

- 4-post (open) [2-7](#)

- enclosed (do not use) [2-7](#)

- rack, mid-mounting on 2-post [3-6](#)

- rack, mounting on 4-post [3-8](#)

rack installation

- guidelines [2-7](#)

rack-mount

- 2-post hardware kit [3-5](#)

- 4-post hardware kit [3-9](#)

rack-mounting configuration

- guidelines [3-4](#)

- radio frequency interference. *See* RFI

rear view

- ADE 2130 and 2140 Series appliance [1-6](#)

- redundant power supply, replacing [4-18](#)

regulatory compliance

safety

- information [1-14](#)

removing

- ADE 1010 and 2120 Series appliance [3-26](#)

RFI

- preventing effects of [A-4](#)

RJ-45 pinout

- NIC [1-10](#)

root password

- resetting [5-15](#)

Root user password

- changing [5-2](#)

S

safety

- guidelines [2-2](#)

information

- regulatory compliance [1-14](#)

- overview [iii-xii](#)
- serial
 - console port [1-10](#)
 - pinouts [1-10](#)
- serial number
 - location [1-4, C-7](#)
- shipment
 - unpacking and checking [2-12](#)
- site
 - configuration [2-8](#)
 - environment [2-8](#)
 - maintenance factors [A-1](#)
 - log [2-16, D-1](#)
 - planning [2-6](#)
 - requirement, MOPs [2-11](#)
- Software
 - upgrading [6-2](#)
- Software download URL [6-2](#)

T

- temperature
 - maintenance guidelines [A-3](#)
- temperature and humidity
 - guidelines [2-9](#)
- tools and equipment
 - required [2-15](#)
- troubleshooting
 - adapter cards [C-4](#)
 - cables [C-4](#)
 - connections [C-4](#)
 - cooling system [C-3](#)
 - front-panel and NIC LEDs [C-5](#)
 - power system [C-3](#)

U

- unpacking and checking

- shipment [2-12](#)

W

- warnings
 - safety overview [iii-xii](#)
- warranty [2-14](#)
- Web server
 - enabling [5-7](#)

X

- XFP [4-4](#)
- XFP transceiver module [4-4, B-1](#)

