



## INDEX

---

### Numerics

- 2-post hardware kit
  - rack-mount [3-5](#)
- 2-post rack, mid-mounting appliance on [3-6](#)
- 4-post hardware kit
  - rack-mount [3-9](#)
- 4-post rack, mounting appliance on [3-8](#)

---

### A

- AC power up
  - procedure [3-24](#)
- adapter cards
  - troubleshooting [C-4](#)
- adapter pinouts [1-11](#)
- ADE 2130 and 2140 Series appliance
  - front view [1-4](#)
  - rear view [1-6](#)
- airflow
  - guidelines [2-9](#)
- altitude
  - guidelines [A-4](#)
- auxiliary port
  - pinouts [1-11](#)

---

### B

- Backing up appliance configuration [6-1](#)
- back panel [1-6](#), [3-16](#), [3-18](#), [3-20](#)
- blank (power supply) filler panel, removing [4-20](#)
- Boot loader [F-1](#)
- bootloader [5-15](#)

---

### C

- cable
  - management [3-23](#)
- checking
  - LEDs [3-25](#)
- checklist, installation [2-16](#)
- CLI commands
  - exsession [5-4](#)
  - ip broadcast [5-4](#)
  - ip domain [5-4](#)
  - ip gateway [5-4](#)
  - ip host [5-5](#)
  - ip interface [5-3](#)
  - ip nameserver [5-5](#)
  - ping [5-5](#)
  - show ip [5-6](#)
- Configuration
  - backing up [6-1](#)
  - checking [5-5](#)
  - restoring [6-2](#)
- configuration
  - site [2-8](#)
- Configuring
  - broadcast address [5-4](#)
  - ip address [5-3](#)
  - NAM interface for management traffic [5-3](#)
- connecting
  - network interface [3-20](#)
- connections
  - console port [2-17](#)
  - Ethernet [2-17](#)
  - troubleshooting [C-4](#)

- considerations
  - power [2-10](#)
- Console [3-21](#)
- console port
  - connections [2-17](#)
  - pinouts
    - serial [1-10](#)
  - serial [1-10](#)
- console port signaling cabling, DB-9 (table) [1-11](#)
- Console terminal configuration [3-21](#)
- conventions, document [iii-xi](#)
- cooling system
  - troubleshooting [C-3](#)
- corrosion
  - preventing damage [A-2](#)
- CPI tool
  - identification [1-5, C-7](#)

---

## D

- DC power up
  - procedure [3-25](#)
- document
  - conventions [iii-xi](#)
- dust
  - preventing damage [A-4](#)

---

## E

- electricity
  - safety with [2-3](#)
- electromagnetic interference
  - See* EMI
- electrostatic discharge
  - See* ESD
- EMI
  - preventing effects of [A-4](#)
- environment

- maintaining [A-1](#)
  - site [2-8](#)
- environmental
  - features [C-3](#)
  - specifications (table) [2-9](#)
- equipment
  - racks
    - rack-mounting [2-9](#)
  - safety with [2-3](#)
- ESD
  - preventing damage [2-5, A-4](#)
  - preventing effects of [A-4](#)
- Ethernet
  - connections [2-17](#)
- Ethernet ports
  - NIC [1-9](#)

---

## F

- features
  - environmental reporting [C-3](#)
- front panel
  - LEDs and switches [1-5](#)
- front view
  - ADE 2130 and 2140 Series appliance [1-4](#)

---

## G

- general
  - precautions [2-2](#)
- GNU GRUB [F-1](#)
- guidelines
  - airflow [2-9](#)
  - lifting [2-6](#)
  - rack installation [2-7](#)
  - rack-mounting configuration [3-4](#)
  - safety [2-2](#)
  - temperature and humidity [2-9](#)

temperature maintenance [A-3](#)

---

## H

hardware

installing [3-1](#)

options [4-2](#)

troubleshooting procedures [C-1](#)

helper utility [F-1](#)

humidity

maintenance guidelines [A-4](#)

---

## I

identification

CPI [1-5, C-7](#)

information

packet [2-14](#)

installation

checklist [2-16](#)

hardware [3-1](#)

---

## K

kit

2-post rack-mount (table) [3-6](#)

4-post rack-mount (table) [3-9](#)

---

## L

LEDs

checking [3-25](#)

front panel [1-5](#)

front panel and NIC [C-5](#)

NIC [1-7](#)

power supply [1-8](#)

lifting guidelines [2-6](#)

location

serial number [1-4, C-7](#)

log, site [2-16, D-1](#)

Login prompt [5-2](#)

logging in for the first time [5-1](#)

---

## M

magnetism

preventing effects of [A-5](#)

maintenance [A-1](#)

temperature [A-3](#)

management

cable [3-23](#)

method of procedures

*See* MOP

MOP [2-6, 2-11](#)

---

## N

network interface

connecting [3-20](#)

NIC

Ethernet ports [1-9](#)

LEDs [1-7](#)

RJ-45 pinout [1-10](#)

---

## O

options

hardware [4-2](#)

overcurrent

protection [1-13](#)

overtemperature

protection [1-13](#)

overview

product [1-2](#)

overvoltage

protection [1-13](#)

**P**

## packet

- information [2-14](#)

- packing list (table) [2-12](#)

## Password

- default [5-16](#)

## planning

- site [2-6](#)

## power

- considerations [2-10](#)

## power source interruptions

- preventing damage from [A-5](#)

## power supply

- about [4-17](#)

- description [1-12](#)

- LEDs [1-8](#)

- redundant, adding new [4-20](#)

- replacing nonredundant [4-19](#)

- replacing redundant [4-18](#)

## power system

- troubleshooting [C-3](#)

## precautions

- general [2-2](#)

## preventing

- electrostatic discharge damage [2-5](#)

## problem solving

- See* troubleshooting

## procedure

- AC power up [3-24](#)

- DC power up [3-25](#)

- method of [2-11](#)

## product

- overview [1-2](#)

## protection

- overcurrent [1-13](#)

- overtemperature [1-13](#)

- overvoltage [1-13](#)

**R**

## rack

- 2-post (telco) [2-7](#)

- 4-post (open) [2-7](#)

- enclosed (do not use) [2-7](#)

- rack, mid-mounting on 2-post [3-6](#)

- rack, mounting on 4-post [3-8](#)

## rack installation

- guidelines [2-7](#)

## rack-mount

- 2-post hardware kit [3-5](#)

- 4-post hardware kit [3-9](#)

## rack-mounting configuration

- guidelines [3-4](#)

- radio frequency interference. *See* RFI

## rear view

- ADE 2130 and 2140 Series appliance [1-6](#)

- redundant power supply, replacing [4-18](#)

## regulatory compliance

## safety

- information [1-14](#)

## removing

- ADE 1010 and 2120 Series appliance [3-26](#)

## RFI

- preventing effects of [A-4](#)

## RJ-45 pinout

- NIC [1-10](#)

## root password

- resetting [5-15](#)

## Root user password

- changing [5-2](#)

**S**

## safety

- guidelines [2-2](#)

## information

- regulatory compliance [1-14](#)

- overview [iii-xii](#)
- serial
  - console port [1-10](#)
  - pinouts [1-10](#)
- serial number
  - location [1-4, C-7](#)
- shipment
  - unpacking and checking [2-12](#)
- site
  - configuration [2-8](#)
  - environment [2-8](#)
    - maintenance factors [A-1](#)
  - log [2-16, D-1](#)
  - planning [2-6](#)
  - requirement, MOPs [2-11](#)
- Software
  - upgrading [6-2](#)
- Software download URL [6-2](#)

---

## T

- temperature
  - maintenance guidelines [A-3](#)
- temperature and humidity
  - guidelines [2-9](#)
- tools and equipment
  - required [2-15](#)
- troubleshooting
  - adapter cards [C-4](#)
  - cables [C-4](#)
  - connections [C-4](#)
  - cooling system [C-3](#)
  - front-panel and NIC LEDs [C-5](#)
  - power system [C-3](#)

---

## U

- unpacking and checking

- shipment [2-12](#)

---

## W

- warnings
  - safety overview [iii-xii](#)
- warranty [2-14](#)
- Web server
  - enabling [5-7](#)

---

## X

- XFP [4-4](#)
- XFP transceiver module [4-4, B-1](#)

