



Preface

This document contains information about installing and configuring Cisco Prime NAM (Prime NAM).

- [Related Documentation](#), page i
- [Obtaining Documentation and Submitting a Service Request](#), page ii

Related Documentation

The following section provides related references.

Table 1: Related Documentation

Related Topic	Document Title
Links to software downloads, product documentation, and technical documentation	<i>Cisco Network Analysis Module (Prime NAM) Software</i> at http://www.cisco.com/en/US/products/sw/cscowork/ps5401/tsd_products_support_series_home.html
Network modules	<i>Installing Cisco Network Modules in Cisco Access Routers</i> at http://www.cisco.com/en/US/docs/routers/access/interfaces/nm/hardware/installation/guide/InstNetM.html
Advanced Integration Modules (AIMs)	<i>Installing Advanced Integration Modules in Cisco 2600 Series, Cisco 3600 Series, and Cisco 3700 Series Routers</i> at http://www.cisco.com/en/US/docs/routers/access/2600/hardware/module/installation/guide/aims_ins.html
Service Modules	<i>Cisco SRE Service Module Configuration and Installation Guide</i> at http://www.cisco.com/c/en/us/td/docs/routers/access/interfaces/software/feature/guide/ism-sm-sre.html
Installing Cisco Integrated Services Routers Generation Two.	<i>Cisco 2900 and 3900 Series Hardware Installation</i> at http://www.cisco.com/en/US/partner/docs/routers/access/2900/hardware/installation/guide/Install_Connect.html

Related Topic	Document Title
Safety and compliance	<i>Cisco Network Modules and Interface Cards Regulatory Compliance and Safety Information</i> at http://www.cisco.com/en/US/docs/routers/access/interfaces/rcsi/IOHresi.html
Accessing the ROM monitor and issuing commands.	<i>ROM Monitor Download Procedures for Cisco 2691, Cisco, 3631, Cisco 3725, and Cisco 3745 Routers</i> at http://www.cisco.com/c/en/us/td/docs/routers/access/2600/hardware/notes/piperrom.html
Cisco IOS interface commands: complete command syntax, command mode, command history, defaults, usage guidelines, and examples	<i>Cisco IOS Interface and Hardware Component Command Reference</i> at http://www.cisco.com/c/en/us/support/ios-nx-os-software/ios-software-releases-12-4-t/tsd-products-support-series-home.html
IP unnumbered interfaces	<i>Understanding and Configuring the ip unnumbered Command</i> at http://www.cisco.com/c/en/us/support/docs/ip/hot-standby-router-protocol-hsrp/13786-20.html
Authentication, authorization, and accounting (AAA)	<i>Cisco IOS Security Configuration Guide</i> at http://www.cisco.com/c/en/us/support/ios-nx-os-software/ios-software-releases-12-4-t/products-installation-and-configuration-guides-list.html
Cisco IOS software	<i>Cisco IOS Software Releases 12.4 T</i> at http://www.cisco.com/c/en/us/support/ios-nx-os-software/ios-software-releases-12-4-t/tsd-products-support-series-home.html

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation*, at: <http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.