



A

accessing

- default password
 - enable **1-3**
 - login **1-3**

- from local host **1-3**

- from remote host **1-4**

accessing the CLI

- default password
 - enable **1-4**
 - login **1-4**

- DPE command modes **1-2**

- from local host **1-3**

- from remote host **1-4**

agent

See SNMP, SNMP agent commands

B

bundles

- clearing **7-1**
- current cache, bundling **7-2**
- viewing available outgoing **7-2**

C

caution, debugging **4-2, 6-7**

CLI access

- default password
 - login **1-4**
- from local host **1-3**
- from remote host **1-4**

CLI help

- full help function **2-6**

- partial help function **2-6**

cloning support

- disabling **4-9**

- enabling **4-8**

closing Telnet connection **2-5**

command modes

- login **1-2**

- prompts **1-2**

commands

- aaa authentication **2-3**

- clear bundles **7-1**

- clear cache **3-3**

- clear logs **6-2**

- debug dpe cache **6-3**

- debug dpe connection **6-4**

- debug dpe dpe-server **6-4**

- debug dpe event-manager **6-4**

- debug dpe exceptions **6-5**

- debug dpe framework **6-5**

- debug on **6-7**

- debug service packetcable netsnmp **4-3**

- debug service packetcable registration **4-3**

- debug service packetcable registration-detail **4-4**

- debug service packetcable snmp **4-4**

- debug service tftp ipv4 | ipv6 **6-7**

- disable **2-4**

- dpe docsis shared-secret **3-4**

- dpe port **3-6**

- dpe provisioning-group primary **3-7**

- dpe provisioning-group secondary **3-8**

- dpe rdu-server port **3-10**

- dpe rdu-server source ip **3-11**
 dpe rdu-server source port **3-12**
 dpe reload **3-12**
 dpe shared-secret **3-13**
 dpe start **3-13**
 dpe start | stop **3-13**
 dpe stop **3-13**
 enable **2-5**
 exit **2-5**
 help **2-6**
 interface ip pg-communication **3-14**
 interface ip provisioning **3-15**
 interface ip provisioning fqdn **3-17**
 log level **6-9**
 no debug all **6-9**
 no debug dpe cache **6-3**
 no debug dpe connection **6-4**
 no debug dpe dpe-server **6-4**
 no debug dpe event-manager **6-4**
 no debug dpe exceptions **6-5**
 no debug dpe framework **6-5**
 no debug dpe messaging **6-6**
 no debug service packetcable netsnmp **4-3**
 no debug service packetcable registration **4-3**
 no debug service packetcable registration-detail **4-4**
 no debug service packetcable snmp **4-4**
 no debug service tftp ipv4 | ipv6 **6-8**
 no dpe docsis shared-secret **3-5**
 no dpe provisioning-group primary **3-8**
 no dpe provisioning-group secondary **3-9**
 no dpe rdu-server source ip **3-11**
 no interface ip pg-communication **3-15**
 no interface ip provisioning **3-16**
 no interface ip provisioning fqdn **3-18**
 no service packetcable enable **4-5**
 no service packetcable registration encryption enable **4-6**
 no service packetcable snmp key-material **4-9**
 no service tftp ipv4 | ipv6 allow-read-access **3-19**
 no service tftp ipv4 | ipv6 blocksize **3-20, 3-21**
 no service tftp ipv4 | ipv6 verify-ip **3-23**
 no snmp-server community **5-3**
 no snmp-server contact **5-4**
 no snmp-server host **5-5**
 no snmp-server inform **5-6**
 no snmp-server location **5-7**
 no snmp-server udp-port **5-9**
 no tacacs-server host **2-14**
 password **2-7**
 service packetcable enable **4-5**
 service packetcable registration encryption enable **4-6**
 service packetcable registration kdc-service-key **4-7**
 service packetcable registration policy-privacy **4-7**
 service packetcable show snmp log **4-9**
 service packetcable snmp key-material **4-8**
 service packetcable snmp timeout **4-9**
 service tftp ipv4 | ipv6 allow-read-access **3-19**
 service tftp ipv4 | ipv6 blocksize **3-20, 3-21**
 service tftp ipv4 | ipv6 enabled **3-22**
 service tftp ipv4 | ipv6 verify-ip **3-23**
 service tod ipv4 | ipv6 enabled **3-23**
 show bundles **7-2**
 show clock **2-8**
 show commands **2-9**
 show device-config **3-24**
 show disk **2-10**
 show dpe **3-26**
 show dpe config **3-26**
 show hostname **2-10**
 show ip **2-10**
 show ip route **2-10**
 show log **6-10**
 show memory **2-10**
 show running-config **2-11**
 show tftp files **2-12**
 show version **2-12**
 snmp-server community **5-2**

- snmp-server contact **5-3**
 snmp-server host **5-4**
 snmp-server inform **5-5**
 snmp-server location **5-6**
 snmp-server reload **5-7**
 snmp-server start | stop **5-8**
 snmp-server udp-port **5-8**
 support bundle cache **7-2**
 tacacs-server host **2-13**
 tacacs-server retries **2-14**
 tacacs-server timeout **2-14**
 uptime **2-17**
- configuration commands
 clearing cache **3-3**
 clearing source interface for RDU **3-11**
 configuring port number **3-6**
 configuring RDU server for DPE **3-10**
 configuring source interface for RDU **3-11**
 configuring source port for RDU **3-12**
 interface
 clearing provisioning FQDN **3-18**
 disabling for Network Registrar **3-15**
 disabling provisioning **3-16**
 enabling for Network Registrar extensions **3-14**
 enabling provisioning **3-15**
 setting provisioning FQDN **3-17**
 provisioning group, primary
 clearing **3-8**
 configuring **3-7**
 provisioning group, secondary
 clearing **3-9**
 configuring **3-8**
 restarting DPE **3-12**
 shared secret
 configuring **3-13**
 DOCSIS, clearing **3-5**
 DOCSIS, configuring **3-4**
 starting DPE **3-13**
 stopping DPE **3-13**
- TFTP
 disabling **3-22**
 disabling blocksize for transfers **3-20, 3-21**
 enabling **3-22**
 enabling blocksize for transfers **3-20, 3-21**
 IP address request verification, disabling **3-23**
 IP address request verification, enabling **3-23**
 local file system read request, disabling **3-19**
 local file system read request, enabling **3-19**
 viewing device configuration **3-24**
 viewing DPE process **3-26**
 viewing DPE settings **3-26**
-
- D**
- debug
 before debug logging **4-2**
 caution **6-7**
 disabling
 cache debug logging **6-3**
 connection debug logging **6-4**
 event manager debug logging **6-4**
 exception debug logging **6-5**
 framework debug logging **6-5**
 message debug logging **6-6**
 server debug logging **6-4**
 TFTP transfers debug logging **6-8**
 enabling
 cache debug logging **6-3**
 connection debug logging **6-4**
 event manager debug logging **6-4**
 exception debug logging **6-5**
 framework debug logging **6-5**
 message debug logging **6-6**
 TFTP transfers debug logging **6-7**
 enabling logging **6-7**
 debug commands, PacketCable
 disabling
 netSNMP service **4-3**

secure registration service **4-3, 4-4**
SNMP **4-4**
enabling
 netSNMP service **4-3**
 registration detail category **4-4**
 secure registration service **4-3**
 SNMP **4-4**
default DPE password **1-3, 1-4**
deleting log files **6-2**
DHCP, configuring provisioning group **3-7**
DOCSIS shared secret
 clearing **3-5**
 setting **3-4**
DPE configuration commands
 See configuration commands
dpe docsis emic shared-secret **3-5**

E

enable mode
 See command modes
error message
DPE port **3-6**
 unlicensed DPE **2-1**
exiting Telnet connection **2-5**

F

File Transfer Protocol
 See FTP
FQDN
 interface, disabling provisioning **3-18**
 interface, setting provisioning **3-17**
FTP
 identifying available outgoing bundles **7-2**
full CLI help function **2-6**

G

generateSharedSecret.sh tool **4-8**

H

help
 displaying options
 all **2-6**
 partial **2-6**

I

informs, specifying SNMP notification **5-5, 5-6**
instance

PacketCable service **4-2**
TFTP service **3-19**
ToD service **3-23**

interface

 Network Registrar
 disabling for **3-15**
 enabling for **3-14**
 provisioning
 disabling **3-16**
 enabling **3-15**
 provisioning FQDN
 clearing **3-18**
 setting **3-17**

K

KDC
 security key
 KeyGen tool **4-7**
 setting **4-7**

L

licenses

- about **1-1**
- installing **1-1**
- obtaining **1-1**
- unlicensed DPE **1-1**

logging

See log system management commands

log level **6-9**

log system management commands

- deleting logs **6-2**
- disabling debugging
 - cache **6-3**
 - connection **6-4**
 - event manager **6-4**
 - exception **6-5**
 - framework **6-5**
 - messaging **6-6**
 - server **6-4**
 - TFTP transfers **6-8**
- enabling debugging **6-7**
 - cache **6-3**
 - connection **6-4**
 - event manager **6-4**
 - exception **6-5**
 - framework **6-5**
 - messaging **6-6**
 - server **6-4**
 - TFTP transfers **6-7**
- setting log level **6-9**
- viewing log entries **6-10**

M

managing and monitoring the system

See system commands

P

PacketCable configuration commands

- cloning support **4-8**
- debug disabling
 - netSNMP service **4-3**
 - registration detail category **4-4**
 - secure registration service **4-3**
 - SNMP **4-4**
- debug enabling
 - netSNMP service **4-3**
 - registration detail category **4-4**
 - secure registration service **4-3**
 - SNMP **4-4**
- debugging **4-2**
- disabling **4-5**
- enabling **4-5**
 - MTA configuration file encryption
 - disabling **4-6**
 - enabling **4-6**
 - RDU security key **4-9**
 - security key
 - KDC, setting **4-7**
 - RDU, disabling **4-9**
 - RDU, setting **4-8**
 - setting SNMP privacy policy **4-7**
 - setting SNMP timeout **4-9**
 - viewing SNMP log **4-9**
- partial CLI help function **2-6**
- policy privacy **4-7**
- provisioning group
 - primary
 - clearing **3-8**
 - configuring **3-7**
 - secondary
 - clearing **3-9**
 - configuring **3-8**
- provisioning interface
 - disabling **3-16**

enabling **3-15**

FQDN

 clearing **3-18**

 setting **3-17**

R

radius-server host **2-15**

RDU security key **4-8**

RDU server

 clearing source interface **3-11**

 clearing source port **3-12**

 configuring port **3-10**

 configuring source interface **3-11**

 configuring source port **3-12**

reloading DPE **3-12**

restarting DPE **3-12**

S

security key

 clearing **4-9**

 configuring **4-8**

 KDC **4-7**

service instance

 PacketCable **4-2**

 TFTP **3-19**

 ToD **3-23**

shared secret

 clearing DOCSIS **3-5**

 configuring **3-13**

 setting DOCSIS **3-4**

show commands

 view available outgoing bundles **7-2**

 viewing available commands **2-9**

 viewing device configuration cached at DPE **3-24**

 viewing DPE hostname **2-10**

 viewing DPE process **3-26**

viewing DPE settings **3-26**

viewing files in DPE cache **2-12**

viewing IP settings **2-10**

viewing log entries **6-10**

viewing process statistics **3-26**

viewing SNMP log **4-9**

viewing software version **2-12**

SNMP

 agent, starting **5-8**

 agent, stopping **5-8**

 agent process, reloading **5-7**

 community

 removing access **5-3**

 setting up access **5-2**

 host

 removing **5-5**

 specifying **5-4**

 notification

 inform, specifying **5-5**

 inform, specifying retry **5-5**

 trap, specifying **5-6**

 PacketCable

 log file, viewing **4-9**

 setting timeout **4-9**

 system contact

 clearing **5-4**

 specifying **5-3**

 system location

 clearing **5-7**

 specifying **5-6**

 UDP port, configuring **5-8**

SNMP agent commands

 changing listening UDP port **5-9**

 community access

 clearing **5-3**

 configuring **5-2**

 configuring listening UDP port **5-8**

 DPE location

 clearing **5-7**

configuring **5-6**

host

removing **5-5**

specifying **5-4**

notification

inform, specifying **5-5**

inform, specifying retry **5-5**

trap, specifying **5-6**

reloading process **5-7**

starting process **5-8**

stopping process **5-8**

system contact

clearing **5-4**

configuring **5-3**

starting and stopping CLI **1-4**

syslog **6-2**

system commands

authenticating

local user **2-3**

remote TACACS+ user **2-3**

changing system password **2-7**

disabling DPE **2-4**

enabling DPE **2-5**

exiting Telnet connection **2-5**

TACACS+ server

configuring **2-13**

removing **2-14**

setting number of retries **2-14, 2-16**

setting timeout **2-14**

viewing available commands **2-9**

viewing current configuration **2-11**

viewing help **2-6**

viewing hostname **2-10**

viewing IP settings **2-10**

viewing software version **2-12**

viewing system operating time **2-17**

viewing TFTP files in cache **2-12**

T

TACACS+

about **1-6**

configuring server **2-13**

removing a configured server **2-14**

setting number of retries **2-14, 2-16**

setting server timeout **2-14**

Telnet

authenticating users

local **2-3**

remote TACACS+ **2-3**

closing connection **2-5**

connecting to server **1-2**

TFTP

blocksize for transfers

disabling **3-20, 3-21**

enabling **3-20, 3-21**

read requests

disabling **3-19**

enabling **3-19**

verify IP address requests

disabling **3-23**

enabling **3-23**

viewing files in cache **2-12**

TFTP service

disabling **3-22**

enabling **3-22**

timeout, setting SNMP service **4-9**

ToD service

disabling **3-23**

enabling **3-23**

traps, specifying SNMP notifications **5-5, 5-6**

troubleshooting

bundles

cache **7-2**

clearing **7-1**

viewing outgoing **7-2**

U

UDP port, specifying [5-8](#)

unlicensed DPE [2-1](#)

V

version

 view current software [2-12](#)

voice technology

See PacketCable configuration commands