



Preface

The *Cisco Prime Cable Provisioning 6.1 DPE CLI Reference Guide*, describes the command-line interface (CLI) commands that this release of Cisco Prime Cable Provisioning, which is called Prime Cable Provisioning throughout the guide, supports on the Device Provisioning Engine (DPE).

Audience

This guide is written for those using the CLI of the Prime Cable Provisioning DPE.

Product Documentation



Note

We sometimes update the printed and electronic documentation after original publication. Therefore, you should also review the documentation on [Cisco.com](https://www.cisco.com) for any updates.

See the *Cisco Prime Cable Provisioning 6.1 Documentation Overview* for the list of Prime Cable Provisioning guides.

Related Documentation

See the *Cisco Prime Network Registrar 9.x Documentation Overview* for the list of Cisco Prime Network Registrar guides.

Obtain Documentation and Submit a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation*.

To receive new and revised Cisco technical content directly to your desktop, you can subscribe to the [What's New in Cisco Product Documentation RSS feed](#). The RSS feeds are a free service.

