



---

## Numerics

3GPP inventory retrieval [28-117](#)

6rd

add 6rd forwarding (command) [21-5](#)

tunnels, viewing properties [18-47](#)

---

## A

A10/A11 configurations (HSGW) [28-66](#)

AAA [16-9](#)

APN and [28-14](#)

commands. See AAA commands

diameter protocol [16-1](#)

dynamic protocol authorization profile [16-3](#)

foreign agent and [28-82, 28-84](#)

groups

charging configuration [16-10](#)

charging trigger configuration [16-11](#)

configuration [16-4](#)

diameter configuration [16-6](#)

profile [16-2](#)

RADIUS accounting configuration [16-7](#)

RADIUS authentication configuration [16-9](#)

RADIUS configuration [16-7](#)

home agent and [28-76](#)

HSGW and [28-62](#)

LAC configuration and [28-58](#)

overview [16-1](#)

PDSN and [28-100](#)

RADIUS global configuration [16-3](#)

RADIUS protocol [16-1](#)

AAA commands

create AAA group [28-146](#)

create diameter accounting server [16-12](#)

create diameter authentication server [16-12](#)

delete AAA group [16-12](#)

modify AAA group [16-12](#)

access gateway

badge [1-23](#)

viewing properties [19-14](#)

access list commands

create route access lists [28-146](#)

show route access lists [28-146](#)

See also route maps

acknowledging tickets [12-11, 12-16](#)

ACS

bandwidth policies [28-143](#)

charging action

rule base, viewing [28-141](#)

viewing properties [28-136](#)

commands. See ACS commands

content filtering

overview [28-130](#)

viewing categories [28-133](#)

content services steering [28-129](#)

create active charging service (command) [28-146](#)

credit control properties, viewing [28-133](#)

fair usage properties [28-143](#)

overview [28-129](#)

protocol analyzer [28-129](#)

rule base

for charging action, viewing [28-141](#)

overview [28-130](#)

rule definition groups

commands. See ACS commands

- viewing [28-140](#)
- rule definitions
  - overview [28-129](#)
  - viewing [28-139](#)
- viewing [28-131](#)
- ACS commands
  - create access ruledef [28-144](#)
  - create charging action [28-144](#)
  - create group of ruledefs [28-144](#)
  - create host pool [28-144](#)
  - create rulebase [28-144](#)
  - create ruledef [28-144](#)
  - delete access ruledef [28-144](#)
  - delete active charging service [28-144](#)
  - delete charging action [28-144](#)
  - delete host pool [28-144](#)
  - modify active charging service [28-144](#)
  - modify charging action [28-144](#)
  - modify host pool [28-144](#)
  - rule definition groups
    - delete group of ruledefs [28-141](#)
    - show group of ruledefs [28-141](#)
  - show access ruledef [28-144](#)
  - show charging action [28-144](#)
- activate-flow (registry setting) [11-8](#)
- Active Charging Service. See ACS
- ADSL2+
  - device inventory, viewing [31-3](#)
  - DSL cable bonding group [31-4](#)
  - n-to-one access profile [31-7](#)
  - one-to-one access profile [31-7, 31-9](#)
  - overview [31-1](#)
  - TLS access profile [31-7, 31-10](#)
  - viewing properties [31-1](#)
  - XDSL traffic descriptors [31-1](#)
- affected parties [11-10](#)
- affected parties (tickets) [12-14](#)
- Agent Not Loaded (VNE communication state) [12-19](#)
- Agent Unreachable, VNE communication state [12-19](#)
- aggregations
  - Chinese characters and [4-7](#)
  - creating [4-7, 7-16, 7-35](#)
- alarms [11-9](#)
  - customizing [4-15](#)
  - disabling on a port [8-15](#)
  - opening new [11-10](#)
  - updating [11-10](#)
- All IP Interfaces Down alarm [3-34](#)
- APN
  - commands. See APN commands
  - overview [28-9](#)
  - profiles [28-123, 28-127](#)
  - remap tables [28-121](#)
  - view properties [28-10, 28-14](#)
- APN commands
  - create APN [28-146](#)
  - create QoS to DSCP mapping [28-19](#)
  - create virtual APN [28-19](#)
  - delete APN [28-19](#)
  - modify APN [28-19](#)
  - show APN [28-146](#)
- applying overlays
  - VPLS instance [19-73](#)
  - VPN [18-25](#)
- APS commands
  - create APS [27-58](#)
  - modify APS [27-58](#)
- archiving
  - tickets [12-25](#)
    - auto-archiving [12-25](#)
    - manually [12-26](#)
- archiving tickets [13-12](#)
- ARP table [18-35](#)
- associated VLANs
  - adding [19-49](#)
  - tag manipulations [19-49](#)
  - viewing
    - mapping properties [19-51](#)

- service links [19-51](#)
  - working with [19-48](#)
- ATM cross-connects
  - in logical and physical inventory [27-6](#)
  - overview [27-6](#)
  - viewing [27-6](#)
- audio options, customizing [4-15](#)
- Audit tab (events) [13-4, 13-17](#)
- auto-cleared (event registry setting) [11-13](#)
- AVM 100 (Event Collector) [11-1](#)
- AVM 25 [11-1](#)

## B

- background images for maps [4-12](#)
- badges [1-21](#)
  - access gateway [1-23](#)
  - blocking [1-23](#)
  - clock service [1-24](#)
  - lock [18-8, 1-24](#)
  - management states [1-21](#)
  - multiple links [1-24](#)
  - reconciliation [19-44, 1-24](#)
  - redundancy service [1-24](#)
  - REP primary [1-23](#)
  - REP primary blocking [1-23](#)
  - STP root [1-24](#)
  - technology related [1-23](#)
  - VNE communication states [1-22](#)
  - VNE investigation states [1-22](#)
- BBA (Broadband Access) groups [26-3](#)
- BFD
  - commands. See MPLS-TP commands
  - viewing BFD session properties [18-48](#)
  - viewing MPLS-TP BFD session properties [18-50](#)
- BGP
  - commands
    - create BGP address family [18-61](#)
    - create BGP neighbor [18-61](#)

- create BGP router [18-61](#)
  - delete BGP address family [18-61](#)
  - delete BGP neighbor [18-61](#)
  - delete BGP router [18-61](#)
  - modify BGP address family [18-61](#)
  - modify BGP neighbor [18-61](#)
  - modify BGP router [18-61](#)
  - viewing inventory details [18-46](#)
- BGP alarms
  - BGP Link Down [3-20](#)
  - BGP Neighbor Loss [3-14, 3-16](#)
- BGP Neighbor Loss alarm [3-49](#)
- Bidirectional Forwarding Detection. See BFD
- blocking badge [1-23](#)
- BNG
  - Broadband Access Groups (BBG) [26-3](#)
    - configuration templates [26-8](#)
      - IP subscriber [26-8](#)
      - overview [26-8](#)
      - PPP [26-10](#)
      - service [26-8](#)
      - viewing [26-8](#)
    - DHCP service profile [26-6](#)
    - overview [22-1, 26-1](#)
    - subscriber access points
      - diagnosing [26-5](#)
      - viewing [26-4](#)
- bridges
  - unassociated [19-67](#)
  - viewing properties for VLANs [19-64](#)
- Broadband Access (BBA) groups [26-3](#)
- Broadband Network Gateway. See BNG
- Broken LSP Discovered alarm [3-51](#)
- bundle ethernet, configuring (configure bundle ethernet command) [18-62](#)
- business elements
  - icons [1-4](#)
  - user roles required [2-9](#)
- business tags

- attaching and detaching [4-9](#)
- Chinese characters [4-9](#)
- Chinese characters and [4-9](#)
- user roles required [2-9](#)

#### buttons (GUI)

- in Prime Network Events [1-20](#)
- in Prime Network Vision [1-16](#)
  - for filtering links [1-19](#)
  - in tables [7-8, 1-19](#)
- in Report Manager [1-21](#)
- in tickets window [1-20](#)

## C

#### cable

- CMTS [30-1](#)
- DOCSIS [30-1](#)
- DSL [30-1](#)
- fiber node [30-9](#)
- MAC domain [30-5](#)
- narrowband channels [30-7](#)
- overview [30-1](#)
- QAM domain [30-4](#)
- wideband channels [30-7](#)

#### Carrier Ethernet services

- types [19-1](#)

#### Carrier Grade NAT

- commands
  - add 6rd forwarding [21-5](#)
  - add CGNAT or 6rd forwarding [21-5](#)
  - add NAT 64 forwarding [21-5](#)
  - add static port forwarding [21-5](#)
  - create CGNAT instance [21-5](#)
  - show pool utilization [21-4, 21-5](#)
  - static port forwarding [21-5](#)
- viewing properties
  - logical inventory [21-2](#)
  - physical inventory [21-4](#)

#### Carrier Supporting Carrier (CSC) path traces [14-22](#)

#### CCM

- Compliance Audit. See [Compliance Audit](#)
- Configuration Audit. See [Configuration Audit](#)
- device groups. See [device groups \(CCM\)](#)
- device support [9-1](#)
- global settings [3-6](#)
- jobs [9-67](#)
- overview [9-1](#)
- setup tasks
  - Configuration Management [3-4](#)
  - device groups [3-17](#)
  - devices [3-4](#)
  - Prime Network [3-2](#)
- user roles [2-7](#)

#### CDP. See [Cisco Discovery Protocol](#)

#### CESoPSN, viewing properties [27-3](#)

#### CFM

- commands. See [CFM commands](#)
- description
  - maintenance domains [20-2](#)
  - maintenance endpoints (MEPs) [20-2](#)
  - maintenance intermediate points (MIPs) [20-2](#)
- overview [20-2](#)
- viewing properties for
  - maintenance associations [20-6](#)
  - maintenance domains [20-3, 20-5](#)
  - MEPs [20-6](#)
  - MIPs [20-4](#)
  - remote MEPs [20-8](#)

#### CFM commands

- configure CFM continuity check [20-16](#)
- configure CFM global parameters [20-16](#)
- configure CFM maintenance domain [20-16](#)
- configure CFM MEP [20-16](#)
- configure CFM MIP [20-16](#)
- configure CFM service ID [20-16](#)
- enable CFM continuity check [20-16](#)
- enable CFM SNMP server traps [20-16](#)

#### channelization and TDM. See [TDM and channelization](#)

- chassis, devices with multi [8-4](#)
- Chinese characters
  - aggregations and [4-7](#)
  - business tags and [4-9](#)
- Chinese characters in business tags [4-9](#)
- Circuit Emulation Services over PSN. See CESoPSN
- Cisco Discovery Protocol (CDP) properties
  - in logical inventory [19-2](#)
  - in physical inventory [19-3](#)
  - viewing [19-2](#)
- clearing tickets [12-16](#), [12-24](#)
  - auto-clearing [12-25](#)
  - manually [12-24](#)
- clock
  - commands (MToP)
    - create ESMC global [27-55](#)
    - create ESMC interface [27-55](#)
    - create PTP clock global [27-55](#)
    - create PTP clock port [27-55](#)
    - create PTP interface [27-55](#)
    - create syncE global [27-55](#)
    - create syncE interface [27-55](#)
    - delete PTP clock global [27-55](#)
    - delete PTP clock port [27-55](#)
    - disable ESMC interface [27-55](#)
    - modify ESMC global [27-55](#)
    - modify ESMC interface [27-55](#)
    - modify PTP clock global [27-55](#)
    - modify PTP clock port [27-55](#)
    - modify PTP interfaces [27-55](#)
    - modify syncE global [27-55](#)
    - modify syncE interface [27-55](#)
    - show PTP clock global [27-55](#)
  - recovery, pseudowire properties [27-44](#)
  - service
    - badge [1-24](#)
    - properties [27-34](#)
- cloud VNE
  - Cloud Problem alarm [3-47](#)
  - fault correlation [3-46](#)
- CM. See Configuration Management
- CMTS [30-1](#)
- commands
  - AAA
    - create diameter accounting service [16-12](#)
    - create diameter authentication server [16-12](#)
    - delete AAA group [16-12](#)
    - modify AAA group [16-12](#)
  - ACS. See ACS commands
  - cable
    - DEPI and L2TP. See DEPI and L2TP commands
    - interfaces. See interfaces commands
    - ports. See ports commands
    - QAM. See QAM configurations
    - show downstream [30-10](#)
    - show upstream [30-10](#)
  - Carrier Ethernet services
    - IS-IS. See IS-IS commands
    - mLACP. See mLACP commands
    - pseudowire. See pseudowire commands
    - REP. See REP commands
    - VLANs. See VLAN commands
  - data center. See data center commands
  - delete context [28-146](#)
  - device setup
    - DNS. See DNS commands
    - interfaces. See interfaces commands
    - NTP. See NTP commands
    - ports. See ports commands
    - RADIUS. See RADIUS commands
    - SNMP configuration. See SNMP configuration
    - SNMP traps. See SNMP traps
    - TACACS. See TACACS commands
  - DHCP. See DHCP commands
  - DWDM. See DWDM commands
  - Ethernet OAM
    - CFM. See CFM commands
    - E-LMI. See E-LMI commands

- L-OAM. See L-OAM commands
- GPRS/UMTS
  - APN. See APN commands
  - eGTP. See eGTP commands
  - GGSN. See GGSN commands
  - GTPP. See GTPP commands
  - GTPU. See GTPU commands
- IP pool
  - delete IP pool [15-3](#)
  - modify IP pool [15-3](#)
- licenses
  - modify licenses [28-146](#)
  - show licenses [28-146](#)
- LTE
  - ePDG. See ePDG commands
  - foreign agent. See foreign agent commands
  - HSGW. See HSGW commands
  - MME. See MME commands
  - PDSN. See PDSN commands
  - P-GW. See P-GW commands
  - SAE-GW. See SAE-GW commands
  - S-GW. See S-GW commands
- modify license [28-146](#)
- MPLS services
  - BGP. See BGP commands
  - bundle ethernet. See bundle ethernet commands
  - IP interface. See IP interface (MPLS) commands
  - MPLS. See MPLS commands
  - MPLS-TE. See MPLS-TE commands
  - MPLS-TP commands. See MPLS-TP commands
  - RSVP. See RSVP commands
  - VRF. See VRF commands
  - VRRP. See VRRP commands
- MToP services
  - APS. See APS
  - clock. See clock commands (MToP)
  - SONET. See SONET commands
  - TDM and channelization. See TDM and channelization commands
- PDP. See PDP commands
- right-click [7-32](#)
- route maps. See route maps commands
- SBC. See SBC commands
- subscriber. See subscriber commands
- VLAN commands. See VLAN commands
- vPC (data center). See data center commands
- Y.1731. See Y.1731 commands
- Y.1731 IPSLA. See Y.1731 IPSLA commands
- Compliance Audit
  - audit, run [9-56](#)
  - compliance policy [9-40](#)
  - Configuration Audit and [9-39, 9-61](#)
  - overview [9-39, 9-61](#)
  - policy profile [9-48](#)
  - results, view [9-57](#)
  - violations [9-57](#)
  - See also CCM
- compute server [29-35](#)
  - support [29-31](#)
- Configuration Audit [9-61](#)
  - Compliance Audit and [9-39, 9-61](#)
  - jobs, manage [9-64](#)
  - policies
    - create [9-63](#)
    - manage [9-63](#)
  - policy example [9-49, 9-62](#)
  - results, view [9-64](#)
  - schedule [9-64](#)
  - user roles required [2-7](#)
  - See also CCM
- Configuration Management
  - archive [9-26](#)
  - backing up files to archive [9-32](#)
  - change logs [9-37](#)
  - cleaning up archive [9-37](#)
  - comparing files [9-28](#)
  - device support [9-1](#)
  - exported files per device families [9-32](#)

- exporting files [9-30](#)
- global settings [3-6](#)
- labelling files [9-28](#)
- overview [9-25](#)
- restoring file from archive to devices [9-34](#)
- setup tasks [3-4](#)
- synchronizing files [9-31](#)
- user roles required [2-7](#)
- See also CCM
- Connecting, VNE communication state [12-19](#)
- Connectivity Fault Management. See CFM
- Control Channel (CC), viewing information for pseudowire endpoint [19-87](#)
- correlate (event registry setting) [11-8](#)
- correlation [11-8](#)
  - disabled (illustration) [11-6](#)
  - enabled (illustration) [11-5](#)
  - local [11-8](#)
  - network [11-8](#)
  - overview [11-4](#)
  - registry settings for events [11-8](#)
  - tickets [12-15](#)
- correlation scenarios
  - ATM examples [3-38](#)
  - BGP Link Down [3-20](#)
  - BGP Neighbor Loss [3-14](#)
  - Device Unreachable event [3-3, 3-6, 3-9](#)
  - EFP Down [3-29](#)
  - Ethernet, Fast Ethernet, Giga Ethernet examples [3-38](#)
  - HSRP alarms [3-31](#)
  - HSRP example [3-31](#)
  - IP Interface Failure [3-32](#)
    - All IP Interfaces Down alarm [3-34](#)
    - examples [3-34](#)
    - IP Interface Status Down alarm [3-32](#)
  - multiroute configuration setup [3-11](#)
  - Q-in-Q Subinterface Down [3-43](#)
  - VSI Down [3-45](#)
- CPU usage graph, opening [12-23](#)

- crypto template (ePDG) [28-92](#)
- CSR 1000v [29-27](#)
- Currently Unsynchronized, VNE investigation state [12-20](#)

---

## D

- database
  - archiving [11-12, 11-13, 11-14](#)
  - purging [11-12, 11-13, 11-14](#)
- data center
  - commands. See data center commands
  - FabricPath. See FabricPath
  - overview [29-1](#)
  - virtualization. See virtualization
  - vPC. See vPC
- data center commands
  - vPC
    - show port channel capacity [29-1](#)
    - show vPC [29-1](#)
    - show vPC consistency parameter [29-1](#)
- Data Loss alarm [3-48](#)
- Defined Not Started, VNE investigation state [12-20](#)
- Dense Wavelength Division Multiplexing. See DWDM
- DEPI and L2TP commands [30-12](#)
  - create DEPI class [30-12](#)
  - create DEPI tunnel [30-12](#)
  - create L2TP class [30-12](#)
  - delete DEPI class [30-12](#)
  - delete DEPI tunnel [30-12](#)
  - delete L2TP class [30-12](#)
  - modify DEPI tunnel [30-12](#)
  - modify L2TP class [30-12](#)
  - show cable DEPI session [30-12](#)
  - show DEPI session [30-12](#)
  - show DEPI tunnel [30-12](#)
  - show L2TP class [30-12](#)
- device configuration files
  - See also Configuration Management
- device groups (CCM)

- setup tasks [3-17](#)
  - user roles required [2-7](#)
  - See also CCM
- device image files. See Image Management
- Device Partially Reachable, VNE communication state [12-19](#)
- device reachability
  - devices [12-18](#)
  - troubleshooting [12-18](#)
- Device Reachable, VNE communication state [12-19](#)
- devices
  - affected by a ticket [12-16](#)
  - colors and badges [12-8](#)
  - CPU usage [12-23](#)
  - CPU usage, checking [12-23](#)
  - icons [1-2](#)
  - memory usage [12-23](#)
  - multi-chassis [8-4](#)
  - reachability problems. See troubleshooting device reachability
  - satellite [8-7, 9-22](#)
  - software image files. See Image Management
  - status of VNE model [12-18](#)
  - traceroute from device (command) [12-23](#)
  - viewing
    - operating system information [8-20](#)
    - properties [8-2](#)
- device support for CCM [9-1](#)
- Device Unreachable, VNE communication state [12-19](#)
- Device Unreachable event [3-3, 3-6, 3-9](#)
- DHCP
  - commands
    - create DHCP [28-146](#)
    - delete DHCP [28-146](#)
    - modify DHCP [28-146](#)
    - show DHCP [28-146](#)
    - show DHCP binding (subscriber access points) [26-5](#)
  - service profile [26-6](#)
- Discovering, VNE investigation state [12-20](#)
- discovery
  - EFD [19-39](#)
  - EVC multiplex services [19-98](#)
  - MPLS-TP tunnels [18-7](#)
  - VLAN [19-39](#)
- DNS commands
  - add DNS server [8-25](#)
  - add DNS server command [8-25](#)
  - create proxy DNS [28-146](#)
  - delete proxy DNS [28-146](#)
  - modify proxy DNS [28-146](#)
  - remove DNS server [8-25](#)
  - remove DNS server command [8-25](#)
- downstream rates, show (cable) [30-10](#)
- DSL
  - cable technologies and [30-1](#)
- duplication count
  - non-ticket events [12-13, 13-13](#)
  - tickets [12-13](#)
- DWDM
  - commands. See DWDM commands
  - viewing
    - alert and alarm counters [17-8](#)
    - G.709 properties [17-4](#)
    - ODU alarm properties [17-7](#)
    - ODU alert properties [17-8](#)
    - OTU alarm properties [17-7](#)
    - OTU alert properties [17-8](#)
    - performance monitoring configuration [17-10](#)
    - properties [17-2](#)
  - DWDM commands
    - clear counters [17-14](#)
    - configure channel [17-14](#)
    - configure FEC mode [17-14](#)
    - configure G.709 ODU [17-14](#)
    - configure G.709 OTU [17-14](#)
    - configure G.709 TTI [17-14](#)
    - configure G.709 wrapper [17-14](#)
    - configure laser state [17-14](#)



- configure loopback [17-14](#)
- configure PM FEC data [17-14](#)
- configure PM optics data [17-14](#)
- configure PM OTN data [17-14](#)
- configure Rx LOS threshold [17-14](#)
- configure transmit power [17-14](#)
- show controller data [17-14](#)
- show device log [17-14](#)
- show IM trace details [17-14](#)
- show PM history data [17-14](#)
- show RTPM counters [17-14](#)
- show RTPM threshold [17-14](#)
- show wavelength map [17-14](#)

Dynamic Host Configuration Protocol. See DHCP

## E

EAP profile (ePDG) [28-95](#)

EFD discovery [19-39](#)

EFP

- cross-connects [19-69](#)
  - adding [19-69](#)
  - viewing properties [19-70](#)
- overview [19-41](#)
- severity and ticket badges [19-32](#)

EFP Down

- examples [3-29](#)

egress adjacents, VRF [18-32](#)

eGTP

- commands
  - create eGTP [28-146](#)
  - delete eGTP [28-27](#)
  - modify eGTP [28-27](#)
  - show eGTP [28-146](#)

- overview [28-26](#)

- view properties [28-26](#)

E-LMI. See Ethernet LMI

ePDG

- commands

- create ePDG service [28-100](#)

- delete ePDG service [28-100](#)

- modify ePDG service [28-100](#)

- show ePDG service [28-100](#)

IPSec and [28-91](#)

overview [28-90](#)

security [28-92](#)

- crypto template [28-92](#)

- EAP profile [28-95](#)

- transform set details [28-96](#)

- viewing configuration details [28-98](#)

ESM configuration (MME) [28-159](#)

Ethernet flow domains

- renaming [19-36](#)

- viewing properties of [19-36](#)

Ethernet flow point (EFP), viewing properties [19-27](#)

Ethernet LAGs, viewing [19-17, 19-18](#)

Ethernet links, and configured LSPs [18-13](#)

Ethernet LMI

- commands. See Ethernet LMI commands

- Device EVC Properties window [20-10](#)

- enable [20-16, 20-18](#)

- EVC, configure [20-16, 20-18](#)

- overview [20-8](#)

- service instance, configure [20-16, 20-18](#)

- UNI, configure [20-16, 20-18](#)

- viewing properties

- for device EVCs [20-9](#)

- for physical interfaces [20-9](#)

- for UNI interfaces [20-11](#)

- in logical inventory [20-9](#)

Ethernet LMI commands

- configure multipoint to multipoint or point to point EVC [20-18](#)

- configure service instance VLAN ID on interface [20-18](#)

- configure UNI in an interface [20-18](#)

- enable global E-LMI [20-18](#)

- enable on interface [20-18](#)

Ethernet Local Management Interface. See Ethernet LMI

## Ethernet OAM

overview [20-1, 20-2](#)

Ethernet Operations, Administration, and Maintenance.  
See Ethernet OAM

## Ethernet services

adding overlays [19-100](#)

adding to maps [19-98](#)

viewing properties [19-101](#)

working with [19-98](#)

## EVC

### E-LMI

configuring [20-18](#)

viewing [20-10](#)

E-LMI, configuring [20-16](#)

L-OAM, configuring [20-18](#)

### services

multiplex [19-98](#)

shared switching entities [19-33](#)

viewing properties [19-33](#)

Event Collector [11-1, 11-4](#)

event handling [11-4](#)

Event Notification Service [11-4](#)

## events

active-flow (registry setting) [11-14](#)

alarms and [11-9](#)

archiving [11-12, 11-13, 11-14](#)

auto-cleared (registry setting) [11-13, 11-14](#)

categories [13-4](#)

correlate (registry setting) [11-14](#)

correlation [11-8](#)

correlation (registry setting) [11-8](#)

customizing GUI [4-15](#)

defined [13-1](#)

### filters

saving [13-7](#)

sharing (public) [13-7](#)

turning on and off [13-10](#)

filters, creating [13-6](#)

flapping (registry setting) [11-14](#)

flow through Prime Network [11-1, 11-4](#)

is-correlation-allowed (registry setting) [11-14](#)

is-ticketable (registry setting) [11-10, 11-14](#)

purging [11-12, 11-13, 11-14](#)

refreshing information [13-19](#)

severities [12-8, 13-5](#)

severity (registry setting) [11-6, 11-14](#)

standard [11-6](#)

standard events [13-18](#)

tabs in Prime Network Events [13-4](#)

upgraded [11-6](#)

viewing, ways to [13-2](#)

weight (registry setting) [11-14](#)

with correlation (illustration) [11-5](#)

without correlation (illustration) [11-6](#)

Events client, logging in [13-1](#)

event sequences. See alarms

exporting event data [13-20](#)

---

## F

### FabricPath

overview [29-5](#)

viewing configuration [29-5](#)

Fault Database vs. Event Archive Statistics report [5-6](#)

Fault Manager [11-1](#)

### faults

supported scenarios [3-47](#)

fiber node (cable) [30-9](#)

filters, tickets [12-6](#)

filters, using (on tables) [7-7](#)

filters. See events filters, tickets filters

### flapping events

events

flapping (registry setting) [11-7](#)

### foreign agent

AAA and [28-82, 28-84](#)

advertisement configuration [28-84](#)

- authentication [28-84](#)
- commands. See foreign agent commands
- GRE configuration [28-85](#)
- home agent details for [28-86](#)
- overview [28-79](#)
- proxy mobile [28-88](#)
- registration revocation [28-88](#)
- viewing [28-80](#)

foreign agent commands

- create FA [28-89](#)
- create IKE [28-89](#)
- create SPI [28-89](#)
- delete FA [28-89](#)
- delete IKE [28-89](#)
- delete SPI [28-89](#)
- modify authentication [28-89](#)
- modify FA [28-89](#)
- modify GRE [28-89](#)
- modify HA configuration [28-89](#)
- modify IKE [28-89](#)
- modify proxy mobile IP [28-89](#)
- modify registration revocation [28-89](#)
- modify SPI [28-89](#)
- show FA [28-89](#)

## G

### GGSN

#### commands

- create GGSN [28-146](#)
- create PLMN identifier [28-7](#)
- create SGSN [28-7](#)
- delete GGSN [28-7](#)
- modify GGSN [28-7](#)

#### overview [28-3](#)

view properties [28-4, 28-5](#)

GMM properties (SGSN) [28-32](#)

### GPRS/UMTS network

GGSN. See GGSN

### GPRS/UMTS networks

APN. See APN

eGTP. See eGTP

GTPP. See GTPP

GTPU. See GTPU

overview [28-1](#)

SGSN. See SGSN

technologies [28-3](#)

### GRE

foreign agent configuration (LTE networks) [28-85](#)

GRE Tunnel Down alarm [3-40](#)

GRE Tunnel Down alarm, correlation example [3-40, 3-41](#)

GRE Tunnel Up alarm [3-40](#)

home agent and [28-77](#)

HSGW [28-67](#)

PDSN [28-104](#)

### groups

RADIUS keepalive and detect dead server [16-9](#)

### GTPP

create GTPP (command) [28-146](#)

overview [28-20](#)

view properties [28-20, 28-21](#)

### GTPU

#### commands

- create GTPU [28-146](#)
- create GTPU bind IP address [28-9](#)
- delete GTPU [28-9](#)
- delete GTPU bind IP address [28-9](#)
- modify GTPU [28-9](#)
- modify GTPU bind IP address [28-9](#)

overview [28-8](#)

view properties [28-8](#)

### GTPP

#### commands

- create CGF [28-25](#)
- create storage server [28-25](#)
- delete CGF [28-25](#)
- delete GTPP [28-25](#)

- delete storage server [28-25](#)
- modify CGF [28-25](#)
- modify GTPP [28-25](#)
- modify storage server [28-25](#)
- show CGF [28-25](#)

---

## H

HeNB [28-46](#)

HNB [28-38](#)

home agent

- AAA and [28-76](#)
- commands. See home agent commands
- configuration, viewing [28-74](#)
- details for foreign agent [28-86](#)
- GRE and [28-77](#)
- overview [28-73](#)
- policy configuration [28-78](#)
- registration revocation [28-78](#)
- service details [28-74](#)
- topology [28-73](#)

home agent commands

- create HA Service [28-146](#)
- create HA SPI list [28-146](#)
- delete HA service [28-146](#)
- delete HA SPI list [28-146](#)
- modify HA service [28-146](#)
- show HA service [28-146](#)
- show HA SPI [28-146](#)

home evolved Node B [28-46](#)

home node B [28-38](#)

HRPD, create QCI-QOS mapping (command) [28-146](#)

HSGW

- A10/A11 configurations [28-66](#)
- AAA and [28-62](#)
- basic features [28-62](#)
- commands. See HSGW commands
- GRE parameters [28-67](#)
- IP source violation [28-68](#)

MAG [28-70](#)

overview [28-61](#)

QCI mapping details (profile) [28-71](#)

topology [28-62](#)

viewing [28-63](#)

HSGW commands

- create HSGW [28-69](#)
- create overload policy [28-69](#)
- create PLMN entries [28-69](#)
- create QCI-QOS mapping [28-146](#)
- create SPI [28-69](#)
- delete HSGW [28-69](#)
- delete overload policy [28-69](#)
- delete PLMN entries [28-69](#)
- delete SPI [28-69](#)

MAG commands

- create MAG [28-72](#)
- create profile [28-72](#)
- create profile ID QCI mapping [28-72](#)
- delete MAG [28-72](#)
- delete profile [28-72](#)
- delete profile ID QCI mapping [28-72](#)
- modify MAG [28-72](#)
- modify profile [28-72](#)
- show MAG [28-72](#)
- modify A10 A11 interfaces [28-69](#)
- modify GRE [28-69](#)
- modify HSGW [28-69](#)
- modify IP source violation [28-69](#)
- modify overload policy [28-69](#)
- modify PLMN entries [28-69](#)
- modify SPI [28-69](#)
- show HSGW [28-69](#)

HSRP [19-13](#)

HSRP alarm examples [3-31](#)

HSRP alarm scenarios [3-31](#)

H-VPLS

working with [19-71](#)

hypervisor [29-35](#)

## I

- icons
  - badges [12-8, 1-21](#)
  - business elements [1-4](#)
  - devices [12-8](#)
  - links [1-11, 1-12](#)
  - logical inventory [1-7](#)
  - management states [1-21](#)
  - maps [18-21](#)
  - network elements [12-8, 1-2](#)
  - physical inventory [1-11](#)
  - Prime Network Events [1-14](#)
  - Prime Network Vision [1-1](#)
  - reconciliation [1-24](#)
  - reference [1-1](#)
  - REP [19-57](#)
  - severities [12-8, 1-14](#)
  - VLAN domains [19-57](#)
  - VLAN overlays [19-57](#)
  - See also buttons
- Image Management
  - add images to repository [9-4](#)
  - Cisco IOS XR [9-18](#)
    - activate and deactivate packages [9-20](#)
    - add packages [9-19](#)
    - commit packages [9-22](#)
    - considerations [9-18](#)
    - delete packages [9-20](#)
    - roll back packages [9-23](#)
    - satellites [9-21](#)
  - clean up repository [9-25](#)
  - clear flash (distributing images) [9-13](#)
  - delete packages from repository [9-25](#)
  - device support [9-1](#)
  - distributing images to devices [9-8](#)
  - global settings [3-14](#)
  - repository [9-4](#)
  - setup tasks [3-13](#)
  - upgrade analysis and [9-8](#)
  - user roles required [2-7](#)
  - See also CCM
- IMA group, viewing properties [27-13](#)
- impact analysis [11-10](#)
  - links and [7-27](#)
- impact analysis (affected parties) [12-14](#)
- Initializing, VNE investigation state [12-20](#)
- Inter-Chassis Communication Protocol (ICCP), viewing properties [19-23](#)
- interfaces
  - commands
    - add interface configuration
    - add loopback interface [8-24](#)
    - configure secondary IP address (MPLS) [18-55](#)
    - create interface (MPLS) [18-55](#)
    - create IP interface [30-10](#)
    - delete interface (MPLS) [18-55](#)
    - delete IP interfaces [30-10](#)
    - delete secondary IP address (MPLS) [18-55](#)
    - disable interfaces
    - enable interfaces
    - modify interface (MPLS) [18-55](#)
    - modify IP interfaces [30-10](#)
    - remove interface configuration [8-24](#)
    - show IP interface brief [8-17](#)
    - show IP route [8-17](#)
    - update interface configuration [8-24](#)
  - viewing in physical inventory [8-2](#)
- inventory window
  - logical inventory [8-16](#)
  - overview [8-2](#)
  - physical inventory [8-2](#)
  - Ports tab [8-10](#)
- IP interface (MPLS) commands
  - configure secondary IP address [18-55](#)
  - create interface [18-55](#)
  - delete interface [18-55](#)
  - delete secondary IP address [18-55](#)

- modify interface [18-55](#)
    - See also interfaces commands
  - IP Interface Failure
    - examples [3-34](#)
    - scenario [3-32](#)
  - IP Interface Status Down alarm, scenario [3-32](#)
  - IPoDWDM. See DWDM
  - IP pools [15-1](#)
    - commands
      - create IP pool [28-146](#)
      - delete IP pool [15-3](#)
      - modify IP pool [15-3](#)
      - show IP pool [28-146](#)
    - viewing properties [15-1](#)
  - IPSec and ePDG [28-91](#)
  - IP SLA
    - viewing responder service properties [19-104](#)
    - See also Y.1731
  - IP source violation
    - HSGW [28-68](#)
    - PDSN [28-105](#)
  - IPv6
    - addresses
      - in logical inventory [18-3](#)
      - in physical inventory [18-4](#)
    - in inventory [18-3](#)
    - in Prime Network [18-1](#)
    - notes, for viewing IPv6 addresses [18-4](#)
    - viewing IPv6 information [18-1](#)
  - is-correlation-allowed (event registry setting) [11-8](#)
  - IS-IS
    - commands
      - create ISIS address family [19-118](#)
      - create ISIS interface [19-118](#)
      - create ISIS interface address family [19-118](#)
      - create ISIS router [19-118](#)
      - delete ISIS address family [19-118](#)
      - delete ISIS interface [19-118](#)
      - delete ISIS interface address family [19-118](#)
      - delete ISIS router [19-118](#)
      - modify ISIS address family [19-118](#)
      - modify ISIS interface [19-118](#)
      - modify ISIS interface address family [19-118](#)
      - modify ISIS router [19-118](#)
      - show ISIS configuration [19-118](#)
      - viewing properties [19-105](#)
    - Iu configuration [28-43](#)
    - Iuh configuration [28-43](#)
    - Iu PS
      - paging configuration [28-43](#)
      - SCTP configuration [28-44](#)
      - security configuration [28-45](#)
      - user equipment configuration [28-45](#)
    - Iu PS service [28-35](#)
- 
- L**
- L2TP (cable). See DEPI and L2TP
  - label ranges (MPLS-TP)
    - add label range configuration [18-55](#)
    - remove label range configuration [18-55](#)
  - LACs (LTE networks) [28-56](#)
  - Latest Events tab (in map) [12-3](#)
  - Layer 2 PathTracer (VPN) [14-23](#)
  - Layer 3 PathTracer (VPN) [14-22](#)
  - licenses
    - modify licenses (command) [28-146](#)
    - show licenses (command) [28-146](#)
  - link aggregation group. See Ethernet LAGs
  - Link Down alarm [3-48](#)
  - Link Layer Discovery Protocol (LLDP), viewing properties [19-3](#)
  - Link OAM
    - commands. See Link OAM commands
    - enabling and disabling [20-18](#)
    - EVCs, configuring [20-18](#)
    - overview [20-11](#)
    - remote loopback, enabling and disabling [20-18](#)

- templates, managing [20-18](#)
- viewing properties in
  - logical inventory [20-13](#)
  - physical inventory [20-16](#)
- Link OAM commands
  - assign template on interface [20-18](#)
  - configure multipoint to multipoint or point to point EVC [20-18](#)
  - configure OAM parameters on interface [20-18](#)
  - disable OAM on interface [20-18](#)
  - enable E-LMI on interface [20-18](#)
  - enable OAM on interface [20-18](#)
  - start remote loopback [20-18](#)
  - stop remote loopback [20-18](#)
- Link Overutilized alarm [3-48](#)
- links
  - adding [4-13](#)
  - arrowheads [7-22, 1-14](#)
  - bidirectional vs. unidirectional [7-22, 1-14](#)
  - dashed line [7-22, 1-13](#)
  - flickering [7-29](#)
  - icons [1-11, 1-12](#)
  - impact analysis [7-27](#)
  - quick view [7-23](#)
  - solid line [7-22, 1-13](#)
  - tunnels [7-22](#)
  - types [1-12](#)
  - viewing
    - between VLAN elements and devices [19-52](#)
    - properties [7-20, 7-25](#)
  - width [1-13](#)
- LLDP, viewing properties [19-3](#)
- LMAs (LTE networks) [28-114](#)
- L-OAM. See Link OAM
- local correlation [11-8](#)
- lock badge [1-24](#)
- logical inventory
  - context [28-146](#)
  - icons [1-7](#)
  - viewing in Prime Network Vision [8-16](#)
  - window [8-16](#)
- loopback
  - add loopback interface (command) [8-24](#)
  - remote, enable/disable [20-18](#)
- LSEs
  - inventory details [18-40](#)
  - viewing [18-40](#)
- LSPs
  - commands. See MPLS-TP commands
  - endpoints [18-15](#)
  - lockout state [18-8](#)
  - on Ethernet links [18-13](#)
  - redundancy service properties [18-15](#)
  - Working and Protected [18-7](#)
- LTE networks
  - ePDG. See ePDG
  - foreign agent. See foreign agent
  - home agent. See home agent
  - HSGW. See HSGW
  - LACs [28-56](#)
  - LMAs [28-114](#)
  - overview [28-49](#)
  - PDSN. See PDSN
  - P-GW. See P-GW
  - QCI-QoS mapping [28-56](#)
  - SAE-GW. See SAE-GW
  - S-GW. See S-GW
  - technologies [28-50](#)
- LTE security procedure (MME) [28-159](#)

---

## M

- MAC domain (cable) [30-5](#)
- MAG (HSGW)
  - commands. See HSGW commands
  - viewing configuration [28-70](#)
- Maintenance, VNE investigation state [12-20](#)
- maintenance domains, in CFM [20-2](#)

- management states (VNEs)
  - badges [1-21](#)
  - icons [1-21](#)
- mapping [29-35](#)
- maps [4-1, 7-1](#)
  - adding VLANs [19-44](#)
  - applying background images [4-12](#)
  - creating [4-2](#)
  - customizing [4-15](#)
  - defaults, changing [7-2](#)
  - Ethernet services, adding [19-98](#)
  - layout, changing [7-2](#)
  - link icons [1-11](#)
  - overlays
    - callouts [18-26](#)
    - VPN [18-25](#)
  - overview [18-19](#)
  - overview window [7-15](#)
  - PathTracer files [14-17](#)
  - removing
    - VLANs [19-46](#)
    - VPNs [18-24](#)
  - saving [4-2](#)
  - tickets, viewing for a map [12-3](#)
  - user roles required [2-2](#)
  - VPNs
    - adding [18-23](#)
    - overlays [18-25](#)
    - viewing [18-19](#)
- MEPs, in CFM [20-2, 20-16](#)
- MIPs, in CFM [20-2, 20-16](#)
- mLACP
  - commands
    - show channel [19-111](#)
    - show group [19-111](#)
    - show LACP internal [19-111](#)
    - show MPLS LDP [19-111](#)
  - viewing properties [19-23](#)
- mLDP
  - database, viewing [18-43](#)
  - neighbors, viewing [18-44](#)
  - overview [18-43](#)
- MLPPP
  - link properties [27-29](#)
  - MLPPP properties [27-25](#)
- MME
  - commands
    - create policy accounting [28-146](#)
    - create QCI-QoS mapping [28-146](#)
    - delete policy accounting [28-146](#)
    - modify policy accounting [28-146](#)
  - configuration details [28-152](#)
  - EMM configurations [28-157](#)
  - ESM configuration [28-159](#)
  - interfaces [28-151](#)
  - LTE security procedure [28-159](#)
  - overview [28-150](#)
  - policy configuration [28-160](#)
  - S1 interface configuration [28-161](#)
  - service details [28-154](#)
- Mobile Management Entity, *See* MME
- mobile technologies
  - 3GPP inventory retrieval [28-117](#)
  - ACS [28-129](#)
  - APN. *See* APN
  - GPRS/UMTS. *See* GRPS/UMTS
  - LTE. *See* LTE
  - operator policies [28-119](#)
- Mobile Transport over Packet. *See* MToP
- MP-BGP. *See* BGP
- MPLS
  - ARP table [18-35](#)
  - BGP. *See* BGP
  - commands. *See* MPLS commands
  - LSEs, viewing [18-40](#)
  - monitoring services [18-27](#)
  - NDP table [18-35](#)
  - PathTracer and [14-20](#)



- pseudowire end-to-end emulation tunnels, viewing [18-51](#)
- pseudowire over GRE, properties [27-32](#)
- rate limit information [18-37](#)
- routing entities [18-32](#)
- MPLS commands
  - configure MPLS discovery [18-60](#)
  - configure MPLS label range [18-60](#)
  - disable MPLS on interface [18-60](#)
  - enable MPLS on interface [18-60](#)
  - show MPLS LDP [19-111](#)
- MPLS-TE
  - commands
    - configure MPLS-TE global [18-60](#)
    - configure MPLS-TE interface [18-60](#)
  - tunnels, viewing [18-53](#)
- MPLS TE Tunnel
  - MPLS TE Tunnel Down alarm [3-51](#)
- MPLS-TP commands
  - add BFD template configuration [18-55](#)
  - add global configuration [18-55](#)
  - add label range configuration [18-55](#)
  - add link configuration [18-55](#)
  - BFD global configuration [18-55](#)
  - LSP lockout [18-55](#)
  - LSP path lockout [18-55](#)
  - LSP path no lockout [18-55](#)
  - LSP ping [18-55](#)
  - LSP trace [18-55](#)
  - remove BFD template configuration [18-55](#)
  - remove global configuration [18-55](#)
  - remove label range configuration [18-55](#)
  - remove link configuration [18-55](#)
  - show BFD template [18-55](#)
  - show BFD template at tunnel [18-55](#)
  - tunnel ping [18-55](#)
  - tunnel trace [18-55](#)
  - update global configuration [18-55](#)
- MPLS-TP tunnels
  - adding to maps [18-7](#)
  - applying overlays [18-17](#)
  - BFD sessions, viewing properties [18-50](#)
  - discovery [18-7](#)
  - labeling [18-55](#)
  - locking and unlocking (bulk) [18-56](#)
  - LSP lockout state [18-8](#)
  - overview [18-6](#)
  - properties [18-9](#)
  - viewing [18-9](#)
  - working with [18-6](#)
- MSID configuration (PDSN) [28-106](#)
- MToP
  - ATM cross-connects [27-6](#)
  - ATM VPI properties [27-10](#)
  - CEM interfaces [27-49](#)
    - groups [27-50](#)
    - viewing [27-50](#)
    - virtual, viewing [27-50](#)
  - channelized lines [27-17](#)
  - encapsulation information [27-11](#)
  - IMA groups [27-13](#)
  - MLPPP link properties [27-29](#)
  - MLPPP properties [27-25](#)
  - network clock service [27-33](#)
  - pseudowire clock recovery properties [27-41](#)
  - SONET/SDH channelization properties [27-18](#)
  - Synchronous Ethernet (SyncE), viewing properties [27-45](#)
  - T3 DS1 and DS3 channelization properties [27-21](#)
  - TDM [27-16, 27-17](#)
  - viewing
    - CESoPSN pseudowire properties [27-3](#)
    - SAToP pseudowire properties [27-2](#)
- multicast configurations [24-1](#)
  - multicast node [24-1](#)
  - multicast profiles
    - iPv4 [24-3](#)
    - iPv6 [24-5](#)

PIM [24-7](#)  
 multicast protocols [24-3](#)  
 overview [24-1](#)  
 multicast label switching. See mLDP  
 multi-chassis devices, viewing [8-4](#)  
 Multichassis LACP. See mLACP  
 multiple links badge [1-24](#)  
 multiplex services, discovery of [19-98](#)

---

**N**

narrowband channels (cable) [30-7](#)  
 NAT 64 forwarding, add (command) [21-5](#)  
 NDP table [18-35](#)  
 NEIM. See Image Management  
 network clock service
 

- applying an overlay [27-48](#)
- clock service properties [27-34](#)
- overview [27-33](#)
- PTP interface [27-37](#)
- PTP service [27-35](#)

 network correlation [11-8](#)  
 network elements
 

- CPU usage, checking [12-23](#)
- icons [1-2](#)
- viewing
  - operating system information [8-20](#)
  - properties [8-2](#)

 See also devices  
 Network Events tab (device inventory) [12-4](#)  
 nexus 1000v properties [29-28](#)  
 non-cisco servers [29-35](#)  
 NRI properties (SGSN) [28-34](#)  
 NTP commands
 

- add NTP server command [8-25](#)
- remove NTP server command [8-25](#)

 nV. See virtualization

**O**

**OAM**

commands
 

- ping destination from device [12-23](#)
- ping VRF [12-23](#)
- trace route from device [12-23](#)
- traceroute VRF [12-23](#)

 See also Link OAM  
 operating system information (NE), viewing [8-20](#)  
 Operational, VNE investigation state [12-20](#)  
 operator policies (mobile technologies) [28-119](#)

**OSPF**

supported versions [19-108](#)  
 viewing properties [19-108](#)

**overlays** [7-17](#)

applying to
 

- Ethernet services [19-100](#)
- MPLS-TP tunnels [18-17](#)
- network clocks [27-48](#)
- pseudowire [19-90](#)
- VPLS instances [19-73](#)
- VPNs [18-25](#)

 displaying and hiding
 

- for VLANs [19-56](#)
- for VPNs [18-26](#)
- in maps [7-20](#)

 Ethernet service [19-100](#)  
 pseudowire [19-82, 19-90](#)  
 removing [19-56](#)  
 viewing [7-20](#)

**VLAN** [19-39](#)

removing [19-56](#)  
 REP information [19-57](#)  
 STP information [19-60](#)  
 viewing STP link information [19-60](#)

**VPLS**

callouts [19-74](#)  
 instance [19-73](#)

- pseudowire tunnel links in [19-74](#)
- viewing pseudowire tunnel links [19-74](#)
- VPN [18-25](#)
  - adding [18-25](#)
  - callouts [18-26](#)

## P

- paging configuration [28-43](#)
- Partially Discovered, VNE investigation state [12-20](#)
- passwords
  - changing [7-2](#)
- PathTracer
  - across CSC configurations [14-22](#)
  - blocked ports and [14-3](#)
  - comparing paths [14-18](#)
  - counter values, saving [14-17](#)
  - destinations [14-9](#)
  - in MPLS networks [14-20](#)
  - launching from
    - Ethernet Flow Point (EFP) [14-6](#)
    - Ethernet port [14-9](#)
    - examples [14-6](#)
    - IP interface [14-7](#)
    - MPLS-TP tunnel endpoint [14-11](#)
    - pseudowire endpoint [14-10](#)
    - VLAN bridge [14-8](#)
  - Layer 2 TP path information [14-19](#)
  - Layer 2 VPNs [14-23](#)
  - Layer 3 VPNs [14-22](#)
  - opening [14-2](#)
  - overview [14-1](#)
  - path trace
    - options for starting [14-4](#)
  - QinQ path information [14-18](#)
  - rerunning paths [14-18](#)
  - results, viewing [14-12](#)
  - starting points [14-21](#)
  - user roles required [2-5](#)
  - viewing results [14-12](#)
- PCF configuration (PDSN) [28-106](#)
- PDP commands
  - create network requested PDP context [28-146](#)
  - delete network requested PDP context [28-146](#)
- PDSN
  - AAA and [28-100](#)
  - commands. See PDSN commands
  - configurations [28-100](#)
  - GRE configuration [28-104](#)
  - IP source violation [28-105](#)
  - MSID configuration [28-106](#)
  - overview [28-100](#)
  - PCF configuration [28-106](#)
  - policy configuration [28-107](#)
  - QoS configuration [28-109](#)
  - registration details [28-110](#)
  - restrictions [28-111](#)
  - timers [28-111](#)
  - viewing [28-101](#)
- PDSN commands
  - create PCF security entity [28-113](#)
  - create PCF security entry [28-113](#)
  - create PDSN [28-113](#)
  - delete PCF security entry [28-113](#)
  - delete PDSN [28-113](#)
  - modify GRE [28-113](#)
  - modify IP source violation [28-113](#)
  - modify MSID [28-113](#)
  - modify PCF parameters [28-113](#)
  - modify PCF security entry [28-113](#)
  - modify PDSN [28-113](#)
  - modify policy [28-113](#)
  - modify PPP [28-113](#)
  - modify registrations [28-113](#)
  - modify timers and registrations [28-113](#)
  - show PDSN [28-113](#)
- P-GW
  - commands

- create P-GW [28-146](#)
- create P-GW PLMN [28-53](#)
- create QCI-QOS mapping [28-146](#)
- delete P-GW [28-53](#)
- modify P-GW [28-53](#)
- overview [28-52](#)
- SAE-GW and [28-51](#)
- view properties [28-52](#)
- physical inventory
  - icons [1-11](#)
  - viewing device properties [8-2](#)
  - window [8-4](#)
- ping
  - commands
    - ping destination from device [12-23](#)
    - ping pseudowire [19-117](#)
    - ping VRF [12-23](#)
  - ping device using Tools menu [12-23](#)
- policy configuration
  - MME [28-160](#)
  - PDSN [28-107](#)
- policy container [22-1](#)
- policy group [22-1](#)
- policy rules [22-2](#)
- port allocation [29-8](#)
- ports
  - alarms, disabling [8-15](#)
  - commands
    - add port description
    - assign port to VLAN [8-23](#)
    - change port status command [8-23](#)
    - configure downstream port [30-10](#)
    - create upstream port [30-10](#)
    - deassign port to VLAN [8-23](#)
    - modify cable port [30-10](#)
    - modify port [8-23, 30-10](#)
    - modify upstream port [30-10](#)
    - remove port description
    - update port description
  - viewing
    - configuration [8-12](#)
    - status [8-10](#)
    - with IPv4 and IPv6 addresses [18-5](#)
- Ports tab, in inventory window [8-10](#)
- Port Utilization graph, generating [8-14](#)
- Prime Network Events
  - Audit tab [13-17](#)
  - icon severities [1-14](#)
  - Provisioning tab [13-17](#)
  - Security tab [13-18](#)
  - severity indicators [13-5](#)
  - Syslog tab [13-15](#)
  - System tab [13-18](#)
  - Tickets tab [13-16](#)
  - user roles required [2-7](#)
  - V1 Traps tab [13-15](#)
  - V2 Traps tab [13-15](#)
- Prime Network Vision
  - customizing [4-15](#)
  - GUI overview [18-19](#)
  - icons [18-21, 1-1](#)
    - links [1-12](#)
    - logical inventory [1-7](#)
    - map [1-2, 1-4](#)
    - physical inventory [1-11](#)
  - links
    - characteristics [1-13](#)
    - colors [1-13](#)
    - icons [1-12](#)
  - maps. See maps
  - port information [8-12](#)
  - roles required [2-2](#)
  - VLAN elements and icons [19-40](#)
- properties
  - nexus 1000v [29-28](#)
- Provider Backbone Bridge (PBB), viewing properties [19-26](#)
- Provisioning tab (events) [12-4, 13-4, 13-17](#)

pseudowire

- Pseudo Wire MPLS Tunnel Down alarm [3-51](#)

pseudowires

- adding [19-82](#)
- applying overlay [19-90](#)
- clock recovery [27-44](#)
- commands
  - display pseudowire [19-87, 19-117](#)
  - ping pseudowire [19-117](#)
- defined [19-92](#)
- headend [19-93](#)
  - associated routing entity [19-97](#)
  - associated VRF entity [19-97](#)
  - generic interface list [19-97](#)
  - view configuration [19-94](#)
- overlays [19-82](#)
- overview [19-82](#)
- pinging [19-117](#)
- redundancy service properties [19-88](#)
- viewing
  - endpoint properties [19-79](#)
  - properties [19-85](#)
  - redundancy service properties [19-88](#)
  - tunnel links in VPLS overlays [19-74](#)
  - VCCV and CC information [19-87](#)

PTP

- interface properties [27-37](#)
- monitoring service [27-35](#)

PWE3

- inventory details [18-51](#)
- viewing [18-51](#)

---

## Q

QAM commands

- create block [30-11](#)
- create lane [30-11](#)
- create RF profile [30-11](#)
- delete frequency profile [30-11](#)

- delete RF profile [30-11](#)
- modify QAM channel [30-11](#)
- modify QAM port [30-11](#)
- modify RF profile [30-11](#)
- show frequency profile [30-11](#)
- show QAM channel [30-11](#)
- show QAM port [30-11](#)
- show RF profile [30-11](#)

QAM domain [30-4](#)

QCI mapping (HSGW) [28-71](#)

QCI-QoS mapping [28-146](#)

QCI-QoS mapping (LTE networks) [28-56](#)

Q-in-Q Subinterface Down

- examples [3-43](#)
- scenarios [3-43](#)

QoS, configuration (PDSN) [28-109](#)

quick view, for links [7-23](#)

---

## R

RADIUS

- AAA and [16-1](#)
- commands
  - add RADIUS server [8-26](#)
  - remove RADIUS server [8-26](#)
  - global configuration (AAA) [16-3](#)
- rate limits, for routing entities [18-37](#)
- reconciliation badge
  - description [1-24](#)
  - EFPs [19-44](#)
  - switching entities [19-44](#)
- reduction count
  - non-ticket events [12-13, 13-13](#)
  - tickets [12-13](#)
- redundancy service [18-15](#)
  - badge [1-24](#)
  - on LSP endpoints [18-15](#)
  - pseudowires [19-88](#)
- redundancy status, in physical inventory [8-9](#)

- refreshing data in Prime Network Events [13-19](#)
- registration details (PDSN) [28-110](#)
- registration revocation
  - foreign agent (LTE networks) [28-88](#)
  - home agent (LTE networks) [28-78](#)
- registry settings for events
  - activate-flow [11-14](#)
  - auto-cleared [11-13, 11-14](#)
  - correlate [11-14](#)
  - correlation [11-8](#)
  - flapping [11-7, 11-14](#)
  - is-correlation-allowed [11-14](#)
  - is-ticketable [11-10, 11-14](#)
  - severity [11-6, 11-14](#)
  - weight [11-14](#)
- REP
  - icons and badges [19-57](#)
  - primary badge [1-23](#)
  - primary blocking badge [1-23](#)
  - show REP segment information (command) [19-111](#)
  - viewing
    - for VLAN service link properties [19-58](#)
    - in VLAN domain views [19-57](#)
    - in VLAN overlays [19-57](#)
  - viewing properties
- Report Manager. See reports
- reports
  - events
    - Daily Average and Peak [5-5](#)
    - Database Monitoring [5-6](#)
    - Devices with the Most Events by severity [5-3](#)
    - Devices with the Most Events by type [5-3](#)
    - Devices with the Most Syslogs [5-5](#)
    - Devices with the Most Traps [5-6](#)
    - Event Reduction Statistics [5-4, 5-6](#)
    - Fault Database vs. Event Archive Statistics [5-6](#)
    - Mean Time to Repair [5-4](#)
    - Most Common Daily Events [5-4, 5-5](#)
    - Most Common Syslogs [5-5](#)
    - Syslog Count by device [5-5](#)
    - Syslog Count by type [5-5](#)
    - Syslog Trend by severity [5-5](#)
  - inventory
    - Hardware Summary By Selected Property [5-8](#)
    - Hardware Summary Detailed [5-8](#)
    - IOS-XR Software Package Summary [5-8](#)
    - Modules Summary By Type [5-8](#)
    - Software Version Summary by device [5-8](#)
    - Software Version Summary by version [5-8](#)
  - network events
    - Detailed Event Count (by device) [5-3, 5-4](#)
    - Detailed Service Events [5-4](#)
    - Detailed Syslogs [5-5](#)
    - Detailed Traps [5-6](#)
  - network service
    - Ethernet Service Detailed [5-9](#)
    - Ethernet Service Summary [5-9](#)
    - Network Pseudowire Detailed [5-9](#)
    - Network Pseudowire Summary [5-9](#)
    - VPLS Detailed [5-9](#)
    - VPLS Summary [5-9](#)
  - non-network events
    - Detailed Audit Events [5-7](#)
    - Detailed Provisioning Events [5-7](#)
    - Detailed Security Events [5-7](#)
    - Detailed System Events [5-7](#)
  - overview [5-1](#)
  - user roles required [2-10](#)
- Resilient Ethernet Protocol. See REP
- resource pairs (affected parties) [12-14](#)
- RF (cable). See QAM
- right-click commands [7-32](#)
- route map commands
  - create route access lists [28-146](#)
  - create route map [28-146](#)
  - delete route access list [28-146](#)
  - delete route maps [28-146](#)
  - modify route access lists [28-146](#)

- modify route map [28-146](#)
    - show route access lists [28-146](#)
    - show route map [28-146](#)
  - routing entities [18-32](#)
    - ARP table [18-35](#)
    - NDP table [18-35](#)
    - rate limit information [18-37](#)
    - viewing properties [18-32](#)
  - RSVP commands
    - configure RSVP [18-61](#)
    - delete RSVP [18-61](#)
    - disable RSVP on interface [18-61](#)
    - enable RSVP on interface [18-61](#)
- 
- S**
- S1 interface configuration [28-161](#)
  - SAE
    - GW
      - S-GW and [28-50](#)
  - SAE-GW
    - commands
      - create SAE GW [28-52](#)
      - delete SAE GW [28-52](#)
      - modify SAE-GW [28-52](#)
    - MME [28-50](#)
    - overview [28-50](#)
    - P-GW and [28-51](#)
    - viewing [28-51](#)
  - SAN, viewing [29-36](#)
  - satellite devices [8-7, 9-22](#)
  - SAToP, overview [27-2](#)
  - SBC
    - AAA properties [25-5](#)
    - commands. See SBC commands
    - DBE properties [25-3](#)
    - H.248 properties [25-3, 25-5](#)
    - logical inventory properties [25-1](#)
    - media address properties [25-3](#)
    - overview [25-1](#)
    - policy properties [25-6](#)
    - properties [25-2](#)
    - SBE properties [25-4](#)
    - SIP properties [25-9](#)
    - viewing in logical inventory [25-2, 25-3](#)
  - SBC commands, blacklists
    - add blacklist [25-15](#)
    - add blacklist reason [25-15](#)
    - delete blacklist [25-15](#)
    - delete blacklist reason [25-15](#)
    - update blacklist reason [25-15](#)
  - SBC commands, CAC policies
    - add CAC policy set [25-15](#)
    - add CAC policy table [25-15](#)
    - add CAC rule entry [25-15](#)
    - add call policy set [25-15](#)
    - add call policy table [25-15](#)
    - add call rule entry [25-15](#)
    - delete CAC policy set [25-15](#)
    - delete CAC policy table [25-15](#)
    - delete CAC rule entry [25-15](#)
    - delete call policy set [25-15](#)
    - delete call policy table [25-15](#)
    - delete call rule entry [25-15](#)
    - update CAC policy set [25-15](#)
    - update CAC policy table [25-15](#)
    - update CAC rule entry [25-15](#)
    - update call policy set [25-15](#)
    - update call policy table [25-15](#)
    - update call rule entry [25-15](#)
  - SBC commands, Codec lists
    - add Codec list [25-16](#)
    - add Codec list entry [25-16](#)
    - delete Codec list [25-16](#)
    - delete Codec list entry [25-16](#)
    - update Codec list entry [25-16](#)
  - SBC commands, media addresses
    - add media address [25-17](#)

- add media address DBE [25-17](#)
- delete media address DBE [25-17](#)
- SBC commands, performance statistics
  - show CPS data [25-12](#)
  - show current 15 min [25-12](#)
  - show current 5 min [25-12](#)
  - show current day [25-12](#)
  - show H.248 [25-12](#)
  - show previous 15 minutes [25-12](#)
  - show previous 5 minutes [25-12](#)
  - show previous day [25-12](#)
  - show previous hour [25-12](#)
- SBC commands, QoS profiles
  - add QoS profile [25-17](#)
  - delete QoS profile [25-17](#)
  - update QoS profile [25-17](#)
- SBC commands, show
  - components [25-12](#)
  - media statistics [25-12](#)
- SBC commands, SIP adjacencies
  - add SIP adjacency [25-13](#)
  - add SIP adjacency outbound AuthRealm [25-13](#)
  - delete SIP adjacency [25-13](#)
  - delete SIP adjacency outbound AuthRealm [25-13](#)
  - update SIP adjacency [25-13](#)
  - update SIP adjacency outbound AuthRealm [25-13](#)
- SBC commands, SIP header profiles [25-14](#)
  - add SIP header profile [25-14](#)
  - add SIP header profile condition [25-14](#)
  - add SIP header profile entry [25-14](#)
  - add SIP header profile header [25-14](#)
  - delete SIP header profile [25-14](#)
  - delete SIP header profile entry [25-14](#)
  - delete SIP header profile header [25-14](#)
  - update SIP header profile [25-14](#)
  - update SIP header profile entry [25-14](#)
- SBC commands, SIP option profiles
  - add SIP option profile [25-14](#)
  - add SIP parameter profile [25-14](#)
  - delete SIP option profile [25-14](#)
  - delete SIP parameter profile [25-14](#)
  - delete SIP parameter profile parameter [25-14](#)
  - update SIP option profile [25-14](#)
  - update SIP parameter profile parameter [25-14](#)
- SCTP [28-162](#)
- SCTP configuration [28-44](#)
- SDH. See SONET
- security configuration [28-45](#)
- Security tab (events) [13-4, 13-18](#)
- servers
  - non-cisco [29-35](#)
- Service events [11-6](#)
- services
  - Iu PS [28-35](#)
- Service tab (events) [13-4, 13-13](#)
  - archived events [13-12](#)
  - fields in [13-13, 13-14](#)
- service view
  - overlays [18-26](#)
  - removing VLANs [19-46](#)
  - removing VPNs [18-24](#)
  - virtual routers [18-24](#)
  - VPNs [18-22, 18-27](#)
- Session Border Controller. See SBC
- session management (SGSN) [28-35](#)
- severity
  - icons [1-14](#)
  - indicators
    - events [13-5](#)
- SGNS
  - service properties
    - GMM [28-32](#)
    - NRI [28-32](#)
    - session management [28-32](#)
- SGSN
  - overview [28-27](#)
  - service properties



- NRI [28-34](#)
- session management [28-35](#)
- view properties [28-28](#)
- S-GW
  - commands
    - create QCI-QOS mapping [28-146](#)
    - create S-GW [28-146](#)
    - create S-GW PLMN [28-55](#)
    - delete S-GW [28-55](#)
    - modify S-GW [28-55](#)
  - overview [28-54](#)
  - view properties [28-54](#)
- shared switching entities [19-33](#)
- Shutting Down, VNE investigation state [12-20](#)
- sites, viewing properties [18-28](#)
- small cell [28-38](#)
- SNMP
  - configuration commands
    - add SNMP configuration
    - remove SNMP configuration
    - update SNMP configuration
  - traps commands
    - add traps [8-22](#)
    - enable CFM SNMP server traps [20-16](#)
    - enable traps command [8-22](#)
    - remove traps command [8-22](#)
- software images (device). See Image Management
- SONET
  - channelization properties [27-18](#)
  - commands
    - clear SDH counter [27-53](#)
    - configure BER threshold [27-53](#)
    - configure clock source [27-53](#)
    - configure TCA threshold [27-53](#)
    - show BER threshold [27-53](#)
    - show controller data [27-53](#)
    - show PM line counters [27-53](#)
    - show PM medium counters [27-53](#)
    - show PM path counters [27-53](#)
    - show PM section counters [27-53](#)
    - show PM trace details [27-53](#)
    - show TCA threshold [27-53](#)
  - See also TDM and channelization commands
  - sorting table data [7-7](#)
  - Spanning Tree Protocol. See STP
  - standard events [11-3, 11-6, 13-18](#)
  - static link, adding [4-13](#)
  - Stopped, VNE investigation state [12-20](#)
  - STP
    - in VLAN domain views [19-60](#)
    - in VLAN overlays [19-60](#)
    - links (in VLAN overlays) [19-60](#)
    - properties, viewing [19-5](#)
    - root badge [1-24](#)
    - VLAN service links [19-61](#)
  - stream control transmission protocol [28-162](#)
  - Structure-Agnostic TDM over Packet. See SAToP
  - subscriber access points (BNG)
    - diagnosing [26-5](#)
    - viewing [26-4](#)
  - subscriber commands
    - create subscribers
    - delete subscriber
    - modify subscriber
    - show subscriber [28-146](#)
  - switching entities
    - containing termination points [19-44](#)
    - overview [19-40](#)
  - syslogs
    - identification [11-6](#)
    - Syslog tab (in Prime Network Events) [13-15](#)
  - Syslogs tab (events)
    - archived events [13-12](#)
  - Syslog tab (events)
    - fields in [13-13, 13-15](#)
  - System tab (events) [13-4, 13-18](#)

**T**

- T3 DS1 and DS3, viewing properties [27-21](#)
  - tables, sorting and filtering [7-7](#)
  - TACACS commands
    - add TACACS+ server [8-26](#)
    - add TACACS server
    - remove TACACS+ server [8-26](#)
    - remove TACACS server
  - tag manipulations, for associated VLANs [19-49](#)
  - TDM and channelization commands
    - configure AU3 [27-57](#)
    - configure AU4 [27-57](#)
    - configure AUG mapping [27-57](#)
    - configure card type [27-57](#)
    - configure controller [27-57](#)
    - configure framing [27-57](#)
    - configure STS [27-57](#)
    - configure TUG3 [27-57](#)
    - delete AU3 [27-57](#)
    - delete AU4 [27-57](#)
    - delete STS [27-57](#)
    - delete TUG3 [27-57](#)
    - modify E1 controller [27-57](#)
    - modify T1 controllers [27-57](#)
  - TDM overview [27-16](#)
  - Telnet
    - Telnet device using Tools menu [12-23](#)
  - termination points, in switching entities [19-44](#)
  - TE tunnels and PathTracer [14-24](#)
  - Ticket Agent [11-1](#)
  - Tickets
    - archived, finding [13-12](#)
  - tickets
    - acknowledging [12-4, 12-11](#)
    - acknowledging [12-16](#)
    - affected devices [12-16](#)
    - affected parties [11-10, 12-14](#)
    - archiving [11-12, 11-13, 11-14, 12-25](#)
    - auto-archive [11-14](#)
    - manually [11-14](#)
  - associated events [12-15](#)
  - clearing [11-12, 11-13, 12-16, 12-24](#)
    - auto-clear [11-13](#)
    - manually [11-13](#)
  - correlation [12-15](#)
  - defined [12-1](#)
  - definition of [12-1](#)
  - duplication count [12-13](#)
  - EFP severities and [19-32](#)
  - filters [12-6](#)
    - turning on and off [13-10](#)
  - history, checking [12-13](#)
  - is-ticketable registry setting [11-10](#)
  - notes, adding [12-24](#)
  - overview [12-1](#)
  - Prime Network Vision and [12-1](#)
  - purging [11-12, 11-13, 11-14](#)
  - reduction count [12-13](#)
  - root causes [12-15](#)
  - searching for [12-6](#)
  - time zones for [12-11](#)
  - troubleshooting [12-11, 12-17](#)
    - getting tips [12-12](#)
  - user audit [12-16](#)
  - user roles required [2-6](#)
  - viewing
    - for a device or device component [12-4](#)
    - for a map [12-3](#)
    - viewing in Vision client [12-1](#)
- Tickets tab [13-4](#)
  - Prime Network Events [13-16](#)
- Time Division Multiplexing. See TDM or MToP TDM
- trace route
  - trace route from device (command) [12-23](#)
  - traceroute VRF (command) [12-23](#)
- Tracking Disabled, VNE communication state [12-19](#)
- transform set details (ePDG) [28-96](#)

traps  
     identification [11-6](#)  
 Trap tabs (events)  
     archived events [13-12](#)  
     fields in [13-13](#)  
 troubleshooting [12-18](#)  
     device reachability [12-18](#)  
     tickets [12-11, 12-12, 12-13](#)  
 troubleshooting tickets  
     online documentation with tips [12-17](#)

## U

UCS [29-31](#)  
 UNI (E-LMI), configure [20-16, 20-18](#)  
 Unified Computing System (UCS) devices. See virtualization  
 Unsupported, VNE investigation state [12-20](#)  
 upgrade analysis (NEIM) [9-8](#)  
 upgraded events [11-3, 11-6](#)  
 upstream rates, show (cable) [30-10](#)  
 user equipment configuration [28-45](#)  
 user roles required  
     business elements [2-9](#)  
     business tags [2-9](#)  
     CCM [2-7](#)  
     Configuration Audit [2-7](#)  
     Configuration Management [2-7](#)  
     device groups (CCM) [2-7](#)  
     Image Management [2-7](#)  
     maps [2-2](#)  
     PathTracer [2-5](#)  
     Prime Network Events [2-7](#)  
     Prime Network Vision [2-2](#)  
     reports [2-10](#)  
     tickets, working with [2-6](#)

## V

V1 Traps (tab) [13-15](#)  
 V1 Trap tab (events) [13-4](#)  
 V2 Traps (tab) [13-15](#)  
 V2 Trap tab (events) [13-4](#)  
 V3 Trap tab (events) [13-4](#)  
 VDC [29-8](#)  
 VDSL2  
     device inventory, viewing [31-3](#)  
     DSL cable bonding group [31-4](#)  
     n-to-one access profile [31-7](#)  
     one-to-one access profile [31-7, 31-9](#)  
     overview [31-1](#)  
     TLS access profile [31-7, 31-10](#)  
     viewing properties [31-1](#)  
     XDSL traffic descriptors [31-1](#)  
 Virtual Circuit Connectivity Verification (VCCV),  
 viewing information for pseudowire endpoint [19-87](#)  
 virtual connections  
     viewing encapsulation information [27-11](#)  
     viewing properties [27-5](#)  
 virtual device context [29-8](#)  
 virtualization  
     blade server [29-31, 29-45](#)  
     cluster [29-10](#)  
     compute services, searching for [29-45](#)  
     data center container [29-10, 29-11](#)  
     data store [29-10, 29-11](#)  
     FCoE interface details [29-42](#)  
     guest operating system [29-10](#)  
     host cluster [29-20](#)  
     host server [29-12](#)  
     hypervisor (host server) [29-10](#)  
     hypervisors [29-45](#)  
     overview [29-9](#)  
     resource pools [29-10, 29-22](#)  
     third party devices [29-35](#)  
 UCS

- hypervisor [29-35](#)
- network discovery and [29-26](#)
- viewing map node [29-24](#)
- viewing properties [29-31](#)
- vCenter and [29-9](#)
- virtual machine [29-10, 29-17, 29-45](#)
- virtual network devices, viewing [29-27](#)
- virtual storage area network (VSAN). See VSAN
- VMware and [29-9](#)
- VSG
  - deploying [29-30](#)
  - viewing [29-30](#)
- virtual port channel. See vPC
- Virtual Router Redundancy Protocol (VRRP), viewing information [18-38](#)
- virtual routers
  - moving [18-24](#)
  - properties, viewing [18-28](#)
  - VRF tables [18-32](#)
- Virtual Security Gateway (VSG). See virtualization
- Virtual Storage Area Network. See VSAN
- Virtual Storage Area Network (VSAN). See VSAN
- Virtual Switching Instance. See VSI
- Vision
  - customizing the client [12-26](#)
  - launching [7-2](#)
- VLAN commands
  - assign port to VLAN [8-23](#)
  - create VLAN [19-66](#)
  - deassign port to VLAN [8-23](#)
  - delete VLAN [19-66](#)
  - modify VLAN [19-66](#)
- VLANs
  - adding associated VLANs [19-49](#)
  - adding to map view [19-44](#)
  - associations [19-48](#)
  - commands. See VLAN commands
  - discovery [19-39](#)
  - elements
    - EFPs [19-41](#)
    - icons in Prime Network Vision [19-40](#)
    - network VLAN [19-40](#)
    - overview [19-40](#)
    - switching entities [19-40](#)
  - overlays [19-39](#)
    - STP link information [19-60](#)
    - viewing REP information [19-57](#)
    - viewing STP information [19-60](#)
  - overview [19-40](#)
  - removing
    - from maps [19-46](#)
    - overlays [19-56](#)
  - tag manipulations for associations [19-49](#)
  - trunk groups [19-62](#)
  - viewing
    - associated VLAN mapping properties [19-51](#)
    - associated VLAN service links [19-51](#)
    - bridge properties [19-64](#)
    - links between elements and devices [19-52](#)
    - mappings [19-47](#)
    - REP properties [19-58](#)
    - service link properties [19-57](#)
    - STP properties [19-61](#)
    - trunk groups [19-62](#)
- VNE/Agent Unreachable, VNE communication state [12-19](#)
- VNE communication states
  - Agent Not Loaded [12-19](#)
  - Connecting [12-19](#)
  - Device Partially Reachable [12-19](#)
  - Device Reachable [12-19](#)
  - Device Unreachable [12-19](#)
  - Tracking Disabled [12-19](#)
  - VNE/Agent Unreachable [12-19](#)
- VNE investigation states
  - Currently Unsynchronized [12-20](#)
  - Defined Not Started [12-20](#)
  - Discovering [12-20](#)

- Initializing [12-20](#)
  - Maintenance [12-20](#)
  - Operational [12-20](#)
  - Partially Discovered [12-20](#)
  - Shutting Down [12-20](#)
  - Stopped [12-20](#)
  - Unsupported [12-20](#)
  - VNEs
    - communication state badges [1-22](#)
    - fault management and [11-1, 11-4](#)
    - investigation state badges [1-22](#)
  - vPC
    - commands (data center)
      - show port channel capacity [29-1](#)
      - show vPC [29-1](#)
      - show vPC consistency parameter [29-1](#)
    - defined [29-1](#)
  - VPLS
    - adding instances to maps [19-72](#)
    - instance overlays [19-73](#)
    - overlays
      - link callout [19-74](#)
      - viewing pseudowire tunnel links [19-74](#)
    - viewing
      - access Ethernet EFP properties [19-81](#)
      - instance properties [19-76](#)
      - properties [19-75](#)
      - pseudowire endpoint properties [19-79](#)
    - working with [19-71](#)
  - VPNs
    - adding to maps [18-23](#)
    - and virtual routers [18-24](#)
    - creating [18-22](#)
    - moving virtual routers between [18-24](#)
    - overlays [18-25](#)
      - callouts [18-26](#)
      - creating [18-25](#)
      - displaying [18-26](#)
      - hiding [18-26](#)
    - properties, viewing [18-27](#)
    - removing from maps [18-24](#)
    - sites [18-28](#)
    - viewing in maps [18-19](#)
    - virtual routers [18-28](#)
  - VRFs
    - commands
      - create VRF [28-146](#)
      - delete VRF [18-54](#)
      - modify VRF [18-54](#)
      - ping VRF [12-23](#)
      - show VRF IP route [8-17](#)
      - traceroute VRF [12-23](#)
    - cross-VRF routing entries [18-50](#)
    - multicast configurations [18-31](#)
    - tables
      - egress [18-32](#)
      - ingress [18-32](#)
    - viewing properties [18-28](#)
    - with IPv4 and IPv6 addresses [18-5](#)
  - VRRP commands
    - create VRRP group [18-62](#)
    - delete VRRP [18-62](#)
    - delete VRRP interface [18-62](#)
    - modify VRRP group [18-62](#)
    - show VRRP [18-62](#)
  - VSAN
    - FC interface details [29-40](#)
    - FC link aggregation [29-43](#)
    - network configuration details [29-37](#)
  - VSI, viewing properties [19-77](#)
  - VSI Down
    - examples [3-45](#)
    - scenarios [3-29, 3-45](#)
- 
- W**
- web services scheduler (3GPP inventory) [28-117](#)
  - wideband channels (cable) [30-7](#)

Working and Protected LSPs [18-7](#)

---

## Y

Y.1731

commands

configure IP SLA parameters [23-4](#)

configure probe endpoint association [23-4](#)

configure profile [23-4](#)

create on demand probe configuration [23-4](#)

deassociate profile [23-4](#)

delete IP SLA parameters [23-4](#)

delete profile [23-4](#)

show IP SLA [23-4](#)

show SLA operations detail [23-4](#)

show SLA profiles [23-4](#)

performance management [23-1](#)

probes [23-1, 23-4](#)

technology overview [23-1](#)