



Next Steps

The following table lists the next steps you might perform to get started with Cisco Prime Optical. Procedures are high-level, and intended for advanced users to get you up and running quickly. For more information and details, see the Cisco Prime Optical user guide.

Table 10-1 **Next Steps**

No.	High-Level Task	For More Information, See... ¹
1.	Log in as SysAdmin to create a SuperUser account.	Creating a Prime Optical User
2.	Log in as SuperUser to configure the server NE user and password from the Control Panel.	Configuring Prime Optical Security Parameters
3.	(Optional) Configure automatic alarm acknowledgment from the Control Panel.	Configuring Application-Specific Parameters
4.	Enable NE automatic backup from the Control Panel.	Viewing and Modifying NE Service Properties
5.	Verify that the NE software version exists in the Supported Devices Table.	Cisco Prime Optical Supported Devices
6.	Add NEs and build the network.	Building the Network

1. See the corresponding sections in the Cisco Prime Optical user guide.

