

Cisco NCS 2000 Series Upgrade Guide, Release 10.5.x.x

First Published: 2016-11-22

Text Part Number:

Cisco NCS 2002 and NCS 2006 Upgrade Guide, Release 10.5.x.x

This document explains how to upgrade the Cisco Transport Controller (CTC) software to the NCS fixed grid or NCS flex software using the Transport Node Controller (TNC/TNCE), Transport Shelf Controller (TSC/TSCE), or Cisco NCS 2000 Series Transport Node Controller (TNCS/TNCS-O) card.

Cisco NCS 2002 and NCS 2006 Upgrade Guide, Release 10.5.x.x

This document explains how to upgrade the Cisco Transport Controller (CTC) software to the NCS fixed grid or NCS flex software using the Transport Node Controller (TNC/TNCE), Transport Shelf Controller (TSC/TSCE), or Cisco NCS 2000 Series Transport Node Controller (TNCS/TNCS-O) card.

NCS Upgrade Paths

For upgrade path details, refer the [NCS Software Matrix](#)

Some of the key limitations to be considered before proceeding with the upgrade are:

- When a node is upgraded from R9.80 (SONET or SDH), R10.0 (SONET or SDH) MSTP to NCS fixed grid, the database backup taken from the originating release cannot be restored after the upgrade.
- When a node is upgraded from NCS fixed grid to NCS flex, the database back-up taken from the originating release cannot be restored after the upgrade.
- When a node is upgraded from NCS fixed grid to NCS fixed grid or from NCS flex to NCS flex, the database is retained during the upgrade.



Caution

Do not attempt to upgrade a configuration that contains Cisco ONS 15454 nodes to Cisco NCS software.

Errorless Upgrades and Exceptions

This section describes important information to be aware of before you begin the upgrade process:

- When a node installed with GE_XP, GE_XPE, 10GE_XP, or 10GE_XPE cards configured with REP or a channel group is upgraded from R9.2.0 or later releases, traffic loss occurs. The traffic loss is less than 60 seconds for each GE_XP, GE_XPE, 10GE_XP, or 10GE_XPE card that undergoes a soft reset during the upgrade process.

- Before you upgrade the software on a NCS 2006 shelf powered by a 15454-M6-DC20 or a 15454-M6-AC module to R9.6.x or a later release, you must verify that the total power consumed by all the line cards in the shelf does not cross the maximum power limit.

Table 1: Maximum Power Limit Values for the ONS 15454 M6 Shelf

Power Module	Maximum Power Limit
15454-M6-DC20	960 W
15454-M6-DC	1440 W
15454-M6-AC	900 W
15454-M6-AC2	1200 W

If the power consumption exceeds the limit after the upgrade, the line cards that caused it to exceed, do not boot. This results in traffic loss. To avoid this traffic loss, use the 15454-M6-AC2 module instead of the 15454-M6-AC module and the 15454-M6-DC module instead of the 15454-M6-DC20 module. For details about power calculation, see the table, [Line Card Power Consumption Values](#).

- After you upgrade to R9.6.0 or later releases, use the **Force FPGA Update** button in the CTC card view > Provisioning > Card tab to update the SWAN FPGA image on OTU2_XP cards. This allows detection of the HI-BER alarm when OTU2_XP cards are configured in the 10G Ethernet LAN Phy to WAN Phy mode.
- The MXP_MR_2.5 and MXPP_MR_2.5 cards automatically download a new field-programmable gate array (FPGA) image during an upgrade from a software release prior to R7.0 to R10.5.x.x. The upgrades for DWDM configurations are expected to be errorless with the following exceptions if nodes are running MXP_MR_2.5 and MXPP_MR_2.5 cards:
 - If Y-cable protection is not provisioned, the data path incurs a traffic hit of up to 10 seconds or less.
 - If Y-cable protection is provisioned on cards running Fiber Channel (FC) payloads, traffic switches away from the card downloading the new FPGA causing the FC link to be reinitialized.
 - If Y-cable protection is provisioned on cards running Gigabit Ethernet (GE) payloads, there is no traffic interruption.

Cisco NCS Software Packages



Caution

Do not download and activate the Cisco NCS software package on a Cisco ONS 15454 shelf.

The Cisco NCS software is shipped in two packages:

- NCS Flex: contains software that supports flex cards and configurations in NCS 2002 and NCS 2006 and NCS 2015. WSON is supported in this package.

- NCS Fixed Grid: contains software that supports fixed grid cards and configurations in NCS 2002 and NCS 2006 and NCS 2015. WSON is supported in this package.

**Note**

You can download the NCS fixed grid package on a NCS flex node and vice versa. The node database is deleted during the activation. After the activation, it is recommended to relaunch CTC to view the new package that is activated.

This table describes the node controller and shelf controller for NCS packages.

Package	Node Type	Node Controller	Shelf Controller
NCS Flex	Flex NCS Node	TNC/TNCE/TSO/TSCE/INCS/INCSO	TNC/TNCE/TSO/TSCE/INCS/INCSO
NCS Fixed Grid	Fixed Grid Node	TNC/TNCE/TSO/TSCE/INCS/INCSO	TNC/TNCE/TSO/TSCE/INCS/INCSO

Document Procedures

Procedures in this document must be performed in consecutive order unless noted otherwise. Ensure that the procedure is completed for each node in a given network. If you are new to upgrading the software, make a printed copy of this document and use it as a checklist.

Each non-trouble procedure (NTP) is a list of steps designed to accomplish a specific procedure. Follow the steps until the procedure is complete. If you need more detailed instructions, refer to the detail-level procedure (DLP) specified in the procedure steps. Throughout this guide, NTPs are referred to as “procedures” and DLPs as “tasks.” Every reference to a procedure includes its NTP number, and every reference to a task includes its DLP number.

The DLP (task) supplies additional task details to support the NTP. The DLP lists numbered steps that lead you through completion of a task. Some steps require that equipment indications be checked for verification. When a proper response is not obtained, a trouble clearing reference is provided.

This section lists the document procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

- 1 [NTP-U487 Preparing to Upgrade to a New Release, on page 4](#)—This procedure contains critical information and tasks that you must read and complete before beginning the upgrade process.
- 2 [NTP-U488 Back Up the Cisco NCS Software Database, on page 5](#)—Complete the database backup to ensure that you have preserved your node and network provisioning in the event that you need to restore them.
- 3 [NTP-U489 Upgrade the Cisco NCS Software, on page 7](#)—Complete this procedure to complete the upgrade.
- 4 [NTP-U490 Install Public-Key Security Certificate, on page 15](#)— Complete this procedure to be able to run the software.
- 5 [NTP-U491 Restore the Previous Software Load and Database, on page 16](#)— Complete this procedure if you want to return to the previous software load you were running before activating the new release.
- 6 [NTP-U493 Upgrade to the NCS Software Using TL1, on page 20](#)— Complete this procedure only if you want to upgrade to a new release using Transaction Language (TL1).

NTP-U487 Preparing to Upgrade to a New Release

Purpose	This procedure provides critical information checks and tasks you must complete before beginning an upgrade to R10.5.x.x.
Tools/Equipment	Cisco NCS nodes
Prerequisite Procedures	"DLP-G46 Log into CTC" in the " Connect the PC and Log into the GUI " document.
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

SUMMARY STEPS

1. Before you begin, make sure that information related to your site, for example, date, street address, site phone number, and dialup number are stored in a safe and accessible location. The data will be useful during and after the upgrade.
2. Read the release notes of the release you are upgrading to. Visit http://www.cisco.com/en/US/products/ps13295/prod_release_notes_list.html to download the release notes.
3. Ensure your workstation meets the minimum hardware and software requirements before starting the upgrade. For more information on the hardware and software requirements, read the release notes.
4. Make sure that the control cards are installed in the appropriate slots on all the nodes in the network and on both the slots as indicated in the following section:
5. Repeat the above step for every node in the network.
6. When you have completed the tasks for this section, proceed with the procedure, [NTP-U488 Back Up the Cisco NCS Software Database](#), on page 5.

DETAILED STEPS

-
- Step 1** Before you begin, make sure that information related to your site, for example, date, street address, site phone number, and dialup number are stored in a safe and accessible location. The data will be useful during and after the upgrade.
- Step 2** Read the release notes of the release you are upgrading to. Visit http://www.cisco.com/en/US/products/ps13295/prod_release_notes_list.html to download the release notes.
Note Disable APC before upgrading from R7.0.x to R8.0.x or later and enable it after the upgrade is complete.
- Step 3** Ensure your workstation meets the minimum hardware and software requirements before starting the upgrade. For more information on the hardware and software requirements, read the release notes.
- Step 4** Make sure that the control cards are installed in the appropriate slots on all the nodes in the network and on both the slots as indicated in the following section:

- NCS 2015 shelf—TNCS or TNCS-O cards in Slots 1 and 17
- NCS 2006 shelf—TNC, TNCE, TSC, or TSCE cards in Slots 1 and 8
- NCS 2002 shelf—TNC, TNCE, TSC, or TSCE card is in Slot 1

Step 5 Repeat the above step for every node in the network.

Step 6 When you have completed the tasks for this section, proceed with the procedure, [NTP-U488 Back Up the Cisco NCS Software Database](#), on page 5.

Stop. You have completed this procedure.

NTP-U488 Back Up the Cisco NCS Software Database

Purpose	This procedure retains all configuration data for your network before performing the upgrade.
Tools/Equipment	PC or UNIX workstation
Prerequisite Procedures	<ul style="list-style-type: none"> • "DLP-G46 Log into CTC" in the "Connect the PC and Log into the GUI" document. • NTP-U487 Preparing to Upgrade to a New Release, on page 4
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser

SUMMARY STEPS

1. In the node view, click the **Maintenance>Database** tabs.
2. In the database pane, click the **Backup** button.
3. Click **Browse**. Navigate to the local PC directory or network directory and type a database name using the IP address of the node to upgrade in the File Name field and click **OK**. To overwrite an existing file, click **Yes**.
4. When the backup is complete, click **OK**.
5. Repeat Steps 1 through 5 for each node in the network.
6. (Optional) It is recommended that you manually log critical information by either writing it down, printing screens, or by exporting the data to an appropriate format, as applicable. Use the following table to determine the information that should be logged.

DETAILED STEPS

- Step 1** In the node view, click the **Maintenance>Database** tabs.
- Step 2** In the database pane, click the **Backup** button.
The Database Backup dialog box is displayed.
- Step 3** Click **Browse**. Navigate to the local PC directory or network directory and type a database name using the IP address of the node to upgrade in the File Name field and click **OK**. To overwrite an existing file, click **Yes**.
- Step 4** When the backup is complete, click **OK**.
- Step 5** Repeat Steps 1 through 5 for each node in the network.
- Step 6** (Optional) It is recommended that you manually log critical information by either writing it down, printing screens, or by exporting the data to an appropriate format, as applicable. Use the following table to determine the information that should be logged.

Information	Record Data Here
IP address of the node	
Node name	
Timing settings	
DCC ¹ connections—list all optical ports with active DCCs	
User IDs of all users, including at least one Superuser	
Inventory—A print screen of the Inventory window	
Active TNCS/TNCS-O (Cisco NCS 2015) cards	Slot 1 and Slot 17
Active TNC/TNCE/TSC/TSCE/TNCS/TNCS-O (Cisco NCS 2006) cards	Slot 1 and Slot 8
Active (Cisco NCS 2002) card	Slot 1
Network information—A print screen of the Provisioning tab in the network view	
List all protection groups in the system—A print screen of the Protection group window	
List alarms—A print screen of the Alarm window	
List circuits—A print screen of the Circuit window	

¹ DCC=data communications channel

Stop. You have completed this procedure.

NTP-U489 Upgrade the Cisco NCS Software

Purpose	This procedure upgrades the CTC software to R10.5.x.x and must be performed on all nodes, or groups of nodes to be upgraded.
Tools/Equipment	PC or UNIX workstation
Prerequisite Procedures	NTP-U488 Back Up the Cisco NCS Software Database, on page 5
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser



Caution

Do not perform maintenance or provisioning activities during the activation task.



Note

When you upgrade from Release 9.21 to Release 9.3 and later releases, some OCHNC circuits do not automatically upgrade during the software activation process. These circuits must be reconfigured again using the **Reconfigure Circuits** option in CTC.

SUMMARY STEPS

1. Insert the software CD into the workstation CD-ROM drive (or otherwise acquire access to the software) to begin the upgrade process.
2. Complete the [DLP-U546 Download the NCS Software, on page 8](#) task for all nodes to be upgraded.
3. Complete the [DLP-U548 Activate the New Cisco NCS Software, on page 10](#) task for all nodes to be upgraded.
4. Complete the [DLP-U549 Delete Cached JAR Files, on page 13](#) task, as necessary.
5. (Optional) If you want to prevent a software revert to an earlier software release, complete the [DLP-U546 Download the NCS Software, on page 8](#) task on all nodes, or groups of nodes you are upgrading a second time.
6. If you need to return to the software and database you had before activating Software R10.5.x.x, proceed with the [NTP-U491 Restore the Previous Software Load and Database, on page 16](#) procedure.
7. To back up the Software R10.5.x.x database for the working software load, see [NTP-U488 Back Up the Cisco NCS Software Database, on page 5](#) procedure in order to preserve the database for the current release.

DETAILED STEPS

-
- Step 1** Insert the software CD into the workstation CD-ROM drive (or otherwise acquire access to the software) to begin the upgrade process.
- Note** Inserting the software CD activates the CTC Java Setup Wizard. Use the setup wizard to install the components or click **Cancel** to continue with the upgrade.
- Step 2** Complete the [DLP-U546 Download the NCS Software, on page 8](#) task for all nodes to be upgraded.
- Step 3** Complete the [DLP-U548 Activate the New Cisco NCS Software, on page 10](#) task for all nodes to be upgraded.
- Note** Only one node can be activated at a time. During a parallel upgrade, activate another node as soon as the controller cards reboot successfully. To perform parallel upgrade remotely, wait five minutes for the controller cards to reboot completely.
- Step 4** Complete the [DLP-U549 Delete Cached JAR Files, on page 13](#) task, as necessary.
- Step 5** (Optional) If you want to prevent a software revert to an earlier software release, complete the [DLP-U546 Download the NCS Software, on page 8](#) task on all nodes, or groups of nodes you are upgrading a second time.
- Caution** If the software is downloaded again after a version is activated, a revert to the previous version cannot be performed.
- Step 6** If you need to return to the software and database you had before activating Software R10.5.x.x, proceed with the [NTP-U491 Restore the Previous Software Load and Database, on page 16](#) procedure.
- Step 7** To back up the Software R10.5.x.x database for the working software load, see [NTP-U488 Back Up the Cisco NCS Software Database, on page 5](#) procedure in order to preserve the database for the current release. After the upgrade is complete, the date and time in CTC is reset.
- Stop. You have completed this procedure.**
-

DLP-U546 Download the NCS Software

Purpose	This task downloads R10.5.x.x software to the NCS nodes prior to activation.
Tools/Equipment	PC or UNIX workstation
Prerequisite Procedures	NTP-U488 Back Up the Cisco NCS Software Database, on page 5
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Maintenance user or higher



Note The TNC/TNCE/TSC/TSCE card contains flash memory with two partitions—working and protect (backup). The software is downloaded to the protect (backup) partition of the flash memory on both the standby and active TNC/TNCE/TSC/TSCE/TNCS/TNCS-O cards. This download is not traffic affecting because the active software continues to run in the primary RAM location. The software can therefore be downloaded at any time.



Note To download and upgrade the software using TL1, see the [NTP-U493 Upgrade to the NCS Software Using TL1, on page 20](#) procedure.



Note All the nodes in the network must run the DWDM package with WSON to make the WSON feature functional because WSON is a network level feature.

SUMMARY STEPS

1. From CTC View menu, choose **Go to Network View**.
2. Make sure that the alarm filter is turned off. To do so, complete the following:
3. Resolve any outstanding alarms. To view alarms for all the nodes in the network, click the **Alarms** tab.
4. From the CTC View menu, choose **Go to Home View** to go to the node view.
5. Click the **Maintenance**> **Software** tabs.
6. Click the **Download** button. The Download Selection dialog box appears.
7. Locate the software files on the software CD or on your hard drive.
8. To open the folder, choose the file with the PKG extension and click **Open**.
9. From the list of compatible nodes, select the nodes where the software must be downloaded.
10. Click **OK**. The Download Status column monitors the progress of the download.
11. Return to your originating procedure (NTP).

DETAILED STEPS

-
- Step 1** From CTC View menu, choose **Go to Network View**.
- Step 2** Make sure that the alarm filter is turned off. To do so, complete the following:
- a) Click the **Filter** tool located at the lower-left side of the window.
The Alarm Filter dialog box appears.
 - b) Click to select any check box that is not selected in the Show Severity section of the **General** tab.
- Step 3** Resolve any outstanding alarms. To view alarms for all the nodes in the network, click the **Alarms** tab.
- Note** The SFTWDOWN alarm is raised on the standby and active TNC/TNCE/TSC/TSCE/TNCS/TNCS-O cards during software download. The alarms clears as soon as the download is complete.

- Step 4** From the CTC View menu, choose **Go to Home View** to go to the node view.
- Step 5** Click the **Maintenance> Software** tabs.
- Step 6** Click the **Download** button. The Download Selection dialog box appears.
- Step 7** Locate the software files on the software CD or on your hard drive.
- Step 8** To open the folder, choose the file with the PKG extension and click **Open**.
- Step 9** From the list of compatible nodes, select the nodes where the software must be downloaded.
- Note** It is recommended that simultaneous software downloads on the section data communications channel (SDCC) be limited to eight nodes at a time, using the central node to complete the download. If more than eight concurrent software downloads are selected at a time, it is placed in a queue.
- Step 10** Click **OK**. The Download Status column monitors the progress of the download.
- Step 11** Return to your originating procedure (NTP).
-

DLP-U548 Activate the New Cisco NCS Software

Purpose	This task activates the software on each node in the network.
Tools/Equipment	PC or UNIX workstation
Prerequisite Procedures	DLP-U546 Download the NCS Software, on page 8
Required/As Needed	Required
Onsite/Remote	Onsite or remote
Security Level	Superuser



Note

It is recommended that the first node that is activated be connected via LAN. This ensures that the new CTC JAR files download to the workstation as quickly as possible.

If a node is provisioned to have no LAN access, the value is overridden in the case of node isolation. Additionally, if the node is not reachable, the LAN access is turned on. It is recommended that you avoid node isolation.

SUMMARY STEPS

1. If CTC is not already started, start CTC.
2. Record the IP address of the node. The IP address can be obtained either on the LCD or on the upper left corner of the CTC window.
3. Make sure that the alarm filter is turned off. To do so, complete the following:
4. Make sure that all cards that are part of a 1+1 or Y-cable protection group must be active on the working card of the protection group and no protection switches are occurring. Also, ensure that traffic carrying protect cards are in a standby state. To do so, complete the following:
5. In shelf view, click the **Maintenance** > **Software** tabs.
6. Verify that the version in the Protect Version column is R10.5.x.x.
7. Click the **Activate** button. The Activate dialog box displays a warning message.
8. Click **Yes** to proceed with the activation.
9. Click **OK**.
10. In CTC, choose **File** > **Update CTC**. The CTC software is updated. A CTC alert is displayed to restart CTC.
11. In CTC, choose **File** > **Exit**.
12. Start CTC again.
13. Click the **Launch CTC** button in the CTC launcher window.
14. Type the user name and password and click **Login**.
15. Return to your originating procedure (NTP).

DETAILED STEPS

-
- | | |
|---------------|---|
| Step 1 | If CTC is not already started, start CTC. |
| Step 2 | Record the IP address of the node. The IP address can be obtained either on the LCD or on the upper left corner of the CTC window. |
| Step 3 | Make sure that the alarm filter is turned off. To do so, complete the following: <ol style="list-style-type: none"> a) Click the Filter tool at the lower-left side of the window.
The Alarm Filter dialog box appears. b) Click to select any check box that is not selected in the Show Severity section of the General tab. |
| Step 4 | Make sure that all cards that are part of a 1+1 or Y-cable protection group must be active on the working card of the protection group and no protection switches are occurring. Also, ensure that traffic carrying protect cards are in a standby state. To do so, complete the following: <ol style="list-style-type: none"> a) In the node view, click Maintenance > Protection tabs. b) Select each protection group listed and view the active or standby status of each card in the Selected Group area. |
| Step 5 | In shelf view, click the Maintenance > Software tabs. |
| Step 6 | Verify that the version in the Protect Version column is R10.5.x.x. |
| Step 7 | Click the Activate button. The Activate dialog box displays a warning message. |
| Step 8 | Click Yes to proceed with the activation.
During node activation, all the common control cards (TNC/TNCE/TSC/TSCE/TNCS/TNCS-O) in the node reboot beginning with the standby card. As soon as the standby card recovers from the reboot, it signals the active card to reset |

as a standby card and the standby card transitions to active. An Activation Successful message indicates that the software is successfully activated.

Step 9 Click **OK**.

The connection between CTC and the node is lost and CTC displays the Network view. The INCOMPATIBLE-SW alarm is raised in CTC for the first node that is activated because CTC is unable to connect to the NE due to differing, incompatible versions of the software between CTC and the NE. A CTC alert is displayed to update the CTC software. To clear the INCOMPATIBLE-SW alarm, perform steps 10 through 12 only for the first node that is activated on the network.

During the activation process:

- The SYSBOOT alarms are raised when the common control cards and cross-connect card reset. These alarms clear when all the cards reset.

The activation process can take up to 30 minutes, depending on the number of cards installed in the node.

- The GCC-EOC, EOC, and EOC-E alarms are transient. These alarms are raised and cleared during the upgrade process when the control cards and line cards reset.
- Protect cards in the Y-cable protection group boot next, in the order that the protection group was created.
- Other line cards reset one after the other in the order of slot number.
- The USBSYNC alarm is raised when the synchronization operation between the controller card and the USB interface begins on the Cisco NCS nodes. The synchronization operation begins only after the SYSBOOT alarm has cleared. This alarm clears as soon as the synchronization is complete.

Caution Do not perform any of the following tasks until the alarm clears:

- Node reset
- Removal of controller cards
- FTP tasks such as backup, restore, or software download
- Activate or revert tasks

If you are upgrading remotely and cannot see the nodes, wait for 5 minutes for the process to complete, then check to ensure that related alarms have cleared before proceeding.

Step 10 In CTC, choose **File > Update CTC**. The CTC software is updated. A CTC alert is displayed to restart CTC.

Step 11 In CTC, choose **File > Exit**.

Step 12 Start CTC again.

Step 13 Click the **Launch CTC** button in the CTC launcher window. The new CTC applet loads. The login window is displayed.

Step 14 Type the user name and password and click **Login**.

Step 15 Return to your originating procedure (NTP).

DLP-U549 Delete Cached JAR Files

Purpose	This task deletes cached JAR files.
Tools/Equipment	PC or UNIX workstation
Prerequisite Procedures	None
Required/As Needed	You need to complete this task after you activate the first network node.
Onsite/Remote	Onsite or remote
Security Level	Maintenance user or higher

**Note**

Whenever the CTC software is upgraded or reverted, make sure that the browser and hard drive cache files are cleared.

SUMMARY STEPS

1. Delete cached files from your browser directory.
2. Close the browser.
3. On Windows systems, delete cached files from your workstation in this location:
4. Reopen the browser. You should now be able to connect to CTC.
5. Return to your originating procedure (NTP).

DETAILED STEPS**Step 1**

Delete cached files from your browser directory.

In Netscape:

- a) Select **Edit > Preferences**. Click the **Advanced** tab and click the **Cache** button.
- b) Click the **Clear Memory Cache** button, and click **OK**.
- c) Click the **Clear Disk Cache** button, and click **OK** twice.

In Microsoft Internet Explorer:

- a) Select **Tools > Internet Options**. The Internet Options dialog box appears.
- b) Click the **General** tab, and then click the **Delete Files** button.
- c) Select the **Delete all offline content** check box.
- d) Click **OK** twice.

Step 2

Close the browser.

Note Cached JAR files cannot be deleted from the hard drive until the browser is closed. Other applications that use JAR files must also be closed.

Step 3

On Windows systems, delete cached files from your workstation in this location:

C:\Documents and Settings\username\Application Data\Cisco\CTC

Step 4 Reopen the browser. You should now be able to connect to CTC.

Step 5 Return to your originating procedure (NTP).

DLP-U551 Set the Date and Time

Purpose	This task sets the date and time. If you are not using SNTP, the upgrade procedure can cause the Date/Time setting to change. Perform this task to reset the date and time at each node.
Tools/Equipment	PC or UNIX workstation
Prerequisite Procedures	None
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser



Note If you are using SNTP, this task is not applicable.

SUMMARY STEPS

1. In CTC node view, click the **Provisioning > General** tabs.
2. Set the correct date and time. Click **Apply** .
3. Repeat Steps 1 and 2 on all the remaining nodes.
4. Return to your originating procedure (NTP).

DETAILED STEPS

Step 1 In CTC node view, click the **Provisioning > General** tabs.

Step 2 Set the correct date and time. Click **Apply** .

Step 3 Repeat Steps 1 and 2 on all the remaining nodes.

Step 4 Return to your originating procedure (NTP).

NTP-U490 Install Public-Key Security Certificate

Purpose	This procedure installs the ITU Recommendation X.509 public-key security certificate. The public-key certificate is required to run software R4.1 or later.
Tools/Equipment	None
Prerequisite Procedures	This procedure is performed when logging into CTC. You cannot perform it at any other time.
Required/As Needed	This procedure is required to run software R4.1 or later.
Onsite/Remote	Onsite or remote
Security Level	Provisioning or higher

SUMMARY STEPS

1. Log into CTC.
2. If the Java Plug-in Security Warning dialog box appears, choose one of the following options:
3. Return to the software and database you had before activating the software, proceed with the [NTP-U491 Restore the Previous Software Load and Database](#), on page 16 procedure.

DETAILED STEPS

Step 1 Log into CTC.

Step 2 If the Java Plug-in Security Warning dialog box appears, choose one of the following options:

- Grant This Session—Installs the public-key certificate on the PC only for the current session. After the session ends, the certificate is deleted. This dialog box appears at the next login into the node.
- Deny—Denies permission to install the certificate. If this option is chosen, login into the node is denied.
- Grant always—Installs the public-key certificate and does not delete it after the session is over. It is recommended to use this option.
- View Certificate—The public-key security certificate is displayed.

After the completion of the security certificate dialog boxes, the web browser displays information about the Java and system environments. If this is the first login, a CTC downloading message appears while CTC files are downloaded to the computer. The process can take several minutes, if it is the first time. After the download, the CTC Login dialog box appears.

Step 3 Return to the software and database you had before activating the software, proceed with the [NTP-U491 Restore the Previous Software Load and Database](#), on page 16 procedure.

Stop. You have completed this procedure.

NTP-U491 Restore the Previous Software Load and Database

Purpose	This procedure returns to the software and database provisioning that was present before R10.5.x.x was activated. The software load and database cannot be restored to the previous version if the software on both the working and protect cards were upgraded to R10.5.x.x.
Tools/Equipment	PC or UNIX workstation
Prerequisite Procedures	"DLP-G46 Log into CTC" in the " Connect the PC and Log into the GUI " document. NTP-U487 Preparing to Upgrade to a New Release , on page 4 NTP-U488 Back Up the Cisco NCS Software Database , on page 5 NTP-U489 Upgrade the Cisco NCS Software , on page 7
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser


Note

Tasks to revert to a previous load are not part of the upgrade, and are provided here as a convenience to those wishing to perform a revert after an upgrade. If you have successfully performed all necessary procedures up to this point, you have finished the software upgrade.


Caution

If a node is set to secure, dual-IP mode, the database information is overwritten with this configuration and cannot be reverted to single-IP repeater mode.


Note

The defaults database files (db files) used to restore the basic configuration on a single non-multishelf node are shipped along with the standard R10.5.x.x software release package. For a multishelf set-up, the multishelf configuration must be unprovisioned to restore the basic configuration using the defaults database file. Also, the database backup from a multishelf system can be used to restore the same multishelf system.

SUMMARY STEPS

1. Complete the [DLP-U552 Revert to Protect Load](#), on page 17 task.
2. If the software revert to your previous release failed to restore the database, complete the [DLP-U553 Manually Restore the Database](#), on page 19 task.

DETAILED STEPS

-
- Step 1** Complete the [DLP-U552 Revert to Protect Load](#), on page 17 task.
- Step 2** If the software revert to your previous release failed to restore the database, complete the [DLP-U553 Manually Restore the Database](#), on page 19 task.
- Stop. You have completed this procedure.**
-

DLP-U552 Revert to Protect Load

Purpose	This task reverts to the software you were running prior to the last activation.
Tools/Equipment	PC or UNIX workstation
Prerequisite Procedures	NTP-U487 Preparing to Upgrade to a New Release , on page 4 NTP-U488 Back Up the Cisco NCS Software Database , on page 5 NTP-U489 Upgrade the Cisco NCS Software , on page 7
Required/As Needed	Required for revert
Onsite/Remote	Onsite or remote
Security Level	Superuser

**Note**

A revert from R 10.5.2.2 to R 10.5.2 causes the WSE card to undergo a cold reboot. In this case, traffic loss occurs for 7 to 10 minutes.

**Note**

To perform a supported (non-service-affecting) revert from R10.5.x.x, the release you want to revert to must have been working at the time you activated to the current software version on that node. Also, a supported revert automatically restores the node configuration at the time of the previous activation. The exception to this is when you have downloaded R10.5.x.x a second time, ensuring that no revert to a previous load can take place. In this case, the revert occurs, but is not traffic-affecting and does not change the database.

**Note**

Ensure that all cards that are part of a protection group (1+1 or Y-cable) are active on the working card of that protection group and that no protection switches are occurring. To ensure that traffic carrying protect cards are in a standby state, in the node view click the **Maintenance** tab, and view the Protect column for each of the listed protection groups. View the active/standby status of each card in the Maintenance tab.

SUMMARY STEPS

1. From the node view, click the **Maintenance** tab, then click the **Software** button.
2. Verify that the protect software displays the release you upgraded from.
3. Click the **Revert** button. Revert activates the protect software and restores the database from the previous load. A confirmation dialog box appears.
4. Click **OK**. This begins the revert process and drops the connection to the node.
5. Wait until the software revert completes before continuing.
6. Wait one minute before reverting another node.
7. After reverting all the nodes in the network, restart the browser and log back into the last node that was reverted. This uploads the appropriate CTC applet to your workstation.
8. Perform the [DLP-U549 Delete Cached JAR Files](#), on page 13 task.
9. Return to your originating procedure (NTP).

DETAILED STEPS

-
- Step 1** From the node view, click the **Maintenance** tab, then click the **Software** button.
- Step 2** Verify that the protect software displays the release you upgraded from.
- Step 3** Click the **Revert** button. Revert activates the protect software and restores the database from the previous load. A confirmation dialog box appears.
- Note** Any FPGA downgrades during the revert process may affect traffic. Configuration changes made after activation are lost when you revert.
- Step 4** Click **OK**. This begins the revert process and drops the connection to the node.
- Step 5** Wait until the software revert completes before continuing.
- Note** The system reboot may take up to 30 minutes to complete.
- Step 6** Wait one minute before reverting another node.

- Step 7** After reverting all the nodes in the network, restart the browser and log back into the last node that was reverted. This uploads the appropriate CTC applet to your workstation.
- Step 8** Perform the [DLP-U549 Delete Cached JAR Files](#), on page 13 task.
- Step 9** Return to your originating procedure (NTP).

DLP-U553 Manually Restore the Database

Purpose	This task manually restores the database. Use this task if you were unable to perform a revert successfully and need to restore the database.
Tools/Equipment	PC or UNIX workstation
Prerequisite Procedures	DLP-U552 Revert to Protect Load , on page 17
Required/As Needed	As needed
Onsite/Remote	Onsite or remote
Security Level	Superuser



Caution

Do not perform these steps unless the software revert failed.



Caution

This process is service affecting and should be performed during a maintenance window.

SUMMARY STEPS

1. In CTC node view, click the **Maintenance** tab, then click the **Database** button.
2. Click the **Restore** button. The DB Restore dialog box appears.
3. Click **Browse** to locate the database file stored on the workstation hard drive or on network storage.
4. Click the database file to highlight it and click **Open**. The DB Restore dialog box appears.
5. If you need a complete database restore, check the **Complete database (System and Provisioning)** checkbox.
6. Click **Ok**.
7. When the TNC/TNCE/TSC/TSCE cards have finished rebooting, log into CTC and verify that the database is restored.
8. Repeat Steps 1 to 7 for each node in the network.
9. Return to your originating procedure (NTP).

DETAILED STEPS

-
- Step 1** In CTC node view, click the **Maintenance** tab, then click the **Database** button.
- Step 2** Click the **Restore** button. The DB Restore dialog box appears.
- Step 3** Click **Browse** to locate the database file stored on the workstation hard drive or on network storage.
- Step 4** Click the database file to highlight it and click **Open**. The DB Restore dialog box appears.
- Step 5** If you need a complete database restore, check the **Complete database (System and Provisioning)** checkbox.
- Note** The following parameters are restored only when the **Complete Database (System and Provisioning)** checkbox is checked: node name, IP address, subnet mask and gateway, and IIOP port. If you change the node name and then restore a backed up database on this node, the circuits automatically map to the newly renamed node. It is recommended to keep a record of the old and new node names.
- Step 6** Click **Ok**.
The database is restored and the TNC/TNCE/TSC/TSCE cards reboot.
- Step 7** When the TNC/TNCE/TSC/TSCE cards have finished rebooting, log into CTC and verify that the database is restored. Wait one minute before restoring the next node.
- Step 8** Repeat Steps 1 to 7 for each node in the network.
You have now completed the manual database restore.
- Note** When the complete database is restored, the node does not report an event regarding the IP change; the node reboots and configures the new IP from the database. If the IP address being restored is not in the CTC network IP addressing scheme, you might lose visibility of the node. To resolve this, you must launch CTC with the IP mentioned in the table against the database backup. Refer to the table, "Manually Recorded Data" in the [NTP-U488 Back Up the Cisco NCS Software Database, on page 5](#) procedure for more information.
- Step 9** Return to your originating procedure (NTP).
-

NTP-U493 Upgrade to the NCS Software Using TL1

Purpose	This procedure upgrades the software to R10.5.x.x using TL1 rather than CTC.
Tools/Equipment	PC or UNIX workstation
Prerequisite Procedures	NTP-U487 Preparing to Upgrade to a New Release, on page 4 NTP-U488 Back Up the Cisco NCS Software Database, on page 5
Required/As Needed	Optional
Onsite/Remote	Onsite or remote
Security Level	Superuser

**Note**

To ensure that your syntax for each command is correct, see the TL1 syntax in the TL1 Command Guide for your particular release when issuing the following commands:

- ACT-USER
- COPY-RFILE
- OPR-PROTNSW-<OCN_TYPE>
- RTRV-COND-ALL
- RTRV-ALM-ALL
- RLS-PROTNSW-<OCN_TYPE>

**Note**

To download the software using TL1, an FTP server or a terminal emulation program like HyperTerminal must be running on the workstation.

**Note**

The download (COPY-RFILE) command is different when downloading software to a gateway network element (GNE) or an end network element (ENE) under the following conditions:

- FTP is being used.
- Server is set up with a login and password of FTPUSER1 and FTPUSERPASSWORD1.
- FTP server has an IP address of 10.1.1.1.
- FTP server is running on the standard FTP port.

**Note**

The GNE and ENE commands are as follows:

- When downloading software to a GNE, use a command similar to:

```
COPY-RFILE:NODENAME:RFILE-PKG:CTAG::TYPE=SWDL,
SRC="ftp://FTPUSER1:FTPUSERPASSWORD1@10.1.1.1/NCS2K-F-03xx-A04K-1405.pkg",
FORCEENABLE=YES;
```

- When downloading software to an ENE, use a command similar to:

```
COPY-RFILE:NODENAME:RFILE-PKG:CTAG::TYPE=SWDL,
SRC="ftp://FTPUSER1:FTPUSERPASSWORD1@10.111.11.1:2361@90.90.90.90/NCS2K-L-03xx-A04K-1405.pkg", FORCEENABLE=YES;
```

The ":2361" after the FTP server IP address 10.111.11.1 denotes port 21 on the server.

The software PKG file in the preceding example is located in the home directory of the FTP server. If the software PKG file is not in the home directory on the FTP server, insert the directory path where the software PKG resides between the last IP address and the PKG file in the command line. An example is shown here.

```
COPY-RFILE:NODENAME:RFILE-PKG:CTAG::TYPE=SWDL,
SRC="ftp://FTPUSER1:FTPUSERPASSWORD1@10.1.1.1:21@90.90.90.90/CISCO/SOFTWARE/NCS2K-F-03xx-A04K-1405.pkg",,FORCEENABLE=YES;
```

SUMMARY STEPS

1. To use TL1 commands, set up an FTP session or use HyperTerminal or a similar terminal emulation package to establish a session with the node.
2. Type the IP address for the node, using port 3083 or 2361.
3. Type the **ACT-USER** (Activate User) command in the TL1 request window to open a TL1 session:
4. Repeat Step 2 for each node to be upgraded.
5. Type the **COPY-RFILE** command in the TL1 window or, if you are using HyperTerminal, click **Transfer > Receive File**, and use the associated dialog box to select a file to receive. The **COPY-RFILE** command downloads a new software package from the location specified by the FTP URL into the inactive flash partition residing on the controller card.
6. Repeat Step 6 for all nodes to be upgraded.
7. Look for the **REPT EVT FXFR** message in the TL1 window. REPT EVT FXFR is an autonomous message used to report the start, completion, and completed percentage status of the software download. REPT EVT FXFR also reports any failure during the software upgrade, including invalid package, invalid path, invalid user ID/password, and loss of network connection.
8. Complete "[NTP-U487 Preparing to Upgrade to a New Release, on page 4](#)" procedure on page 8 for each node to be upgraded.
9. Complete [NTP-U488 Back Up the Cisco NCS Software Database, on page 5](#) for each node to be upgraded.
10. Verify that there are no outstanding alarms or conditions on each node using the following commands:
11. Starting at the node farthest from the GNE, type the **APPLY** command to activate the system software.
12. After all nodes have been activated, log in using CTC or Telnet and verify there are no outstanding alarms.
13. To back up the database for the working software load, see [NTP-U488 Back Up the Cisco NCS Software Database, on page 5](#) in order to preserve the database for the current software.

DETAILED STEPS

-
- Step 1** To use TL1 commands, set up an FTP session or use HyperTerminal or a similar terminal emulation package to establish a session with the node.
- Step 2** Type the IP address for the node, using port 3083 or 2361.
The terminal emulation interface displays a warning message and a command prompt (usually >). You can enter TL1 commands at this prompt.
- Step 3** Type the **ACT-USER** (Activate User) command in the TL1 request window to open a TL1 session:
ACT-USER: [<TID>]:<uid>:<CTAG>::<pid>;
where:
- <TID> is the target identifier (optional).
 - <uid> is the Operation Support System (OSS) profile user ID (required).

- <CTAG> is the correlation tag that correlates command and response messages (required).
- <pid> is the password identifier (required).

For example, in the TL1 command:

```
ACT-USER::CISCO99:100::PASSWORD;
```

CISCO99 is the user ID, 100 is the correlation tag (used to correlate commands to command responses), and PASSWORD is the password associated with the user ID.

A response message containing the CTAG that you specified indicates the completion status of the command.

Step 4 Repeat Step 2 for each node to be upgraded.

Step 5 Type the **COPY-RFILE** command in the TL1 window or, if you are using HyperTerminal, click **Transfer > Receive File**, and use the associated dialog box to select a file to receive. The **COPY-RFILE** command downloads a new software package from the location specified by the FTP URL into the inactive flash partition residing on the controller card.

```
COPY-RFILE: [<TID>]:<src>:<CTAG>::TYPE=<xfertype>, [SRC=<src1>], [DEST=<dest>], [OVRT=<ovrt>], [FTID=<fttd>], [FORCEENABLE=<FORCEENABLE>];
```

where:

- <TID> is the target identifier (optional).
- <src> is the source AID (required).
- <CTAG> is the correlation tag that correlates command and response messages (required).
- <xfertype> is the file transfer protocol (required).
- <src1> specifies the source of the file to be transferred (required).
- <dest> is the destination of the file to be transferred (required).
- <ovrt> is overwrite. If <OVRT> is yes, then files should be overwritten. If <OVRT> is no, then file transfers will fail if the file already exists at the destination (required).
- <fttd> is the URL format (required).
- <FORCEENABLE> indicates whether the command should proceed even if there are Database Out of Sync alarms.

Step 6 Repeat Step 6 for all nodes to be upgraded.

Step 7 Look for the **REPT EVT FXFR** message in the TL1 window. REPT EVT FXFR is an autonomous message used to report the start, completion, and completed percentage status of the software download. REPT EVT FXFR also reports any failure during the software upgrade, including invalid package, invalid path, invalid user ID/password, and loss of network connection.

The format of the message is:

```
REPT EVT FXFR
```

```
SID DATE TIME
```

```
A ATAG REPT EVT FXFR
```

```
"<FILENAME>,<FXFR_STATUS>,<FXFR_RSLT>,<BYTES_XFRD>"
```

```
;
```

where:

- <FILENAME> indicates the transferred file path name and is a string.

- <FXFR_STATUS> indicates the file transferred status: Start, IP (in progress), or COMPLD.
- <FXFR_RSLT> indicates the file transferred result: success or failure. FXFR_RSLT is optional (the FXFR_RSLT is only sent when the FXFR_STATUS is COMPLD).
- <BYTES_XFRD> indicates the percentage transfer complete and is optional (the BYTES_XFRD is only sent when the FXFR_STATUS is IP or COMPLD).

Step 8 Complete “[NTP-U487 Preparing to Upgrade to a New Release, on page 4](#)” procedure on page 8 for each node to be upgraded.

Step 9 Complete [NTP-U488 Back Up the Cisco NCS Software Database, on page 5](#) for each node to be upgraded.

Step 10 Verify that there are no outstanding alarms or conditions on each node using the following commands:

```
RTRV-PROTNSW-<OCN_TYPE>: [<TID>]:<AID>:<CTAG>[::::];
```

where:

- <TID> is the target identifier (optional)
- <AID> is the access identifier that indicates the facility in the node to which the switch request is directed (must not be null) (required).
- <TYPEREQ> is the type of condition to be retrieved. A null value is equivalent to ALL.

```
RTRV-ALM-ALL: [<TID>]: [<AID>]:<CTAG>:: [<NTFCNCDE>], [<CONDITION>], [<SRVEFF>] [, , ,];
```

where:

- <TID> is the target identifier
- <AID> is the Access IDentifier that indicates the facility in the node to which the switch request is directed (must not be null).
- <CTAG> is the correlation tag that correlates command and response messages (optional).
- <NTFCNCDE> is a notification code. A null value is equivalent to ALL.
- <CONDITION> is the type of alarm condition. A null value is equivalent to ALL.
- <SRVEFF> is the effect on service caused by the alarm condition. A null value is equivalent to ALL.

Resolve all issues before proceeding.

Note You can activate only one node at a time. However, in a parallel upgrade you can begin activation of the next node as soon as the controller cards for the current node have rebooted successfully. If you wish to perform a parallel upgrade remotely, wait five minutes for the controller cards to complete the reboot.

Step 11 Starting at the node farthest from the GNE, type the **APPLY** command to activate the system software.

```
APPLY: [<TID>]::<CTAG>[::<MEM_SW_TYPE>]: [FORCEENABLE=<FORCEENABLE>];
```

where:

- <TID> is the target identifier (optional).
- <CTAG> is the correlation tag that correlates command and response messages.
- <MEM_SW_TYPE> indicates a memory switch action during the software upgrade. MEM_SW_TYPE is ACT for activate. MEM_SW_TYPE is RVRT to revert.
- <FORCEENABLE> indicates whether the command should proceed even if there are Database Out of Sync alarms.

If the command is successful, the appropriate flash is selected and the TNC/TNCE/TSC/TSCE/TNCS/TNCS-O card reboots.

The following occurs:

- Each card in the node reboots, beginning with the standby TNC/TNCE/TSC/TSCE card. When the standby TNC/TNCE/TSC/TSCE/TNCS/TNCS-O card reboots, it signals to the active TNC/TNCE/TSC/TSCE card that it is ready to take over. When the active TNC/TNCE/TSC/TSCE/TNCS/TNCS-O receives this signal, it resets itself, and the standby TNC/TNCE/TSC/TSCE takes over and transitions to active. The pre-upgrade version of the TNC/TNCE/TSC/TSCE/TNCS/TNCS-O card is now the standby TNC/TNCE/TSC/TSCE.
- While the second TNC/TNCE/TSC/TSCE/TNCS/TNCS-O is rebooting, the stand by cross-connect card (SONET/SDH only) reboots, and then the active cross-connect card (SONET only) reboots.
- Any cards in Y-cable protection groups boot next, one at a time (protect card first), in order of first creation (refer to the CTC protection group list for order of first creation).
- A system reboot (SYSBOOT) alarm is raised while activation is in progress (following the TNC/TNCE/TSC/TSCE/TNCS/TNCS-O and cross-connect card resets). When all cards have reset, this alarm clears. The complete activation process can take up to 30 minutes, depending on how many cards are installed.

After the common control cards finish resetting and all associated alarms clear, you can safely proceed to the next step. (If you are upgrading remotely and cannot see the nodes, wait for 5 minutes for the process to complete, then check to ensure that related alarms have cleared before proceeding.) Repeat this step for each node that will be upgraded, moving from the furthest node from the GNE toward the GNE itself, which should be activated last.

Note You might have to log in to each node again to activate the software.

Step 12 After all nodes have been activated, log in using CTC or Telnet and verify there are no outstanding alarms.

Step 13 To back up the database for the working software load, see [NTP-U488 Back Up the Cisco NCS Software Database](#), on [page 5](#) in order to preserve the database for the current software.

Stop. You have completed this procedure.

Related Documentation

Use this document in conjunction with the following publications:

- Release notes:
http://www.cisco.com/en/US/products/ps13295/prod_release_notes_list.html
- TL1 command guides:
http://www.cisco.com/en/US/products/ps13295/prod_command_reference_list.html
- Configuration guides:
http://www.cisco.com/en/US/products/ps13295/products_installation_and_configuration_guides_list.html
- Troubleshooting guides:
http://www.cisco.com/en/US/products/ps13295/prod_troubleshooting_guides_list.html

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly What's New in Cisco Product Documentation, which also lists all new and revised Cisco technical documentation, at: <http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the What's New in Cisco Product Documentation as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <http://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

