



## RMV Commands

---

This chapter provides remove (RMV) commands for the Cisco ONS 15454 SDH.

### 19.1 RMV-<MOD2>

The Remove 10GFC, 10GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, CLNT, D1VIDEO, DS3I, DV6000, E1, E3, E4, ESCON, ETRCLO, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, STM4, STM64, STM1, STM16, OCH, OMS, OTS, POS, STM1E, VC3, VC44C, VC38C, VC464C, VC48C, STS36C, VC4, VC416C, VC42C, VC43C, or VC12 (RMV-<MOD2>) command removes a facility from service. See [Table 27-1 on page 27-1](#) for supported modifiers by platform.

---

**Usage Guidelines** None

---

**Category** Ports

---

**Security** Maintenance

---

**Input Format** RMV-<MOD2>:[<TID>]:<AID>:<CTAG>[::];

---

**Input Example** RMV-E1:CISCO:FAC-1-1:1;

---

**Input Parameters** <AID> [Access identifier from the “25.1 ALL” section on page 25-1.](#)

---

### 19.2 RMV-EQPT

The Remove Equipment (RMV-EQPT) command removes equipment from the In Service state and places it into the Maintenance state.

<b>Usage Guidelines</b>	This command is applicable only to equipment that is in transition from the In-Service state to the Maintenance state.		
<b>Category</b>	Equipment		
<b>Security</b>	Maintenance		
<b>Input Format</b>	RMV-EQPT:[<TID>]:<AID>:<CTAG>[::];		
<b>Input Example</b>	RMV-EQPT:CISCO:SLOT-1:1;		
<b>Input Parameters</b>	<table><tr><td>&lt;AID&gt;</td><td>Access identifier from the <a href="#">“25.12 EQPT”</a> section on page 25-14.</td></tr></table>	<AID>	Access identifier from the <a href="#">“25.12 EQPT”</a> section on page 25-14.
<AID>	Access identifier from the <a href="#">“25.12 EQPT”</a> section on page 25-14.		