



CHAPTER 19

RMV Commands

This chapter provides remove (RMV) commands for the Cisco ONS 15454, Cisco ONS 15310-CL, Cisco ONS 15310-MA, and Cisco ONS 15600.

19.1 RMV-<MOD2>

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Remove 10GFC, 10GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, CLNT, D1VIDEO, DS1, DV6000, E1, E3, E4, EC1, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, OC12, OC192, OC3, OC48, OCH, OMS, OTS, POS, STS1, STS12C, STS18C, STS192C, STS24C, STS36C, STS3C, STS48C, STS6C, STS9C, T1, T3, VC12, VC3, VT1, or VT2 (RMV-<MOD2>) command removes a facility from service.

Usage Guidelines

See [Table 28-1 on page 28-1](#) for supported modifiers by platform.

Category

Ports

Security

Maintenance

Input Format

RMV-<MOD2>:[<TID>]:<AID>:<CTAG>[::];

Input Example

RMV-EC1:CISCO:FAC-1-1:1;

Input Parameters

<AID> [Access identifier from the “26.1 ALL” section on page 26-1](#)

19.2 RMV-EQPT

(Cisco ONS 15454, ONS 15327, ONS 15310-CL, ONS 15310-MA, ONS 15600) The Remove Equipment (RMV-EQPT) command removes equipment from the In Service (IS) state and places it into the Maintenance (MT) state.

Usage Guidelines This command is only applicable to equipment that is in transition from the IS state to the MT state.

Category Equipment

Security Maintenance

Input Format RMV-EQPT:[<TID>]:<AID>:<CTAG>[::];

Input Example RMV-EQPT:CISCO:SLOT-1:1;

Input Parameters <AID> Access identifier from the [“26.14 EQPT” section on page 26-31](#).