



# CHAPTER 19

## RMV Commands

---

This chapter provides remove (RMV) commands for the Cisco ONS 15310-MA SDH, Cisco ONS 15454 SDH, and Cisco ONS 15600 SDH.

### 19.1 RMV-<MOD2>

The Remove 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS3I, DV6000, DVBASI, E1, E3, E4, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, STM4, STM64, STM1, STM16, OCH, OMS, OTS, OTU3, POS, STM1E, VC3, VC44C, VC38C, VC464C, VC48C, STS36C, VC4, VC416C, VC42C, VC43C, or VC12 (RMV-<MOD2>) command removes a facility from service. See [Table 27-1 on page 27-1](#) for supported modifiers by platform.



#### Note

The following modifiers are not supported on the Cisco ONS 15310 MA SDH platform: 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS3I, DV6000, E4, ESCON, ETRCLO, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, STM64, OCH, OMS, OTS, OTU3, STM1E, VC38C, and VC464C.

---

**Usage Guidelines** None

---

**Category** Ports

---

**Security** Maintenance

---

**Input Format** RMV-<MOD2>:[<TID>]:<AID>:<CTAG>[::];

---

**Input Example** RMV-E1:CISCO:FAC-1-1:1;

**Cisco ONS 15310 MA SDH**

RMV-STM1::STM1-3-1-1:59::;

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“25.1 ALL”</a> section on page 25-1.
-------------------------	-------	---

## 19.2 RMV-EQPT

The Remove Equipment (RMV-EQPT) command removes equipment from the In Service state and places it into the Maintenance state.

<b>Usage Guidelines</b>	This command is applicable only to equipment that is in transition from the In-Service state to the Maintenance state.
-------------------------	--

**Note**

This command can be executed only if the equipment is in the unlocked, unlocked-disabled, mismatchOfequipment or unlocked-disabled,notInstalled state.

<b>Category</b>	Equipment
-----------------	-----------

<b>Security</b>	Maintenance
-----------------	-------------

<b>Input Format</b>	RMV-EQPT:[<TID>]:<AID>:<CTAG>[::];
---------------------	------------------------------------

<b>Input Example</b>	RMV-EQPT:CISCO:SLOT-1:1;
----------------------	--------------------------

<b>Input Parameters</b>	<AID>	Access identifier from the <a href="#">“25.12 EQPT”</a> section on page 25-25.
-------------------------	-------	--