



CHAPTER 19

RMV Commands

This chapter provides remove (RMV) commands for the Cisco ONS 15454 SDH, Cisco ONS 15454 M2, Cisco ONS 15454 M6, and Cisco ONS 15600 SDH.



Note

All commands supported on the Cisco ONS 15454 SDH platform are also supported on Cisco ONS 15454 M2 and Cisco ONS 15454 M6 platforms.

19.1 RMV-<MOD2>

The Remove 10GFC, 10GIGE, 40GIGE, 1GFC, 1GFICON, 2GFC, 2GFICON, 5GIB, 8GFC, CLNT, D1VIDEO, DS3I, DV6000, DVBASI, E1, E3, E4, ESCON, ETRCLO, ETH, FSTE, G1000, GFPOS, GIGE, HDTV, ISC1, ILK, ISCCOMPAT, ISC3PEER2R, ISC3PEER1G, ISC3PEER2G, STM4, STM64, STM1, STM16, OCH, OMS, OTS, OTU3, POS, STM1E, VC3, VC44C, VC38C, VC464C, VC48C, STS36C, VC4, VC416C, VC42C, VC43C, or VC12 (RMV-<MOD2>) command removes a facility from service. See [Table 27-1 on page 27-1](#) for supported modifiers by platform.

Usage Guidelines None

Category Ports

Security Maintenance

Input Format RMV-<MOD2>:[<TID>]:<AID>:<CTAG>[::];

Input Example RMV-E1:CISCO:FAC-1-1-1;

Input Parameters <AID> Access identifier from the [“25.1 ALL” section on page 25-1](#).

19.2 RMV-EQPT

The Remove Equipment (RMV-EQPT) command removes equipment from the In Service state and places it into the Maintenance state.

Usage Guidelines

This command is applicable only to equipment that is in transition from the In-Service state to the Maintenance state.



Note

This command can be executed only if the equipment is in the unlocked, unlocked-disabled, mismatchOfequipment or unlocked-disabled,notInstalled state.

Category

Equipment

Security

Maintenance

Input Format

RMV-EQPT:[<TID>]:<AID>:<CTAG>[::];

Input Example

RMV-EQPT:CISCO:SLOT-1:1;

Input Parameters

<AID>	Access identifier from the “25.13 EQPT” section on page 25-24.
--------------------	--
