



View Inventory

This chapter describes the tasks to view the inventory details of a single or multiple racks.

Figure 1: View Inventory

The screenshot shows the Cisco Optical Site Manager interface. At the top, it displays the Cisco logo, the text 'Cisco Optical Site Manager', and the user 'defaultNode'. The date and time are '08/29/2024, 13:41 (UTC+00:00)'. Below this is a navigation sidebar with icons for home, search, notifications, settings, and user profile. The main content area is titled 'Inventory' and shows a table of equipment details. The table has columns for Location, UID, Display Name, Equipment Type, Connected To, Actual Type, Serial No, Product ID, HW Part No, and CLE. The data is fetched at '08/29/2024, 13:41:21 (UTC+00:00)' and displays 47 of 47 items. The table lists various equipment types such as NCS1010-SA, NCS1K-OLT-C, NCS1K-CNTRL-K9, PPM-1-PORT, NCS1K-FAN, and NCS1010-AC-PSU. At the bottom, there is a pagination control showing '1 - 47 of 47 items' and '50 items per page'.

Location	UID	Display Name	Equipment Type	Connected To	Actual Type	Serial No	Product ID	HW Part No	CLE
1-Chassis [R1-P1]	1	1/1	NCS1010-SA		NCS1010-SA		NCS1010-SA		WO
1-0 [R1 - P1]	1	1/1	NCS1K-OLT-C		NCS1K-OLT-C		NCS1K-OLT-C		WO
1-RP0 [R1 - P1]	1	1/1	NCS1K-CNTRL-K9		NCS1010-CNTRL-K9		NCS1010-CNTRL-K9		WO
1-RP0-PTP0 [R1 - P1]	1	1/1	PPM-1-PORT						
1-RP0-PTP1 [R1 - P1]	1	1/1	PPM-1-PORT						
1-RP0-UDCO [R1 - P1]	1	1/1	PPM-1-PORT						
1-RP0-UDC1 [R1 - P1]	1	1/1	PPM-1-PORT						
1-FAN-FT0 [R1 - P1]	1	1/1	NCS1K-FAN		NCS1010-FAN		NCS1010-FAN		WO
1-FAN-FT1 [R1 - P1]	1	1/1	NCS1K-FAN		NCS1010-FAN		NCS1010-FAN		WO
1-PWR-PM0 [R1 - P1]	1	1/1	NCS1K-PSU		NCS1010-AC-PSU		NCS1010-AC-PSU		WO
1-PWR-PM1 [R1 - P1]	1	1/1	NCS1K-PSU		NCS1010-AC-PSU		NCS1010-AC-PSU		WO
1-Chassis-BackPlane [R1 - P1]	1	1/1							

- [View inventory of all racks or chassis, on page 1](#)
- [View inventory of a rack or chassis, on page 2](#)

View inventory of all racks or chassis

You can view inventory details of all racks and chassis, such as location, display name, and equipment type. Follow these steps to view the inventory of all the racks and chassis:

Before you begin

[Log into Cisco Optical Site Manager](#)

Procedure

-
- Step 1** Click **Inventory**.
The **Inventory** page appears and displays the inventory details.
- Step 2** Click the **Export to Excel** icon to export and download the inventory information to an Excel file (optional).
-

View inventory of a rack or chassis

You can view inventory details, such as location, display name, and equipment type, for a specific rack or chassis.

Follow these steps to view the inventory details of a rack or chassis:

Before you begin

[Log into Cisco Optical Site Manager](#)

Procedure

-
- Step 1** Click **Topology** in the left panel.
- Step 2** Perform one of these steps:
- Double-click the rack name from the rack view.
 - Right-click the chassis from the rack view and select **Open**
- Step 3** Click the **Inventory** tab.
- Step 4** Click the **Export to Excel** icon to export and download the inventory information to an Excel file (optional).
-

The **Inventory** page appears and displays the inventory details.