



View Inventory

This chapter describes the tasks to view the inventory details of a single or multiple racks.

- [View Inventory of All Racks and Chassis, on page 1](#)
- [View Inventory of Single Rack and Chassis, on page 2](#)

View Inventory of All Racks and Chassis

You can view inventory of all the racks and chassis used on the network from the **Inventory** tab. To view the inventory of all the racks and chassis, perform these steps:

Before you begin

[Log into Cisco Optical Site Manager](#)

Procedure

Step 1 Click **Inventory** in the left panel.

The Inventory page appears and displays the following details:

- **Location**—Displays the location where the equipment is installed.
- **UID**—Displays the unique identifier of each component.
- **Display Name**—Displays the display name of each component.
- **Equipment Type**—Displays the type of equipment.
- **Connected To**—Displays the passive unit associated with the USB port of the chassis.
- **Actual Type**—Displays the specific card name.
- **Serial No**—Displays the equipment serial number.
- **Product ID**—Displays the manufacturing product identifier.
- **HW Part No**—Displays the hardware part number.
- **CLEI Code**—Displays the Common Language Equipment Identifier (CLEI) code.

- **Version ID**—Displays the manufacturing version identifier.
- **HW Rev**—Displays the hardware revision number.
- **Boot ROM Rev**—Displays the boot read-only memory (ROM) revision number.
- **Manufacturing Date**—Displays the manufacturing date of the component.

Step 2 (Optional) Click the **Export to Excel** icon to export and download the inventory information to an Excel file.

View Inventory of Single Rack and Chassis

To view the inventory details of a single rack or chassis, such as location, display name, and equipment type, perform these steps:

Before you begin

[Log into Cisco Optical Site Manager](#)

Procedure

Step 1 Click **COSM Topology** in the left panel.
The COSM Topology page appears.

Step 2 Click the rack name from the Rack view.

Step 3 Right-click the chassis from the Rack view and select **Open**

The Inventory page appears and displays the following details:

- **Location**—Displays the location where the equipment is installed.
- **UID**—Displays the unique identifier of each component.
- **Display Name**—Displays the display name of each component.
- **Eqpt Type**—Displays the type of equipment.
- **Connected To**—Displays the passive unit associated with the USB port of the chassis.
- **Actual Eqpt Type**—Displays the specific card name.
- **Serial No**—Displays the equipment serial number.
- **Product ID**—Displays the manufacturing product identifier.
- **HW Part No**—Displays the hardware part number.
- **CLEI Code**—Displays the Common Language Equipment Identifier (CLEI) code.
- **Version ID**—Displays the manufacturing version identifier.
- **HW Rev**—Displays the hardware revision number.
- **Boot ROM Rev**—Displays the boot read-only memory (ROM) revision number.

- **Manufacturing Date**—Displays the manufacturing date of the selected rack or chassis.

Step 4 (Optional) Click the **Export to Excel** icon to export and download the inventory information to an Excel file.
