

15216 FlexLayer Hybrid

Numerics	15216 FlexLayer Hybrid
100G 4-119	configuration 2-3
100G-CK-LC-C 1-38	15216-MD-48-EVEN
100GE or OTU4 2-25	48 or 96 channel hybrid networks 4-115
Card Constraints 4-143	placement rules 4-114
	15216-MD-48-ODD
Card Placement Pulse 4.130	48 or 96 channel hybrid networks 4-115
Card Placement Rules 4-130	placement rules 4-114
Card Slot Constraints 4-121	80-WXC
Card Slots 4-119	site design rules (table) 4-36
Importing 2-77	80-WXC-C card 4-11
Regeneration Configurations 4-145	
Use Client Payg 4-2	Α
100G-LC-C card	
card constraints 4-143	A2A Finalized Circuit report
operational modes 4-143, 4-145	viewing 3-33
placement rules 4-130	activate AR-XPE card 1-35
regeneration configurations 4-145	adding
100G-ME-C card	fiber spans 2-15
card constraints 4-143	notes 2-18
operational modes 4-143	Remote Spur 4-164
placement rules 4-130	sites 2-14
regeneration configurations 4-145	user profiles 1-45
10X10G-LC card	adding sides
card constraints 4-143	multi-degree site 2-4, 2-15
fiber-switched protection 1-7	alien interface
operational modes 4-143, 4-145	defining 1-38
placement rules 4-130	Gaussian cross-talk D-6
regeneration configurations 4-145	scale factors D-4
15216-EF-40-EVEN 2-16	single-interfering cross-talk D-5
placement rules 4-114	working area D-1
15216-EF-40-ODD 2-16, 4-12	alien shelf placement rules 4-126
placement rules 4-114	amplifier

OPT-EDFA-17 4-12, 4-14	operational modes 4-143, 4-145
OPT-EDFA-24 4-12, 4-14	placement rules 4-130
Analyzer pane, description A-9	changing network state
analyzing a network design 2-54	install 2-57
any-to-any, description 1-11	upgrade 2-57
arranging sites 4-155	channel rules
AR-XPE card 1-35	traffic subnet 4-56
ASR 2-25	chassis
ASR Bundle 2-67	M12 1-1
	M15 1-1
В	M2 1-1
ь	M6 1-1
BoM	chassis placement rules 4-110
Excel report 2-63	chassis selection rules 4-7
BOM report	circuit, description 1-10
exporting 2-70	Cisco TransportPlanner
network 2-64	GUI description A-1
site 2-66	client-based 1+1 protection, description 1-5
spare part 2-68	client cards
BoM report	licensing 1-38
totals 2-63	Client Payg 1-38
	client service support 1-7
С	closing a project 1-22
	colorless demand 2-22
card constrains	colorless omnidirectional 2-22
100G-LC-C card 4-143	colorless property 2-21, 4-163
100G-ME-C card 4-143	enable 2-31, 4-64
card constraints	color scheme 1-25
10X10G-LC card 4-143	Connection Viewer A-5
CFP-LC card 4-143	contentionless functionality 2-22
card movement rules 4-155	Controller type 1-32, 4-8
card placement rules 4-128	copy, description 2-56
card rules 4-136	copying price lists 2-74
card slot constraints 4-120	copy network and go back to design mode 2-56
Cards supported by NCS 2015 B-9	Copy Properties 2-32
CD Documentation 1-38	Copy ROADM demand properties 2-32
CD robustness 3-26	creating
CFP-LC card	Ethernet aggregated demand 2-34
card constraints 4-143	maintenance center 4-58

network copy 2-56	Paper 1-38
network design JPEG 2-62	door 1-33, 4-5
optical subnet 2-16	double ring site arrangement 4-158
point-to-point demands 2-23	
price lists 2-70	E
P-ring demands 2-27	_
ROADM demands 2-29	EDFA amplifiers 4-12, 4-14
TDM aggregated demand 2-41	edit channel plan
traffic subnet 2-19	traffic subnet 4-56
CRS 1-9	editing
CTP cache	Ethernet aggregated demand 4-65
deleting 1-22	fiber spans 4-74, 4-77
	network parameters 4-1
D	point-to-point demand 4-58
	P-ring demand 4-61
database file	project parameters 4-1
importing 1-44	ROADM demand 4-63
deep door 1-33, 4-5	service demand 4-56
default layout, resetting 1-45	side label 4-55
defining a third-party interface 1-38	sides, sides
deleting	editing 4-162, 4-163
fiber spans 4-170	sites 4-3
network 4-170	sites, sites
networks 4-170	editing 4-162
notes 4-167	TDM aggregated demand 4-69
price lists 2-74	EDRA 4-12
sites 4-167	PRE, BST and RAMAN 4-13
traffic subnet 4-169	ellipse site arrangement 4-155
demand	Enable NCS 1-30
add site 4-73	NCS PIDs 2-9
add sites 4-73	Encryption
mapping 2-78	Available Service Types 1-9
remove site 4-73	Card Constraints 4-145
remove sites 4-73	Card Operation Modes 4-145
demand, description 1-11	Card Regeneration Configurations 4-145
Design-Analyzed state, description 2-55	enabling and disabling 2-24
design state, description 2-55	ROADM Platform Parameters 2-33
Documentation	Supported Plugables B-8
CD 1-38	Viewing layout of single site 3-17

Ethernet aggregated demand	Н
creating 2-34	
editing 4-65	Hide BoM discount 1-38
Ethernet Aggregated Demand report 3-31	Hide BoM price 1-38
Evolved Mesh 4-6	hybrid configuration 1-46
export	
network 2-77	<u> </u>
xml to CTP 2-77	
exporting	import
BOM 2-70	network 2-77, 2-78
fiber spans 4-80	xml to node 2-79
Export XML 2-77	importing
	database files 1-44
F	Osmine configuration file 1-44
•	Sherpa design 2-75
FDCU 1-36, 4-14, 4-15, 4-18	Importing Osmine Configuration File 1-44
fiber	Include SW License 1-38
mapping 2-78	Inline DCU
fiber spans	Flex SMR 2-88
adding a span 2-15	Install-Analyzed state, description 2-56
deleting 4-170	Installation Parameters report 3-5
editing 4-74, 4-77	Installing CTP 1-18
exporting 4-80	Linux 1-18
Fiber-switched protection 1-5	Windows 1-18
fiber-switched protection, description 1-5	Install state, description 2-56
Filler card 4-7	interface operative area D-1
FLD-4 units 4-19	Internal Connections report 3-8
Flexible Site Type 4-11	
FlexLayer placement rules 4-128	J
Flex Spectrum 4-6	G
	JPEG, network design 2-62
	<u> </u>
G	L
Gaussian cross-talk D-6	_
Global Discount 1-38	layout adjustments
graphical display, setting 1-24	constraints 4-153
guard band 1-35	M2 4-152
S	Layout Movement 4-80
	performing 4-81

prerequisites 4-81	fiber 2-78
restrictions 4-80	node elements 2-78
layout report 3-15	site 2-78
layout rules	Maximum Rectangle View 4-159
DCU 4-134	menu bar and toolbar description A-2
hybrid site 4-133	meshed topology 5-3
multidegree 4-134	MF-MPO-16LC 4-6
OIC multidegree nodes 4-136	MF-MPO-16LC Cable 4-6
OTS units 4-134	modifying unit ID 3-16
OXC multidegree sites 4-136	mouse shortcuts A-10
Layout Templates 4-81	MPO 16-2x8 Split Cable 4-5
Components 4-81	MPO16LC 4-6
ports 4-94	MPO-MPO cables 1-9
Sample XML smippets 4-88	MSM External Switch 4-5
Supported configurations 4-97	multi-degree site
supported configurations	adding sides 2-4
cards 4-105	multi-select 1-13
Using 4-94	multishelf placement rules 4-122
licensing	Multi-side Editor 4-171
.1' 4 1 4 .00	
client cards 1-38	
Limitations 2-82	N
	N
Limitations 2-82	N network
Limitations 2-82 linear topologies 5-1	
Limitations 2-82 linear topologies 5-1 linear topology 5-2	network
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21	network BOM 2-64
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading	network BOM 2-64 deleting 4-170
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21	network BOM 2-64 deleting 4-170 editing 4-1
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21 price lists 2-73	network BOM 2-64 deleting 4-170 editing 4-1 export 2-77
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21 price lists 2-73 locked state 2-59	network BOM 2-64 deleting 4-170 editing 4-1 export 2-77 import 2-77, 2-78
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21 price lists 2-73	network BOM 2-64 deleting 4-170 editing 4-1 export 2-77 import 2-77, 2-78 loading 1-21
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21 price lists 2-73 locked state 2-59	network BOM 2-64 deleting 4-170 editing 4-1 export 2-77 import 2-77, 2-78 loading 1-21 unloading 1-21
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21 price lists 2-73 locked state 2-59	network BOM 2-64 deleting 4-170 editing 4-1 export 2-77 import 2-77, 2-78 loading 1-21 unloading 1-21 network analysis
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21 price lists 2-73 locked state 2-59 M M2 and M6 shelf placement rules 4-125	network BOM 2-64 deleting 4-170 editing 4-1 export 2-77 import 2-77, 2-78 loading 1-21 unloading 1-21 network analysis server E-1
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21 price lists 2-73 locked state 2-59 M M2 and M6 shelf placement rules 4-125 maintenance	network BOM 2-64 deleting 4-170 editing 4-1 export 2-77 import 2-77, 2-78 loading 1-21 unloading 1-21 network analysis server E-1 Network Creation wizard 2-3
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21 price lists 2-73 locked state 2-59 M M2 and M6 shelf placement rules 4-125 maintenance contracts 2-74	network BOM 2-64 deleting 4-170 editing 4-1 export 2-77 import 2-77, 2-78 loading 1-21 unloading 1-21 network analysis server E-1 Network Creation wizard 2-3 network design
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21 price lists 2-73 locked state 2-59 M M2 and M6 shelf placement rules 4-125 maintenance contracts 2-74 creating a maintenance center 4-58	network BOM 2-64 deleting 4-170 editing 4-1 export 2-77 import 2-77, 2-78 loading 1-21 unloading 1-21 network analysis server E-1 Network Creation wizard 2-3 network design analyzing 2-54
Limitations 2-82 linear topologies 5-1 linear topology 5-2 Link Availability report 3-21 loading network 1-21 price lists 2-73 locked state 2-59 M M2 and M6 shelf placement rules 4-125 maintenance contracts 2-74 creating a maintenance center 4-58 Manual Regeneration 1-3	network BOM 2-64 deleting 4-170 editing 4-1 export 2-77 import 2-77, 2-78 loading 1-21 unloading 1-21 network analysis server E-1 Network Creation wizard 2-3 network design analyzing 2-54 constraints 1-3

process overview 1-3	node setup 2-79
putting a network in the Install state 2-57	notes
putting a network in the upgrade state 2-57	adding 2-18
state descriptions 2-55	deleting 4-167
supported client services 1-7	NtVw Net# tab
supported platforms 1-4	changing the appearance 1-25
supported protection schemes 1-4	showing duct details 1-26
supported topologies 1-4	
unlocking 2-59	0
Network Mgmt Tree tab	o
changing the appearance 1-27	OCHNC circuits 2-78
Network Wide Layout Export 3-19	omnidirectional demand 2-21
Network Wide Layout Export Selection	omnidirectional functionality 2-20
Export layout as image 3-19	omnidirectional property 4-163
Export layout data as table 3-19	enable 2-31, 4-64
Export location 3-20	omnidirectional entry point 4-12, 4-162
Network Wide Layout summary 3-20	operational modes
Overwrite all files 3-20	100G-LC-C card 4-143, 4-145
NE Update file, saving 3-4	100G-ME-C card 4-143, 4-145
New features 1-2	10X10G-LC card 4-143, 4-145
NG-DWDM 2-3	CFP-LC card 4-143, 4-145
Create an NG-DWDM configuration 2-3	OPT-EDFA-17 amplifier 4-12, 4-14
Omni Side Type 4-163	OPT-EDFA-24 amplifier 4-12, 4-14
Optical Bypass 2-24	optical bypass
Scalable upto Degree 4-9	add site 4-74
Site Design Rules 4-53	editor 4-74
Supported Topologies 2-14	remove site 4-74
Topology 2-6	optical bypass sites 4-74
node	optical insulators 1-30, 4-5
setup from CTP 2-79	Optical Results report 3-23
node controller 4-8	optical subnet
node elements	creating 2-16
mapping 2-78	OSC frame type 2-12, 4-78
node parameters	FE Frame 2-12, 4-78
export 2-77	GE Frame 2-12, 4-78
limitation 2-82	OC3 Frame 2-12, 4-78
import 2-77	Osmine compatible upgrading 2-62
limitation 2-82	Osmine configuration file
node provisioning 2-79	importing 1-44

Osmine Layout Rules 4-145, G-1	card slots 4-118
OSNR alarm	CFP-LC card 4-130
regenerating 1-35	client shelf 4-116
OTU2_XP	controller card 4-128
Dual Regenerator 2-49	DCU 4-110
Dual Transponder 2-49	external switch 4-108
Mixed Mode 2-49	M12 as node controller 4-123, 4-124
Protected Transponder 2-49	M6 as node controller 4-122, 4-123
Single Regenerator 2-49	fiber storage 4-110
	FlexLayer unit 4-128
Р	general 4-107
•	ITU line card 4-132
panes A-7	M2 4-110, 4-125
Paper Documentation 1-38	M6 4-110, 4-125
Pay As You Grow 1-46	manual regeneration 4-129
bundles F-1	multishelf 4-122
overview 1-46	multishelf separate nodes 4-125
Pay As You Grow, PAYG F-1	multishelf separate shelves 4-125
PAYG	MXP card 4-132
licensing	node 4-129
client cards F-3	one-slot card 4-118
PAYG,PAYG	OTS unit 4-126
understanding 1-46	OTS units 4-134
PAYG. See Pay As You Grow	OTU2_XP card 4-129
PAYG license, licensing	patch panel 4-111
PAYG,PAYG	PSM card 4-127
licensing 1-46	rack 4-105
penalty D-6	shelf 4-118
Per Side Installation Parameter 3-4	SMR card 4-115
placement rules	two-slot card 4-118
100G-LC-C card 4-130	TXP card 4-132
100G-ME-C card 4-130	Y-cable 4-117
10X10G-LC card 4-130	platform
15216 40-Channel Mux/Demux units 4-114	setting default values 1-28
15216 48-Channel Mux/Demux units 4-114	support 1-4
air ramp 4-110	point-to-point demand
alien shelves 4-126	creating 2-23
AR_MXP card 4-130	deleting 4-169
AR XP card 4-130	description 1-11

editing 4-58	protection support 1-4
viewing in Project Explorer 1-14	Provision Node 2-79
populate shelves	
from bottom 4-107	R
from top 4-107	
power consumption 3-20	Raman amplification 4-13, 4-15, 4-79
PP-MESH 3-31	RAMAN-CTP 4-16
price lists	RAMAN-CTP-COP 4-16
copying 2-74	regenerating
creating 2-70	OSNR alarm 1-35
deleting 2-74	regeneration configurations
loading or unloading 2-73	100G-LC-C card 4-145
updating 2-73	100G-ME-C card 4-145
viewing 2-71	10X10G-LC card 4-145
viewing contracts 2-74	Remote Spur 4-163
P-ring demand	adding 4-164
creating 2-27	duct creation 2-15
deleting 4-169	reports
description 1-11	BoM totals 2-63
editing 4-61	Installation Parameters 3-5
viewing in Project Explorer 1-14	Internal Connections 3-8
process flow 1-9	layout 3-15
project	Layout Table (power consumption) 3-20
adding notes 2-18	Link Availability 3-21
closing 1-22	network BOM 2-64
deleting notes 4-167	Optical Results 3-23
editing parameters 4-1	site BOM 2-66
saving 1-22	spare part BOM 2-68
setting default values 1-37	Summary 3-2
Project Creation wizard 2-1	Traffic Matrix 3-11
Project Explorer	Wavelength Routing 3-27
changing the appearance 1-25	resetting the default layout 1-45
description A-7	restricted equipment list, updating 1-33
loaded network 1-21	ring topology 5-2
unloaded network 1-21	ROADM demand
view 1-13	creating 2-29
project explorer	deleting 4-169
select multiple items 1-13	description 1-11
Properties pane, description A-8	editing 4-63

routing strategies 1-11	shelf movement rules 4-154
viewing in Project Explorer 1-15	shelf placement rules 4-118
rules, C-band 1-29	shelf rules 4-118
Run Quick Analysis 1-35	shelves placement
	bottom-up approach 4-107
s	top-down approach 4-107
	Sherpa file
saving	importing 2-75
NE Update file 3-4	shortcuts A-10
project 1-22	side label
scale factors D-4	editing 4-55
select multiple items 1-13	Sides Label 1-45
options 1-14	single-interfering cross-talk D-5
service demand	single-span topology 5-1
editing 4-56	site
setting	add 4-73
graphical display 1-24	add to demand 4-73
platform default values 1-28	mapping 2-78
project default values 1-37	network elements 4-3
setup	remove 4-73
node from CTP 2-79	remove from demand 4-73
shelf adjustments 4-154	Site Functional View 2-54
shelf layout, adjusting 4-153	Alarms 2-55
Shelf Management 1-28, 2-7, 4-4	Changing the view
Auto 1-28, 2-7, 4-4	Zoom In 2-55
Individual Shelf 1-28	Zoom Out 2-55
Locked state 4-154	Open Site Functional View 2-55
modify 4-154	Transponder and Muxponder connections 2-55
Multi Shelf External Switch 1-28, 2-7, 4-4	Zoom Out 2-55
Multi Shelf Integrated Switch 1-28, 2-7, 4-4	site layout, adjusting 4-146
rules 4-122	site properties, modify 4-160
release-upgraded network 4-124	sites
upgraded network 4-124	add 4-73
Shelf Movement 4-153	adding a site 2-14
Destination rack 4-153	add to demand 4-73
From rack unit 4-153	arranging 4-155
Source rack 4-153	BOM 2-66
Swap 4-153	creating a maintenance center 4-58
To rack unit 4-153	deleting 4-167

deleting a site 4-167	single-interfering cross-talk D-5
editing 4-3	working area D-1
optical bypass	topologies 5-1
	linear 5-1, 5-2
add 4-74	meshed 5-3
remove 4-74	ring 5-2
remove 4-73	single-span 5-1
remove from demand 4-73	topology support 1-4
SMR-1 4-11	traffic
SMR-2 4-12	viewing 1-12, 1-14
SMR-20 4-12	traffic groups
SMR-9 4-12	description 1-11
snake site arrangement 4-157	point-to-point 1-14
snapshot, network design 2-62	P-ring 1-14
spare part BOM 2-68	ROADM 1-15
spare parts suppliers 4-58	Traffic Matrix report 3-11
Split ROADM 2-83	traffic subnet
square site arrangement 4-156	channel rules 4-56
sticky 1-13	creating 2-19
sticky selection 1-13	deleting 4-169
Sub OpMode cards 2-25	edit channel plan 4-56
Summary report 3-2	
Supported Pluggables B-1	
	U
т ———	Uninstalling CTP 1-19
-	Unit ID 3-5
tasks pane	unit ID for PP mesh 3-16
description A-10	unloading
ГСС type 1-32, 4-8	network 1-21
TDM aggregated demand	price lists 2-73
creating 2-41	unlocking network components 2-59
editing 4-69	unprotected minimum hop count, description 1-12
TDM Aggregated Demand report	unprotected optimum optical path, description 1-11
Viewing 3-32	unprotected subnet, description 1-12
Terminal Services E-1	updating
third-party interface	price lists 2-73
defining 1-38	restricted equipment list 1-33
Gaussian cross-talk D-6	Upgrade-Analyzed state, description 2-56
scale factors D-4	upgrade network to design mode 2-56
	upgrade network to design mode 2-30

```
Upgrade state, description 2-56
use AR-XPE card 1-35
user profiles, adding 1-45
Use Template 2-32, 4-63
V
viewing
    maintenance contracts 2-74
    price lists 2-71
   traffic 1-12, 1-14
Viewing the ASR Bundle 2-67
VNC E-1
W
Wavelength Routing report 3-27
Wavelength Selection
   Coloring Priority 1-35
    Flat Grid Filling 1-35
    Maximum Separation 1-35
Wavelength Usage 1-26
Wavelength usage information A-5
WSON PID 1-38, 4-3
X
xml
   export to CTP 2-77
   import to node 2-79
Y
Y-cable protection, description 1-4
```

Index