



Cisco NCS 1010 and NCS 1020 Datapath Configuration Guide, IOS XR Releases 25.x.x

Cisco Network Convergence System 1010

Release: 25.x.x | Updated June 17, 2026



© 2026 Cisco Systems, Inc. All rights reserved.

Full Cisco Trademarks with Software License

Full Cisco Trademarks with Software License

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

Topics included

Full Cisco Trademarks with Software License.....	ii
1 NCS 1010 Datapath Orchestration.....	7
Document objective.....	8
Document organization - Data Path guide.....	8
2 Configure Controllers.....	9
ILA controller models in NCS 1010.....	10
OLT controller models and their port mappings.....	17
OTS controllers.....	28
Default OTS controllers for ILA cards.....	28
Verify the OTS controllers for ILA cards.....	29
Default OTS controllers for OLT cards.....	31
Verify the OTS controllers for OLT cards.....	32
Comparison of configuration commands for OTS controller parameters for OLT and ILA nodes.....	34
OTS controller configuration parameters.....	35
Configuration examples for OTS controllers.....	41
Modify channel slice attenuation for OLT cards.....	43
Configure the partner band IP address.....	47
OTS-OCH controllers.....	48
Validation rules for Flex Grid channel configuration.....	49
Create OTS-OCH controllers on ILA cards.....	50
Create OTS-OCH controllers on OLT cards.....	53
Create optical cross connection on OLT nodes.....	56
DFB controllers.....	59
Default DFB controllers for OLT cards.....	60
Modify the DFB parameters for OLT and ILA cards.....	61
OCH controllers.....	63
Verify the OCH controller parameters.....	64
OMS controller.....	66
OSC controllers.....	68
Configure OSC Controllers.....	70
View the Gigabit Ethernet interfaces.....	72
Best practice for downgrading from OSC 1G.....	75
OSC link speed specifications.....	75
Headless mode.....	76
ASE loading.....	77
How ASE operates.....	77

How ASE Is managed.....	78
Optical channel monitoring.....	79
View OCM data.....	81
Automatic-In-Service (AINS) state.....	83
AINS soak time period.....	84
Verify the AINS state and the suppressed alarms.....	84
3 Monitor Performance.....	91
Monitor performance.....	92
Photodiodes (PDs) refresh rate.....	96
Configure and view PM parameters.....	97
7-day support for 15-Min PM bin.....	107
Configure 7-day 15-minute performance monitoring sample collection.....	108
4 Connection Verification.....	109
Photodiode monitors.....	110
Connection verification.....	111
Line card and passive modules connection verification.....	111
Side-to-side connection verification.....	112
Line card and optical interfaces connection verification.....	115
Verify connection on an OTS interface between OLT nodes.....	121
5 Smart Licensing.....	123
Understanding smart licensing.....	124
Benefits of smart licensing.....	126
License entitlements for NCS 1010.....	126
Generate a token in Cisco Smart Software Manager.....	127
Configure smart licensing on Cisco NCS 1010.....	127
Configure smart transport on Cisco NCS 1010.....	129
Reserve specific licenses for NCS 1010 device.....	130
Reserve licenses using Cisco Smart Software Manager.....	132
Reuse licenses with the SLR deactivation method.....	133
Smart licensing verification commands.....	135
6 Host Services and Applications.....	143
HTTP clients.....	144
TCP.....	145
TCP dump file converter.....	145
Appendix A: Cisco NCS 1010 Topologies.....	151
Multidegree ROADM networks with NCS1010 OLT devices.....	152
Types of NCS 1010 sample topologies.....	153

Omnidirectional topologies	158
NCS2K-MF-4x4-COFS based colorless omnidirectional topologies.....	158
OLT-based omnidirectional add/drop topologies.....	160

Appendix B: Configuring SNMP.....	163
--	------------

1 NCS 1010 Datapath Orchestration

Topics:

- [Document objective](#)
- [Document organization - Data Path guide](#)

Explains the purpose and organization of the NCS 1010 datapath guide and points to related system setup and optical application configuration information.

For an overview of the NCS 1010 OLS and passive modules, see [Cisco NCS 1010 Optical Line System -An Overview](#).

Document objective

This topic explains the different configuration guides available for the Cisco NCS 1010 platform and the types of tasks they cover.

The Cisco Network Convergence System (NCS) 1010 platform includes these configuration guides.:

- The *Cisco NCS 1010 System Setup and Software Installation Guide* describes how to bring up the NCS 1010 system and perform the required software installation.
- The *Cisco NCS 1010 Datapath Configuration Guide* describes how to configure various datapaths on NCS 1010.
- The *Cisco NCS 1010 Optical Applications Configuration Guide* describes multiple optical applications on NCS 1010 that help to bring up the link and maintain traffic.

Document organization - Data Path guide

Lists each chapter of the Data Path Guide and provides a summary of the key topics covered, including controller configuration tasks, performance monitoring, connection verification procedures, and supported NCS 1010 topologies for colored, colorless, and hybrid optical solutions.

This document is organized into these chapters:

Chapter	Description
Configure Controllers on page 9	Describes the tasks to configure and view the parameters of the OTS, OTS-OCH, OSC, DFB, OCH, and OMS controller types.
Monitor Performance on page 91	Describes the setting and retrieval of PM counters for the OTS, OTS-OCH, OSC, DFB, OCH, and OMS controllers in flex-bin, 30-second, 15-minute, or 24-hour intervals.
Connection Verification on page 109	Checks the connection between the OLT-C line card and all the other passive modules to find broken links or loops.
Smart Licensing	Explains Smart Licensing concepts, entitlements, transport modes, registration, specific license reservation, verification commands, and license consumption behavior for connection verification, Nyquist channels, and OTDR scan data.
Host Services and Applications	Explains host services used to check connectivity, resolve hostnames and IP addresses, transfer files, configure HTTP clients, and view or convert TCP dump.
Cisco NCS 1010 Topologies on page 151	Provides examples of a few NCS 1010 topologies for colored, colorless, and hybrid solutions.
Configuring SNMP	Provides supported SNMP MIBs, OIDs, and OTS and OLC MIB support details for monitoring and managing Cisco NCS 1010 optical components.

2 Configure Controllers

Topics:

- [ILA controller models in NCS 1010](#)
- [OLT controller models and their port mappings](#)
- [OTS controllers](#)
- [OTS-OCH controllers](#)
- [DFB controllers](#)
- [OCH controllers](#)
- [OMS controller](#)
- [OSC controllers](#)
- [Headless mode](#)
- [ASE loading](#)
- [Optical channel monitoring](#)
- [Automatic-In-Service \(AINS\) state](#)

Describes how to configure and view OTS, OTS-OCH, OSC, DFB, OCH, and OMS controllers, including controller models, port mappings, AINS, ASE loading, headless mode, and optical channel monitoring.

There are six types of controllers for Cisco NCS 1010. The controllers are the OTS, OTS-OCH, OSC, DFB, OCH, and OMS controllers. This chapter describes the tasks that are used to configure and view these controllers.

Table 1: Controllers

Controller Types	Description
Optical Transport Section (OTS)	The OTS controller holds all the optical parameters for the OTS optical interfaces.
OTS-OCH	The OTS-OCH controller is created on the LINE side of the OLT and ILA nodes using the <code>hw-module</code> command in Flex-Grid configuration. OTS-OCH controller supports optical cross-connection between the LINE side and ADD/DROP side of the OLT nodes only. The channel IDs must be the same for both LINE side and COM side OTS-OCH controllers.
Optical Service Channel (OSC)	The OSC controller represents the optical layer of the OSC channel. Line ports host the OSC controller.
Distributed Feedback (DFB)	The DFB controller represents the dedicated DFB laser on the line side of the OLT and ILA nodes with a RAMAN module for link continuity. The line ports host the DFB controller along with the OSC controller.
Optical Channel (OCH)	By default, the OCH controllers are automatically configured when Mux/Demux panels and breakout panels are brought up.
Optical Multiplex Section (OMS)	By default, the OMS controllers are automatically configured when Mux/Demux panels and breakout panels are brought up.

ILA controller models in NCS 1010

This section lists all Cisco NCS 1010 ILA controller models and provides their port-to-controller mappings, release-specific features, and usage notes.

This reference lists all the ILA controller models available for the Cisco NCS 1010 platform and details the mapping between their physical ports and controllers. Use this information to identify controller-port assignments for supported in-line amplifier (ILA) line cards, including release-specific models and supported features.

ILA controller models

The ILA controller model is available for the NCS 1010 ILA line cards:

- **NCS1K-ILA-C**: C-band In-Line Amplifier without Raman
- **NCS1K-ILA-R-C**: C-band In-Line Amplifier with one side Raman
- **NCS1K-ILA-2R-C**: C-band In-Line Amplifier with both sides Raman
- **NCS1K-ILA-L**: L-band In-Line Amplifier without Raman
- **NCS1K-E-ILA-R-C**: C-band In-Line Amplifier with East-facing Raman, Enhanced
- **NCS1K-E-ILA-2R-C**: C-band In-Line Amplifier with both sides Raman, Enhanced
- **NCS1K-E-ILA-R-C-2**: C-band In Line Amplifier with West-facing Raman, Enhanced



Note

For release information of the ILA line cards, refer to *Hardware Installation Guide for Cisco NCS 1010 and Cisco NCS 1000 Passive Modules*.

Port and controller mapping for each ILA line card

The figures and tables show the three ILA variants and the mapping between physical ports and controllers:

Figure 1: NCS1K-ILA-C front view

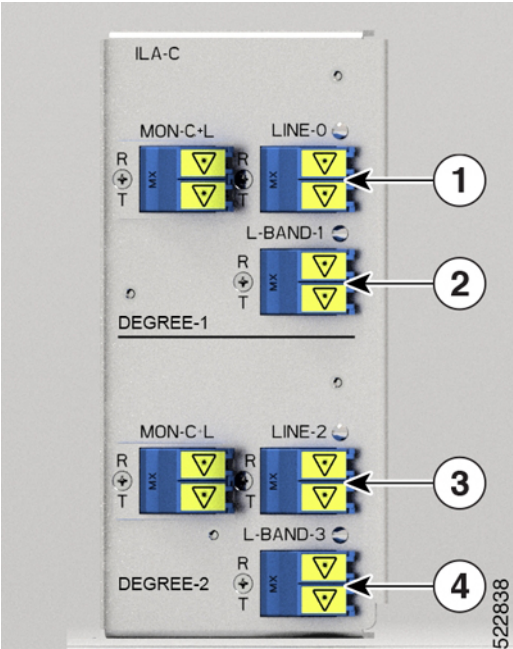


Table 2: NCS1K-ILA-C port mapping

Callout	Port labl	Controller types
1	LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	L-BAND-1	Parent Controller: OTS0/0/0/1
3	LINE-2	Parent Controller: OTS0/0/0/2 Child Controller: OSC0/0/0/2, Line OTS-OCH 0/0/0/2/x
4	L-BAND-3	Parent Controller: OTS0/0/0/3

Figure 2: NCS1K-ILA-R-C front view

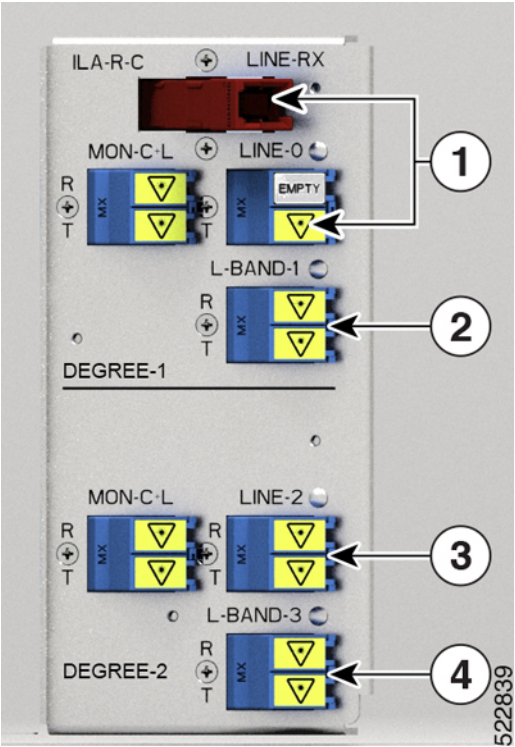


Table 3: NCS1K-ILA-R-C port mapping

Callout	Port labl	Controller types
1	RAMAN pump and LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, DFB0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	L-BAND-1	Parent Controller: OTS0/0/0/1
3	LINE-2	Parent Controller: OTS0/0/0/2 Child Controller: OSC0/0/0/2, Line OTS-OCH 0/0/0/2/x
4	L-BAND-3	Parent Controller: OTS0/0/0/3

Figure 3: NCS1K-ILA-2R-C front view

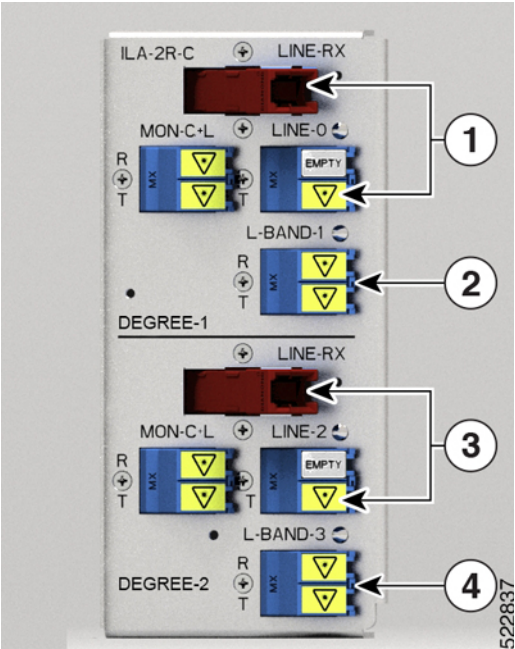


Table 4: NCS1K-ILA-2R-C port mapping

Callout	Port labl	Controller types
1	RAMAN pump and LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, DFB0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	L-BAND-1	Parent Controller: OTS0/0/0/1
3	RAMAN pump and LINE-2	Parent Controller: OTS0/0/0/2 Child Controller: OSC0/0/0/2, DFB0/0/0/2, Line OTS-OCH 0/0/0/2/x
4	L-BAND-3	Parent Controller: OTS0/0/0/3

Figure 4: NCS1K-ILA-L front view

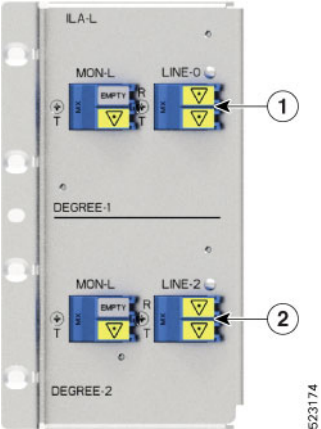


Table 5: NCS1K-ILA-L port mapping

Callout	Port labl	Controller types
1	LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	LINE-2	Parent Controller: OTS0/0/0/2 Child Controller: OSC0/0/0/2, Line OTS-OCH 0/0/0/2/x

The figures and tables show the three ILA variants that are introduced in Release 7.10.1 and the mapping between their physical ports and controllers:



Note

The new ILA variants have ports that are highlighted in red to indicate the Raman ports.

Figure 5: NCS1K-E-ILA-R-C front view

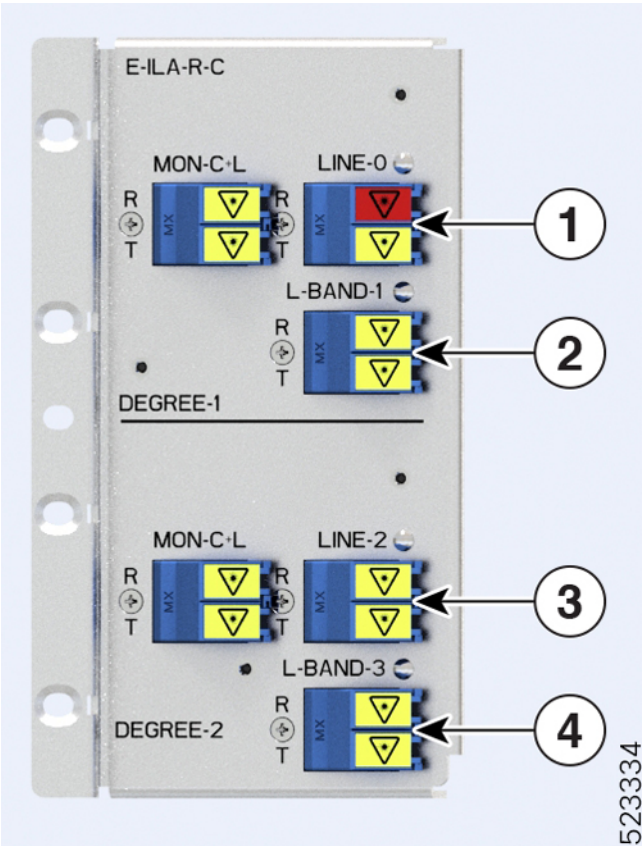


Table 6: E-ILA-R-C port mapping

Callout	Port labl	Controller types
1	RAMAN port and LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, DFB0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	L-BAND-1	Parent Controller: OTS0/0/0/1
3	LINE-2	Parent Controller: OTS0/0/0/2 Child Controller: OSC0/0/0/2, Line OTS-OCH 0/0/0/2/x
4	L-BAND-3	Parent Controller: OTS0/0/0/3

Figure 6: NCS1K-E-ILA-2R-C front view

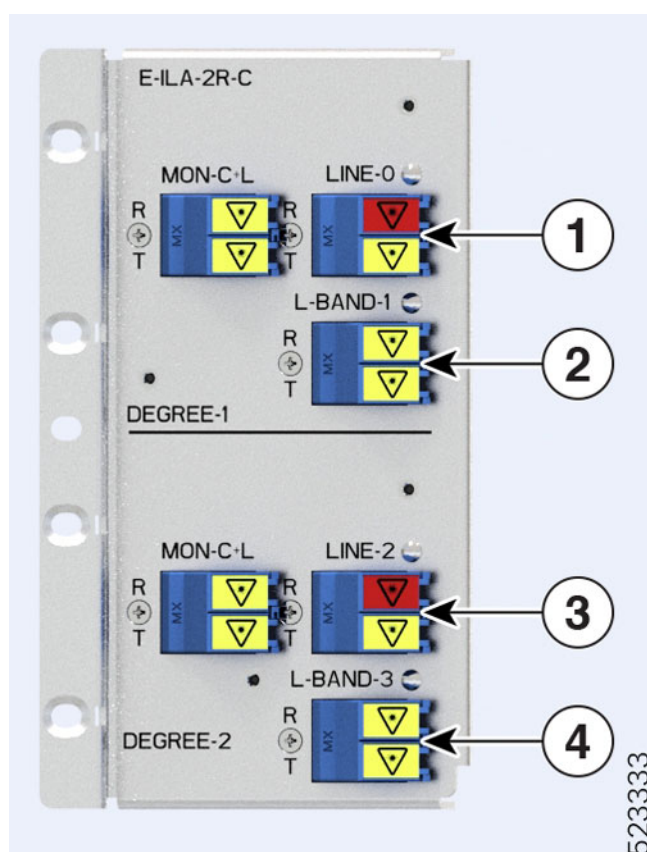


Table 7: E-ILA-2R-C port mapping

Callout	Port labl	Controller types
1	RAMAN port and LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, DFB0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	L-BAND-1	Parent Controller: OTS0/0/0/1

Callout	Port labl	Controller types
3	RAMAN port and LINE-2	Parent Controller: OTS0/0/0/2 Child Controller: OSC0/0/0/2, DFB0/0/0/2, Line OTS-OCH 0/0/0/2/x
4	L-BAND-3	Parent Controller: OTS0/0/0/3

The figure and table show the new ILA variant that is introduced in Release 7.11.1 and the mapping between its physical ports and controllers:

Figure 7: NCS1K-E-ILA-R-C-2 front view

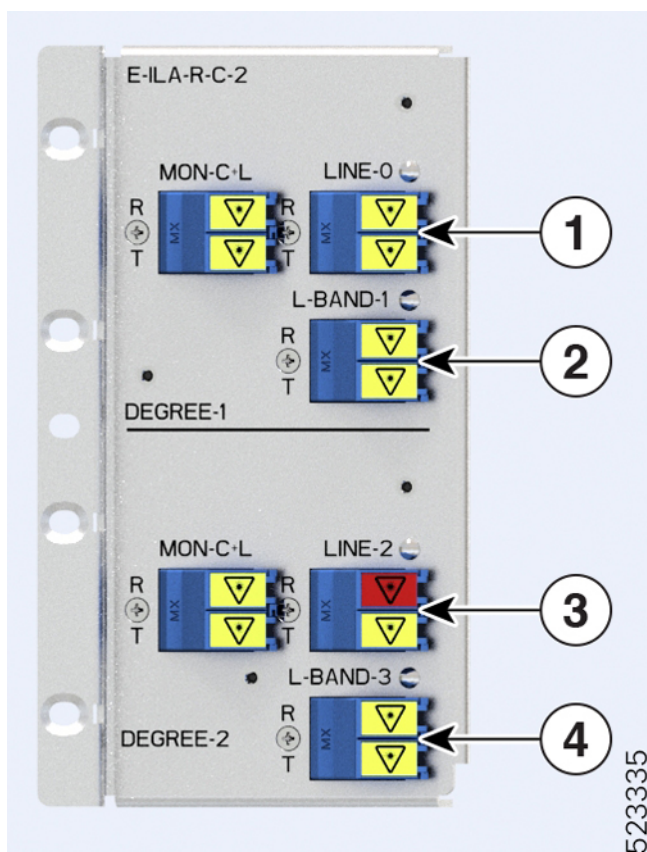


Table 8: E-ILA-R-C-2 port mapping

Callout	Port labl	Controller types
1	LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	L-BAND-1	Parent Controller: OTS0/0/0/1
3	RAMAN port and LINE-2	Parent Controller: OTS0/0/0/2 Child Controller: OSC0/0/0/2, DFB0/0/0/2, Line OTS-OCH 0/0/0/2/x
4	L-BAND-3	Parent Controller: OTS0/0/0/3

OLT controller models and their port mappings

This section lists all the OLT controller models available for the Cisco NCS 1010 and NCS 1020 platform. It details the mapping between physical ports and controllers for each OLT and E-OLT cards.

The OLT and E-OLT cards are available for the NCS 1010 and NCS 1020 platforms. Use this information to identify controller-port assignments for supported optical line terminal (OLT) line cards, including release-specific models and supported features.

OLT controller models

The OLT controller model is available for the NCS 1010 OLT line cards:

- [NCS1K-OLT-C](#): C-band Optical Line Terminal without Raman
- [NCS1K-OLT-R-C](#): C-band Optical Line Terminal with Raman
- [NCS1K-OLT-L](#): L-band Optical Line Terminal without Raman
- [NCS1K-E-OLT-L](#): L-band Optical Line Terminal without Raman, enhanced
- [NCS1K-E-OLT-C](#): C-band Optical Line Terminal without Raman, enhanced
- [NCS1K-E-OLT-R-C](#): C-band Optical Line Terminal with Raman, enhanced



Note

For release information of the OLT line cards, refer to *Hardware Installation Guide for Cisco NCS 1010 and Cisco NCS 1000 Passive Modules*.

Port and controller mapping for each OLT line card

The figures and tables show the two OLT variants and the mapping between physical ports and controllers:

Figure 8: NCS1K-OLT-C

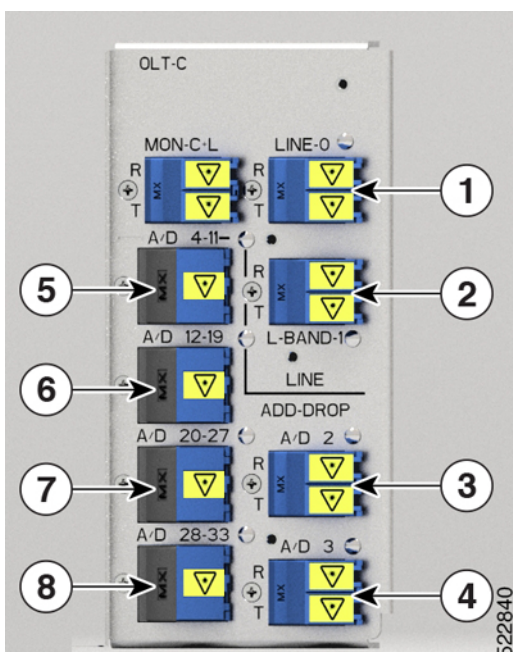


Table 9: NCS1K-OLT-C port mapping

Callout	Port label	Controller types
1	LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	L-BAND-1	Parent Controller: OTS0/0/0/1
3	A/D 2	Parent Controller: OTS0/0/0/2 Child Controller: COM OTS-OCH 0/0/0/2/x
4	A/D 4	Parent Controller: OTS0/0/0/3 Child Controller: COM OTS-OCH 0/0/0/3/x
5	A/D 4-11	Parent Controller: OTS0/0/0/4-11 Child Controller: COM OTS-OCH 0/0/0/4-11/x
6	A/D 12-19	Parent Controller: OTS0/0/0/12-19 Child Controller: COM OTS-OCH 0/0/0/12-19/x
7	A/D 20-27	Parent Controller: OTS0/0/0/20-27 Child Controller: COM OTS-OCH 0/0/0/20-27/x

Callout	Port label	Controller types
8	A/D 28-33	Parent Controller: OTS0/0/0/28-33 Child Controller: COM OTS-OCH 0/0/0/28-33/x

Figure 9: NCS1K-OLT-R-C

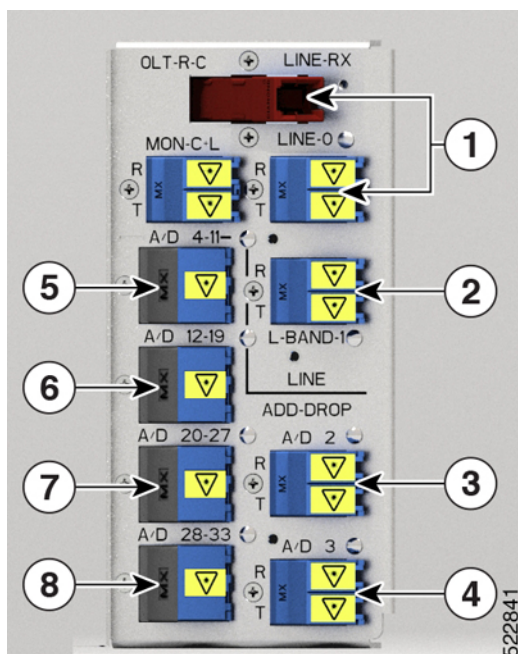


Table 10: NCS1K-OLT-R-C port mapping

Callout	Port label	Controller types
1	LINE-RX and LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, DFB0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	L-BAND-1	Parent Controller: OTS0/0/0/1
3	A/D 2	Parent Controller: OTS0/0/0/2 Child Controller: COM OTS-OCH 0/0/0/2/x
4	A/D 3	Parent Controller: OTS0/0/0/3 Child Controller: COM OTS-OCH 0/0/0/3/x
5	A/D 4-11	Parent Controller: OTS0/0/0/4-11 Child Controller: COM OTS-OCH 0/0/0/4-11/x
6	A/D 12-19	Parent Controller: OTS0/0/0/12-19 Child Controller: COM OTS-OCH 0/0/0/12-19/x

Callout	Port label	Controller types
7	A/D 20-27	Parent Controller: OTS0/0/0/20-27 Child Controller: COM OTS-OCH 0/0/0/20-27/x
8	A/D 28-33	Parent Controller: OTS0/0/0/28-33 Child Controller: COM OTS-OCH 0/0/0/28-33/x

Figure 10: NCS1K-OLT-L

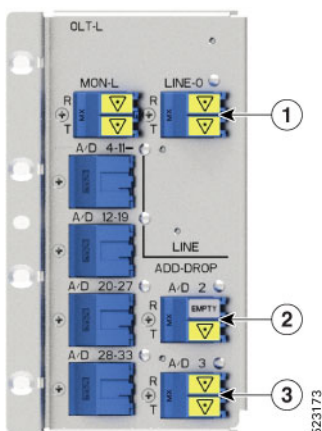


Table 11: NCS1K-OLT-L port mapping

Callout	Port label	Controller types
1	LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	A/D 2	Parent Controller: OTS0/0/0/2 Child Controller: OSC0/0/0/2, Line OTS-OCH 0/0/0/2/x
3	A/D 3	Parent Controller: OTS0/0/0/3

The figures and tables show the three OLT variants that are introduced in Release 7.10.1 and the mapping between their physical ports and controllers:

Figure 11: NCS1K-E-OLT-L

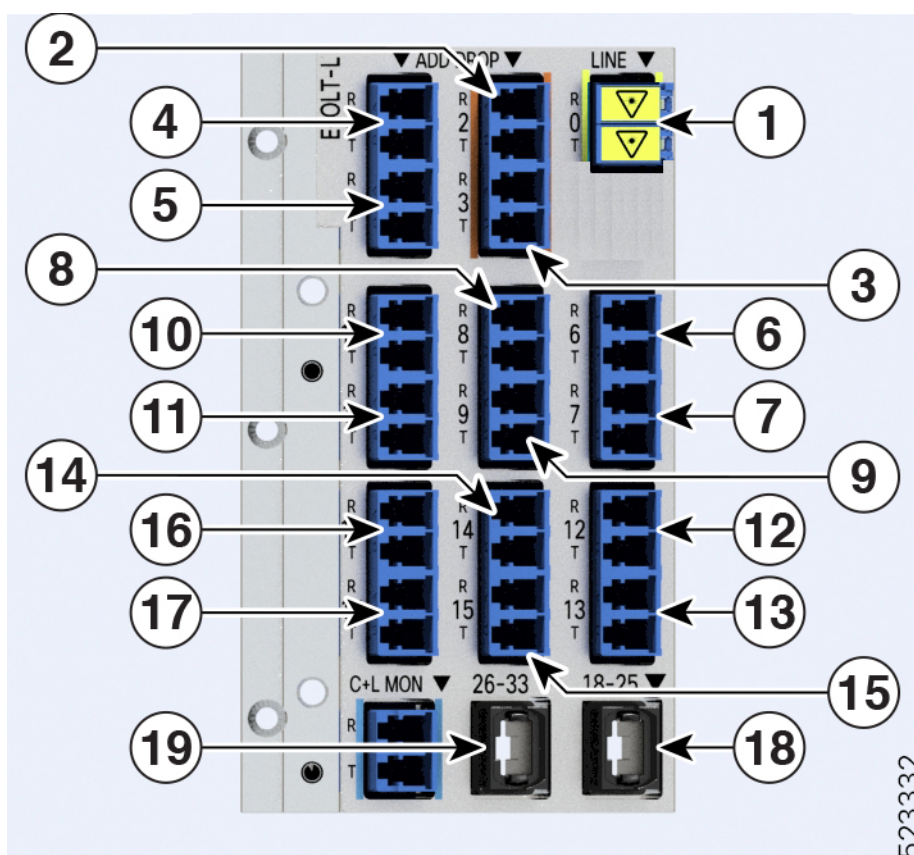


Table 12: NCS1K-E-OLT-L port mapping

Callout	Port	Controller types
1	LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	2	Parent Controller: OTS0/0/0/2 Child Controller: COM OTS-OCH 0/0/0/2/x
3	3	Parent Controller: OTS0/0/0/3 Child Controller: COM OTS-OCH 0/0/0/3/x
4	4	Parent Controller: OTS0/0/0/4 Child Controller: COM OTS-OCH 0/0/0/4/x
5	5	Parent Controller: OTS0/0/0/5 Child Controller: COM OTS-OCH 0/0/0/5/x
6	6	Parent Controller: OTS0/0/0/6 Child Controller: COM OTS-OCH 0/0/0/6/x

Callout	Port	Controller types
7	7	Parent Controller: OTS0/0/0/7 Child Controller: COM OTS-OCH 0/0/0/7/x
8	8	Parent Controller: OTS0/0/0/8 Child Controller: COM OTS-OCH 0/0/0/8/x
9	9	Parent Controller: OTS0/0/0/9 Child Controller: COM OTS-OCH 0/0/0/9/x
10	10	Parent Controller: OTS0/0/0/10 Child Controller: COM OTS-OCH 0/0/0/10/x
11	11	Parent Controller: OTS0/0/0/11 Child Controller: COM OTS-OCH 0/0/0/11/x
12	12	Parent Controller: OTS0/0/0/12 Child Controller: COM OTS-OCH 0/0/0/12/x
13	13	Parent Controller: OTS0/0/0/13 Child Controller: COM OTS-OCH 0/0/0/13/x
14	14	Parent Controller: OTS0/0/0/14 Child Controller: COM OTS-OCH 0/0/0/14/x
15	15	Parent Controller: OTS0/0/0/15 Child Controller: COM OTS-OCH 0/0/0/15/x
16	16	Parent Controller: OTS0/0/0/16 Child Controller: COM OTS-OCH 0/0/0/16/x
17	17	Parent Controller: OTS0/0/0/17 Child Controller: COM OTS-OCH 0/0/0/17/x
18	18-25	Parent Controller: OTS0/0/0/18-25 Child Controller: COM OTS-OCH 0/0/0/18-25/x

Callout	Port	Controller types
19	26-33	Parent Controller: OTS0/0/0/26-33 Child Controller: COM OTS-OCH 0/0/0/26-33/x

Figure 12: NCS1K-E-OLT-C

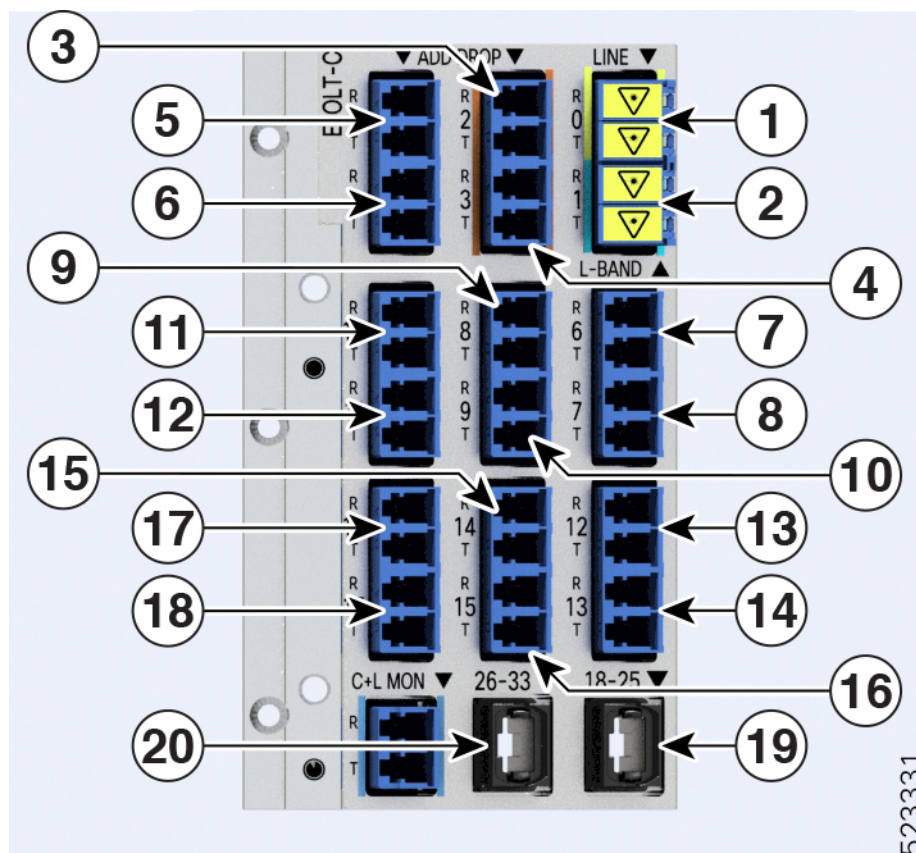


Table 13: NCS1K-E-OLT-C port mapping

Callout	Port label	Controller types
1	LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	1	Parent Controller: OTS0/0/0/1
3	2	Parent Controller: OTS0/0/0/2 Child Controller: COM OTS-OCH 0/0/0/2/x
4	3	Parent Controller: OTS0/0/0/3 Child Controller: COM OTS-OCH 0/0/0/3/x

Callout	Port label	Controller types
5	4	Parent Controller: OTS0/0/0/4 Child Controller: COM OTS-OCH 0/0/0/4/x
6	5	Parent Controller: OTS0/0/0/5 Child Controller: COM OTS-OCH 0/0/0/5/x
7	6	Parent Controller: OTS0/0/0/6 Child Controller: COM OTS-OCH 0/0/0/6/x
8	7	Parent Controller: OTS0/0/0/7 Child Controller: COM OTS-OCH 0/0/0/7/x
9	8	Parent Controller: OTS0/0/0/8 Child Controller: COM OTS-OCH 0/0/0/8/x
10	9	Parent Controller: OTS0/0/0/9 Child Controller: COM OTS-OCH 0/0/0/9/x
11	10	Parent Controller: OTS0/0/0/10 Child Controller: COM OTS-OCH 0/0/0/10/x
12	11	Parent Controller: OTS0/0/0/11 Child Controller: COM OTS-OCH 0/0/0/11/x
13	12	Parent Controller: OTS0/0/0/12 Child Controller: COM OTS-OCH 0/0/0/12/x
14	13	Parent Controller: OTS0/0/0/13 Child Controller: COM OTS-OCH 0/0/0/13/x
15	14	Parent Controller: OTS0/0/0/14 Child Controller: COM OTS-OCH 0/0/0/14/x
16	15	Parent Controller: OTS0/0/0/15 Child Controller: COM OTS-OCH 0/0/0/15/x

Callout	Port label	Controller types
17	16	Parent Controller: OTS0/0/0/16 Child Controller: COM OTS-OCH 0/0/0/16/x
18	17	Parent Controller: OTS0/0/0/17 Child Controller: COM OTS-OCH 0/0/0/17/x
19	18-25	Parent Controller: OTS0/0/0/18-25 Child Controller: COM OTS-OCH 0/0/0/18-25/x
20	26-33	Parent Controller: OTS0/0/0/26-33 Child Controller: COM OTS-OCH 0/0/0/26-33/x

Figure 13: NCS1K-E-OLT-R-C

 Note

In the image, the port that is highlighted in red is the Raman port.

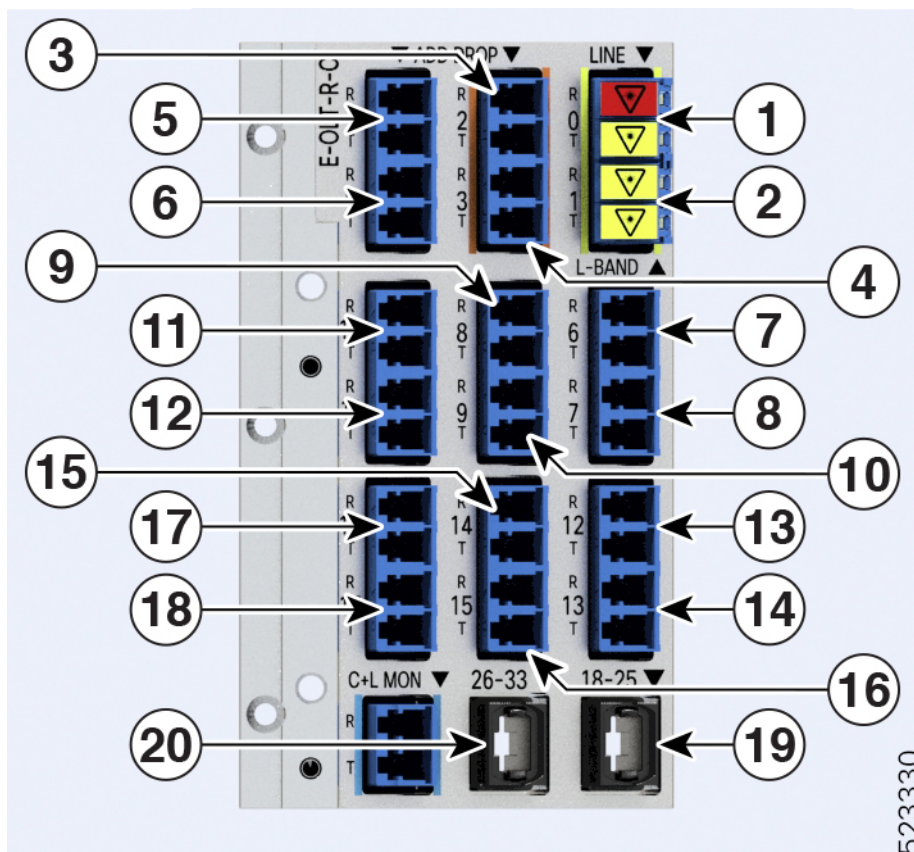


Table 14: NCS1K-E-OLT-R-C port mapping

Callout	Port label	Controller types
1	LINE-0	Parent Controller: OTS0/0/0/0 Child Controller: OSC0/0/0/0, Line OTS-OCH 0/0/0/0/x
2	1	Parent Controller: OTS0/0/0/1
3	2	Parent Controller: OTS0/0/0/2 Child Controller: COM OTS-OCH 0/0/0/2/x
4	3	Parent Controller: OTS0/0/0/3 Child Controller: COM OTS-OCH 0/0/0/3/x

Callout	Port label	Controller types
5	4	Parent Controller: OTS0/0/0/4 Child Controller: COM OTS-OCH 0/0/0/4/x
6	5	Parent Controller: OTS0/0/0/5 Child Controller: COM OTS-OCH 0/0/0/5/x
7	6	Parent Controller: OTS0/0/0/6 Child Controller: COM OTS-OCH 0/0/0/6/x
8	7	Parent Controller: OTS0/0/0/7 Child Controller: COM OTS-OCH 0/0/0/7/x
9	8	Parent Controller: OTS0/0/0/8 Child Controller: COM OTS-OCH 0/0/0/8/x
10	9	Parent Controller: OTS0/0/0/9 Child Controller: COM OTS-OCH 0/0/0/9/x
11	10	Parent Controller: OTS0/0/0/10 Child Controller: COM OTS-OCH 0/0/0/10/x
12	11	Parent Controller: OTS0/0/0/11 Child Controller: COM OTS-OCH 0/0/0/11/x
13	12	Parent Controller: OTS0/0/0/12 Child Controller: COM OTS-OCH 0/0/0/12/x
14	13	Parent Controller: OTS0/0/0/13 Child Controller: COM OTS-OCH 0/0/0/13/x
15	14	Parent Controller: OTS0/0/0/14 Child Controller: COM OTS-OCH 0/0/0/14/x
16	15	Parent Controller: OTS0/0/0/15 Child Controller: COM OTS-OCH 0/0/0/15/x

Callout	Port label	Controller types
17	16	Parent Controller: OTS0/0/0/16 Child Controller: COM OTS-OCH 0/0/0/16/x
18	17	Parent Controller: OTS0/0/0/17 Child Controller: COM OTS-OCH 0/0/0/17/x
19	18-25	Parent Controller: OTS0/0/0/18-25 Child Controller: COM OTS-OCH 0/0/0/18-25/x
20	26-33	Parent Controller: OTS0/0/0/26-33 Child Controller: COM OTS-OCH 0/0/0/26-33/x

OTS controllers

This section explains the functions and supported platforms of OTS controllers for NCS 1010 and NCS 1020.

Optical Transport Section (OTS) controller is a datapath controller type for the OTS optical interfaces that

- manages and monitors all the optical interfaces,
- sets the parameters for optical signals
- supports LINE and ADD/DROP ports for C- and L-band signals.

OTS optical interfaces refers to the hardware components in the line cards such as photodiode, VOA, amplifier, and OCM.

OTS controllers for ILA and OLT cards

The OTS controller supports the

- OLT cards for NCS 1010 and NCS 1020 platforms
- ILA cards for NCS 1010 platform

Default OTS controllers for ILA cards

When the ILA and E-ILA cards are brought up, the system creates four OTS controllers by default.

When you bring up the ILA and E-ILA cards, the system creates four OTS controllers by default for line and L-band ports.

Use this table to identify the default OTS controllers assigned for each port and band type:

Degrees	Port	OTS controller	Band type
Degree-1	LINE 0	ots 0/0/0/0	C/L
Degree-1	L-BAND-1	ots 0/0/0/1	L
Degree-2	LINE 2	ots 0/0/0/2	C/L

Degrees	Port	OTS controller	Band type
Degree-2	L-BAND-3	ots 0/0/0/3	L

The card types supported for this allocation are:

- NCS1K-ILA-C
- NCS1K-ILA-R-C
- NCS1K-ILA-2R-C
- NCS1K-ILA-L
- NCS1K-E-ILA-R-C
- NCS1K-E-ILA-2R-C
- NCS1K-E-ILA-R-C-2

Verify the OTS controllers for ILA cards

Verify the status of the OTS controllers and their values for each port in the ILA card.

By default, when the ILA cards boot, the OTS controllers become activated with default values.

To modify the OTS controllers values, see *Command Reference Guide for NCS 1010*.

Follow these steps to verify the OTS controllers for the ILA and E-ILA cards.

Procedure

1. Verify the OTS controller status on the card.

Run the **show controller description** command.

Example

```
RP/0/RP0/CPU0:ios#show controller description
```

This output highlights the status of the OTS controller interfaces (*ots0/0/0/0...ots0/0/0/3*) on the ILA cards.

```
Fri Mar 25 09:24:53.386 UTC
```

Interface	Status	Description
Osc0/0/0/0	up	
Osc0/0/0/2	up	
Ots0/0/0/0	up	
Ots0/0/0/1	up	
Ots0/0/0/2	up	
Ots0/0/0/3	up	

```
RP/0/RP0/CPU0:ios#
```

2. Use the **show controllers ots 0/0/0/<port>** command to verify the OTS controller values.

Example

This command displays the LINE-0 OTS controller values.

```
RP/0/RP0/CPU0:ios#show controllers ots 0/0/0/0
```

If you want OTS controller status for	then run
LINE-0	show controllers ots 0/0/0/0
L-BAND-2	show controllers ots 0/0/0/1
LINE-1	show controllers ots 0/0/0/2
L-BAND-2	show controllers ots 0/0/0/3

Example

This output highlights the parameters that indicate the OTS controller is in operation.

```
Fri Mar 25 09:27:44.146 UTC
```

Controller State: Up

Transport Admin State: In Service

LED State: Green

Alarm Status:

Detected Alarms: None

Alarm Statistics:

LOW-TX-PWR = 0

RX-LOS-P = 0

RX-LOC = 0

TX-POWER-FAIL-LOW = 0

INGRESS-AUTO-LASER-SHUT = 0

INGRESS-AUTO-POW-RED = 0

INGRESS-AMPLI-GAIN-LOW = 0

INGRESS-AMPLI-GAIN-HIGH = 0

EGRESS-AUTO-LASER-SHUT = 0

EGRESS-AUTO-POW-RED = 0

EGRESS-AMPLI-GAIN-LOW = 0

EGRESS-AMPLI-GAIN-HIGH = 0

HIGH-TX-BR-PWR = 0

HIGH-RX-BR-PWR = 0

SPAN-TOO-SHORT-TX = 0

SPAN-TOO-SHORT-RX = 0

Parameter Statistics:

Total RX Power (C+L) = 20.00 dBm

Total TX Power (C+L) = 20.00 dBm

Total RX Power = 20.00 dBm

Total TX Power = 23.01 dBm

RX Signal Power = -30.00 dBm

TX Signal Power = 20.00 dBm

TX Voa Attenuation = 0.0 dB

```

Egress Ampli Gain = 8.0 dB
Egress Ampli Tilt = 0.0 dB
Egress Ampli Gain Range = Normal
Egress Ampli Safety Control mode = auto
Egress Ampli Osri = OFF
Egress Ampli Force Apr = OFF

```

Configured Parameters:

```

TX Voa Attenuation = 0.0 dB
Egress Ampli Gain = 8.0 dB
Egress Ampli Tilt = 0.0 dB
Egress Ampli Gain Range = Normal
Egress Ampli Safety Control mode = auto
Egress Ampli Osri = OFF
Egress Ampli Force Apr = OFF

```

You have verified the status and values of the OTS controller interfaces on the ILA card.

Default OTS controllers for OLT cards

When the OLT and E-OLT cards are brought up, the system creates 34 OTS controllers by default. OLT is standard card and E-OLT is enhanced card.

When you bring up the OLT and E-OLT cards, the system creates 34 OTS controllers by default for line and L-band ports.

Use this table to identify the default OTS controllers assigned for each port and band type:

Table 15: Line side OTS controllers for C-band OLT and E-OLT cards

Card type	Port	Connector type	OTS Controller
C-band OLT and E-OLT	LINE 0	LC	ots 0/0/0/0
C-band OLT and E-OLT	L-BAND-1	LC	ots 0/0/0/1
L-band OLT and E-OLT	LINE 0	LC	ots 0/0/0/0

Table 16: Add/Drop side OTS controllers for C-band and L-band OLT and E-OLT cards

Card type	Port	Connector type	OTS Controller
C- and L-band OLT	A/D2...3	LC	ots 0/0/0/2...3
	A/D4-11	MPO	ots 0/0/0/4 to ots 0/0/0/11
	A/D12-19	MPO	ots 0/0/0/12 to ots 0/0/0/19
	A/D20-27	MPO	ots 0/0/0/20 to ots 0/0/0/27
OLT	A/D28-33	MPO	ots 0/0/0/28 to ots 0/0/0/33
C- and L-band E-OLT	A/D2...17	LC	ots 0/0/0/2...17
	A/D18-25	MPO	ots 0/0/0/18 to ots 0/0/0/25
E-OLT	A/D26-33	MPO	ots 0/0/0/26 to ots 0/0/0/33

The card types supported for this allocation are:

- NCS1K-OLT-C
- NCS1K-OLT-R-C
- NCS1K-OLT-L
- NCS1K-E-OLT-L
- NCS1K-E-OLT-C
- NCS1K-E-OLT-R-C

Verify the OTS controllers for OLT cards

Verify the status of the OTS controllers and their values for each port in the OLT card.

By default, when the OLT cards boot, the OTS controllers become activated with default values.

To modify the OTS controllers values, see *Command Reference Guide for NCS 1010 and NCS 1020*.

Follow these steps to verify the OTS controllers for the OLT and E-OLT cards.

Procedure

1. Verify the OTS controller status on the card.

Run the **show controller description** command.

Example

```
RP/0/RP0/CPU0:ios#show controller description
```

This output highlights the status of the OTS controller interfaces (*ots0/0/0/0...ots0/0/0/33*) on the OLT cards.

```
Wed Jun 29 16:03:59.914 UTC
```

Interface	Status	Description
Dfb0/0/0/0	up	
Osc0/0/0/0	up	
Ots0/0/0/0	up	
Ots0/0/0/1	up	
Ots0/0/0/2	up	
.		
.		
Output snipped		
.		
.		
Ots0/0/0/30	up	
Ots0/0/0/31	up	
Ots0/0/0/32	up	
Ots0/0/0/33	up	

2. Use the **show controllers ots 0/0/0/<port>** command to verify the OTS controller values.

Example

This command displays the LINE-0 OTS controller values.

```
RP/0/RP0/CPU0:ios#show controllers ots 0/0/0/0
```

If you want OTS controller status for	then run
LINE-0	show controllers ots 0/0/0/0
L-BAND-1	show controllers ots 0/0/0/1
A/D2...33	show controllers ots 0/0/0/2...33

Example

This output highlights the parameters that indicate the OTS controller is in operation.

```
Wed Jun 29 16:07:16.771 UTC
```

Controller State: Up

Transport Admin State: In Service

LED State: Green

Alarm Status:

Detected Alarms: None

Alarm Statistics:

RX-LOS-P = 0

RX-LOC = 0

TX-POWER-FAIL-LOW = 0

INGRESS-AUTO-LASER-SHUT = 0

INGRESS-AUTO-POW-RED = 0

INGRESS-AMPLI-GAIN-LOW = 0

INGRESS-AMPLI-GAIN-HIGH = 0

EGRESS-AUTO-LASER-SHUT = 0

EGRESS-AUTO-POW-RED = 0

EGRESS-AMPLI-GAIN-LOW = 0

EGRESS-AMPLI-GAIN-HIGH = 0

HIGH-TX-BR-PWR = 0

HIGH-RX-BR-PWR = 0

SPAN-TOO-SHORT-TX = 0

SPAN-TOO-SHORT-RX = 0

Parameter Statistics:

Total RX Power(C+L) = -10.00 dBm

Total TX Power(C+L) = 20.00 dBm

Total RX Power = 20.00 dBm

Total TX Power = 20.00 dBm

RX Signal Power = 20.00 dBm

TX Signal Power = 20.00 dBm

TX Voa Attenuation = 0.0 dB

Ingress Ampli Gain = 12.0 dB

Ingress Ampli Tilt = 0.0 dB

Ingress Ampli Gain Range = Normal

```

Ingress Ampli Safety Control mode = auto
Ingress Ampli Osri = OFF
Ingress Ampli Force Apr = OFF
Egress Ampli Gain = 16.0 dB
Egress Ampli Tilt = 0.0 dB
Egress Ampli Safety Control mode = auto
Egress Ampli Osri = OFF
Egress Ampli Force Apr = OFF

```

Configured Parameters:

```

TX Voa Attenuation = 0.0 dB
Ingress Ampli Gain = 12.0 dB
Ingress Ampli Tilt = 0.0 dB
Ingress Ampli Gain Range = Normal
Ingress Ampli Safety Control mode = auto
Ingress Ampli Osri = OFF
Ingress Ampli Force Apr = OFF
Egress Ampli Gain = 16.0 dB
Egress Ampli Tilt = 0.0 dB
Egress Ampli Safety Control mode = auto
Egress Ampli Osri = OFF
Egress Ampli Force Apr = OFF

```

You have verified the status and values of the OTS controller interfaces on the OLT card.

Comparison of configuration commands for OTS controller parameters for OLT and ILA nodes

This table summarizes the configuration commands used to set OTS controller parameters for OLT and ILA nodes. Use the appropriate command depending on the node type and required parameter.

Table 17: Commands to configure OTS controller parameters for OLT and ILA nodes

Command purpose	ILA	OLT
	tx-voa-attenuation <i>value</i>	tx-voa-attenuation <i>value</i>
	egress-ampli-gain-range normal extended	NA
	egress-ampli-gain <i>value</i>	egress-ampli-gain <i>value</i>
	egress-ampli-tilt <i>value</i>	egress-ampli-tilt <i>value</i>
	egress-ampli-osri on off	egress-ampli-osri on off
	egress-ampli-safety-control-mode auto disabled	egress-ampli-safety-control-mode auto disabled
	egress-ampli-force-apr on off	egress-ampli-force-apr on off
	ranantxpower ranantxpower <i>value</i> ranantxpower ranantxpower <i>value</i>	ranantxpower ranantxpower <i>value</i> ranantxpower ranantxpower <i>value</i>
	ranantxpower ranantxpower <i>value</i> ranantxpower ranantxpower <i>value</i>	ranantxpower ranantxpower <i>value</i> ranantxpower ranantxpower <i>value</i>

Command purpose	ILA	OLT
	raman-force-apr on off	raman-force-apr on off
	raman-osri on off	raman-osri on off
	raman-safety-control-mode auto disabled	raman-safety-control-mode auto disabled
	NA	ingress-ampli-gain-range {normal extended}
	NA	ingress-ampli-gain value
	NA	ingress-ampli-tilt value
	NA	ingress-ampli-osri {on off}
	NA	ingress-ampli-safety-control-mode {auto disabled}
	NA	ingress-ampli-force-apr {on off}
	NA	ingress-channel-slice channel-slice attn attenuation-value

For more information on the commands, see *Cisco NCS 1010 Command Reference Guide*.

OTS controller configuration parameters

This table describes the optical parameter values for the OTS controller configuration.

Table 18: OTS controller configuration parameters

Parameter	Description	Hardware capability	Range	Default
tx-voa-attenuation	TX VOA attenuation set point	VOA	OLT: 0-20 dB ILA: 0-15 dB	0.0
ampli-safety-control-mode (ingress/egress)	Amplifier control mode	Amplifier	auto and disabled	automatic

Parameter	Description	Hardware capability	Range	Default
ampli-gain-range (ingress/egress)		Amplifier	normal and extended	normal

Parameter	Description	Hardware capability	Range	Default
	Amplifier gain range If you change the gain range from Normal to Extended or the opposite way, without updating the proper gain value for the new gain range, this may happen: - The EDFA switches to the preconfigured or default value of the gain causing a mismatch between the operational and configured gain. - The gain configuration is lost during the reload of software or line card, as the configured gain mismatches with the latest gain-range. This may result in traffic interruption during these reload operations. Hence, we recommend that you explicitly configure the gain range mode as normal or extended, and the corresponding gain values for each mode to get the expected results. These are a few example scenarios that may not work as expected: - Scenario 1: Current running config: <pre>controller Ots R/S/I/P</pre>			

Parameter	Description	Hardware capability	Range	Default
	egress-apli-gain extended egress-apli-gain <gain value in extended mode> New applied config: controller Ots R/S/I/P no egress-apli-gain extended commit			
	▪ Scenario 2: Current running config: controller Ots R/S/I/P egress-apli-gain extended egress-apli-gain <gain value in extended mode> New applied config: controller Ots R/S/I/P egress-apli-gain Normal commit			

Parameter	Description	Hardware capability	Range	Default
-----------	-------------	---------------------	-------	---------

- Scenario 3:

Current running config:

```
controller
Ots R/S/I/P
egress-ampli-gain
<gain
value in
normal
mode>
```

New applied config:

```
controller
Ots R/S/I/P
egress-ampli-gain-range
extended
commit
```

Another example is a scenario that involves commit-replace command where you replace the existing gain configuration that does not have explicitly configured gain-range, with new gain-range and gain value.

- Scenario 4:

Current running config:

```
controller
Ots R/S/I/P
egress-ampli-gain
<gain value
in normal
mode>
```

New applied config:

Parameter	Description	Hardware capability	Range	Default
	<pre> * controller Ots R/S/I/P egress-ampli-gain-range extended egress-ampli-gain <gain value in extended mode> commit replace </pre>			
ampli-gain (ingress/egress)	Amplifier gain set point The actual range of amplifier gain set point depends on amplifier gain range.  Note Gain is calibrated to line port and so the supported range varies in Raman variants (OLT-C-R, ILA-C-R, and ILA-C-2R) due to insertion loss by Raman amplifier.	Amplifier	80-380	OLT ingress: 12, egress: 16 ILA: 8
ampli-tilt (ingress/egress)	Amplifier tilt	Amplifier	-5 to +5	0.0
osri (ingress/egress)	Optical safety remote interlock When osri is on, the EDFA is in shut state and vice versa.	Amplifier	on and off	off
ampli-force-apr (ingress/egress)	— When ampli-force-apr is set to <i>on</i>, the EDFA output power is clamped to 8 dBm.	Amplifier	on and off	off

Parameter	Description	Hardware capability	Range	Default
<code>channel-slice</code> <i>channel-slice</i> <code>attn</code> <i>attenuation</i> (ingress/egress)	Channel slice attenuation set point	–	1–1548 (channel slice) OLT: 0–250 (attenuation value in 0.1 dB) ILA: 0–50 (attenuation value in 0.1 dB)	0.0
<code>raman-tx-power</code> <i>pump</i> <i>instance</i> <code>value</code> <i>value</i>	Tx power	Raman amplifier	1–5 (pump instance) The values are: • Pump 1: 45–390 • Pump 2: 40–390 • Pump 3: 40–220 • Pump 4: 40–220 • Pump 5: 35–190	–
<code>raman-tx-</code> <code>power-disable</code> <i>pump</i> <i>instance</i>	Tx power	Raman amplifier	–	–
<code>raman-force-apr</code>	Force automatic power reduction When raman-force-apr is set to <i>on</i> , the Raman pump maximum output power is clamped to 10 mW.	Raman amplifier	on and off	off
<code>raman-osri</code>	Optical safety remote interlock When raman-osri is set to <i>on</i> , the Raman pumps are switched off.	Raman amplifier	on and off	off

Configuration examples for OTS controllers

Use the CLI examples to configure key attributes for OTS controllers. **Important**

The OTS controller commands do not support decimal inputs. The OTS controller commands consider the inputs to one decimal place for the parameter values. For example, if you provided 100 to configure the `attn` value for the `egress-channel-slice` 10, then the system takes the value as 10.0 dB.

- This example sets the **tx-voa-attenuation** to **10 dB**.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#tx-voa-attenuation 100
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- In the this example, the **egress-ampli-gain** is set to **20 dB**.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-gain 200
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- In the this example, the **egress-ampli-tilt** is set to **2.5 dB**.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-tilt 25
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- In the this examples, the **egress-ampli-gain-range** is set to **extended** and **Normal**.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-gain-range extended
RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-gain 360
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-gain-range normal
RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-gain 150
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- In the this example, the **egress-ampli-safety-control-mode** is set to **auto**.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-safety-control-mode auto
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- In the this example, the **egress-ampli-osri** is set to **on**.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-osri on
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- In the this example, the **egress-ampli-force-apr** is set to **on**.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-force-apr on
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- In the this example, the egress-channel-slice attenuation is set to 20 dB.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#egress-channel-slice 1 attn 200
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- In the this example, to establish connection using the existing GRPC framework.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#optical-line-control
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#partner-band-port ipv4 address 10.10.1.2
RP/0/RP0/CPU0:ios(config-Ots)#controller Ots0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- In the this example, the raman-tx-power is set to 55 mW.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#raman-tx-power 1 value 5500
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- This example sets the raman-force-apr to on.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#raman-force-apr on
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

- In the this example, the raman-osri is set to on.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0
RP/0/RP0/CPU0:ios(config-Ots)#raman-osri on
RP/0/RP0/CPU0:ios(config-Ots)#commit
```

Modify channel slice attenuation for OLT cards

Manually set the channel slice attenuation values for OLT cards.

The Automatic Power Control (APC) automatically configures the attenuation for the channel slices.

Follow these steps to modify channel slice attenuation:

Before you begin

Ensure APC is disabled. If not, run the commands:

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#optical-line-control controller ots 0/0/0/0 apc
disable
RP/0/RP0/CPU0:ios(config)#commit
```

For more information on APC commands, see [Configure APC](#)".

Procedure

1. Use the **show controllers ots R/S/I/P channel-slice-attenuation-info** command to view the existing channel slice information.

Example

This command displays the channel slice attenuation details for LINE-0 port.

```
RP/0/RP0/CPU0:ios#show controllers ots 0/0/0/0 channel-slice-attenuation-info
```

Example

This output shows the existing channel slice attenuation information for both egress and ingress channels.

```
Sun Mar 27 15:27:27.600 UTC
```

```
Attenuation Slices spacing      :          3.125 GHz
Attenuation Slices Range       :          1 - 1548
Slice start wavelength         :        1566.82 nm
Slice start frequency          :        191337.50 GHz
```

```
Sub Channel Attenuation information :
Ingress Channel Slice Attenuation :
```

```
-----
spectrum-slice num          Attenuation values (dB)
-----
  1 - 12      25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0
25.0   25.0   25.0
 13 - 24      25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0
25.0   25.0   25.0
 25 - 36      25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0
25.0   25.0   25.0
 37 - 48      25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0
25.0   25.0   25.0
 49 - 60      25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0
25.0   25.0   25.0
 61 - 72      25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0
25.0   25.0   25.0
.
.
output snipped
.
.
1501 - 1512   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0
25.0   25.0   25.0
1513 - 1524   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0
25.0   25.0   25.0
1525 - 1536   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0
25.0   25.0   25.0
1537 - 1548   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0   25.0
25.0   25.0   25.0
-----
```

```
Egress Channel Slice Attenuation :
```

spectrum-slice num	Attenuation values (dB)									
1 - 12	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
25.0 25.0 25.0										
13 - 24	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
25.0 25.0 25.0										
25 - 36	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
25.0 25.0 25.0										
37 - 48	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
25.0 25.0 25.0										
49 - 60	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
25.0 25.0 25.0										
61 - 72	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
25.0 25.0 25.0										
.										
.										
output snipped										
.										
.										
1501 - 1512	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
25.0 25.0 25.0										
1513 - 1524	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
25.0 25.0 25.0										
1525 - 1536	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
25.0 25.0 25.0										
1537 - 1548	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0	25.0
25.0 25.0 25.0										

2. Set the attenuation value for an egress channel slice.

Example

This command sets the attenuation for an egress channel slice 10 to *10.0 dB* through LINE-0 port ots 0/0/0/0 controller.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0 egress-channel-slice 10 attn
100
RP/0/RP0/CPU0:ios(config)#commit
Sun Apr 10 14:47:37.849 UTC
RP/0/RP0/CPU0:ios(config)#end
```

3. Verify the modified channel slice information for LINE-0 port.

Example

This command displays the channel slice attenuation information for LINE-0 port.

```
RP/0/RP0/CPU0:ios#show controllers ots 0/0/0/0 channel-slice-attenuation-info
```

Example

This output highlights the modified attenuation value for egress channel slice 10 that is set to *10.0 dB*. Each column represents the attenuation for each channel slice.

```
Sun Apr 10 14:47:47.050 UTC

Attenuation Slices spacing      :          3.125 GHz
```

```

Attenuation Slices Range      :          1 - 1548
Slice start wavelength       :          1566.82 nm
Slice start frequency        :          191337.50 GHz

```

```

Sub Channel Attenuation information :
Ingress Channel Slice Attenuation :

```

```

-----
spectrum-slice num          Attenuation values (dB)
-----
  1 - 12      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
 13 - 24      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
 25 - 36      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
 37 - 48      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
 49 - 60      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
 61 - 72      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
.
.
output snipped
.
.
1501 - 1512   25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
1513 - 1524   25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
1525 - 1536   25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
1537 - 1548   25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0

```

```

Egress Channel Slice Attenuation :

```

```

-----
spectrum-slice num          Attenuation values (dB)
-----
  1 - 12      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
10.0 25.0  25.0
 13 - 24      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
 25 - 36      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
 37 - 48      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
 49 - 60      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
 61 - 72      25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
.

```

```

.
output snipped
.
.
1501 - 1512  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
1513 - 1524  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
1525 - 1536  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
1537 - 1548  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0  25.0
25.0  25.0  25.0
RP/0/RP0/CPU0:ios#

```

The selected egress channel slice attenuation value is updated and the change is confirmed.

Configure the partner band IP address

Configure the peer IP addresses on C-band and L-band nodes for inter-band connection to increase optical fiber capacity.

NCS1010 devices support both C and L-band wavelengths. Establishing a connection between C- and L-band nodes requires configuring the peer IP addresses so each node can communicate with its counterpart.

Follow these steps to configure the partner band IP address between C- and L-band nodes:

Before you begin

Identify the rack, slot, instance, and port details for both C-band and L-band nodes.

Procedure

1. Enter Optical Line Control configuration mode.

Example

```

RP/0/RP0/CPU0:ios(config)# optical-line-control controller Ots0/0/0/0
RP/0/RP0/CPU0:ios(config-olc-ots)#

```

The terminal is in optical line control configuration mode.

2. Configure the IP address on the peer nodes.

Option

For the C-band node

Description

configure the L-band peer IP address using:

```

optical-line-control
controller ots
<Rack/Slot/Instance/Port>
partner-band-port ipv4 address
<L-band IP-address> controller ots
<Rack/Slot/Instance/Port>

```

For the L-band node

configure the C-band peer IP address using:

```

optical-line-control
controller ots
<Rack/Slot/Instance/Port>

```

Option

Description

```
partner-band-port ipv4 address
<C-band IP-address> controller ots
<Rack/Slot/Instance/Port>
```

**Note**

This configuration should be applied on all C and L-band nodes.

Example

```
RP/0/RP0/CPU0:ios#conf
RP/0/RP0/CPU0:ios(config)#optical-line-control controller Ots0/0/0/0
RP/0/RP0/CPU0:ios(config)#partner-band-port ipv4 address 192.168.1.2 controller
Ots0/0/0/0
```

The C-band and L-band nodes are successfully interconnected, providing expanded fiber capacity across both bands.

OTS-OCH controllers

This section explains the OTS-OCH controllers and their functions for optical transport section and optical channel configuration.

Optical Transport Section and Optical Channel (OTS-OCH) controller is a datapath controller type that

- is created on the LINE side of the OLT and ILA nodes using the **hw-module** command in Flex-Grid configuration, and
- supports optical cross-connection between the LINE side and COM side (Add/Drop ports) of the OLT nodes only.

Optical Cross Connection is a type of configuration that

- operates only in OLT nodes,
- defines the line side OTS-OCH channel as the source, and
- creates an OTS-OCH controller on the Add/Drop port (COM side) to which the cross connection is made.

OTS-OCH controllers for ILA and OLT cards

The OTS-OCH controller supports the

Table 19: OTS-OCH configurations

Configurations	OLT	ILA
Optical cross connections	NCS 1010	NA
	NCS 1020	
Flex grid	NCS 1010	NCS 1010

 Note

Validation rules for Flex Grid channel configuration

This table summarizes the validation rules for configuring Flex Grid channels on OLT and ILA nodes in NCS 1010 and NCS 1020 platforms before committing **hw-module** configurations.

Parameter	Validation rule	Supported platform for OLT	Supported platform for ILA
Channel ID	1 to 194.	NCS 1010, NCS 1020	NCS 1010
Center frequency	OLT-C: 191.3375 to 196.1750 THz OLT-L: 184.6153 to 190.8875 THz	NCS 1010, NCS 1020	NCS 1010
Channel width	25.000 GHz to 4837.500 GHz.	NCS 1010, NCS 1020	NCS 1010
Channel overlap	From R7.9.1, permitted as Nyquist channels are supported. See ASE loading on page 77.	NCS 1010, NCS 1020	NCS 1010
Configuration precision	From R7.9.1, you can set channel center frequency and width with 1 MHz resolution.	NCS 1010, NCS 1020	NCS 1010

Optional: python scripting for fixed grid mode setup

The system configures the OLT and ILA nodes for OTS-OCH controllers as complete Flex Grid mode configuration. However, for ease of Fixed Grid Mode setup, there is a configuration script to create 75 or 150 GHz or appropriate fixed grid channels using the Flex Grid configuration model.

Usage example

Use the python-based configuration script to automatically create 75 or 150 GHz fixed grid channels on ports 2 and 3 using the commands:

Requirement

Use this script only for a colored solution that uses the NCS1K-MD-320/E-C patch panel with fixed channel width.

Create OTS-OCH controllers on ILA cards

Create OTS-OCH controllers on ILA cards in NCS 1010 using the commands in configuration mode.

- **hw-module location** *location inline-ampli grid-mode mode*
- **channel-id** *channel-id centre-freq frequency width channel-width*

When the ILA cards boot up, the OTS-OCH controllers are not created by default. The LINE OTS-OCH controllers can be created using the **hw-module** command.

The supported ILA and OLT cards are:

- NCS1K-ILA-2R-C
- NCS1K-ILA-R-C
- NCS1K-ILA-C
- NCS1K-OLT-R-C
- NCS1K-OLT-C

Before you begin

Enter the configuration mode using the **configure** command.

Procedure

1. Create the OTS-OCH controllers on the LINE side of the ILA-C node.

Example

```
RP/0/RP0/CPU0:ios(config)#hw-module location 0/0/NXR0 inline-ampli grid-mode
flex
RP/0/RP0/CPU0:ios(config-hwmod-ila-flexi)#channel-id 1 centre-freq 196.1 width
75
RP/0/RP0/CPU0:ios(config-hwmod-ila-flexi)# commit
```

The OTS-OCH controller is created for *channel 1 on LINE 0 and LINE 2 ports* of the ILA-C node.

2. View the OTS-OCH controllers.

Run `show controllers ots-och`.

Example

```
RP/0/RP0/CPU0:ios#show controllers ots-och ?
```

Example

This output displays the OTS-OCH controller that is created on both LINE 0 and LINE 2 ports of the ILA-C node.

```
0/0/0/0/1          Ots-Och Interface Instance
0/0/0/2/1          Ots-Och Interface Instance
R/S/I/P/B or R/S/I/P Forward interface in Rack/Slot/Instance/Port/Breakout
format or R/S/I/P format
```

3. Use the `show controllers ots-och 0/0/0/0/*` command to view the parameters of the OTS-OCH controller.**Example**

This command displays the LINE-0 OTS-OCH controller values for channel ID 1.

```
RP/0/RP0/CPU0:ios#show controllers ots-och 0/0/0/0/1
```

If you want OTS-OCH controller status for	then run
LINE-0	<code>show controllers ots-och 0/0/0/0/1</code>
LINE-2	<code>show controllers ots-och 0/0/0/2/1</code>

Example

This output displays the parameters of the OTS-OCH controller.

```
Thu Apr  7 13:22:29.125 UTC

Controller State: Up

Transport Admin State: In Service

Alarm Status:
-----
Detected Alarms: None

Alarm Statistics:
-----
```

```

RX-LOS-P = 0
TX-POWER-FAIL-LOW = 0

Parameter Statistics:
-----
Total RX Power = -10.50 dBm
Total TX Power = -10.50 dBm

```

```

Configured Parameters:
-----

```

4. View the flex grid information on the ILA node

Example

This command provides the flex grid information on the ILA node.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/0/NXR0 inline-ampli
```

Example

This output displays the flex grid information on the ILA node.

```

Sat Jul  2 02:46:33.657 UTC
Location:          0/0/NXR0
Status:            Provisioned
Flex Grid Info
Channel Number    Centre Frequency (THz)    Channel Width (GHz)
1                 191.375000                75.000
2                 191.450000                75.000
3                 191.525000                75.000
4                 191.600000                75.000
5                 191.675000                75.000
6                 191.750000                75.000
7                 191.825000                75.000
8                 191.900000                75.000
9                 191.975000                75.000
10                192.050000                75.000
11                192.125000                75.000
12                192.200000                75.000
13                192.275000                75.000
14                192.350000                75.000
15                192.425000                75.000
16                192.500000                75.000
17                192.575000                75.000
18                192.650000                75.000
19                192.725000                75.000
20                192.800000                75.000
21                192.875000                75.000
22                192.950000                75.000
23                193.025000                75.000
24                193.100000                75.000
25                193.175000                75.000
26                193.250000                75.000
27                193.325000                75.000
28                193.400000                75.000
29                193.475000                75.000
30                193.550000                75.000

```

31	193.625000	75.000
32	193.700000	75.000
33	193.775000	75.000
34	193.850000	75.000
35	193.925000	75.000
36	194.000000	75.000
37	194.075000	75.000
38	194.150000	75.000
39	194.225000	75.000
40	194.300000	75.000
41	194.375000	75.000
42	194.450000	75.000
43	194.525000	75.000
44	194.600000	75.000
45	194.675000	75.000
46	194.750000	75.000
47	194.825000	75.000
48	194.900000	75.000
49	194.975000	75.000
50	195.050000	75.000
51	195.125000	75.000
52	195.200000	75.000
53	195.275000	75.000
54	195.350000	75.000
55	195.425000	75.000
56	195.500000	75.000
57	195.575000	75.000
58	195.650000	75.000
59	195.725000	75.000
60	195.800000	75.000
61	195.875000	75.000
62	195.950000	75.000
63	196.025000	75.000
64	196.100000	75.000

The OTS-OCH controllers on the ILA cards are created.

What to do next

Create OTS-OCH controllers on OLT cards.

Create OTS-OCH controllers on OLT cards

Create OTS-OCH controllers on OLT cards in NCS 1010 and NCS 1020 using the commands in configuration mode.

- **hw-module location** *location* **terminal-ampli grid-mode** *mode*
- **channel-id** *channel-id* **centre-freq** *frequency* **width** *channel-width*

When the OLT cards boot up, the OTS-OCH controllers are not created by default. The LINE OTS-OCH controllers can be created using the **hw-module** command.

Before you begin

Enter the configuration mode using the **configure** command.

Procedure

1. Create the OTS-OCH controllers on the LINE side of the OLT-C node.

Example

```
RP/0/RP0/CPU0:ios(config)#hw-module location 0/0/nxr0 terminal-ampli grid-mode
flex
RP/0/RP0/CPU0:ios(config-hwmod-olt-flexi)#channel-id 1 centre-freq 196.1 width
75
RP/0/RP0/CPU0:ios(config-hwmod-olt-flexi)#commit
```

The OTS-OCH controller is created for *channel 1 on LINE port* in the OLT-C node.

2. View the OTS-OCH controllers.

Run `show controllers ots-och`.

Example

```
RP/0/RP0/CPU0:ios#show controllers ots-och ?
```

Example

This output displays the OTS-OCH controller that is created on the LINE port of the OLT-C node.

```
0/0/0/0/1          Ots-Och Interface Instance
R/S/I/P/B or R/S/I/P Forward interface in Rack/Slot/Instance/Port/Breakout
format or R/S/I/P format
```

3. Use the `show controllers ots-och 0/0/0/0/1` command to view the parameters of the OTS-OCH controller.**Example**

This command displays the LINE-0 OTS-OCH controller values for channel ID 1.

```
RP/0/RP0/CPU0:ios#show controllers ots-och 0/0/0/0/1
```

Example

This output displays the parameters of the OTS-OCH controller.

```
Thu Apr  7 13:22:29.125 UTC
```

Controller State: Up

Transport Admin State: In Service

Alarm Status:

Detected Alarms: None

Alarm Statistics:

RX-LOS-P = 0

TX-POWER-FAIL-LOW = 0

Parameter Statistics:

Total RX Power = -10.50 dBm

Total TX Power = -10.50 dBm

Configured Parameters:

4. View the flex grid information on the OLT node

Example

This command provides the flex grid information on the OLT node.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/0/NXR0 terminal-ampli
```

Example

This output displays the flex grid information on the OLT node.

Tue Jun 28 15:46:07.026 UTC

Legend:

NXC - Channel not cross-connected
ACTIVE - Channel cross-connected to data port
ASE - Channel filled with ASE
FAILED - Data channel failed, pending transition to ASE

Location: 0/0/NXR0

Status: Provisioned

Flex Grid Info

Channel Number Status	Centre Frequency (THz)	Channel Width (GHz)	Channel
1	196.100000	75.000	NXC
2	196.025000	75.000	NXC
3	195.950000	75.000	NXC
4	195.875000	75.000	NXC
5	195.800000	75.000	NXC
6	195.725000	75.000	NXC
7	195.650000	75.000	NXC
8	195.575000	75.000	NXC
9	195.500000	75.000	NXC
10	195.425000	75.000	NXC
11	195.350000	75.000	NXC
12	195.275000	75.000	NXC
13	195.200000	75.000	NXC
14	195.125000	75.000	NXC
15	195.050000	75.000	NXC
16	194.975000	75.000	NXC
17	194.900000	75.000	NXC
18	194.825000	75.000	NXC
19	194.750000	75.000	NXC
20	194.675000	75.000	NXC
21	194.600000	75.000	NXC
22	194.525000	75.000	NXC
23	194.450000	75.000	NXC
24	194.375000	75.000	NXC
25	194.300000	75.000	NXC
26	194.225000	75.000	NXC
27	194.150000	75.000	NXC

28	194.075000	75.000	NXC
29	194.000000	75.000	NXC
30	193.925000	75.000	NXC
31	193.850000	75.000	NXC
32	193.775000	75.000	NXC
33	193.700000	75.000	NXC
34	193.625000	75.000	NXC
35	193.550000	75.000	NXC
36	193.475000	75.000	NXC
37	193.400000	75.000	NXC
38	193.325000	75.000	NXC
39	193.250000	75.000	NXC
40	193.175000	75.000	NXC
41	193.100000	75.000	NXC
42	193.025000	75.000	NXC
43	192.950000	75.000	NXC
44	192.875000	75.000	NXC
45	192.800000	75.000	NXC
46	192.725000	75.000	NXC
47	192.650000	75.000	NXC
48	192.575000	75.000	NXC
49	192.500000	75.000	NXC
50	192.425000	75.000	NXC
51	192.350000	75.000	NXC
52	192.275000	75.000	NXC
53	192.200000	75.000	NXC
54	192.125000	75.000	NXC
55	192.050000	75.000	NXC
56	191.975000	75.000	NXC
57	191.900000	75.000	NXC
58	191.825000	75.000	NXC
59	191.750000	75.000	NXC
60	191.675000	75.000	NXC
61	191.600000	75.000	NXC
62	191.525000	75.000	NXC
63	191.450000	75.000	NXC
64	191.375000	75.000	NXC

The OTS-OCH controllers on the ILA cards are created.

What to do next

Create OTS-OCH controllers on OLT cards.

Create optical cross connection on OLT nodes

Create Optical Cross Connection (OXC) between Line and Add/Drop ports in OLT nodes in NCS 1010 and NCS 1020.

By default, all the channels remain blocked in both Add and Drop directions. The OXC configuration unblocks the Add-Drop port channel mentioned as add-drop-channel.

Before you begin

Enter the configuration mode using the **configure** command.

Procedure

1. Use the controller **ots-ochRack/Slot/Instance/Port/Channel-id-numberadd-drop-channel** **ots-ochRack/Slot/Instance/Port/Channel-id-number** command to configure the optical cross-connect.

Example

```
RP/0/RP0/CPU0:ios(config)#controller ots-och 0/0/0/0/1 add-drop-channel ots-och
0/0/0/33/1
RP/0/RP0/CPU0:ios(config)#commit
```

Line port and add/drop port channel IDs must be the same.

The OTS-OCH controller is created on the Add/Drop port to which the cross-connection is made on the COM side.

2. Use the **show controller ots-och ?** command view the OTS-OCH controller.

Example

```
RP/0/RP0/CPU0:ios#show controller ots-och ?
```

Example

This output highlights the OTS-OCH controller that is created on the Add/Drop port to which the cross-connection is made on the COM side.

```
0/0/0/0/1          Ots-Och Interface Instance
0/0/0/33/1         Ots-Och Interface Instance
R/S/I/P/B or R/S/I/P Forward interface in Rack/Slot/Instance/Port/Breakout
format or R/S/I/P format
```

3. Use the **show controllers ots-och 0/0/0/0/*** command to view the parameters of the OTS-OCH controller.

Example

This command displays the LINE-0 OTS-OCH controller values for channel ID 1.

```
RP/0/RP0/CPU0:ios#show controllers ots-och 0/0/0/0/1
```

If you want OTS-OCH controller status for	then run
LINE-0	<code>show controllers ots-och 0/0/0/0/1</code>
A/D2...33	<code>show controllers ots-och 0/0/0/2...33/1</code>

Example

This output displays the parameters of the OTS-OCH controller on the LINE side.

```
Tue Apr  5 06:32:29.696 UTC

Controller State: Up

Transport Admin State: In Service

    Alarm Status:
    -----
    Detected Alarms: None

    Alarm Statistics:
    -----
    RX-LOS-P = 0
```

```

TX-POWER-FAIL-LOW = 0

Parameter Statistics:
-----
Total RX Power = -10.50 dBm
Total TX Power = -10.50 dBm

Cross Connect Info:
-----
Add-Drop Channel  = Ots-Och0/0/0/33/1

Configured Parameters:
-----

```

Note

The Add/Drop channel that is cross-connected to the line port 0/0/0/0/1 is displayed in the output.

4. View the created OTS-OCH controller.

Example

To view the OTS-OCH controllers, use this command:

```
RP/0/RP0/CPU0:ios#show controllers ots-och ?
```

Example

This output displays the OTS-OCH controller interfaces.

```

0/0/0/0/1          Ots-Och Interface Instance
0/0/0/0/10         Ots-Och Interface Instance
.
.
output snipped
.
.
0/0/0/0/29         Ots-Och Interface Instance
0/0/0/0/3          Ots-Och Interface Instance
0/0/0/0/49         Ots-Och Interface Instance
0/0/0/0/5          Ots-Och Interface Instance
.
.
output snipped
.
.
0/0/0/0/64         Ots-Och Interface Instance
0/0/0/0/7          Ots-Och Interface Instance
0/0/0/0/8          Ots-Och Interface Instance
0/0/0/0/9          Ots-Och Interface Instance

```

```
R/S/I/P/B or R/S/I/P Forward interface in Rack/Slot/Instance/Port/Breakout
format or R/S/I/P format
```

DFB controllers

This section explains the purpose, attributes, and operation of distributed feedback (DFB) controllers for RAMAN probes on the NCS 1010 platform.

A distributed feedback (DFB) controller is a datapath controller type for the RAMAN probe that

- represents the optical layer of a DFB channel alongside the OSC controller,
- regulates DFB probe power through a variable optical attenuator (VOA) within the range of -14 to +5 dBm, and
- combines the dedicated DFB probe with other signals at the LINE-TX port in Raman-amplified NCS 1010 nodes.

A DFB probe, also known as a RAMAN probe, is a tuning mechanism that

- operates at the LINE port of ILA and OLT nodes equipped with RAMAN amplifiers,
- generates a dedicated DFB laser at 191.1THz (1568.77nm) to perform a link continuity check for optical safety at LINE-TX port, and
- enables RAMAN tuning to check span loss.

View the parameters of the LINE 0 DFB controller.

Command

```
RP/0/RP0/CPU0:ios#show controllers dfb 0/0/0/0
```

This output displays the parameters of the LINE 0 DFB controller.

Example

```
Wed Mar 23 06:05:09.074 UTC

Controller State: Up

Transport Admin State: In Service

Laser State: On

Alarm Status:
-----
Detected Alarms: None

Alarm Statistics:
-----
RX-LOS-P = 1
TX-POWER-FAIL-LOW = 106

Parameter Statistics:
-----
Total TX Power = 6.79 dBm
Total RX Power = -8.30 dBm
```

```
TX Voa Attenuation = 0.0 dB
```

```
Configured Parameters:
```

```
-----
```

```
TX Voa Attenuation = 0.0 dB
```

Default DFB controllers for OLT cards

When the ILA, E-ILA, OLT and E-OLT cards are brought up, the system DFB controller for each Raman port by default.

When you bring up the OLT and ILA cards, the system automatically creates a DFB controller for each Raman-enabled line port.



Note

DFB controller is supported only in C-band nodes.

Table 20: Default DFB controllers for OLT and ILA cards

Card type	Port	OTS Controller
ILA and E-ILA	LINE-0 (LINE-RX)	dfb 0/0/0/0
ILA and E-ILA	LINE-2 (LINE-RX)	dfb 0/0/0/2
OLT	LINE-0 (LINE-RX)	dfb 0/0/0/0
E-OLT	LINE R-0-T (LINE-R)	dfb 0/0/0/0

The OLT card types supported for this allocation are:

- NCS1K-OLT-R-C
- NCS1K-E-OLT-R-C
- NCS1K-E2-OLT-R-C
- NCS1K-E2-OLT-RE-C

The ILA card types supported for this allocation are:

- NCS1K-ILA-R-C
- NCS1K-ILA-2R-C
- NCS1K-E-ILA-R-C
- NCS1K-E-ILA-2R-C
- NCS1K-E-ILA-R-C-2
- NCS1K-E-ILA-RE-C
- NCS1K-E-ILA-RE-C-2
- NCS1K-E-ILA-2RE-C

Modify the DFB parameters for OLT and ILA cards

Modify the DFB parameters (such as attenuation, admin state, and shutdown) for OLT and ILA cards.

- **controller dfb***Rack/Slot/Instance/Port*
- **tx-voa-attenuation***value*
- **tx-low-threshold***value*
- **sec-admin-state** *normal maintenance*
- **transmit-shutdown**
- **shutdown**

DFB controllers support multiple parameter adjustments on OLT and ILA nodes.

Follow these steps to configure the DFB parameters for OLT and ILA cards.



Note

The DFB controller commands do not support decimal inputs. The DFB controller commands consider the inputs to one decimal place for the parameter values. For example, to configure the *tx-voa-attenuation* value for *dfb 0/0/0/0* to *2.0 dB*, provide the *tx-voa-attenuation* value for the DFB controller *dfb 0/0/0/0* as *20*.

Before you begin

Enter the configuration mode using the **configure** command.

Procedure

1. Set the *tx-voa-attenuation* value.

Example

This example sets the *tx-voa-attenuation* value to *2.0dB* for LINE-0-RX port.

```
RP/0/RP0/CPU0:ios(config)#controller dfb 0/0/0/0
RP/0/RP0/CPU0:ios(config-Dfb)#tx-voa-attenuation 20
RP/0/RP0/CPU0:ios(config-Dfb)#commit
RP/0/RP0/CPU0:ios(config-Dfb)#end
```

The DFB laser power is attenuated based on the updated value and the TX power changes accordingly.

2. Set *sec-admin-state*.

Example

This example sets the *sec-admin-state* to *maintenance* for LINE-0-RX port.

```
RP/0/RP0/CPU0:ios(config)#controller dfb 0/0/0/0
RP/0/RP0/CPU0:ios(config-Dfb)#sec-admin-state maintenance
RP/0/RP0/CPU0:ios(config-Dfb)#commit
RP/0/RP0/CPU0:ios(config-Dfb)#end
```

3. Shutdown the DFB controller.

Example

This example shuts down the DFB controller for LINE-0-RX port.

```
RP/0/RP0/CPU0:ios(config)#controller dfb 0/0/0/0
RP/0/RP0/CPU0:ios(config-Dfb)#shutdown
RP/0/RP0/CPU0:ios(config-Dfb)#commit
RP/0/RP0/CPU0:ios(config-Dfb)#end
```

The DFB controller on LINE-0-RX port is shut down.

4. (Optional) Check the configured value for the DFB controller.

Use the **show controllers dfb <R/S//P>** command to confirm the settings applied.

Example

```
RP/0/RP0/CPU0:ios#show controllers dfb 0/0/0/0
```

Example

This output highlights the *tx-voa-attenuation* is set to *2.0 dB* and the *sec-admin-state* set to *maintenance*.

```
Thu Apr 21 17:05:41.311 UTC

Controller State: Up

Transport Admin State: Maintenance

Laser State: On

Alarm Status:
-----
Detected Alarms: None

Alarm Statistics:
-----
RX-LOS-P = 0
TX-POWER-FAIL-LOW = 0

Parameter Statistics:
-----
Total TX Power = 20.00 dBm
Total RX Power = 10.00 dBm
TX Voa Attenuation = 2.0 dB

Configured Parameters:
-----
TX Voa Attenuation = 2.0 dB
```

Example

This output highlights the *Controller State*, *Transport Admin State*, and *Laser State* set to *shut down*.

```
Thu Apr 21 17:08:40.211 UTC

Controller State: Administratively Down

Transport Admin State: Out Of Service
```

Laser State: Off

Alarm Status:

Detected Alarms: None

Alarm Statistics:

RX-LOS-P = 0

TX-POWER-FAIL-LOW = 0

Parameter Statistics:

Total TX Power = -50.00 dBm

Total RX Power = 10.00 dBm

TX Voa Attenuation = 2.0 dB

Configured Parameters:

TX Voa Attenuation = 2.0 dB

DFB parameters for the selected OLT or ILA card are configured as specified.

What to do next

Verify system alarms or operational impacts using monitoring commands as appropriate.

OCH controllers

This section explains what OCH controllers are, their key features, and how they support optical cross-connection in NCS 1010 devices.

An optical channel (OCH) controller is a datapath controller type that

- manages the optical channel ports on NCS 1010 passive modules and CCMD-16 cards,
- enables mapping and identification of OCH interfaces, and
- supports optical cross-connection functions for network operations.

Default OCH controllers for NCS 1010 passive devices and CCMD-16 cards

Passive modules/line cards	Port type	Total channel ports	Port labels	OCH controllers
NCS1K-BRK-8	LC Ports	8	TX-0-RX...TX-7-RX	och R/S/I/0 to och R/S/I/7
NCS1K-BRK-24	LC Ports	24	TX-0-RX...TX-23-RX	och R/S/I/0 to och R/S/I/23

Passive modules/line cards	Port type	Total channel ports	Port labels	OCH controllers
NCS1K-MD-320/E-C	LC Ports	32	0...31-TX/RX	och R/S/I/0 to och R/S/I/31
NCS1K14-CCMD-16-C	LC Ports	16	A/D1...16	och R/S/I/1 to och R/S/I/16

**Note**

R/S/I/P stands for Rack/Slot/Instance/Port.

Verify the OCH controller parameters

Verify the status of the OCH controllers and their values for each port in these modules.

- NCS1K-BRK-8
- NCS1K-BRK-24
- NCS1K-MD-320-C
- NCS1K-MD-32E-C
- NCS1K14-CCMD-16-C
- NCS1K14-CCMD-16-L

By default, when the passive modules and the CCMD-16 modules boot, the OCH controllers become activated with default values.

Follow these steps to verify the OCH controllers for the passive modules and CCMD-16 module.

Procedure

1. View the status of the OCH controllers.

Example

```
RP/0/RP0/CPU0:ios#show controller description
```

Example

This output highlights the list of activated OCH controllers

```
Tue Apr 12 17:17:51.306 UTC
```

Interface	Status	Description
Och0/1/0/0	up	
Och0/1/0/1	up	
Och0/1/0/2	up	

```

Och0/1/0/3          up
Och0/1/0/4          up
Och0/1/0/5          up
Och0/1/0/6          up
.
.
Output snipped
.
.
Och0/1/0/28         up
Och0/1/0/29         up
Och0/1/0/30         up
Och0/1/0/31         up
Oms0/1/0/32         up

```

2. View the parameters of the OCH controller.

Use the **show controllers och R/S/I/P** command to view the OCH controller parameters.

Example

This output displays the OCH controller parameters for BRK-8 breakout module.

```

Tue May 10 11:27:31.354 UTC

Controller State: Down

LED State: Red

    Alarm Status:
    -----
    Detected Alarms:
        RX-LOS-P

    Alarm Statistics:
    -----
    RX-LOS-P = 1
    TX-POWER-FAIL-LOW = 0

    Parameter Statistics:
    -----
    TX Power = -50.00 dBm
    RX Power = -50.00 dBm

```

Example

This output shows the OCH parameters for mux/demux patch panel.



Note

The parameters of the OCH controller for the Mux/Demux panel contain information about the Channel Width, Frequency, and Wavelength.

```

Wed May 25 11:50:03.481 UTC

Controller State: Down

```

```

LED State: Red

Alarm Status:
-----
Detected Alarms:
    RX-LOS-P

Alarm Statistics:
-----
RX-LOS-P = 1
TX-POWER-FAIL-LOW = 0

Parameter Statistics:
-----
TX Power = -50.00 dBm
RX Power = -50.00 dBm
channel Frequency = 196.025 THz
Maximum Channel Width = 150.0 GHz
Channel Wavelength = 1529.36 nm

```

You have verified the operational status and parameter values for all OCH controllers in the specified modules.

OMS controller

This section provides details about OMS controllers created by default for Mux/Demux and breakout panels, including supported interfaces, status and parameter commands, sample outputs, and insertion loss values for supported patch panels.

When nodes with Mux/Demux panels and breakout panels are brought up, OMS controllers are created by default. The OMS controllers for the patch panels are:

Table 21: Supported interfaces

Patch panel	Port type	OMS ports	Interfaces
NCS1K-BRK-8	MPO Ports	8	oms R/S/I/8 to oms R/S/I/15
NCS1K-BRK-24	MPO Ports	8	oms R/S/I/24 to oms R/S/I/31
NCS1K-MD-320/E-C	LC Ports	1	oms R/S/I/32



Note

R/S/I/P stands for Rack/Slot/Instance/Port.

To view the status of the OMS controller, use this command:

```
RP/0/RP0/CPU0:ios#show controller description
```

This output shows the status of the OMS controller.

Tue Apr 12 17:17:51.306 UTC

Interface	Status	Description
Och0/1/0/0	up	
Och0/1/0/1	up	
Och0/1/0/2	up	
.		
.		
Output snipped		
.		
.		
Och0/1/0/29	up	
Och0/1/0/30	up	
Och0/1/0/31	up	
Oms0/1/0/32	up	
Och0/3/0/0	up	
Och0/3/0/1	up	
.		
.		
Output snipped		
.		
.		
Och0/3/0/29	up	
Och0/3/0/30	up	
Och0/3/0/31	up	
Oms0/3/0/32	up	

To view the parameters of the OMS controller for the BRK-24 panel, use this command:

```
RP/0/RP0/CPU0:ios#show controllers oms 0/1/0/25
```

This output shows the parameters of the OMS controller for the BRK-24 panel.

Thu Jul 14 11:05:50.419 UTC

Controller State: Down

Transport Admin State: Automatic In Service

LED State: Red

Alarm Status:

Detected Alarms:

RX-LOS-P

Alarm Statistics:

RX-LOS-P = 1

TX-POWER-FAIL-LOW = 0

Parameter Statistics:

TX Power = -7.40 dBm

RX Power = -50.00 dBm

To view the parameters of the OMS controller for the Mux/Demux panel, use this command:

```
RP/0/RP0/CPU0:ios#show controllers oms 0/3/0/32
```

This output shows the parameters of the OMS controller for the Mux/Demux panel.

```
Tue May 10 11:28:02.856 UTC

Controller State: Down

LED State: Red

    Alarm Status:
    -----
    Detected Alarms:
        RX-LOS-P

    Alarm Statistics:
    -----
    RX-LOS-P = 1
    TX-POWER-FAIL-LOW = 0

    Parameter Statistics:
    -----
    TX Power = -50.00 dBm
    RX Power = -50.00 dBm
```

Insertion loss for each port is calculated and the power values are displayed on the OMS controller for NCS1K-BRK-8 and OCH controller for NCS1K-BRK-24. Insertion loss per port for NCS1K-BRK-24 is 5.9 dBm and NCS1K-BRK-8 is 0.6 dBm. The NCS1K-MD-320/E-C panels have a maximum insertion loss of 6.2 dBm for the respective Mux and Demux sections.

OSC controllers

This section explains how OSC controllers provide communication, monitoring, and management functions within optical networks.

The Optical Service Channel (OSC) controller is used to represent the optical capabilities, configuration, and monitoring of the OSC laser. The corresponding Gigabit Ethernet interface is the child interface that represents Ethernet capabilities, configuration, and monitoring.

OSC provides a communication channel for traffic coming from a UDC port. OSC serves as a channel probe to check fiber continuity between two nodes. OSC provides remote node management functionality. OSC is generated and terminated on each line side. OSC-C operates at a frequency of 198.50 THz and OSC-L operates at a frequency of 184.450 THz.

Nodes with NCS1K-OLT-R-C or NCS1K-OLT-C, NCS1K-OLT-L cards have one OSC controller. To view the status of the OSC controller, use this command:

```
RP/0/RP0/CPU0:ios#show controller description
```

This output highlights the status of the OSC controller for the NCS1K-OLT-R-C or NCS1K-OLT-C, NCS1K-OLT-L or NCS1K-ILA-L cards.

```
Tue Apr 12 17:17:51.306 UTC

Interface                Status      Description
-----
Osc0/0/0/0               up
Ots0/0/0/0               up
```

```
Ots0/0/0/1          up
Ots0/0/0/2          up
.
.
output snipped
.
.
Ots0/0/0/31         up
Ots0/0/0/32         up
Ots0/0/0/33         up
```

Nodes with NCS1K-ILA-2R-C, NCS1K-ILA-R-C, NCS1K-ILA-L or NCS1K-ILA-C card have two OSC controllers. To view the OSC controllers, use this command:

```
RP/0/RP0/CPU0:ios#show controllers description
```

This output highlights the status of the OSC controller for the NCS1K-ILA-2R-C, NCS1K-ILA-R-C, NCS1K-ILA-L or NCS1K-ILA-C card.

```
Tue Apr 12 17:20:20.667 UTC
```

Interface	Status	Description
Osc0/0/0/0	up	
Osc0/0/0/2	up	
Ots0/0/0/0	up	
Ots0/0/0/1	up	
Ots0/0/0/2	up	
Ots0/0/0/3	up	

To view the parameters of the LINE 0 OSC controller, use this command:

```
RP/0/RP0/CPU0:ios#show controllers osc 0/0/0/0
```

This output shows the parameters of the LINE 0 OSC controller.

```
Wed Mar 23 06:04:18.565 UTC
```

```
Controller State: Down
```

```
Transport Admin State: In Service
```

```
Laser State: Off
```

```
Alarm Status:
```

```
-----
Detected Alarms:
    RX-LOS-P
```

```
Alarm Statistics:
```

```
-----
RX-LOS-P = 369
TX-POWER-FAIL-LOW = 0
```

```
Parameter Statistics:
```

```
-----
Total TX Power = -50.00 dBm
Total RX Power = -50.00 dBm
```

Configured Parameters:

Configure OSC Controllers

There are multiple parameters for the OSC controllers. You can configure the parameters that are required for the different configuration for an OSC controller on an ILA or OLT node by using these commands in the configuration mode:

- **transmit-power** *value*
- **sec-admin-state** {normal | maintenance}
- **tx-low-threshold**
- **shutdown**

Examples

In this example, the transmit-power is set to 2 dBm. The OSC Tx power can be changed by configuring the OSC transmit power attribute. This attribute internally regulates the OSC Tx VOA.



Note

The OSC controller commands do not support decimal inputs. The OSC controller commands consider the inputs to one decimal place for the parameter values. In this example, the transmit-power parameter is provided as 20 to configure the transmit-power parameter to 2 dBm.

```
RP/0/RP0/CPU0:ios(config)#controller osc 0/0/0/0 transmit-power 20
Fri May 13 11:26:53.445 UTC
WARNING! Changing TX power can impact traffic
RP/0/RP0/CPU0:ios(config)#commit
Fri May 13 11:26:55.127 UTC
RP/0/RP0/CPU0:ios(config)#end
```

To view the parameters of the OSC controller, use this command:

```
RP/0/RP0/CPU0:ios#show controllers osc 0/0/0/0
```

This output shows the parameters of the OSC controller.

```
Fri May 13 11:26:59.542 UTC

Controller State: Up

Transport Admin State: In Service

Laser State: On

Alarm Status:
-----
Detected Alarms: None

Alarm Statistics:
```

```

-----
RX-LOS-P = 0
TX-POWER-FAIL-LOW = 0

Parameter Statistics:
-----
Total TX Power = 1.89 dBm
Total RX Power = -17.30 dBm

Configured Parameters:
-----

```

In this example, the *sec-admin-state* is set to *maintenance*.

```

RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller osc 0/0/0/0 sec-admin-state maintenance
RP/0/RP0/CPU0:ios(config)#commit
RP/0/RP0/CPU0:ios(config)#end

```

To view the parameters of the OSC controller, use this command:

```

RP/0/RP0/CPU0:ios#show controllers osc 0/0/0/0

```

This output highlights the *Transport Admin State* of the OSC controller that is set to *Maintenance*.

```

Fri Apr 22 15:55:36.324 UTC

Controller State: Up

Transport Admin State: Maintenance

Laser State: On

    Alarm Status:
    -----
    Detected Alarms: None

    Alarm Statistics:
    -----
    RX-LOS-P = 0
    TX-POWER-FAIL-LOW = 0

    Parameter Statistics:
    -----
    Total TX Power = -10.00 dBm
    Total RX Power = -30.00 dBm

    Configured Parameters:
    -----

```

In this example, the OSC controller is *shut down*.

```

P/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller osc 0/0/0/0 shutdown
RP/0/RP0/CPU0:ios(config)#commit
RP/0/RP0/CPU0:ios(config)#end

```

To view the parameters of the OSC controller that is *shut down*, use this command:

```
RP/0/RP0/CPU0:ios#show controllers osc 0/0/0/0
```

This output highlights the *Controller State*, *Transport Admin State*, and *Laser State* of the OSC controller that is *shut down*.

```
Tue Apr 12 17:33:12.998 UTC

Controller State: Administratively Down

Transport Admin State: Out Of Service

Laser State: Off

    Alarm Status:
    -----
    Detected Alarms: None

    Alarm Statistics:
    -----
    RX-LOS-P = 0
    TX-POWER-FAIL-LOW = 0

    Parameter Statistics:
    -----
    Total TX Power = -50.00 dBm
    Total RX Power = -30.00 dBm

    Configured Parameters:
    -----
```

View the Gigabit Ethernet interfaces

Display operational and configuration details for a Gigabit Ethernet interface.

A Gigabit Ethernet interface represents the packet layer of an OSC channel and is used for high-speed data transmission between optical nodes.

Table 22: Feature History

Feature Name	Release Information	Feature Description
1G Speed support on OSC Gigabit Ethernet	Cisco IOS XR Release 25.4.1	The Gigabit Ethernet interface on the OSC now supports data rates up to 1 Gbps, in addition to the existing 100 Mbps. This enhancement allows you to configure the interface speed to 1 Gbps, enabling the use of UDC ports to extend your Data Communication Network (DCN) for monitoring remote NCS 1010 and NCS 1020 sites. To enable 1 Gbps throughput for the Gigabit Ethernet interface, use the command <code>interface gigabitEthernet R/S/I/P</code> and set the speed to 1000. IP based Packet forwarding Throughput on OSC Gigabit is maximum 200Mbps and UDC Traffic Over OSC Gigabit is maximum upto 880Mbps. For speed configuration options: • The 100 Mbps speed can be configured using the command <code>speed 100</code>. • If the speed configuration is removed using the command <code>no speed</code>, the default speed will revert to 100 Mbps. • Configuring a 10 Mbps speed is not supported and will result in failure.

Before you begin

Ensure that the node is operational at the intended speed.

**Note**

Zero Touch Provisioning (ZTP) is not supported on a 1 GE interface. You must bring up the node at the default 100 Mbps speed, and then change the interface to 1GE.

Follow these steps to view a Gigabit Ethernet interface:

Procedure

1. Run the **show interfaces gigabitEthernet 0/0/0/0** command to view the parameters and status of a Gigabit Ethernet interface.

Example

```
RP/0/RP0/CPU0:ios#show run int gigabitEthernet 0/0/0/0
Fri Nov 21 16:00:55.645 IST
interface GigabitEthernet0/0/0/0
  description noshut-interface
  ipv4 address 7.1.11.1 255.255.255.0
  ipv6 enable
  lldp
    enable
  !
  speed 1000
  !

RP/0/RP0/CPU0:ios#show int gigabitEthernet 0/0/0/0
Fri Nov 21 16:01:03.275 IST
GigabitEthernet0/0/0/0 is up, line protocol is up
  Interface state transitions: 1
  Hardware is GigabitEthernet, address is 38fd.f866.0693 (bia 38fd.f866.0693)

  Description: noshut-interface
  Internet address is 7.1.11.1/24
  MTU 1514 bytes, BW 1000000 Kbit (Max: 1000000 Kbit)
    reliability 255/255, txload 0/255, rxload 0/255
  Encapsulation ARPA,
  Full-duplex, 1000Mb/s, unknown, link type is force-up
  output flow control is off, input flow control is off
  loopback not set,
  Last link flapped 20:52:33
  ARP type ARPA, ARP timeout 04:00:00
  Last input 00:00:00, output 00:00:00
  Last clearing of "show interface" counters never
  5 minute input rate 403000 bits/sec, 45 packets/sec
  5 minute output rate 402000 bits/sec, 45 packets/sec
    73461739725 packets input, 4998891729534 bytes, Unknown total input drops

    Unknown drops for unrecognized upper-level protocol
    Received 0 broadcast packets, 48192 multicast packets
      0 runts, 0 giants, 0 throttles, 0 parity
    Unknown input errors, 0 CRC, Unknown frame, Unknown overrun, 0 ignored,
    0 abort
    73461747443 packets output, 4998883259525 bytes, Unknown total output
    drops
    Output 2 broadcast packets, 33519 multicast packets
    Unknown output errors, Unknown underruns, 0 applique, Unknown resets
    0 output buffer failures, 0 output buffers swapped out
    0 carrier transitions
```

2. Run the **show ipv4 interface brief** command to view the IPv4 address, status, operational state, and VRF name.

This output highlights the interface, IPv4 address (*IP-Address*), status, operational status of the routing protocol (*Protocol*), VPN routing and forwarding (VRF) instance name (*Vrf-Name*) of the Gigabit Ethernet interface.

Example

```
Tue Apr 19 10:58:02.951 UTC
```

Interface	IP-Address	Status	Protocol	
Vrf-Name				
Loopback0	10.3.3.11	Up	Up	default
Loopback3	10.1.1.1	Up	Up	default
GigabitEthernet0/0/0/0	10.7.1.1	Up	Up	default
MgmtEth0/RP0/CPU0/0	10.33.0.61	Up	Up	default
PTP0/RP0/CPU0/0	unassigned	Shutdown	Down	default
MgmtEth0/RP0/CPU0/1	unassigned	Shutdown	Down	default
PTP0/RP0/CPU0/1	unassigned	Shutdown	Down	default
MgmtEth0/RP0/CPU0/2	unassigned	Shutdown	Down	default

The Gigabit Ethernet interface must be in *Up* state for the OSC laser to become active. When the node starts, the Gigabit Ethernet interface changes to *Down* state.

3. Run the **no interface gigabitEthernet** command on the Gigabit Ethernet interface to bring it up.

The Gigabit Ethernet interface must be in *Up* state for the OSC laser to turn up. When the node comes up, the Gigabit Ethernet interface turns to *Down* state.

Example

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#interface gigabitEthernet 0/0/0/0
RP/0/RP0/CPU0:ios(config)#no shutdown
```

4. Run the **no speed 1000** command to remove the speed configuration from the interface.

Example

```
RP/0/RP0/CPU0:ios(config)#interface gigabitEthernet 0/0/0/0
RP/0/RP0/CPU0:ios(config)#no speed 1000
RP/0/RP0/CPU0:ios(config)#commit
```

You successfully display operational and configuration details of the Gigabit Ethernet interface, including speed, status, counters, and port parameters.

Best practice for downgrading from OSC 1G

Remove the 1G OSC speed configuration from OLT and ILA nodes before downgrading from Release 25.4.1 or a later version to a software version that does not support the OSC 1G feature.

- Once you delete the OSC 1G speed configuration, the OSC port operates at 100 Mbps.
- If you remove the 1G setting before downgrading, you do not need to reload any rack after the downgrade.

Release 25.4.1 and later versions support 1 GE OSC speed.

OSC link speed specifications

These tables provide key technical specifications for the OSC link speeds, including file transfer rates, UDC throughput, and management traffic performance.

 Note

Speed 1000 Mbps and Speed 100 Mbps are supported. Speed 10 Mbps is not supported.

Table 23: File transfer speed through OSC link

OSC link speed	Transfer rate at first hop	Transfer rate at second hop
100 Mbps (default speed)	87 Mbps	87 Mbps
1 GE (new speed)	232 Mbps	176 Mbps

Table 24: UDC throughput with IPv4 traffic

OSC link speed	UDC throughput (64 packets)	UDC throughput (256 - 1000 packets)	UDC throughput (1514 packets)
100 Mbps (default speed)	68 Mbps	83 Mbps	88 Mbps
1 GE (new speed)	680 Mbps	830 Mbps	880 Mbps

Table 25: Management traffic through OSC link

OSC link speed	IMIX	Packet size 95	Packet size 500	Packet size 1000	Packet size 1500
1000 Mbps	50 Mbps	14 Mbps	60 Mbps	150 Mbps	200 Mbps
100 Mbps	50 Mbps	14 Mbps	60 Mbps	90 Mbps	90 Mbps

Headless mode

This section explains the headless operation mode for Cisco NCS 1010 and its impact on system availability and management.

A headless mode is a system operation mode that

- enables Cisco NCS 1010 to continue forwarding traffic when the controller card is absent, failed, or being restarted
- maintains errorless operation unless there is any line-level activity, or if the traffic is encrypted and the keys have expired beyond a predefined maximum duration, and
- restricts provisioning and viewing operational data, until the controller is restored.

During headless mode, NCS 1010 ensures ongoing traffic forwarding without interruption, even when the controller card is physically missing, in a failed state, or undergoing upgrades or reloads. During this period, the control plane will be unavailable. You cannot provision, view operational data, or perform performance monitoring without a functional controller. After restoration, normal management access and monitoring resume.

OIR is a hardware maintenance procedure performed during controller card upgrade or replacement. During OIR, Cisco NCS 1010 is temporarily unreachable, but returns to normal operation upon completion.

Examples of scenarios that require OIR

- FPD (Field Programmable Device) upgrade failure
- Software image update failure
- Bootup failure

ASE loading

This section explains how ASE loads are used to stabilize optical transmission systems by filling the spectrum when channels are unavailable.

The OLT card (both OLT-C and OLT-L) includes a Noise Loader (NL) EDFA, which acts as an Amplified Spontaneous Emission (ASE) or noise source. The NL connected to the 2x33 ports Wavelength Selective Switch (WSS) loads optical noise. The optical noise fills the Line-TX optical spectrum, when the provisioned optical channels are not available on the ADD- 1 RX, ADD- 2 RX, or COM (OTS0/0/0/2 - OTS0/0/0/33) ports. For more details about the ports, see [OLT Functional Layout](#).

The CHANNEL-NOISE-LOADED alarm is raised when an OTS-OCH controller channel fails and the missing carrier power in the channel is replaced with internally generated ASE noise. The alarm is cleared automatically when the original traffic channel is restored and the temporary ASE noise is removed. For more details about the alarm, see [CHANNEL-NOISE-LOADED](#).

Benefits of ASE loading:

- Completely populates the transmission spectrum at LINE-TX independent of the actual system traffic load, thereby easing the system regulation starting from the Day-1 of the installation.
- The same channel load is maintained during channel failures or channel deletion, which makes the system tolerant to power transients.
- System performances can be verified efficiently because the ASE pattern emulates the full spectrum load also for the nonlinear interaction in the fibers, such as Four Wave Mixing (FWM), Cross Phase Modulations (XPM), and Stimulated Raman Scattering (SRS). Also, gradual fiber degradation that affects utilization of full-fiber capacity can be tracked.
- Keeps the system running the full-channel configuration, which makes the system be intrinsically stable and provide optimal performance.

How ASE operates

These operations are performed as part of the ASE loading:

1. The NL emits a total power of 16 dBm, and generates a power-spectral density (PSD) that is approximately equal to -10 dBm/12.5 GHz at the WSS input port. The OCM7 port monitors profile of the generated ASE channel. A Variable Optical Attenuator (VOA) available between the NL and the WSS input port regulates the ASE channel level properly.
2. The controller sets a predefined value for the VOA so that the ASE channels that are obtained at the COM TX-1 port are equalized to the actual traffic channels to fill out the spectrum at the input of the fixed gain amplifier.
3. When the controller detects a missing channel, for example any failure on the ADD/ EXP ports, it sends an updated attenuation value to the OLT. The OLT applies this value as a new attenuation setpoint and executes the transition from ADDs/EXPs path to ASE in the impacted wavelengths, thus ensuring fast recovery of the initial total optical power on the LINE-TX port.
4. When the optical power is restored, the controller sends a restoration command to the OLT. The OLT executes the transition from ASE to ADDs/EXPs in the impacted wavelengths ensuring minimal total optical power disturbance on the LINE-TX port, thus allowing a smooth fade-out of the ASE.

How ASE Is managed

The default target ASE Load Spectral Density (AL_SD) is set to 81% for the OLT-C card and 78% for the OLT-L card. This default AL_SD is defined based on the frequency grid at 75 GHz with the first channel centered at 191.375 THz for OLT-C card and 186.125 THz for the OLT-L card. The spectrum is allocated through logical bins with 3.125-GHz width such that each physical slice is associated to two bins. Based on the above, the first ASE channel for the OLT-C card has:

- Bins 1 and 2 blocked (frequency range 191.33750 - 191.34375 THz)
- Bins 3-22 opened (frequency range 191.34375 to 191.40625 THz)
- Bins 23 and 24 blocked (frequency range 191.40625 - 191.4125 THz)

The first ASE channel for the OLT-L card has:

- Bins 13 and 14 blocked (frequency range 186.0875 - 186.09375 THz)
- Bins 15-34 opened (frequency range 186.09375 to 186.15625 THz)
- Bins 35 and 36 blocked (frequency range 186.15625 - 186.1625 THz)

All the other ASE channels are defined similarly by shifting all the settings by 75 GHz (24 bins).




Note

The ASE channels on the bins 1537-1548 and 1-12 are retained as blocked for Automatic VOA Shutdown (AVS) for the OLT-C and OLT-L cards respectively. In this AVS mode, the VOA is set at maximum attenuation value, when the channel is not provisioned to ensure the system reliability in case power is accidentally inserted.

Static ASE—At the system startup, without any channel provisioned, the complete ASE Load pattern is forwarded to the OLT LINE-TX port.

Figure 14: Static ASE

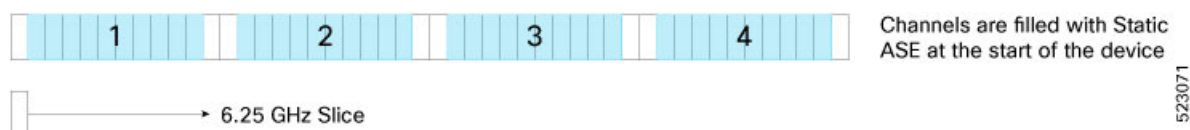


Dynamic ASE—When a traffic channel fails (for example, the PSD within the set of slices that are dedicated to the traffic channel is below a given threshold) an equivalent temporary ASE channel is inserted to maintain the spectral density on the line port. This dynamic ASE channel fills the original traffic channel with only a single slice guard band, at the beginning and the end. When the original traffic channel is restored, the temporary ASE channel is removed, and the original routing on the WSS is reestablished.

Dynamic ASE—With the Nyquist channels, dynamic ASE has these behavior changes:

- A minimum guard band of 6.25GHz is maintained between the active channel and the dynamic ASE, so the guard band of dynamic ASE will be 6.25 GHz + unused portion of the next user channel.
- When there are two channels, and if channel 1 has failed and channel 2 overlaps channel 1, the dynamic ASE is filled in the slices other than the overlapping slices while leaving at least one slice as guard band.
- If both channel 1 and channel 2 are overlapping and both have failed, dynamic ASE fills both the channels without leaving any guardband.
- Static ASE and Dynamic ASE cannot overlap.

Figure 15: Dynamic ASE with Nyquist Channels

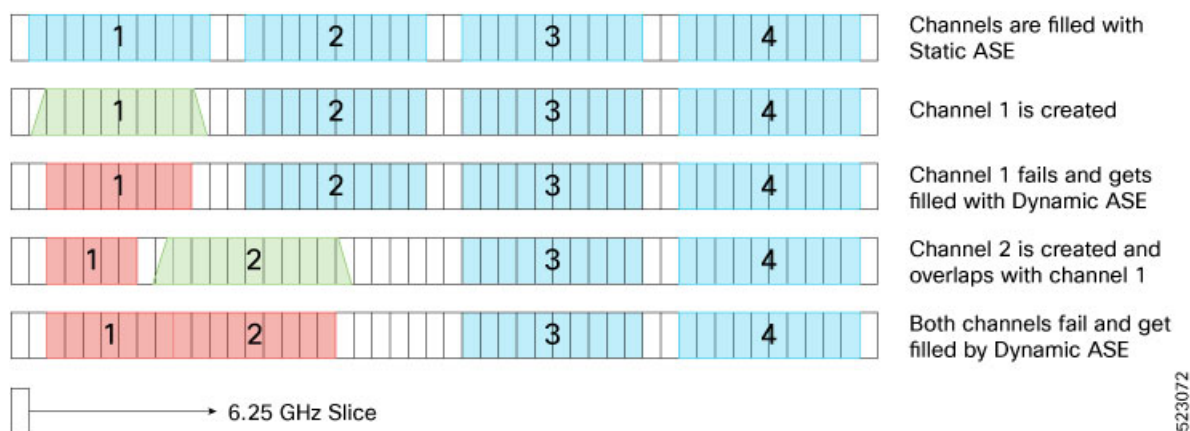

Optical channel monitoring

This section explains how ASE loads are used to stabilize optical transmission systems by filling the spectrum when channels are unavailable.

The Optical Channel Monitor (OCM) blocks in the OLT and ILA cards provide perchannel optical power monitoring.

Each OCM refreshes approximately every 200ms. The device reports the channel power based on the OCM power. If the channel power is above the threshold (TH), the channel is declared as Active. If the channel power is below the threshold (TH), the channel is declared as Failed. The dynamic OCM scheduling algorithm creates a list of OCM ports based on the used and unused add/drop ports. Each add/drop port is connected to an OCM port. When creating a cross-connect, the used add/drop port is considered as a used OCM port, and the rest of the ports are considered as unused. Based on the used add/drop ports, the device creates a sequence of used and unused OCM ports. This allows the used OCM ports to refresh the maximum number of times. This approach ensures faster channel recovery.

OCM in OLT-C

The OLT-C card has a single OCM device with 37 OCM measuring points (OCM1 - OCM37). You can read the OCM data for all the OCM blocks through the IOS-XR commands, except OCM1, OCM4, and OCM7.

The measuring points in the OLT-C card are:

- LINE-TX
- LINE-RX
- 2x33 ports of WSS in the multiplexer section of the OLT-C card

See [OLT Functional Layout](#) for details of the ports.

Table 26: Optical specifications for OCM in OLT-C

Parameter	Unit	Minimum	Typical	Maximum	Note
Dynamic ranges	dBm/12.5GHz	-10		10	Ports: LINE-TX, COM-RX-1 and internal Noise Loader port
		-30		0	Port LINE-RX
		-35		0	Ports: ADD-RX-1 and ADD-RX-2
		-35		5	Ports ADD/DROP-i (i=3..32) (on DROP ports OCM is virtual)
Accuracy	dB	± 0.5		± 2	Depending on the adjacent channel relative power
Frequency range	THz	191.175		196.175	Out-of-band channel frequency 191.150 - 191.3375 THz are available only as row-data values.
		191.150			
Frequency accuracy (absolute)	GHz			± 5	
Frequency accuracy (relative)	GHz			+/-3	
Resolution Bandwidth	GHz		12.5		
Frequency step	GHz	3.125			
Scan Time	ms			250	Single port

OCM in ILA-C

The ILA-C card has a single OCM device with 4 OCM measuring points.

The measuring points in the ILA-C card are:

- Input port of EDFA1
- Input port of EDFA2
- Output port of EDFA1
- Output port of EDFA2

See [ILA Functional Layout](#) for details of the ports.

Table 27: Optical specifications for OCM in ILA-C

Parameter	Unit	Min.	Typical	Max	Note
Dynamic ranges	dBm/12.5GHz	-30		0	LINE-RX ports
		-10		10	LINE-TX ports
Accuracy	dB	± 0.5		± 2	Depending on the adjacent channel relative power
Frequency range	THz	191.175		196.175	
Frequency accuracy (absolute)	GHz			± 5	
Frequency accuracy (relative)	GHz			± 3	
Resolution Bandwidth	GHz		12.5		
Frequency step	GHz	3.125			
Scan Time	ms			250	Single port

View OCM data

You can view the raw OCM data (slice level channel power) using these commands:

```
RP/0/RP0/CPU0:ios#sh controllers ots 0/0/0/0 spectrum-info
Fri Feb 4 13:12:49.841UTC
Spectrum Slices spacing      :          3.125 GHz
Spectrum Slices Range       :          1 - 1548
Slice start wavelength       :          1566.82 nm
Slice start frequency        :          191337.50 GHz
Spectrum power information :
Rx power :
```

```
-----
spectrum-slice num          Rx-power values (dBm)
-----
      1 - 12                -88.8  -88.8  -88.8  -88.8      -88.8  -88.8  -88.8
-88.8  -88.8  -88.8  -88.8  -88.8
     13 - 24                -88.8  -88.8  -88.8  -88.8      -88.8  -88.8  -88.8
-88.8  -88.8  -88.8  -88.8  -88.8
.....
.....
.....
1537 - 1548                -88.8  -88.8  -88.8  -88.8      -88.8  -88.8  -88.8
-88.8  -88.8  -88.8  -88.8  -88.8
-----
```

```
Tx power :
```

```
-----
spectrum-slice num          Tx-power values (dBm)
-----
      1 - 12                -9.5   -7.3   -6.0   -5.2      -4.9   -4.8   -4.6
-4.4   -4.4   -4.4   -4.4   -4.4
     13 - 24                -4.4   -4.5   -4.6   -4.8      -5.1   -5.5   -6.4
-7.7   -9.6  -12.0  -13.2  -11.4
    25 - 36                -9.2   -7.7   -6.7   -6.2      -6.0   -5.9   -5.7
-----
```

```

-5.6      -5.6    -5.5    -5.4    -5.4
37 - 48      -5.3    -5.3    -5.4    -5.5      -5.8    -6.1    -6.6
-7.3      -8.6   -10.4   -12.2   -11.8
....
....
....
1525 - 1536      -2.4    -2.4    -2.4    -2.4      -2.4    -2.3    -2.3
-3.0      -4.2    -6.5   -10.3   -14.9
1537 - 1548      -19.3   -22.6   -24.3   -25.3      -26.1   -26.6   -27.1
-27.6      -27.9   -28.2   -28.4   -28.6

```

The preceding sample displays the Rx-power values (OCM3 raw data) and Tx-power values (OCM2 raw data) at the line sides. Similarly, you can view the OCM raw data for the COM side controllers OTS0/0/0/2 to 0/0/0/33.

You can also view the grid OCM data (per channel power level) for a particular channel in the ILA-C and OLT-C cards. By default, the channels are not created. Create a channel using these commands:

configure

hw-module location *location* **terminal-ampli grid-mode** *mode*

channel-id *channel id* **centre-freq** *frequency* **width** *channel-width*

commit

This is a sample to configure the channel on an OLT-C card:

```

RP/0/RP0/CPU0:ios#config
Fri Feb 4 13:14:49.841 UTC
RP/0/RP0/CPU0:ios(config)#
RP/0/RP0/CPU0:ios(config)#hw-module location 0/0/NXR0 terminal-ampli grid-mode
flex
RP/0/RP0/CPU0:ios(config-hwmod-olt-flexi)#channel-id 1 centre-freq 196.1 width
75
RP/0/RP0/CPU0:ios(config-hwmod-olt-flexi)# commit
Fri Feb 4 13:15:12.841 UTC

RP/0/RP0/CPU0:ios(config-hwmod-olt-flexi)#end

```

This sample shows the OTS OCH controller channel parameters such as Total Rx power and Total Tx power.

```

RP/0/RP0/CPU0:ios#sh controllers ots-och 0/0/0/0/1
Fri Feb 4 13:15:59.125 UTC
Controller State: Up
Transport Admin State: In Service
LED State: Yellow
Parameter Statistics:
-----
Total RX Power = -10.50 dBm
Total TX Power = -10.50 dBm
Configured Parameters:
-----
RP/0/RP0/CPU0:ios#

```

To view the grid OCM data for a particular channel in the ILA-C card, create a channel using these commands:

configure

hw-module location *location* **inline-ampli grid-mode** *mode*

channel-id *channel id* **centre-freq** *frequency* **width** *channel-width*

commit

This is a sample to a configure the OTS-OCH controller on an ILA-C card:

```
RP/0/RP0/CPU0:ios#config
Fri Feb 4 13:15:49.841 UTC
RP/0/RP0/CPU0:ios(config)#
RP/0/RP0/CPU0:ios(config)#hw-module location 0/0/NXR0 inline-ampli grid-mode
flex
RP/0/RP0/CPU0:ios(config-hwmod-ila-flexi)#channel-id 1 centre-freq 196.1 width
75
RP/0/RP0/CPU0:ios(config-hwmod-ila-flexi)# commit
Fri Feb 4 13:15:12.841 UTC
RP/0/RP0/CPU0:ios(config-hwmod-olt-flexi)#end
```

This sample shows the OTS OCH controller channel parameters such as Total Rx power and Total Tx power.

```
RP/0/RP0/CPU0:ios#sh controllers ots-och 0/0/0/2/1
Fri Feb 4 13:15:59.125 UTC
Controller State: Up
Transport Admin State: In Service
Alarm Status:
-----
Detected Alarms: None
Alarm Statistics:
-----
RX-LOS-P = 0
TX-POWER-FAIL-LOW = 0
Parameter Statistics:
-----
Total RX Power = -10.50 dBm
Total TX Power = -10.50 dBm
Configured Parameters:
-----
RP/0/RP0/CPU0:ios#
```

Automatic-In-Service (AINS) state

This section explains how the Automatic-In-Service (AINS) state manages controller transitions and alarm reporting during system bootup and soak periods in NCS 1010.

The AINS state is an administrative state that

- allows the OTS, OMS, and OCH datapath controllers to automatically move to the *Automatic In Service* state after a system bootup,
- prevents alarms reporting to the EMS/NMS monitoring system during the soak time period, and
- helps the affected ports to transition to the *In-Service* state after the soak time period expires.

In NCS 1010, AINS state affects the

- OTS controllers on the COM ports for the OLT and E-OLT cards. See
- OTS-OCH controllers after the optical cross connections are configured on the OLT and E-OLT cards.
- OMS and OCH controllers for the passive devices. See

AINS does not affect for the line side OTS-OCH controllers on OLT, E-OLT, ILA and E-ILA cards. Line side OTS-OCH controllers are labeled as OTS-OCH 0/0/0/0/x.

AINS soak time period

Soak time period is a timed delay that

- keeps the affected NCS 1010 ports in the AINS state for defined duration after system boot,
- suppress active alarms until the ports transition to the *In-Service* state, and
- lasts for one minute by default.

Characteristics of soak time period

The characteristics of soak timer period are:

- The soak time period for the AINS state is fixed and not configurable.
- The soak timer restarts automatically during line card cold reloads or power cycles.
- During the soak time period, any alarms are suppressed and can be viewed using the `show alarms brief system conditions` command.
- When all alarms are resolved, the system transitions the affected ports to the *In-Service* state.

After an NCS 1010 chassis boots up, its COM ports for OLT and E-OLT cards enter the AINS state. The soak time period begins, lasting one minute. During this time, alarms are suppressed. When the soak time ends, if there are no outstanding alarms, the ports move into In-Service.

- The soak time period is a predefined value.
- If an active alarm persists after the soak time, the affected port will not transition to In-Service.

A soak time period acts like a 'buffer zone' that delays action, ensuring that transient issues do not trigger alarms during initial startup or recovery.

Verify the AINS state and the suppressed alarms

Follow the steps to verify the administrative state of the affected controller types that are in AINS state.

- OLT and E-OLT cards: OTS and OTS-OCH controllers
- Passive modules: OCH and OMS controllers

When add/drop COM ports enter the AINS state, the alarms reported on those ports are suppressed during the soak time period. Use the steps in this task to check the administrative state of those ports and their alarms.

Procedure

1. Use the `show controllers ots R/S/I/P` command to check the administrative status of the OTS controller.

Example

This command displays the OTS controller statistics for Add/Drop 2 port in OLT and E-OLT cards.

```
RP/0/RP0/CPU0:ios#show controllers ots 0/0/0/2
```

This output displays the OTS controller statistics highlighting the administrative state as *Automatic In Service*.

```
Wed Jun 22 09:43:04.356 UTC
Controller State: Down
```

Transport Admin State: Automatic In Service

LED State: Red

Alarm Status:

Detected Alarms:

RX-LOS-P

TX-POWER-FAIL-LOW

Alarm Statistics:

RX-LOS-P = 1

RX-LOC = 0

TX-POWER-FAIL-LOW = 1

INGRESS-AUTO-LASER-SHUT = 0

INGRESS-AUTO-POW-RED = 0

INGRESS-AMPLI-GAIN-LOW = 0

INGRESS-AMPLI-GAIN-HIGH = 0

EGRESS-AUTO-LASER-SHUT = 0

EGRESS-AUTO-POW-RED = 0

EGRESS-AMPLI-GAIN-LOW = 0

EGRESS-AMPLI-GAIN-HIGH = 0

HIGH-TX-BR-PWR = 0

HIGH-RX-BR-PWR = 0

SPAN-TOO-SHORT-TX = 0

SPAN-TOO-SHORT-RX = 0

Parameter Statistics:

Total RX Power = -50.00 dBm

Total TX Power = -50.00 dBm

Ingress Ampli Gain = 0.0 dB

Ingress Ampli Tilt = 0.0 dB

Configured Parameters:

Ingress Ampli Gain = 16.0 dB

Ingress Ampli Tilt = 0.0 dB

2. Use the **show controllers ots-och R/S/I/P/x** command to check the administrative status of the OTS-OCH controller.

Example

This command displays the OTS-OCH cross-connect controller statistics for Add/Drop 13 port in E-OLT cards.

```
RP/0/RP0/CPU0:ios#show controllers ots-och 0/0/0/13/20
```

This output displays the OTS-OCH controller statistics highlighting the administrative state as *Automatic In Service*.

```
Tue Jul 12 10:19:48.838 UTC
```

```
Controller State: Down
```

```
Transport Admin State: Automatic In Service
```

```
Alarm Status:
```

```

-----
Detected Alarms:
    RX-LOS-P
    TX-POWER-FAIL-LOW

Alarm Statistics:
-----
RX-LOS-P = 1
TX-POWER-FAIL-LOW = 1

Parameter Statistics:
-----
Total RX Power = -50.00 dBm
Total TX Power = -50.00 dBm

Cross Connect Info:
-----
line Channel   = Ots-Och0/0/0/0/20

Configured Parameters:
-----
Rx Low Threshold = -50.0 dBm
Tx Low Threshold = -50.0 dBm

```

3. Use the **show controllers och R/S/I/P** command to check the administrative status of the OCH controller in passive modules.

Example

This command displays the OCH controller statistics for port 0 in passive modules.

```
RP/0/RP0/CPU0:ios#show controllers och 0/1/0/0
```

This output displays the OCH controller statistics highlighting the administrative state as *Automatic In Service*.

```

Wed Jul 6 14:28:12.500 UTC

Controller State: Down

Transport Admin State: Automatic In Service

LED State: Red

Alarm Status:
-----
Detected Alarms:
RX-LOS-P

Alarm Statistics:
-----
RX-LOS-P = 1
TX-POWER-FAIL-LOW = 0

Parameter Statistics:
-----
TX Power = -50.00 dBm
RX Power = -20.72 dBm

```

This example displays the OCH controller statistics after AINS Soak time expiry. When the soak time expires, the Transport Admin State of OCH controller changes from *Automatic In Service* to *In Service*.

```
Wed Jul 6 14:29:59.242 UTC

Controller State: Up

Transport Admin State: In Service

LED State: Off

Alarm Status:
-----
Detected Alarms: None

Alarm Statistics:
-----
RX-LOS-P = 1
TX-POWER-FAIL-LOW = 0

Parameter Statistics:
-----
TX Power = -50.00 dBm
RX Power = 2.79 dBm
```

4. Use the **show controllers oms R/S/I/P** command to check the administrative status of the OMS controller in passive modules.

Example

This command displays the OMS controller statistics for port 25 in NCS1K-MD-320/E-C passive module.

```
RP/0/RP0/CPU0:ios#show controllers oms 0/1/0/25
```

This output displays the OMS controller statistics highlighting the administrative state as *Automatic In Service*.

```
Tue Jul 12 10:32:05.258 UTC

Controller State: Down

Transport Admin State: Automatic In Service

LED State: Red

    Alarm Status:
    -----
    Detected Alarms:
        RX-LOS-P

    Alarm Statistics:
    -----
    RX-LOS-P = 1
    TX-POWER-FAIL-LOW = 0

    Parameter Statistics:
    -----
    TX Power = -7.40 dBm
    RX Power = -19.91 dBm
```

5. (Optional) Use the **show alarms brief system conditions** command to check the alarms suppressed for the controllers in AINS state.

Example

This command displays the suppressed alarms in AINS state.

```
RP/0/RP0/CPU0:ios#show alarms brief system conditions
```

This output displays the alarms reported for the affected controller types in AINS state.

```
Mon Jul 25 05:43:50.073 UTC
```

Conditions

Location Description	Severity	Group	Set Time
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/1 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/2 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/4 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/5 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/6 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/7 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/8 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/9 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/10 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/11 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/12 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/13 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/14 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/15 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/16 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/17 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/18 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/19 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/21 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Och0/1/0/22 - Loss of Signal - Payload	Critical	Controller	07/21/2022 11:11:54 UTC

0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Oms0/1/0/31 - Loss of Signal - Payload			
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Oms0/1/0/26 - Loss of Signal - Payload			
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Oms0/1/0/27 - Loss of Signal - Payload			
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Oms0/1/0/28 - Loss of Signal - Payload			
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Oms0/1/0/29 - Loss of Signal - Payload			
0/1	Critical	Controller	07/21/2022 11:11:54 UTC
Oms0/1/0/30 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/33 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/33 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/9 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/9 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/8 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/8 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/7 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/7 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/6 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/6 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/5 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/5 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/4 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/4 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/3 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/3 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/2 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/2 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/32 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/32 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/31 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/31 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/30 - Output OTS Power Reading Below The Fail-Low Threshold			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/30 - Loss of Signal - Payload			
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/29 - Output OTS Power Reading Below The Fail-Low Threshold			

0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/29	- Loss of Signal - Payload		
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/28	- Output OTS Power Reading Below	The Fail-Low Threshold	
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/28	- Loss of Signal - Payload		
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/25	- Output OTS Power Reading Below	The Fail-Low Threshold	
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/25	- Loss of Signal - Payload		
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/10	- Output OTS Power Reading Below	The Fail-Low Threshold	
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/10	- Loss of Signal - Payload		
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/11	- Output OTS Power Reading Below	The Fail-Low Threshold	
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/11	- Loss of Signal - Payload		
0/0	Critical	Controller	07/21/2022 11:12:00 UTC
Ots0/0/0/12	- Output OTS Power Reading Below	The Fail-Low Threshold	

3 Monitor Performance

Topics:

- [Monitor performance](#)
- [Photodiodes \(PDs\) refresh rate](#)
- [Configure and view PM parameters](#)
- [7-day support for 15-Min PM bin](#)

Explains how to configure and retrieve performance monitoring counters for optical controllers in supported intervals, set thresholds, and use performance data to detect and troubleshoot network issues.

Performance monitoring (PM) parameters are used by service providers to gather, store, set thresholds for, and report performance data for early detection of network issues. You can configure and retrieve PM counters for the various controllers in flex-bin, 30-second, 15-minute, or 24-hour intervals. These parameters simplify troubleshooting operations and enhance data that can be collected directly from the equipment.

Monitor performance

This section lists the performance monitoring (PM) parameters, their descriptions, precisions, and threshold ranges for OTS, OTS-OCH, OSC, DFB, OCH, and OMS controllers.

You can set and retrieve PM counters for the OTS, OTS-OCH, OSC, DFB, OCH, and OMS controllers for various intervals.

The OCH and OMS controllers are created when the Mux/Demux panel and breakout panels are powered up using the USB 2.0 connection from the NCS 1010 EITU card. You can only view the current and historical PM parameters for the panels. You cannot configure the PM parameters for these controllers.

This table lists the PM parameters, their descriptions, and precision levels.

Table 28: PM parameters for controllers

PM parameter (unit of measure)	Description	Resolution
OPT [dBm]	Total Tx(C+OSC) power	1/100
OPR [dBm]	Total Rx(C+OSC) power	1/100
OPT(C+L) [dBm]	Total Tx(C+L+OSC) power	1/100
OPR(C+L) [dBm]	Total Rx(C+L+OSC) power	1/100
OPR(S) [dBm]	C Band Received Signal Power	1/100
OPT(S) [dBm]	C Band Transmitted Signal Power	1/100
OPBR [dBm]	Back Reflection Power	1/100
EAGN [dB]	Egress Amplifier Gain	1/100
EATL [dB]	Egress Amplifier Tilt	1/100
IAGN [dB]	Ingress Amplifier Gain	1/100
IATL [dB]	Ingress Amplifier Tilt	1/100
RAMAN-TOT [mW]	Raman Total Pump power	1/10
RAMAN-1 [mW]	Raman 1 Pump power	1/10
RAMAN-2 [mW]	Raman 2 Pump power	1/10
RAMAN-3 [mW]	Raman 3 Pump power	1/10
RAMAN-4 [mW]	Raman 4 Pump power	1/10
RAMAN-5 [mW]	Raman 5 Pump power	1/10

The tables list the maximum and minimum thresholds that can be set for the PM parameters for OLT nodes

Table 29: PM thresholds for OLT OTS controller (0/0/0/0)

PM parameter	Minimum threshold	Maximum threshold
OPT	-2000	4000

OPR	-3000	1800
OPT(C+L)	-2000	6085
OPR(C+L)	-3000	3600
OPR(S)	-3000	1800
OPT(S)	-500	2800
OPBR	-3000	-1400
EAGN	1390	3100
EATL	-500	500
IAGN	1030	3800
IATL	-500	500
RAMAN-TOT	2000	14100
RAMAN-1	450	3900
RAMAN-2	400	3900
RAMAN-3	400	2200
RAMAN-4	400	2200
RAMAN-5	350	1900

Table 30: PM thresholds for OLT OTS controller (0/0/0/2 and 0/0/0/3)

PM parameter	Minimum threshold	Maximum threshold
OPT	-3000	1500
OPR	-2500	1800
IAGN	1300	1900
IATL	-500	500

Table 31: PM thresholds for OLT OTS controller (0/0/0/4 to 0/0/0/33)

PM parameter	Minimum threshold	Maximum threshold
OPT	-3000	1500
OPR	-1500	1000

Table 32: PM thresholds for OLT OTS-OCH controller

PM parameter	Minimum threshold	Maximum threshold
OPT	-3000	1500
OPR	-3000	1500

Table 33: PM Thresholds for OLT OSC controller (0/0/0/0)

Parameter	Minimum threshold	Maximum threshold
OPT	-2000	1200
OPR	-3000	0

Table 34: PM thresholds for OLT DFB controller (0/0/0/0)

PM Parameter	Minimum Threshold	MaximumThreshold
OPT	-2000	1000
OPR	-3000	1500

The tables list the maximum and minimum thresholds that can be set for the PM parameters for ILA nodes.

Table 35: PM thresholds for ILA OTS controller (0/0/0/0)

PM Parameter	Minimum Threshold	Maximum Threshold
OPT	-3000	4000
OPR	-3000	2000
OPT(C+L)	-3000	6085
OPR(C+L)	-3000	4000
OPR(S)	-3000	2800
OPT(S)	-3000	2000
OPBR	-3000	-1400
EAGN	590	3600
EATL	-500	500
RAMAN-TOT	2000	14100
RAMAN-1	450	3900
RAMAN-2	400	3900
RAMAN-3	400	2200
RAMAN-4	400	2200
RAMAN-5	350	1900

Table 36: PM thresholds for ILA OTS controller (0/0/0/2)

PM Parameter	Minimum Threshold	Maximum Threshold
OPT	-3000	4000
OPR	-3000	2000

OPT(C+L)	-3000	6085
OPR(C+L)	-3000	4000
OPR(S)	-3000	2800
OPT(S)	-3000	2000
OPBR	-3000	-1400
EAGN	590	3600
EATL	-500	500
RAMAN-TOT	2000	14100
RAMAN-1	450	3900
RAMAN-2	400	3900
RAMAN-3	400	2200
RAMAN-4	400	2200
RAMAN-5	350	1900

Table 37: PM thresholds for ILA OSC controller (0/0/0/0 and 0/0/0/2)

PM Parameter	Minimum Threshold	Maximum Threshold
OPT	-2000	1200
OPR	-3000	0

Table 38: PM thresholds for ILA OTS-OCH controllers

PM Parameter	Minimum Threshold	Maximum Threshold
OPT	-3000	1500
OPR	-3000	1500

Table 39: PM thresholds for ILA DFB controllers (0/0/0/0 and 0/0/0/2)

PM Parameter	Minimum Threshold	Maximum Threshold
OPT	-2000	1000
OPR	-3000	1500

This table lists the maximum and minimum thresholds that are set for the PM parameters for OCH controllers.

Table 40: PM thresholds for OCH controllers

PM Parameter	Minimum Threshold	Maximum Threshold
OPT	-30	15

PM Parameter	Minimum Threshold	Maximum Threshold
OPR	-30	15

This table lists the maximum and minimum thresholds that are set for the PM parameters for OMS controllers.

Table 41: PM thresholds for OMS controllers

PM Parameter	Minimum Threshold	Maximum Threshold
OPT	-30	15
OPR	-30	15

Photodiodes (PDs) refresh rate

This section explains how the refresh rate for photodiodes (PDs) in NCS 1010 line cards has been improved to enhance performance monitoring and measurement accuracy.

Table 42: Feature History

Feature Name	Release Information	Feature Description
Improved Performance Monitoring	Cisco IOS XR Release 7.11.1	NCS 1010 now measures the power values of Photo Diodes (PDs) at various measurement points at a faster refresh rate to improve the node performance monitoring. With the upgraded FPDs, the refresh rate has reduced from 250 ms to 50 ms. This faster refresh rate applies to all the NCS 1010 PIDs for the following line card FPDs: • ILA • OLT • Raman-1 • Raman-2

NCS 1010 measures the power values of Photo Diodes (PDs) at various measurement points to provide values for PM parameters. The measured values are refreshed at a defined rate for the latest values.

From Release 7.11.1, the rate at which the values of specific PDs are refreshed is reduced from 250 ms to 50 ms. This faster refresh rate is applicable to all the NCS 1010 OLT and ILA PIDs.

This table provides the list of photodiodes that support the new refresh rate of 50 ms.

Table 43: Line cards and impacted PDs

Line cards	PDs
OLT-C	PD1, PD9, PD14, PD20
OLT-L	PD1, PD9, PD11, PD15

Line cards	PDs
ILA-C	PD1, PD3, PD5, PD7, PD13, PD14, PD21, PD22
ILA-L	PD1, PD3, PD5, PD7, PD9, PD10, PD17, PD18
OLT and ILA cards with RAMAN	PD2, PD7

In the OLT-C card, the newer refresh rate impacts these PM parameters and controllers.

Photodiode	controller	PM parameter
PD1	OTS	OPR-S
PD9	OSC	OPR
PD9	OTS	OPR
PD14	OTS	OPT-S
PD20	OSC	OPT
PD20	OTS	OPT

In the ILA-C card, the newer refresh rate impacts these PM parameters and controllers.

Photodiodes	controller	PM parameter
PD1, PD3	OTS	OPR-S
PD5, PD7	OSC	OPR
PD13, PD14	OTS	OPT-S
PD21, PD22	OSC	OPT

Configure and view PM parameters

This procedure explains how to configure performance monitoring (PM) parameters for network controllers and review current and historical PM data for operational insight.

You can configure the performance monitoring parameters for the controllers. To configure PM parameters, use these commands in the configuration mode:

Table 44: Feature history

Feature Name	Release Information	Feature Description
Threshold Crossing Alert (TCA) for Span Loss	Cisco IOS XR Release 7.11.1	You can now activate TCA reporting and set specific minimum and maximum threshold values for both Tx and Rx span loss across all time intervals. This enhancement provides prompt notifications for deviations from normal span loss values, which can be viewed using the show alarms brief system active command. To implement this feature, two new parameters slr-cl and slt-cl have been introduced for the pm command. Additionally, the output of the show controllers ots R/S/I/P pm command now captures both the actual and configured threshold values for span loss.

Table 45: Feature History

Feature Name	Release Information	Feature Description
PM History Persistence	Cisco IOS XR Release 7.11.1	PM history parameters for Optics, Ethernet, and coherent DSP controllers are now retained even after the occurrence of an operation disruptive event like: • Various reloads • Power cycle • System upgrade This functionality maintains prolonged access to performance history for extended device health monitoring and assessment

```
controller controllertype R/S/I/P { pm { 15-min | 24-hour | 30-sec | flex-bin } { optics | ots } { report | threshold } { opr | opt | eagn | eatl | iagn | iatl | slr-cl | slt-cl | opbr | opr | opr-cl | opr-s | opt | opt-cl | opt-s | raman-1 | raman-2 | raman-3 | raman-4 | raman-5 | raman-tot } { max-tca | min-tca } { enable | value }
```

Examples

This example enables the maximum and minimum Threshold Crossing Alert (TCA) reporting on the OTS controller for a 15 minute interval on a C+L band network. The sample also configures the maximum and minimum Rx span loss threshold

to 36db and 33db respectively. These values are compared against the current maximum span loss value to determine if a TCA should be generated.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller pts 0/0/0/0 pm 15-min ots report slr-cl
max-tca enable
RP/0/RP0/CPU0:ios(config)#controller pts 0/0/0/0 pm 15-min ots threshold slr-cl
max 3600
RP/0/RP0/CPU0:ios(config)#controller pts 0/0/0/0 pm 15-min ots report slr-cl
min-tca enable
RP/0/RP0/CPU0:ios(config)#controller pts 0/0/0/0 pm 15-min ots threshold slr-cl
min 3300
RP/0/RP0/CPU0:ios(config)#commit
RP/0/RP0/CPU0:ios(config)#end
```

This example shows the TOT-SPAN-LOSS-TX-CL-MAX alert is triggered when the current TX span loss value exceeds the maximum TX span loss threshold:

```
RP/0/RP0/CPU0:P1D_DT_04#show alarms brief system conditions | include SPAN
Thu Oct  5 04:49:21.462 UTC
0/0                NotAlarmed    Controller          10/05/2023 04:49:00 UTC
Ots0/0/0/0 - Threshold Crossing Alert For TOT-SPAN-LOSS-TX-CL-MAX In 30 Second
Bucket
```

This example sets the reporting status to maximum TCA for the eagn parameter of the OTS controller for a 15-minute interval.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0 pm 15-min ots report eagn
max-tca enable
RP/0/RP0/CPU0:ios(config)#commit
RP/0/RP0/CPU0:ios(config)#end
```

This example configures the maximum threshold for the eagn parameter of the OTS controller to 20 dB.



Note

The OTS controller commands accept PM parameter values in two decimal places. In this example, the *eagn* parameter is entered as *2000* to configure the *eagn* parameter to *20 dB*.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/0 pm 15-min ots threshold eagn
max 2000
RP/0/RP0/CPU0:ios(config)#commit
RP/0/RP0/CPU0:ios(config)#end
```

To view the current PM parameters on an OTS controller for a 15-minute interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers ots 0/0/0/0 pm current 15-min optics 1
```

This output shows the current PM parameters on an OTS controller for a 15-minute interval and highlights the *maximum threshold* set for the *eagn* parameter that is configured for 20 dB.

```
Tue May 17 06:37:00.529 UTC

Optics in the current interval [06:30:00 - 06:37:00 Tue May 17 2022]

Optics current bucket type : Valid
      MIN      AVG      MAX      Operational  Configured  TCA
Operational  Configured  TCA
Threshold(max) Threshold(max(max)
OPT[dBm]      : 20.00      20.00      20.00      -20.00      NA      NO      40.00
      NA      NO
OPR[dBm]      : 20.00      20.00      20.00      -30.00      NA      NO      18.00
      NA      NO
OPT(C+L)[dBm] : 20.00      20.00      20.00      -20.00      NA      NO      60.85
      NA      NO
OPR(C+L)[dBm] : -10.00     -10.00     -10.00     -30.00      NA      NO      36.00
      NA      NO
OPT(S)[dBm]   : 20.00      20.00      20.00      -5.00       NA      NO      28.00
      NA      NO
OPR(S)[dBm]   : 20.00      20.00      20.00      -30.00      NA      NO      18.00
      NA      NO
OPBR[dBm]     : -30.00     -30.00     -30.00     -30.00      NA      NO      -14.09
      NA      NO
EAGN[dB]      : 30.00      30.00      30.00      16.00      NA      NO      20.00
20.00      YES
EATL[dB]      : -4.80      -4.80      -4.80      -5.00       NA      NO      5.00
      NA      NO
IAGN[dB]      : 25.00      25.00      25.00      12.00       NA      NO      25.00
      NA      NO
IATL[dB]      : -2.40      -2.40      -2.40      -5.00       NA      NO      5.00
      NA      NO
RAMAN-TOT[mW] : 300.00     300.00     300.00     200.00      NA      NO      1410.00
      NA      NO
RAMAN-1 [mW]  : 45.00      45.00      45.00      45.00       NA      NO      390.00
      NA      NO
RAMAN-2 [mW]  : 40.00      40.00      40.00      40.00       NA      NO      390.00
      NA      NO
RAMAN-3 [mW]  : 40.00      40.00      40.00      40.00       NA      NO      220.00
      NA      NO
RAMAN-4 [mW]  : 40.00      40.00      40.00      40.00       NA      NO      220.00
      NA      NO
RAMAN-5 [mW]  : 35.00      35.00      35.00      35.00       NA      NO      190.00
      NA      NO

Last clearing of "show controllers OPTICS" counters never
```

To view the historical PM parameters on an OTS controller for a 15-minute interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers ots 0/0/0/0 pm history 15-min optics 1
bucket 1
```

This output shows the historical PM parameters on an OTS controller for a 15-minute interval.

```
Tue May 17 07:02:26.911 UTC

Optics in interval 1 [06:45:00 - 07:00:00 Tue May 17 2022]

Optics history bucket type : Valid
      MIN      AVG      MAX
```

```

OPT[dBm]      : 20.00      20.00      20.00
OPR[dBm]      : 20.00      20.00      20.00
OPT(C+L)[dBm] : 20.00      20.00      20.00
OPR(C+L)[dBm] : -10.00     -10.00     -10.00
OPT(S)[dBm]   : 20.00      20.00      20.00
OPR(S)[dBm]   : 20.00      20.00      20.00
OPBR[dBm]     : -30.00     -30.00     -30.00
EAGN[dB]      : 30.00      30.00      30.00
EATL[dB]      : -4.80      -4.80      -4.80
IAGN[dB]      : 25.00      25.00      25.00
IATL[dB]      : -2.40      -2.40      -2.40
RAMAN-TOT[mW] : 300.00     300.00     300.00
RAMAN-1 [mW]  : 45.00      45.00      45.00
RAMAN-2 [mW]  : 40.00      40.00      40.00
RAMAN-3 [mW]  : 40.00      40.00      40.00
RAMAN-4 [mW]  : 40.00      40.00      40.00
RAMAN-1 [mW]  : 35.00      35.00      35.00

```

To view the current PM parameters on an OTS-OCH controller for a 15-minute interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers ots-och 0/0/0/0/1 pm current 15-min optics 1
```

This output shows the current PM parameters on an OTS-OCH controller for a 15-minute interval.

```

Tue May 17 10:27:20.387 UTC

Optics in the current interval [10:15:00 - 10:27:20 Tue May 17 2022]

Optics current bucket type : Valid
      MIN  AVG  MAX Operational   Configured      TCA      Operational
      Configured      TCA
      Threshold(max) (max)      Threshold(min) Threshold(min) (min)      Threshold(max)
OPT[dBm] : 1.20 1.30 1.30 -30.00      NA      NO
15.00      NA      NO
OPR[dBm] : -12.31-12.25-12.20 -30.00      NA      NO
15.00      NA      NO
Last clearing of "show controllers OPTICS" counters never

```

To view the current PM parameters on an OSC controller for a 15-minute interval, use this command:

```
RP/0/RP0/CPU0:ios#show controller osc 0/0/0/0 pm current 15-min optics 1
```

This output shows the current PM parameters on an OSC controller for a 15-minute interval.

```

Tue May 17 08:24:32.642 UTC

Optics in the current interval [08:15:00 - 08:24:32 Tue May 17 2022]

Optics current bucket type : Valid
      MIN  AVG  MAX Operational   Configured      TCA
      Operational Configured      TCA
      Threshold(max) Threshold(max) (max)      Threshold(min) Threshold(min) (min)
OPT[dBm] : -10.00 -10.00 -10.00 -20.00      NA      NO
12.00      NA      NO
OPR[dBm] : -30.00 -30.00 -30.00 -30.00      NA      NO
0.00      NA      NO
Last clearing of "show controllers OPTICS" counters never

```

To view the current PM parameters on a DFB controller for a 15-minute interval, use this command:

```
RP/0/RP0/CPU0:ios#show controller dfb 0/0/0/0 pm current 15-min optics 1
```

This output shows the current PM parameters on a DFB controller for a 15-minute interval.

```
Tue May 17 08:28:37.455 UTC

Optics in the current interval [08:15:00 - 08:28:37 Tue May 17 2022]

Optics current bucket type : Valid
      MIN    AVG    MAX    Operational Configured    TCA    Operational
Configured    TCA          Threshold  Threshold          Threshold
Threshold
(max)          (max)          (min)          (min)          (min)          (max)
OPT[dBm]: 20.00 20.00 20.00   -25.23    NA          NO          18.00          NA
NO
OPR[dBm]: 10.00 10.00 10.00   -30.00    NA          NO          12.00          NA
NO

Last clearing of "show controllers OPTICS" counters never
```

To view the current PM parameters for an OCH controller for a 30-second interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers och 0/1/0/0 pm current 30-sec optics 1
```

This output shows the current PM parameters for an OCH controller for a 30-second interval.

```
Tue May 10 11:28:29.896 UTC

Optics in the current interval [11:28:00 - 11:28:29 Tue May 10 2022]

Optics current bucket type : Valid
      MIN    AVG    MAX    Operational    Configured    TCA
      Operational    Configured    TCA    Threshold(min)    Threshold(min)    (min)
Threshold(max)    Threshold(max)    (max)
OPT[dBm] : -50.00   -50.00   -50.00   -30.00          NA
NO 15.00    NA          NO
OPR[dBm] : -50.00   -50.00   -50.00   -30.00          NA
NO 15.00    NA          NO

Last clearing of "show controllers OPTICS" counters never
```

To view the historical PM parameters on an OCH controller for a 30-second interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers och 0/1/0/0 pm history 30-sec optics 1
bucket 1
```

This output shows the historical PM parameters on an OCH controller for a 30-second interval.

```
Mon Jul 25 05:35:52.176 UTC

Optics in interval 1 [05:35:00 - 05:35:30 Mon Jul 25 2022]

Optics history bucket type : Valid
      MIN    AVG    MAX
OPT[dBm] : -50.00   -50.00   -50.00
OPR[dBm] : -50.00   -50.00   -50.00
```

Last clearing of "show controllers OPTICS" counters never

To view the current PM parameters for an OCH controller for a 15-minute interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers och 0/1/0/0 pm current 15-min optics 1
```

This output shows the current PM parameters for an OCH controller for a 15-minute interval.

Tue May 10 11:28:50.952 UTC

Optics in the current interval [11:15:00 - 11:28:50 Tue May 10 2022]

Optics current bucket type : Valid

	MIN	AVG	MAX	Operational	Configured	TCA
Operational	Configured	TCA	Threshold(min)	Threshold(min)	(min)	
Threshold(max)	Threshold(max)	(max)				
OPT[dBm]	: -50.00	-50.00	-50.00	-30.00	NA	
NO 15.00	NA	NO				
OPR[dBm]	: -50.00	-50.00	-50.00	-30.00	NA	
NO 15.00	NA	NO				

Last clearing of "show controllers OPTICS" counters never

To view the historical PM parameters for an OCH controller for a 15-minute interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers och 0/1/0/0 pm history 15-min optics 1 bucket 1
```

This output shows the historical PM parameters for an OCH controller for a 15-minute interval.

Mon Jul 25 05:36:12.167 UTC

Optics in interval 1 [05:15:00 - 05:30:00 Mon Jul 25 2022]

Optics history bucket type : Valid

	MIN	AVG	MAX
OPT[dBm]	: -50.00	-50.00	-50.00
OPR[dBm]	: -50.00	-50.00	-50.00

Last clearing of "show controllers OPTICS" counters never

To view the current PM parameters on an OCH controller for a 24-hour interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers och 0/1/0/0 pm current 24-hour optics 1
```

This output shows the current PM parameters on an OCH controller for a 24-hour interval.

Tue May 10 11:29:09.270 UTC

Optics in the current interval [00:00:00 - 11:29:09 Tue May 10 2022]

Optics current bucket type : Invalid

	MIN	AVG	MAX	Operational	Configured	TCA
Operational	Configured	TCA	Threshold(min)	Threshold(min)	(min)	
Threshold(max)	Threshold(max)	(max)				
OPT[dBm]	: -50.00	-50.00	-50.00	-30.00	NA	
NO 15.00	NA	NO				

```

OPR[dBm]      : -50.00      -50.00      -50.00      -30.00      NA
NO      15.00      NA      NO

```

Last clearing of "show controllers OPTICS" counters never

To view the historical PM parameters on an OCH controller for a 24-hour interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers och 0/1/0/0 pm history 24-hour optics 1
```

This output shows the historical PM parameters on an OCH controller for a 24-hour interval.

Mon Jul 25 05:36:35.165 UTC

Optics in interval 1 [00:00:00 - 24:00:00 Sun Jul 24 2022]

Optics history bucket type : Valid

```

          MIN      AVG      MAX
OPT[dBm]  : -50.00  -50.00  -50.00
OPR[dBm]  : -50.00  -50.00  -50.00

```

Last clearing of "show controllers OPTICS" counters never

To view the current PM parameters for an OMS controller for a 30-second interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers oms 0/3/0/8 pm current 30-sec optics 1
```

This output shows the current PM parameters for an OMS controller for a 30-second interval.

Mon Jul 25 07:24:38.319 UTC

Optics in the current interval [07:24:30 - 07:24:38 Mon Jul 25 2022]

Optics current bucket type : Valid

```

MIN AVG MAX Operational Configured TCA Operational Configured TCA
Threshold(min) Threshold(min) (min) Threshold(max) Threshold(max) (max)
OPT[dBm]  : -50.00 -50.00 -50.00 -30.00 NA NO 15.00 NA NO
OPR[dBm]  : -50.00 -50.00 -50.00 -30.00 NA NO 15.00 NA NO

```

Last clearing of "show controllers OPTICS" counters never

To view the historical PM parameters on an OMS controller for a 30-second interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers oms 0/3/0/8 pm history 30-sec optics 1
bucket 1
```

This output shows the historical PM parameters on an OMS controller for a 30-second interval.

Mon Jul 25 07:13:51.228 UTC

Optics in interval 1 [07:13:00 - 07:13:30 Mon Jul 25 2022]

Optics history bucket type : Valid

```

          MIN      AVG      MAX
OPT[dBm]  : -50.00  -50.00  -50.00
OPR[dBm]  : -50.00  -50.00  -50.00

```

Last clearing of "show controllers OPTICS" counters never

To view the current PM parameters for an OMS controller for a 15-minute interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers oms 0/3/0/8 pm current 15-min optics 1
```

This output shows the current PM parameters for an OMS controller for a 15-minute interval.

```
Mon Jul 25 07:25:00.183 UTC

Optics in the current interval [07:15:00 - 07:25:00 Mon Jul 25 2022]

Optics current bucket type : Valid
MIN AVG MAX Operational Configured TCA Operational Configured TCA
Threshold(min) Threshold(min) (min) Threshold(max) Threshold(max) (max)
OPT[dBm] : -50.00 -50.00 -50.00 -30.00 NA NO 15.00 NA NO
OPR[dBm] : -50.00 -50.00 -50.00 -30.00 NA NO 15.00 NA NO

Last clearing of "show controllers OPTICS" counters never
```

To view the historical PM parameters for an OMS controller for a 15-minute interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers oms 0/3/0/8 pm history 15-min optics 1
bucket 1
```

This output shows the historical PM parameters for an OMS controller for a 15-minute interval.

```
Mon Jul 25 07:14:03.090 UTC

Optics in interval 1 [06:45:00 - 07:00:00 Mon Jul 25 2022]

Optics history bucket type : Valid
      MIN      AVG      MAX
OPT[dBm] : -50.00      -50.00      -50.00
OPR[dBm] : -50.00      -50.00      -50.00

Last clearing of "show controllers OPTICS" counters never
```

To view the current PM parameters on an OMS controller for a 24-hour interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers oms 0/3/0/8 pm current 24-hour optics 1
```

This output shows the historical PM parameters for an OMS controller for a 15-minute interval.

```
Mon Jul 25 07:26:09.817 UTC

Optics in the current interval [00:00:00 - 07:26:09 Mon Jul 25 2022]

Optics current bucket type : Valid
MIN AVG MAX Operational Configured TCA Operational Configured TCA
Threshold(min) Threshold(min) (min) Threshold(max) Threshold(max) (max)
OPT[dBm] : -50.00 -50.00 -50.00 -30.00 NA NO 15.00 NA NO
OPR[dBm] : -50.00 -50.00 -50.00 -30.00 NA NO 15.00 NA NO

Last clearing of "show controllers OPTICS" counters never
```

To view the historical PM parameters on an OMS controller for a 24-hour interval, use this command:

```
RP/0/RP0/CPU0:ios#show controllers oms 0/3/0/8 pm history 24-hour optics 1
```

This output shows the historical PM parameters on an OMS controller for a 24-hour interval.

```
Mon Jul 25 07:18:13.532 UTC
Optics in interval 1 [00:00:00 - 24:00:00 Sun Jul 24 2022]
Optics history bucket type : Valid
      MIN      AVG      MAX
OPT[dBm]   : -50.00   -50.00   -50.00
OPR[dBm]   : -50.00   -50.00   -50.00
Last clearing of "show controllers OPTICS" counters never
```

PM history persistence

PM history parameters are retained even after a line card cold reload, line card warm reload, rack reload, RP reload, power cycle, or upgrade of the NCS 1010 chassis.



Note

PM history persistence is not supported on NCS1K4-QXP-K9.

After a software upgrade to the latest release, you can view the history performance monitoring parameters from the previous release. The PM history persistence is supported for 30-second, 15-minute, and 24-hour bucket types. After upgrade from Release 7.11.1 to a higher version, if new PM parameters are available in the new version, this error is displayed while fetching PM data.

```
RP/0/RP0/CPU0:ios#show controllers hundredGigEctrlr 0/0/0/8 pm history 15-min
ether 5
Tue Apr  5 22:05:56.750 UTC
pm_display_int_15min_ether_index: bag_decode failed ('bag' detected the 'fatal'
condition 'An irresolvable version conflict prevented the specified bag from
being decoded')
```

However, this list describes the time that is required to fill all historical buckets of each bucket type, later while fetching PM historical data, no error appears.

- For 30-second bucket type, 15 minutes is required to fill 30 historical buckets.
- For 15-minute bucket type, 8 hours is required to fill 32 historical buckets.
- For 24-hour bucket type, 24 hours is required to fill 7 historical bucket.

PM counters are updated continuously in current bucket for all bucket types (flex, 30-second, 15-minute, and 24-hour). After the timer expires for the respective bucket type, the current PM data is moved to the historical PM bucket. This process of moving PM data to the historical bucket is called Rollover. After rollover, you can access the current PM data as historical PM data.

In case of deletion or removal of the controller, the PM data is persistent for 3 hours. Unless the controller is brought up within 3 hours, the PM data is cleared because the controller is considered to be not in use.

Limitations

If NCS 1010 reload or software upgrade happens during the rollover time, one of these scenarios occur:

- The complete PM bucket is missing and the next PM bucket is marked as *Invalid*.

- PM bucket expiry message appears as follows:

```
RP/0/RP0/CPU0:ios#show controllers hundredGigEctr1r 0/3/0/2 pm history 30-sec
ether 29
Fri Apr 1 01:32:20.646 UTC
History data is empty, Verify at least one collection period is expired
```

- PM bucket interval is marked as *Invalid* and counters are updated as zero.
- PM bucket interval is marked as *Invalid* and counters are updated as nonzero.

7-day support for 15-Min PM bin

This section explains how extended 7-day support for 15-minute performance monitoring samples provides continuous network interface visibility and assessment

PM is enhanced for controllers to collect 15-min bin for 7 days extension.

Table 46: Feature History

Feature Name	Release Information	Feature Description
7-day 15-minute optics PM history	Cisco IOS XR Release 25.4.1	This enhancement enables the collection and storage of 15-minute performance monitoring samples, collecting up to 672 samples. Previously, the CLI bucket range was 1-32; now, it is increased to 1-672 as highlighted in the CLI command. Updated CLI command parameter: <pre>show controllers Controller-type R/S/I/P pm history 15-min optics 1 bucket <1-672></pre> New CLI command introduced: <pre>performance-mgmt controller 15-min extend days <0-7> , where 0 stands for 8 hours.</pre> This enhancement provides comprehensive visibility into interface performance by recording 15-minute counters over a 7-day period. This allows users to effectively monitor and assess network interface health status.

The collection behavior depends on the controller Product ID (PID):

- For NCS1010-CTR2-B-K9, NCS1010-CTLR-B-K9, NCS1K14-CNTRLR-B-K9, and NCS1K14-CNT-B-K9 controllers, the node automatically collects 672 samples (corresponding to 7 days of data).
- For NCS1010-CNTRLR-K9, NCS1K14-CNTRLR-K9, NCS1010-CTR2-K9 controllers, 32 samples are collected by default. To capture 672 samples, explicit configuration is required.



Note

While troubleshooting, showtech can only collect 32 samples, and not the complete 672 samples, regardless of the configured sample collection.

Configure 7-day 15-minute performance monitoring sample collection

Use this procedure to configure the controller to collect and retain up to 672 15-minute performance monitoring samples over a 7-day period.

Ensure the controller can store extended 15-minute performance monitoring samples for enhanced analysis and troubleshooting.

Follow these steps to extend sample collection beyond 32 samples.

Procedure

1. Enter global configuration mode.

Example

```
RP/0/RP0/CPU0:ios#configure
```

2. Run the **performance-mgmt controller 15-min extend days** command to configure the number of days for 15-minute performance monitoring sample collection.

You can specify 0 for 8 hours of retention, or a number from 1 to 7 for the corresponding number of days.

Example

```
RP/0/RP0/CPU0:ios(config)#performance-mgmt controller 15-min extend days 7
```

3. Commit and exit the configuration mode.

Example

```
RP/0/RP0/CPU0:ios(config)#commit  
RP/0/RP0/CPU0:ios(config)#end
```

4. Run the **show controllers ots <interface> pm history 15-min optics 1 bucket extend day <0-7>** command to verify the configured sample collection.

The output should reflect the extended bucket range (for example, 1-672).

The controller is now configured to retain 15-minute performance monitoring samples for the specified duration (for example, up to 7 days or 672 samples).

4 Connection Verification

Topics:

- [Photodiode monitors](#)
- [Connection verification](#)
- [Verify connection on an OTS interface between OLT nodes](#)

Explains photodiode monitoring and connection verification tasks for line cards, breakout panels, Mux/Demux panels, side-to-side nodes, and OTS interfaces between OLT nodes.

Photodiode monitors

This section explains the function and distinguishing attributes of photodiode monitors used in optical power devices.

Photodiode monitors are optical power devices that

- detect optical signal levels on device input and output ports,
- provide real-time feedback for system calibration and performance, and
- may incorporate tone-detection for advanced signal identification.

Calibrated port references for NCS 1000 passive modules

The tables specify port calibration details for different passive modules.

Table 47: NCS1K-BRK-8 calibrated port references

Photodiode	Port calibrated	Port label (Direction)	Minimum power	Maximum power	Dynamic range
PD 1 to PD 8	MPO-16 input ports	0 to 7 (TX)	-20	10	30
PD 9 to PD 16	MPO-16 output ports	0 to 7 (RX)	-20	10	30
PD 17	MPO input fiber 1	COM	-30	10	40

Table 48: NCS1K-BRK-24 calibrated port references

Photodiode	Port calibrated	Port label (Direction)	Minimum power	Maximum power	Dynamic range
PD 1 to PD 8	MPO-16 input ports	0 to 23 (TX)	-20	10	30
PD 9 to PD 11	MPO-16 output ports	0 to 2 (RX)	-20	10	30
PD 12 to PD 14		3 to 5 (RX)			
PD 15 to PD 17		6 to 8 (RX)			
PD 18 to PD 20		9 to 11 (RX)			
PD 21 to PD 23		12 to 14 (RX)			
PD 24 to PD 26		15 to 17 (RX)			
PD 27 to PD 29		18 to 20 (RX)			
PD 30 to PD 32		21 to 23 (RX)			
PD 33	MPO input fiber 1	COM	-30	10	40

Table 49: NCS1K-MD-32x-y calibrated port references

Photodiode	Port calibrated	Port label (Direction)	Minimum power	Maximum power	Dynamic range
PD 1 to PD 32	32 LC input ports	0 to 31 (RX)	-30	10	40
PD 33	COM-RX	COM (RX)	-10	23	33
PD 34	COM-TX	COM (TX)	-35.5	20	55.5
PD 35	COM-RX	COM (TX)	-40	0	40
PD 36 ¹	COM-RX	COM (RX)	-24	5	30

Connection verification

This section explains how connection verification checks the connection between the OLT-C line card and related passive modules to prevent miscabling during node installation.

Connection verification checks the connection between the OLT-C line card and all the other passive modules to avoid miscabling during the node installation. This task generates a specific probe signal from the dedicated Connection Verification Tunable Laser (CV-TL) available at COM-RX-2 (at a given frequency and power) and detects the probe signal on:

- The same OLT-C line card
- The passive modules (Mux/Demux panel or breakout panel) connected to the OLT-C line card
- A different unit (OLT-C line card or passive module) belonging to the same NE
- An optical interface (Router ports or Transponder) connected to the OLT-C line card

Connection verification uses a probe signal or adds a low frequency ON/OFF modulation tone transmitting a given tone pattern at 5 Hz (200 ms bit time). The tone pattern length ranges 4-32 bytes (including an alignment byte) and it includes the Cable-IDs of the cables in the connection and in case also the optical frequency of the specific connection.



Note

The Connection Verification feature requires that 'tone-pattern' and 'tone-pattern-expected' be the same length.

The Cable-ID is generated by the Optical Node Controller supervising the complete NE.

The connection verification process uses the out-of-band (OOB) WSS frequencies (191.150-191.3375 THz) to reach the Optical Interfaces connected to the OLT-C line card via Mux/Demux panel.

Line card and passive modules connection verification

This section describes the connection verification between OLT-C line card and passive modules that are connected to ADD/DROP-i ports and the association between each passive modules and the related OLT-C line card USB management port.

¹ This Photo diode refers only to OOB (191.175GHz) frequency

Connection verification is performed using the OOB channel with CV-TL tuned at 191.175 THz. To univocally identify the optical path under test, the CV-TL is modulated with a low-frequency pattern including the Cable-ID of the connection.

For connection verification toward Mux/Demux panel, the CV-TL at COM-RX-2 port is routed to the DROP-1 or DROP-2 ports. The CV-TL is checked at the PD 36 inside the Mux/Demux panel. CV-TL verifies the correspondence between the specific module and management USB port. The connection verification loopback performs verification of the full optical path. The loopback checks the connection verification signal at PD 24/25 filtered monitors available on OLT-C line card ADD-1 or ADD-2 ports.

To detect the tone pattern on the connection verification signal, these thresholds are set on the different monitors points:

- Mux/Demux panel at PD 36 ON-threshold = -3dBm
- Breakout panel loopback PD ON-threshold = -3dBm
- OLT-C line card ADD ports at PD 24/25 ON-threshold = -5dBm
- OLT-C line card COM-TX-2 port ON-threshold = -21dBm

For connection verification toward the breakout panels, the CV-TL at the COM-RX-2 port is routed to the first fiber of the specific MPO connector (port DROP-i with i=4, 12, 20, 28). The connection verification signal is checked at the monitors present in the breakout panels on the loopback path. This verifies the correspondence between the specific module and management USB port. The verification of the full optical path is performed by checking the connection verification signal at the COM-TX-2 port.


All the monitors receiving a connection verification signal detects and buffers the Cable-ID pattern encoded in the tone to allow the connection verification process by the node controller.

The connection verification signal loopback inside the breakout panel is replicated on all the output port on the MPO connector. In this way, it is possible to verify the loss of the MPO cable on the different fibers checking the connection verification signal power levels at the different ADD-i ports. This function requires a “diverse routing” between WSS Mux and Demux sections.

Side-to-side connection verification

This section describes the connection verification between the different OLT units that are deployed on different sides of a multidegree ROADM node. The interconnection between the different OLT faced on the different sides of a multidegree ROADM is performed via LC patch-cords interconnection between the MPO ports of NCS1K-BRK-8 modules. This figure shows the Side-to-Side connection between the OLT nodes through NCS1K-BRK-8 modules.

Figure 16: NCS 1010 optical line system side-to-side connection

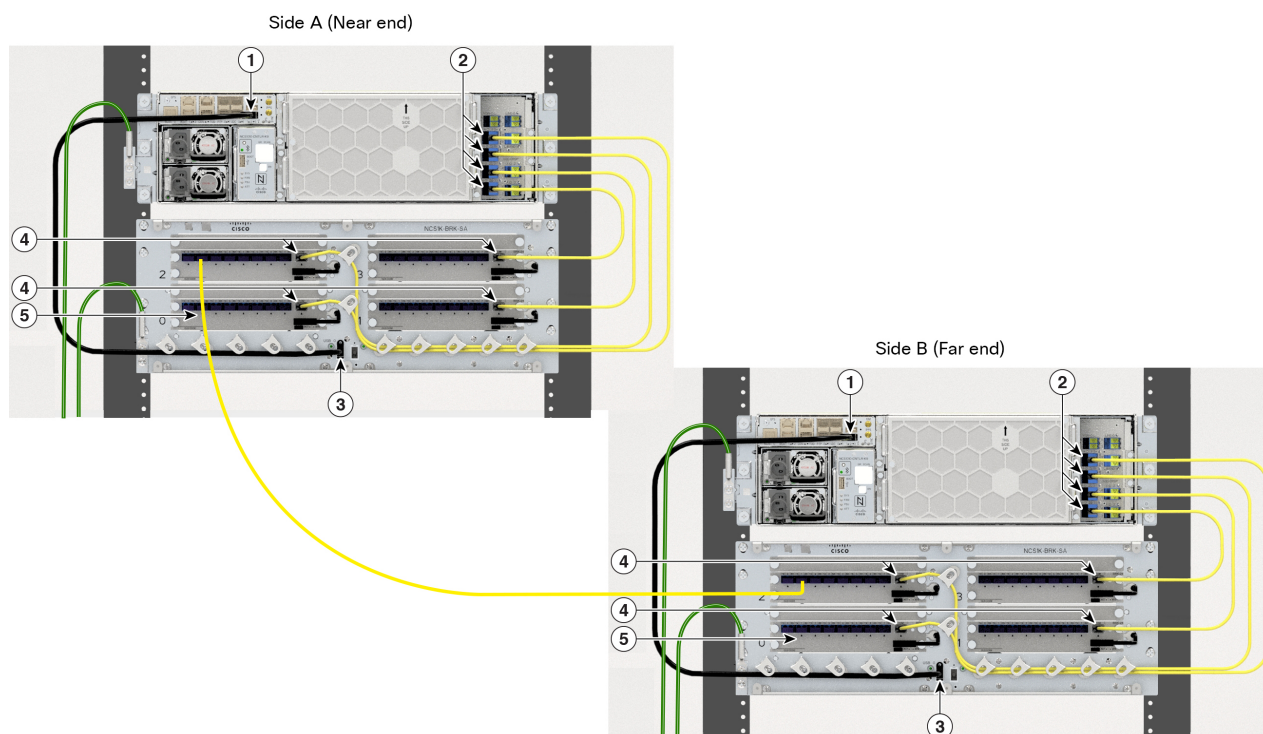

- | | |
|---|------------------------------------|
| 1 | EITU USB 2.0 Port |
| 2 | OLT-C Line Card Add/Drop MPO Ports |
| 3 | NCS1K-BRK-8 USB 2.0 Port |
| 4 | NCS1K-BRK-8 MPO Ports |
| 5 | NCS1K-BRK-8 LC Cable |

The connection verification process is performed using the OOB channel with CV-TL tuned at frequency 191.17 THz. To univocally identify the optical path under test, the CV-TL is modulated with a low-frequency pattern including the Cable-ID of the connection.

The connection verification signal that is generated by the CV-TL is routed to the specific WSS DROP-i ports used for the side-to-side interconnection. It is verified at the monitors available at the NCS1K-BRK-8 input ports that are connected to the OLT-C line card at the other side.

All the monitors receiving a connection verification signal detects and buffers the Cable-ID pattern encoded in the tone. This method allows the proper connection verification process by the node controller.

The side-to-side connection verification is performed after the connection verification between the OLT-passive units to have a complete view of the interconnection between the OLT and each specific NCS1K-BRK-8 module.

The side-to-side connection verification check is performed without any traffic present on the path.

To properly detect the tone pattern on the side-to-side connection verification signal, an ON-threshold of -5dBm is provisioned on all PDs at the DIR-i-RX ports of the NCS1K-BRK-8 module.

Verify the connection between side-to-side nodes

Ensure proper connectivity between NCS 1010 OLT nodes located on opposite sides of multidegree ROADMs by verifying optical connections using tone pattern generation and detection.

Follow these steps to verify connection between different NCS 1010 OLT nodes on different sides of the multidegree ROADMs.

Before you begin

Ensure the OTS, OMS, and OCH controllers are up and operational

Procedure

1. Start tone-pattern on OTS controller.

```
RP/0/RP0/CPU0:ios#tone-pattern controller ots 0/0/0/5 start
Tue May 10 11:37:51.597 UTC
Tone pattern started
```



Note

This alarm is raised after the tone-pattern is started.

```
0/0 Minor Controller 07/13/2022 21:21:02 UTC
Ots0/0/0/5 - Tone Generation In Progress
```

2. Start tone-pattern-detect on OMS controller on one side.

```
RP/0/RP0/CPU0:ios#tone-pattern-detect controller oms 0/2/0/9 start
Tue May 10 11:38:03.775 UTC
Tone pattern detect started
```

3. Start tone-pattern-detect on OCH controller on the other side.

```
RP/0/RP0/CPU0:ios#tone-pattern-detect controller och 0/2/0/1 start
Tue May 10 11:38:03.775 UTC
Tone pattern detect started
```

4. Use the **tone-info** command to check for successful connection verification on OMS controller.

```
RP/0/RP0/CPU0:ios#show controllers oms 0/2/0/9 tone-info
```

5. Use the **tone-info** command to check for successful connection verification on OCH controller.

```
RP/0/RP0/CPU0:ios#show controllers och 0/2/0/1 tone-info
```

6. Stop the tone-pattern-detect on the OCH controller.

```
RP/0/RP0/CPU0:ios#tone-pattern-detect controller och 0/2/0/1 stop
Tue May 10 11:50:36.185 UTC
Tone pattern detect stoped
```

7. Stop the tone-pattern-detect on the OMS controller.

```
RP/0/RP0/CPU0:ios#tone-pattern-detect controller oms 0/2/0/9 stop
Tue May 10 11:50:36.185 UTC
Tone pattern detect stoped
```

8. Stop the tone-pattern-detect on the OTS controller.

```
RP/0/RP0/CPU0:ios#tone-pattern controller ots 0/0/0/5 stop
Tue May 10 11:50:45.837 UTC
Tone pattern stopped
```

Connectivity between side-to-side OLT nodes is successfully verified. The detection of the tone pattern on both the OMS and OCH controllers confirms that the optical connections through multidegree ROADM nodes are working correctly.

What to do next

If any expected results are missing or alarms persist after stopping tone generation/detection, investigate possible link or configuration issues. Record all verification outcomes for documentation.


Line card and optical interfaces connection verification

This section describes the connection verification between OLT nodes and the optical interfaces that are connected to Mux/Demux panel and breakout modules.

Verify connection for NCS 1000 32-channel mux/demux patch panel

The connection verification procedure checks the connection between OLT-C line card and the two Mux/Demux panels. The OLT-C line card and the Mux/Demux panels are connected as shown in this image:

Figure 17: NCS 1010 and NCS 1000 32-channel mux/demux patch panel connection

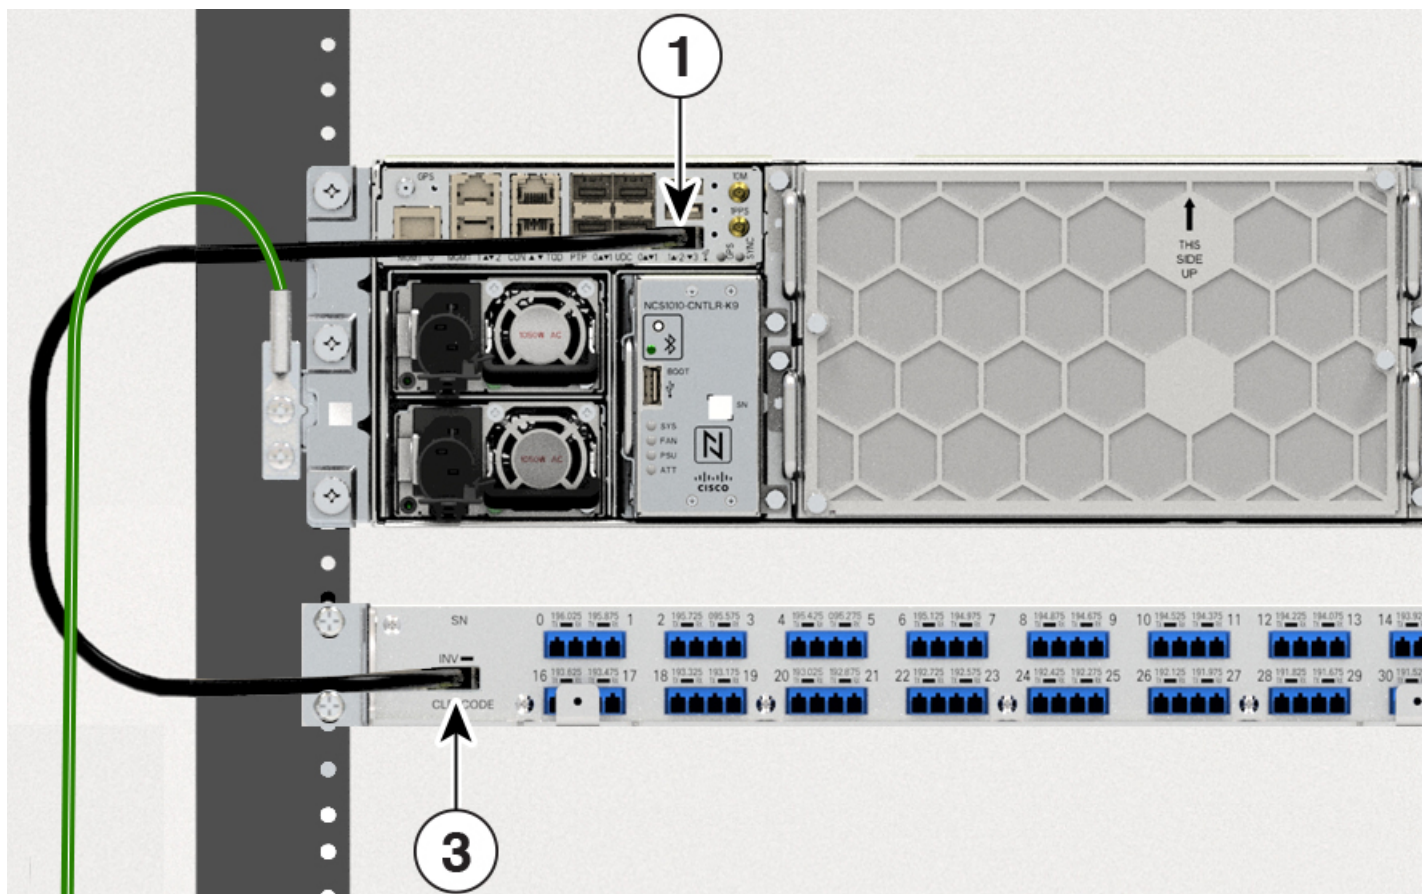

1	EITU USB 2.0 Port
2	OLT-C Line Card Add/Drop 3 LC Port
3	Mux/Demux Panel USB 2.0 Port
4	Mux/Demux Panel COM Port

The identification/verification of the two Mux/Demux panels is performed by checking the connection verification signal at the monitor present on the OOB loop (PD 36 signal). The monitor detects and buffers the Cable-ID encoded in the tone pattern.

In Mux/Demux panel, the PD monitors available on the CH-i-RX ports of each module check the connection verification signal coming from the optical interfaces TX port on the Add path.

The tone detection capability is available on the PD monitors at the CH-i-RX ports and on the loopback path and it is “armed” provisioning on the Mux/Demux panels:

- ON threshold (to determine the “1” or “0” bit)
- the sampling rate
- the pattern lengths (number of bytes)
- the list of PD to be “armed”

Parallel tone acquisitions are allowed on whole ports of the Mux/Demux panel.

Once the bit-pattern encoded in the tone is detected, the information is stored to be retrieved by the node controller and the tone acquisition is stopped until the next “rearm”.

Default ON-threshold to detect the tone pattern on the Mux/Demux signal are:

- -15dBm on all PDs at CH-i-RX ports
- -3dBm on the PD33 on the loopback path

This task describes on how to verify connection between the NCS 1010 OLT-C line card and Mux/Demux panel.

Procedure

1. Configure the OTS controller to generate the tone for connection verification.

Example

```
RP/0/RP0/CPU0: (config) #controller ots 0/0/0/3
RP/0/RP0/CPU0: (config-Ots) #tone-rate 25
RP/0/RP0/CPU0: (config-Ots) #tone-frequency 191.175      ( OOB frequency )
RP/0/RP0/CPU0: (config-Ots) #tone-pattern abcd1234
RP/0/RP0/CPU0: (config-Ots) #commit
```

tone-pattern length must be 4-32 hexadecimal characters.

2. Configure the OMS controller to detect the tone for connection verification.

Example

```
RP/0/RP0/CPU0: (config) #controller oms 0/2/0/32
RP/0/RP0/CPU0: (config-Oms) #tone-rate 25
RP/0/RP0/CPU0: (config-Oms) #tone-pattern-expected abcd1234
```

```
RP/0/RP0/CPU0: (config-Oms) #tone-detect-oob
RP/0/RP0/CPU0: (config-Oms) #commit
```

tone-pattern-expected value must be the same as the **tone-pattern** value.

tone-detect-oob must be configured on the OMS x/x/x/32 for Mux/Demux panel.

3. Start **tone-pattern** on the OTS controller.

Example

```
RP/0/RP0/CPU0: #tone-pattern controller ots 0/0/0/3 start
Tue May 10 11:37:51.597 UTC
Tone pattern started
```

When tone generation is in progress on the OTS interface, the tone generation on other OTS interfaces is not allowed until the current tone generation is stopped.

4. Use the **tone-pattern-detect** command to start the detection of tone pattern.

Example

This is a sample on starting the tone pattern detection on the OMS controller.

```
RP/0/RP0/CPU0: #tone-pattern-detect controller oms 0/2/0/32 start
Tue May 10 11:38:03.775 UTC
Tone pattern detect started
```

5. Use the **tone-info** command to check for successful connection verification.

Example

This is a sample to view the Tone Info for successful connection verification on the OMS controller.

```
RP/0/RP0/CPU0: #show controllers oms 0/2/0/32 tone-info
Tue May 10 11:41:18.847 UTC

Tone Info:

Tone Rate : 25 bits/second

Tone Pattern Expected(Hex value) : abcd1234

Tone Pattern Received(Hex value) : abcd1234

Tone Detected OOB : Enabled

Detection State: Success
```

6. After successful connection verification, stop **tone-pattern-detect** on the OMS controller and **tone-pattern** on the OTS controller.

Example

```
RP/0/RP0/CPU0:#tone-pattern-detect controller oms 0/2/0/32 stop
Tue May 10 11:50:36.185 UTC
Tone pattern detect stoped
```


```
RP/0/RP0/CPU0:#tone-pattern controller ots 0/0/0/3 stop
Tue May 10 11:50:45.837 UTC
Tone pattern stopped
```

Verify connection for NCS1K-BRK-8 panel

The connection verification procedure checks the connection between the OLT-C line card and each NCS1K-BRK-8 panel to match the different module instances with respect to the OLT-C MPO connectors.

The OLT-C line card and the NCS1K-BRK-8 module are connected as shown in this image:

Figure 18: NCS 1010 and NCS1K-BRK-8 connection

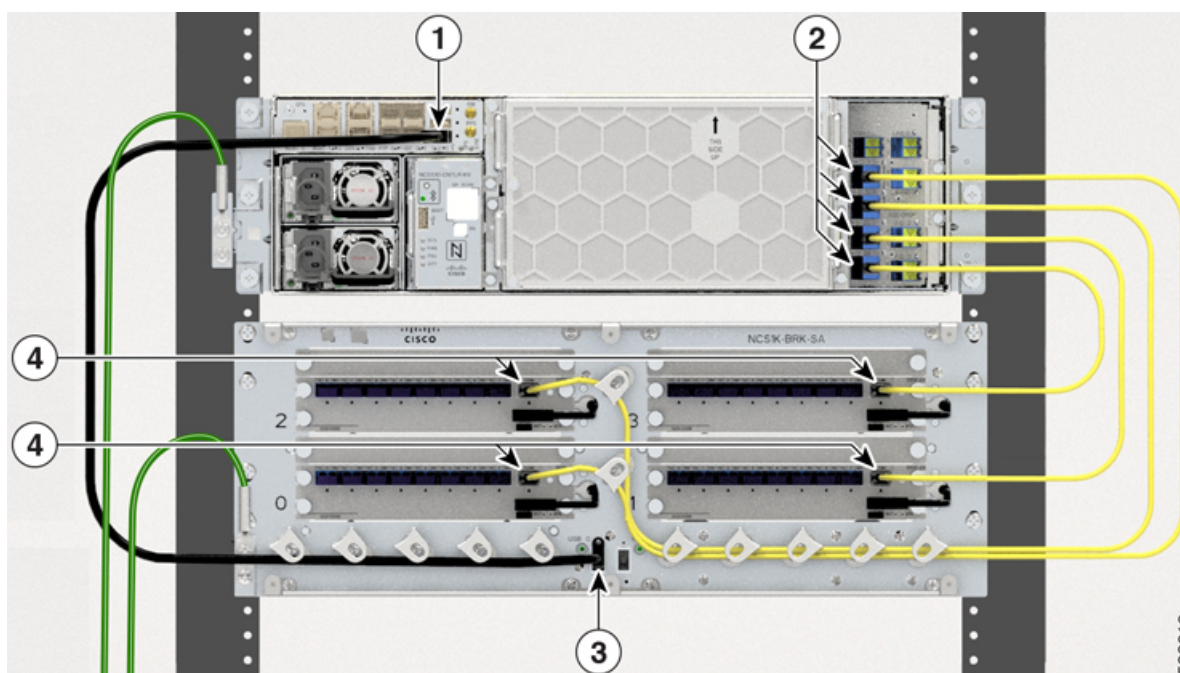

- | | |
|---|------------------------------------|
| 1 | EITU USB 2.0 Port |
| 2 | OLT-C Line Card Add/Drop MPO Ports |
| 3 | NCS1K-BRK-8 USB 2.0 Port |
| 4 | NCS1K-BRK-8 MPO Ports |

The OLT-C line card performs connection verification between the OLT-C Line Card and the NCS1K-BRK-8 panels as described in [Line card and passive modules connection verification](#) on page 111.

The identification/verification of the NCS1K-BRK-8 panel is performed by checking the connection verification signal at the monitor present on the OOB loop (PD17 for the NCS1K-BRK-8 module).

 Note

Connection verification is not supported for NCS1K-BRK-16 and NCS1K-BRK-24 panels.

Each pair of OLT-C line cards that are deployed on two different sides of a multidegree ROADM performs connection verification on Side-to-Side interface as described in [Side-to-side connection verification](#) on page 112. In this case, the PD monitors available on the DIR-i-RX ports of the NCS1K-BRK-8 module detect the connection verification signal coming from the OLT-C Line Card on the other side.

In the NCS1K-BRK-8 panel, the PD monitors available on the CH-i-RX ports of each NCS1K-BRK-8 panel checks the connection verification signal coming from the optical interfaces TX port on the Add path.

The tone detection capability is available on all the PD monitors present on the input and output ports and on the loopback path of the NCS1K-BRK-8 panel. It is “armed” provisioning on the modules:

- ON threshold (to determine the “1” or “0” bit)
- Sampling rate
- Pattern lengths (number of bytes)
- List of PD to be “armed”

Parallel tone acquisitions are allowed on whole ports of the modules.

Once the bit-pattern encoded in the tone is detected, the information is stored to be retrieved by the node controller and the tone acquisition is stopped until the next “rearm.”

Default ON-threshold to detect the tone pattern on the connection verification signal are:

- -5dBm on all PDs at DIR-i-RX or CH-i-RX ports
- -3dBm on the PDs on the loopback path of each module

This task describes on how to verify the connection between the NCS 1010 OLT-C line card and NCS1K-BRK-8 panel.

Procedure

1. Configure the OTS controller to generate the tone for connection verification.

Example

```
RP/0/RP0/CPU0: (config) #controller ots 0/0/0/4
RP/0/RP0/CPU0: (config-Ots) #tone-rate 25
RP/0/RP0/CPU0: (config-Ots) #tone-frequency 191.175      ( OOB frequency )
RP/0/RP0/CPU0: (config-Ots) #tone-pattern abcd1234
RP/0/RP0/CPU0: (config-Ots) #commit
```

tone-pattern length must be 4-36 hexadecimal characters.

2. Configure the OMS controller to detect the tone for connection verification.

Example

```
RP/0/RP0/CPU0: (config) #controller oms 0/2/0/8
RP/0/RP0/CPU0: (config-Oms) #tone-rate 25
```

```
RP/0/RP0/CPU0: (config-Oms) #tone-pattern-expected abcd1234
RP/0/RP0/CPU0: (config-Oms) #tone-detect-oob
RP/0/RP0/CPU0: (config-Oms) #commit
```

tone-pattern-expected value must be same as the **tone-pattern** value.

tone-detect-oob must be configured on the OMS x/x/x/8 for NCS1K-BRK-8.

3. Start **tone-pattern** on the OTS controller.

Example

```
RP/0/RP0/CPU0: #tone-pattern controller ots 0/0/0/4 start
Tue May 10 11:37:51.597 UTC
Tone pattern started
```

When tone generation is in progress on the OTS interface, the tone generation on other OTS interfaces is not allowed until the current tone generation is stopped.

4. Use the **tone-pattern-detect** command to start the detection of tone pattern.

Example

The following is a sample on starting the tone pattern detection on the OMS controller.

```
RP/0/RP0/CPU0: #tone-pattern-detect controller oms 0/2/0/8 start
Tue May 10 11:38:03.775 UTC
Tone pattern detect started
```

5. Use the **tone-info** command to check for successful connection verification.

Example

The following is a sample to view the Tone Info for successful connection verification on the OMS controller.

```
RP/0/RP0/CPU0: #show controllers oms 0/2/0/8 tone-info
Tue May 10 11:41:18.847 UTC

Tone Info:

Tone Rate : 25 bits/second

Tone Pattern Expected(Hex value) : abcd1234
Tone Pattern Received(Hex value) : abcd1234

Tone Detected OOB : Enabled

Detection State: Success
```

6. After successful connection verification, stop **tone-pattern-detect** on the OMS controller and **tone-pattern** on the OTS controller.

Example

```
RP/0/RP0/CPU0:#tone-pattern-detect controller oms 0/2/0/8 stop
Tue May 10 11:50:36.185 UTC
Tone pattern detect stoped
```

```
RP/0/RP0/CPU0:#tone-pattern controller ots 0/0/0/4 stop
Tue May 10 11:50:45.837 UTC
Tone pattern stopped
```

Verify connection on an OTS interface between OLT nodes

This procedure explains how to configure and use tone-pattern commands on the OTS controller to verify the optical transport system (OTS) interface connectivity between OLT nodes.

Verify the optical transport system (OTS) interface connectivity between OLT nodes using tone-pattern commands on the OTS controller.

Use this task when you need to confirm the physical or logical connectivity of OTS interfaces in your optical network. This verification helps ensure that links between OLT nodes and OTS controllers function correctly and can be confidently used for services or troubleshooting.

Follow these steps to check OTS interface connectivity on OLT nodes.

Before you begin

- Ensure you have administrative access to the OLT device CLI.
- Confirm that the OTS controller is properly installed and powered on.
- Identify the correct OTS controller slot and port identifiers (for example, 0/0/0/2).

Procedure

1. Start tone-pattern on OTS controller.

Example

```
RP/0/RP0/CPU0:ios#tone-pattern controller ots 0/0/0/2 start
Wed May 25 11:59:51.040 UTC
Tone pattern started
```

2. Start tone-pattern-detect on OTS controller on one side.

Example

```
RP/0/RP0/CPU0:ios#tone-pattern-detect controller ots 0/0/0/2 start
Wed May 25 12:00:03.271 UTC
Tone pattern detect started
```

3. Check for successful connection verification on the Line 2 OTS controller.

Example

```
RP/0/RP0/CPU0:ios#show controllers ots 0/0/0/2 tone-info
Wed May 25 12:00:11.393 UTC

Tone Info:

Tone Frequency : 191.1750000 THz

Tone Rate : 20 bits/second

Tone Pattern(Hex value) : abcd1234

Tone Pattern Expected(Hex value) : abcd1234

Tone Pattern Received(Hex value) : abcd1234

Tone Detected OOB : Enabled

Detection State: Success
```

4. Stop the tone-pattern-detect on the OTS controller.

Example

```
RP/0/RP0/CPU0:ios#tone-pattern-detect controller ots 0/0/0/2 stop
Wed May 25 12:00:56.540 UTC
Tone pattern detect stoped
```

5. Stop the tone-pattern on the OTS controller.

Example

```
RP/0/RP0/CPU0:ios#tone-pattern controller ots 0/0/0/2 stop
Wed May 25 12:01:04.226 UTC
Tone pattern stopped
```

OTS interface connectivity is verified.

What to do next

- If the connection is not verified, review cabling and hardware status, then repeat the procedure as needed.
- Document the status of the connection for operational records or further troubleshooting.

5 Smart Licensing

Topics:

- [Understanding smart licensing](#)
- [License entitlements for NCS 1010](#)
- [Generate a token in Cisco Smart Software Manager](#)
- [Configure smart licensing on Cisco NCS 1010](#)
- [Configure smart transport on Cisco NCS 1010](#)
- [Reserve specific licenses for NCS 1010 device](#)
- [Reuse licenses with the SLR deactivation method](#)
- [Smart licensing verification commands](#)

Explains Smart Licensing concepts, entitlements, transport modes, registration, specific license reservation, verification commands, and license consumption behavior for connection verification, Nyquist channels, and OTDR scan data.

Understanding smart licensing

This section explains how smart licenses enable automated software license management, tracking, and compliance for Cisco devices.

Smart Licensing is a cloud-based, software license management solution that enables you to automate time-consuming, manual licensing tasks. The solution allows you to easily track the status of your license and software usage trends.

Smart Licensing helps you simplify three core functions:

- **Purchasing:** The software that you have installed in your network can be registered, without Product Activation Keys (PAKs).
- **Management:** You can automatically track activations against your license entitlements. Also, there is no need to install the license file on every node. You can create license pools (logical grouping of licenses) to reflect your organization structure. Smart Licensing offers you Cisco Smart Software Manager, a centralized portal that enables you to manage all your Cisco software licenses from one centralized website.
- **Reporting:** Through the portal, Smart Licensing offers an integrated view of the licenses you have purchased and what has been deployed in your network. You can use this data to make better purchasing decisions, based on your consumption.

Smart licensing features

- Your device initiates a call home and requests the licenses it needs.
- Pooled licenses - Licenses are company account-specific, and can be used with any compatible device in your company. You can activate or deactivate different types of licenses on the device without actually installing a license file on the device.
- Licenses are stored securely on Cisco servers.
- Licenses can be moved between product instances without license transfer. This greatly simplifies the reassignment of a software license as part of the Return Material Authorization (RMA) process.
- It provides a complete view of all the Smart Software Licenses used in the network using a consolidated usage report of software licenses and devices in one easy-to-use portal.

Cisco Smart Account

NCS 1010 integrates with Cisco Smart Accounts to simplify license management.

Smart Accounts provide a centralized, organized, and simple-to-use solution for managing Cisco software licenses across an entire organization. They act as a container that holds all Cisco software assets, allowing customers to view, store, manage, and move these assets as needed. Smart Accounts enable full visibility into license entitlements and usage, helping optimize software management. Smart Accounts support license pooling, portability, and provide compliance reporting.

When creating a Smart Account, you must have the authority to represent the requesting organization. After you submit the request, it goes through a brief approval process. Access <http://software.cisco.com> to learn about, set up, or manage Smart Accounts.

Cisco Smart Software Manager enables you to manage all your Cisco Smart software licenses from one centralized website. With Cisco Smart Software Manager, you organize and view your licenses in groups called virtual accounts (collections of licenses and product instances). Use the Cisco Smart Software Manager to do these tasks:

- Create, manage, or view virtual accounts.
- Create and manage Product Instance Registration Tokens.
- Transfer licenses between virtual accounts or view licenses.

- Transfer, remove, or view product instances.
- Run reports against your virtual accounts.
- Modify your email notification settings.
- View overall account information.

Virtual Accounts

Virtual Accounts are customizable subaccounts within a Smart Account used to organize and optimize Cisco licenses. They can be structured to reflect business units, product types, or geographic locations, allowing better planning and utilization of assets. They are created and maintained by the Smart Account administrator. Smart Licensing allows you to create multiple license pools or virtual accounts within the Smart Software Manager portal. Using the Virtual Accounts option that you can aggregate licenses into discrete bundles that are associated with a cost center so that one section of an organization cannot use the licenses of another section of the organization. For example, if you segregate your company into different geographic regions, you can create a virtual account for each region to hold the licenses and product instances for that region.

All new licenses and product instances are placed in the default virtual account in the Smart Software Manager, unless you specify a different one during the order process. After you access the default account, you may choose to transfer them to any other account, provided you have the required access permissions.

Use the Smart Software Manager portal to create license pools or transfer licenses.

Product instance registration tokens

A product requires a registration token until you have registered the product. On successful registration, the device receives an identity certificate. This certificate is saved and automatically used for all future communications with Cisco. Registration tokens are stored in the Product Instance Registration Token Table that is associated with your enterprise account. Registration tokens can be valid 1–365 days.


Product instances

A product instance is an individual device with a unique device identifier (UDI) that is registered using a product instance registration token (or registration token). You can register any number of instances of a product with a single registration token. Each product instance can have one or more licenses residing in the same virtual account. Product instances must periodically connect to the Cisco Smart Software Manager servers during a specific renewal period. If you remove the product instance, its licenses are released and made available within the virtual account.

Smart licensing workflow

This figure depicts a working model of smart licensing.

Figure 19: Smart licensing workflow

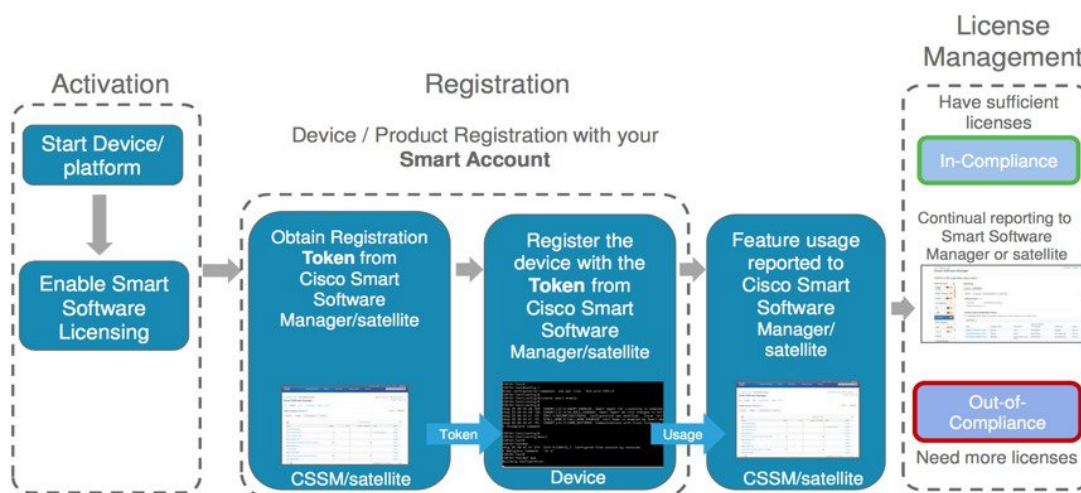

1. **Setting up Smart Licensing:** You can place the order for Smart Licensing, to manage licenses on the Cisco.com portal. You agree to the terms and conditions governing the use and access of Smart Licensing in the Smart Software Manager portal.
2. **Enabling and Use Smart Licensing:** Smart Licensing is enabled by default. You can use either of these options to communicate:
 - **Smart Call Home:** The Smart Call Home feature is automatically configured when Smart Licensing is enabled. Smart Call Home is used by Smart Licensing as a medium for communication with the Cisco license service. Call Home feature allows Cisco products to periodically call-home and perform an audit and reconciliation of your software usage information. This information helps Cisco efficiently track your install base, keep them up and running, and effectively pursue service and support contract renewals. For more information on Smart Call Home feature, see http://www.cisco.com/c/dam/en/us/td/docs/switches/lan/smart_call_home/SCH_Deployment_Guide.pdf.
3. **Manage and Report Licenses:** You can manage and view reports about your overall software usage in the Smart Software Manager portal. Compliance reporting describes the types of Smart Licensing reports.

Benefits of smart licensing

This section explains the advantages of smart licenses for flexible software asset management and operational efficiency.

- Licenses are not locked to perform configurations using Cisco NCS 1010 even if the license limit exceeds the paid license limit. You are notified with out-of-compliance notification to buy additional licenses when the license limit exceeds the paid license limit. This saves time with the ability to transfer licenses across the organization.
- Licenses can be pooled across the entire organization, enabling them to be reused across organizational boundaries.
- Provides software asset management information so that you can plan and track the licenses.

License entitlements for NCS 1010

This section lists the available license entitlements for Cisco NCS 1010, their applicability, and display names.

Cisco NCS 1010 supports the Vortex model for smart licensing software. The available license entitlements are categorized as Essential and Advantage. Each category is designed to enable specific features and hardware support.

This is the list of license types and their applicability.

- ILA Essentials—One per ILA card (Maximum one license)
- OLT Essentials—One per WSS port per OLT card (Maximum 32 licenses).
- ILA Advantage—One per ILA card for Timing access and OTDR access features (Maximum 1 license).
- OLT Advantage—One per WSS port per OLT card for Timing access, OTDR access, Connection Verification features (Maximum 32 licenses)

Licensing behavior with Nyquist channels

When Nyquist channels are enabled, each cross connection created on a port consumes one Essentials license and one Advantage license.

License entitlement display names and descriptions

The table lists the license entitlements as displayed in Cisco Smart Software Manager (CSSM) and their descriptions:

Table 50: NCS 1010 license entitlements

Display name in CSSM server	Description
NCS1010_ADV_ILA_RTU	NCS 1010 ILA Advantage Right-to-Use (RTU)
NCS1010_ADV_ILA_SIA	NCS 1010 ILA Advantage Software Innovation Access (SIA)
NCS1010_ADV_OLT_RTU	NCS 1010 OLT Advantage RTU (per port)
NCS1010_ADV_OLT_SIA	NCS 1010 OLT Advantage SIA (per port)
NCS1010_ESS_ILA_RTU	NCS 1010 ILA Essentials RTU
NCS1010_ESS_ILA_SIA	NCS 1010 ILA Essentials SIA
NCS1010_ESS_OLT_RTU	NCS 1010 OLT Essentials RTU (per port)
NCS1010_ESS_OLT_SIA	NCS 1010 OLT Essentials SIA (per port)

Generate a token in Cisco Smart Software Manager

This procedure explains how to configure a registration token for Cisco devices using Cisco Smart Software Manager.

To create a new token using Cisco Smart Software Manager, perform these tasks:

Procedure

1. Log in to the Cisco Smart Software Manager.

<https://software.cisco.com/software/cswws/platform/home#SmartLicensing-Inventory>

2. Click the **Inventory** tab, and select your virtual account from the **Virtual Account** drop-down list.
3. Click the **General** tab, and click **New Token**.

The **Create Registration Token** window is displayed.

4. Enter the token description. Specify the number of days the token must be active.
5. Check the **Allow export-controlled functionality on the products registered with this token** check box.
6. Click **Create Token**.
7. Copy the token and register NCS1010 with the same token ID.

An example of the token ID: YzY2ZjYyNjktY2NlOS00NTc4LWlxNTAtMjZkNmNiNzMTY1LTE2NjAzNjQ3%0ANzY4Nj8ZVJSckxKN2pFV2tleHV0MUKxbGxTazFDVm9kc1B5MGIHQmIFWUJi%0Ac3VNRT0%3D%0A

Configure smart licensing on Cisco NCS 1010

This procedure explains how to configure smart licensing on the Cisco NCS 1010 platform to enable automated license management and compliance.

Follow these steps to configure smart licensing in Cisco NCS 1010.

Procedure

1. Configure the domain name server for the smart license server.

Example

```
RP/0/RP0/CPU0:ios#configure
Sat Dec 15 15:25:14.385 IST
RP/0/RP0/CPU0:ios(config)#domain name-server 198.51.100.1
```

2. Set up the CiscoTAC-1 profile and destination address for Smart Call Home, using the following commands:

call-home

service active

contact smart-licensing

profile CiscoTAC-1

active

destination address http {http|https}://{FQDN}/its/service/oddce/services/DDCEService

destination transport-method http



Note

FQDN must be either Cisco Smart Software Manager FQDN (tools.cisco.com) or Smart Licensing satellite server FQDN. You must configure the DNS server before setting-up the call-home destination address as FQDN. Use the **domain name-server {DNS server IP}** command to configure the DNS server on the device.

Example

```
RP/0/RP0/CPU0:ios#domain name-server 198.51.100.1
RP/0/RP0/CPU0:ios#call-home
RP/0/RP0/CPU0:ios#service active
RP/0/RP0/CPU0:ios#contact smart-licensing
RP/0/RP0/CPU0:ios#profile CiscoTAC-1
RP/0/RP0/CPU0:ios#active
RP/0/RP0/CPU0:ios#destination address http
https://tools.cisco.com/its/service/oddce/services/DDCEService
RP/0/RP0/CPU0:ios#destination transport-method http
```



Note

CiscoTAC-1 profile is the default profile for smart licensing and it must not be deleted.

3. Configure the crypto ca Trust point profile, if CRL distribution point is not defined in the Satellite server certificate or if the device is not able to reach the host mentioned in the CRL distribution point.

Example

```
RP/0/RP0/CPU0:ios(config)#crypto ca trustpoint Trustpool crl optional
```

4. Create and copy the registration token ID using Cisco Smart Software Manager.

For more details about creating a token, see [Generate a token in Cisco Smart Software Manager](#) on page 127.

5. In the privileged EXEC mode, register the token ID in Cisco NCS 1010, using the following command:

license smart register idtoken *token-ID*

The registration may fail if the token is invalid or there is communication failure between the device and the portal. If there is a communication failure, there is a wait time of 24 hours before the device attempts to register again. To force the registration, use the **license smart register idtoken *token-ID* force** command.

When your device is taken off the inventory, shipped elsewhere for redeployment, or returned to Cisco for replacement using the return merchandise authorization (RMA) process, you can use the **license smart deregister** command to cancel the registration on your device. All smart licensing entitlements and certificates on the platform are removed.

ID certificates are renewed automatically after six months. In case, the renewal fails, the product instance goes into unidentified state. You can manually renew the ID certificate using the **license smart renew id** command.

Authorization periods are renewed by the Smart Licensing system every 30 days. As long as the license is in an 'Authorized' or 'Out-of-Compliance' (OOC), the authorization period is renewed. Use the **license smart renew auth** command to make an on-demand manual update of your registration. Thus, instead of waiting 30 days for the next registration renewal cycle, you can issue this command to instantly find out the status of your license.

After 90 days, the authorization period expires and the status of the associated licenses display "AUTH EXPIRED". Use the **license smart renew auth** command to retry the authorization period renewal. If the retry is successful, a new authorization period begins.

Configure smart transport on Cisco NCS 1010

This procedure explains how to configure smart transport as an alternative to Call Home on Cisco NCS 1010 to enable connectivity to the Cisco Smart Software Manager (CSSM).

You can use the smart transport as an alternative option to Call Home, to connect to the CSSM. To configure smart transport in Cisco NCS 1010, perform the following steps:

Procedure

1. Remove the Call Home configuration by deregistering the device.

Example

```
RP/0/RP0/CPU0:ios#license smart deregister
```

2. Configure smart transport registration:

Example

```
RP/0/RP0/CPU0:ios#license smart transport smart
```

```
RP/0/RP0/CPU0:ios#commit
```

3. Restart the license process.

Example

```
RP/0/RP0/CPU0:ios(config)#process restart smartlicserver location 0/RP0/CPU0
```



Note

Use the process restart option only when you change between Call Home and Smart Transport options. It is not required when you configure Smart Transport at the time of fresh bring-up.

4. Register the token ID in Cisco NCS 1010.

Example

```
RP/0/RP0/CPU0:ios(config)#license smart register
ODZhNmQ4MjMtYWUzYS00Yjg5LTk5NjgtYmU1NTJkMW
NmMGM4LTE2OTQwNjcxc%0AOTE2OTIN8OUFVImI2NUt0emVkuUHVTallYdXVFWGx0R3dLSHZDNGFFa3RBVGFa%0AY095Yz0%3D%0A
```

Reserve specific licenses for NCS 1010 device

This procedure explains how to configure smart licensing on the Cisco NCS 1010 platform to enable automated license management and compliance.

Specific License Reservation (SLR) lets you reserve a license for your product instance from the CSSM. To reserve specific licenses for NCS 1010, perform these steps:

Procedure

1. Deregister the device, if it was already registered for the license, using the **license smart deregister** command.

Example:

```
RP/0/RP0/CPU0:iso#license smart deregister
Thu Jul 19 13:33:30.048 UTC
RP/0/RP0/CPU0:iso# Jul 19 13:17:33.126 UTC: http_client[232]
%SECURITY-XR_SSL-6-CERT_VERIFY_INFO : SSL Certificate verification:
Certificate can be used for purpose it was meant to be
License command "license smart deregister " completed successfully.
```

2. Generate the request code using the **license smart reservation request** local command.

Example:

```
RP/0/RP0/CPU0:iso#license smart reservation request local
Thu Jul 19 13:33:47.241 UTC

Enter this request code in the Cisco Smart Software Manager portal:
CB-ZNCS1010-SA:FCB2546B08T-BBTQDthRu-BA
```

3. Use the generated code and generate the authorization code through Cisco Smart Software Manager. See [Reserve licenses using Cisco Smart Software Manager](#) on page 132.
4. Enter the **run** command to launch the iso XR Linux bash shell.

Example:

```
RP/0/RP0/CPU0:iso#run

RP/0/RP0/CPU0:Jul 19 13:35:20.236: run_cmd[67213]: %INFRA-INFRA_MSG.5-RUN_LOGIN
: User Cisco logged into shell from con0/RP0/CP0
```

5. Create a file using the **vim file name** command.

Example:

```
[node0_RP0_CPU0:~]$vim smart1
```

6. Copy the authorization code in the file and type **:wq** to save and exit the file.
7. Use the **exit** command to exit the shell.

Example:

```
[node0_RP0_CPU0:~]$exit
logout
RP/0/RP0/CPU0:Jul 19 13:45:21.146 UTC run-cmd[67213] %INFRA_MSG-5-LOGOUT :
User cisco logged out of shell from con0/RP0/CPU0
```

8. Install the authorization code using the **license smart reservation install file** command.

Example:

```
RP/0/RP0/CPU0:iso#license smart reservation install file /disk0:/smart1
Thu Jul 19 13:46:22.877 UTC
RP/0/RP0/CPU0:Jul 19 13:46:22.946 UTC: plat_sl_client[368]:
%LICENSE-PLAT_CLIENT-6-STATE_CHANGE : Licensing platform state changing from
UNREGISTERED to REGISTERED
RP/0/RP0/CPU0:Jul 19 13:46:22.946 UTC: smartlicserver[247]:
%LICENSE-SMART_LIC-6-AGENT_REG_SUCCESS : Smart Agent for Licensing Registration
successful. udi PID:NCS1010-SA, SN:FCB2546B08T
Reservation install file successful
Last Confirmation code 8572aa81
```

 Note

You can verify the number of reservations in the Cisco smart software manger portal and can view the product instance name changed to a UDI.

9. Verify the udi using the **show license udi** command.

Example:

```
RP/0/RP0/CPU0:iso#show license udi
Thu Jul 19 13:43:19.731 UTC
UDI: PID:NCS1010-SA, SN:FCB2546B08T
```

10. Verify the license reservation using the command **show license status**.

Example:

```
RP/0/RP0/CPU0:P2A_DT_08#show license status
Thu Jul 19 15:45:27.137 UTC

Smart Licensing is ENABLED

Utility:
  Status: DISABLED
License Reservation is ENABLED

Data Privacy:
  Sending Hostname: yes
  Callhome hostname privacy: DISABLED
  Smart Licensing hostname privacy: DISABLED
  Version privacy: DISABLED

Transport:
  Type: Transport Off

Registration:
  Status: REGISTERED - SPECIFIC LICENSE RESERVATION
  Export-Controlled Functionality: ALLOWED
  Initial Registration: SUCCEEDED on Jul 19 2022 15:21:24 UTC

License Authorization:
  Status: AUTHORIZED - RESERVED on Jul 19 2022 15:21:24 UTC

Export Authorization Key:
  Features Authorized:
    <none>

Miscellaneous:
  Custom Id: <empty>
```

Reserve licenses using Cisco Smart Software Manager

This procedure explains how to configure your license reservation in Cisco Smart Software Manager to authorize devices and ensure compliance.

To reserve the required number of licenses using the Cisco Smart Software Manager, perform these steps:

Procedure

1. Log in to the Cisco Smart Software Manager.
<https://software.cisco.com/software/cswws/platform/home#SmartLicensing-Inventory>
2. Click the **Inventory** tab. From the **Virtual Account** drop-down list, select your smart account.
3. Click **Licenses** and click **License Reservation**.
The **Smart License Reservation** wizard is displayed.
4. In the **Enter Request Page** tab, paste the reservation code that you had generated from NCS 1010 in the **Reservation Request Code** area and click **Next**.
5. In the **Select Licenses** tab, click the **Reserve a specific License** radio button.
The list of surplus licenses available in your virtual account is displayed.
6. Enter the number of licenses that you want to reserve for the required license, in the **Quantity to Reserve** field, and click **Next**.
7. In the **Review and Confirm** tab, click **Generate Authorization Code**.
8. Click **Download as File** to download the authorization code and use the code to register the NCS 1010 device.

Reuse licenses with the SLR deactivation method

This procedure explains how to reuse purchased licenses from a common license pool for device upgrades, temporarily, by releasing licenses with Smart License Reservation (SLR) deactivation.

You can release some of the purchased licenses belonging to a common license pool, and reuse the same to upgrade new devices that are added into your network, for a temporary period. Later on, you must purchase the licenses for the new devices.

Procedure

1. Deregister the device for which you want to release the licenses, and enable Flexible Consumption Model (FCM) (if not enabled)

Example:

```
RP/0/RP0/CPU0:ios#smart license deregister
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#license smart flexible-consumption enable
RP/0/RP0/CPU0:ios(config)#commit
RP/0/RP0/CPU0:ios#end
```

2. Generate the request code using the **license smart reservation request local** command.

Example:

```
RP/0/RP0/CPU0:ios(config)#license smart reservation request local
Fri Jul 1 07:11:56.541 UTC
Enter this request code in the Cisco Smart Software Manager portal:
CC-ZNCS1010-SA:FCB2530B11E-BBTQDthRu-BE
```

3. Use the generated code and generate the authorization code through Cisco Smart Software Manager. See [Reserve licenses using Cisco Smart Software Manager](#) on page 132.



Note

While reserving licenses in CSSM, under the **Select Licenses** tab, enter the number of licenses only for the RTU licenses, and leave the number of licenses as 0 for SIA licenses.

4. Enter the **run** command to launch the iso XR Linux bash shell.

Example:

```
RP/0/RP0/CPU0:iso#run
```

```
RP/0/RP0/CPU0:Jul 1 7:35:20.281: run_cmd[67213]: %INFRA-INFRA_MSG.5-RUN_LOGIN
: User Cisco logged into shell from con0/RP0/CP0
```

5. Create a file using the **vim file name** command.

Example:

```
[node0_RP0_CPU0:~]$vim smart1
```

6. Copy the authorization code in the file and type **:wq** to save and exit the file.

7. Use the **exit** command to exit the shell.

Example:

```
[node0_RP0_CPU0:~]$exit
```

```
logout
```

```
RP/0/RP0/CPU0:Jul 1 7:45:21.146 UTC run-cmd[67213] %INFRA_MSG-5-LOGOUT : User
cisco logged out of shell from con0/RP0/CPU0
```

8. Install the authorization code using the **license smart reservation install file** command.

Example:

```
RP/0/RP0/CPU0:iso#license smart reservation install file /disk0:/smart1
```

```
Thu Jul 19 13:46:22.877 UTC
```

```
RP/0/RP0/CPU0:Jul 1 7:46:22.946 UTC: plat_sl_client[368]:
```

```
%LICENSE-PLAT_CLIENT-6-STATE_CHANGE : Licensing platform state changing from
UNREGISTERED to REGISTERED
```

```
RP/0/RP0/CPU0:Jul 1 7:46:22.946 UTC: smartlicserver[247]:
```

```
%LICENSE-SMART_LIC-6-AGENT_REG_SUCCESS : Smart Agent for Licensing Registration
successful. udi PID:NCS1010-SA,SN:FCB2546B08T
```

```
Reservation install file successful
```

```
Last Confirmation code 8572aa81
```

 Note

You can verify the number of reservations in the Cisco smart software manger portal.

9. Verify the license reservation using the command **show license platform summary**.

Example:

```
RP/0/RP0/CPU0:test#show license platform summary
Fri Jul 1 07:24:07.016 UTC
Collection: LAST: Fri Jul 01 2022 07:48:34 UTC
            NEXT: Fri Jul 01 2022 07:48:34 UTC
Reporting:  LAST: Fri Jul 01 2022 07:48:34 UTC
            NEXT: Fri Jul 01 2022 07:48:34 UTC
SIA Status: Node is in deactivated state
```

10. After the node is deactivated and the licenses are freed on the CSSM server, use those licenses to perform software upgrade on another node for a temporary period.

Smart licensing verification commands

This section explains how to reuse purchased licenses from a common license pool for device upgrades, temporarily, by releasing licenses with Smart License Reservation (SLR) deactivation.

After enabling Smart Licensing, you can use the **show** commands to verify the default Smart Licensing configuration. If any issue is detected, take corrective action before making further configurations.

- **show license all**
- **show license trace all**
- **show license status**
- **show license summary**
- **show license tech**
- **Show license udi**
- **show license usage**
- **show license platform detail**
- **show license platform summary**
- **show license platform trace**
- **Show license platform trace all**
- **show tech-support smartlic**
- **show call-home detail**
- **show call-home trace all**
- **show tech-support call-home**

This table defines the available license authorization status in Cisco NCS 1010:

Table 51: License authorization status

License authorization status	Description
Unconfigured	Smart Software Licensing is not configured.
Unidentified	Smart Software Licensing is enabled but is not registered.
Registered	Device registration is completed and an ID certificate is received that is used for future communication with the Cisco licensing authority.
Authorized	Registration is completed with a valid Smart Account and license consumption has begun. This indicates compliance.

License authorization status	Description
Out of Compliance	Consumption exceeds available licenses in the Smart Account.
Authorization Expired	The device is unable to communicate with the Cisco Smart Software Manager for an extended period. This state occurs after 90 days of expiry. The device attempts to contact the CSSM every hour to renew the authorization until the registration period expires.

Example 1:

This example shows the sample output of the **show license all** command.

```
RP/0/RP0/CPU0:iso#show license all
Fri Jul 15 05:32:02.678 UTC

Smart Licensing Status
=====
```

Smart Licensing is ENABLED

Registration:

Status: REGISTERED
 Smart Account: InternalTestDemoAccount8.cisco.com
 Virtual Account: NCS1010-PROD
 Export-Controlled Functionality: ALLOWED
 Initial Registration: SUCCEEDED on Jul 15 2022 04:58:24 UTC
 Last Renewal Attempt: None
 Next Renewal Attempt: Jan 11 2023 04:58:23 UTC
 Registration Expires: Jul 15 2023 04:53:20 UTC

License Authorization:

Status: AUTHORIZED on Jul 15 2022 04:58:40 UTC
 Last Communication Attempt: SUCCEEDED on Jul 15 2022 04:58:40 UTC
 Next Communication Attempt: Aug 14 2022 04:58:40 UTC
 Communication Deadline: Oct 13 2022 04:53:41 UTC

Export Authorization Key:

Features Authorized:
 <none>

Utility:

Status: DISABLED

Data Privacy:

Sending Hostname: yes
 Callhome hostname privacy: DISABLED
 Smart Licensing hostname privacy: DISABLED
 Version privacy: DISABLED

Transport:

Type: Callhome

Miscellaneous:

Custom Id: <empty>

License Usage

=====

NCS1010 - Essentials - OLT RTU (NCS1010_ESS_OLT_RTU):

Description: NCS1010 - Essentials Tier - Optical Line Terminal RTU (Per Port)

Count: 2
 Version: 1.0
 Status: AUTHORIZED
 Export status: NOT RESTRICTED

NCS1010 - Essentials - OLT SIA (NCS1010_ESS_OLT_SIA):

Description: NCS1010 - Essentials Subscription - Optical Line Terminal - SIA
 (Per Port)

Count: 2
 Version: 1.0
 Status: AUTHORIZED
 Export status: NOT RESTRICTED

Product Information

=====

UDI: PID:NCS1010-SA,SN:FCB2546B08T

```

Agent Version
=====
Smart Agent for Licensing: 5.4.16_rel/63

Reservation Info
=====
License reservation: DISABLED

```

Example 2:

This example shows the sample output of the **show license platform detail** command.

```

RP/0/RP0/CPU0:iso#show license platform detail
Fri Jul 15 06:56:41.353 UTC
Collection: LAST: Fri Jul 15 2022 06:56:14 UTC
            NEXT: Fri Jul 15 2022 06:58:14 UTC
Reporting:  LAST: Fri Jul 15 2022 06:56:14 UTC
            NEXT: Fri Jul 15 2022 06:58:14 UTC
SIA Status: In Compliance
Parameters: Collection interval:          2 minute(s)
            Reporting interval:          2 minute(s)
            Throughput gauge:          1000000 Kbps

=====
Feature/Area 'FCM'
  Name:  FCM
  Status:  ACTIVE
  Flags:

  [ 1] Name:  NCS1010 - Essentials Tier - In-Line Amplifier RTU
        Entitlement Tag:
        regid.2022-05.com.cisco.NCS1010_ESS_ILA_RTU,1.0_9b4322b1-bff3-4ddf-944c-16ec9aaab1cc

        Count: Last reported:    0
               Next report:      0
  [ 2] Name:  NCS1010 - Essentials Subscription - In-Line Amplifier - SIA
        Entitlement Tag:
        regid.2022-05.com.cisco.NCS1010_ESS_ILA_SIA,1.0_67243ac7-1a7c-41e4-a160-f13df80fd0e4

        Count: Last reported:    0
               Next report:      0
  [ 3] Name:  NCS1010 - Essentials Tier - Optical Line Terminal RTU (Per Port)
        Entitlement Tag:
        regid.2022-05.com.cisco.NCS1010_ESS_OLT_RTU,1.0_e4309530-2085-40e6-9aa6-5f3137ff49b2

        Count: Last reported:    3
               Next report:      0
  [ 4] Name:  NCS1010 - Essentials Subscription - Optical Line Terminal - SIA
        (Per Port)
        Entitlement Tag:
        regid.2022-05.com.cisco.NCS1010_ESS_OLT_SIA,1.0_b3c976c1-e509-474f-8cac-b9db62f28f2b

        Count: Last reported:    3
               Next report:      0
  [ 5] Name:  NCS1010 - Advantage Tier- In-Line Amplifier RTU
        Entitlement Tag:
        regid.2022-05.com.cisco.NCS1010_ADV_ILA_RTU,1.0_cf1746b7-def4-4c0e-ab90-de30614507d8

        Count: Last reported:    0

```

```

        Next report:      0
    [ 6] Name:  NCS1010 - Advantage Subscription - In-Line Amplifier - SIA
        Entitlement Tag:
regid.2022-05.com.cisco.NCS1010_ADV_ILA_SIA,1.0_ea769b05-9363-47dd-9991-2122c37479eb

        Count: Last reported:      0
        Next report:      0
    [ 7] Name:  NCS1010 - Advantage Tier - Optical Line Terminal RTU (Per Port)

        Entitlement Tag:
regid.2022-05.com.cisco.NCS1010_ADV_OLT_RTU,1.0_7a6ce8f3-3336-4ce2-8803-431227dabfff

        Count: Last reported:      0
        Next report:      0
    [ 8] Name:  NCS1010 - Advantage Subscription - Optical Line Terminal - SIA
        (Per Port)
        Entitlement Tag:
regid.2022-05.com.cisco.NCS1010_ADV_OLT_SIA,1.0_5f283f1c-143e-4c6e-9af7-73e088fb77a5

        Count: Last reported:      0
        Next report:      0

```

Example 3:

This example shows the sample output of the **show license status** command.

```

RP/0/RP0/CPU0:iso#show license status
Fri Jul 15 08:17:14.004 UTC

Smart Licensing is ENABLED

Utility:
  Status: DISABLED

Data Privacy:
  Sending Hostname: yes
  Callhome hostname privacy: DISABLED
  Smart Licensing hostname privacy: DISABLED
  Version privacy: DISABLED

Transport:
  Type: Callhome

Registration:
  Status: REGISTERED
  Smart Account: InternalTestDemoAccount8.cisco.com
  Virtual Account: NCS1010-PROD
  Export-Controlled Functionality: ALLOWED
  Initial Registration: SUCCEEDED on Jul 15 2022 04:58:24 UTC
  Last Renewal Attempt: None
  Next Renewal Attempt: Jan 11 2023 04:58:24 UTC
  Registration Expires: Jul 15 2023 04:53:21 UTC

License Authorization:
  Status: OUT OF COMPLIANCE on Jul 15 2022 07:01:00 UTC
  Last Communication Attempt: SUCCEEDED on Jul 15 2022 07:06:52 UTC
  Next Communication Attempt: Jul 15 2022 19:06:51 UTC
  Communication Deadline: Oct 13 2022 07:01:52 UTC

Export Authorization Key:
  Features Authorized:
    <none>

```

```

Miscellaneous:
  Custom Id: <empty>
RP/0/RP0/CPU0:P2A_DT 08#show license summary
Fri Jul 15 08:17:23.752 UTC

Smart Licensing is ENABLED

Registration:
  Status: REGISTERED
  Smart Account: InternalTestDemoAccount8.cisco.com
  Virtual Account: NCS1010-PROD
  Export-Controlled Functionality: ALLOWED
  Last Renewal Attempt: None
  Next Renewal Attempt: Jan 11 2023 04:58:23 UTC

License Authorization:
  Status: OUT OF COMPLIANCE
  Last Communication Attempt: SUCCEEDED
  Next Communication Attempt: Jul 15 2022 19:06:51 UTC

License Usage:
  License                               Entitlement Tag                Count Status
  -----
  NCS1010 - Essentials... (NCS1010_ESS_OLT_RTU)          32 OUT OF COMPLIANCE
  NCS1010 - Essentials... (NCS1010_ESS_OLT_SIA)          32 OUT OF COMPLIANCE

```

Example 4:

This example shows the sample output of the **show license platform summary** command.

```

RP/0/RP0/CPU0:iso#show license platform summary
Tue Jul 19 14:09:06.919 UTC
Collection: LAST: Tue Jul 19 2022 14:08:07 UTC
           NEXT: Tue Jul 19 2022 14:10:07 UTC
Reporting: LAST: Tue Jul 19 2022 14:08:07 UTC
           NEXT: Tue Jul 19 2022 14:10:07 UTC
*****IMPORTANT*****
SIA Status: Out of Compliance(Remaining Grace Period: 90 days, 0 hours)
SIA license(s) status is Not Authorized.
SW Upgrade will still be allowed as SIA Grace Period is remaining
*****

Feature/Area      Entitlement                                Count
Last Next
=====
FCM               NCS1010 - Essentials Tier - Optical Line Terminal R      3    0
FCM               NCS1010 - Essentials Subscription - Optical Line Te      3    0
FCM               NCS1010 - Advantage Tier - Optical Line Terminal RT      3    0
FCM               NCS1010 - Advantage Subscription - Optical Line Ter      3    0

```

Example 5:

This example shows the sample output of the **show license summary** command.

```

RP/0/RP0/CPU0:iso#show license usage
Fri Jul 15 08:17:40.048 UTC

License Authorization:

```

```
Status: OUT OF COMPLIANCE on Jul 15 2022 07:01:00 UTC

NCS1010 - Essentials - OLT RTU (NCS1010_ESS_OLT_RTU):
  Description: NCS1010 - Essentials Tier - Optical Line Terminal RTU (Per Port)

  Count: 32
  Version: 1.0
  Status: OUT OF COMPLIANCE
  Export status: NOT RESTRICTED

NCS1010 - Essentials - OLT SIA (NCS1010_ESS_OLT_SIA):
  Description: NCS1010 - Essentials Subscription - Optical Line Terminal - SIA

                (Per Port)

  Count: 32
  Version: 1.0
  Status: OUT OF COMPLIANCE
  Export status: NOT RESTRICTED
```

Example 6:

This example shows the sample output of the **show license usage** command.

```
RP/0/RP0/CPU0:iso#show license usage
Fri Jul 15 08:17:40.048 UTC

License Authorization:
  Status: OUT OF COMPLIANCE on Jul 15 2022 07:01:00 UTC

NCS1010 - Essentials - OLT RTU (NCS1010_ESS_OLT_RTU):
  Description: NCS1010 - Essentials Tier - Optical Line Terminal RTU (Per Port)

  Count: 32
  Version: 1.0
  Status: OUT OF COMPLIANCE
  Export status: NOT RESTRICTED

NCS1010 - Essentials - OLT SIA (NCS1010_ESS_OLT_SIA):
  Description: NCS1010 - Essentials Subscription - Optical Line Terminal - SIA

                (Per Port)

  Count: 32
  Version: 1.0
  Status: OUT OF COMPLIANCE
  Export status: NOT RESTRICTED
```

6 Host Services and Applications

Topics:

- [HTTP clients](#)
- [TCP](#)

This section explains the functions and prerequisites of host services and applications in Cisco IOS XR software.

A host service or application is a router feature that

- checks network connectivity and the route a packet follows to reach a destination,
- maps a host name to an IP address or an IP address to a host name, and
- transfers files between routers and UNIX workstations.

Prerequisites

Install the relevant optional RPM package before using host services or applications.

HTTP clients

This section explains how HTTP clients transfer files and data over a network and support configurable parameters for secure and flexible operation.

A HTTP client is a network utility that

- transfers files and data from HTTP servers to devices over a network using the HTTP protocol,
- enables configuration of connection, security, and transport parameters via **http client** command, and
- and supports advanced features such as SSL/TLS options, source interface selection, and protocol versioning.

Configurable parameters for HTTP clients

HTTP client is available by default. You can configure http client settings or view and modify the existing settings. To configure the settings, use the **http client** command in XR configuration mode.

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#http client ?
connection          Configure HTTP Client connection
response            How long HTTP Client waits for a response from the server
                    for a request message before giving up
secure-verify-host  Verify that if server certificate is for the server it is
                    known as
secure-verify-peer  Verify authenticity of the peer's certificate
source-interface    Specify interface for source address
ssl                 SSL configuration to be used for HTTPS requests
tcp-window-scale    Set tcp window-scale factor for High Latency links
version             HTTP Version to be used in HTTP requests
vrf                 Name of vrf
```

Table 52: Commands used to configure HTTP client settings

Parameters	Description
connection	Configure HTTP Client connection by using either retry or timeout options.
response	How long HTTP Client waits for a response from the server for a request message before giving up.
secure-verify-host	Verify host in peer's certificate. To disable verifying this, you can use the command http client secure-verify-host disable
secure-verify-peer	Verify authenticity of the peer's certificate.
source-interface	Specifies the interface for source address for all outgoing HTTP connections. You can enter either an ipv4 or ipv6 address or both.
ssl version	SSL version (configuration) to be used for HTTPS requests.
tcp-window-scale scale	Set tcp window-scale factor for high latency links.

Parameters	Description
version version	HTTP version to be used in HTTP requests. 1.0 - HTTP1.0 will be used for all HTTP requests. 1.1 - HTTP1.1 will be used for all HTTP requests. - default libcurl - will use HTTP version automatically.
vrf name	Name of vrf.

This example shows how to set the tcp window-scale to 8.

```
RP/0/RP0/CPU0:ios(config)#http client tcp-window-scale 8
```

This example shows how to set the HTTP version to 1.0.

```
RP/0/RP0/CPU0:ios(config)#http client version 1.0
```



Note

HTTP client uses libcurl version 7.30

TCP

This section explains how TCP enables reliable, connection-oriented data transfer across networks.

A Transmission Control Protocol (TCP) is a transport layer protocol that

- establishes reliable, connection-oriented communication between devices,
- manages sequencing and acknowledgment of data packets to ensure correct delivery, and
- multiplexes multiple application data streams over a single network connection.

TCP dump file converter

This section explains how TCP dump file converters make network packet traces readable for troubleshooting.

A TCP dump file converter is a network analysis tool that

- converts IOS XR binary dump files into user-friendly formats, such as PCAP or text,
- enables easier viewing and analysis of packet traces during incidents like Non-Stop Routing (NSR) disablement or session flaps, and
- assists network engineers in identifying and resolving issues by making critical packet information accessible.

Additional reference information

When NSR is disabled or a session flap occurs on the system, the TCP process running on an NCS system automatically stores the latest 200 packet traces in binary format within a temporary folder. These traces include details about configured routing protocols and overall network traffic.

Methods to convert and view binary packet trace files

There are two primary methods to convert and view binary packet trace files:

- You can use the **show tcp dump-file <binary filename>** command to view each binary file in text format manually. For more information, see [View binary files in text format manually](#) on page 146.

This process is time-consuming because you must view each file individually, one after the other.

- You can convert all stored packet traces in binary files into PCAP, text, or both using the **tcp dump-file convert** command. For more information, see [Convert binary files to readable format using TCP dump file converter](#) on page 147.

This active approach greatly improves the efficiency and ease of packet analysis during network troubleshooting.

Limitations and restrictions for TCP dump file converter

Understand the limitations and restrictions you must consider when using the TCP dump file converter to manage session data and file viewing.

These limitations and restrictions apply to the TCP dump file converter:

- The system stores only the most recent 200 message exchanges. These occur right before session termination, when NSR is disabled, or during a session flap.
- You can view only one binary file in text format using the **show tcp dump-file <binary filename>** command.
- TCP dump files are generated by default for BGP, MSDP, MPLS LDP, and SSH.

View binary files in text format manually

Use this task to view packet trace binary files in text format without using the TCP dump file converter.

This task enables manual examination of packet trace binary files by displaying their contents in text format, which supports troubleshooting without conversion tools.

This task is useful when you need to check packet traces directly on the device and do not have access to TCP dump file conversion utilities.

Follow these steps to view packet trace binary files in text format:

Procedure

1. Use the **show tcp dump-file list all** command to view the list of packet traces in binary files stored in the tcpdump folder.

Example

```
RP/0/RP0/CPU0:ios# show tcp dump-file list all
total 1176
-rw-r--r-- 1 root root 5927 Nov 22 12:42 31_0_0_126.179.20966.c1.1700656933
-rw-r--r-- 1 root root 5892 Nov 22 12:42 31_0_0_127.179.35234.c1.1700656933
-rw-r--r-- 1 root root 6148 Nov 22 12:42 31_0_0_149.179.54939.c1.1700656933
-rw-r--r-- 1 root root 5894 Nov 22 12:42 31_0_0_155.179.18134.c1.1700656933
-rw-r--r-- 1 root root 6063 Nov 22 12:42 31_0_0_156.179.25445.c1.1700656933
-rw-r--r-- 1 root root 5860 Nov 22 12:42 31_0_0_161.179.30859.c1.1700656933
-rw-r--r-- 1 root root 5832 Nov 22 12:42 31_0_0_173.179.36935.c1.1700656933
-rw-r--r-- 1 root root 5906 Nov 22 12:42 31_0_0_190.179.25642.c1.1700656933
```

2. Use the **show tcp dump-file <binary filename>** command to view each packet trace binary file in text format.

Example

```
RP/0/RP0/CPU0:ios# show tcp dump-file 10_106_0_73.179.34849.cl.1707424077
location 0/RP0/CPU0
Filename: 10_106_0_73.179.34849.cl.1707424077

=====
Connection state is CLOSED, I/O status: 0, socket status: 103
PCB 0x00007f86bc05e3b8, SO 0x7f86bc05e648, TCPCB 0x7f86bc0c3718, vrfid
0x60000000,
Pak Prio: Medium, TOS: 192, TTL: 1, Hash index: 1593
Local host: 10.106.0.72, Local port: 179 (Local App PID: 11354)
Foreign host: 10.106.0.73, Foreign port: 34849
(Local App PID/instance/SPL_APP_ID: 11354/1/0)

Current send queue size in bytes: 0 (max 0)
Current receive queue size in bytes: 0 (max 0)  mis-ordered: 0 bytes
Current receive queue size in packets: 0 (max 0)

Timer           Starts      Wakeups      Next (msec)
Retrans         103448         8             0
SendWnd          0             0             0
TimeWait         1             0             0
AckHold         106815        106545         0
KeepAlive        1             0             0
PmtuAger         0             0             0
GiveUp           0             0             0
Throttle         0             0             0
FirstSyn         0             0             0

    iss: 161240548   snduna: 163206936   sndnxt: 163206936
sndmax: 163206936   sndwnd: 63104      sndcwnd: 18120
    irs: 3691232436  rcvnxt: 3693473072  rcvwnd: 26099   rcvadv: 3693499171
```

This sample displays only a portion of the actual output. The full output provides additional packet trace details.

You can examine the text details of packet trace binary files directly using the command-line interface without converting them to other formats.

Convert binary files to readable format using TCP dump file converter

Use this task to convert TCP dump packet traces in binary files into PCAP and text formats for easier analysis.

This task enables you to convert TCP dump packet trace files into readable formats (PCAP and text) for analysis and review.

You may need to analyze network packet traces captured in binary format, which are not readable as-is. Converting them to PCAP or text allows you to use analysis tools or view them manually in the CLI.

Follow these steps to convert TCP dump packet traces to PCAP and text formats:

Procedure

1. Use the **tcp dump-file convert all-formats all** command to convert the dump packet traces in binary files into PCAP and text formats.

Example

```
RP/0/RP0/CPU0:ios# tcp dump-file convert all-formats all
ascii file is saved at :
/harddisk:/decoded_dumpfiles/text_tcpdump_peer_all_node0_RP0_CPU0_2024_3_19_10_8_53.462070.txt
pcap file is saved at :
/harddisk:/decoded_dumpfiles/pcap_tcpdump_peer_all_node0_RP0_CPU0_2024_3_19_10_8_40.154838.pcap
[OK]
```

By default, the system stores the converted files in the decoded_dumpfiles folder on the hard disk.

Using the location **node-id** and file **<file path>** keywords, you can save the converted TCP dump file to your desired location.

For example, **tcp dump-file convert all-formats all location 0/RP0/CPU0 file /harddisk:/demo2**.

```
RP/0/RP0/CPU0:ios# tcp dump-file convert all-formats all location 0/RP0/CPU0
file /harddisk:/demo2
ascii file is saved at : /harddisk:/demo2.txt
pcap file is saved at : /harddisk:/demo2.pcap
[OK]
```

2. Use the **run cat <text file path>** command to view the converted text file in the CLI.

Example

```
RP/0/RP0/CPU0:ios# run cat
/harddisk:/decoded_dumpfiles/text_tcpdump_peer_all_node0_RP0_CPU0_2024_3_19_10_8_53.462070.txt
Filename: 2024_3_19_10_8_53.462070

=====
Connection state is CLOSED, I/O status: 0, socket status: 103
PCB 0x0000000000f47a80, SO 0xf476d0, TCPCB 0xf6a370, vrfid 0x60000000,
Pak Prio: Medium, TOS: 192, TTL: 255, Hash index: 563
Local host: 14:11:11::1, Local port: 47743 (Local App PID: 19579)
Foreign host: 14:11:11::2, Foreign port: 179
(Local App PID/instance/SPL_APP_ID: 19579/1/0)

Current send queue size in bytes: 0 (max 0)
Current receive queue size in bytes: 0 (max 0) mis-ordered: 0 bytes
Current receive queue size in packets: 0 (max 0)

Timer           Starts      Wakeups      Next (msec)
Retrans         70          2             0
SendWnd         0           0             0
TimeWait        2           0             0
AckHold        66          61            0
KeepAlive       1           0             0
PmtuAger        0           0             0
GiveUp          0           0             0
Throttle        0           0             0
FirstSyn        1           1             0

    iss: 3113104891  snduna: 3113106213  sndnxt: 3113106213
sndmax: 3113106213  sndwnd: 31523      sndcwnd: 2832
    irs: 4250126727 rcvnxt: 4250128049 rcvwnd: 31448   rcvadv: 4250159497
```

This sample displays only a portion of the actual output. The full output provides additional details.

3. Use the `scp` command to copy the converted packet traces from the system to your local computer and view the converted PCAP file.

The system converts TCP dump packet traces into readable PCAP and text formats. The files are stored at your specified location and are accessible for further analysis from the CLI or on your local machine.

A Cisco NCS 1010 Topologies

Topics:

- [Multidegree ROADM networks with NCS1010 OLT devices](#)
- [Omnidirectional topologies](#)

Provides topology examples for multidegree ROADM, colored, colorless, hybrid, point-to-point, and omnidirectional designs, including OLT-based and NCS2K-MF-4x4-COFS-based scenarios.

Multidegree ROADM networks with NCS1010 OLT devices

A multidegree ROADM network is a network capability that enables a single ROADM node to establish more than two degrees of connection.

A degree is a bidirectional physical fiber connection between two nodes in a network.

NCS 1010 multidegree ROADM express

ROADM express refers to the pass-through wavelengths that travel directly from one fiber degree to another inside a ROADM node, bypassing local add/drop without optical-electrical-optical (OEO) conversion.

NCS1010 OLT devices support up to eight degrees of ROADM express through NCS1K-BRK-8 (BRK-8) modules. The BRK-8 modules help in MPO breakout for express interconnect. For a multidegree network, use as many BRK-8 modules and OLT devices as there are degrees. The BRK-8 modules help NCS 1010 nodes to achieve multidegree capability.

BRK-8 modules are essential for scaling network degrees and supporting express interconnects in advanced optical networking scenarios.

Three-degree ROADM network using NCS 1010 devices

In this example, a three-degree ROADM network established an express interconnection among three different point-to-point multispan optical networks. The three point-to-point topologies are:


- OLT-C_1A to OLT-C_1
- OLT-C_2A to OLT-C_2
- OLT-C_3A to OLT-C_3

The three OLT nodes (OLT-C_1, OLT-C_2, OLT-C_3) are each connected using three BRK-8 modules. Each module must link to the other two, providing the necessary express interconnect. Optical cross-connects in each OLT ensure signals can traverse to any of the three endpoints, even across multiple spans including intermediate ILA nodes.

The three-degree ROADM network with NCS 1010 devices contains

1. OLT-C_1, OLT-C_2, and OLT-C_3 nodes connected to each other using three BRK-8 modules.
2. Each BRK-8 module is connected to each of the other BRK-8 modules for express interconnect that enables multidegree support.
3. Each OLT device has optical cross-connection to each other to enable the signal to reach the target OLT.

Figure 20: Typical 3-Degree topology

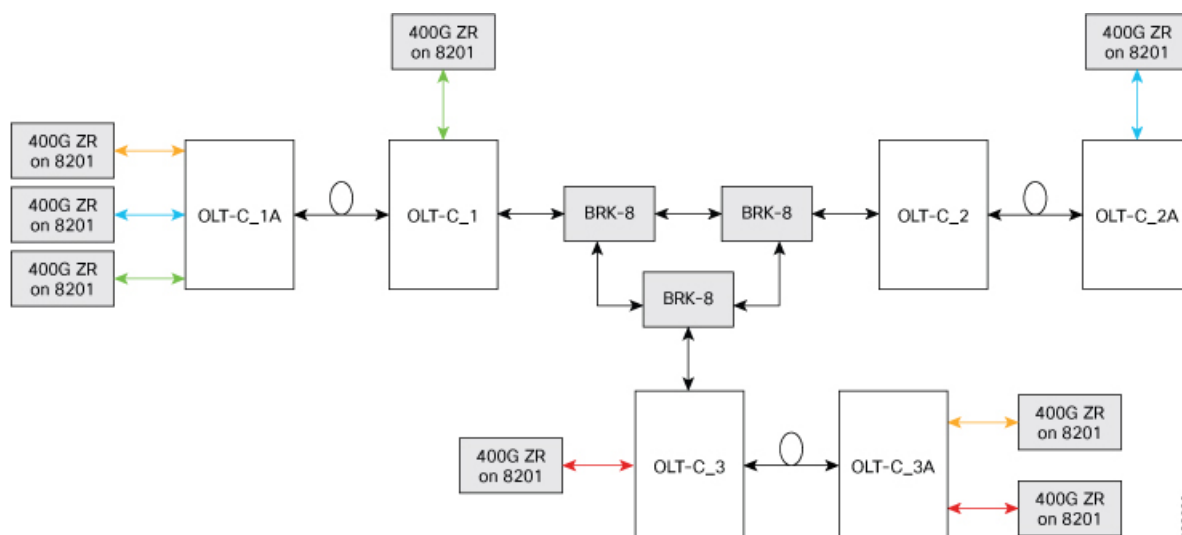

Types of NCS 1010 sample topologies

This section describes three sample topologies of specific hardware deployments.

Colored multidegree topologies

A colored multidegree topology is a network design pattern that

- interconnects sites using multiple optical degrees,
- supports optical channels from transponders with low transmit (TX) power such as ZR or ZR+ pluggable modules, and
- operates with channel TX power spectral density between -21 dBm/12.5 GHz and -14 dBm/12.5 GHz.

Topology components

This topology typically requires:

- Cisco NCS 1010 devices
- NCS1K-MD32E-C modules
- NCS1K-MD32O-C modules
- NCS1K-BRK-8 modules
- Cisco 8201 routers
- QDD-400G-ZR-S transceivers
- LC/LC cables
- MPO cables

Figure 21: Colored solution



Colorless multidegree topologies

A colorless multidegree topology is a network design pattern that


- uses multi-degree site interconnections with flexible wavelength assignment,
- supports optical channels from high TX power transponders like 1.2T line cards or CFP2-400G-DCO trunk interfaces, and
- requires channel TX power spectral density not lower than -7 dBm/12.5 GHz.

Components required

Deployment typically includes:

- Cisco NCS 1010 devices
- NCS1K-BRK-8 modules
- NCS1K-BRK-24 modules
- CFP2-400G-DCO transceivers
- Cisco NCS 1004 devices
- NCS1K4-2-QDD-C-K9 line card
- LC/LC cables
- MPO cables

Figure 22: Colorless solution

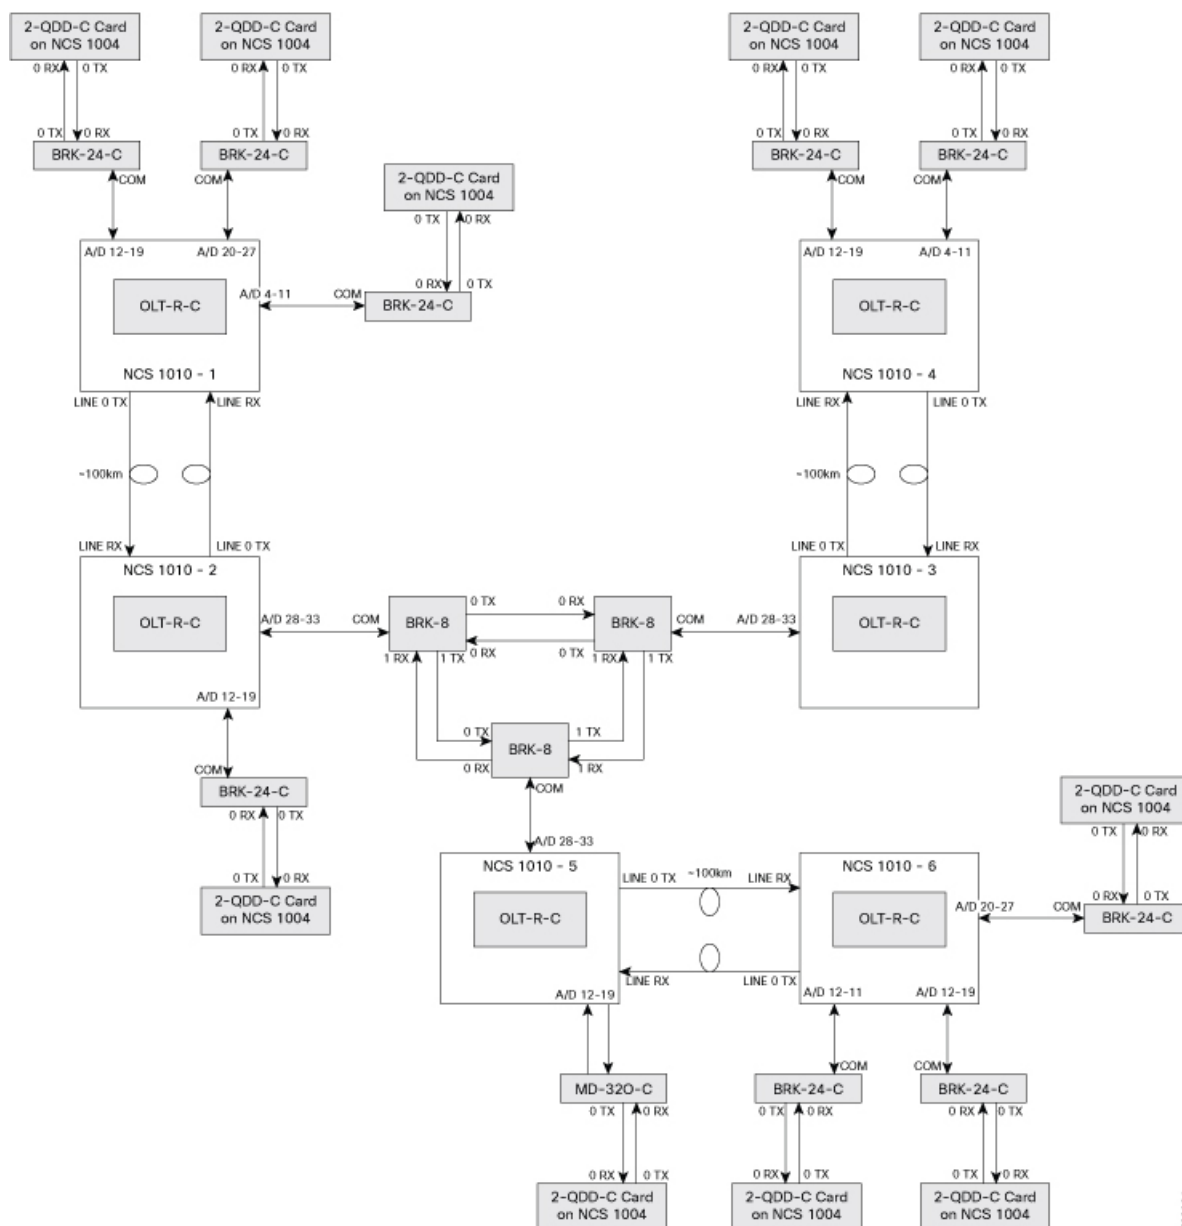

522634

Hybrid multidegree topologies

A hybrid multidegree topology is a network design pattern that


- interconnects sites using both colored and colorless optical channels,
- accommodates a mix of high- and low-TX power transponders within the same deployment, and
- leverages the channel TX power spectral density ranges required for both colored and colorless topologies.

Components required

Supported hardware includes:

- Cisco NCS 1010 devices
- NCS1K-MD32E-C modules
- NCS1K-MD32O-C modules
- NCS1K-BRK-8 modules
- NCS1K-BRK-24 modules
- Cisco 8201 routers
- QDD-400G-ZR-S transceivers
- CFP2-400G-DCO transceivers
- Cisco NCS 1004 devices
- NCS1K4-2-QDD-C-K9 line card
- LC/LC cables
- MPO cable

Figure 23: Colorless solution

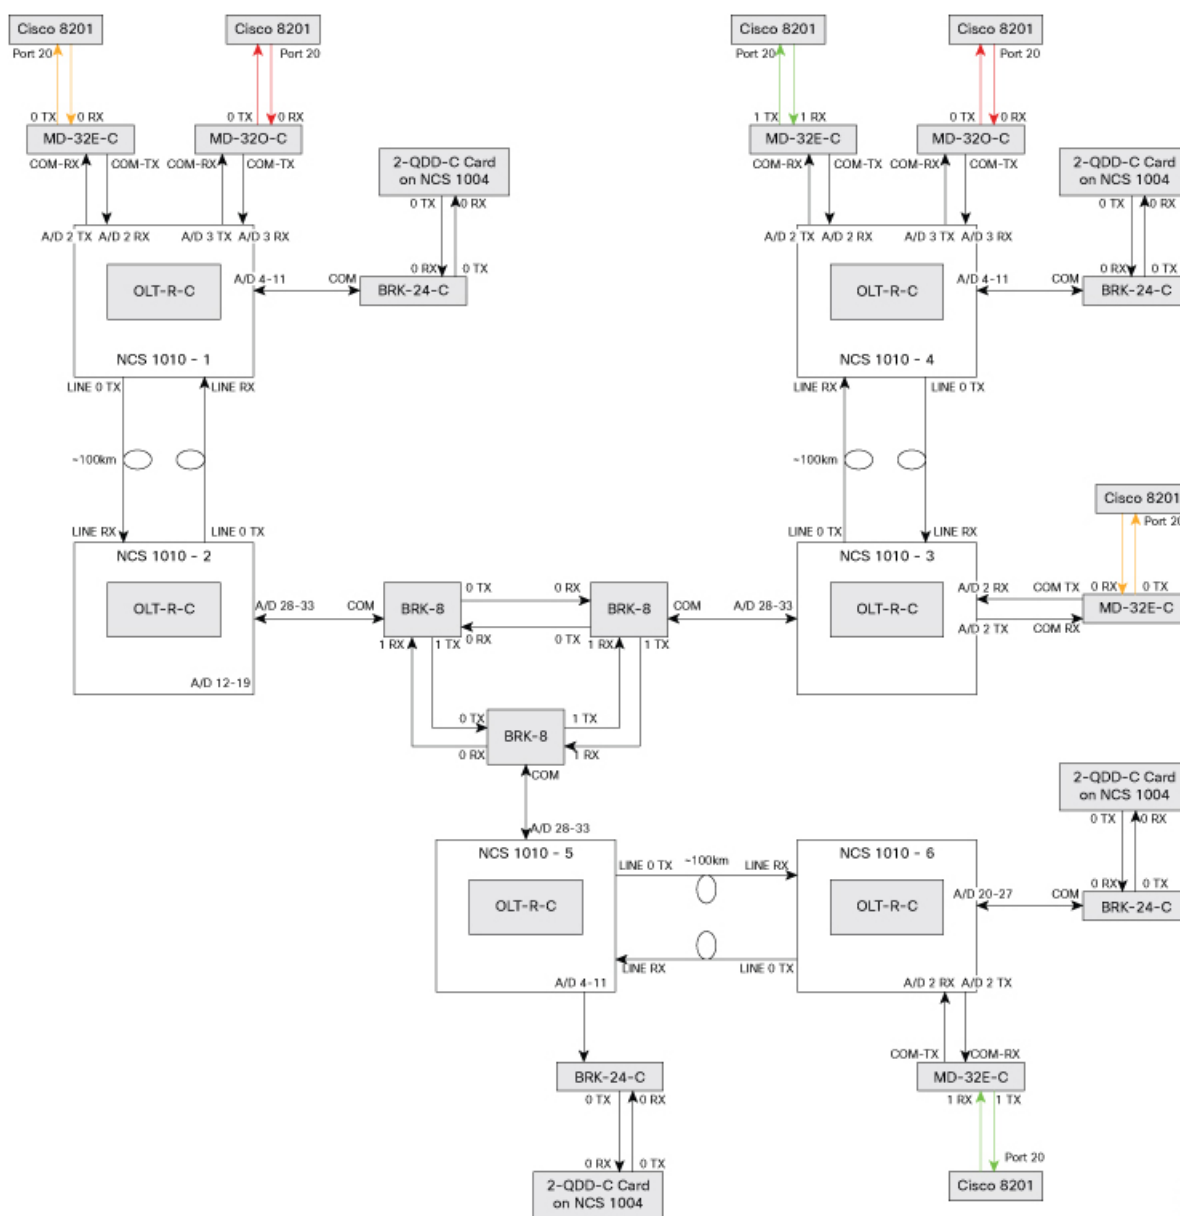

Point-to-point topologies

A point-to-point topology is a network design pattern that

- connects two network sites directly using optical links,
- limits the number of degrees per site to two or fewer, and
- enables simple deployment with minimal hardware requirements.

Components for point-to-point topology


To build this topology, you need these hardware components.

- Cisco NCS 1010 devices: OLT-R-C for and ILA-2R-C for inline amplification
- NCS1K-MD32E-C modules: Multiplex and demultiplex C-band signals in even channels.
- NCS1K-MD32O-C modules: Multiplex and demultiplex C-band signals in odd channels.

- NCS1K-BRK-24 modules: 24-degree MPO breakout modules for express interconnection.
- QDD-400G-ZR-S transceiver: QSFP-DD transceiver module, coherent DCO, 400G-ZR for transmitting 400G payload at 16QAM modulation
- MPO/MPO cables: Used for fiber-optic connectivity between NCS 1010 devices and BRK-24 modules.
- LC/LC cables: Used for fiber-optic connectivity between BRK-24 and mux/demux modules.

This image shows the point-to-point topology.

Figure 24: Point-to-point topology

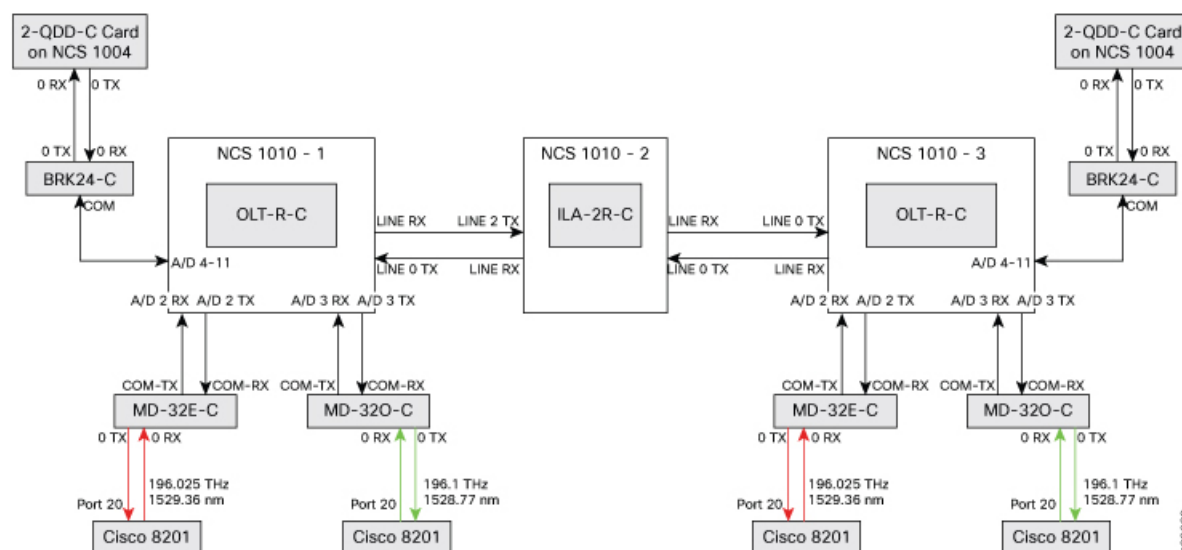

Omnidirectional topologies

An omnidirectional topology is a network architecture that

- enables each optical channel to be dynamically routed through any available degree of a multidegree node,
- allows channel rerouting after fiber cuts without requiring physical fiber reconnections, and
- supports flexible and scalable add/drop configurations for redundancy or increased capacity.

Omnidirectional topologies are often implemented in optical networks using open-line terminal (OLT) hardware and compatible passive modules. They are supported over C+L bands and can scale beyond four network degrees. Dual omnidirectional add/drop configurations provide increased reliability and add/drop bandwidth.

NCS2K-MF-4x4-COFS based colorless omnidirectional topologies

A colorless omnidirectional topology is an optical network configuration that

- uses colorless modules to add or drop channels without wavelength constraints,
- aggregates and routes channels from multiple degrees using compatible passive hardware assemblies, and
- enables retuning of channel frequencies or wavelengths from connected transponders or muxponders without physical cabling changes.

Topology components

To build this topology, you need these hardware:


- NCS 1010 OLT devices
- NCS2K-MF-4x4-COFS modules
- NCS2K-MF-MPO-8LC modules
- NCS1K-BRK-8 modules

Specific cable configurations for interconnecting the modules:

- The MF-4x4-COFS modules are interconnected using standard MPO 8 or 12 fibers (15454-MPO-MPO-x or ONS-12MPO-MPO-x)
- The MF-4x4-COFS modules and NCS1K-BRK-8 module are interconnected using standard LC-LC fibers.

This image shows the COFS-based colorless omnidirectional topology

Figure 25: MF-4x4-COFS based colorless omnidirectional topology

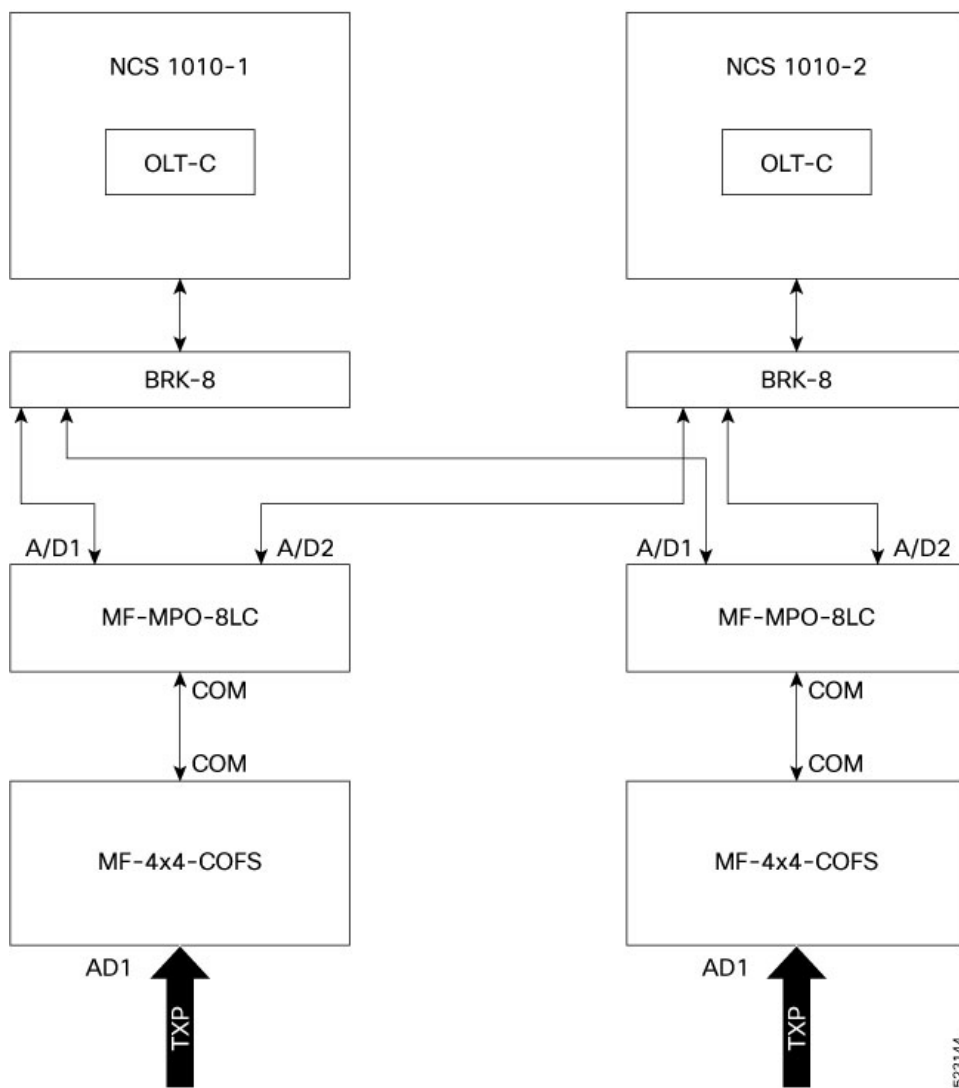

523144

Limitations

- This configuration is supported only for C-band ROADMs.
- This configuration is scalable only up to a maximum of 4 degrees. More OSNR penalty is induced by the MF-4x4-COFS as you add more degrees.
- One MF-4x4-COFS module can support up to only four channels. To scale up to 32 channels, you would require 8 MF-4x4-COFS modules.
- The terminal node in this configuration can be connected only to NCS 1004 line cards, line cards with CFP2-400G-DCO as a trunk interface, and DP04QSDD pluggable.

OLT-based omnidirectional add/drop topologies

OLT-based omnidirectional add/drop topologies are optical network designs that

- implement omnidirectional routing by interconnecting OLT devices such as OLT-C and OLT-L back-to-back,
- enable multiple add/drop stages within a single ROADM site, improving flexibility and scalability, and
- support integration with a variety of transponders and trunk interfaces without major restrictions.

Topology components

To build this topology, you need these hardware:

- NCS 1010 OLT-C devices
- NCS 1010 OLT-L devices
- NCS1K-BRK-24 modules
- NCS1K-BRK-8 modules
- NCS1K-MD32-C modules

Specific configurations and applications that are required for this configuration:

- The interconnection between the terminal OLT-C, where the traffic is terminated and the omnidirectional degree is managed as a 0dB span.
- OSC-C and OSC-L controllers can be used with unnumbered IP on OSC interfaces of the omni span.
- Link tuner and Gain estimator must be disabled on the Omni span.
- APC must be enabled on Omni span.
- ASE loading is enabled (both static and dynamic).
- Specific configuration for optical applications such as span length and fiber type are not required.
- To have the Preamplifier of OLT-C working in proper condition (minimum gain 12dB), the Line-Tx PSD must be set to -12.9 dBm/12.5 GHz (considering 80% CH_SD).

Figure 26: Omnidirectional configuration with OLTs

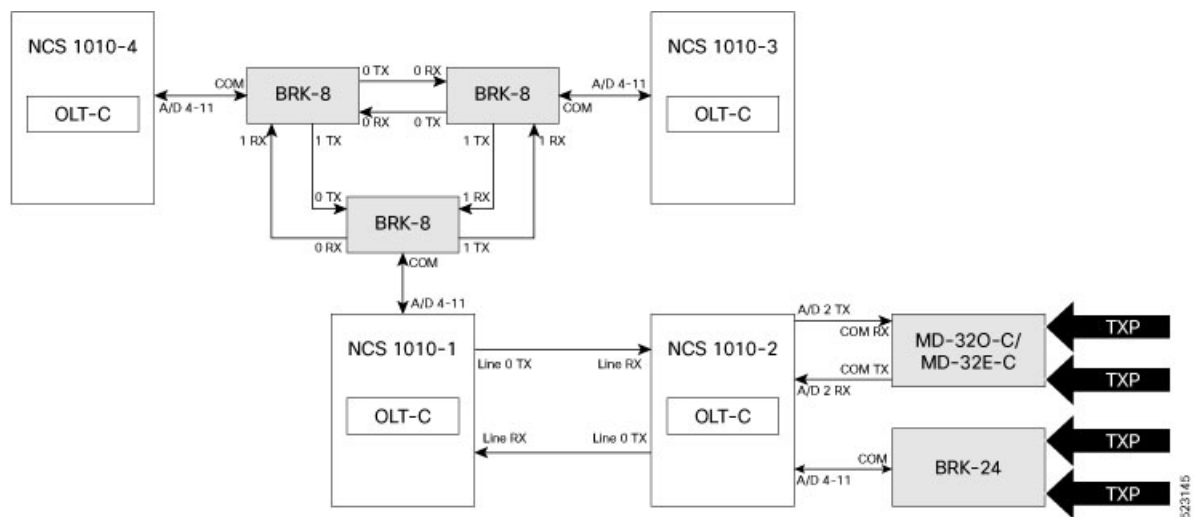


Figure 27: Dual omnidirectional configuration


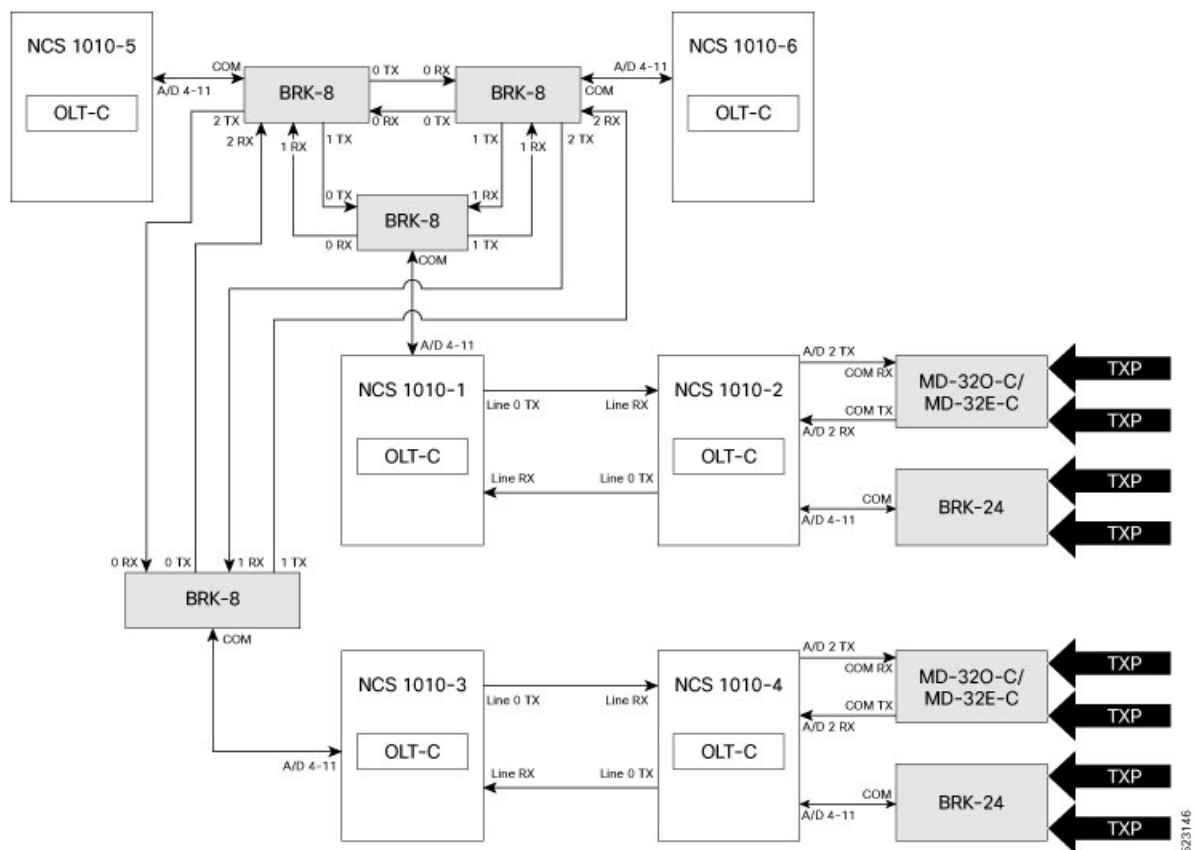


Figure 28: C+L omnidirectional configuration

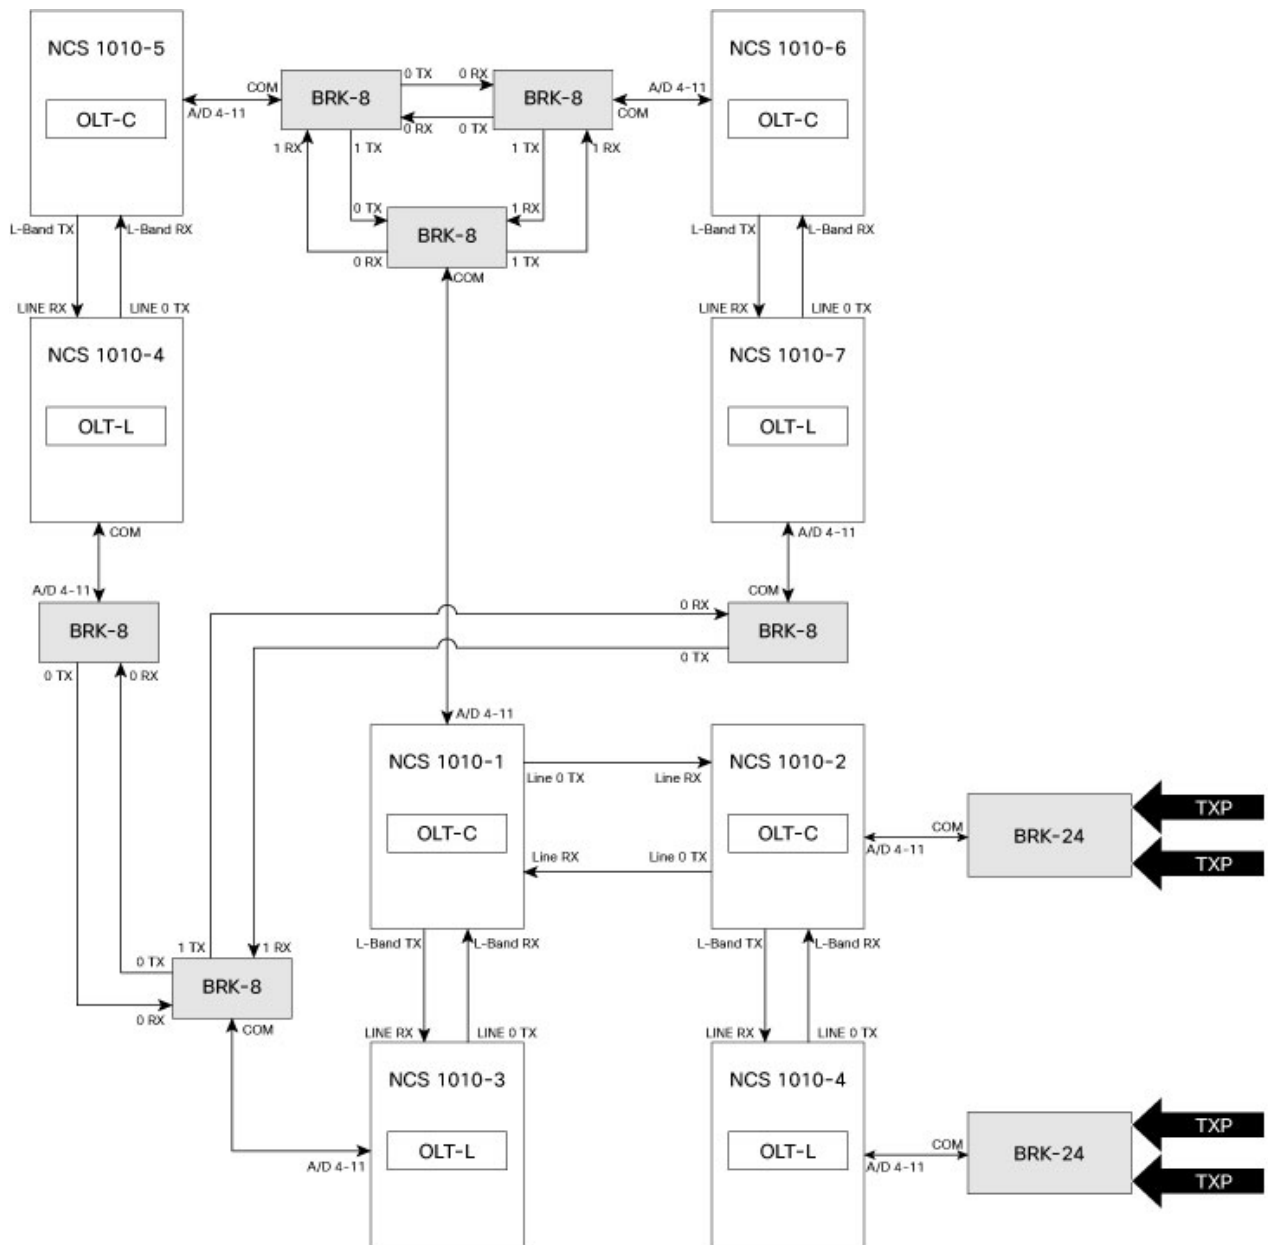

Limitations

- Link tuner and gain estimator features must be disabled on Omni spans.
- Proper functioning of terminal OLT-C preamplifiers requires precise power spectral density (PSD) settings.
- Optical supervisory channel controllers (OSC-C and OSC-L) can be used with unnumbered IP addressing.

B Configuring SNMP

Provides supported SNMP MIBs, OIDs, and OTS and OLC MIB support details for monitoring and managing Cisco NCS 1010 optical components.

Table 53: Feature History

Feature Name	Release	Description
SNMP MIB support is enabled in NCS 1010	Cisco IOS XR Release 7.9.1	The standard optical Simple Network Management Protocol (SNMP) Management Information Bases (MIBs) with Object Identifiers (OIDs) are now supported on the NCS 1010 platform. Also, from R7.9.1 release onwards specific support is enabled for the OTS SNMP MIB. See Cisco SNMP MIBs for details.
SNMP OLC MIB Support	Cisco IOS XR Release 7.10.1	NCS 1010 platform now supports a new Optical Line Control (OLC) MIB called CISCO-OPTICAL-OLC-MIB which is used for OLC based applications. See Cisco SNMP MIBs for more details.

These MIBs are supported in NCS 1010.

SNMP MIB	OID
CISCO-FLASH-MIB	1.3.6.1.4.1.9.9.10
CISCO-ENHANCED-MEMPOOL-MIB	1.3.6.1.4.1.9.9.221
ENTITY-MIB	1.3.6.1.2.1.47
CISCO-ENTITY-FRU-CONTROL-MIB	1.3.6.1.4.1.9.9.117
CISCO-ENTITY-SENSOR-MIB	1.3.6.1.4.1.9.9.91
CISCO-IF-EXTENSION-MIB	1.3.6.1.4.1.9.9.27
CISCO-ENTITY-ASSET-MIB	1.3.6.1.4.1.9.9.92
CISCO-PROCESS-MIB	1.3.6.1.4.1.9.9.109

SNMP MIB	OID
CISCO-CONFIG-MAN-MIB	1.3.6.1.4.1.9.9.43
CISCO-ENTITY-REDUNDANCY-MIB	1.3.6.1.4.1.9.9.498
CISCO-SYSTEM-MIB	1.3.6.1.4.1.9.9.131
CISCO-SYSLOG-MIB	1.3.6.1.4.1.9.9.41
RMON-MIB	1.3.6.1.2.1.16.0
CISCO-ALARM-MIB	1.3.6.1.4.1.9.9.869
EVENT-MIB	1.3.6.1.2.1.88
DISMAN-EXPRESSION-MIB	1.3.6.1.2.1.90
CISCO-FTP-CLIENT-MIB	1.3.6.1.4.1.9.9.80
NOTIFICATION-LOG-MIB	1.3.6.1.2.1.92
CISCO-RF-MIB	1.3.6.1.4.1.9.9.176
UDP-MIB	1.3.6.1.2.1.7
CISCO-OPTICAL-MIB	1.3.6.1.4.1.9.9.828.0.1
CISCO-OPTICAL-OTS-MIB	1.3.6.1.4.1.9.9.834
CISCO-OPTICAL-OLC-MIB	1.3.6.1.4.1.9.9.1057



Note

- From R7.9.1 release onwards specific support is enabled for the OTS SNMP MIB.
- Each managed object is assigned an object identifier (OID).
- The OID is specified in a MIB file.
- An OID is represented as a sequence of integers separated by decimal points or by a text string.

For example: *1.3.6.1.2.1.4.6*

For more information regarding SNMP MIBs refer to cfngng.cisco.com.

NCS 1010 SNMP OTS MIB support

SNMP MIBS in the NCS 1010 platform support many controllers and parameters of different operational types which help in interacting with the rest of the system.

SNMP traps

An SNMP trap refers to a type of SNMP Protocol Data Unit (PDU). An agent is able to send an unrequested message to the manager to notify about any important event with an SNMP trap, unlike other PDU types.

- Traps can be sent on SNMP version-2 (V2) or version-3 (V3) authentication.
- In version-2 (V2C) of SNMP, community public and UDP port are defined by default as 162.
- In version-3 (V3), user, group authentication methods like md5 and des56 are used and the UDP port needs to be mentioned.

Configuration on nodes is listed here.

- **Configuration of traps server as receiver:** A trap server listens only to both the protocols SNMP V3 and SNMP V2. For V3 traps, server IP, userid and UDP port are needed as in this example.

- `snmp-server host 10.65.41.209 traps version 3 priv nocUser1 udp-port 163`

For V2 traps, server IP, protocol 2c, community public and UDP ports are needed, as in this example.

- `snmp-server host 64.104.134.47 traps version 2c public udp-port 12217`

- **Configuration of user for SNMP V3 authentication:** Configure username with ID like nocUser1 and groups like nocGroup1 etc, followed by the authentication methods like md5 and privileged protocols like des56 followed by user and owner types as in this example.

- `snmp-server user nocUser1 nocGroup1 v3 auth md5 encrypted 0505090C145F4B1B48 priv des56 encrypted 082F434D3C0A000543 SystemOwner`

- **Configuration for SNMP V3 View:** View includes the MIB starting point like given in this example.

- `snmp-server view nocView1 1.3 included`

- **Configuration for Community String:** Community string is public with read, write permission and system owner privileges like given in this example.

- `snmp-server community public RW SystemOwner`

- **Configuration for SNMP V3 Group:** Defines the group as name nocGroup1 with V3 protocol and privileges, notify view and view name as nocView1 and includes read and write operations similarly.

- `snmp-server group nocGroup1 v3 priv notify nocView1 read nocView1 write nocView1`

- **Configuration for Traps Requiring Customers Check:** Syslog as traps is enabled.

- `snmp-server traps syslog`

- **Configuration for Inventory:** For insert and remove and other control operations given in this example.
 - `snmp-server traps fru-ctrl`
- **Configuration for Traps:** For config change request use as this example.
 - `snmp-server traps config`
- **Configuration for Entity Related Update:** Use as given in this example.
 - `snmp-server traps entity`
- **Configuration for System Up/Down Related Traps:** Use this example.
 - `snmp-server traps system`
- **Configuration for Preserving the Ifindex Over Reload:** Use this example.
 - `snmp-server ifindex persist`

A few examples of SNMP traps are provided.

```
Received SNMPv2c Trap:
Community: public
From: 10.127.60.241
sysUpTimeInstance = 00:07:05.93
snmpTrapOID.0 = cefcFanTrayStatusChange
cefcFanTrayOperStatus.4097 = up(2)
entPhysicalDescr.4097 = NCS1010 - Shelf Fan
entPhysicalName.4097 = 0/FT0

Received SNMPv2c Trap:
Community: public
From: 10.127.60.241
sysUpTimeInstance = 00:07:05.86
snmpTrapOID.0 = clogMessageGenerated
clogHistFacility.1 = MGBL-exec
clogHistSeverity.1 = error(4)
clogHistMsgName.1 = LOGIN_AUTHEN
clogHistMsgText.1 = Login_Authentication failed.
Exiting...
clogHistTimestamp.1 = 00:50:36.81
Received
```

 Note

From R7.9.1 release onwards the SNMP trap snmp-server traps alarm is available for use.

NCS 1010 SNMP OLS MIB support

From R7.10.1 onwards, SNMP support is enabled on the NCS 1010 platform for OLS. This Optical Line Control (OLC) MIB is introduced to support all OLC based applications in NCS 1010.

CISCO-OPTICAL-OLC-MIB with OID value of 1.3.6.1.4.1.9.9.1057.

Supporting controllers of SNMP MIBs in NCS 1010

These controllers support the various operational parameters of the NCS 1010 SNMP MIBs.

Table 54: Supporting controllers of SNMP MIBs in NCS 1010

SNMP MIB	Controllers
CISCO-OPTICAL-OTS-MIB	▪ OTS ▪ OTS-OCH ▪ OMS ▪ OCH ▪ DFB ▪ OSC

NCS 1010 SNMP MIB controller parameters

The controller specific parameters for NCS 1010 controllers are provided.

Table 55: NCS 1010 SNMP MIB controller parameters

SNMP MIB	Controller parameters
CISCO-OPTICAL-OTS-MIB	▪ RxSpanLoss ▪ TxSpanLoss ▪ TxSignalPower ▪ RxSignalPower ▪ TxVoaAttenuation ▪ ControllerState ▪ TransportAdminState ▪ TotalTxPower ▪ TotalRxPower ▪ IngressAmpliGain ▪ IngressAmpliTilt ▪ IngressAmpliGainRange ▪ EgressAmpliGain ▪ EgressAmpliTilt ▪ EgressAmpliGainRange ▪ IngressAmpliOsri ▪ EgressAmpliOsri ▪ IngressAmpliSafetyControlMode ▪ EgressAmpliSafetyControlMode ▪ TotalLCTxPower ▪ TotalLCRxPower ▪ IngressAmpliForceApr ▪ EgressAmpliForceApr ▪ BrPower ▪ LedState ▪ SpectrumInfo ▪ OtsControllerPortType ▪ LineTxBrRatio

NCS 1010 SNMP MIB performance monitoring parameters

The NCS 1010 SNMP MIB performance monitoring parameters are provided.

Table 56: NCS 1010 SNMP MIB performance monitoring parameters

SNMP MIB	Performance monitoring parameters
CISCO-OPTICAL-OTS-MIB	• Tx Power(min, max, avg) • Rx Power(min, max, avg) • Ingress Ampli Gain(min, max, avg) • Ingress Ampli Tilt(min, max, avg) • Egress Ampli Gain(min, max, avg) • Egress Ampli Tilt(min, max, avg) • Tx Power(C+L)(min, max, avg) • Rx Power(C+L)(min, max, avg) • Tx Power[S](min, max, avg) • Rx Power[S](min, max, avg) • Opbr (min, max, avg)

NCS 1010 SNMP MIB Raman parameters

The NCS 1010 OTS Raman parameters are provided.

Table 57: NCS 1010 SNMP MIB Raman parameters

SNMP MIB	Raman Parameters
CISCO-OPTICAL-OTS-MIB	▪ Raman-1 Power ▪ Raman-1 Wavelength ▪ Raman-2 Power ▪ Raman-2 Wavelength ▪ Raman-3 Power ▪ Raman-3 Wavelength ▪ Raman-4 Power ▪ Raman-4 Wavelength ▪ Raman-5 Power ▪ Raman-5 Wavelength ▪ Raman Osri ▪ Raman Safety Control Mode ▪ Raman Force Apr ▪ Raman Br Power ▪ Composite Raman Power ▪ Raman Br Ratio

NCS 1010 SNMP MIB supported operations

NCS 1010 SNMP MIB supported operations are provided.

Table 58: NCS 1010 SNMP MIB supported operations

SNMP MIB	SNMP operation
CISCO-OPTICAL-OTS-MIB	▪ snmpwalk ▪ Get Exact ▪ Get One ▪ Get Many
CISCO-OPTICAL-OLC-MIB	▪ snmpwalk ▪ Get One ▪ Get Many ▪ Get Next

 Note

- Both version-2 (V2) and version-3 (V3) SNMP operations are supported in NCS 1010.
- The transmit VOA attenuation value is measured in 1/100 dB and 1/10 dB on line systems devices in NCS 1010.

NCS 1010 SNMP MIB application parameters

The NCS 1010 SNMP MIB application parameters are provided.

Table 59: NCS 1010 SNMP MIB application parameters

SNMP MIB	Application parameters
CISCO-OPTICAL-OLC-MIB	

SNMP MIB	Application parameters
	- RxSpanLoss - ApparentRxSpanLoss - RxSpanLossPumpsOff - RxSpanLossPumpsOffTimeStamp - EstimatedRxSpanLoss - TxSpanLoss - ApparentTxSpanLoss - TxSpanLossPumpsOff - TxSpanLossPumpsOffTimeStamp - EstimatedTxSpanLoss - RamanTuningStatus . - RamanTuningBlockedReason - RamanTuningFailedReason - TuningCompleteTimeStamp - EstimatedMaxPossibleGain - RamanGainTarget - GainAchievedOnTuningComplete - EgressGainEstStatus - EgressEstimatedGain - EgressEstimatedGainMode - EgressGainEstTimeStamp - IngressGainEstStatus - IngressEstimatedGain - IngressEstimatedGainMode - IngressGainEstTimeStamp - ApcDomainManager - ApcDomainManagerState - ApcInternalState - ApcPsdMin - ApcGainRange - ApcLastCorrectionTimeStamp - NbrlpAddr - NbrInterface

SNMP MIB	Application parameters
	▪ PartnerIpAddr ▪ PartnerInterface ▪ PathLoss ▪ PatchcordLos ▪ LossMeasurementTimeStamp ▪ NodeRID ▪ BandStatus ▪ BandPSD

