



# Upgrade Software and FPD

---

This chapter describes the procedures to upgrade software and FPDs.



---

**Note** The output of the examples in the procedures is not from the latest software release. The output will change for any explicit references to the current release.

---

- [Upgrade Software, on page 1](#)
- [Software Upgrade and Downgrade Matrix, on page 3](#)
- [Install Packages and RPMs, on page 3](#)
- [NCS 1010 FPD, on page 7](#)
- [Release 7.10.1 Caveats, on page 15](#)

## Upgrade Software

Upgrading the software is the process of installing a new version of the Cisco IOS XR operating system on NCS 1010. NCS 1010 is preinstalled with the Cisco IOS XR image. However, you can install a new version to keep features up to date. You can perform the software upgrade operation using an ISO image from the XR mode.

### Before you begin

- [Configure Management Interface](#)
- Copy the ISO image to be installed either on the NCS 1010 hard disk or on a network server to which NCS 1010 has access.

---

**Step 1** Execute one of these commands:

- **install replace /harddisk:/iso-image-name**
- **install package replace** *<ftp or http or https protocol>/package\_path/ filename1 filename2 ...*

**Note** The **install package replace** command upgrades the ISO image but doesn't reload the RP automatically. But the **install replace** command upgrades the ISO image and reloads the RP.

**Example:**

```
RP/0/RP0/CPU0:ios#install replace /harddisk:/ncs1010-x64.iso
Mon Jul  4 10:15:07.697 UTC
Once the packaging dependencies have been determined, the install operation may have to reload the
system.
If you want to control the timing of system reload, you must not continue, but use the 'install
package replace' command instead, followed by 'install apply'.
Continue? [yes/no]:[yes] yes
Install replace operation 1.1 has started
Install operation will continue in the background
.....
.....
ios con0/RP0/CPU0 is now available
```

Installs the new ISO image from the harddisk or from the network server. The install operation takes between 20–40 minutes to complete.

**Note** Boot time FPD upgrade happens before XR boot. All the FPDs belonging to the RP location are upgraded during the boot time FPD upgrade.

**Note** Automatic FPD upgrade is enabled by default.. When the automatic FPD upgrade is enabled, the install operation also upgrades the FPDs (except the Golden FPDs) that need to be upgraded.

**Step 2** **show install request****Example:**

```
RP/0/RP0/CPU0:ios#show install request
Mon May  9 15:16:27.486 UTC
User request: install replace /harddisk:/ncs1010-x64.iso
Operation ID: 1.1
State:          In progress since 2022-05-09 15:13:08 UTC
Current activity:  Package add or other package operation
Next activity:    Apply
Time started:     2022-05-09 15:14:34 UTC
Timeout in:       38m 6s
Locations responded: 0/1
Location          Packaging operation stage Notification Phase Clients responded
-----
0/RP0/CPU0        Package operations          None in progress          N/A
```

Displays the current status of the install operation.

When the install operation completes successfully, the device automatically reloads.

**Note** In case of the **install package replace** command, you'll be prompted to enter the next command (**install apply reload** command).

**Step 3** **install commit****Example:**

```
RP/0/RP0/CPU0:ios#install commit
Mon May  9 15:24:28.581 UTC
Install commit operation 1 has started
Install operation will continue in the background
```

Commits the new ISO image.

**Step 4** **show install committed****Example:**

```
RP/0/RP0/CPU0:ios#show install committed
Mon May  9 15:24:55.672 UTC
Software Hash: 9dfe3b29058bd85eccc3910fb6ea66bf7bf9ccaa9e7ef38c8e3499ab1d0e91f8
Package                                     Version
-----
xr-aaa                                     7.9.1
xr-acl                                     7.9.1
xr-apphosting                             7.9.1
xr-appmgr                                  7.9.1
xr-bcdl                                    7.9.1
xr-bfd                                     7.9.1
```

Displays the list of committed packages.

## Software Upgrade and Downgrade Matrix

The following table lists the upgrade and downgrade paths supported for Cisco NCS 1010.

Upgrade Path		Downgrade Path	
Source Release	Destination Release	Source Release	Destination Release
R7.7.1, R7.9.1, R7.10.1	R7.11.1	R7.11.1	R7.10.1, R7.9.1, R7.7.1

## Install Packages and RPMs

Complete this task to install additional packages or rpm files. The rpm files that need to be installed must be placed in a folder.



**Note** This task can be used to install SMUs as well.

### Before you begin

- Configure and connect to the management interface. You can access the installable file through the management interface. For details about configuring the management interface, see [Configure Management Interface](#).
- Copy the package or rpm to be installed either on the NCS 1010 hard disk or on a network server to which NCS 1010 has access.

**Step 1** `install package add source /harddisk:/ iso-image-name or rpm-folder-name`

#### Example:

```
RP/0/RP0/CPU0:ios#install package add source /harddisk:/rpm/
Mon Jul  4 11:37:31.526 UTC
Install add operation 2.1.1 has started
Install operation will continue in the background
```

Ensure to add the respective packages or rpm files as appropriate. This operation may take time depending on the size of the files that are added. The operation takes place in an asynchronous mode. The **install package add source** command runs in the background, and the EXEC prompt is returned.

## Step 2 show install request

### Example:

```
RP/0/RP0/CPU0:ios#show install request

Mon Jul  4 11:44:48.411 UTC

User request: install package add source file:///harddisk:/rpm/
Operation ID: 2.1.1
State:        Success since 2022-07-04 11:38:57 UTC

Current activity:  Await user input
Time started:     2022-07-04 11:38:57 UTC

The following actions are available:
install package add
install package remove
install package upgrade
install package downgrade
install package abort latest
install package abort all-since-apply
install apply restart
install apply reload

Least impactful apply method: install apply restart
```

Displays the current status of the install operation.

## Step 3 install apply reload

### Example:

```
RP/0/RP0/CPU0:ios#install apply reload

Mon Jul  4 11:45:18.434 UTC
Install apply operation 2.1 has started
Install operation will continue in the background

Enables NCS 1010 to reload.
```

## Step 4 show install request

### Example:

```
RP/0/RP0/CPU0:ios#show install request

Mon Jul  4 11:47:32.221 UTC

User request: install apply reload
Operation ID: 2.1
State:        Success since 2022-07-04 11:46:03 UTC

Current activity:  Await user input
Time started:     2022-07-04 11:46:03 UTC

The following actions are available:
install package add
install package remove
install package upgrade
install package downgrade
```

```

install package replace
install package rollback
install replace
install rollback
install source
install commit

```

Displays the current status of the install operation.

### Step 5 **install commit**

#### **Example:**

```

RP/0/RP0/CPU0:ios#install commit
Mon Jul  4 11:48:47.745 UTC
Install commit operation 2 has started
Install operation will continue in the background

```

Commits the package or rpm files.

### Step 6 **show install request**

#### **Example:**

```

RP/0/RP0/CPU0:ios#show install request

User request: install commit
Operation ID: 2
State:        In progress since 2022-07-04 11:48:48 UTC

Current activity:  Commit transaction
Next activity:    Transaction complete
Time started:     2022-07-04 11:48:48 UTC

```

No per-location information.

Displays the current status of the install operation. The above output indicates that the install operation is in progress.

#### **Example:**

```

RP/0/RP0/CPU0:ios#show install request

User request: install commit
Operation ID: 2
State:        Success since 2022-07-04 11:50:32 UTC

Current activity:  No install operation in progress

```

The following actions are available:

```

install package add
install package remove
install package upgrade
install package downgrade
install package replace
install package rollback
install replace
install rollback
install source

```

Displays the current status of the install operation. The above output indicates that the install operation is complete.

### Step 7 **show install active summary**

#### **Example:**

```

RP/0/RP0/CPU0:ios#show install active summary

```

```

Mon Jul  4 11:52:24.823 UTC
Active Packages:   XR: 145   All: 1265
Label:             7.9.1
Software Hash:    3ce63ce432d50358d7a0d654ec61e4377abccf265013132e310b4d34a7259b90

```

```

Optional Packages                               Version
-----
xr-bgp                                           7.9.1
xr-ipsla                                         7.9.1
xr-is-is                                         7.9.1
xr-lldp                                          7.9.1
xr-mppls-oam                                    7.9.1
xr-netsim                                       7.9.1
xr-olc                                           7.9.1
xr-ospf                                          7.9.1
xr-perfmgmt                                    7.9.1
xr-telnet                                       7.9.1
xr-track                                        7.9.1

```

Displays the list of active packages and rpm files.

## Step 8 show install committed summary

### Example:

```
RP/0/RP0/CPU0:ios#show install committed summary
```

```

Mon Jul  4 11:54:04.178 UTC
Committed Packages: XR: 145   All: 1265
Label:             7.9.1
Software Hash:    3ce63ce432d50358d7a0d654ec61e4377abccf265013132e310b4d34a7259b90

```

```

Optional Packages                               Version
-----
xr-bgp                                           7.9.1
xr-ipsla                                         7.9.1
xr-is-is                                         7.9.1
xr-lldp                                          7.9.1
xr-mppls-oam                                    7.9.1
xr-netsim                                       7.9.1
xr-olc                                           7.9.1
xr-ospf                                          7.9.1
xr-perfmgmt                                    7.9.1
xr-telnet                                       7.9.1
xr-track                                        7.9.1

```

Displays the list of committed packages and rpm files.

### Related Commands

The following commands can be used to track the status of the install operation.

Related Commands	Purpose
<b>show install active</b>	Displays the list of active packages.
<b>show install committed</b>	Displays the list of committed packages.
<b>show install log</b>	Displays the log information for the install operation. This information is used for troubleshooting in case of installation failure.

Related Commands	Purpose
<b>show install package</b>	Displays the details of the packages that are added to the repository. Use this command to identify individual components of a package.
<b>show install request</b>	Displays the current status of the install operation.
<b>show install which</b>	Displays the package information on an installed file.

## NCS 1010 FPD

*Table 1: Feature History*

Feature Name	Release Information	Feature Description
FPD Upgrade for Passive Modules	Cisco IOS XR Release 7.10.1	You can now perform FPD upgrade of the breakout modules and multiplexer/demultiplexer modules. It is essential to upgrade the passive modules to ensure the proper functioning of the modules. You can upgrade the FPD on all passive modules simultaneously or selectively upgrade the required modules.

A Field Programmable Device (FPD) refers to any programmable hardware device on a chassis, which includes a Field Programmable Gate Array (FPGA). NCS 1010 uses several FPDs that are necessary for chassis, route processor, line cards, and power modules to function properly.

From Release 7.10.1, you can perform FPD upgrade for the breakout and multiplexer/demultiplexer modules. For the breakout modules, you can perform the FPD upgrade in both direct and indirect connections. You can upgrade all the passive modules at once or selectively upgrade the necessary modules as needed.




---

**Note** If the FPD in a given SSD is not supported by the current IOS XR software release, the status is displayed as *NOT READY*. The status will change once FPD support for these SSDs is enabled in future releases.

---

The following table lists the NCS 1010 FPDs that are distributed across route processor (RP), power modules (PM), line cards (LC), and Rack.

Table 2: NCS 1010 FPDs

Location	FPDs
RP	<ul style="list-style-type: none"> <li>• ADMConfig</li> <li>• CpuFpga</li> <li>• CpuFpgaGolden</li> <li>• BIOS</li> <li>• BIOS-Golden</li> <li>• SsdIntelS4510</li> <li>• SsdMicron5300</li> <li>• SsdSmartModular</li> <li>• TamFw</li> <li>• TamFwGolden</li> </ul>
PM0 and PM1	<ul style="list-style-type: none"> <li>• AP-PrimMCU</li> <li>• AP-SecMCU</li> </ul>
LC	<ul style="list-style-type: none"> <li>• ILA</li> <li>• OLT</li> <li>• Raman-1</li> <li>• Raman-2</li> </ul>
Rack	<ul style="list-style-type: none"> <li>• IoFpga</li> <li>• IoFpgaGolden</li> <li>• EITU-ADMConfig</li> <li>• SsdIntelS4510</li> <li>• SsdMicron5300</li> <li>• SsdSmartModular</li> </ul>
Breakout module	<ul style="list-style-type: none"> <li>• BRK-8</li> <li>• BRK-24</li> </ul>
Multiplexer and demultiplexer modules	<ul style="list-style-type: none"> <li>• MD-32-ACC</li> <li>• MD-32-NEO</li> </ul>



Golden FPDs serve as backup FPDs for the primary FPDs. For example, **BIOS-Golden** is the backup Golden FPD for the **BIOS** primary FPD. If a primary FPD is corrupted, NCS 1010 boots with the corresponding Golden FPD. The Golden FPDs cannot be upgraded.

### Retrieve FPD Information

There are multiple types of FPDs for each type of module. The **show hw-module fpd** command provides information about each FPD.

```
RP/0/RP0/CPU0:ios#show hw-module fpd
```

The following output shows the types of FPDs for each module.

```
Thu Mar  2 12:35:06.602 IST
```

```
Auto-upgrade:Enabled
```

```
Attribute codes: B golden, P protect, S secure, A Anti Theft aware
```

Location Reload Loc	Card type	HWver	FPD device	ATR	Status	FPD Versions	
						Running	Programd
0/RP0/CPU0 NOT REQ	NCS1010-CNTRLR-K9	1.11	ADMConfig		CURRENT	3.40	3.40
0/RP0/CPU0 0/RP0	NCS1010-CNTRLR-K9	1.11	BIOS	S	CURRENT	4.20	4.20
0/RP0/CPU0 0/RP0	NCS1010-CNTRLR-K9	1.11	BIOS-Golden	BS	CURRENT		4.10
0/RP0/CPU0 0/RP0	NCS1010-CNTRLR-K9	1.11	CpuFpga	S	CURRENT	1.11	1.11
0/RP0/CPU0 0/RP0	NCS1010-CNTRLR-K9	1.11	CpuFpgaGolden	BS	CURRENT		1.01
0/RP0/CPU0 0/RP0	NCS1010-CNTRLR-K9	1.11	SsdIntelS4510	S	CURRENT	11.32	11.32
0/RP0/CPU0 0/RP0	NCS1010-CNTRLR-K9	1.11	TamFw	S	CURRENT	6.13	6.13
0/RP0/CPU0 0/RP0	NCS1010-CNTRLR-K9	1.11	TamFwGolden	BS	CURRENT		6.11
0/PM0 NOT REQ	NCS1010-AC-PSU	0.0	AP-PrimMCU		CURRENT	1.03	1.03
0/PM0 NOT REQ	NCS1010-AC-PSU	0.0	AP-SecMCU		CURRENT	2.01	2.01
0/PM1 NOT REQ	NCS1010-AC-PSU	0.0	AP-PrimMCU		CURRENT	1.03	1.03
0/PM1 NOT REQ	NCS1010-AC-PSU	0.0	AP-SecMCU		CURRENT	2.01	2.01
0/0/NXR0 NOT REQ	NCS1K-OLT-L	1.0	OLT	S	CURRENT	1.02	1.02
0/Rack NOT REQ	NCS1010-SA	2.1	EITU-ADMConfig		CURRENT	2.10	2.10
0/Rack NOT REQ	NCS1010-SA	2.1	IoFpga	S	CURRENT	1.12	1.12
0/Rack NOT REQ	NCS1010-SA	2.1	IoFpgaGolden	BS	CURRENT		1.01
0/Rack 0/Rack	NCS1010-SA	2.1	SsdIntelS4510	S	CURRENT	11.32	11.32

The following output highlights the types of FPDs for the new controller card, new OLT line card, breakout module, and multiplexer/demultiplexer module.

```
Fri Feb 17 11:43:28.878 UTC
```

```
Auto-upgrade:Enabled
```

Attribute codes: B golden, P protect, S secure, A Anti Theft aware

Location Reload Loc	Card type	HWver	FPD device	ATR	Status	FPD Versions	
						Running	Programd
0/RP0/CPU0 NOT REQ	NCS1010-CTLR-B-K9	1.0	ADMConfig		CURRENT	2.30	2.30
0/RP0/CPU0 0/RP0	NCS1010-CTLR-B-K9	1.0	BIOS	S	CURRENT	4.40	4.40
0/RP0/CPU0 0/RP0	NCS1010-CTLR-B-K9	1.0	BIOS-Golden	BS	CURRENT		4.40
0/RP0/CPU0 0/RP0	NCS1010-CTLR-B-K9	1.0	CpuFpga	S	CURRENT	1.11	1.11
0/RP0/CPU0 0/RP0	NCS1010-CTLR-B-K9	1.0	CpuFpgaGolden	BS	CURRENT		1.01
0/RP0/CPU0 0/RP0	NCS1010-CTLR-B-K9	1.0	SsdIntels4510	S	CURRENT	11.32	11.32
0/RP0/CPU0 0/RP0	NCS1010-CTLR-B-K9	1.0	TamFw	S	CURRENT	6.13	6.13
0/RP0/CPU0 0/RP0	NCS1010-CTLR-B-K9	1.0	TamFwGolden	BS	CURRENT		6.11
0/PM0 NOT REQ	NCS1010-AC-PSU	0.0	AP-PrimMCU		CURRENT	1.03	1.03
0/PM0 NOT REQ	NCS1010-AC-PSU	0.0	AP-SecMCU		CURRENT	2.01	2.01
0/PM1 NOT REQ	NCS1010-AC-PSU	0.0	AP-PrimMCU		CURRENT	1.03	1.03
0/PM1 NOT REQ	NCS1010-AC-PSU	0.0	AP-SecMCU		NEED UPGD	1.06	1.06
0/0/NXR0 NOT REQ	NCS1K-E-OLT-R-C	1.0	OLT	S	CURRENT	1.16	1.16
0/0/NXR0 NOT REQ	NCS1K-E-OLT-R-C	1.0	Raman-1	S	CURRENT	1.04	1.04
0/Rack NOT REQ	NCS1010-SA	0.1	EITU-ADMConfig		CURRENT	1.04	1.04
0/Rack NOT REQ	NCS1010-SA	0.1	IoFpga	S	CURRENT		1.12
0/Rack NOT REQ	NCS1010-SA	0.1	IoFpgaGolden	BS	NEED UPGD	1.12	0.08
0/Rack 0/Rack	NCS1010-SA	0.1	SsdIntels4510	S	CURRENT	11.32	11.32
0/1 NOT REQ	NCS1K-MD-32E-C	0.1	MD-32-NEO	S	CURRENT	2.02	2.02
0/2 NOT REQ	NCS1K-MD-32O-C	10.2	MD-32-ACC	S	CURRENT	2.18	2.18
0/3/0 NOT REQ	NCS1K-BRK-8	1.0	BRK-8	S	CURRENT	2.08	2.08
0/3/3 NOT REQ	NCS1K-BRK-24	1.0	BRK-24	S	CURRENT	2.08	2.08

The following table describes the significant fields in the output of the **show hw-module fpd** command.

**Table 3: Description of Fields in show hw-module fpd Command**

Field	Description
Location	Location of the FPD.
Card type	PID of the modules such as chassis, card, CPU, and PSU.

Field	Description
HWver	Hardware version where the FPD resides.
FPD device	Name of the FPD.
ATR	Attribute codes. The possible values are: <ul style="list-style-type: none"> <li>• B - Golden Image</li> <li>• S - Secure Image</li> <li>• P - Protect Image</li> </ul> <p>The attribute code of the primary FPDs is S and the Golden FPDs is BS.</p>
Status	Status of the FPD. See <a href="#">Table 4: Description of FPD Status Values in show hw-module fpd Command</a> , on page 11.
Running	FPD image version that has been activated and currently running in the FPD device.
Programd	FPD image version that has been programmed into the FPD device, but might not be activated.
Reload Loc	Indicates whether reload of the location is required or not.

The following table describes the possible values of the Status field in the output of the **show hw-module fpd** command.

**Table 4: Description of FPD Status Values in show hw-module fpd Command**

FPD Status	Description
NOT READY	The driver that owns the FPD device has not initialized the FPD client to handle this device.
CURRENT	FPD version is up to date and upgrade is not required.
NEED UPGD	Upgrade is required for this FPD. Check the output of the <b>show fpd package</b> command to determine the recommended FPD version.
UPGD PREP	FPD is preparing for upgrade.
IN QUEUE	Upgrade of this FPD is in queue.
UPGD SKIP	FPD upgrade is not required. For example, <ul style="list-style-type: none"> <li>• FPD version is up to date and compatible.</li> <li>• FPD image is protected.</li> </ul>

FPD Status	Description
UPGRADING	FPD upgrade started and the driver did not report the upgrade progress information yet.
%UPGD	Percentage of FPD upgrade completion.
RLOAD REQ	FPD upgrade is successfully completed and the FPD must be reloaded for the new version to take effect.
UPGD FAIL	FPD upgrade has failed. Check the syslog for failure reason. It could be a timeout or a failure that is reported by the driver.
UPGD DONE	FPD upgrade is successfully completed.

## Verify if an FPD Upgrade is Required

**Step 1** Use the **show hw-module fpd** command to check whether all the FPDs are in the Current state.

If the status of any FPD is **NEED UPGD**, then the upgrade is required for that FPD.

**Step 2** Use the **show fpd package** command to determine the FPDs that are supported with the current software release and the minimum hardware requirements for each FPD.

```
RP/0/RP0/CPU0:ios#show fpd package
```

The following output highlights the FPD packages for the breakout and multiplexer/demultiplexer modules.

```
Thu Mar 2 12:37:58.530 IST
```

```
=====
                                Field Programmable Device Package
=====
Card Type          FPD Description          Req   SW   Min Req  Min Req
                    FPD Description          Reload Ver   SW Ver  Board Ver
=====
-----
NCS1010-AC-PSU    AP-PrimCU                NO    1.03  1.03    0.0
                  AP-SecMCU                NO    2.01  2.01    0.0
-----
NCS1010-CNTRLR-K9  ADMConfig                NO    2.30  2.30    0.0
                  ADMConfig                NO    3.40  3.40    1.0
                  BIOS                     YES   4.20  4.20    0.0
                  BIOS                     YES   4.20  4.20    0.0
                  BIOS-Golden              YES   4.10  4.10    0.0
                  BIOS-Golden              YES   4.10  4.10    0.0
                  CpuFpga                  YES   1.11  1.11    0.0
                  CpuFpga                  YES   1.11  1.11    0.0
                  CpuFpgaGolden            YES   1.01  1.01    0.0
                  CpuFpgaGolden            YES   1.01  1.01    0.0
                  SsdIntelS4510            YES  11.32  11.32   0.0
                  SsdIntelS4510            YES  11.32  11.32   0.0
                  SsdMicron5300            YES   0.01  0.01    0.0
                  SsdMicron5300            YES   0.01  0.01    0.0
                  SsdSmartModular          YES  13.06  13.06   0.0
                  SsdSmartModular          YES  13.06  13.06   0.0
```

	TamFw	YES	6.13	6.13	0.0
	TamFw	YES	6.13	6.13	0.0
	TamFwGolden	YES	6.11	6.11	0.0
	TamFwGolden	YES	6.11	6.11	0.0
-----					
NCS1010-SA	EITU-ADMConfig	NO	1.04	1.04	0.0
	EITU-ADMConfig	NO	2.10	2.10	1.0
	EITU-ADMConfig	NO	1.04	1.04	0.0
	EITU-ADMConfig	NO	2.10	2.10	1.0
	IoFpga	NO	1.12	1.12	0.0
	IoFpga	NO	1.12	1.12	0.0
	IoFpgaGolden	NO	1.01	1.01	0.0
	IoFpgaGolden	NO	1.01	1.01	0.0
	SsdIntelS4510	YES	11.32	11.32	0.0
	SsdIntelS4510	YES	11.32	11.32	0.0
	SsdMicron5300	YES	0.01	0.01	0.0
	SsdMicron5300	YES	0.01	0.01	0.0
	SsdSmartModular	YES	13.06	13.06	0.0
	SsdSmartModular	YES	13.06	13.06	0.0
-----					
NCS1K-ILA-2R-C	ILA	NO	1.12	1.12	0.1
	ILA	NO	0.28	0.28	99.1
	Raman-1	NO	1.04	1.04	0.1
	Raman-1	NO	0.28	0.28	99.1
	Raman-2	NO	1.04	1.04	0.1
	Raman-2	NO	0.28	0.28	99.1
-----					
NCS1K-ILA-C	ILA	NO	1.12	1.12	0.1
	ILA	NO	0.28	0.28	99.1
-----					
NCS1K-ILA-L	ILA	NO	1.00	1.00	0.1
-----					
NCS1K-ILA-R-C	ILA	NO	1.12	1.12	0.1
	ILA	NO	0.28	0.28	99.1
	Raman-1	NO	1.04	1.04	0.1
	Raman-1	NO	0.28	0.28	99.1
-----					
NCS1K-OLT-C	OLT	NO	1.12	1.12	0.1
	OLT	NO	0.28	0.28	99.1
-----					
NCS1K-OLT-L	OLT	NO	1.02	1.02	0.1
-----					
NCS1K-OLT-R-C	OLT	NO	1.12	1.12	0.1
	OLT	NO	0.28	0.28	99.1
	Raman-1	NO	1.04	1.04	0.1
	Raman-1	NO	0.28	0.28	99.1
-----					
<b>NCS1K-BRK-24</b>	<b>BRK-24</b>	<b>NO</b>	<b>2.08</b>	<b>2.08</b>	<b>0.0</b>
-----					
<b>NCS1K-BRK-8</b>	<b>BRK-8</b>	<b>NO</b>	<b>2.08</b>	<b>2.08</b>	<b>0.0</b>
-----					
NCS1K-MD-32E-C	MD-32-ACC	NO	2.18	2.18	0.0
	MD-32-NEO	NO	2.02	2.02	0.0
-----					
NCS1K-MD-32O-C	MD-32-ACC	NO	2.18	2.18	0.0
	MD-32-NEO	NO	2.02	2.02	0.0
-----					

The following table describes the fields in the output of the **show fpd package** command.

Table 5: Description of Fields in show fpd package Command

Field	Description
Card Type	PID of the modules such as chassis, card, CPU, and PSU.
FPD Description	Description of the FPD.
Req Reload	Determines whether reload is required to activate the FPD image.
SW Ver	Recommended FPD software version for the associated module running the current Cisco IOS XR Software.
Min Req SW Ver	Minimum required FPD software version to operate the module.
Min Req Board Ver	Minimum required hardware version for the associated FPD. A minimum hardware requirement of version 0.0 indicates that all the hardware can support this FPD version.

FPD can be upgraded using two methods:

- [Upgrade FPDs Manually](#)
- [Upgrade FPDs Automatically](#)

## Upgrade FPDs Manually

Use the following procedure to upgrade the FPDs manually.



**Note** The Golden FPDs cannot be upgraded using the CLI.

**Step 1** Use the **show hw-module fpd** command to display information about the current FPD version.

You can use this command to determine if you must upgrade the FPD.

**Step 2** Use the **show alarms brief system active** command to display the active alarms.

You must upgrade the FPD when the **One Or More FPDs Need Upgrade Or Not In Current State** alarm is present.

**Step 3** Use the **upgrade hw-module location [location-id] fpd [fpd name]** command to upgrade a specific FPD.

After upgrading the FPD, the user must wait for upgrade completion. The progress of the FPD upgrade can be monitored using the **show hw-module fpd** command.

**Example:**

```
RP/0/RP0/CPU0:ios#upgrade hw-module location 0/Rack fpd IoFpga
```

**Note** The FPDs of power modules belong to 0/PM0 and 0/PM1 locations. The FPDs belonging to both the PM locations cannot be simultaneously upgraded.

- Step 4** Use the **reload location** *location-id* to reload the FPDs belonging to a specific location with the new version. The **Reload Loc** field in the output of **show hw-module fpd** command indicates whether the reload is required or not.
- Example:**
- ```
RP/0/RP0/CPU0:ios#reload location 0/RP0/CPU0
```
- Step 5** (Optional) Use the **upgrade hw-module location all fpd all** command to upgrade all the FPDs at once.
- Step 6** (Optional) Use the **upgrade hw-module [location [location-id | all]] fpd [fpd name] | all** command to upgrade a specific FPD, all the FPDs, or the FPDs belonging to a specific location.
- Example:**
- ```
RP/0/RP0/CPU0:ios#upgrade hw-module location all fpd all
```
- Note** The FPDs of power modules and SSDs cannot be forcefully upgraded.

## Upgrade FPDs Automatically

The automatic FPD upgrade upgrades the FPD version of all the modules to the latest version. When automatic FPD upgrade is enabled, all the FPDs (except the Golden FPDs) that are in NEED UPGD status are upgraded to CURRENT status during the software upgrade.

In NCS 1010, automatic FPD upgrade is enabled by default.

Use the following commands to disable automatic FPD upgrade.

**Example:**

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#fpd auto-upgrade disable
RP/0/RP0/CPU0:ios(config)#commit
RP/0/RP0/CPU0:ios(config)#end
```

## Release 7.10.1 Caveats

The following upgrade caveats are applicable for the Cisco NCS 1010 platform for Release 7.10.1 and later:

**Table 6: Upgrade Caveats for Cisco NCS 1010 Platform**

From	To	Bridge SMUs Required	Caveats
7.7.1	7.10.1 and later	None	1*
7.9.1	7.10.1 and later	None	1*

1\* : You can't roll back using the **install rollback** command.

The following downgrade caveats are applicable for the Cisco NCS 1010 platform for Release 7.10.1 and later:

**Table 7: Downgrade Caveats for Cisco NCS 1010 Platform**

From	To	Bridge SMUs Required	Caveats
7.10.1 and later	7.7.1	Yes	***, A*, B*, C*, D*
7.10.1 and later	7.9.1	Yes	***, C*, D*

\*\*\*

- You don't need to run the **install commit** command after a downgrade operation because the operation is automatically committed.
- You can't roll back after a downgrade. To revert to the previous IOS XR previous version, replace or reimage to the relevant ISO.
- IOS XR configuration history is lost after a downgrade, but the NCS 1010 platform preserves the latest configuration.
- Install history from the last transaction is preserved after a downgrade operation.
- Downtime takes a longer time as the operation is performed through reimage.
- You can't downgrade using the **install package replace** command. Instead, use the **install replace** command to downgrade.
- Ensure that you reinstall third-party application once you complete the downgrade.
- PXE recovery is required if the image downgrading isn't bootable.
- You must re-install the *Type 6 masterkey* and reapply the configuration encrypted by it because they are lost after the downgrade.
- You must regenerate crypto keys and certificates after a downgrade.

A\*: You can't downgrade to the base ISO. You can downgrade to a GISO containing the bridge SMU (CSCwd71524).



**Note** CSCwd71524:

- When you upgrade from earlier than Release 7.10.1 to Release 7.10.1, system supports the installation process seamlessly.
- When you downgrade from Release 7.10.1, system preserves the present configuration and the install history from last transaction.

B\*: You must recover the NCS 1010 platform through PXE if a power cycle occurs during the downgrade.

C\*: FPD upgrade may cause your NCS 1010 platform to reload an extra time during boot-up.

D\*: Traffic is impacted.

Use the **show install upgrade-matrix running** command to view the caveats.