



## Automation Workflows

- [Install Routed Optical Networking components, on page 1](#)
- [How Routed Optical Networking components communicate, on page 2](#)
- [Provision end-to-end service for Cisco routers with only ZR or ZR+ optics, on page 3](#)
- [How NSO Routed Optical Networking ML service works, on page 4](#)
- [How Crosswork Hierarchical Controller provisions Routed Optical Networking circuit, on page 5](#)
- [Automation starter solution and full solution, on page 6](#)
- [Troubleshoot provisioning issues on ZR or ZR+ optics, on page 8](#)

## Install Routed Optical Networking components

Cisco Crosswork Hierarchical Controller, Crosswork Network Controller Essentials, and NSO 6.1.9 with Routed Optical Networking 3.0.0 Function Pack are the necessary components for the Routed Optical Networking solution. Cisco Optical Network Controller is required when using Cisco optical networking components.

Follow these steps to install the components of the Routed Optical Networking solution.

### Procedure

Install the Routed Optical Networking components in this sequence.

**Table 1: Installation sequence of Routed Optical Networking components**

Task	See
Install Cisco Optical Network Planner. Cisco Optical Network Planner determines the optical layer feasibility and identifies the components needed to support the network. It also generates a BoM for the planned hardware deployment.	<a href="#">Cisco Optical Network Planner Installation Guide</a>
Install SVO to manage the NCS 2000 optical components and create SVO instances to manage NCS 2000 devices.	<a href="#">Cisco NCS 2000 Series SVO Configuration Guide, Release 12.3.x</a>

Task	See
Install the Crosswork Infrastructure 6.0, Crosswork Data Gateway, and supporting Crosswork Network Controller 6.0 7.1 applications such as Crosswork Optimization Engine, CAT, and Hi.	<a href="#">Cisco Crosswork Network Controller 6.0 Installation Guide</a>
Install Cisco Optical Network Controller 3.1	<a href="#">Cisco Optical Network Controller 3.1 Installation Guide</a>
Install EPNM 7.1.2 EMS to manage the physical router and the optical network nodes.	<a href="#">Installation Guide for Cisco Evolved Programmable Network Manager 7.1</a>
Install Cisco NSO 6.1.96.4.1.1, Routed Optical Networking Multi-layer Function Pack 3.0, and Crosswork DLM function pack. Optionally, install the Cisco Transport SDN Function pack for SR-TE and xVPN service management.	<a href="#">Cisco Network Services Orchestrator Getting Started Guide</a> , <a href="#">Cisco NSO Routed Optical Networking Core Function Pack Installation Guide</a> , <a href="#">Cisco NSO Transport SDN Function Pack Installation Guide 6.0.0</a> , <a href="#">Cisco NSO DLM Service Pack Installation Guide 6.0.0</a>
Add NCS 1010 devices to Cisco Optical Network Controller for the optical service management.	<a href="#">Cisco Optical Network Controller 25.1.x Configuration Guide</a>
Install Crosswork Hierarchical Controller 11.0	<a href="#">Crosswork Hierarchical Controller 11.0</a>
Install Segment Routing - Path Computation Element (SR-PCE) in the network for Segment Routing - Traffic Engineering (SR-TE) or Resource Reservation Protocol - Traffic Engineering (RSVP-TE) discovery and visualization and add NSO, SR-PCE, and Cisco routers to the Crosswork cluster.	<a href="#">Add Cisco NSO Providers</a> , <a href="#">Add Cisco SR-PCE Providers</a> , <a href="#">Adding Devices to Inventory</a>
Add the Cisco Optical Network Controller instance as a device in NSO to support end-to-end multi-layer provisioning.	<a href="#">Cisco NSO Routed Optical Networking Core Function Pack User Guide</a>

---

You have installed all the components of the Routed Optical Networking solution.

## How Routed Optical Networking components communicate

### Summary

The components of Routed Optical Networking perform several operations such as service discovery, node management, and collection of inventory data to communicate together.

### Workflow

This diagram displays the communication sequence between the Routed Optical Networking components.




**Note** Routed Optical Networking components are not required in all the deployments.

## Provision end-to-end service for Cisco routers with only ZR or ZR+ optics

These diagrams illustrate a network containing Cisco routers equipped with ZR or ZR+ optics and a non-Cisco optical line system.

**Figure 1: Cisco routers with ZR or ZR+ optics**

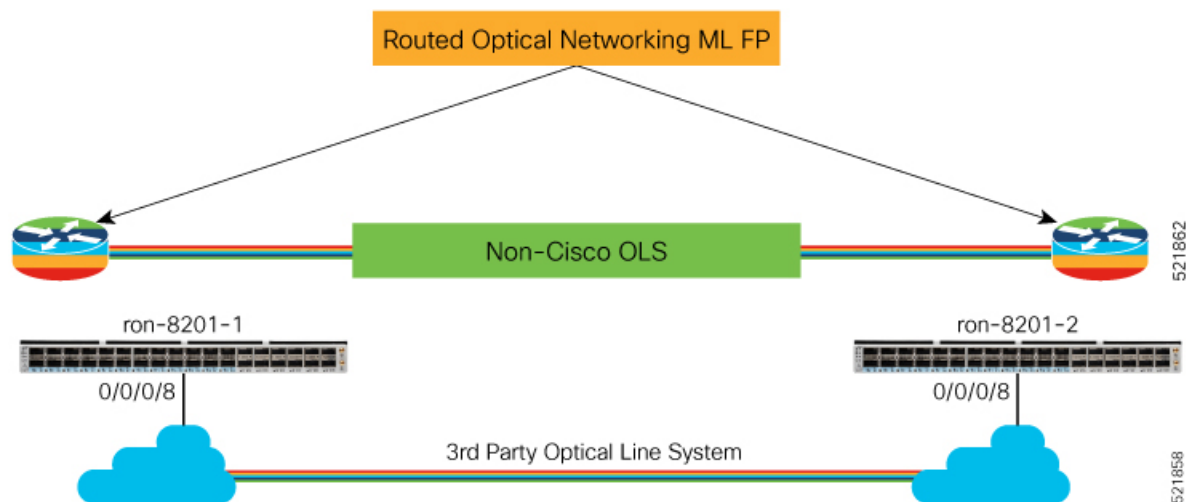

Follow this step to provision end-to-end service using Cisco routers with only ZR or ZR+ optics.

### Procedure

Create Routed Optical Networking ML service with these parameters.

**Table 2: Parameters for Routed Optical Networking ML Service**

Input	Value
End-points	ron-8201-1, ron-8201-2
Model	Transponder (1x400G mode)
Bandwidth	400G
Frequency	1952000
TX Power	-12 dB on both endpoints

Input	Value
IP Addressing	10.2.1.10/31 and 10.2.1.11/31 on FourHundredGigE 0/0/0/8

```

ron ron-ml ron-8201-1_ron-8201-2
mode      transponder
bandwidth 400
circuit-id "Router Only"
frequency 1952000
end-point ron-8201-1
  terminal-device-optical line-port 0/0/0/8
  terminal-device-optical transmit-power -120
  terminal-device-packet interface 0
  ip-address v4 10.2.1.10/31
!
!
end-point ron-8201-2
  terminal-device-optical line-port 0/0/0/8
  terminal-device-optical transmit-power -120
  terminal-device-packet interface 0
  ip-address v4 10.2.1.11/31
!
!
!

```

## How NSO Routed Optical Networking ML service works


### Summary

The Routed Optical Networking ML service performs several operations to provision an end-to-end service using Cisco routers with ZR or ZR+ optics.

### Workflow

This diagram displays the NSO Routed Optical Networking ML service workflow for an end-to-end service using Cisco routers with ZR or ZR+ optics.

Figure 2: NSO Routed Optical Networking ML service sequence

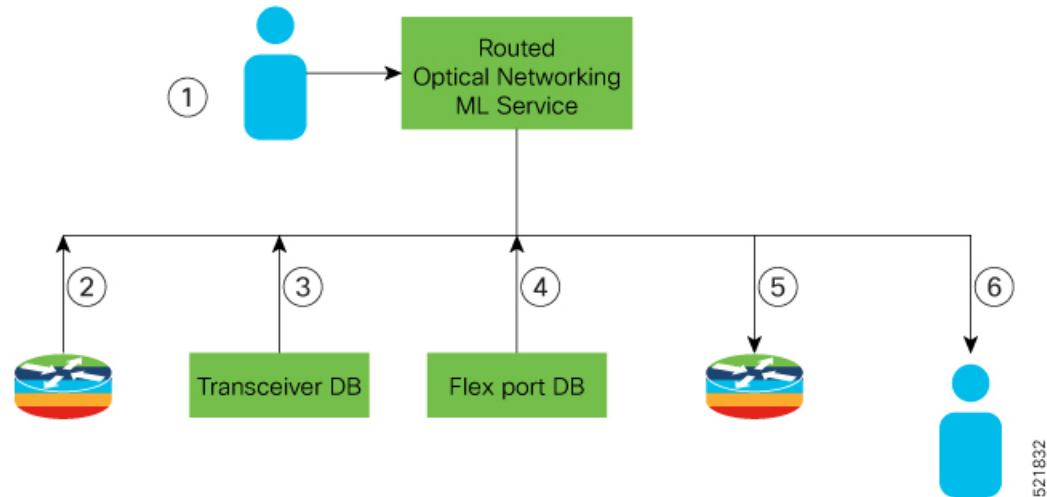

These stages describe the workflow of the Routed Optical Networking ML service.

1. The user initiates the Routed Optical Networking ML provisioning request.
2. The Routed Optical Networking ML service retrieves the transceiver and line card PIDs for each router endpoint using Routed Optical Networking CLI NED.
3. The Routed Optical Networking ML service compares the received transceiver PIDs and determines whether the transceivers can support the service.
4. The Routed Optical Networking ML service compares the received line card PIDs and determines whether the line cards require configuration.
5. The Routed Optical Networking ML service provisions the router optics ports. It optionally performs bundle and IP configuration using the Cisco YANG models.
6. The Routed Optical Networking ML service stores the service information as NSO operational data and also returns the service state to the user.

## How Crosswork Hierarchical Controller provisions Routed Optical Networking circuit


### Summary

Crosswork Hierarchical Controller provisions the Routed Optical Networking circuit through several operations.

### Workflow

The stages in the diagram describe the workflow for provisioning the Routed Optical Networking circuit in the Crosswork Hierarchical Controller GUI through the Crosswork Network Controller.

Figure 3: Crosswork Hierarchical Controller provisioning workflow

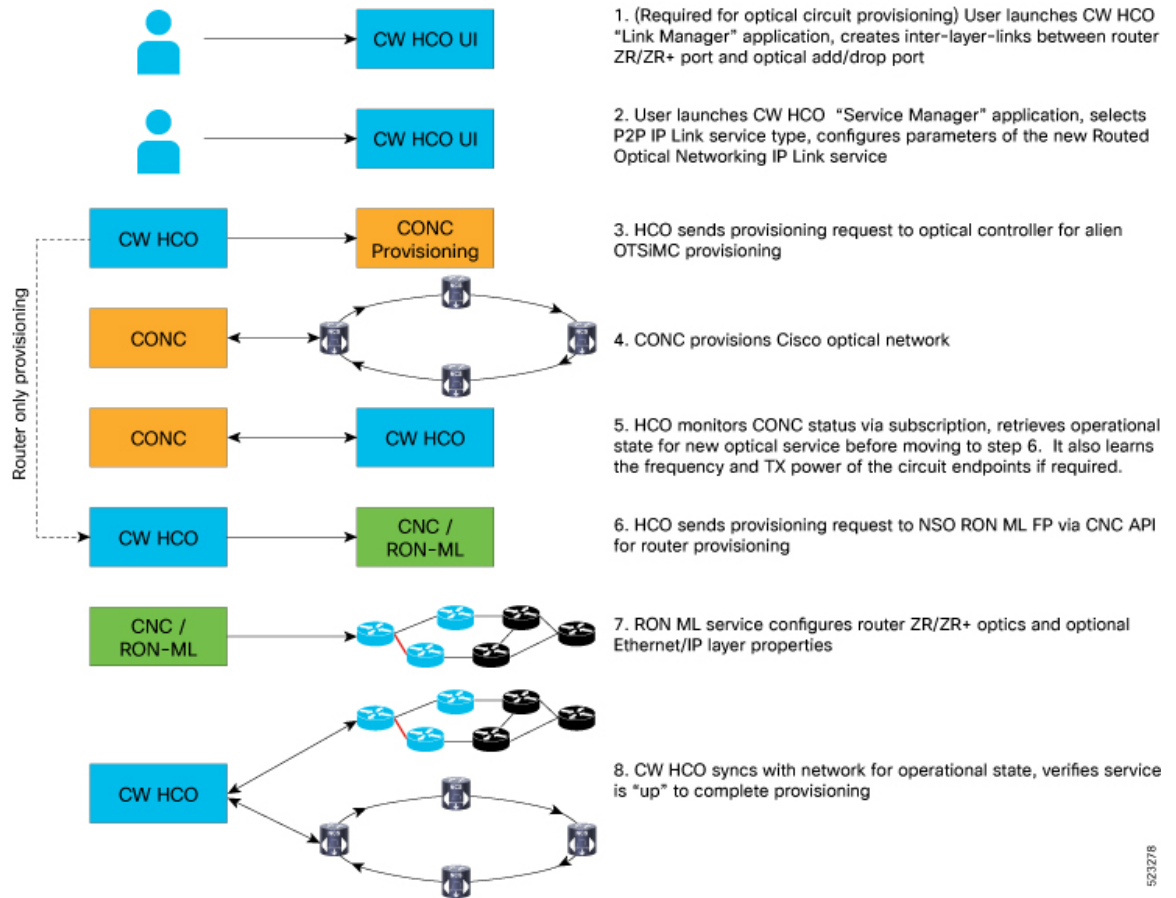

**Note** The workflow does not support provisioning a complete end-to-end service in a network that contains Cisco routers with ZR or ZR+ optics and a non-Cisco optical line system.

## Automation starter solution and full solution

### Automation starter solution

The automation starter solution is a simplified automation stack to manage ZR and ZR+ optics in Cisco routers. This solution accelerates the adoption of Routed Optical Networking by simplifying the installation and deployment processes.

The primary difference between the starter and full solutions is that the starter solution lacks CNC. In the starter solution, the Crosswork Hierarchical Controller communicates with Cisco routers using the IOS XR (only in R3.0) and NSO adapters, and communicates with optical networks using the appropriate optical controller adapter.

Both the starter and full solutions use the same NSO RON-ML function pack. The function pack version is 3.0


From Release 4.0, IOS XR adapter is not supported in the starter solution. Crosswork Network Controller EMS provides minimal installation to support full IP network inventory, basic topology, and PM data delivered through its integrated Crosswork Data Gateway.

From Release 4.0, IOS XR adapter is not supported in the full solution. Crosswork Network Controller provides the necessary inventory and state information to Crosswork Hierarchical Controller through NB API.

### Automation starter solution versus full solution

This diagram displays the components that are involved in the automation starter solution and full solution.

**Figure 4: Automation starter solution versus full solution in release 4.0**

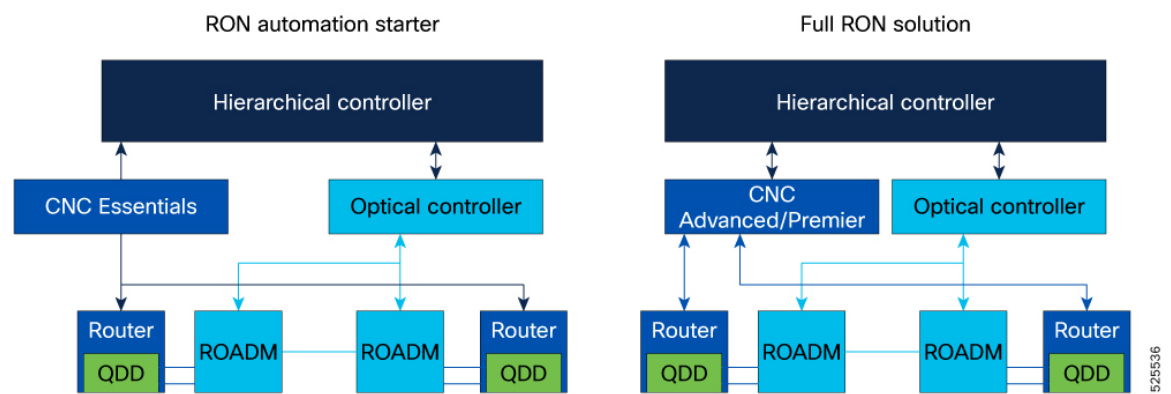

### Features and adapters in automation starter solution and full solution

This table lists the features supported in both the automation starter solution and the full solution.

**Table 3: Features in automation starter solution and full solution**

Feature	Automation starter solution	Full solution
Wavelength provisioning	Yes	Yes
Optical circuit assurance and troubleshooting	Yes	Yes
Multilayer visualization and History view	Yes	Yes
Management and verification of optical to IP connections	Yes	Yes
SR and SRv6 control plane SDN automation	No	Yes
IP element management and IP SDN path optimization	No	Yes
IP service assurance and service orchestration	No	Yes

Feature	Automation starter solution	Full solution
PLE automation including SR-CS bandwidth reservation, provisioning, and assurance	No	Yes

This table lists the adapters required for both the automation starter solution and the full solution.

**Table 4: Required adapters in automation starter solution and full solution**

Type of solution	Required adapters	Use
Full solution	<ul style="list-style-type: none"> <li>• CNC adapter</li> <li>• CDG adapter</li> <li>• (Only in R3.0) IOS-XR adapter</li> <li>• NSO adapter and RON-ML function pack</li> <li>• Optical adapters</li> <li>• CONC adapter</li> </ul>	<ul style="list-style-type: none"> <li>• Inventory, physical and IGP topology, segment routing, and service discovery</li> <li>• PM collection</li> <li>• RON inventory and topology</li> <li>• RON link provisioning</li> <li>• Optical Line System</li> <li>• Cisco Optical Network Controller</li> </ul>
Starter solution	<ul style="list-style-type: none"> <li>• (Only in R3.0) IOS-XR adapter</li> <li>• NSO adapter and RON-ML function pack</li> <li>• Optical adapters</li> <li>• CONC adapter</li> </ul>	<ul style="list-style-type: none"> <li>• RON inventory and topology</li> <li>• RON link provisioning</li> <li>• Optical Line System</li> <li>• Cisco Optical Network Controller</li> </ul>

## How communication works in automation starter solution

### Summary

The components of Routed Optical Networking perform operations to communicate in the automation starter solution.

### Workflow

This diagram displays the communication workflow between the Routed Optical Networking components in the automation starter solution.

## Troubleshoot provisioning issues on ZR or ZR+ optics

Follow these steps to troubleshoot provisioning issues on ZR or ZR+ optics.

## Procedure

**Step 1** Use the **show controllers optics R/S/I/P** or **show controllers coherentDSP R/S/I/P** command to check the controller state on the router.

### Example:

```
RP/0/RP0/CPU0:ron-8201-1#show controllers optics 0/0/0/20
Thu Jun  3 15:34:44.098 PDT
```

#### Controller State: Up

Transport Admin State: In Service

Laser State: On

#### LED State: Green

FEC State: FEC ENABLED

#### Optics Status

```
Optics Type: QSEFPDD 400G ZR
DWDM carrier Info: C BAND, MSA ITU Channel=10, Frequency=195.65THz,
Wavelength=1532.290nm
```

Alarm Status:

-----

**Detected Alarms: None**

LOS/LOL/Fault Status:

Alarm Statistics:

-----

```
HIGH-RX-PWR = 0          LOW-RX-PWR = 0
HIGH-TX-PWR = 0          LOW-TX-PWR = 4
HIGH-LBC = 0            HIGH-DGD = 1
OOR-CD = 0              OSNR = 10
WVL-OOL = 0             MEA = 0
IMPROPER-REM = 0
TX-POWER-PROV-MISMATCH = 0
Laser Bias Current = 0.0 %
Actual TX Power = -7.17 dBm
RX Power = -9.83 dBm
RX Signal Power = -9.18 dBm
Frequency Offset = 9 MHz
```

```
RP/0/RP0/CPU0:ron-8201-1#show controllers coherentDSP 0/0/0/20
Thu Jun  3 15:38:04.565 PDT
```

```
Port                : CoherentDSP 0/0/0/20
Controller State     : Up
Inherited Secondary State : Normal
Configured Secondary State : Normal
Derived State        : In Service
Loopback mode        : None
BER Thresholds       : SF = 1.0E-5  SD = 1.0E-7
Performance Monitoring : Enable
Bandwidth            : 400.0Gb/s
```

```

Alarm Information:
LOS = 8 LOF = 0 LOM = 0
OOF = 0 OOM = 0 AIS = 0
IAE = 0 BIAE = 0          SF_BER = 0
SD_BER = 0          BDI = 0 TIM = 0
FECMISMATCH = 0 FEC-UNC = 0          FLEXO_GIDM = 0
FLEXO-MM = 0          FLEXO-LOM = 0          FLEXO-RDI = 0
FLEXO-LOF = 2
Detected Alarms                          : None

Bit Error Rate Information
PREFEC BER                                : 1.5E-03
POSTFEC BER                               : 0.0E+00
-----
Q-Factor                                  : 9.40 dB

Q-Margin                                : 2.20dB

OTU TTI Received

FEC mode                                  : C_FEC

```

**Step 2** Use the `show controllers optics R/S/I/P pm` command or `show controllers coherentDSP R/S/I/P pm` command to gather the performance measurement data.

**Example:**

```

RP/0/RP0/CPU0:ron-8201-1#show controllers optics 0/0/0/20 pm current 30-sec optics 1
Thu Jun  3 15:39:40.428 PDT

```

Optics in the current interval [15:39:30 - 15:39:40 Thu Jun 3 2021]

Optics current bucket type : Valid

	MIN	AVG	MAX	Operational Th(min)	Configured Th(min)	TCA (min)	Operational Th(max)	Configured Th(max)	TCA (max)
LBC[% ]	: 0.0	0.0	0.0	0.0	NA	NO	100.0	NA	NO
OPT[dBm]	: -7.17	-7.17	-7.17	-15.09	NA	NO	0.00	NA	NO
OPR[dBm]	: -9.86	-9.86	-9.85	-30.00	NA	NO	8.00	NA	NO
CD[ps/nm]	: -489	-488	-488	-80000	NA	NO	80000	NA	NO
DGD[ps ]	: 1.00	1.50	2.00	0.00	NA	NO	80.00	NA	NO
SOPMD[ps^2]	: 28.00	38.80	49.00	0.00	NA	NO	2000.00	NA	NO
OSNR[dB]	: <b>34.90</b>	<b>35.12</b>	<b>35.40</b>	0.00	NA	NO	40.00	NA	NO
PDL[dB]	: 0.70	0.71	0.80	0.00	NA	NO	7.00	NA	NO
PCR[rad/s]	: 0.00	0.00	0.00	0.00	NA	NO	2500000.00	NA	NO
RX_SIG[dBm]	: <b>-9.23</b>	<b>-9.22</b>	<b>-9.21</b>	-30.00	NA	NO	1.00	NA	NO
FREQ_OFF[Mhz]	: -2	-1	4	-3600	NA	NO	3600	NA	NO
SNR[dB]	: 16.80	16.99	17.20	7.00	NA	NO	100.00	NA	NO

**Example:**

```

RP/0/RP0/CPU0:ron-8201-1#show controllers coherentDSP 0/0/0/20 pm current 30-sec fec
Thu Jun  3 15:42:28.510 PDT

```

g709 FEC in the current interval [15:42:00 - 15:42:28 Thu Jun 3 2021]

FEC current bucket type : Valid

	MIN	AVG	MAX	Threshold (min)	TCA (enable)	Threshold (max)	TCA (enable)
EC-BITS	: 20221314973			83203400000			YES
UC-WORDS	: 0			5			YES
PreFEC BER	: 1.5E-03	1.5E-03	1.6E-03	0E-15	NO	0E-15	NO
PostFEC BER	: <b>E-15</b>	<b>0E-15</b>	<b>0E-15</b>	0E-15	NO	0E-15	NO
Q[dB]	: 9.40	9.40	9.40	0.00	NO	0.00	NO
Q_Margin[dB]	: 2.20	2.20	2.20	0.00	NO	0.00	NO

Last clearing of "show controllers OTU" counters never

This table contains the streaming telemetry sensor paths and the information fields that you receive from them.

**Table 5: Telemetry sensor paths**

Sensor path	Information fields
Cisco-IOS-XR-controller-optics-oper:optics-oper/optics-ports/optics-port/optics-info	alarm-detected, baud-rate, dwdm-carrier-frequency, controller-state, laser-state, optical-signal-to-noise-ratio, temperature, voltage
Cisco-IOS-XR-controller-optics-oper:optics-oper/optics-ports/optics-port/optics-lanes/optics-lane	receive-power, receive-signal-power, transmit-power
Cisco-IOS-XR-controller-otu-oper:otu/controllers/controller/info	bandwidth, ec-value, post-fec-ber, pre-fec-ber, qfactor, qmargin, uc
Cisco-IOS-XR-pmengine-oper:performance-management/optics/optics-ports/optics-port/optics-current/optics-second30/optics-second30-optics/optics-second30-optic	dd__average, dgd__average, opr__average, opt__average, osnr__average, pcr__average, pmd__average, rx-sig-pow__average, snr__average, sopmd__average
Cisco-IOS-XR-pmengine-oper:performance-management/otu/otu-ports/otu-port/otu-current/otu-second30/otu-second30fec/otu-second30fec	ec-bits__data, post-fec-ber__average, pre-fec-ber__average, q__average, qmargin__average, uc-words__data

**Note**

The performance management sensor paths show the sensor path for a 30-second performance measurement (PM) interval. They also support 15 minutes and 24 hours. To access these options, replace `second30` in the sensor path with `minute15` and `hour24` respectively.

