



CONTENTS

Preface xvii

Document Revision History	xvii
Document Objectives	xix
Audience	xix
Document Organization	xix
Conventions	xxi
Safety Warnings and Cautions	xxi
Warning Definition	xxii
Related Documentation	xxvii
Obtaining Documentation and Submitting a Service Request	xxviii

CHAPTER 1

Cisco ASR 1000 Series Routers Hardware Overview 1-1

Cisco ASR 1000 Series Routers	1-2
Cisco ASR 1000 Series Router Features	1-3
Cisco ASR 1000 Series Routers Compatibility Information	1-4
Hardware Compatibility	1-5
Cisco ASR 1000 Series Router Configurations	1-6
Field-Replaceable Units	1-7
Functional Overview	1-8
Chassis Slot and Logical Interface Numbering	1-8
MAC Address Information	1-8
Online Insertion and Removal	1-9
Environmental Monitoring and Reporting Functions	1-10
Environmental Monitoring	1-10
Fan Failures	1-11
Reporting Functions	1-12
Cisco Product Identification Standard	1-17
Unique Device Identifier	1-17
Serial Number Label Location	1-18

CHAPTER 2

Cisco ASR 1000 Series Routers Component Overview 2-27

Cisco ASR 1000 Series Routers Component Software Support	2-27
Upgrading to New Software	2-27

Supported ASR 1000 Hardware Components	2-29
Supported Cisco ASR 1000 Platforms	2-29
Cisco ASR 1000 Series Hardware Configuration Combinations	2-30
Hardware Requiring a CPLD Upgrade	2-31
Incompatible Hardware Configuration Combinations	2-31
Incompatible ASR1000-ESP Error Message	2-32
Incompatible ASR1000-RP Error Message	2-32
Unsupported Hardware Configurations	2-32
Unsupported ASR1000-ESP Error Message	2-33
Unsupported ASR1000-SIP Error Message	2-34
Incompatible Cisco High Availability Hardware Configurations	2-34
Upgrading Existing Hardware Components to Support the Cisco ASR 1013 Router	2-34
Unsupported Active ASR1000-RP2 Requires Upgrade	2-35
When To Perform a CPLD Upgrade	2-36
Unsupported Standby ASR1000-RP2 or ASR1000-SIP10 Requires Upgrade	2-36
Image to Upgrade Field-Programmable Hardware Devices	2-37
Cisco ASR 1000 Series Route Processor	2-37
Cisco ASR 1000 Series Route Processor Differences	2-38
Cisco Integrated ASR1000-RP1 for Cisco ASR 1002 Router	2-43
How Cisco ASR1000-RP Alarm Monitoring Works	2-46
Cisco ASR 1000 Series Router Power Supplies	2-47
Power Supply Requirements for All Cisco ASR 1000 Series Routers	2-47
DC Power System Input Requirements for Cisco ASR 1000 Series Routers	2-47
AC and DC Power Supply Types	2-48
AC and DC System Power Ratings	2-49
Power Supplies for the Cisco ASR 1006 Router	2-49
AC Power Supply LEDs and Connector for Cisco ASR 1006	2-50
–48 VDC Power Supply LEDs and Connectors for Cisco ASR 1006	2-53
Power Supplies for the Cisco ASR 1004 Router	2-55
Cisco ASR 1004 AC Power Supply	2-56
Cisco ASR 1004 AC Power Supply LEDs and Connector	2-57
Cisco ASR Router 1004 –48 VDC Power Supply	2-59
Cisco ASR 1004 Router –48 VDC Power Supply LEDs and Connector	2-60
DC Power System Input for Cisco ASR 1004	2-61
AC/DC Power System Output for Cisco ASR 1004	2-61
Power Supplies for the Cisco ASR 1002 Router	2-62
Cisco ASR 1002 Router AC Power Supply	2-62
Cisco ASR 1002 AC Power Supply LEDs and Connector	2-63
Cisco ASR 1002 Router –48 VDC Power Supply	2-64

Cisco ASR 1002 Router –48 VDC Power Supply LEDs and Connector	2-65
–48 VDC Power System Input for Cisco ASR 1002 Router	2-66
–48 VDC Power System Output for Cisco ASR 1002 Router	2-66
Cisco ASR 1002 Router +24 VDC Power Supply	2-67
Cisco ASR 1002 Router +24 VDC Power Supply LEDs and Connector	2-67
+24 VDC Power System Input for Cisco ASR 1002 Router	2-68
+24 VDC Power System Output for Cisco ASR 1002 Router	2-69
Power Supplies for the Cisco ASR 1013 Router	2-70
AC Power Supply LEDs and Connector for Cisco ASR 1013	2-71
–48 VDC Power Supply LEDs and Connectors for Cisco ASR 1013	2-73
Power Supplies for the Cisco ASR 1001 Router	2-75
Cisco ASR 1001 Router AC Power Supply	2-77
Cisco ASR 1001 Router DC Power Supply	2-77

CHAPTER 3
Cisco ASR 1000 Series Routers Embedded Services Processors 3-79

Cisco ASR 1000-ESP5	3-80
Cisco ASR 1000-ESP10	3-80
Cisco ASR 1000-ESP20	3-81
Cisco ASR 1000-ESP40	3-81
Cisco ASR 1000-ESP100	3-82
Cisco ASR 1000-ESP200	3-82
Cisco ASR 1000-ESP200 and Third Generation Cisco QFP	3-83
Implications of SIP and SPA Slot Mapping	3-84
Features of the Cisco ASR 1000 Series Embedded Services Processors	3-85

CHAPTER 4
Cisco ASR 1000 Series Router SPA Interface Processors (SIPs) 4-89

Cisco ASR 1000 Series SPA Interface Processor	4-90
SPA Interface Processor Slot Numbering	4-92
Cisco ASR 1006 Router and Cisco ASR 1004 Router	4-92
Cisco ASR 1002 Router	4-93
Cisco ASR 1002-F Router	4-94
Cisco ASR 1013 Router	4-95
Cisco ASR 1001 Router	4-97
Cisco ASR 1002-X Router	4-97

CHAPTER 5
Preparing Your Site for Installation 5-99

Prerequisites and Preparation	5-99
Safety Guidelines	5-100

Safety Warnings	5-100
Safety Recommendations	5-101
Compliance Requirements	5-101
Cautions and Regulatory Compliance Statements for NEBS	5-102
Standard Warning Statements	5-103
General Safety Warnings	5-103
Site Planning	5-106
General Precautions	5-106
Site Selection Guidelines	5-107
Site Environmental Requirements	5-107
Physical Characteristics	5-108
Floor Loading Considerations	5-110
Site Power Guidelines	5-110
Electrical Circuit Requirements	5-110
Site Cabling Guidelines	5-111
Asynchronous Terminal Connections	5-112
Interference Considerations	5-112
Rack-Mounting Guidelines	5-114
Precautions for Rack-Mounting	5-114
General Rack Selection Guidelines	5-114
Guidelines for 23 in. (Telco) Racks	5-115
Equipment Rack Guidelines	5-115
Site Planning Checklist	5-116
Preventing Electrostatic Discharge Damage	5-116
Electrical Safety	5-119
Receiving the Cisco ASR 1000 Series Router	5-120
Chassis-Lifting Guidelines	5-121
Tools and Equipment	5-121
Unpacking and Verifying Shipping Contents	5-122
Checking the Shipping Container Contents	5-122
Cisco ASR 1000 Series Router Installation Checklist	5-123

CHAPTER 6

Cisco ASR 1006 Router Overview and Installation	6-125
Cisco ASR 1006 Router Description	6-125
Front View	6-126
Rear View	6-127
Cisco ASR 1006 Router Slot Numbering	6-129
Installation Methods	6-130

General Rack Installation Guidelines	6-130
Guidelines for an Equipment Shelf or Tabletop Installation	6-131
Equipment Shelf or Tabletop Installation	6-132
Rack-Mounting the Cisco ASR 1006 Router	6-134
Verifying Rack Dimensions	6-134
Attaching the Chassis Rack-Mount Brackets	6-135
Chassis Front Rack-Mount Brackets	6-135
Chassis Rear Rack-Mount Brackets	6-136
Installing the Cisco ASR 1006 Router in a Rack	6-138
Two-Post Rack Installation	6-139
Four-Post Rack Installation	6-140
Attaching the Cable-Management Brackets	6-142
Attaching a Chassis Ground Connection	6-143
Recommended Tools and Supplies	6-144
Connecting the Shared Port Adapter Cables	6-145
Connecting the Console and Auxiliary Port Cables	6-146
Connecting the Ethernet Management Port Cable	6-146
Connecting Power to the Cisco ASR 1006 Router	6-147
Power Cords Supported by the Cisco ASR 1006 Router	6-147
Connecting AC Input Power to Cisco ASR 1006 Router	6-148
Connecting DC Input Power to Cisco ASR 1006 Router	6-151
Connecting a Terminal to the Cisco ASR 1000 Series RP Console Port	6-157
Connecting the System Cables	6-159
Auxiliary Connection	6-160

CHAPTER 7

Cisco ASR 1004 Router Overview and Installation	7-161
Cisco ASR 1004 Router Description	7-162
Front View	7-162
Rear View	7-163
Cisco ASR 1004 Router Slot Numbering	7-165
Installation Methods	7-165
General Rack Installation Guidelines	7-166
Guidelines for an Equipment Shelf or Tabletop Installation	7-167
Equipment Shelf or Tabletop Installation	7-168
Rack-Mounting the Cisco ASR 1004 Router	7-169
Verifying Rack Dimensions	7-170
Attaching the Chassis Rack-Mount Brackets	7-170

Chassis Front Rack-Mount Brackets	7-171
Chassis Rear Rack-Mount Brackets	7-171
Installing the Cisco ASR 1004 Router in a Rack	7-173
Two-Post Rack Installation	7-174
Four-Post Rack Installation	7-175
Attaching a Chassis Ground Connection	7-177
Recommended Tools and Supplies	7-178
Attaching the Cable-Management Bracket	7-179
Connecting the Shared Port Adapter Cables	7-181
Connecting the Console and Auxiliary Port Cables	7-181
Connecting the Ethernet Management Port Cable	7-182
Connecting Power to Cisco ASR 1004 Router	7-182
Power Cords Supported by the Cisco ASR 1004 Router	7-184
Connecting AC Input Power to Cisco ASR 1004 Router	7-184
Connecting –48 VDC Input Power to Cisco ASR 1004 Router	7-185
Connecting a Terminal to the Cisco ASR Series 1000 Route Processor Console Port	7-190
Connecting the Network Management and Signal System Cables	7-191
Auxiliary Connection	7-192

CHAPTER 8
Cisco ASR 1002 Router Overview and Installation 8-193

Cisco ASR 1002 Router Description	8-193
Front View	8-194
Rear View	8-195
Cisco ASR 1002 Router Slot Numbering	8-196
Cisco ASR 1002 Router Components	8-197
Cisco Embedded ASR1000-RP1 for Cisco ASR 1002 Router Description	8-197
Cisco Embedded ASR1000-SIP10 and SPAs for Cisco ASR 1002 Router Description	8-197
Cisco ASR1000-ESP5 and ASR1000-ESP10 Description	8-198
Power Supplies in the Cisco ASR 1002 Router	8-199
AC Power Supply for Cisco ASR 1002 Router	8-199
–48 VDC Power Supply for Cisco ASR 1002 Router	8-200
+24 VDC Power Supply for Cisco ASR 1002 Router	8-202
+24 VDC Power System Input for Cisco ASR 1002 Router	8-204
+24 VDC Power System Output for Cisco ASR 1002 Router	8-205
Power Cords Supported by the Cisco ASR 1002 Router	8-206
Installation Methods	8-206
General Rack Installation Guidelines	8-207
Guidelines for an Equipment Shelf or Tabletop Installation	8-208

Equipment Shelf or Tabletop Installation	8-209
Rack-Mounting the Cisco ASR 1002 Router	8-210
Verifying Rack Dimensions	8-211
Attaching the Chassis Rack-Mount Brackets	8-211
Chassis Front Rack-Mount Brackets	8-212
Chassis Rear Rack-Mount Brackets	8-213
Installing the Cisco ASR 1002 Router in a Rack	8-214
Two-Post Rack Installation	8-215
Four-Post Rack Installation	8-216
Attaching the Cable-Management Bracket	8-218
Attaching a Chassis Ground Connection	8-219
Connecting the Shared Port Adapter Cables	8-222
Connecting the Console and Auxiliary Port Cables	8-222
Management Ethernet Port Cable Connection	8-223
Cisco ASR 1002 Router Power Supplies	8-224
Connecting AC Input Power to Cisco ASR 1002 Router	8-225
Connecting –48 VDC Input Power to Cisco ASR 1002 Router	8-227
Connecting Cisco +24 VDC Power Supply	8-230
Connecting a Terminal to the Cisco ASR1000-RP1 Console Port	8-237
Connecting Cables	8-239
Auxiliary Connection	8-239

CHAPTER 9

Cisco ASR 1002-F Router Overview and Installation	9-241
Cisco ASR 1002-F Router Description	9-242
Front View	9-242
Rear View	9-243
Cisco ASR 1002-F Router Slot Numbering	9-244
Cisco ASR 1002-F Router Components	9-245
Cisco Integrated RP and Cisco ASR 1002-ESP-F Description	9-245
Cisco Integrated ASR 1002-SIP10-F and SPA for Cisco ASR 1002-F Router Description	9-248
Power Supplies in the Cisco ASR 1002-F Router	9-249
AC Power Supply for the Cisco ASR 1002-F Router	9-249
DC Power Supply for the Cisco ASR 1002-F Router	9-249
Power Cords Supported by the Cisco ASR 1002-F Router	9-251
Installation Methods	9-251
General Rack Installation Guidelines	9-252
Guidelines for an Equipment Shelf or Tabletop Installation	9-253
Equipment Shelf or Tabletop Installation	9-253

Rack-Mounting the Cisco ASR 1002-F Router	9-255
Verifying Rack Dimensions	9-256
Attaching the Chassis Rack-Mount Brackets	9-256
Chassis Front Rack-Mount Brackets	9-256
Chassis Rear Rack-Mount Brackets	9-257
Installing the Cisco ASR 1002-F Router in a Rack	9-258
Two-Post Rack Installation	9-260
Four-Post Rack Installation	9-261
Attaching the Cable-Management Bracket	9-262
Attaching a Chassis Ground Connection	9-263
Connecting the Shared Port Adapter Cables	9-266
Connecting the Console and Auxiliary Port Cables	9-266
Connecting a Cable to the Management Ethernet Port	9-267
Connecting Power to the Cisco ASR 1002-F Router	9-268
Connecting AC Input Power to the Cisco ASR 1002-F Router	9-270
Connecting DC Input Power to the Cisco ASR 1002-F Router	9-273
Connecting a Terminal to the Cisco Integrated RP Console Port and Auxiliary Port	9-275
Connecting Cables	9-276
Auxiliary Connection	9-277

CHAPTER 10

Cisco ASR 1013 Router Overview and Installation	10-279
Cisco ASR 1013 Router Description	10-279
Front View	10-281
Rear View	10-283
Cisco ASR 1013 Router Power Zones	10-285
Cisco ASR 1013 Router Slot Numbering	10-286
Installation Methods	10-286
General Rack Installation Guidelines	10-286
Guidelines for Equipment Rack Installation	10-288
Attaching the Rear Rack-Mount Brackets	10-289
Rack-Mounting the Cisco ASR 1013 Router	10-291
Verifying Rack Dimensions	10-291
Installing the Cisco ASR 1013 Router in a Rack	10-292
Installing the Chassis Using the Forward Rack-Mount Brackets	10-292
Two-Post Rack Installation	10-296
Four-Post Rack Installation	10-297
Attaching the Cable-Management Bracket	10-299

Attaching a Chassis Ground Connection	10-302
Recommended Tools and Supplies	10-302
Connecting the Shared Port Adapter Cables	10-303
Connecting the Console and Auxiliary Port Cables	10-304
Connecting the Ethernet Management Port	10-305
Connecting Power to the Cisco ASR 1013 Router	10-305
Cisco ASR 1013 Router Power Supply Overview	10-306
Power Cords Supported by the Cisco ASR 1013 Router	10-306
Connecting AC Input Power to Cisco ASR 1013 Router	10-307
Connecting DC Input Power to Cisco ASR 1013 Router	10-309
Connecting a Terminal to the Cisco ASR 1000 Series RP Console Port	10-313
Connecting the System Cables	10-314
Auxiliary Connection	10-314

CHAPTER 11

Cisco ASR 1001 Router Overview and Installation	11-317
Cisco ASR 1001 Router Description	11-317
Cisco ASR 1001 Router Architecture	11-318
Cisco ASR 1001 Router Faceplate Common Components	11-325
Cisco ASR 1001 Chassis Front View	11-326
Cisco ASR 1001 Chassis Rear View	11-326
Cisco ASR 1001 Router Slot Numbering	11-327
Cisco ASR 1001 Router Components	11-327
Cisco Embedded ASR1000-RP1 for Cisco ASR 1001 Router Description	11-328
Cisco Embedded ASR1000-SIP10 and SPAs for the Cisco ASR 1001 Router Description	11-329
Cisco ASR 1001 Router Integrated Daughter Card Description	11-329
Cisco ASR1000-ESP for the Cisco ASR 1001 Router Description	11-329
Power Supplies in the Cisco ASR 1001 Router	11-330
AC Power Supply for Cisco ASR 1001 Router	11-331
–48 VDC Power Supply for Cisco ASR 1001 Router	11-331
Power Cords Supported by the Cisco ASR 1001 Router	11-332
Installation Methods	11-332
General Rack Installation Guidelines	11-333
Guidelines for an Equipment Shelf or Tabletop Installation	11-334
Mounting the Cisco ASR 1001 Router on an Equipment Shelf or Tabletop Installation	11-334
Rack-Mounting the Cisco ASR 1001 Router	11-336
Verifying Rack Dimensions	11-336
Attaching the Chassis Rack-Mount Brackets	11-337
Chassis Front Rack-Mount Brackets	11-337

Installing the Cisco ASR 1001 Router in a Rack	11-338
Two-Post Rack Installation	11-340
Four-Post Rack Installation	11-341
Attaching the Cable-Management Bracket	11-342
Attaching a Chassis Ground Connection	11-343
Recommended Tools and Supplies	11-344
Connecting the Shared Port Adapter Cables	11-346
Connecting the Console and Auxiliary Port Cables	11-346
Management Ethernet Port Cable Connection	11-346
Connecting a Terminal to the Cisco ASR1000-RP1 Console Port	11-347
Connecting Cables	11-347
Auxiliary Connection	11-348
Overview of AC and DC Power Supplies for the Cisco ASR 1001 Router	11-348
Cisco ASR 1001 Router Power Supply Installation	11-348
Installing AC Input Power to Cisco ASR 1001 Router	11-350
Removing AC Power Supply from the Cisco ASR 1001 Router	11-352
Installing DC Input Power on the Cisco ASR 1001 Router	11-354
Wiring the DC Input Power Source	11-355
Removing DC Input Power from the Cisco ASR 1001 Router	11-359

CHAPTER 12

Cisco ASR 1000 Series Routers Power Up and Initial Configuration 12-361

Checking Conditions Prior to System Startup	12-361
Verifying Power Supply Operation	12-362
Powering Up the Cisco ASR 1000 Series Routers	12-363
Verifying the Front Panel LEDs	12-367
Verifying the Hardware Configuration	12-367
Checking Hardware and Software Compatibility	12-367
Configuring the Cisco ASR 1000 Series Routers at Startup	12-367
Using the Console Interface	12-368
Configuring Global Parameters	12-368
Checking the Running Configuration Settings	12-369
Saving the Running Configuration to NVRAM	12-369
Powering Off the Cisco ASR 1000 Series Router Safely	12-370

CHAPTER 13

Removing and Replacing FRUs from the Cisco ASR 1000 Series Routers 13-373

Removing and Replacing Cisco ASR 1000 Series Route Processors	13-373
Removing the Cisco ASR 1000 Series Route Processor from the Cisco ASR 1006, Cisco ASR 1004, and Cisco ASR 1013 Routers	13-374

Replacing the Cisco ASR 1000 Series Route Processor in the Cisco ASR 1006, Cisco ASR 1004, and Cisco ASR 1013 Routers	13-375
Removing and Replacing Cisco ASR 1000 Series Route Processor Internal Hard Drive	13-375
Cisco ASR1000-RP1 Spare Hard Drive Accessory Kit	13-376
Removing and Replacing the Cisco ASR1000-RP1 Module Internal Hard Drive	13-376
Removing the Cisco ASR1000-RP1 Internal Hard Drive	13-376
Replacing the Cisco ASR1000-RP1 Internal Hard Drive	13-380
Removing and Replacing the Cisco ASR1000-RP2 Module Internal Hard Drive	13-381
Removing the Cisco ASR1000-RP2 Internal Hard Drive	13-381
Replacing the Cisco ASR1000-RP2 Internal Hard Drive	13-383
Removing and Replacing the Hard Drive on the Cisco ASR 1002-X Router	13-383
Removing the Hard Drive from the Cisco ASR 1002-X Router	13-384
Replacing the Hard Drive on the Cisco ASR 1002-X Router	13-386
Removing and Replacing the Hard Drive on the Cisco ASR 1001 Router	13-386
Removing the Hard Drive from the Cisco ASR 1001 Router	13-387
Replacing the Hard Drive on the Cisco ASR 1001 Router	13-389
Removing and Replacing the Cisco ASR 1000 Series DIMM Memory Modules	13-389
Removing and Replacing the DIMM Memory Modules on the Cisco ASR 1006 Router and the Cisco ASR 1013 Router	13-390
Removing and Replacing the Cisco ASR1000-RP1 DIMM Memory Modules	13-391
Removing and Replacing the Cisco ASR1000-RP2 DIMM Memory Modules	13-396
Removing the Cisco ASR1000-RP2 DIMMs	13-397
Replacing the Cisco ASR1000-RP2 DIMMs	13-398
Removing and Replacing the Cisco ASR 1001 Router DIMM Memory Modules	13-400
Removing the Cisco ASR 1001 Router DIMMs	13-402
Replacing the Cisco ASR 1001 Router DIMM	13-404
Removing and Replacing the Cisco ASR 1002-X Router DIMM Memory Modules	13-406
Removing the Cisco ASR1002-X Router DIMMs	13-407
Replacing the Cisco ASR1002-X Router DIMMs	13-408
Removing and Replacing Cisco ASR 1000 Router eUSB Devices	13-410
Remove and Replace the eUSB Device on the Cisco ASR 1006 and Cisco ASR 1004 Routers	13-410
Remove and Replace the eUSB Device on the Cisco ASR 1001 Router	13-414
Removing and Replacing Cisco ASR 1000 Series Router 1 GB USB Flash Token Memory Stick	13-417
Minimum Requirements of eUSB Devices Supported on Cisco ASR 1000 Series Routers	13-418
Removing and Replacing Cisco ASR 1000 Series Embedded Service Processors	13-420
Important Notes about Cisco ASR1000-ESP Upgrades	13-420
Removing a Cisco ASR1000-ESP	13-421
Replacing the Cisco ASR1000-ESP	13-421
Removing and Replacing Cisco ASR 1000 Series Router SPAs and SPA Interface Processors	13-423

Electrostatic Discharge Prevention	13-423
Removing the Cisco ASR 1000 SPA Interface Processor	13-425
Replacing the Cisco ASR 1000 SPA Interface Processor	13-425
Removing a Shared Port Adapter from a SIP	13-426
Replacing a Shared Port Adapter in a SIP	13-426
Removing and Replacing the Cisco ASR 1006 Router Power Supplies	13-427
Removing and Replacing a AC Power Supply in Cisco ASR 1006 Router	13-427
Removing the AC Power Supply from Cisco ASR 1006 Router	13-427
Replacing the AC Power Supply in Cisco ASR 1006 Router	13-428
Removing and Replacing a DC Power Supply in Cisco ASR 1006 Router	13-430
Removing the DC Power Supply from Cisco ASR 1006 Router	13-432
Replacing the DC Power Supply in Cisco ASR 1006 Router	13-437
Removing and Replacing the Cisco ASR 1004 Router Power Supplies	13-440
Removing and Replacing an AC Power Supply in Cisco ASR 1004 Router	13-441
Removing the AC Power Supply from Cisco ASR 1004 Router	13-441
Replacing the AC Power Supply in Cisco ASR 1004 Router	13-442
Removing and Replacing a DC Power Supply in Cisco ASR 1004 Router	13-442
Removing the DC Power Supply from the Cisco ASR 1004 Router	13-444
Replacing the DC Power Supply in Cisco ASR 1004 Router	13-446
Removing and Replacing the Cisco ASR 1002 Router Power Supplies	13-447
Removing and Replacing an AC Power Supply in Cisco ASR 1002 Router	13-448
Removing the AC Power Supply from Cisco ASR 1002 Router	13-448
Replacing the AC Power Supply in Cisco ASR 1002 Router	13-449
Removing and Replacing a –48 VDC Power Supply in Cisco ASR 1002 Router	13-451
Removing the –48 VDC Power Supply from Cisco ASR 1002 Router	13-452
Replacing the –48 VDC Power Supply in Cisco ASR 1002 Router	13-454
Removing and Replacing a +24 VDC Power Supply in Cisco ASR 1002 Router	13-456
Removing the +24 VDC Power Supply from Cisco ASR 1002 Router	13-457
Replacing the +24 VDC Power Supply in Cisco ASR 1002 Router	13-458
Removing and Replacing the Cisco ASR 1013 Router Power Supplies	13-465
Removing and Replacing an AC Power Supply in Cisco ASR 1013 Router	13-465
Removing the AC Power Supply from Cisco ASR 1013 Router	13-465
Replacing the AC Power Supply in Cisco ASR 1013 Router	13-467
Removing and Replacing a DC Power Supply in Cisco ASR 1013 Router	13-467
Removing the DC Power Supply from Cisco ASR 1013 Router	13-468
Replacing the DC Power Supply in Cisco ASR 1013 Router	13-471
Removing and Replacing the Cisco ASR 1001 Router Power Supplies	13-473
Installing the AC Power Supply into Cisco ASR 1001 Router	13-475
Removing AC Power Supply from the Cisco ASR 1001 Router	13-477

Installing DC Power Supply into Cisco ASR 1001 Router	13-479
Wiring the DC Input Power Source	13-480
Removing DC Input Power from the Cisco ASR 1001 Router	13-485
Repacking the Router	13-486

APPENDIX A

Cisco ASR 1000 Series Router Specifications A-487

Cisco ASR 1006 Router Specifications	A-487
Cisco ASR 1006 Router Memory and Storage Options	A-488
Cisco ASR 1006 Router Ethernet RJ-45 Port Pinouts	A-488
Cisco ASR 1006 Router MGMT Ethernet Port Pinouts	A-489
Cisco ASR 1006 Router BITS Port Signals and Pinouts	A-489
Cisco ASR 1006 Router Console Port Signals and Pinouts	A-490
Cisco ASR 1006 Router Auxiliary Port Signals and Pinouts	A-490
Cisco ASR 1006 Router DB-25 Pinout Assignments for Alarm Relays	A-490
Cisco ASR 1004 Router Specifications	A-491
Cisco ASR 1004 Router Memory and Storage Options	A-492
Cisco ASR 1004 Router Ethernet RJ-45 Port Pinouts	A-492
Cisco ASR 1004 Router MGMT Ethernet Port Signals and Pinouts	A-492
Cisco ASR 1004 Router Console Port Signals and Pinouts	A-493
Cisco ASR 1004 Router Auxiliary Port Signals and Pinouts	A-493
Cisco ASR 1004 Router BITS Port Signals and Pinouts	A-493
Cisco ASR 1004 Router DB-25 Pinout Assignments for Alarm Relays	A-494
Cisco ASR 1002 Router, Cisco ASR 1002-F Router, and Cisco ASR 1002-X Router Specifications	A-494
Cisco ASR 1002 Router Mgmt Ethernet RJ-45 Port Pinouts	A-496
Cisco ASR 1002 Router Console Port Signals and Pinouts	A-496
Cisco ASR 1002 Router Auxiliary Port Signals and Pinouts	A-497
Cisco ASR 1002 Router BITS Port Signals and Pinouts	A-497
Cisco ASR 1002-X Router BITS Port Signals and Pinouts	A-497
Cisco ASR 1002-X Router BNC GPS Ports	A-498
Cisco ASR 1002-X Router Time of Day Port Pinout	A-498
Cisco ASR 1013 Router Specifications	A-500
Cisco ASR 1013 Router Memory and Storage Options	A-501
Cisco ASR 1013 Router Ethernet RJ-45 Port Pinouts	A-501
Cisco ASR 1013 Router MGMT Ethernet Port Signals and Pinouts	A-501
Cisco ASR 1013 Router Console Port Signals and Pinouts	A-502
Cisco ASR 1013 Router Auxiliary Port Signals and Pinouts	A-502
Cisco ASR 1013 Router BITS Port Signals and Pinouts	A-502
Cisco ASR 1013 Router DB-25 Pinout Assignments for Alarm Relays	A-503
Cisco ASR 1001 Router Specifications	A-503

Cisco ASR 1001 Router Memory and Storage Options A-504

APPENDIX B

Cisco ASR 1000 Series Router Route Processor and Embedded Services Processor Signals and Pinouts B-505

- Cisco ASR 1000-RP1 Pinout Specifications B-505
 - MGMT Ethernet Port Signals and Pinouts B-505
 - BITS Interface Port Signals and Pinouts B-506
 - Console Port Signals and Pinouts B-506
 - Auxiliary Port Signals and Pinouts B-506
- Cisco ASR1000-RP2 Pinout Specifications B-507
 - MGMT Ethernet Port Pinouts B-507
 - BITS/DTI Interface Port Signals and Pinouts B-507
 - Console Port Signals and Pinouts B-508
 - Auxiliary Port Signals and Pinouts B-508
- Cisco ASR1000-ESP40 Console Port Pinout Specifications B-508
- Cisco ASR1000-ESP100 Console Port Pinout Specifications B-509
- Cisco ASR1000-ESP200 Console Port Pinout Specifications B-509

APPENDIX C

Troubleshooting Initial Startup Problems C-511

- Troubleshooting Overview C-511
- Online Troubleshooting Resources C-512
- General Troubleshooting Tips C-512
 - Troubleshooting Using a Subsystem Approach C-513
 - Normal Router Startup Sequence C-513
 - Troubleshooting the Power Subsystem C-514
 - Troubleshooting the Cooling Subsystem C-515
 - Troubleshooting the Shared Port Adapter C-516
- Troubleshooting the Upgrade C-516
- Replacing or Recovering a Lost Password C-519
 - Overview of the Password Recovery Procedure C-519
 - Details of the Password Recovery Procedure C-520
 - Recovering the Password When a Standby RP Is Included in the System C-523

APPENDIX D

MIBs for the Cisco ASR 1001 Router D-525