



nV System Configuration Guide for Cisco ASR 9000 Series Routers, IOS XR Release 26.2.x

First Published: 2023-08-18

Last Modified: 2026-06-09

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2026 Cisco Systems, Inc. All rights reserved.



CONTENTS

PREFACE

Preface vii

Changes to this Document vii

Communications, Services, and Additional Information vii

CHAPTER 1

New and Changed nV System Features 1

nV System Features Added or Modified in IOS XR Release 26.x.x 1

CHAPTER 2

YANG Data Models for nV System Features 3

Using YANG Data Models 3

CHAPTER 3

Configuring the Satellite Network Virtualization (nV) System 5

Prerequisites for Configuration 8

Overview of Satellite nV System 9

Cisco 8000 Series satellite port extenders on Cisco ASR 9000 hosts 10

 Cisco 8000 Series satellite port extender deployment workflow 11

Benefits of Satellite nV System 12

Cisco ASR 9000 Series Router Satellite and nV Hardware Compatibility Matrix 13

Overview of Port Extender Model 14

Satellite System Physical Topology 16

Dual Home Mode 17

 Delayed Switchback for nV Dual Hosts 20

 Enable MD5 authentication for ICCP links in dual home mode 21

Features Supported in the Satellite nV System 22

 Inter-Chassis Link Redundancy Modes and Load Balancing 22

 Bundle interface load-balancing auto modes 22

 Bundle interface load-balancing auto mode platform support and restrictions 23

Satellite Discovery and Control Protocols	24
Satellite Discovery and Control Protocol IP Connectivity	24
ICL Fabric Port Monitoring	24
Dynamic ICL	26
Multiple ICCP Groups for Satellite nV System Network Topologies	27
Satellite nV System Access Port Bundles along with ICL Bundles	28
Use Cases for Satellite nV System Access Port Bundles	28
Port Partitioning	30
BFD over Satellite Interfaces	30
BNG Interoperability	30
Layer-2 and L2VPN Features	31
Layer-3 and L3VPN Features	31
Layer-2 and Layer-3 Multicast Features	31
Multicast IRB	31
Quality of Service	31
Time of Day Synchronization	33
Satellite Chassis Management	33
ARP Redundancy Support for Dual Head Mode	34
Ethernet Link OAM	34
802.3ah Loopback Support on Satellite nV System	34
Native Image and SMU Push Support for Cisco NCS 5000 Series Satellites	35
Native Image and SMU Push Support for Cisco 8000 Series satellite port extenders	36
Support of 10x10G ICLs on Cisco NCS 5000 Series Satellites	36
Support for 40G ICLs on Cisco NCS 5000 Series Satellites	36
Support of ICLs on Cisco 8000 Series satellite port extenders	36
Support for MACsec Sessions on nV Satellite Access Interface	38
Restrictions and Configuration Guidelines of nV Satellite System	38
Restrictions of the Satellite nV System	38
Configure Satellite Interfaces to Use Chunk Resources	41
Restrictions of the Cisco NCS 5000 Series Satellite	43
Configuration guidelines for Cisco 8000 Series satellite port extenders	45
Restrictions of the Cisco 8000 Series satellite port extenders	48
Satellite nV Usability Enhancements	49
nV Satellite Auto Image Upgrade	50

Simplified Access to Satellites	51
MPP Check Skip for Satellite Image Download with Auto IP	52
Implementing a Satellite nV System	52
Defining the Satellite nV System	52
Auto-IP	54
Configuring the Host IP Address	55
Configuring Inter-Chassis Links and IP Connectivity	56
Configuring the Inter-Chassis Links in a Dual Home Mode	58
Configuring the Satellite nV Access Interfaces	60
Configuring the Fabric CFM for L1 Physical ICL	60
Plug and Play Satellite nV Switch Turn up: (Rack, Plug, and Go installation)	62
Synchronous Ethernet (SyncE) Offload in nV System	65
Restrictions of SyncE Offload on the nV System	67
Restrictions of SyncE Offload on the Cisco NCS 5000 Series Satellite	67
Hub-and-Spoke Topology for SyncE Offload	68
Configuring SyncE Offload on Cisco ASR 9000 Series Router Hosts	68
Configuration Examples of SyncE Offload on Cisco ASR 9000 Series Router Hosts	69
Configuration to enable SyncE offload with Cisco NCS 5000 Series Satellite and Cisco 8000 Series Satellite port extenders	71
Minimum Active Links on nV System	74
Soft Minimum Active Links for Dual Home Mode	74
Configuring Soft Minimum Active Links on Dual Home Mode	75
Hard Minimum Active Links for Single Host Mode	75
Configuring Hard Minimum Active Links on Single Host Mode	76
Upgrading and Managing Satellite nV Software	77
Image Upgrade for nV Satellite	77
Prerequisites	79
Installing a Satellite	79
Installing native images and SMUs for Cisco NCS 5000 Series Satellite	80
Install Cisco 8000 Series satellite port extender	82
Install Cisco 8000 Series satellite port extender via update keyword	82
Install Cisco 8000 Series satellite port extender via image reference	83
Verify Cisco 8000 Series satellite port extender configuration	84
Monitoring the satellites	87

Monitoring the Satellite Software	87
Show Commands for Dual Home Mode	93
Monitoring the Satellite Protocol Status	94
Monitoring the Satellite Inventory	97
Monitoring the Satellite Environment	100
Reloading the Satellite and Monitoring DOM Parameters	100
Port Level Parameters Configured on a Satellite	102
Loopback Types on Satellite Ports	103
Configuration Examples for Satellite nV System	103
Satellite System Configuration: Example	103
Satellite Global Configuration	103
ICL (satellite-fabric-link) Interface Configuration	104
Satellite Interface Configuration	104
Satellite Management Using Private VRF	105
Configuration of Satellite using Auto-IP	106
Satellite Configuration with Dual-Homed Hosts	106
Dual-Home for Multiple Satellites with Single Physical ICLs on Both Hosts and Satellites	108
Dual Home Configuration for SAT1	108
Dual Home Configuration for SAT2	108
Configuring nV Satellite Auto Image Upgrade: Example	109
Additional References	109
Image Upgrade for Cisco NCS 500x Satellite from Cisco IOS XR Software Release 6.0.0	109
Related Documents	110
Standards	111
MIBs	111
RFCs	111
Technical Assistance	111

CHAPTER 4

SNMP Components for Satellites	113
Example: Satellite ASR9000v2	113
Example: Satellite NCS5001	115
Example: Satellite Cisco 8000 Series	117



Preface

From Release 6.1.2 onwards, Cisco introduces support for the 64-bit Linux-based IOS XR operating system. However, support for nV Satellite System on the Cisco IOS XR 64-bit operating system is available only from the Release 6.2.1. Extensive feature parity is maintained between the 32-bit and 64-bit environments. Unless explicitly marked otherwise, the contents of this document are applicable for both environments. For more details on Cisco IOS XR 64 bit, refer to the [Release Notes](#) for Cisco ASR 9000 Series Routers, Release 6.1.2 document.

The Preface contains the following sections:

- [Changes to this Document, on page vii](#)
- [Communications, Services, and Additional Information, on page vii](#)

Changes to this Document

This table lists the changes made to this document since it was first published.

Date	Summary
June 2026	Initial release of this document.

Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business results you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions and services, visit [Cisco Marketplace](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

Cisco Bug Search Tool

[Cisco Bug Search Tool \(BST\)](#) is a web-based tool that acts as a gateway to the Cisco bug tracking system that maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. BST provides you with detailed defect information about your products and software.



CHAPTER 1

New and Changed nV System Features

This chapter lists all the features that have been added or modified in this guide. The table also contains references to these feature documentation sections.

- [nV System Features Added or Modified in IOS XR Release 26.x.x, on page 1](#)

nV System Features Added or Modified in IOS XR Release 26.x.x

Feature	Description	Changed in Release	Where Documented
Cisco 8000 Series satellite port extenders on Cisco ASR 9000 hosts	Cisco IOS XR 64-bit operating system supports nV system on these hardware: • Cisco 8011-32Y8L2H2FH • Cisco 8011-4G24Y4H-I Note This guide is first published in IOS XR Release 26.2.x. The guide consolidates nV System functionality supported in earlier releases and includes Cisco 8000 Series satellite port extender support introduced in Release 26.2.1.	Release 26.2.1	Cisco 8000 Series satellite port extenders on Cisco ASR 9000 hosts, on page 10



CHAPTER 2

YANG Data Models for nV System Features

This chapter provides information about the YANG data models for nV System features.

- [Using YANG Data Models, on page 3](#)

Using YANG Data Models

Cisco IOS XR supports a programmatic way of configuring and collecting operational data of a network device using YANG data models. Although configurations using CLIs are easier and human-readable, automating the configuration using model-driven programmability results in scalability.

The data models are available in the release image, and are also published in the [Github](#) repository. Navigate to the release folder of interest to view the list of supported data models and their definitions. Each data model defines a complete and cohesive model, or augments an existing data model with additional XPath. To view a comprehensive list of the data models supported in a release, navigate to the **Available-Content.md** file in the repository.

You can also view the data model definitions using the [YANG Data Models Navigator](#) tool. This GUI-based and easy-to-use tool helps you explore the nuances of the data model and view the dependencies between various containers in the model. You can view the list of models supported across Cisco IOS XR releases and platforms, locate a specific model, view the containers and their respective lists, leaves, and leaf lists presented visually in a tree structure. This visual tree form helps you get insights into nodes that can help you automate your network.

To get started with using the data models, see the *Programmability Configuration Guide*.



CHAPTER 3

Configuring the Satellite Network Virtualization (nV) System

This module describes Satellite Network Virtualization (Satellite nV) system configurations on Cisco ASR 9000 Series Aggregation Services Routers .

Table 1: Feature History for Configuring Satellite System

Release	Modification
Release 26.2.1	Cisco IOS XR 64-bit operating system supports nV system hosted on these hardware: • Cisco 8011-32Y8L2H2FH • Cisco 8011-4G24Y4H-I
Release 25.3.1	Cisco IOS XR 64-bit operating system supports nV system hosted on the following hardware: • ASR 9000 Series 5th Generation 400 Gigabit Ethernet Enhanced Multi-Rate line cards with the following PIDs: • A9K-4HG-FLEX-X-SE • A99-4HG-FLEX-X-SE

Release 7.4.1	Cisco IOS XR 64-bit operating system supports nV system hosted on the following hardware: • ASR 9000 5th Generation High Density Ethernet line cards with the following PIDs: • A9K-4HG-FLEX-SE • A9K-4HG-FLEX-TR • A99-4HG-FLEX-SE • A99-4HG-FLEX-TR • Cisco ASR 9902 Routers • A9903-8HG-PEC, and A9903-20HG-PEC on Cisco ASR 9903 Router
Release 7.3.2	Cisco IOS XR 64-bit operating system supports BNG with nV system hosted on the following hardware: • ASR 9000 5th Generation High Density Ethernet line cards with the following PIDs: • A99-32X100GE-X-SE • A9K-20HG-FLEX-SE • A9K-8HG-FLEX-SE • Cisco ASR 9903 Router
Release 7.3.1	Cisco IOS XR 64-bit operating system supports the nV system on the Cisco ASR 9900 Series 5th Generation line cards with PIDs A99-10X400GE-X-TR, A99-10X400GE-X-SE.
Release 7.1.3	Cisco IOS XR 64-bit operating system supports the nV system on the Cisco ASR 9903 Router fixed board and the A9903-20HG-PEC (Port Expansion Card).
Release 7.1.15	Cisco IOS XR 64-bit operating system supports the nV system on the Cisco ASR 9000 5th Generation High-Density Multi-Rate Line Cards.
Release 7.0.1	Cisco IOS XR 64-bit operating system supports nV system on the Cisco ASR 9000 4th Generation QSFP28 based dense 100GE Line Cards.
Release 6.5.1	Support for SyncE offload on the nV System with the host running Cisco IOS XR 64-bit operating system. Support for the nV system on the Cisco ASR 9901 Router. Support for layer-2 fabric, ring, and chain topologies is deprecated on the Cisco IOS XR 32-bit operating system from this release onwards.

Release 6.6.1	Support for auto upgrade to a reference list of software packages on the Cisco NCS 5000 Series Satellite by specifying an optional reference keyword and reference name in the command: <code>upgrade [on-connect on-first-connect] <reference ref_name></code> .
Release 6.3.1	Support for small-frame-padding feature on satellite nV access interfaces. Support for hard minimum active links feature on bundle ICL of a single host mode. SMU install enhancements for Cisco NCS 5000 Series Satellites such as, installing updates, reference lists and native Cisco NCS 5000 Series Satellite SMUs. Added a keyword <code>on-first-connect</code> to <code>upgrade on-connect</code> command.
Release 6.3.2	Support for Provider Backbone Bridging Ethernet VPN (PBB-EVPN) on nV Satellite access interface bundle over ICL bundle.
Release 6.4.1	Support for MACsec sessions over Cisco ASR 9000v Satellite and Cisco NCS 5000 Series Satellite access interfaces. Support for upto 400 nV satellite access interfaces per NPU of the SE (Services Edge Optimized) variant of Cisco ASR 9000 High Density 100GE Ethernet line cards. Support for 40G ICL between the Cisco NCS 5000 Series Satellite and the Cisco ASR 9000 Series Router Host. Support on Cisco NCS 5000 Series Satellite for 10GE ports to operate at restricted speeds of 10/100/1000 M on qualified optics
Release 6.2.1	nV system basic feature support in hub and spoke topology on the host running Cisco IOS XR 64-bit operating system for Cisco ASR 9000v Satellite and Cisco NCS 5000 Series Satellites

- [Prerequisites for Configuration, on page 8](#)
- [Overview of Satellite nV System, on page 9](#)
- [Cisco 8000 Series satellite port extenders on Cisco ASR 9000 hosts, on page 10](#)
- [Benefits of Satellite nV System, on page 12](#)
- [Cisco ASR 9000 Series Router Satellite and nV Hardware Compatibility Matrix, on page 13](#)
- [Overview of Port Extender Model, on page 14](#)
- [Satellite System Physical Topology, on page 16](#)
- [Dual Home Mode, on page 17](#)
- [Features Supported in the Satellite nV System, on page 22](#)
- [Restrictions and Configuration Guidelines of nV Satellite System, on page 38](#)
- [Satellite nV Usability Enhancements, on page 49](#)
- [Implementing a Satellite nV System, on page 52](#)
- [Synchronous Ethernet \(SyncE\) Offload in nV System, on page 65](#)
- [Minimum Active Links on nV System, on page 74](#)
- [Upgrading and Managing Satellite nV Software, on page 77](#)
- [Configuration Examples for Satellite nV System, on page 103](#)
- [Additional References, on page 109](#)

Prerequisites for Configuration

You must be in a user group associated with a task group that includes the proper task IDs. The command reference guides include the task IDs required for each command. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Before configuring the Satellite nV system, you must have these hardware and software installed in your chassis:

- Hardware (Host):

- Cisco ASR 9000 Series Aggregation Services Routers, the Cisco ASR 9000 High Density 100GE Ethernet line cards, the Cisco ASR 9000 4th Generation QSFP28 based dense 100GE line cards or the Cisco ASR 9000 5th Generation High-Density Multi-Rate line cards as the location of Inter Chassis Links. Cisco ASR 9000 Ethernet Line Cards can co-exist in the Satellite nV System but cannot be used for Satellite ICLs and also with ISM/VSM.

- Hardware (Satellite) :

- Cisco ASR 9000v Satellite (Cisco ASR9000v-V2)
- Cisco NCS 5002 Series Satellite (PID: NCS-5002-ACSR, NCS-5002-FN-BK, NCS-5002-FLT-BK, NCS-5002-FN-FR, NCS-5002-FLT-FR)
- Cisco NCS 5001 Series Satellite (PID: NCS-5001-ACSR, NCS-5001-FN-BK, NCS-5001-FLT-BK, NCS-5001-FN-FR, NCS-5001-FLT-FR)
- Cisco 8000 Series satellite port extenders, Cisco 8011-4G24Y4H-I and Cisco 8011-32Y8L2H2FH. These satellite port extenders are compatible only with the 5th Generation High Density Ethernet Line Cards, Cisco ASR 9903, and Cisco ASR 9902 routers.

The Cisco 8000 Series satellite port extender PIDs available to order on Cisco Commerce Workspace (CCW) are:

- 8011-4G24Y4H-I-SAT: Cisco 8010 with 4x1G Copper, 24x25G, and 4x100G QSFP28 ports
- 801132Y8L2H2FH-SAT: Cisco 8010 with 32x25G, 2x100G QSFP28, and 2x400G QSFP-DD ports

For more information on the supported line cards and router, see [Cisco ASR 9000 Series Router Satellite and nV Hardware Compatibility Matrix](#), on page 13.

- Cisco IOS XR Software Release 6.2.1 or later must be installed on the host.



Note

The Cisco ASR 9000 Series Routers running Cisco IOS XR 64-bit operating system supports the nV Satellite System in hub and spoke topology from Cisco IOS XR Software Release 6.2.1 onwards.

The Cisco ASR 9000 Series Routers running Cisco IOS XR 64-bit operating system supports the Cisco ASR 9000 High Density 100GE Ethernet line cards, the Cisco ASR 9000 4th Generation QSFP28 based dense 100GE line cards, the Cisco ASR 9000 5th Generation High-Density Multi-Rate Line Cards.

For more information on other hardware requirements and list of TMG optics supported, see *Cisco ASR 9000 Series Aggregation Services Router Hardware Installation Guide* and *Cisco ASR 9000 Series Aggregated Services Router Satellite Systems Installation Guide*.

Overview of Satellite nV System

The Cisco ASR 9000 Series Router Satellite Network Virtualization (nV) service or the Satellite Switching System enables you to:

- configure a topology in which one or more satellite switches complement one or more Cisco ASR 9000 Series routers, to collectively realize a single virtual switching system,
- switch satellite under the management control of the routers,
- perform the complete configuration and management of the satellite chassis and features through the control plane and management plane of the Cisco ASR 9000 Series Router, which is referred to as the host, and



Note Cisco ASR 9006, Cisco ASR 9010, Cisco ASR 9901, Cisco ASR 9903, Cisco ASR 9904, Cisco ASR 9906, Cisco ASR 9910, Cisco ASR 9912, Cisco ASR 9922 Series Routers with Modular Services Line Card can also be used as hosts in the Satellite nV System.

Interconnection between the Cisco ASR 9000 Series Router and its satellites is through standard Ethernet interfaces.

In general, the type of interface used on the host is decided on the basis of the satellite device used as shown in the figure.



Note 1-Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet and 100-Gigabit Ethernet interfaces can be used as ICL ports. The Cisco ASR 9000 High Density 100GbE Ethernet line cards support 1GbE, 10GbE, 40GbE and 100GbE ICL ports. The Cisco ASR 9000 4th Generation QSFP28 based dense 100GbE line cards and the Cisco ASR 9000 5th Generation High-Density Multi-Rate line cards support 10GbE and 100GbE ICL ports.



Note With the Cisco NCS 5000 Series Satellite, only 100G ICL is supported from Cisco IOS XR Software Release 6.0.0 whereas even 10GigE dynamic ICL is supported from Cisco IOS XR Software Release 6.0.1.

The Cisco NCS 5000 Series Satellites support 40G ICL from Cisco IOS XR Software Release 6.4.1.




Note From Cisco IOS XR Software Release 26.2.1 onwards, the Cisco 8000 Series satellite port extenders support:

- 10GbE, 100GbE, and 400GbE Inter-Chassis Link (ICL) speed.
- 1GbE, 10GbE, and 25GbE access port speed.

For more information on supported speeds, see [Support of ICLs on Cisco 8000 Series satellite port extenders, on page 36](#). For information on Cisco 8000 Series satellites with ASR 9000 as host, see [Cisco 8000 Series satellite port extenders on Cisco ASR 9000 hosts, on page 10](#).

Figure 1: Cisco ASR 9000 Series Router nV Switching System

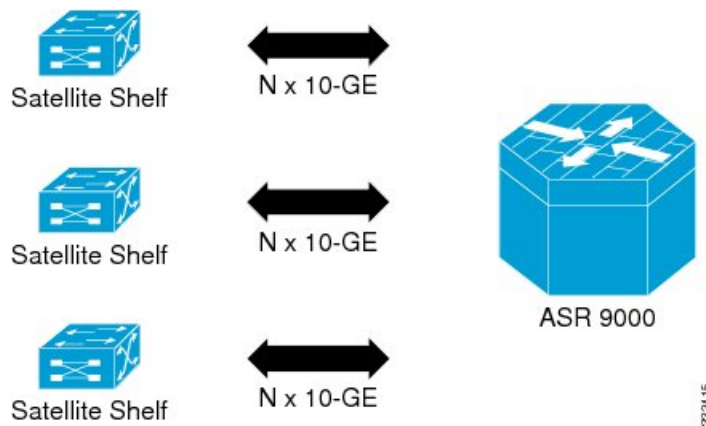

Note Though the above figure shows Nx10GigE links, Satellite nV System also supports Nx1GigE, Nx100GigE, and Nx400GigE links.

This type of architecture can be realized in a carrier Ethernet transport network, with the satellite switches used as either access switches, or pre-aggregation and aggregation switches. These switches feed into an edge router, such as the Cisco ASR 9000 Series Router where more advanced Layer 2 and Layer 3 services are provisioned. The network topology depicted in the figure is called the Hub and Spoke network topology.

You can also utilize this model in a Fiber To The Business (FTTB) network application, where business internet and VPN services are offered on a commercial basis. Further, it can also be used in other networks, such as wireless or Radio Access Network (RAN) backhaul aggregation networks.

The Cisco ASR 9000 Series Router Satellite Network Virtualization (nV) service or the Satellite Switching System uses Secure File Transfer Protocol (SFTP) for transferring images and showtech files.

Cisco 8000 Series satellite port extenders on Cisco ASR 9000 hosts

Service providers and large-scale networks often need to extend access and aggregation capabilities closer to the edge while maintaining centralized control. The Cisco 8011-32Y8L2H2FH and Cisco 8011-4G24Y4H-I

satellite port extenders address this requirement by allowing a Cisco ASR 9000 Series router host to manage Cisco 8000 Series satellite port extender platforms as part of the nV system.

Starting from Cisco IOS XR Release 26.2.1, the Cisco ASR 9000 Series router:

- supports the Cisco 8011-32Y8L2H2FH and Cisco 8011-4G24Y4H-I as satellite port extenders, and
- provides flexible high-speed connectivity, expand deployment options, and simplify network operations through centralized management from the host router.

To deploy these satellite port extenders, you must verify platform support, connect the supported fabric links, configure the satellite port extenders and host interfaces, install the required software, and validate operational status.

Use Case

Use Cisco 8000 Series satellite port extenders when you want to extend Cisco ASR 9000 services to remote access or aggregation locations without deploying a full-featured router at each site. The host router manages the satellite port extender interfaces and services, helping reduce operational complexity while still providing scalable port density and high-speed access.

These are the benefits of using Cisco 8000 Series satellite port extenders on a Cisco ASR 9000 hosts:

- Extends Cisco ASR 9000 services closer to the network edge.
- Provides centralized configuration and management from the host router.
- Supports flexible port-speed options for different deployment needs.
- Helps scale access and aggregation efficiently.

Cisco 8000 Series satellite port extender deployment workflow

Summary

The key components involved in the Cisco 8000 Series satellite port extender deployment are:

- Cisco ASR 9000 Series Router host - the central device that manages the satellite.
- Cisco 8000 Series satellite port extender - the remote satellite port extender device, Cisco 8011-32Y8L2H2FH and Cisco 8011-4G24Y4H-I. These satellite port extenders are compatible only with the 5th Generation High Density Ethernet Line Cards.

These are the main configuration elements involved in the Cisco 8000 Series satellite port extenders deployment:

- Satellite ID — uniquely identifies the satellite port extender on the host
- PID / satellite type — identifies the satellite model
- Serial number — used to bind the configured satellite to the physical device
- Management IP address — used during onboarding or satellite communication where applicable
- Inter-Chassis Links (ICLs) / fabric links — physical links between the ASR 9000 host and the satellite port extender
- Remote ports / access ports — satellite ports used for network services

- Software image / SMUs — required to install or upgrade the satellite port extender software
- Image reference or update method — the installation method used for software deployment
- Redundancy configuration — used in dual home mode deployments
- Port mode / speed configuration — applicable only on Cisco 8011-32Y8L2H2FH

Workflow

To deploy the Cisco 8011-32Y8L2H2FH or Cisco 8011-4G24Y4H-I as satellite port extenders, the process includes these tasks:

1. Verify software and hardware support for the host and satellite port extenders.
2. Identify the satellite PID, satellite ID, serial number, and management IP address.
3. Plan the Inter-Chassis Link (ICL) ports and access port usage. For more information, see [Support of ICLs on Cisco 8000 Series satellite port extenders, on page 36](#).
4. For Cisco 8011-32Y8L2H2FH, determine the required port mode and speed configuration. For more information, see [Support of ICLs on Cisco 8000 Series satellite port extenders, on page 36](#).
5. Connect the satellite to the Cisco ASR 9000 host by using the supported ICLs and enable the nV satellite port extender configuration, such as satellite ID, satellite type, and the serial number on the host router.
6. Configure the satellite ICLs and remote ports.
7. Install or upgrade the satellite software by using either the update method or the image reference method. For more information, see [Install Cisco 8000 Series satellite port extender, on page 82](#).
8. Configure redundancy if dual home mode is required. For more information, see [Satellite Configuration with Dual-Homed Hosts, on page 106](#).
9. Verify that the port extender device is discovered and operational. For more information, see [Verify Cisco 8000 Series satellite port extender configuration, on page 84](#).

For more information on feature support, see [Features Supported in the Satellite nV System](#).

Benefits of Satellite nV System

The Cisco ASR 9000 Series satellite nV system offers these benefits:

1. **Extended port scalability and density** - You can create a virtual line card with more than 400 physical Gigabit Ethernet ports. There is a significant increase of Ethernet port density in the resulting logical Cisco ASR 9000 Series Router. For example, a single 24-port Ten Gigabit Ethernet line card on the Cisco ASR 9000 Series Router could integrate up to 24 satellite switches each with 44 Gige ports; this results in an effective port density of 1056 Gigabit Ethernet ports for each Cisco ASR 9000 Series Router line card slot. In other configurations, even higher port density can be achieved. This is beneficial because the Cisco ASR 9000 Series Router has a per-slot non blocking capacity of up to 400 Gbps (with appropriate RSPs) and there is no other way of physically fitting hundreds of Gigabit ethernet ports/ SFPs on the face plate of a single Cisco ASR 9000 Series line card. As a result, in order to utilize the full capacity of an Cisco ASR 9000 Series line card, it is necessary to physically separate out the ethernet ports, while maintaining logical management control. This would appear as if all ports were physically on a single large line card of the Cisco ASR 9000 Series Router.



Note Port scalability can be achieved for 10GigE access ports and 100GigE uplinks using the Cisco NCS 5000 Series satellites .

2. **Reduced cost** - All the edge-routing capabilities and application features of the Cisco IOS XR Software are available on low cost access switches.
3. **Reduced operating expense** - You can upgrade software images, and also manage the chassis and services from a common point. This includes a single logical router view, single point of applying CLI or XML interface for the entire system of switches, a single point of monitoring the entire system of switches and a single point of image management and software upgrades for the entire system.
4. **Enhanced feature consistency** - All the features on the regular GigE ports and 10GigE ports of Cisco ASR 9000 Series Router are also available on the access ports of a satellite access switch in a functionally identical and consistent manner. The typical application of a satellite system would be in the access and aggregation layers of a network. By integrating the access switches along with the aggregation or core switch, you can ensure that there are no feature gaps between the access switch and the aggregation or core switch. All features, such as carrier ethernet features, QoS and OAM, function consistently, from access to core, because of this integrated approach.
5. **Improved feature velocity** - With the satellite solution, every feature that is implemented on the Cisco ASR 9000 Series Router becomes instantly available at the same time in the access switch, resulting in an ideal feature velocity for the edge switch.
6. **Better resiliency** - The nV satellite solution enables better multi-chassis resiliency, as well as better end-to-end QoS. For more information on QoS capabilities, see *Cisco ASR 9000 Series Aggregation Services Router QoS Configuration Guide* .

Cisco ASR 9000 Series Router Satellite and nV Hardware Compatibility Matrix

The following table lists the IOS XR Satellite nV hardware compatibility matrix.

Table 2: IOS XR Satellite nV Hardware Compatibility Matrix

Line Cards / Chassis / Port Expansion Cards	Cisco ASR 9000v Satellite Supported Version	Cisco NCS 5000 Series Satellite Supported Version	Cisco 8000 Series Satellite Port Extender Supported Version
A99-32X100GE-X-SE	7.1.15	7.1.15	26.2.1
A99-32X100GE-X-TR	7.1.15	7.1.15	26.2.1
A9K-20HG-FLEX-SE	7.1.15	7.1.15	26.2.1
A9K-20HG-FLEX-TR	7.1.15	7.1.15	26.2.1
A9K-8HG-FLEX-SE	7.1.15	7.1.15	26.2.1
A9K-8HG-FLEX-TR	7.1.15	7.1.15	26.2.1


Line Cards / Chassis / Port Expansion Cards	Cisco ASR 9000v Satellite Supported Version	Cisco NCS 5000 Series Satellite Supported Version	Cisco 8000 Series Satellite Port Extender Supported Version
ASR-9903	7.1.3	7.1.3	26.2.1
A9903-20HG-PEC	7.1.3	7.1.3	26.2.1
A9903-8HG-PEC	7.4.1	7.4.1	26.2.1
A99-10X400GE-X-TR	-	7.3.1	26.2.1
A99-10X400GE-X-SE	-	7.3.1	26.2.1
A9K-4HG-FLEX-SE	7.4.1	7.4.1	26.2.1
A9K-4HG-FLEX-TR	7.4.1	7.4.1	26.2.1
A99-4HG-FLEX-SE	7.4.1	7.4.1	26.2.1
A99-4HG-FLEX-TR	7.4.1	7.4.1	26.2.1
ASR-9902	7.4.1	7.4.1	26.2.1
A9K-4HG-FLEX-X-SE	25.3.1	-	26.2.1
A99-4HG-FLEX-X-SE	25.3.1	-	26.2.1

Overview of Port Extender Model

In the Port Extender Satellite switching system also called as Hub and Spoke model, a satellite switch is attached to its host through physical ethernet ports.

The parent router, Cisco ASR 9000 Series Router is referred to as the host in this model. From a management or a provisioning point of view, the physical access ports of the satellite switch are equivalent to the physical ethernet ports on the Cisco ASR 9000 Series Router. You do not need a specific console connection for managing the Satellite Switching System, except for debugging purposes. The interface and chassis level features of the satellite are visible in the control plane of Cisco IOS XR software running on the host. This allows the complete management of the satellites and the host as a single logical router.

Figure 2: Port Extender Satellite Switching System

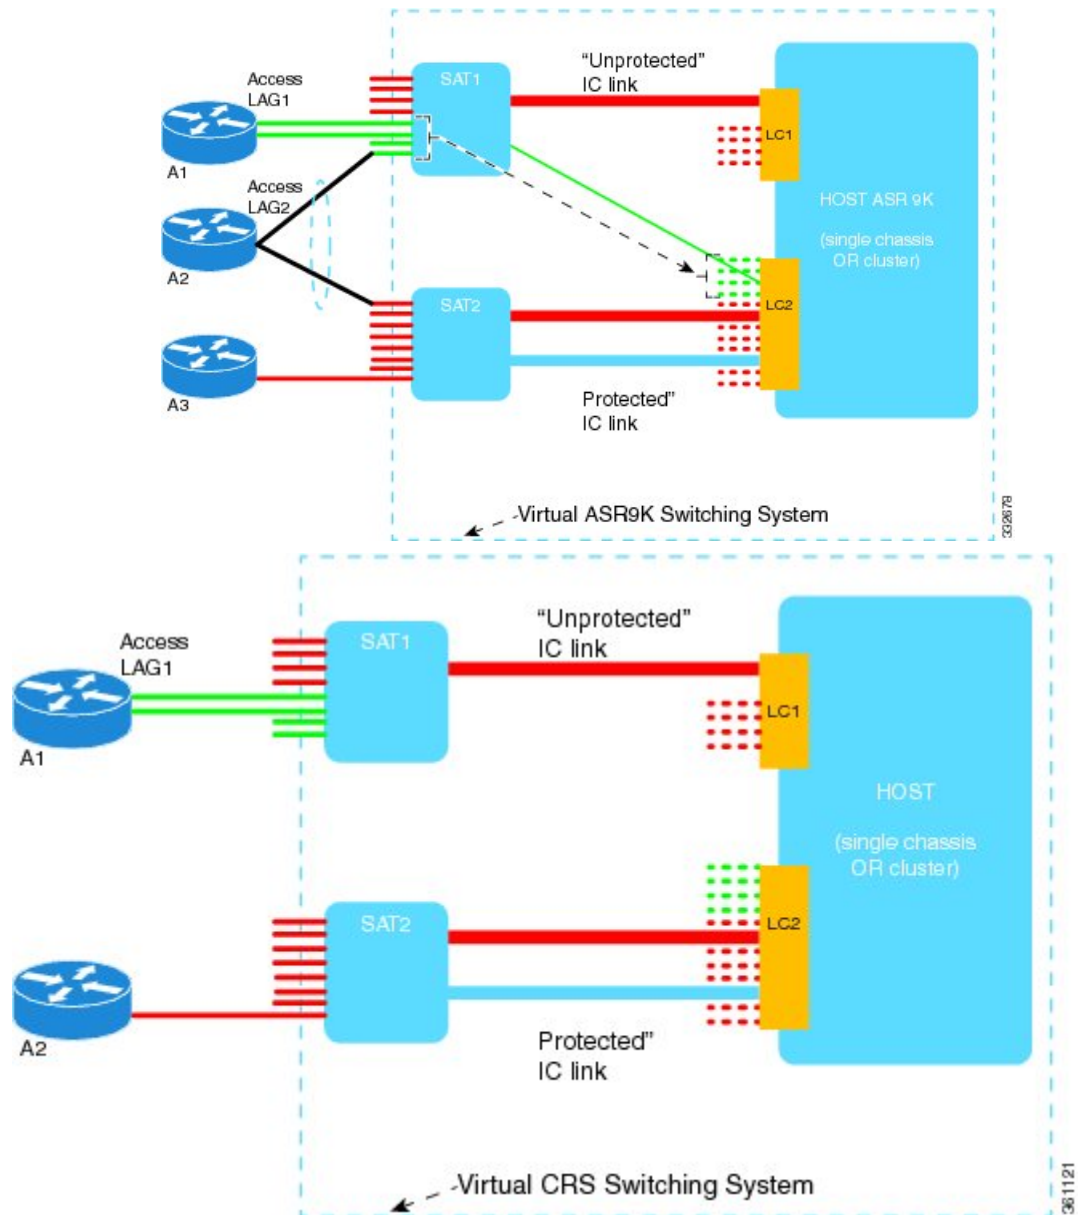

In this model, a single Cisco ASR 9000 Series Router hosts two satellite switches, SAT1 and SAT2, to form an overall virtual Cisco ASR 9000 switching system; represented by the dotted line surrounding the Cisco ASR 9000 Series Router, SAT1, and SAT2 in the Figure.

This structure effectively appears as a single logical Cisco ASR 9000 Series Router to the external network. External access switches (A1, A2 and A3) connect to this overall virtual switch by physically connecting to SAT1 and SAT2 using normal ethernet links. The links between the satellite switches and the Cisco ASR 9000 Series Router are ethernet links referred to as the Inter-Chassis Links (ICL). The Cisco ASR 9000 Series Router is referred to as the Host.



Note SAT1, SAT2, and the host Cisco ASR 9000 Series Router need not be located in the same geographic location. This means that the ICLs need not be of nominal length for only intra-location or intra-building use. The ICLs may be tens, hundreds, or even thousands of miles in length, thereby creating a logical satellite switch spanning a large geography.

Satellite System Physical Topology

The satellite nV system supports Hub and Spoke network topology in single and dual home modes.

Hub and Spoke network topology (or the port extender satellite switching system) is the basic topology for Satellite nV system and is covered in the section [Overview of Port Extender Model, on page 14](#). Dual Home, the Advanced Satellite nV network mode is covered in the section [Dual Home Mode, on page 17](#).

Hub and Spoke network topology allows a physical Ethernet MAC layer connection from the satellite to the host. This can be realized using a direct Ethernet over Fiber or Ethernet over Optical transport (such as Ethernet over a SONET/ SDH/ CWDM/ DWDM network).

This topology also allows a satellite switch to geographically be at a different location, other than that of the host. There is no limit set for the distance, and the solution works even when the satellite is placed at a distance of tens, hundreds, or even thousands of miles from the host.



Note For tunable DWDM optics, the same wavelength needs to be configured on both host and the satellite.

For the ASR9000v series satellite, if this is the first ICL, then the following CLI command should be used from a direct console connection on the ASR9000v series satellite to set the wavelength channel number on the satellite side:

```
test dwdm wavelength set port_number_as_on_faceplate wavelength_channel_number
```

For subsequent ICLs, the satellite can be accessed via telnet from the host to configure this command for those ICLs.

For ASR9k host side configuration, please refer to "Configuring Dense Wavelength Division Multiplexing Controllers" chapter in the *Interface and Hardware Component Configuration Guide for Cisco ASR 9000 Series Routers*.




Note Hub and Spoke topology with single and dual home modes use untagged LLC SNAP packet encapsulation for SDAC Discovery protocol and untagged TCP/TLS for SDAC control protocol packets. Once the satellite is discovered and connected, the data packets are then encapsulated in 802.1ad between the ASR9000 host and the nV satellite.

Dual Home Mode

In the dual home mode, two hosts are connected to a satellite through the Satellite Discovery And Control (SDAC) Protocol. The SDAC Protocol provides the behavioral, semantic, and syntactic definition of the relationship between a satellite device and its host.

Both these dual-homed hosts act in the active/standby mode for the satellite. The standby host takes control of the satellite only when the active host is down. The two hosts can leverage the ICCP infrastructure to provide redundant Layer 2 and Layer 3 services for Satellite Ethernet interfaces. The network traffic is switched through the active host. In case of connection loss to the active host due to various types of failure such as cut cable and host or client connection interface failure, the standby host becomes the active host and the active host becomes the new standby host. The hosts communicate with each other using ORBIT/ICCP protocols. The Satellite Discovery and Control (SDAC) session is established from both the active and standby hosts, and it is only the traffic flows that are in the active/standby mode.

Figure 3: Dual Home Mode Architecture

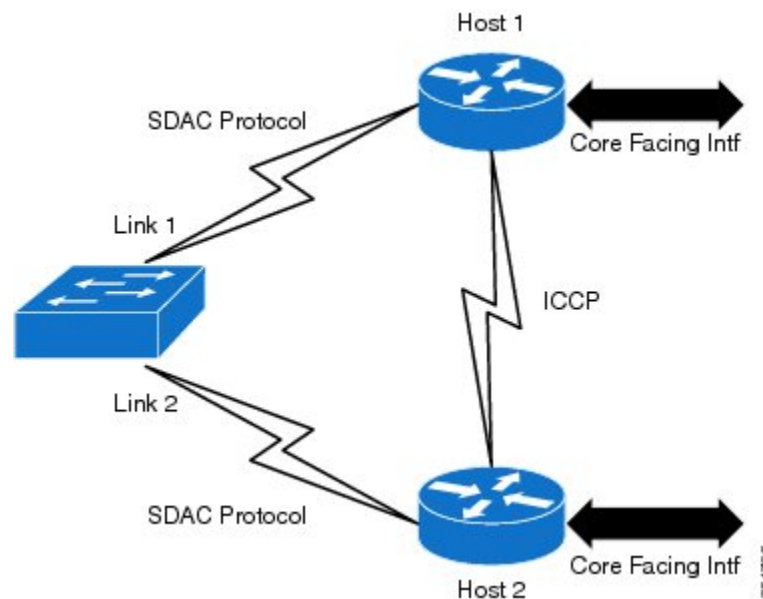

Features of the Dual Home Mode

These are some of the enhanced features offered by the dual home mode:

- **Shared control for chassis functionality:** Chassis control functionality which includes software upgrade, chassis reload, and environment monitoring is completely shared by all hosts connected to the Satellite. Both the hosts get equal access to the information, and have full control of any available actions. As a result, a disruptive change initiated by one host, such as an upgrade is noticed by the other host as well. This means that there is no segregation of the chassis functionality and provides multiple views to the same information.
- **Active/Standby determination:** Active/Standby determination is controlled by the hosts. They exchange the pertinent information through ORBIT protocol, which includes electing a priority selection algorithm to use. This algorithm determines the factors that are taken into account when calculating priority information. The hosts then each send a single numerical priority value to the Satellite. The Satellite only picks the lowest-host priority value, and forwards data to that host. Independently, the hosts make the

same determination, and the traffic flows bi-directionally between the Active host and the Satellite. The hosts take a number of parameters into account when calculating the priority value, including the user-configured priority, from the host to the Satellite, and a tie-break of the chassis MAC for each host.

Cisco IOS XR Software uses these parameters to calculate the priority, where each item is more important than any of the subsequent ones. This means that the subsequent parameters are only taken into account, if the higher-priority items are identical across the two hosts.

- **Connectivity** – Indicates whether the Host and Satellite can currently exchange data.
- **PE isolation** – Indicates that if the PE is isolated, then it defers to the other host.
- **Minimum Links** – Indicates that if the number of active links is less than the configured value in bundled ICL, then it defers to the other host. For more information, see [Soft Minimum Active Links for Dual Home Mode, on page 74](#).
- **Configured Priority** – This is as early as possible to allow the greatest flexibility for the operator.



Note

The host priority switchover functionality does not function when one of the hosts is running an IOS XR release older than 6.1.x and the other host is running 6.1.x or later software releases. In such cases, you must disconnect the host running the older IOS XR release from the satellites. After a successful disconnection, the satellites switch over to the remaining hosts. You can also upgrade the disconnected host to the latest software release.

- **Parity of the Satellite ID** – This is used as a late tie breaker to provide some load balancing across two Hosts with numerous hub-and-spoke Satellites, in which the even-numbered Satellites prefer one host, while the odd-numbered Satellites prefer the other host.

On a tie-breaker of all the previous priorities, it falls back to the Primary host, which is the one with the lowest chassis MAC address based on byte size.

- **Support for seamless Split Brain handling:** A Split Brain is a condition in which the two hosts are no longer able to communicate with each other, but each of them can still communicate with the Satellite device. This scenario can be hazardous, because the devices can reach different conclusions, resulting in traffic loss, or loops and broadcast storms.

The Satellite protocol has these features to cope with such a situation:

- When connected to each other, the two hosts publish a shared System MAC. This allows the Satellites to recognize probes from what appear to be different hosts, but in fact come from a paired set of hosts.
- Whenever a host-to-host connection is lost, each peer publishes the Chassis MAC as the System MAC. This operation is seamless and does not require a reset of the state machines, and hence causes no traffic loss. This allows the Satellite to react, most likely by dropping its connection to the standby host.
- Whenever the connection is restored, the hosts again start publishing the System MAC seamlessly and allowing the Satellite to restore functionality to the standby host.
- If the host-to-host connection is lost while the host is PE-isolated, it immediately drops discovery to the satellite. This ensures that the satellite uses the host with an available path to the core, if one exists.

- **Separate records of interface counters of satellite access ports on either host:** - The SDAC protocol that runs between the hosts and satellite reports only the difference in statistics to each host, that is, the number of packets/bytes since the last update. Clearing the counters on either host clears only the local copy of the statistics of the satellite access ports. It doesn't update the interface counters on the satellite itself and the other host won't get notified that the counters have been reset on the peer. So, it's expected that these counters may be different on each host if you have cleared the counters at different times or if the host-to-satellite connections came up at different times.

To clear the satellite interface counters on the host, execute the command **clear counters** on the host router.

To view the interface counters of satellite access ports, execute the command **show interface satellite-access-port** on the host router.

After clearing counters on Host 1, the statistics for satellite access ports on both hosts are different because only the local copy of the satellite interface counters on Host 1 got reset.

On Host 1:

```
Router#clear counters
Clear "show interface" counters on all interfaces [confirm]
Router#show int GigabitEthernet160/0/0/0
GigabitEthernet160/0/0/0 is up, line protocol is up
  Interface state transitions: 3
  Hardware is GigabitEthernet/IEEE 802.3 interface(s), address is 8478.ac07.6155 (bia
8478.ac07.6155)
  Internet address is 10.10.1.1/24
  MTU 1514 bytes, BW 1000000 Kbit (Max: 1000000 Kbit)
    reliability 255/255, txload 190/255, rxload 127/255
  Encapsulation ARPA,
  Full-duplex, 1000Mb/s, SX, link type is force-up
  output flow control is off, input flow control is off
  Carrier delay (up) is 100 msec, Carrier delay (down) is 100 msec
  loopback not set,
  Last link flapped 23:16:57
  ARP type ARPA, ARP timeout 04:00:00
  Last input 00:00:00, output 00:00:00
  Last clearing of "show interface" counters 00:00:04
  5 minute input rate 499313000 bits/sec, 61311 packets/sec
  5 minute output rate 748970000 bits/sec, 91966 packets/sec
    327104 packets input, 332990972 bytes, 0 total input drops
    0 drops for unrecognized upper-level protocol
    Received 0 broadcast packets, 1 multicast packets
      0 runts, 0 giants, 0 throttles, 0 parity
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
    490655 packets output, 499485772 bytes, 0 total output drops
    Output 0 broadcast packets, 163552 multicast packets
    0 output errors, 0 underruns, 0 applique, 0 resets
    0 output buffer failures, 0 output buffers swapped out
    0 carrier transitions
```

Satellite access port counters on Host 2 are not reset and so different from the values on Host 1:

On Host 2:

```
Router#show int GigabitEthernet160/0/0/0
GigabitEthernet160/0/0/0 is up, line protocol is up
  Interface state transitions: 3
  Hardware is GigabitEthernet/IEEE 802.3 interface(s), address is 8478.ac07.6155 (bia
8478.ac07.6155)
  Internet address is 10.10.1.1/24
  MTU 1514 bytes, BW 1000000 Kbit (Max: 1000000 Kbit)
    reliability 255/255, txload 191/255, rxload 127/255
  Encapsulation ARPA,
```

```

Full-duplex, 1000Mb/s, SX, link type is force-up
output flow control is off, input flow control is off
Carrier delay (up) is 100 msec, Carrier delay (down) is 100 msec
loopback not set,
Last link flapped 23:17:03
ARP type ARPA, ARP timeout 04:00:00
Last input 00:00:00, output 00:00:00
Last clearing of "show interface" counters 02:32:13
5 minute input rate 499495000 bits/sec, 61333 packets/sec
5 minute output rate 749243000 bits/sec, 92000 packets/sec
  541290577 packets input, 551031306258 bytes, 0 total input drops
    0 drops for unrecognized upper-level protocol
  Received 0 broadcast packets, 2628 multicast packets
    0 runts, 0 giants, 0 throttles, 0 parity
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
  807585148 packets output, 822119157464 bytes, 0 total output drops
  Output 0 broadcast packets, 269196783 multicast packets
  0 output errors, 0 underruns, 0 applique, 0 resets
  0 output buffer failures, 0 output buffers swapped out
  0 carrier transitions

```

Delayed Switchback for nV Dual Hosts

In a highly scaled dual host nV system, a switchback to the original active host (after it is back online) can sometimes lead to traffic outages if the switchback happens before that host is ready to forward traffic. The delayed switchback feature sets a hold-time, which is the duration in seconds a higher-priority standby device that has just started waits, before preempting the current active host. Before allowing a switchover to the active host, the delayed switchback feature checks whether the current standby host pending switchover has met the following criteria:

- Creation of satellite port instances and application of basic user configuration on the satellite ports in the hardware forwarding path on the host that is to take up the active role (This does not include the verification of access port feature programming in that hardware.)
- Full synchronization of information with the satellites that would failover, to minimize the chances of any outage post failover
- Hold timer of 5 minutes to allow for the programming of related features that set up the overall forwarding path

The delayed switchback feature is primarily useful when switchback needs to be delayed after a host has reloaded and its various modules are still initializing. Also, in a scenario where the satellite is discovered by one host for which another host acts as the active host and successfully forwards traffic, delayed switchback helps ensure that the redundancy mechanism of dual host failover does not end up causing traffic outages by a premature failover.



Note

- Even when the partner device is unable to forward traffic and cannot continue as an active host, a switchover can still occur.
- For ICL partitioned systems, the delayed switchback is guaranteed to consider only one partition. Issues in forwarding path for remaining partitions may not be considered for the hold timer.
- Currently, the feature applies only at a per-satellite level.

You can use the **show nv satellite redundancy** command to check if host is active or standby, figure out priorities for the local and partner device and understand different priority levels.

For details of this command, see the *Cisco ASR 9000 Series Aggregation Services Router nV System Command Reference*.

Enable MD5 authentication for ICCP links in dual home mode

Use this procedure to configure MD5 password verification of ICCP messages sent between hosts in dual home deployments by using the **neighbor password** command.

Procedure

Step 1 Enter the global configuration mode on the router.

Example:

```
Router# configure
```

Step 2 Enter MPLS LDP configuration mode.

Example:

```
Router(config)# mpls ldp
```

Step 3 Configure the password for the LDP neighbor by using the neighbor's IP address in the format *partner IP>:0*. Specify whether the password is clear text or encrypted.

- Use the **neighbor partner IP:0 password clear password** command to specify a clear-text password.

```
Router(config-ldp)# neighbor 10.20.20.20:0 password clear abc
```

- Use the **neighbor partner IP:0 password encrypted encrypted-password** command for an encrypted password.

```
Router(config-ldp)# neighbor 10.20.20.20:0 password encrypted 13061E010803
```

Step 4 Exit the configuration mode.

Example:

```
Router(config-ldp)# end
```

Step 5 Verify the neighbor configuration and session status.

Example:

```
Router# show mpls ldp neighbor 10.20.20.20 detail
```

Step 6 Optional: Use the **show mpls ldp neighbor partner IP password current** command to check the password status for the neighbor.

- The password must be configured on both LDP neighbors with matching values for the session to establish successfully.
- The password is used to generate and verify MD5 checksums on TCP messages between the neighbors.

Features Supported in the Satellite nV System

This section provides details of the features of a satellite system.

Inter-Chassis Link Redundancy Modes and Load Balancing

The Cisco ASR 9000 Series Satellite system supports these redundancy modes:

- **Non-redundant inter-chassis links mode** - In this mode, there is no link level redundancy between inter-chassis links of a satellite.
- **Redundant inter-chassis links mode** - In this mode, the link level redundancy between inter-chassis links are provided using a single link aggregation (LAG) bundle.

In the redundant ICL mode, the host device load-balances the host to satellite traffic between the members of the ICL bundle using a simple modulo of access port number and number of active ICL bundle member links.

The satellite devices use a similar hashing function to load-balance satellite to host traffic between the members of the ICL bundle.

Each device independently implements the hash function to pin the access ports to the ICL member links for a traffic direction. L2 or L3 header contents from the packet are not used for flow based hashing of the access-port to the ICL bundle member links. This ensures that all packets use a single ICL for a given satellite access-port per direction. Although, each device might pick a different member for egress as they independently implement the hash function. As a result, the actions applied for QoS and other per-direction features still consider all the packets as belonging to a single physical port.

In order to find out the ICL bundle member link to which a given satellite access port is pinned to, check the **Base Interface** in the show command, **show sits interface satellite-access-port**

```
Router# show sits interface tenGigE 600/0/0/70

Interface Name           : TenGigE600/0/0/70
Interface IFHandle       : 0x00002ce0
Base Interface           : HundredGigE0/3/0/4
Base Interface IFHandle  : 0x0a0003c0
LAG Hash Index           : 72
Published Base interface : HundredGigE0/3/0/4
Published Base ifh       : 0x0a0003c0
Published LAG Hash       : 72
Sat Interface State in DB: Caps Publish Success
```



Note If a satellite system is operating in redundant ICL mode, then Ethernet OAM features are not supported on the access ports of that satellite.

For more details on QoS application and configuration on ICLs, see *Cisco ASR 9000 Series Aggregation Services Router Modular Quality of Service Configuration Guide*.

Bundle interface load-balancing auto modes

Bundle interface load-balancing auto mode is a traffic control feature that

- assigns satellite-connected customer traffic from each access port to a fixed host NPU or line card for predictable path selection,
- overrides traditional dynamic, flow-based load sharing by enforcing static member selection based on configuration
- ensures operational compliance with host policing mechanisms and maintains service-level agreements in scalable deployments, and
- is enabled on ICL bundle sub-interfaces by default.

Table 3: Feature History Table

Feature Name	Release Information	Feature Description
Bundle interface load-balancing auto mode	Release 26.2.1	You achieve predictable, per-port traffic forwarding on nV Satellite ICL bundles by automatically mapping each satellite access port to a specific host bundle member. This ensures consistent policing and simplifies troubleshooting by overriding dynamic load-sharing and pinning all traffic from each port to an exclusive hardware resource, such as an NPU or a line card.

Key aspects of bundle interface load-balancing auto modes

These characteristics define the operation and relevance of bundle interface load-balancing auto modes in nV satellite solutions:

- The bundle interface load-balancing auto mode feature is enabled by default.
- Provides deterministic mapping of CE-facing traffic to a specific ICL bundle member.
- Enables hardware-permitted per-port policing by constraining each access port's traffic to a single host platform resource, NPU or line card.
- Enhances troubleshooting and operational predictability by reducing complexity associated with dynamic load distribution.

Bundle interface load-balancing auto mode platform support and restrictions

Key platform support and operational restrictions for bundle interface load-balancing auto mode:

- Cisco nV satellite port extender platforms, Cisco 8011-4G24Y4H-I and Cisco 8011-32Y8L2H2FH support bundle interface load-balancing auto mode by default.
- Compatible Cisco IOS XR versions are required on host and satellite devices.
- L2 E-LINE services supported include AC xconnect, LDP pseudowire, and EVPN pseudowire (single-homed and multi-homed).
- Legacy platforms such as ASR9000v, ASR9000v2, and NCS 5000 are not supported for auto mode.

Summary of supported service types and operational limitations for bundle interface load-balancing auto mode:

- All L2 main and sub-interfaces on supported satellite port extenders, Cisco 8011-4G24Y4H-I and Cisco 8011-32Y8L2H2FH can use load-balancing auto mode.
- Single-homed and multi-homed E-LINE services are supported.
- Operation relies on available, operational bundle members at link-up. Changing bundle members during operation can impact service.
- Monitor bundle member status and set alerts so you can respond quickly to hardware or configuration failures that affect load-balancing.
- Unique port-to-member mapping ensures that host hardware policing works as intended and reduces operational complexity. Proper VLAN assignment and monitoring simplify troubleshooting for service or forwarding issues.

Satellite Discovery and Control Protocols

Cisco's proprietary discovery and control protocols are used between the satellite switches and the host Cisco ASR 9000 Series Router devices, to handle discovery, provisioning, and monitoring of the satellite devices from the host Cisco ASR 9000 Series Satellite System in-band over the ICLs. The Satellite Discovery And Control (SDAC) Protocol provides the behavioral, semantic, and syntactic definition of the relationship between a satellite device and its host.

Satellite Discovery and Control Protocol IP Connectivity

The connectivity for the SDAC protocol is provided through a normal in-band IP routed path over the ICLs using private and public IP addresses appropriate for the carrier's network.

You can configure a management IP address on the host CLI for each satellite switch and corresponding IP addresses on the ICLs. You can select addresses from the private IPv4 address space (for example, 10.0.0.0/8 or 192.1.168.0/24) in order to prevent any conflict with normal service level IPv4 addresses being used in the IPv4 FIB. You can also configure a private VRF that is used for only satellite management traffic, so that the IP addresses assigned to the satellites can be within this private VRF. This reduces the risk of address conflict or IP address management complexity compared to other IP addresses and VRFs that are used on the router.



Note Auto-IP is the recommended mode of configuration. For more information on Auto-IP mode, see [Auto-IP, on page 54](#).

ICL Fabric Port Monitoring

This feature enables the host to create virtual fabric port interfaces locally to represent each of the fabric facing interfaces on the satellite.

Interfaces are created when either:

- Candidate fabric port configuration is applied to the satellite.

- The satellite informs the host that the port exists on the candidate fabric port channel.
- The satellite informs the host that the port exists and is in Active state on the topology channel.

This allows you to monitor the information related to the links within fabric ports and get their Layer 1 and Layer 2 parameters from the host. The satellite sends the ICL interface details to the host through the topology channel messages. You can run SNMP queries on these interfaces. The **show interface nvFabric-TenGigE/GigE interface** provides L1 details and L2 statistics for these interfaces. The host uses the information received on the topology channel to create the virtual fabric port interfaces locally. The topology channel TLVs are modified such that they provide the detail port definition in the format of *slot/subslot/port*. Currently, there is no TLV in Layer 1 and Layer 2 channel for MTU to be exchanged from host to satellite. Hence, the host just hard codes it to 9212.



Note In the case of Cisco ASR 9000v, nVFabric-TenGigE interface is created irrespective of whether 1 GE or 10GE ICL is used.

For Cisco NCS 5000 Series Satellites nVFabric-HundredGigE and nVFabric-TengGigE interfaces are created for 100GE and 10GE ICLs.

For Cisco NCS 5000 Series Satellites nVFabric-HundredGigE interface is created irrespective of whether 40GE or 100GE ICL is used. And nVFabric-TengGigE interface is created for 10GE ICLs.

For Cisco 8000 Series satellite port extenders these interfaces are created:

- nVFabric-TenGigE for 10GbE
- nVFabric-HundredGigE for 100GbE
- nVFabric-FourHundredGigE for 400GbE

The virtual interfaces are deleted if they are not configured via the candidate fabric port configuration and:

- If the satellite informs the host that the port is no longer used as a fabric link.
- If the satellite is removed from the network topology.
- If the topology channel moves to “Down” state for other reasons, such as authentication failing due to an incorrect serial ID.

Interfaces created due to candidate fabric port configuration will never be deleted and will persist over the above conditions.



Note The **show nv satellite topology** command is updated to use the name of the Satellite nV Fabric interface.

```
RP/0/0/CPU0:Router#show nv satellite topology
```

```
GigabitEthernet0/1/0/11
```

```
-----
```

```
Redundancy-Group: 10
Ring Whole: False
Discovery status: Running
Satellites:
  Satellite 200 (BVID 2)
```

```

-----
Received Serial Number: CAT1709U06V
MAC address: 7cad.7404.6028
Satellite fabric links:
  GE/0/0/11 (nVFabric-GigE200/0/0/11) (Remote ID: 0xb):
    Host (GigabitEthernet0/1/0/11)
  GE/0/0/10 (nVFabric-GigE200/0/0/10) (Remote ID: 0xa):
    Remote port not yet identified
-----

RP/0/RSP1/CPU0:vkgl#sh nv sat topology
TenGigE0/3/1/2
-----
Redundancy-Group: 10
Ring Whole: False
Discovery status: Running
Satellites:
  Satellite 100 (BVID 2)
-----
Received Serial Number: CAT1721U0ED
MAC address: 8478.ac03.6404
Satellite fabric links:
  TenGE/0/0/46 (nVFabric-TenGigE100/0/0/46) (Remote ID: 0x3):
    Host (TenGigE0/3/1/2)
  TenGE/0/0/44 (nVFabric-TenGigE100/0/0/44) (Remote ID: 0x1):
    Remote port not yet identified

```

Dynamic ICL

The Dynamic ICL feature allows you to configure ICL on the 1 GigE satellite ports 42 and 43 apart from the designated four 10GigE ports on the Cisco ASR 9000v and Cisco ASR 9000v2 satellites. The Cisco ASR 9000v satellites can have, by default, up to 6 potential ICLs. These are the four 10 GigE ports(44-47) and two 1 GigE ports (42-43) and 42 fixed 1 GigE access ports (0-41). The two 1 GigE ports (42-43) that are considered as potential ICLs are special ports that can be used either as ICLs or as access ports. When these two ports (42-43) are configured as access ports, they are not considered as potential ICLs thereafter and therefore behave like any other 1 GigE access ports till the next reload. When the satellite reloads and comes back up, those two ports again become as potential ICLs. When the satellite gets discovered and connects back to the host and if the host cross-link configuration still has the ports 42 and 43 as access ports, then these ports again switch to the access port mode and exhibit the behavior like any other 1 GigE access ports. This feature is supported on all the existing satellite topologies.

In case of dual head satellite mode, if any of these ports (42-43) is configured as access port in at least one of the host and if that host becomes active, then that port are not considered as potential ICLs anymore till next satellite reload. Also, the two ports (42 and 43) when used as access ports, lose the link integrity when the satellite reloads. The remote devices connected to these two ports stay up momentarily just after the satellite reload and till the satellite gets connected to the host and receives the cross-link configuration again.

You cannot bundle Dynamic ICL ports that are of dissimilar types. For example, you cannot bundle 1GigE and 10GigE ports.

Dynamic ICL is supported on 10G ports on Cisco NCS 5000 Series satellite either as an access port or an ICL fabric port based on user configurations done through the configurable fabric port functionality. By default, the highest 2x10G ports on both Cisco NCS 5001 (38 and 39) and Cisco NCS 5002 (78 and 79) are turned on as the ICL ports in the satellite mode (only the highest 10G port turns on for plug and play in factory reset / default mode). When the links come up over these default fabric ports and the satellite is connected, you can configure a list of candidate fabric ports. This gives the flexibility of using ports other than the default fabric ports as additional ICLs.

The default fabric ports (highest 2x10G ports) and the configured fabric ports lose link-integrity even if they are later configured as access ports until the satellite discovery goes down next. The default fabric ports permanently lose link integrity as they come up as potential ICLs every time the cross-link mapping to an ICL goes away. This is a necessary trade off to have certain ports available for zero touch plug and play. Therefore, at instances where link integrity is crucial, the default fabric ports, either must not be connected to such peers or must be connected over non-revertive switch-over topologies.

Configurable fabric ports

All satellite hardware variants have default set of fabric ports (permanent as well as dynamic) that can be used to connect them as ICLs. These include 4x10G ports and the highest 2x1G ports (port 42,43) for Cisco ASR 9000v. For Cisco NCS 5000 series satellites, these include 4x100G ports and the highest 2x10G ports. The highest 1G/10G ports are dynamic ICLs that can either be used as access ports or as ICLs based on whether they have an active mapping to another ICL at a given time or not.

Apart from these ports, the host also allows additional 10G ports on Cisco NCS 5000 series satellites to be configured as fabric ports. These are configurable as Candidate Fabric Ports on the host under the nV satellite global configuration. When the configured list is accepted, the satellite reports these interfaces to the host (including the default/permanent candidate fabric ports) and subsequently sends change notifications when that set changes or during re-synchronization with the host. The satellite might choose to reject some of these configured candidate fabric ports if they are already being used as active access ports. As in the case of the normal Satellite nV System fabric ports, these interfaces are deleted if they have no configuration presence and become inactive in the fabric topology, either as notified by the satellite over the topology channel, or if the satellite is entirely undiscovered by the host. The information about the nV fabric port, and specifically fabric port statistics, does not persist across deletion and re-creation of an nV Fabric interface with the same name.

An overlapping configuration using the same port as both access port and candidate fabric port is not recommended. However, when such a configuration is used, the behavior depends on the chronological ordering of whether the port was first discovered as an ICL or whether it got mapped as an access port to another active ICL. While a configuration is rejected to map the port in one mode when the port is already active in the other mode, there might be cases where the candidate fabric port is configured and is waiting to be discovered. If it is also mapped as an access port to another ICL, then the port becomes an active access port and cannot be discovered thereafter, until the access port mapping goes away.

The list of permanent and configured fabric ports, including their acceptance status is displayed in the status of show commands under *Monitoring the Satellite Software* section.



Note With respect to the existing dynamic ICLs, link integrity is not supported for ports configured as fabric ports. Therefore, if they are also used as access ports, the ports will come up as soon as the access port mapping goes away. This is required for listening to discovery when they act as dynamic fabric ports.

Multiple ICCP Groups for Satellite nV System Network Topologies

The Multiple ICCP group feature allows you to configure multiple redundancy groups on a single host. These redundancy groups function completely independently of each other. The primary function of this feature is to support multiple satellites that are dual-homed to different but overlapping pairs of Cisco ASR 9000 Series Routers.

In a multiple ICCP redundancy group setup, failovers can happen similar to the case of a basic Dual Home setup. See the [Dual Home Mode, on page 17](#) for information on support for seamless split brain handling.

Satellite nV System Access Port Bundles along with ICL Bundles

This feature provides redundancy for Inter-Chassis Links (ICLs) along with redundancy for satellite access ports. These are different deployment models for this feature:


- Bundles of Satellite interfaces with ICL links as non-redundant links.
- Satellite interfaces with ICL links as redundant links (ICL links in a bundle).
- Bundles of Satellite interfaces with ICL links as redundant links (ICL links in a bundle).

These are the topologies and features supported when bundles of satellite interfaces exist with redundant ICL bundles:



1. Bundles of Satellite interfaces with ICL redundant links to single host.
2. Bundles of Satellite interfaces with ICL redundant links to two hosts, which are connected by ICCP to provide node redundancy.
3. Bundles of Satellite interfaces with many ICL redundant links to single host.
4. Sub-interfaces over Bundles of Satellite interfaces with ICL redundant links to single host.
5. Sub-interfaces over Bundles of Satellite interfaces with ICL redundant links to two hosts.
6. LACP over virtual Satellite access member interfaces.
7. BFD configuration of BLB.
8. L2VPN support for both VPWS and VPLS connectivity.
9. IPv4 and IPv6 protocols with and without L3VPNs.
10. Netflow, ACL, and routing protocols such as BGP, OSPF, ISIS.
11. Dynamic Host Configuration Protocol(DHCP).
12. Host QoS and QoS offload are supported.
13. PBB-EVPN (Provider Backbone Bridging Ethernet Virtual Private Network) is supported with single homed, single active, and all active topologies with satellite access.

Use Cases for Satellite nV System Access Port Bundles

These are different use cases of satellite topologies with Satellite nV System access port bundles along with redundant ICL.

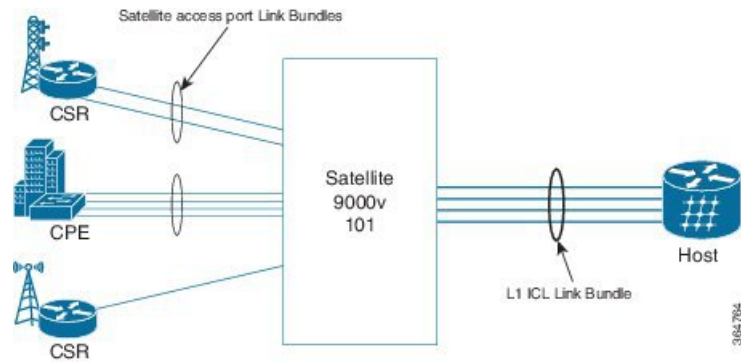Figure 4: Multiple Access Bundles over single ICL Bundle to Single Host


In this case, different members of the access bundle can be configured over different ICL bundle links.

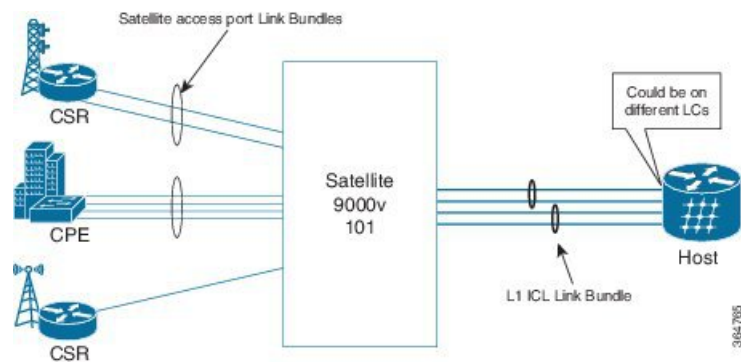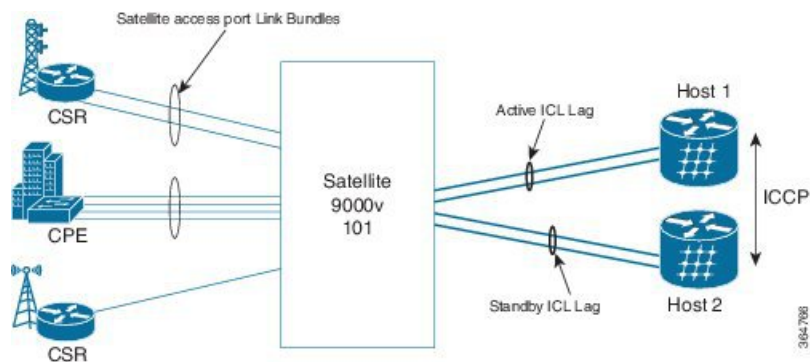Figure 5: Multiple Access Bundles over many ICL bundles to Single Host**Figure 6: Multiple Access Bundles over many ICL bundles to Dual-Homed Hosts**

Note In the figures 8, 9, and 10, the satellite can also be Cisco NCS 5000 Series Router in place of Cisco ASR 9000v.

In this case where MC-LAG solution is provided to CPE device, wherein each member in the CPE bundle is connected to different satellite box. The satellite is single homed to a Cisco ASR 9000 host.

Figure 7: Access Bundle over ICL Bundles to two different hosts in CPE dual homing

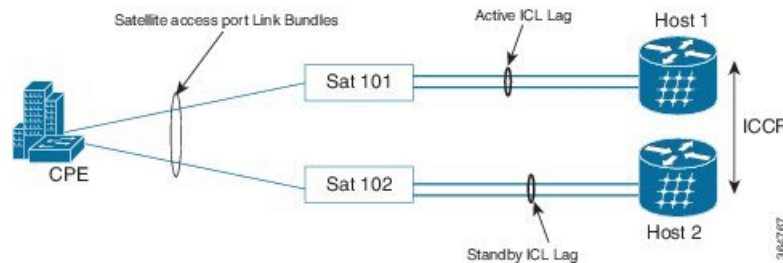

Port Partitioning

The Cisco ASR 9000 Series Satellite system allows you to split or partition the satellite ethernet ports across multiple ICL interfaces. You can split the satellite ports between 4 ICLs in Cisco ASR 9000v satellite. You can split the satellite ports between upto 10 ICLs that can be either 100G or 10G ICLs in Cisco NCS 500x Series satellites. See *Support of 10x10G ICLs on Cisco NCS500x satellites* section for additional information.

BFD over Satellite Interfaces

Bidirectional Forwarding Detection (BFD) over satellite interfaces feature enables BFD support on satellite line cards. Satellite interfaces are known as virtual (bundle) interfaces. BFD uses multipath infrastructure to support BFD on satellite line cards. BFD over satellite is a multipath (MP) single-hop session and is supported on IPv4 address, IPv6 global address, and IPv6 link-local address. BFD over Satellite is supported on Cisco ASR 9000 4th Generation QSFP28 based dense 100GE line cards, Cisco ASR 9000 5th Generation High-Density Multi-Rate line cards. BFD over satellite is not supported in echo mode.



Note

- The nV Satellite access port bundles do not support BFD over bundles (BoB) over physical or bundle ICLs
- The **bfdmultipath include location node-id** command is required for all the line cards that host ICL links towards the Satellite.

BNG Interoperability

Important points about BNG interoperability with nV system:

- The only topology that BNG supports with nV Satellite is bundle access on the CPE side with non-bundle ICL links, as shown below:
CPE --- Bundle --- [Satellite] --- Non Bundle ICL --- ASR9K
- BNG does not support nV Satellite with bundle ICL and bundle access links, as shown below:
CPE --- Bundle --- [Satellite] --- Bundle ICL --- ASR9K
- From Cisco IOS XR Software Release 7.3.2, satellite interfaces hosted on Cisco ASR 9000 5th Generation High Density Ethernet line cards support BNG with Cisco IOS XR 64-bit operating system.

- When Cisco ASR 9903 Router hosts the satellite, subscriber sessions over satellite interfaces do not support Port Expansion Card (PEC) OIR.
- BNG over satellite interfaces do not support PWHE.

Layer-2 and L2VPN Features

All L2 and L2VPN features that are supported on physical ethernet or bundle ethernet interfaces are also supported on Satellite Ethernet interfaces, except L2TPv3 over IPv4 and L2TPv3 over IPv6. The maximum number of bundles supported by Cisco ASR 9000 Series Router is increased to 510.

For more details on L2VPN features supported on the Cisco ASR 9000 Series Satellite System, see *Cisco ASR 9000 Series Aggregation Services Router L2VPN and Ethernet Services Configuration Guide*.

Layer-3 and L3VPN Features

All MPLS L3VPN features supported on ethernet interfaces are also supported on the Cisco ASR 9000 Series Satellite nV System.

For more information on these features, see *Cisco ASR 9000 Series Aggregation Services Router MPLS Layer 3 VPN Configuration Guide* and *Cisco ASR 9000 Series Aggregation Services Router Netflow Configuration Guide*.

Layer-2 and Layer-3 Multicast Features

The nV Satellite interfaces support edge and access functionalities of Layer-2 and Layer-3 multicast features, similar to the support on normal Ethernet and Bundle Ethernet interfaces.

For more information on these features, see *Cisco ASR 9000 Series Aggregation Services Routers Multicast Configuration Guide*.

Multicast IRB

Multicast IRB provides the ability to route multicast packets between a bridge group and a routed interface using a bridge-group virtual interface (BVI). It can be enabled with multicast-routing. THE BVI is a virtual interface within the router that acts like a normal routed interface. For details about BVI, refer *Interface and Hardware Component Configuration Guide for Cisco ASR 9000 Series Routers*

BV interfaces are added to the existing VRF routes and integrated with the replication slot mask. After this integration, the traffic coming from a VRF BVI is forwarded to the VPN.

Quality of Service

Most Layer-2, Layer-3 QoS and ACL features are supported on Satellite Ethernet interfaces that are similar to normal physical Ethernet interfaces, with the exception of any ingress policy with a queuing action. However, for QoS, there may be some functional differences in the behavior because, in the Cisco IOS XR Software Release 4.2.x, user-configured MQC policies are applied on the Cisco ASR 9000 Series Router, and not on the satellite switch interfaces.

For more detailed information on QoS offload and QoS policy attributes, features, and configuration, see [Cisco ASR 9000 Series Aggregation Services Router Modular Quality of Service Configuration Guide](#).



Note User-configured QoS policies are independent of any default port level QoS that are applied in order to handle IC link congestion and over-subscription scenarios. In addition to the default port-level QoS applied on the satellite system ports, default QoS is also applied on the Cisco ASR 9000 Series Router Host side, to the ingress and egress traffic from and to the Satellite Ethernet ports.

QoS on Cisco 8000 Series satellite port extenders

Table 4: Feature History Table

Feature Name	Release Information	Feature Description
L2 interface ingress classification of L3 QoS parameters on Cisco 8000 Series satellite port extenders	Release 26.2.1	You can now match and enforce QoS policies using L3 fields (such as DSCP and IP address) on L2 interfaces, and L2 fields (such as CoS) on L3 interfaces. This enables consistent QoS policy enforcement across your network boundaries without manual mode switching; apply your policy and the system handles cross-layer matching. This feature is enabled on these satellite port extenders: • Cisco 8011-32Y8L2H2FH • Cisco 8011-4G24Y4H-I

Ensure you apply consistent and unified QoS policies on both Layer 2 and Layer 3 interfaces for Cisco 8000 Series satellite port extenders. This approach achieves end-to-end QoS, streamlines operations, and delivers predictable traffic treatment.

Guidelines for configuring L2 interface ingress classification of L3 QoS parameters on Cisco 8000 Series satellite port extenders

These are the guidelines for configuring L2 interface ingress classification of L3 QoS parameters on Cisco 8000 Series satellite port extenders:

- Apply the same class-map and policy-map logic to both L2 and L3 interfaces, using fields such as `dscp`, `ip precedence`, `cos`, and `dei` as required for your traffic flows.
- Avoid creating ACE entries that match both `PCP` and `MPLS EXP` in the same rule, because only one marking per packet is possible per hop.
- Do not enable `OG-ACL` or policy-based routing (PBR) pathgroup features if you require L2 QoS-on-L3 interface classification, due to TCAM resource limitations.
- Monitor TCAM utilization by using platform show commands such as `show policy-map interface`, especially if you use complex or large-scale policy-maps, to prevent resource exhaustion.
- Deploy cross-layer QoS classification only in the ingress direction. Use the traditional policy model for egress QoS enforcement.

- Regularly verify policy deployment and traffic classification with operational commands to ensure enforcement as expected on both L2 and L3 interfaces.
- Auto QoS on a satellite port extender device uses a trusted COS model, classifying incoming frames based on their CoS or DSCP values without implicitly reserving bandwidth for any protocol packets. All Layer 2 and Layer 3 QoS configurations are applied on the ASR 9000 host, with the satellite providing traffic differentiation and queuing but relying on the host for bandwidth management and deeper QoS functions. For more information on Auto QoS, see *Modular QoS Configuration Guide for Cisco ASR 9000 Series Routers*.
- Use traffic-class instead of qos-group when performing egress queuing.

QoS Offload on satellites

The Cisco ASR 9000 Series Router Satellite System enables you to configure a topology in which one or more satellite switches complement one or more Cisco ASR 9000 Series Router, to collectively deploy a single virtual switching system. In this system, the satellite switches act under the management control of the routers. The connections between the Cisco ASR 9000 Series Router and the satellite switches are called the Inter-chassis link (ICL), which is established using standard Ethernet interfaces.

The QoS offload feature protects the control packets when Satellite fabric links (SFL) is congested. The offloading of QoS policies helps to drop excess traffic at the ingress direction (or access ports) and prioritize the protocol control traffic at the egress direction (or SFL).

For more information on QoS offload and the supported capability matrix for Cisco 8000 Series satellite port extenders, see [Supported Capability Matrix for Cisco 8000 Series satellites](#).

Time of Day Synchronization

The Time of Day parameter on the satellite switch is synchronized with the time of day on the host. This ensures that time stamps on debug messages and other satellite event logs are consistent with the host, and with all satellite switches across the network. This is achieved through the SDAC Discovery Protocol from the host to the satellite switch when the ICLs are discovered.

Satellite Chassis Management

The chassis level management of the satellite is done through the host because the satellite switch is a logical portion of the overall virtual switch. This ensures that service providers get to manage a single logical device with respect to all aspects including service-level, as well as box-level management. This simplifies the network operations. These operations include inventory management and environmental sensor monitoring through the corresponding CLI, SNMP, and XML interfaces of the host Cisco ASR 9000 Series Router.



Note The satellite system hardware features, support for SFPs, and compatible topologies are described in the *Cisco ASR 9000 Series Aggregation Services Router Hardware Installation Guide*.



Note All the SNMP features supported on the Cisco ASR 9000 Series router is supported for satellite, provided the **SystemOwner** permissions are assigned to the snmp-server community. For more information, see *Cisco ASR 9000 Series Aggregation Services Router MIB Specification Guide*.

ARP Redundancy Support for Dual Head Mode

The Address Resolution Protocol (ARP) redundancy support feature allows you to synchronize the ARP table entries between the active and standby hosts in a dual home mode. In the Dual Head mode, all satellite traffic flows to one host router (active host) and therefore all ARP entries reside on the active host. When the active host goes down, the standby host needs to rebuild the ARP table. But with a large number of devices, this can take a significant amount of time, impacting the network uptime. The process of synchronizing the ARP database between the active and standby hosts can reduce this downtime. The synchronization happens as and when a new entry is learnt or when the active host goes down. There is no specific frequency for synchronization. You can also pause or restart the synchronization process whenever required.

The ARP database is distributed across all the nodes (RP/LC) in the router. The ARP entries are programmed for an interface only in the node where the data plane is replicated. In case of virtual interfaces (like Bundle-Ether, BVI and so on), where the control plane is located in RP, the ARP entries are programmed only in the line cards wherever the data plane is replicated. The RP would have entries only for the physical interfaces that have its control plane in RP like Management interfaces. The Txlist infrastructure library facilitates the ARP table entries synchronization process to happen. The ARP table has three key entries, which are the IPv4 address, MAC address, and the corresponding interface.

The current architecture can support only two host nodes in a redundancy group. But a specific host router can be part of multiple redundancy groups. This is a sample configuration for ARP synchronization.

```
group <id-number>
  peer <neighbor ipv4 address>
  source-interface <interface-name>
  interface-list
    interface <interface-name to be synced> id <unique-id>
  !
!
```

You can use the **show arp redundancy summary location** command to display the summary of entries.

Ethernet Link OAM

The Satellite nV system Ethernet interfaces support Ethernet Link OAM feature when ICL is a physical interface. Cisco IOS XR Software also supports Ethernet Link OAM feature over Satellite Ethernet interfaces when the ICL is a bundle interface.

802.3ah Loopback Support on Satellite nV System

The 802.3ah loopback feature allows you to loopback all the non OAM PDU packets from the remote subordinate node. The primary port is the one that controls the loopback status on the remote node. You can conduct various performance and quality testing on the remote subordinate port using this feature. This loopback mode is disruptive because the traffic does not flow through the router in subordinate state. The

Loopback function is supported on the satellite nV system ports both in over protected and unprotected ICL modes. You can define the loopback function on the primary node using the **remote-loopback** command in the ethernet oam interface configuration mode.

You can use the **ethernet oam loopback enable <interface>** and **ethernet oam loopback disable <interface>** commands from the primary node to enable and disable the loopback respectively on the subordinate node.



Note You cannot loopback the Layer 2 protocol packets such as CFM, OAM, and LACP.

This configuration snippet shows how to configure loopback.

```
RP/0/RSP0/CPU0:router(config)# interface gigabitEthernet 0/1/0/9
RP/0/RSP0/CPU0:router(config-if)# ethernet oam
RP/0/RSP0/CPU0:router(config-if-eoam)# remote-loopback
RP/0/RSP0/CPU0:router(config-if-eoam)# commit
```

This is a sample output of the show ethernet oam discovery command, which indicates that loopback is supported.

```
RP/0/RSP0/CPU0:router# show ethernet oam discovery
```

```
Local client
-----
```

```
Administrative configuration:
```

```
PDU revision:          9
Mode:                  Active
Unidirectional support: Y
Link monitor support:  Y
Remote loopback support: Y <<Indicates loopback is supported
MIB retrieval support:  Y
Maximum PDU size:      1500
```

```
Operational status:
```

```
Port status:           Operational
Loopback status:        Remote <<Indicates primary
Interface mis-wired:    N
```

For more information on Ethernet OAM configuration and commands, see the chapters *Configuring Ethernet OAM* and *Ethernet OAM Commands on the Cisco ASR 9000 Series Router* modules in the *Interface and Hardware Component Configuration Guide for Cisco ASR 9000 Series Routers* and *Interface and Hardware Component Command Reference for Cisco ASR 9000 Series Routers* respectively.

Native Image and SMU Push Support for Cisco NCS 5000 Series Satellites

The Cisco NCS 5000 Series Satellite runs virtualized IOS XR software and mainly consists of three Virtual Machines (VM), the XR VM, the System Admin VM and the Host VM.

Cisco ASR 9000 Series Router host supports the capability to push native Cisco NCS 5000 Series Satellite XR VM images and SMU fixes from the Cisco ASR 9000 Series Router host similar to satellite nV pie image upgrades from Cisco IOS XR Software Release 6.1.2 onwards.

This capability is expanded to native Cisco NCS 5000 Series Satellite System Admin VM and Host VM images and SMU fixes from Cisco IOS XR Software Release 6.3.1 onwards.

This provides the flexibility of managing the software images and pies on the satellite and also offers the zero touch provisioning model of nV satellites. The commands can be run on the Cisco ASR 9000 Series Router

host for addition and activation of both upgrade images and mandatory SMUs and this allows a fast turnaround time for any critical fixes on Cisco NCS 5000 Series Satellite.

Native Image and SMU Push Support for Cisco 8000 Series satellite port extenders

From Cisco IOS XR Software Release 26.2.1, the Cisco ASR 9000 Series Router host enables the deployment of native Cisco 8000 Series satellite port extender XR VM images and SMU fixes.

You can execute commands on the Cisco ASR 9000 Series Router host to add and activate both upgrade images and mandatory SMUs, ensuring a quick turnaround for critical fixes on Cisco 8000 Series satellite port extenders.

Support of 10x10G ICLs on Cisco NCS 5000 Series Satellites

A maximum of 10x10G ICL ports can be connected from the Cisco NCS 5000 Series Satellite to each of the Cisco ASR 9000 Series Router host in a Layer 1 Hub and Spoke topology (both single and dual head modes) using this feature. The ICLs could be either a 10G ICL or one of the 4x100G ICLs, amounting to a maximum of 10 physical links with each of the hosts.

The 10G ICLs have to be configured using the configurable fabric port feature. The 10x10G ICL links can be configured as members of a Bundle ICL or Physical ICL. If they are used as members of a Bundle ICL, then members must be distributed across NPs or line cards to achieve redundancy and overcome access port scale constraints. Furthermore, the bundle ICL can take up to 10x10G members and still have 100G links as ICLs in a mixed bundle and physical ICL connectivity for 10G to 100G fabric transitions for each of the hosts.

- Qos offload
- Fabric CFM for both physical and bundle ICLs and dual head modes.

Similarly, fabric CFM on bundle ICLs in Layer 1 Hub and Spoke topology is supported for Cisco ASR 9000v Satellites.

Support for 40G ICLs on Cisco NCS 5000 Series Satellites

40G ICL ports can be connected from the Cisco NCS 5000 Series Satellite to the Cisco ASR 9000 Series Router in a single host hub and spoke topology. This feature is supported only with the A9K-8X100G-SE and A9K-8X100G-TR variants of the Cisco ASR 9000 High Density 100GE Ethernet line cards and specifically with the optics CPAK-100G-SR10 breaking out to 2xQSFP-40G-SR4 ports. The breakout configuration will have to be applied to the CPAK in order to provision the 40G ports on the Cisco ASR 9000 Series Router host. For details on the breakout configuration, see *Managing the Router Hardware* chapter in *Cisco ASR 9000 Series Aggregation Services Router System Management Configuration Guide*.

ICL bundles can also be configured with 40G ICL links.

Support of ICLs on Cisco 8000 Series satellite port extenders

With the Cisco 8000 Series satellite port extenders, these Inter-Chassis Link speeds are supported from Cisco IOS XR Software Release 26.2.1:

- 10GbE

- 100GbE
- 400GbE



Note You can configure various ICL speeds only on Cisco 8011-32Y8L2H2FH satellite port extender, this capability is not available on Cisco 8011-4G24Y4H-I satellite port extender.

This table details the speed that you can configure on the Cisco 8011-32Y8L2H2FH satellite port extender:

Table 5: Configurable speed on Cisco 8011-32Y8L2H2FH satellite port extender

Port Mode	Inter-Chassis Link Ports	Access Ports	
Default	2x400GbE (Port: 0,3) 2x10GbE (Port:42,43)	32x1GbE	Tuneable (Port: 12-43)
		32x10GbE	
		32x25GbE	
4x100GbE - 32x10GbE	4x100GbE (Port:0,1,2,3)	32x1GbE	Tuneable (Port: 12-43)
		32x10GbE	
	2x10GbE (Port:42,43)	32x25GbE	
3x100GbE - 40x10GbE	3x100GbE (Port:0,1,2)	8x10GbE	Fixed (Port: 4-11)
		32x1GbE	Tuneable (Port: 12-43)
	2x10GbE (Port:42,43)	32x10GbE	
		32x25GbE	
3x100GbE - 40x25GbE	3x100GbE (Port:0,1,2)	8x25GbE	Fixed (Port: 4-11)
		32x1GbE	Tuneable (Port: 12-43)
	2x10GbE (Port: 42,43)	32x10GbE	
		32x25GbE	



Note If you configure 2x10GbE ICL on ports 42 and 43, you can configure only ports 12–41 as Tuneable, and the access ports are set to 30x1GbE, 30x10GbE, and 30x25GbE speeds.

Table 6: Configurable speed on Cisco 8011-4G24Y4H-I satellite port extender

Port Mode	Inter-Chassis Link Ports	Access Ports		Copper Ports
Default	4x100GbE (Port: 0-3)	24x1 GbE	Port: 4-27	4x1GbE (Port: 28-31)
		24x10 GbE		
		24x25GbE		



Note For more information on how to configure speed on various ports available on Cisco 8011-4G24Y4H-I satellite port extender, see [Network Interfaces](#).

Support for MACsec Sessions on nV Satellite Access Interface

MACsec encryption is an IEEE 802.1AE standards based layer 2 hop-by-hop encryption that provides data confidentiality and integrity for media access independent protocols. MACsec Key Agreement Protocol (MKA) developed as part of 802.1X allows for peer discovery, confirmation of mutual authentication, and agreement of secret keys that may be used by MACsec to protect any data exchanged between peers. For details, see *Implementing MACsec Encryption* chapter in the *System Security Configuration Guide for Cisco ASR 9000 Series Routers*.

MACsec sessions are supported on 1G access interfaces over 10G ICL on the Cisco ASR 9000v Satellite and on both 1G and 10G access interfaces over either 10G candidate ICL or 100G ICL on the Cisco NCS 5000 Series Satellite.

Restrictions and Configuration Guidelines of nV Satellite System

Restrictions of the Satellite nV System

Software restrictions of the satellite system are:

- The nV Satellite interfaces are expected to be deployed as access or edge interfaces and hence do not support functionalities of core interfaces on multicast topologies.
- The inter-chassis link redundancy is supported only through the static EtherChannel, and not through LACP based link bundles. Minimum and maximum link commands are not applicable when ICL is a bundle.
- On satellite access ports, the port and top-level policy shapers calculate traffic rates using the full Layer 1 frame size, including physical and internal overheads. This approach enforces accurate bandwidth limits based on actual transmission usage.
- Multi-chassis Link Aggregation is supported if there are two independent Cisco ASR 9000 Series Routers acting as the POA (Point of Attachment), each with its own satellite switch, and the DHD (Dual Homed Device) connecting through each of the satellite switches. However, MC-LAG is not supported with a single satellite switch that connects two separate Cisco ASR 9000 Series Routers through an ICL LAG.

- Pseudowire Headend is not supported on the Satellite interfaces.
- Access bundles having both satellite and non-satellite interfaces is not supported.
- On the Cisco ASR 9000 Series 24-Port and 48-Port Dual-Rate 10GE/1GE line cards (A9K-48X10GE-1G-SE, A9K-48X10GE-1G-TR, A9K-24X10GE-1G-SE, A9K-24X10GE-1G-TR), only one interface from each PHY can be configured for SyncE output. So, when breakout interfaces are configured as ICLs, only one of them can support SyncE output for SyncE offload to the satellite.
- The nV Satellite access port bundles do not support BFD over bundles (BoB) over physical or bundle ICLs
- BFD hardware offload is not supported on satellite line cards because BFD hardware offload is supported for single-hop and single-path asynchronous packets only. For more information on BFD hardware offload, see the chapter *Implementing BFD* in the *Routing Configuration Guide for Cisco ASR 9000 Series Routers*.
- MACsec encryption over nV Satellite access sub-interface with dual VLAN tags is not supported
- When 100G ICL port is used with a breakout of 10x10G ports, the 10G session limit would be applied for each of the breakout ports. When 100G port is used as an ICL as is, then MACsec session limit of 100G is applied.
- MACsec is not supported on nV satellite access interfaces if the satellites are in Dual host mode.
- QoS offload feature is not supported when MACsec is configured on the nV satellite access interfaces.
- In the case of Cisco ASR 9000v satellites with bundle ICL, you should first shut down the ICL bundle before making any configuration changes on the ICL bundle or before changing the bundle members or the bundle member interface types
- Bundle ICL is not supported with MACsec feature.
- MACsec feature is not supported on nV satellite access interfaces that are mapped to the Cisco ASR 9000 Series host through 1G candidate ICL or the 40G ICL ports.
- MACsec feature is not ISSU aware.
- Whenever the first MACsec policy is applied on any of the nV satellite access interfaces or when the last MACsec policy is removed from any of the nV satellite access interfaces, there will be a ICL interface link flap and the satellite will be reconnected post this flap.
- MACsec policy can be applied either only on the main nV satellite access interface or only on the nV satellite access sub-interface that are mapped to a single Physical ICL.
- MACsec feature is not supported on nV satellite access interfaces if they are configured as core-facing interfaces of L2VPN or L3VPN services.
- MACsec policies in the Must-Secure and Should-Secure modes cannot applied on same nV satellite access interface. But they can be applied on different access interfaces on same ICL.
- Mixing of interface types (1G, 10G, 100G, 40G) is not supported for bundle ICLs.
- The maximum number of satellites per system is 64.
- Link failure detection on nV satellite access ports can take seconds to propagate to the host, especially with traffic congestion on the nV satellite fabric links. Hence, OAM or BFD should be run over nV satellite access ports for faster detection.

- The nV satellite access interfaces do not support IP Fast Reroute (FRR) and Topology-Independent Loop Free Alternate (TI-LFA) protection.
- Dual home mode does not support aggressive-mode UDLD as the standby host causes the active host to time out and the port is error-disabled when the active host recovers. Hence, you should configure normal UDLD timer for the dual home mode.
- With aggressive UDLD timers in hub and spoke topology, UDLD takes the far end down, if the host is ungracefully shutdown or with host configuration operations such as **commit replace**.
- A satellite can be connected to only one Host in the Hub and Spoke topology model and can be connected to only two hosts in a Dual-homed network architecture.
- During configuration changes that removes an ICL from a satellite, there is no guarantee that a reject packet will be transmitted. Hence, it is recommended that you shut down the ICL port before you change or remove a configuration on an ICL interface or wait for an idle time out (which is 30 seconds) to bring down sdac discovery.
- The nV system supports hub and spoke topology with both bundle and physical (non-bundle) links as access-ports and ICL, including access bundle over ICL bundle cases.
- When Cisco ASR 9903 router hosts satellite interfaces, it doesn't support Port Expansion Card (PEC) OIR or PEC reload. So, for the proper functioning of the nV system you must reload the fixed line card after PEC OIR or PEC reload operations.
- The Cisco ASR 9000 4th Generation QSFP28 based dense 100GE line cards and the Cisco ASR 9000 5th Generation High-Density Multi-Rate line cards support a maximum of 400 nV satellite access ports per NPU and 1600 nV satellite access ports per line card on both -TR and -SE line card variants. When using ICLs in breakout mode or for lower speed ICLs (<100G), a single QoS resource group within an NPU, called a "chunk" can support a maximum of up to 200 nV satellite access ports. The actual possible scale on a given chunk depends on the port density, and other users of these chunk resources. This can be monitored using **show qoschal resource summary** [*npid* | *locationnode-id*] command.

If a chunk is full, you can still distribute the satellites across ICLs on other chunks. There are 4 chunks per NPU, and the port to chunk mapping can be checked using **show qoschal ep** [*npid* | *locationnode-id*] command to achieve the full NPU scale.

This table provides the information about how the specified hardware uses the resources from the chunk.

Table 7: Chunk Resource Utilization

Physical Interfaces	All the interfaces mapped to the NPU consume a resource from the chunk.
Satellite Interfaces	Use resources based on the ICL type.
Cisco ASR 9000 3rd Generation Ethernet Line Cards	Use L1 resources.
Cisco ASR 9000 4th Generation QSFP28 based Dense 100GE Line Cards	Use L2 resources.
Cisco ASR 9000 5th Generation High-Density Multi-Rate Line Cards	

This table provides the information about the number of resources that each ICL type consumes.

Table 8: Chunk Resource Consumption

ICL Type	Resource Consumption	Example
Physical	Number of satellite interfaces * 1	If the ICL interface TenGigE0/0/0/0/0 hosts 20 satellite interfaces, then it consumes 20 (20 * 1) resources.
Bundle	Number of satellite interfaces * number of bundle ICL members mapped to NPU of interest	If Bundle ICL – 100 has two members, TenGigE0/0/0/9/0 and TenGigE0/0/0/9/0 , with each member hosting 44 satellite interfaces, then the members consume 88 (44 * 2) resources. For example configuration, see Configure Satellite Interfaces to Use Chunk Resources .

- The Cisco ASR 9000 5th Generation High-Density Multi-Rate Line Cards do not support MACsec sessions over Cisco ASR 9000v V2 satellite and Cisco NCS 5000 Series satellite access interfaces.



Note After RSP Failover, it is expected to see the satellite in Connecting state for about a min and OIR messages for satellite and sat-ether ports like below:

```
RP/0/RSP0/CPU0:Oct 24 05:19:43.278 : invmgr[252]: %PLATFORM-INV-6-OIRIN : OIR: Node 100/
inserted
RP/0/RSP0/CPU0:Oct 24 05:19:43.484 : invmgr[252]: %PLATFORM-INV-6-IF_OIRIN : xFP OIR:
SAT100/0/0 port_num: 0 is inserted, state: 1
```

However, the data plane forwarding is expected to be up throughout.



Note E-LMI is not supported over access LAG. OAM / EDPL are not supported over bundle ICL when access is also a bundle.

Refer to the *Cisco ASR 9000 Series Aggregation Services Router Release Notes* for additional software restrictions.

Configure Satellite Interfaces to Use Chunk Resources

The following example shows how a 4th Generation or 5th Generation line card is configured to use the chunk resources.

Initially, satellite 130 is configured with a Bundle ICL.

```
RP/0/RSP1/CPU0:ios#sh nv sat st sat 130
Wed Aug 7 11:59:30.696 UTC
Satellite 130
-----
Status: Connected (Stable)
```

```

Type: asr9000v
Displayed device name: Sat130
MAC address: 8478.ac06.7650
IPv4 address: 10.0.130.1 (auto, VRF: **nVSatellite)
Serial Number: CAT1740UIEF
Remote version: Compatibility Unknown (no local version)
  ROMMON: 128.0
  FPGA: 1.13
  IOS: 781.1
Received candidate fabric ports:
  nVFabric-GigE0/0/42-43 (permanent)
  nVFabric-TenGigE0/0/44-47 (permanent)
Configured satellite fabric links:
  Bundle-Ether130
-----
Status: Satellite Ready
Remote ports: GigabitEthernet0/0/0-43
Discovered satellite fabric links:
  TenGigE0/0/0/9/0: Satellite Ready; No conflict
  TenGigE0/0/0/9/1: Satellite Ready; No conflict

```

Here, the two members of Bundle ICL, **Ten0/0/0/9/0** and **Ten0/0/0/9/1** are hosted on NP2.

```

RP/0/RSP1/CPU0:ios#sh qoshal ep np 2 location 0/0/CPU0
Wed Aug  7 11:59:54.858 UTC
TY Options argc:6
nphal_show_chk -p 32800 ep -n 0x2
Done
  show qoshal ep np <np> location <node> front end
  Subslot 0 Ifsubsysnum 8 NP_EP :0 State :1 Ifsub Type :0x10030 Num Ports: 1 Port Type :
100G
Port: 0
      Egress : Chunk 0, L1 0
Subslot 0 Ifsubsysnum 9 NP_EP :1 State :1 Ifsub Type :0x10033 Num Ports: 4 Port Type : 10G

Port: 0
      Egress : Chunk 1, L1 0
Port: 1
      Egress : Chunk 1, L1 1
Port: 2
      Egress : Chunk 1, L1 2
Port: 3
      Egress : Chunk 1, L1 3
Subslot 0 Ifsubsysnum 10 NP_EP :2 State :1 Ifsub Type :0x10030 Num Ports: 1 Port Type :
100G
Port: 0
      Egress : Chunk 2, L1 0
Subslot 0 Ifsubsysnum 11 NP_EP :3 State :1 Ifsub Type :0x10030 Num Ports: 1 Port Type :
100G
Port: 0
      Egress : Chunk 3, L1 0
RP/0/RSP1/CPU0:ios#

```

This is a summary of resource allocation details for the hosted Bundle ICL members.

2(ICL members) x 44 (satellite access ports) = 88 + 4 (ASR 9k interfaces) = 92 Resources.

```

RP/0/RSP1/CPU0:ios#sh qoshal resource summary np 2 location 0/0/CPU0
Wed Aug  7 12:00:16.579 UTC
TY Options argc:7
nphal_show_chk -p 32800 resource summary -n 0x2
Done
  API Request Statistics (Per LC):                QoS EA(Success/Failed)      External
  Clients(Success/Failed)
  HAL_WRAPPER_GET_QID_REQUEST                    0 \ 0                      218 \ 0

```

HAL_WRAPPER_GET_RESULT_REQUEST	0 \ 0	218 \ 0
HAL_WRAPPER_CONFIG_TM_REQUEST	20 \ 0	22 \ 0
HAL_WRAPPER_PORT_DEFQ_SHAPER_CONFIG	0 \ 0	8 \ 0
HAL_WRAPPER_REMOVE_PORT_DEFQ_SHAPER	0 \ 0	5 \ 0
HAL_WRAPPER_CONFIG_SAT_TM_REQUEST	0 \ 0	128 \ 0
HAL_WRAPPER_REMOVE_SAT_QOS_IFH	0 \ 0	80 \ 0
HAL_WRAPPER_PORT_SHAPER_CONFIG_BULKREQ	0 \ 0	129 \ 0

Counters: X(Y/Z): X -> Resources Allocated in HW
Y -> Resource Allocated in SW
Z -> Refcount of each resource
Sanity Check: X==Y && Z >= X
:X (Y): X -> Resource Allocated in HW
Y -> Resource Allocated in SW
Client - 0, General - Not any Specific Client
SW and RefCount for Entities are accounted in Client 0(general)
Only HW count for Entities is per client
NP 2
=====

```
CLIENT : Platform Manager
Policy Instances: Ingress 0 Egress 95 Total: 95
TM 0
Entities: (L4 level: Queues)
Level   Chunk 0      Chunk 1      Chunk 2      Chunk 3
L4      4 ( 4/ 4) 368 ( 368/ 368) 4 ( 4/ 4) 4 ( 4/ 4)
L3(8Q)  1 ( 1/ 1) 92 ( 92/ 92) 1 ( 1/ 1) 1 ( 1/ 1)
L2    1 ( 1/ 1) 92 ( 92/ 92) 1 ( 1/ 1) 1 ( 1/ 1)
L1      7 ( 7/ 7) 0 ( 0/ 0) 0 ( 0/ 0) 0 ( 0/ 0)
```

Restrictions of the Cisco NCS 5000 Series Satellite

These are the restrictions and limitations of the Cisco NCS 5000 Series Satellite:

Hardware Limitations

- Since A99-10X400GE-X-TR/SE line cards have 400G ports and satellites have only 100G ICL ports, use **QSFP-100G-SR4** optics on the satellite side and the optic **QDD-2X100G-SR4-S**, configured to breakout into 2 100GE ports, on the host side. For information on breakout configurations, see *Managing Router Hardware* chapter in *System Management Configuration Guide for Cisco ASR 9000 Series Routers*
- Satellite hosting line cards must be second or third generation Ethernet cards on Cisco ASR 9000 Series Router. The line card can be –TR or –SE. If –TR, each satellite access gets 8 TM queues and overall nV and other scale limitations persist.
- The native Cisco NCS 5000 Series satellite SMU push feature, supported from Cisco IOS XR Software Release 6.1.1, stores Cisco NCS 5000 Series satellite images and pies on the disk.
- 100G ICLs are only supported on the 8x100G or 4x100G Cisco ASR 9000 High Density 100GE Ethernet line cards and the 1x100GE and 2x100GE MPAs..
- On the Cisco ASR 9000 Series Router host, 40GE ICL is supported only on the A9K-8X100GE-SE and A9K-8X100GE-TR variants of the Cisco ASR 9000 High Density 100GE Ethernet line cards with the optic pluggable CPAK-100G-SR10 breaking out into 2xQSFP-40G-SR4.

- Cisco NCS 5000 Series satellites require manual disk cleanup of inactive packages to continue having space for subsequent software upgrades. You can get the inactive package list from the output of **show nv satellite install package** on the host and then, remove the inactive/old packages through **install nv satellite <satellite id> remove package <package name>**.

General Limitations

- Cisco NCS 5000 Series satellite is supported as a satellite on Layer 1 Hub and Spoke topology in both single and dual host connectivity. The other advanced topologies are not supported.
- Unlike Cisco ASR 9000v satellite, Cisco NCS 5000 Series satellite does not reboot on being disconnected from the Host for more than 30 minutes as there are internal mechanisms to auto correct/recover the driver issues without reloads on this device.
- Auto QoS on Cisco NCS 5000 Series satellite follows a trusted CoS model and only differentiates incoming frames based on their CoS/DSCP values. No specific bandwidth reservation is done for any other protocol packets implicitly.
- Auto QoS on Cisco NCS 5000 Series satellite cannot classify incoming frames on the access ports based on MPLS exp. So, any tunneled high priority packet based on just MPLS exp may not get the right scheduling weights.
- Fan RPM thresholds are adaptive and driven using algorithms for optimum speed thresholds. Only fan tray online insertion and removal and fan failure alarms are reported.
- 10GE ports can operate at restricted speeds of 10/100/1000 M on qualified optics. While the software does not support changing the speed and auto negotiation parameters for such ports using the configuration commands, the port will always auto negotiate to the maximum peer capability. Hence, the restricted speed operations are only supported with peers which can also auto negotiate. The interfaces continue to be named as 10GE interfaces with 10/100/1000 M only reflecting in the operating speed, bandwidth, and route metrics
- Due to the remote port configuration being mapped to a satellite id rather than a specific satellite type internally, 1G remote port configuration from legacy satellites may also be allowed for Cisco NCS 5000 Series satellite id. However, this is a misconfiguration and the satellite ports must always be configured as 10G ports even when 1G optics are used. This is in line with the previous restriction on 10G ports being used for 1G optics but still being 10G ports operating at restricted speeds. 1G remote port configuration is rejected by the satellite otherwise.
- Existing caveats for the features – on loaded on the Host and offloaded, if any to the satellite remain. The addition of this new satellite variant does not implicitly add enhanced capabilities. None of the offload features on Cisco ASR9000v are supported on Cisco NCS 5000 Series satellites unless explicitly stated.
- Only a maximum of 40 Cisco NCS 5000 Series satellites for each Cisco ASR 9000 Series Host are allowed.
- Scale restrictions for QoS offload are same as regular QoS on the Cisco NCS 5000 Series routers.
- When upgrading the Cisco NCS 5000 Series satellite from an older image to Cisco IOS XR Software Release 6.1.x or later, the auto FPD upgrade feature has a caveat which requires a one time manual upgrade of FPD images during this upgrade on each of the Cisco NCS 500x satellite. This upgrade procedure is similar to that of a standalone Cisco NCS 500x device where an upgrade **hw-module fpd <> CLI** is used in the admin mode of the satellite console. For more details on the standalone procedure, refer the *Upgrading FPD* chapter in the *System Management Configuration Guide for Cisco NCS 5000 Series Routers*.

- QoS offload on Cisco NCS 5000 Series satellites cannot support multiple marking action. For more details on remaining action support, please see the QoS offload supported capability matrix in the Supported Platform-Specific Information for QoS Offload section of *Modular QoS Configuration Guide for Cisco ASR 9000 Series Routers*.
- While Cisco NCS 5000 Series satellites can support up to 10 members in a bundle ICL, the Cisco ASR 9000 Series Host has hardware restrictions on the number of access ports that can be supported for each NP. As the access ports are instantiated for each member of a bundle ICL, the maximum number of access ports supported in Layer 1 Hub and Spoke topology(200), can be easily exceeded if the bundle ICL members are on the same NP. For example, in a case where all 80 ports of a Cisco NCS 5002 satellite are mapped to a bundle ICL, only two members would consume up to 160 access port resources. Hence, the expectation would be to spread out such members across NPs and line cards to achieve the maximum supported scale as well as redundancy benefits.
- For the native SMU push feature, combo SMUs, tar balls, and non-XR SMUs are not supported. Only Cisco IOS XR SMUs(process restart or reload) in rpm format is supported by this infrastructure.
- When 40G ports are used as 40G ICLs on the Cisco NCS 5000 Series Satellite, the 40G ports are nothing but the 100G ports operating at restricted speed with no auto negotiation. The interfaces will continue to be named as HundredGigE interfaces and just the operating speed, bandwidth and route metrics will be reflected as 40G. The corresponding fabric ports created on the Cisco ASR 9000 Series Router host will also be displayed as nVfabric-HundredGigE ports even though they operate at 40G speed.
- Only Hub and Spoke single host topology is supported with 40G ICL ports.
- We do not recommend you to perform an RSP switchover in between a satellite install operation through reference lists or the file option (For more information on these install operation variants, see the topic [Install Reference Command, on page 81](#)). This is because the install operation remains incomplete even after the RSP switchover is over. To recover from this condition, you should terminate the incomplete install operation manually after the RSP switchover and then start a new install operation.

Configuration guidelines for Cisco 8000 Series satellite port extenders

These configuration guidelines apply to Cisco 8000 Series satellite port extenders:

Hardware and optics support

- Ensure the host router is Cisco ASR9000 with supported line cards and routers. See [Cisco ASR 9000 Series Router Satellite nV Hardware Compatibility Matrix](#).
- The optics supported on Cisco 8011-4G24Y4H-I and Cisco 8011-32Y8L2H2FH routers are also supported when these routers operate in the satellite port extender mode. For more information on optics support, refer to the [Transceiver Module Group \(TMG\) Compatibility Matrix Tool](#).
- When you change an access port SFP on the satellite port extender device, for example, 10G SFP replaced by 1G SFP, ensure that on the host device remote-port configuration is modified.
- The Alarm LED displays SDAC Control session state on satellite port extender device. LED state cannot be monitored from the host device; you must connect to the satellite port extender device and collect the LED state.

Alarm LED Color	SDAC control session state
Red	Down

Alarm LED Color	SDAC control session state
Off	Up
Amber	Default (Up state)

- The satellite port extender device automatically sends these asynchronous chassis and port alarms to the host:

Alarms	Type	Cisco 8011-4G24Y4H-I	Cisco 8011-32Y8L2H2FH
(Non-DOM) Critical High Temperature	Chassis	Supported	Supported
(Non-DOM) Critical High Voltage	Chassis	Supported	Supported
(Non-DOM) PEM No input detected	Chassis	Supported	Supported
(Non-DOM) Fan Tray Missing	Chassis	Supported	Supported
(Non-DOM) Power Module Missing	Chassis	Supported	Supported
(Non-DOM) ALL Fan Tray Removal from chassis	Chassis	Not Supported	Not Supported
(Non-DOM) FAN Airflow Direction Mismatch	Chassis	Not Supported	Not Supported
(Non-DOM) PEM Airflow Direction Mismatch	Chassis	Not Supported	Not Supported
Unsupported Optic	Port	Supported	Supported
DOM Temperature (Critical/Warning, low/high)	Port	Supported	Supported
DOM Voltage (Critical/Warning, low/high)	Port	Supported	Supported
DOM Current (Critical/Warning, low/high)	Port	Supported	Supported
DOM Tx Power (Critical/Warning, low/high)	Port	Supported	Supported
DOM Rx Power (Critical/Warning, low/high)	Port	Supported	Supported

DOM sensors of optics

- When periodic polling for environment sensors occurs, the satellite port extender sends the DOM values of optics to the host.
- During the initialization process, the host receives the DOM thresholds.
- If any of the instant sensor values exceed the defined thresholds, the system sets the matching alarm field.

Sensors	Cisco 8011-4G24Y4H-I	Cisco 8011-32Y8L2H2FH
Temperature	Supported	Supported
Voltage	Supported	Supported

Sensors	Cisco 8011-4G24Y4H-I	Cisco 8011-32Y8L2H2FH
Current (Bias)	Only Lane 0 is supported	Only Lane 0 is supported
Tx Power	Only Lane 0 is supported	Only Lane 0 is supported
Rx Power	Only Lane 0 is supported	Only Lane 0 is supported

Environment sensor monitoring

The satellite port extender device exports a list of environment sensors to the host. The host polls these sensors every 180 seconds to retrieve current data. The satellite port extender device reports only the Critical High sensor alarms to the host device.

FPD monitoring and display

The host system monitors and displays FPD versions for connected satellite port extender devices. To optimize system resources, the host excludes infrequently changing FPDs from this monitoring process.

The host device monitors and displays these FPDs:

FPD	Host monitor/display
ADM_CONFIG	Yes
IOFPGA	Yes
PRIM_BOOTLOADER	Yes
STDBY_FPGA	Yes
TAM_FW	Yes
IoFpgaGolden	No
StdbyFpgaGolden	No
TamFwGolden	No
LI-PrimMCU	No
LI-SecMCU	No

Topology support

The Cisco 8000 Series satellite port extenders support these topologies:

- Layer 1 Hub and Spoke
- Dual home

Speed support

- The Cisco 8000 Series satellite port extenders support:
 - 1GbE, 10GbE, and 25GbE Access port speeds.
 - 10GbE, 100GbE, and 400GbE ICL speeds.

Offload feature scale

Scale for offloaded features align with the feature support on Cisco 8011-4G24Y4H-I and Cisco 8011-32Y8L2H2FH satellite port extenders.

Secure satellite configuration

With Cisco 8000 Series satellite port extenders, the following configurations are required:

- If all Route Processors (RPs) on the host possess a SUDI certificate with a trust-chain rooted at Cisco Root CA 2099, with a validity date extending through 2099, the satellite port extenders must remain in the default **auth-mode enabled** mode.
- When ASR 9000 hosts use these RP or RSPs, then the Cisco 8000 Series satellite port extenders must be set in **auth-mode disabled** mode:
 - A99-RP-F
 - A9K-RSP5-X-TR
 - A9K-RSP5-X-SE
 - A9K-RP3-X-TR
 - A9K-RP3-X-SE



Note In dual head deployments, both host devices must be configured with the same authentication mode.

- Satellite port extenders used in **auth-mode disabled** mode must have the optional TFTP package installed.

Quality of Service support

For information on configuration guidelines for Quality of Service (QoS), see [Quality of Service, on page 31](#).

Restrictions of the Cisco 8000 Series satellite port extenders

These restrictions apply to Cisco 8000 Series satellite port extenders:

Hardware restrictions

- The Cisco 8011-4G24Y4H-I and Cisco 8011-32Y8L2H2FH Series satellite port extenders differ from the Cisco ASR 9000v satellite. These devices do not reboot if they remain disconnected from the host

for more than 30 minutes. Internal mechanisms allow these devices to correct driver issues automatically. These devices recover without the need for a reload.

Software restrictions

- Breakout ports are not supported on the satellite port extender device.
- Dual host switchover is not hitless and may result in traffic convergence delays.
- In-Service Software Upgrades (ISSU) is not supported.
- BNG is not supported on Cisco 8011-4G24Y4H-I and Cisco 8011-32Y8L2H2FH Series satellite port extenders.
- The Cisco 8000 Series satellite port extenders do not support the telnet command. However, if a Cisco 8000 Series satellite port extender is connected in **auth-enabled** mode with a secret configured, you can securely access the satellite port extender by using the SSH command, **ssh satellite satellite id**. This allows secure remote login to the satellite port extender device.
- The **upgrade on-connect reference smu** command is not supported. Only **upgrade on-connect image-reference** command is supported.

Operational restrictions

- If a Cisco ASR 9000 host is equipped with ASR 9000 Series High Density Ethernet Line Cards (5th Generation), it does not support the CFM feature over the satellite access ports. Additionally, the CFM offload feature is not supported for Cisco 8011-4G24Y4H-I and Cisco 8011-32Y8L2H2FH satellite port extenders.
- MACsec is not supported in Cisco IOS XR Release 26.2.1.
- If the 100GbE ICL link is oversubscribed by access ports, the router moves those VOQs to DRAM to avoid SRAM depletion. Because DRAM provides a fixed throughput of 90 Gbps to 95 Gbps, this bandwidth must be shared among all evacuated VOQs.
- Dynamic switching between satellite mode and standalone mode requires a system reload.

Access port restrictions

- If the satellite port extender access port is set to 25GbE, Cisco Discovery Protocol (CDP) is not supported.
- Access ports operate in full-duplex mode; manual configuration of the duplex setting is not supported.
- Access port supports minimum MTU size 1514 and maximum MTU size 9216.
- Access port does not support loopback line configuration.

Satellite nV Usability Enhancements

Satellite nV usability enhancements introduce the following functionalities:

nV Satellite Auto Image Upgrade

nV satellite auto image upgrade feature introduces support for automated upgrade of the satellite image in these two scenarios:

- Following the Cisco IOS XR software release upgrade
- Satellite is connected to a host and the image on the satellite is not matching the one packaged in Cisco IOS XR software

To configure the nV satellite auto image upgrade feature, use the **upgrade on-connect** command in nV satellite configuration.



Note Starting with Cisco IOS XR Software Release 6.6.1, the command for configuring nV satellite auto image upgrade feature is **upgrade [on-connect | on-first-connect] <reference ref_name >**.



Note For dual-head satellite systems, the auto upgrade configuration must only be applied on one host, that is, the host that the satellite will install from. There is currently no checking for this, and if the user applies the configuration on both hosts and the hosts have different satellite versions installed, then the satellite may go into a loop of installing, until either:

- the configuration is removed from one host OR
- the satellite version activated on both hosts is the same



Note The auto upgrade feature downgrades the satellite image automatically if the host software is downgraded to a release that still supports this feature. This is unintentional as the downgrade of some of the satellite firmware like ROMMON is not supported. It is recommended to turn off the auto upgrade feature before such downgrade operations.

Auto Upgrade Behavior

Auto upgrade *on-connect* variant means that a satellite is auto upgraded to the current version installed on the host the next time the control connection to the satellite is established. On establishing the control connection, the configuration is checked, and an upgrade is started if the version is not the latest and the user has configured auto upgrade on-connect.



Note Starting with Cisco IOS XR Software Release 6.3.1, auto upgrade *on-first-connect* variant is similar but the configuration check and upgrade happens only during the first time when the control connection is established. If the satellite is in a discovered state, control connection may reset but auto upgrade will not take place.

on-connect OR *on-first-connect* does not trigger an auto upgrade at the time of applying the configuration (and so does not impact a satellite that is already connected). However, given that a satellite upgrade impacts

traffic, a notification *syslog* is generated any time the configuration is applied to a connected satellite that currently does not have the latest software version installed.



Note The auto upgrade feature stops a satellite from progressing further into the control state machine, until the operation is complete.



Note Due to the above mentioned behavior of auto upgrade and because the Cisco ASR 9000v satellite does not support ROMMON downgrade, a downgrade to Cisco IOS XR Software Release 5.3.x based releases on the host will end up with the satellites being stopped until the downgrade completes, which would never happen because the ROMMON cannot be downgraded. This can result in the Cisco ASR 9000v satellites stuck in auto upgrade and not coming up. The recommendation is to turn off auto upgrade for any downgrade to Cisco IOS XR Software Release 5.3.x on the host from any other future release that has a higher ROMMON version for Cisco ASR 9000v.



Note For the Cisco NCS 5000 Series Satellite, auto upgrade to a reference list of software packages is possible with an optional reference keyword and reference name along with upgrade `[on-connect | on-first-connect]` configuration. For more details on defining a named reference list, refer to the section [Install Reference Command, on page 81](#). On Cisco ASR 9000 Series Router host running IOS XR 64 Bit operating system, auto upgrade for the Cisco NCS 5000 Series satellite is only possible with the reference list due to restrictions in supporting the satellite nV pie.

Simplified Access to Satellites

The provision of new variants to the telnet command simplifies the process of accessing satellites. These new variants of the telnet command make it easier to the users with specific task groups to be able to telnet to the satellite.

There are two methods of using the command:

- If the satellite is connected, the user can specifically use the satellite ID to connect.

Example: telnet satellite 100 ----> telnet to satellite with ID 100.

An error message is generated if this method does not work.

- If the satellite is not connected, the user can use the VRF and IP address of the satellite to connect.

Example: telnet satellite vrf default 1.2.3.4 ----> telnet to a satellite in the default VRF with IP address 1.2.3.4

**Note**

- The VRF must always be specified by the user. If the user has configured any IP address configuration, then the VRF is either *default* or the configured VRF name. Else, the VRF is the hidden satellite VRF name (**nVSatellite). The VRF is visible in the status command when applicable.
- The Cisco 8000 Series satellite port extenders do not support the telnet command. However, if a Cisco 8000 Series satellite port extender device is connected in **auth-enabled** mode with secret configured, you can securely access the satellite by using the SSH command, **ssh satellite satellite id**. This allows secure remote login to the satellite port extender device.

MPP Check Skip for Satellite Image Download with Auto IP

The Management Plane Protection (MPP) feature in Cisco IOS XR software provides the capability to restrict the interfaces on which network management packets are allowed to enter a device.

User MPP configuration requiring to allow Trivial File Transfer Protocol (TFTP) if any other MPP configuration is present on the router, is complicated, especially when users do not know the protocol being used to download image for nV Satellites. The upgrade of the satellite image fails unless an entry is added to MPP configuration for the satellite VRF (if any) to allow TFTP through the Inter-Chassis Link (ICL) interface .

The enhancement to skip MPP checks for nV satellites configured with auto IP, automatically allows TFTP over the satellite ICL interface (for satellite image download) by skipping MPP checks for authenticated satellites. TFTP is only allowed under the hidden satellite VRF name (**nVSatellite). So, any satellites configured with manual IP or VRF will still need MPP configuration to be modified to allow TFTP for the configured VRF on the ICL .

Implementing a Satellite nV System

The Interface Control Plane Extender (ICPE) infrastructure has a mechanism to provide the Control Plane of an interface physically located on the Satellite device in the local Cisco IOS XR software. After this infrastructure is established, the interfaces behave like other physical ethernet interfaces on the router.

The ICPE configuration covers these functional areas, which are each required to set up full connectivity with a Satellite device:

Defining the Satellite nV System

Each satellite that is to be attached to Cisco IOS XR Software must be configured on the host, and also be provided with a unique identifier. In order to provide suitable verification of configuration and functionality, the satellite type, and its capabilities must also be specified.

Further, in order to provide connectivity with the satellite, an IP address must be configured, which will be pushed down to the satellite through the Discovery protocol, and allows Control protocol connectivity.

This task explains how to define the satellite system by assigning an ID and basic identification information.

Procedure

Step 1 **configure**

Example:

```
RP/0/RSP0/CPU0:router# configure
```

Enters global configuration mode.

Step 2 **nv**

Example:

```
RP/0/RSP0/CPU0:router(config)# nv
```

Enters the nV configuration submode.

Step 3 **satellite** *Sat ID*

Example:

```
RP/0/RSP0/CPU0:router(config-nv)# satellite <100-65534>
```

Declares a new satellite that is to be attached to the host and enters the satellite configuration submode. .

Note

Adding a new satellite to a host does not impact any other working satellites or line cards in the host router.

Step 4 **serial-number** *string*

Example:

```
RP/0/RSP0/CPU0:router(config-satellite)# serial-number CAT1521B1BB
```

Serial number is used for satellite authentication.

Note

Serial number is required for Cisco 8000 Series satellite port extenders.

Step 5 **description** *string*

Example:

```
RP/0/RSP0/CPU0:router(config-satellite)# description Milpitas Building12
```

(Optional) Specifies any description string that is associated with a satellite such as location and so on.

Step 6 **type** *type_name*

Example:

```
RP/0/RSP0/CPU0:router(config-satellite)# satellite 200 type ? asr9000v Satellite type
```

Defines the expected type of the attached satellite.

The satellite types are asr9000v, asr9000v2, ncs5001, ncs5002, 8011-4G24Y4H-I, and 8011-32Y8L2H2FH. For other supported satellite types, see [Prerequisites for Configuration](#).

Step 7 **ipv4 address** *address*

Example:

```
RP/0/RSP0/CPU0:router(config-satellite)# ipv4 address 10.22.1.2
```

Specifies the IP address to assign to the satellite. ICPE sets up a connected route to the specified IP address through all configured ICLs.

Step 8 **secret password**

Example:

```
RP/0/RSP0/CPU0:router(config-satellite)# secret <password>
```

Specifies the secret password to access the satellite. In order to login you must use root as the user name and password as the secret password.

Secret password is required to enable SSH access to Cisco 8000 Series satellite port extenders.

Step 9 **candidate-fabric-ports interface-type slot/subslot/port-range**

Example:

```
RP/0/RSP0/CPU0:router(config-satellite)# candidate-fabric-ports nVFabric-GigE 0/0/21-25
```

Specifies the additional ports on the satellite which can be used as dynamic ICLs/ fabric ports along with the default set of ports. The interface type can be nVFabric-GigE, nVFabric-TenGigE or nVFabric-HundredGigE. The value of slot and subslot can be in the range of 0-5. The port ranges are specified as a comma-separated list of sub-ranges. Each subrange consists of either a single number, or a low and high (both inclusive) hyphen-separated range. The sub-ranges must be in a non-overlapping, and strictly in an ascending order.

Step 10 **end or commit**

Example:

```
RP/0/RSP0/CPU0:router(config)# end or commit
```

Saves configuration changes.

- When you issue the **end** command, the system prompts you to commit changes:
Uncommitted changes found, commit them before exiting(yes/no/cancel)?
[cancel]:
- Entering **yes** saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.
- Entering **no** exits the configuration session and returns the router to EXEC mode without committing the configuration changes.
- Entering **cancel** leaves the router in the current configuration session without exiting or committing the configuration changes.
- Use the **commit** command to save the configuration changes to the running configuration file and remain within the configuration session.

Auto-IP

The Auto IP feature improves the plug-and-play set up of an nV satellite system. With the Auto IP feature, IP connectivity to the satellite is automatically provisioned. As a result:

- The nV Satellite Loopback interface is created on the host

- Loopback interface is given an IP address from a private satellite VRF
- Satellite fabric links are unnumbered to the loopback interface
- The IP address assigned to satellite is auto-generated from the satellite VRF

In the case of Auto IP, you need not specify any IP addresses (including the IP address on the Satellite itself, under the satellite submode), and the nV Satellite infrastructure assigns suitable IP addresses, which are taken from the 10.0.0.0/8 range within a private VRF to both the satellites and the satellite fabric links. All such Auto IP allocated satellites are in the same VRF, and you must manually configure IP addresses, if separate VRFs are required.



Note You cannot combine auto-configured Satellites with manually configured Satellites within the same satellite fabric.

The auto-IP feature assigns an IP address in the format 10.x.y.1 automatically, where:

- x is the top (most significant) 8 bits of the satellite ID
- y is the bottom 8 bits (the rest) of the satellite ID



Note The Auto-IP configuration is the recommended mode of configuration over the manual Host IP address configuration. You can also override the Auto IP feature by using the standard IP configuration.

For examples on configuration using the Auto-IP feature, see [Configuration Examples for Satellite nV System](#).

Configuring the Host IP Address

This procedure gives you the steps to configure a host IP address on a loopback interface.

Procedure

Step 1 **configure**

Example:

```
RP/0/0RSP0/CPU0:router# configure
```

Enters global configuration mode.

Step 2 **interface loopback0**

Example:

```
RP/0/0RSP0/CPU0:router(config)# interface loopback0
```

Specifies the loopback address for the interface.

Step 3 **ipv4 address**

Example:

```
RP/0/0RSP0/CPU0:router(config-int)# ipv4 address 8.8.8.8 255.255.255.255
```

Configures the host IP address on a loopback interface.

Step 4 end or commit

Example:

```
RP/0/0RSP0/CPU0:router(config)# end or RP/0/0RSP0/CPU0:router(config)# commit
```

Saves configuration changes.

- When you issue the **end** command, the system prompts you to commit changes:
Uncommitted changes found, commit them before exiting(yes/no/cancel)?
[cancel]:
- Entering **yes** saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.
- Entering **no** exits the configuration session and returns the router to EXEC mode without committing the configuration changes.
- Entering **cancel** leaves the router in the current configuration session without exiting or committing the configuration changes.
- Use the **commit** command to save the configuration changes to the running configuration file and remain within the configuration session.

Configuring Inter-Chassis Links and IP Connectivity

Inter-Chassis Links (ICLs) need to be explicitly configured, in order to indicate which satellite is expected to be connected. You must also specify the access port, that is down-stream 10GigE ports, which cross-link up to the Host through the configured ICL. In order to establish connectivity between the host and satellite, suitable IP addresses must be configured on both sides. The satellite IP address is forwarded through the Discovery protocol. The configuration is described in the section, [Defining the Satellite nV System, on page 52](#).



Note This configuration shows the use of the global default VRF. The recommended option is to use a private VRF for nV IP addresses as shown in the [Satellite Management Using Private VRF, on page 105](#) subsection under *Configuration Examples for Satellite nV System*.

Procedure

Step 1 configure

Example:

```
RP/0/RSP0/CPU0:router# configure
```

Enters global configuration mode.

Step 2 **interface** *interface-name***Example:**

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE0/2/1/0
```

The supported inter-chassis link interface types are limited by the connectivity provided on the supported satellites. GigabitEthernet, TenGigE, FortyGigE, HundredGigE and Bundle-Ether interfaces are the supported ICL types.

Step 3 **description****Example:**

```
RP/0/RSP0/CPU0:router(config-interface)# description To Sat5 1/46
```

Specifies the description of the supported inter-chassis link interface type.

Step 4 **ipv4 point-to-point****Example:**

```
RP/0/RSP0/CPU0:router(config-interface)# ipv4 point-to-point
```

(Optional) Configures the IPv4 point to point address.

Step 5 **ipv4 unnumbered loopback0****Example:**

```
RP/0/RSP0/CPU0:router(config-interface)# interface unnumbered loopback0
```

(Optional) Configures the IPv4 loopback address on the interface.

Step 6 **nV****Example:**

```
RP/0/RSP0/CPU0:router(config-if)# nv
```

Enters the Network Virtualization configuration mode.

Step 7 **satellite-fabric-link satellite** *<id>***Example:**

```
RP/0/RSP0/CPU0:router(config-int-nv)# satellite-fabric-link satellite 200
```

Specifies that the interface is an ICPE inter-chassis link.

Step 8 **remote-ports** *interface-type***Example:**

```
RP/0/RSP0/CPU0:router(config-int-nv)# remote-ports GigabitEthernet 0/0/0-30
```

Configures the remote satellite ports 0 to 30.

Step 9 **end** or **commit****Example:**

```
RP/0/RSP0/CPU0:router(config)# end or RP/0/RSP0/CPU0:router(config)# commit
```

Saves configuration changes.

- When you issue the **end** command, the system prompts you to commit changes:

Uncommitted changes found, commit them before exiting(yes/no/cancel)?

[cancel]:

- Entering **yes** saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.
- Entering **no** exits the configuration session and returns the router to EXEC mode without committing the configuration changes.
- Entering **cancel** leaves the router in the current configuration session without exiting or committing the configuration changes.
- Use the **commit** command to save the configuration changes to the running configuration file and remain within the configuration session.

For information on QoS configuration on ICLs, see *Cisco ASR 9000 Series Aggregation Services Router Modular Quality of Service Configuration Guide*.

Configuring the Inter-Chassis Links in a Dual Home Mode

These are the steps for configuring Inter-chassis links in the case of a dual home mode.

Before you begin

MPLS LDP needs to be up and running between the two hosts for the dual home configuration.

Procedure

Step 1 **configure**

Example:

```
RP/0/RSP0/CPU0:router# configure
```

Enters global configuration mode.

Step 2 **interface interface-name**

Example:

```
RP/0/RSP0/CPU0:router(config)# interface TenGigE0/2/1/0
```

The supported inter-chassis link interface types are limited by the connectivity provided on the supported satellites. GigabitEthernet, TenGigE, and Bundle-Ether interfaces are the only support ICL types.

Step 3 **satellite-fabric-link satellite <id>**

Example:

```
RP/0/RSP0/CPU0:router(config-interface)# satellite-fabric-link satellite 100
```

Configures the ICPE inter-chassis link for the specified satellite.

Step 4 **ipv4 point-to-point**

Example:

```
RP/0/RSP0/CPU0:router(config-interface)# ipv4 point-to-point
```

(Optional) Configures the IPv4 point to point address.

Step 5 **ipv4 unnumbered loopback0**

Example:

```
RP/0/RSP0/CPU0:router(config-interface)# interface unnumbered loopback0
```

(Optional) Configures the IPv4 loopback address on the interface.

Step 6 **redundancy iccp-group**

Example:

```
RP/0/RSP0/CPU0:router(config-interface)# redundancy iccp-group 1
```

Configures the ICCP redundancy group. In order to configure multiple ICCP redundancy groups, repeat steps 6 through 10 with a different redundancy group number.

Step 7 **minimum preferred links num**

Example:

```
RP/0/RSP0/CPU0:router(config-satellite-fabric-link)# redundancy minimum preferred links 2  
(or)
```

```
RP/0/RSP0/CPU0:router(config-satellite-fabric-link)# redundancy  
RP/0/RSP0/CPU0:router(config-nV-red)# minimum preferred links 2
```

(Optional) Configures the minimum number of preferred satellite fabric bundle-ether links. To configure this parameter, the interface must be a bundle-ether interface. If you do not enable this parameter on any host, then it is assumed as 0 by default on that host. Hence, the decision of failover is judged using that value. The range is 1 to 64.

Note

You can either go to the redundancy mode to configure **minimum preferred links** or you can specify **redundancy** keyword before configuring the **minimum preferred links**.

Step 8 **member neighbor 9.9.9.9**

Example:

```
RP/0/RSP0/CPU0:router(config-interface)# member neighbor 9.9.9.9
```

Configures the LDP neighbor.

Step 9 **backbone interface interface_type**

Example:

```
RP/0/RSP0/CPU0:router(config-interface)# backbone interface TenGigE0/1/0/3
```

(Optional) Configures the backbone interface for the PE isolation.

Step 10 **remote-ports interface-type**

Example:

```
RP/0/RSP0/CPU0:router(config-int-nv)# remote-ports GigabitEthernet 0/0/0-30
```

Configures the remote satellite ports 0 to 30.

Step 11 **end or commit**

Example:

```
RP/0/RSP0/CPU0:router(config)# end or RP/0/RSP0/CPU0:router(config)# commit
```

Saves configuration changes.

- When you issue the **end** command, the system prompts you to commit changes:

Uncommitted changes found, commit them before exiting(yes/no/cancel)?

[cancel]:

- Entering **yes** saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.

- Entering **no** exits the configuration session and returns the router to EXEC mode without committing the configuration changes.

- Entering **cancel** leaves the router in the current configuration session without exiting or committing the configuration changes.

- Use the **commit** command to save the configuration changes to the running configuration file and remain within the configuration session.

Configuring the Satellite nV Access Interfaces

The access 1Gigabit Ethernet/10GigE interfaces on the satellite are represented locally in Cisco IOS XR Software using interfaces named Gigabit Ethernet similar to other non-satellite 1Gigabit Ethernet/10GigE interfaces. The only difference is that the rack ID used for a satellite access 1Gigabit Ethernet/10GigE interface is the configured satellite ID for that satellite.

These interfaces support all features that are normally configurable on 1Gigabit Ethernet/10GigE interfaces (when running over a physical ICL), or Bundle-Ether interfaces (when running over a virtual ICL).



Note With respect to the dual home mode, the satellite access port configuration needs to be done on both the active and standby hosts. The administrator needs to make sure that the same configuration is applied for a particular access port on both the active and standby hosts. In addition, any feature configurations on satellite-access ports needs to be configured identically on both the hosts. Also, the configuration synchronization between the hosts is not currently supported. See [Satellite Interface Configuration](#).

The Cisco 8000 Series satellites support 1GbE, 10GbE, and 25GbE Ethernet access port speeds.

Configuring the Fabric CFM for L1 Physical ICL

This procedure gives you the steps to configure CFM on a Satellite nV Fabric link interface. CFM can be configured with L1 Physical ICL architecture. It can also be configured on Dual Home modes.



Note While configuring Ethernet CFM, if no level or interval values are selected, then level 0 and interval of 1 second are selected by default.



Note Fabric CFM is supported on both physical and bundle ICLs with minimum CCM interval being 1 second for Cisco ASR 9000v and 100ms for Cisco NCS 500x satellites. When you configure CCM intervals lower than the minimum interval supported by the satellite, then it may be auto corrected while programming the satellite. But when you configure intervals below the minimum interval supported by the host, then it would be rejected during configuration itself. It is strongly recommended to configure only up to the minimum interval as specified.

SUMMARY STEPS

1. **configure**
2. **interface** *interface-name*
3. **nv**
4. **satellite-fabric-link satellite** *<id>*
5. **ethernet cfm**
6. **level** *value*
7. **continuity-check interval** *time*
8. **end** or **commit**

DETAILED STEPS

Procedure

- | | |
|---------------|---|
| Step 1 | configure
Example:
<pre>RP/0/RSP0/CPU0:router# configure</pre> Enters global configuration mode. |
| Step 2 | interface <i>interface-name</i>
Example:
<pre>RP/0/RSP0/CPU0:router(config)# interface Gigabit 0/1/0/0</pre> Specifies the supported inter-chassis link interface types limited by the connectivity provided on the supported satellites. |
| Step 3 | nv
Example:
<pre>RP/0/RSP0/CPU0:router(config-if)# nv</pre> Enters the Network Virtualization configuration mode. |
| Step 4 | satellite-fabric-link satellite <i><id></i>
Example:
<pre>RP/0/RSP0/CPU0:router(config-int-nv)# satellite-fabric-link satellite 200</pre> Specifies that the interface is an ICPE inter-chassis link. |

Step 5 **ethernet cfm****Example:**

```
RP/0/RSP0/CPU0:router(config-int-nv)# ethernet cfm
```

Enters Ethernet Connectivity Fault Management (CFM) configuration mode.

Step 6 **level value****Example:**

```
RP/0/RSP0/CPU0:router(config-int-nv-cfm)# leve 0
```

Specifies the CFM level. It ranges from 0 to 7.

Step 7 **continuity-check interval time****Example:**

```
RP/0/RSP0/CPU0:router(config-int-nv-cfm)# continuity-check interval 100ms
```

(Optional) Enables Continuity Check and specifies the time interval at which CCMs are transmitted.

Note

Level values of 0 to 7 and interval values of 3.3 ms, 10 ms, 100 ms, 1 sec, 10 sec, 1 min and 10 min are allowed while configuring Ethernet CFM.

Step 8 **end or commit****Example:**

```
RP/0/RSP0/CPU0:router(config)# end
```

or

```
RP/0/RSP0/CPU0:router(config)# commit
```

Saves configuration changes.

- When you issue the **end** command, the system prompts you to commit changes:
Uncommitted changes found, commit them before exiting(yes/no/cancel)?
[cancel]:
 - Entering **yes** saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.
 - Entering **no** exits the configuration session and returns the router to EXEC mode without committing the configuration changes.
 - Entering **cancel** leaves the router in the current configuration session without exiting or committing the configuration changes.
- Use the **commit** command to save the configuration changes to the running configuration file and remain within the configuration session.

Plug and Play Satellite nV Switch Turn up: (Rack, Plug, and Go installation)

1. Unpack the satellite rack, stack, and connect to the power cord.

2. Plug in the qualified optics of correct type into any one or more of the SFP+ slots and appropriate qualified optics into SFP+ or XFP slots on the host. Connect through the SMF/MMF fiber.

When Cisco NCS 5000 Series Satellite is used as satellite, plug in the Cisco NCS 5002/NCS 5001 qualified 100G optics into the first QSFP28 slot (100GigE 0/0/1/0) and a qualified CPAK optics on the host. Connect through a regular SMF fiber. Only one time bootstrap requires the 1st port. Otherwise, any of the 100GigE ports on the satellite can be used.

For 10G and 40G ICLs, a similar bootstrap on fixed ports is needed for plug and play operation in case of first time boot up after a factory reset. The highest 10G port turns on for plug and play in factory reset mode.

When Cisco 8000 Series satellite port extender is used as a satellite, plug in the Cisco 8011-4G24Y4H-I or Cisco 8011-32Y8L2H2FH qualified optics into the slots and a qualified CPAK optics on the host. Connect through a regular SMF fiber.

This table summarizes the initial connection ports available for Cisco 8000 Series satellite port extender variants Cisco 8011-4G24Y4H-I and Cisco 8011-32Y8L2H2FH, including port types, interface IDs, and notes on port mode configurations.

PID	Port type	Ports/Interface IDs	Notes on port mode configuration
Cisco 8011-4G24Y4H-I	100GigE	0/0/0/0 to 0/0/0/3	
	TenGigE	0/0/0/26 to 0/0/0/27	
Cisco 8011-32Y8L2H2FH	TenGigE	0/0/0/42 to 0/0/0/43	
	400GigE	0/0/0/0, 0/0/0/3	If in default port mode
	100GigE	0/0/0/0 to 0/0/0/3	If in port mode 4x100-32x10
	100GigE	0/0/0/0 to 0/0/0/2	If in port modes 3x100-40x10 and 3x100-40x25

On a Cisco 8000 Series satellite port extender:

- Set the **auth-mode**, if required.
- On Cisco 8011-32Y8L2H2FH, set **port-mode**, if required.



Note The Cisco NCS 5000 Series Satellite is shipped in a factory mode. When the satellite is discovered for the first time, it would automatically detect itself as a satellite on receiving probes from the host and would go for a reset and come up in satellite mode. This would be transparent to the user and happens only on a first time discovery of a Cisco NCS 5000 Series satellite. Subsequent reloads or image upgrades will not trigger or require an extra reload.



Note The nV system can use Cisco ASR 9904, Cisco ASR 9006, Cisco ASR 9010, Cisco ASR 9901, Cisco ASR 9906, Cisco ASR 9910, Cisco ASR 9912 and Cisco ASR 9922 Series Routers as hosts. The Cisco ASR 9000v Satellite, the Cisco NCS 5000 Series Satellite, or the Cisco 8000 Series Satellites can be used as satellite devices.

To configure wavelength on DWDM SFP+, use the following CLI command on satellite console:

test dwdm wavelength set ppmId wavelength_channel_number



Note ppmId = port number -1

The following example shows how to configure wavelength channel 20 on port 45.

Satellite#**test dwdm wavelength set 44 20**

To see the configured wavelength, use the following CLI command on satellite console:

- **show satellite dwdm-dump ppmId**
- **show satellite inventory port 45**



Note It is mandatory to configure the same wavelength on both hosts and satellite, you can follow the same steps above on the hosts.

3. Configure the host for nV operations as described in the sections [Defining the Satellite nV System, on page 52](#), [Configuring the Host IP Address, on page 55](#) and [Configuring Inter-Chassis Links and IP Connectivity, on page 56](#). Configure the satellite nV system through CLI or XML on the host on 100GigE ports for Cisco NCS 5002 Satellite.
4. Power up the chassis of the satellite device.



Note For power supply considerations of ASR 9000v, refer to the *Appendix C, Cisco ASR 9000 and Cisco CRS Satellite Systems* of the *Cisco ASR 9000 Series Aggregation Services Router Hardware Installation Guide* online.

5. You can check the status of the satellite chassis based on these chassis error LEDs on the front face plate.
 - If the Critical Error LED turns ON, then it indicates a serious hardware failure.
 - If the Major Error LED turns ON, then it indicates that the hardware is functioning well but unable to connect to the host.
 - If the Critical and Major LEDs are OFF, then the satellite device is up and running and connected to the host.
 - You can do satellite ethernet port packet loopback tests through the host, if needed, to check end to end data path.



Note When the satellite software requires an upgrade, it notifies the host. You can do an inband software upgrade from the host, if needed. Use the **show nv satellite status** on the host to check the status of the satellite.



Note For the satellite image upgrade to work, you must ensure that the management-plane CLI is not configured on the Cisco ASR 9000 Series Router. If it is configured, then you need to add this exception for each of the 10GigE interfaces, which are the satellite ICLs. This is not required for auto IP configurations from Cisco IOS XR Software Release 5.3.2.

Synchronous Ethernet (SyncE) Offload in nV System

Cisco IOS XR Software Release 5.2.0 supports Synchronous Ethernet (SyncE) offload, a physical layer frequency protocol used to provide frequency synchronization in an nV satellite system both from the host to the satellites, and from the satellites to downstream devices.

Automatic syncE offload configuration is available on the host and syncE is disabled on the satellite until Ethernet Synchronization Messaging Channel (ESMC) messages are received from the host. When an ESMC message is received, the satellite enables syncE on the fabric and the access interfaces.

From Cisco IOS XR Software Release 6.2.1 onwards, per-fabric syncE offload configuration is available on the host for the Cisco NCS 5000 Series Satellite, to explicitly enable syncE on a per-fabric basis. The Cisco NCS 5000 Series Satellite inherits the per-fabric syncE offload configuration from the host and applies it to the corresponding satellite ICL port. Following this, all the access interfaces on the satellite which are mapped to that specific ICL port start to transmit SyncE signals.

From Cisco IOS XR Software Release 26.2.1 onwards, per-fabric syncE offload configuration is available on the host for the Cisco 8000 Series satellite port extender, to explicitly enable syncE on a per-fabric basis. The Cisco 8000 Series satellite port extender inherits the per-fabric syncE offload configuration from the host and applies it to the corresponding satellite ICL port. Following this, all the access interfaces on the satellite which are mapped to that specific ICL port start to transmit SyncE signals.

The **show frequency synchronization interfaces** and **clear frequency synchronization esmc statistics** commands on the host are extended to include satellite access ports.

From Cisco IOS XR Software Release 6.3.1 onwards, per-access-interface syncE offload configuration is available on the host for the Cisco NCS 5000 Series Satellite. The syncE offload configuration on the host is no longer automatically fanned out to all the access interfaces which are mapped to the specific ICL port. Instead, the feature is configured explicitly on the required access interfaces and the ICL ports depending on the configuration on the host.

Different phases of the syncE offload feature over the releases**Table 9: Comparison of the syncE offload feature over the Cisco IOS XR Software Releases**

Cisco IOS XR Software Release	Prior to Cisco IOS XR Software Release 6.2.1	Cisco IOS XR Software Release 6.2.x	Cisco IOS XR Software Release 6.3.1 onwards	Cisco IOS XR Software Release 26.2.1 onwards
SyncE offload type	Automatic - SyncE offload is enabled on the satellite on receipt of the ESMC messages	Per-fabric - SyncE offload is enabled on the ICL and all cross-linked access interfaces.	Per-access-interface - SyncE offload is enabled on the ICLs and/or access ports depending on configuration used.	Not applicable
Cisco ASR 9000v Satellite SyncE offload support	Automatic syncE offload is supported	Per-fabric syncE offload is not supported. Only Automatic SyncE offload is supported.	Per-access-interface syncE offload is not supported. Only Automatic SyncE offload is supported.	Not applicable
Cisco NCS 5000 Series Satellite SyncE offload support	Automatic syncE offload is not supported	Per-fabric syncE offload is supported.	Per-access-interface syncE offload is supported.	Not applicable
SyncE offload support on Cisco 8011-32Y8L2H2FH and Cisco 8011-4G24Y4H-I satellite port extenders	Not applicable	Not applicable	Not applicable	Automatic-SyncE offload is enabled on the satellite on receipt of the ESMC messages. Per-fabric syncE offload is supported. Per-access-interface syncE offload is supported.

In the case when the host is running an image prior to Cisco IOS XR Software Release 6.3.1 and the Cisco NCS 5000 Series Satellite has the Cisco IOS XR Software Release 6.3.1 or later image, the satellite maintains full backwards compatibility and responds to syncE offload messages from the host by applying the appropriate configuration. For example, syncE configure messages sent for an ICL will automatically fan-out the configuration to any of the cross-linked satellite nV access-interfaces.

Alternately, in the case when the host is running the Cisco IOS XR Software Release 6.3.1 or later image and the Cisco NCS 5000 Series Satellite has an image that is prior to Cisco IOS XR Software Release 6.3.1, the host determines the satellite's capability upon establishing a connection and the satellite drops any syncE specific messages from the host that it cannot interpret



Note SyncE offload is supported on the nV system with the Cisco ASR 9000 Series Router host running Cisco IOS XR 64-bit operating system from the Cisco IOS XR Software Release 6.5.1 onwards.

Restrictions of SyncE Offload on the nV System

The following are some of the restrictions of Synchronous Ethernet offload within an nV system:

- Only limited syncE offload support is provided to customers in release 5.2.0.
- ASR9000v and NCS 5000 are the supported satellites.
- Hub-and-spoke (Dual-home) is the only supported topology.
- Physical and Bundle ICLs are supported.
- Host cannot synchronize to the satellite.
- Minimal configuration support.
- Minimum show command support.
- Only supported for directly connected satellites in hub-and-spoke topologies.
- Commands to configure the host's fabric interfaces as syncE inputs are not permitted, as synchronizing the host to one of its sites is not supported.
- Application of Frequency Synchronization configuration commands on the satellite access ports is not permitted.
- SyncE offload features will not work on Copper SFPs and GLC-GE-100FX SFPs.
- SyncE offload is supported only on 10G ICL ports of ASR9000v1/v2 satellites operating in 10G mode.
- SyncE offload is not supported on 1G ICL ports and 10G ICL ports operating in 1G mode of ASR9000v1/v2 satellites.

Restrictions of SyncE Offload on the Cisco NCS 5000 Series Satellite

The following are some of the restrictions of syncE offload on Cisco NCS 5000 Series Satellite:

- SyncE offload on Cisco NCS 5000 Series satellite is only supported for a directly connected Hub-and-Spoke topology with no intermediate devices between the host and the satellite. The mode can either be a single or a dual head nV system.
- EDC ports cannot be used to receive SyncE signals on Cisco NCS 5000 series satellite. There should be at least one 100G ICL or a 10G ICL other than the EDC ports to receive SyncE from the Host. On Cisco NCS 5002 satellite, EDC ports are from ports 40-79 and on Cisco NCS 5001 satellite, they are from ports 16-39.
- There is no support to receive clocking from the satellite or satellite access towards the host. While the host side configuration for receive isn't blocked, only transmit is supported.
- Clock selection is done only based on the best QL value. Priority is not considered. If two clock sources are received with same QL value, then one clock source is selected arbitrarily.
- Logs from Cisco NCS 5000 Series Satellite frequency synchronization event changes or errors will not be sent to the host logging buffers.
- SyncE input configuration options, such as selection input or quality receive, are not supported on satellite nV access-interfaces.

- The only syncE offload configuration options that are available on the satellite ICL ports are **enable** and **disable**.
- SyncE offload is not supported with 40GE ICL ports between the Cisco ASR 9000 Series Router host and the Cisco NCS 5000 Series satellite.

Hub-and-Spoke Topology for SyncE Offload

A hub-and-spoke topology is the simplest topology where a centralized hub is connected to the peripherals called "spokes" and it can be used for syncE offload in an nV system. In this topology, the satellites are directly connected to the host by using several links or a single link bundle. The methods are as follows:

- **Satellite connected with several devices**—The satellites are connected to the host through several links.
- **Satellites connected with a link bundle**— The satellites are connected to the host through a single link bundle.

The Inter-Chassis Links (ICLs) appear as point-to-point links for the host and the satellite. When you set up a dual-host satellite, ensure that you apply identical configuration on each host to avoid synchronizing the configuration between the two hosts.

Configuring SyncE Offload on Cisco ASR 9000 Series Router Hosts

To implement syncE offload:

- The host is configured to derive a frequency signal from the external clock source and to provide frequency synchronization to the satellites using the host's fabric interfaces.
- Satellite based configuration is not required. The user must configure the syncE offload feature considering the host as a standalone or non-nV device. The user must configure syncE offload on the fabric interfaces using the existing syncE configuration.



Note In a dual host system, the syncE offload configuration on both the hosts must be identical to ensure consistency if one of the hosts fail.

- After receiving the valid SyncE signal and the Quality Level (QL) that the associated Ethernet Synchronization Message Channel Synchronization Status Messages (ESMC SSMs) over one or more of its fabric links, the satellite selects one of the fabric links to synchronize to, and uses this timing stream to drive SyncE output on its access interfaces.



Note There is no configuration that controls the behavior of the satellite device and synchronization is enabled automatically on both its fabric interfaces and access interfaces after SyncE information is received.

- You can configure any downstream device to synchronize with this syncE signal.

Basic Configuration:

- Configuration of syncE offload on the host(s) includes:
 - Configuring external clock source as frequency input.
 - Configuring ICL interfaces as syncE outputs, with ESMC output.
- SyncE is disabled by default. It will be automatically enabled on the satellite after ESMC packet is received.
- Use syncE specific show commands on the host to verify the state of the satellite. The **show frequency synchronization interfaces** command is extended to show satellite access port information.

Configuration Examples of SyncE Offload on Cisco ASR 9000 Series Router Hosts

Dual-home Satellite Configuration:

The following are configuration examples for the dual-home satellite configuration.

Configuring the Cisco ASR 9000v Satellite in Host A:

```
nv
satellite 100
  type asr9000v
  ipv4 address 100.0.0.3
  description sat100
  serial-number CAT1708U0NA
!
```

Configuring the Cisco ASR 9000v Satellite in Host B:

```
nv
satellite 100
  type asr9000v
  ipv4 address 100.0.0.3
  description sat100
  serial-number CAT1708U0NA
!
```

Configuring the fabric interface for the satellite on Host A:

```
interface Loopback100
  ipv4 address 100.0.0.1 255.255.255.0
!
interface Bundle-Ether100
  ipv4 point-to-point
  ipv4 unnumbered Loopback100
nv
  satellite-fabric-link satellite 100
  redundancy
  iccp-group 1
!
  remote-ports GigabitEthernet 0/0/0-43
!
!
interface TenGigE0/0/0/0
```

```
bundle id 100 mode on
!
```

Configuring the fabric interface for the satellite on Host B:

```
interface Loopback100
  ipv4 address 100.0.0.2 255.255.255.0
!
interface TenGigE0/0/0/0
  ipv4 point-to-point
  ipv4 unnumbered Loopback100
  nv
    satellite-fabric-link satellite 100
    redundancy
      iccp-group 1
    !
    remote-ports GigabitEthernet 0/0/0-43
  !
!
!
```

Configuring ICCP Redundancy and MPLS LDP on Host A:

```
redundancy
  iccp
    group 1
    member
      neighbor 70.0.0.2
    !
  !
!
!
mpls ldp
  router-id 70.0.0.1
  address-family ipv4
    discovery targeted-hello accept
  !
  interface TenGigE0/0/0/1
  !
!
```

Configuring ICCP Redundancy and MPLS LDP on Host B:

```
redundancy
  iccp
    group 1
    member
      neighbor 70.0.0.1
    !
  !
!
!
mpls ldp
  router-id 70.0.0.2
  address-family ipv4
    discovery targeted-hello accept
  !
  interface TenGigE0/0/0/1
  !
!
```

Configuring ICCP Interface IP Address on Host A:

```
interface TenGigE0/0/0/1
  ipv4 address 70.0.0.1 255.255.255.0
!
```

Configuring ICCP Interface IP Address on Host B:

```
interface TenGigE0/0/0/1
  ipv4 address 70.0.0.2 255.255.255.0
!
```

Configuration to enable SyncE offload with Cisco NCS 5000 Series Satellite and Cisco 8000 Series Satellite port extenders

The first step is setting up the host to transmit syncE signals including ESMC to the satellite. This is same as configuring syncE offload on Cisco ASR9000 Series Router hosts. The configuration involves turning on syncE transmit on the ICL ports outside the nV mode and on the members in case of a bundle ICL.

The second step is to enable Cisco NCS5000 Series satellite and Cisco 8000 Series satellite port extender to receive SyncE signals from the ICL ports and transmit them over the access ports mapped to that ICL port. A new configuration on the host to enable syncE offload on Cisco NCS 5000 Series Satellite and on Cisco 8000 Series satellite on a per-fabric basis is added.

Below configuration turns on syncE receive on the ICL port and syncE transmit on all the access ports mapped to this ICL port on the Cisco NCS 5000 Series Satellite and on the Cisco 8000 Series satellite port extender.

```
Router(config)# interface <interface name>
Router(config-if)# nv satellite-fabric-link satellite <satellite ID>
Router(config-satellite-fabric-link)# frequency synchronization
```



Note If the first step is skipped, then the clock in Cisco NCS 5000 Series Satellite and in Cisco 8000 Series satellite port extender will be in free run mode. If the first step is done after second step, then the Cisco NCS 5000 Series Satellite and Cisco 8000 Series satellite port extender will start in free run mode but will lock to the ICL as input source when the host starts transmitting the clock output.

If the second step is skipped, then the Cisco NCS 5000 Series Satellite and Cisco 8000 Series satellite port extender will remain SyncE opaque and there won't be any clock output on its access ports.

For bundle ICL, syncE offload is configured per member, although the offload configuration in the nV mode is still configured on the bundle ICL nV sub mode configuration.

Running Configuration for enabling per-fabric syncE offload with Cisco NCS 5000 Series Satellite

In this example, Cisco NCS 5002 router is used as the satellite device connected to an ASR 9000 host.

```
nv satellite 100
  type ncs5002

frequency synchronization
  quality itu-t option 1

interface loopback0
  ipv4 address 10.2.3.5

interface TenGigE 0/0/0/1
  frequency synchronization
  ipv4 point-to-point
  ipv4 unnumbered loopback 0
  nv satellite-fabric-link satellite 100
```

```

frequency synchronization
remote-ports TenGigE 0/0/0

clock-interface sync 0 location 0/RSP0/CPU0
port-parameters bits-in 2m
frequency synchronization
selection input
ssm disable
quality-level receive exact itu-t option 1 PRC

```

Running Configuration for enabling per-fabric syncE offload with Cisco 8000 Series satellite port extender

In this example, Cisco 8011-32Y8L2H2FH and Cisco 8011-4G24Y4H-I router is used as the satellite port extender device connected to a Cisco ASR 9000 host.

```

Router#show platform
Node                               Type                               State                               Config state
-----
0/RSP0/CPU0                       A9K-RSP5-SE (Standby)             IOS XR RUN                         NSHUT
0/RSP1/CPU0                       A9K-RSP5-SE (Active)             IOS XR RUN                         NSHUT
0/FT0                             ASR-9006-FAN-V2                  OPERATIONAL                       NSHUT
0/FT1                             ASR-9006-FAN-V2                  OPERATIONAL                       NSHUT
0/0/CPU0                          A9K-16X100GE-TR                  IOS XR RUN                         NSHUT
0/PT0                             A9K-AC-PEM-V2                   OPERATIONAL                       NSHUT
Router#show running-config nv
nv
  satellite 100
    type 8011-4G24Y4H-I
    serial-number FLM290808B1
  !
  satellite 200
    type 8011-32Y8L2H2FH
    serial-number FLM29200B3U
  !
!

```

Configuring Per-Access-Interface SyncE Offload on the Cisco NCS 5000 Series Satellite and Cisco 8000 Series satellite port extender

SyncE offload per-access-interface configuration allows the user to enable syncE offload explicitly on specific satellite nV access interfaces. This enhancement is available from Release 6.3.1 onwards on Cisco NCS 5000 Series Satellite and from Release 26.2.1 on Cisco 8000 Series satellite port extender. Unlike prior releases, syncE offload configuration on the ICL ports is no longer automatically configured on all the cross-linked satellite access interfaces.

In addition to the syncE offload configurations in the previous section, the below configuration is also required to enable per-access-interface syncE offload on the Cisco NCS 5000 Series Satellite and Cisco 8000 Series satellite port extender.

```

Router(config)# interface <satellite nV access interface name>
Router(config-if)# frequency synchronization
Router(config-if-freqsync)# ssm disable
Router(config-if-freqsync)# quality transmit { exact | highest | lowest }
                           itu-t option { 1 | 2 generation 1 | 2 generation 2 } { DNU | PRC | ... } ...

```

Running Configuration for enabling per-access-interface syncE offload with Cisco NCS 5000 Series Satellite:

```

nv satellite 100
  type ncs5002

```

```

frequency synchronization
  quality itu-t option 1

interface loopback0
  ipv4 address 10.2.3.5

interface TenGigE 0/0/0/1
  frequency synchronization
  ipv4 point-to-point
  ipv4 unnumbered loopback 0
  nv satellite-fabric-link satellite 100
  frequency synchronization
  remote-ports TenGigE 0/0/0

clock-interface sync 0 location 0/RSP0/CPU0
  port-parameters bits-in 2m
  frequency synchronization
  selection input
  ssm disable
  quality-level receive exact itu-t option 1 PRC

interface TenGigE 100/0/0/0
  frequency synchronization
  ssm disable
  quality transmit exact itu-t option 1 PRC

```

Running Configuration for enabling per-access-interface syncE offload with Cisco 8000 Series satellite port extender:

```

Router#show running-config frequency synchronization
frequency synchronization
  quality itu-t option 1
  log selection errors
!

Router#show running-config interface HundredGigE0/0/0/4
interface HundredGigE0/0/0/4
  frequency synchronization
  quality transmit exact itu-t option 1 PRC
!
nv
  satellite-fabric-link satellite 100
  frequency synchronization
  remote-ports TenGigE 0/0/6
!
!
!

Router#show running-config interface HundredGigE0/0/0/0
! Remove bundle configurations and shutdown states from HundredGigE interfaces
interface HundredGigE0/0/0/0
  frequency synchronization
  quality transmit exact itu-t option 1 PRC
!
nv
  satellite-fabric-link satellite 200
  frequency synchronization
  remote-ports TenGigE 0/0/18
!
!
!

```

```

Router#show running-config interface TenGigE100/0/0/6
interface TenGigE100/0/0/6
  frequency synchronization
  !
!

Router#show running-config interface TenGigE200/0/0/18
interface TenGigE200/0/0/18
  frequency synchronization
  !
!

Router#show frequency synchronization interfaces brief
Flags:  > - Up           D - Down           S - Assigned for selection
        d - SSM Disabled  x - Peer timed out   i - Init state
        s - Output squelched

Fl  Interface                QLrcv  QLuse  Pri  QLsnd  Output driven by
====
>   TenGigE100/0/0/6         Fail   n/a    0   PRC   None
>   TenGigE200/0/0/18        Fail   n/a    0   PRC   None
>   HundredGigE0/0/0/0       DNU    n/a    100  PRC   Internal0 [0/RSP1/CPU0]
>   HundredGigE0/0/0/4       DNU    n/a    100  PRC   Internal0 [0/RSP1/CPU0]
Router#

```

Minimum Active Links on nV System

The Minimum Active Links feature allows the user to configure the minimum number of bundle members which must be active in a bundle satellite-fabric-link in order for traffic to go through that bundle.

There are mainly 2 types of Minimum Active Links on the nV System.

- Soft Minimum Active Links for Dual Home mode
- Hard Minimum Active Links for Single Host mode



Note It is not recommended to configure both Soft and Hard Minimum Active Links together on the same ICL.

Soft Minimum Active Links for Dual Home Mode

The Soft minimum active links feature for dual home mode allows you to configure a minimum number of active links in a bundle satellite-fabric-link. Hence, in a Dual Home setup, if the number of active links to the active host is less than the configured minimum due to any failure on member links, then the satellite failover to the standby host. When soft minimum active links is configured, failover is executed if another suitable host is available or else the traffic is left unaffected. In the case where both the active and standby hosts have less active links than the configured values, then no switch over occurs.



Note If a split brain event occurs followed by the number of active links on the active host dropping below the configured amount, then the satellite does not failover unless there are no active links remaining.

Configuring Soft Minimum Active Links on Dual Home Mode

The Soft Minimum Active links can be configured on the host as below:

```
RP/0/RSP0/CPU0:router(config)# interface <Bundle-ether ICL interface name>
RP/0/RSP0/CPU0:router(config)# nv satellite-fabric-link satellite <satellite ID>
RP/0/RSP0/CPU0:router(config)# redundancy minimum preferred links <value>
```

Configuration example for Soft Minimum Active Links for Dual Home Mode

```
RP/0/RSP0/CPU0:router(config)# interface Bundle-Ether1
RP/0/RSP0/CPU0:router(config-if)# nv satellite-fabric-link satellite 100
RP/0/RSP0/CPU0:router(config-satellite-fabric-link)# redundancy minimum preferred links 2
RP/0/RSP0/CPU0:router(config-satellite-fabric-link)# commit
```

Hard Minimum Active Links for Single Host Mode


The Hard Minimum Active links feature for Single Host mode allows the user to configure the number of bundle members which must be active in order for traffic to go through that route. This is achieved by shutting down the access ports on the satellite should the threshold not be satisfied. This allows the Customer Edge devices connected to the satellite to immediately detect the degradation and reroute traffic accordingly.

Detection of active links falling below the configured value is done on both the host and the satellite.

• Host Side Detection

The host monitors the state of bundle members and when the number of active links falls below the configured value, it requests the satellite to bring down the access ports, over the L1 channel. This is implemented on Cisco ASR 9000v Satellite, Cisco NCS 5000 Series Satellite, and Cisco 8000 Series satellite port extender.

Figure 8: Host Side Detection of Active Links falling below the configured value

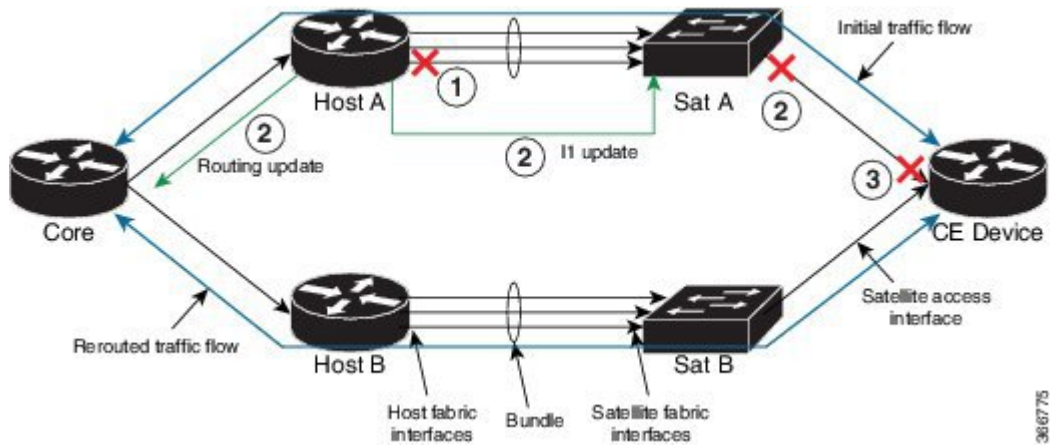

In the above figure, the traffic can pass through 2 possible routes from the Core router to the Customer Edge (CE) device. The route taken by the initial traffic flow is indicated in the above figure. Host A has a hard minimum active links configuration of 3 on its bundle ICL with Satellite A. If one of the bundle members of the Bundle ICL goes down, the following sequence of events take place:


1. Host A detects that the bundle member of the bundle ICL has gone down. Now, the number of active links are below the hard minimum active links configuration.

2. Host A updates Satellite A and the satellite brings down the satellite nV access-interfaces.
3. Loss of signal is detected on the CE device and the traffic takes the alternate route as indicated by the "rerouted traffic flow" in the above figure.

• Satellite Side Detection

The host sends the hard minimum active links configuration to the satellite. The satellite monitors the state of the ICL bundle member links and brings down access ports on crossing threshold for the number of hard minimum active links. Access port state is then sent to the host. This improves convergence times, and ensures that the access ports are still shut down on the satellite if the control connection is down. The satellite side detection is implemented on the Cisco NCS 5000 Series Satellite and on Cisco 8000 Series satellite port extender.

Figure 9: Satellite Side Detection of Active Links falling below the configured value

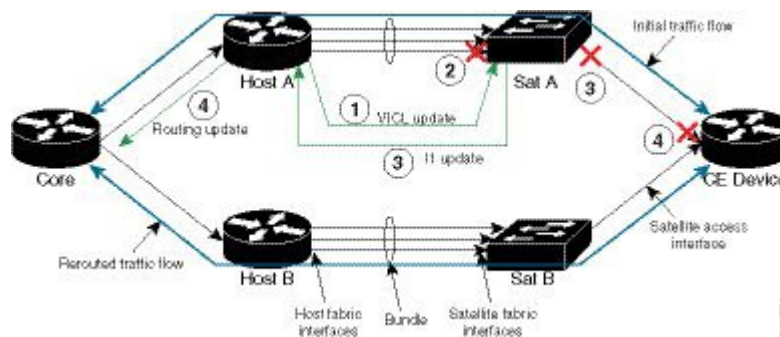

For example, in the same topology as before, these events take place during the satellite side detection.

1. Host A informs the Satellite A of the hard minimum active links configuration when the satellite is in connected state.
2. When the bundle member goes down, Satellite A detects it. Now, the number of ICL bundle member links is below the hard minimum active links value.
3. Satellite A immediately brings down the satellite nV access interfaces and updates the Host A.
4. Host A detects that the satellite nV access interfaces have gone down and makes the routing update. Though it may have already done this during the host side detection. And as in host side detection, when the satellite nV access interfaces are down, the interfaces on the CE device also go down.



Note

In the event that the number of ICL bundle members links becomes lower than the hard minimum active links value, the satellite side detection is faster compared to the host side detection. And thus satellite side detection results in faster traffic convergence. Since Cisco NCS 5000 Series Satellite and Cisco 8000 Series satellite port extender supports satellite side detection, the traffic convergence will be faster than with a Cisco ASR 9000v Satellite where only host side detection is supported.

Configuring Hard Minimum Active Links on Single Host Mode

The Hard Minimum Active links can be configured on the host as below:

```
Router(config)# interface Bundle-Ether1
Router(config-if)# nv satellite-fabric-link satellite 100
Router(config-satellite-fabric-link)# minimum required links 2
Router(config-satellite-fabric-link)# commit
```

Verification of Hard Minimum Active Links for Single Host Mode

The Hard Minimum Active Links can be verified in the output of the command **show nv satellite status**

```
Router# show nv satellite status satellite 100
Satellite 100
-----
Status: Connected (Stable)
Type: ncs5002
Displayed device name: Sat100
MAC address: 00ba.c000.000b
IPv4 address: 10.0.100.1 (auto, VRF: **nVSatellite)
Serial Number: INS1719U1MHsatellite
Remote version: Compatible (latest version)
b2.3.1
Satellite Emulator
Received candidate fabric ports:
  nVFabric-GigE0/0/0-3,6-9 (permanent)
  nVFabric-TenGigE0/0/0-3,6-9 (permanent)
Configured satellite fabric links:
  Bundle-Ether1
-----
Status: Satellite Ready
Required Links: Satisfied (Configured 2, Active 3)
No Port Ranges
Discovered satellite fabric links:
  TenGigE0/1/0/0: Satellite Ready; No conflict
  TenGigE0/1/0/1: Satellite Ready; No conflict
  TenGigE0/1/0/2: Satellite Ready; No conflict
```

Upgrading and Managing Satellite nV Software

Satellite software images are bundled inside a PIE and the PIE name is dependent on the type of satellite, such as **asr9k-9000v-nV-px.pie** within the Cisco ASR 9000 Series Router package. The Cisco IOS XR software production SMU tool can be used to generate patches for the satellite image in the field to deliver bug fixes or minor enhancements without requiring a formal software upgrade.

For more information on auto image upgrade supported from Cisco IOS XR Software Release 5.3.2 and later, see [nV Satellite Auto Image Upgrade](#), on page 50.

Image Upgrade for nV Satellite

Image Upgrade for Cisco ASR 9000v Satellite

The **asr9k-asr9000v-nV-px.pie** contains two sets of binaries, namely, the intermediate binaries and the final binaries. When a Satellite nV system running Cisco IOS XR Software prior to Cisco IOS XR Software Release 5.1.1 is upgraded to Cisco IOS XR Release 5.1.1, the satellite downloads the intermediate binaries and reloads as per the instructions of the operator. These intermediate binaries include the logic to request the file name from the host rather than hard coding the file name. Also, they automatically trigger the second download

(final binaries) without requiring manual intervention. When a Satellite nV system running Cisco IOS XR Software Release 5.1.1 or later is upgraded to Cisco IOS XR Software Release 5.3.x, the satellite does not require intermediate image transfers and reloads once with the latest image.



Note The **show nv satellite status** command does not display the intermediate version. However, it displays the final Cisco IOS XR Software Release 5.1.1 and prompts for any further upgrade. But, internally two reloads happen. On the other hand, when you upgrade from Cisco IOS XR Release 5.1.x to future releases, two reloads do not occur. When you downgrade, the system does not downgrade two releases. CFM needs to be disabled if image upgrade is done over Bundle ICL for Cisco ASR9000v satellite.



Note An auto transfer internal message comes up when the second software reload happens, which requires no explicit user-intervention.



Note For upgrading from a release prior to Cisco IOS XR Software Release 5.1.1, the Satellite nV System must be connected in the Hub and Spoke topology as the previous releases do not support the dual head mode.

Image Upgrade for Cisco NCS 5000 Series Satellite

The existing nV pie based satellite image packaging model is extended to Cisco NCS 5000 series satellites from Cisco IOS XR Software Release 6.0.1. The image binary including all device FPD upgrade is done through **asr9k-ncs500x-nV-px.pie** as in the case of Cisco ASR9000v. The upgrade image for Cisco NCS 5000 Series satellites including firmware is available as an nV pie on the Cisco ASR 9000, which once activated can be used to push images to the relevant satellites in the connected state.



Note A message indicating a successful image upgrade is displayed in **show nv satellite status** command even if the image upgrade has failed on the satellite. However the **show nv satellite status** command will show that satellite does not have the latest image even after the upgrade.

Whereas, in Cisco IOS XR Software Release 5.3.0, in case of a failure, the host tries to transfer the image indefinitely; the upgrade will recover with subsequent retries if the failure is transient. A syslog message on the host indicates that retry is in progress.

On the other hand, for Cisco IOS XR Software Release 5.3.1 and later, in case of a failure, the host tries to transfer the image indefinitely. Additionally, **install nv satellite <sat-id> abort** command can be used to stop any active image upgrade operations on a particular satellite.



Note For the Cisco NCS 5000 Series Satellite, the native satellite image cannot be added and activated on the Cisco ASR 9000 Series Router host running the IOS XR 64 bit operating system due to its large size. Hence for loading a new image on the Cisco NCS 5000 Series Satellite, the procedure mentioned in the section [Installing native images and SMUs for Cisco NCS 5000 Series Satellite, on page 80](#) needs to be followed. Transfer and activation of the Cisco NCS 5000 Series Satellite image can be initiated either directly from the TFTP or from the hard disk of the Cisco ASR 9000 Series Router host.

Image Upgrade for Cisco 8000 Series satellite port extender

For Cisco 8000 Series satellite port extenders, use these steps to upgrade the image:

1. Generate an ISO image, such as **8000-aarch64-26.2.1.09I.iso**, which contains base image, any SMUs that you want, and the optional TFTP package if you use the **auth-disabled** mode. If you want to upgrade a base image, use a golden ISO image.
2. Add the ISO image to the host.
3. Apply it to the satellite port extender.

Prerequisites

- You must have installed the satellite installation procedure using the Plug and Play Satellite installation procedure. For more information, check the topic [Plug and Play Satellite nV Switch Turn up: \(Rack, Plug, and Go installation\), on page 62](#) in this chapter.

Installing a Satellite

To download and activate the software image on the satellite, use the **install nv satellite** satellite ID / all **transfer/activate** commands. The **transfer** command downloads the image to the satellite. When the **transfer** command is followed by the **activate** command, the software is activated on the satellite.



Note For ASR9000v1/v2 satellites with ICL bundle links, the CFM interval should be more than or equal to 1 minute for successful image transfer and satellite upgrade.

```
RP/0/RSP0/CPU0:sat-host# install nv satellite 100 transfer
```

```
Install operation initiated successfully.
```

```
RP/0/RSP0/CPU0:sat-host#RP/0/RSP0/CPU0:May  3 20:12:46.732 : icpe_gco[1146]:
%PKT_INFRA-ICPE_GCO-6-TRANSFER_DONE : Image transfer completed on Satellite 100
```

```
RP/0/RSP0/CPU0:sat-host# install nv satellite 100 activate
```

```
Install operation initiated successfully.
```

```
LC/0/2/CPU0:May  3 20:13:50.363 : ifmgr[201]: %PKT_INFRA-LINK-3-UPDOWN : Interface
GigabitEthernet100/0/0/28, changed state to Down
```

```
RP/0/RSP0/CPU0:May  3 20:13:50.811 : invmgr[254]: %PLATFORM-INV-6-OIROUT : OIR: Node 100
removed
```



Note If the **activate** command is run directly, then the software image is transferred to the satellite and also activated.

```
RP/0/RSP0/CPU0:sat-host# install nv satellite 101 activate
```

```
Install operation initiated successfully.
```

```
RP/0/RSP0/CPU0:sat-host#RP/0/RSP0/CPU0:May  3 20:06:33.276 : icpe_gco[1146]:
%PKT_INFRA-ICPE_GCO-6-TRANSFER_DONE : Image transfer completed on Satellite 101
RP/0/RSP0/CPU0:May  3 20:06:33.449 : icpe_gco[1146]: %PKT_INFRA-ICPE_GCO-6-INSTALL_DONE :
Image install completed on Satellite 101
RP/0/RSP0/CPU0:May  3 20:06:33.510 : invmgr[254]: %PLATFORM-INV-6-OIROUT : OIR: Node 101
removed
```



Note For the satellite image upgrade to work, you must ensure that the management-plane CLI is not configured on the Cisco ASR 9000 Series Router. If it is configured, then you need to add this exception for each of the satellite ICLs. This is not required for Auto IP configurations from Cisco IOS XR Software Release 5.3.2.

Ensure that the tftp homedir, tftp vrf default ipv4 server homedir disk0 is not configured on the host when using manual IP default configuration, because this may cause the image transfer to fail.

You can include the exception using this CLI:

```
control-plane
management-plane
inband
!
!
interface TenGigE0/0/0/5 <=== To enable TFTP on nV satellite ICL
allow TFTP
```

If you do not include this exception, then the image download and upgrade fails.

Installing native images and SMUs for Cisco NCS 5000 Series Satellite

You can see the [Native Image and SMU Push Support for Cisco NCS 5000 Series Satellites, on page 35](#) section under the **Features Supported in the Satellite nV System** for description of this feature. These are the SMU/image install command syntax:

```
Router# install nv satellite {all | id-range | id } transfer file file-name
```

```
Router# install nv satellite {all | id-range | id } activate | deactivate | remove package
package-name
```

```
activate Install a new image or package on the satellite
deactivate Deactivate a package on the satellite
remove Remove a deactivated package on the satellite
```

The *file-name* argument specifies the name of the file to be transferred, which may be in a remote location (to be copied through TFTP, FTP or SFTP) or may be present on the host device. Note that this may only be a single package (batched transfer of tar balls and multiple packages stated consecutively may be supported in future releases). The *package-name* argument specifies the name of the package on the satellite that is to be activated, deactivated, or removed. It is reported in the logs for the transfer operation and in the satellite software version show commands (for example, after transferring a package, the **inactive** command can be used to find the package name to activate).

From Cisco IOS XR Software Release 6.3.1 onwards, native Cisco NCS 5000 Series Satellite System Admin VM and Host VM SMUs appear in the list of packages in the command **show nv satellite install packages** and also as one of the available package options in the command **install nv satellite *satellite-id* activate package**.

```
Router# show nv satellite install packages satellite 200
Active Packages: 2
    ncs5k-xr-6.3.1 version=6.3.1 [Boot image]
    ncs5k-sysadmin-6.3.1 version=6.3.1 [Boot image]
Inactive Packages: 1
    ncs5k-sysadmin-6.3.1.CSCuv34432.rpm
Committed Packages: 2
    ncs5k-xr-6.3.1 version=6.3.1 [Boot image]
    ncs5k-sysadmin-6.3.1 version=6.3.1 [Boot image]
```

The base package contains two entries, one for the native Cisco NCS 5000 Series Satellite Host VM and the other one which contains the string "sysadmin" for the native Cisco NCS 5000 Series Satellite System Admin VM.

Install Update Command

Satellite nV SMUs and base packages can be transferred and activated in a single operation using the install update command. The command supports a list of files as well as references (refer section [Install Reference Command, on page 81](#) in order to create references). And the files can be located on a local disk or the tftp server.

The SMU/image install update command syntax is as follows:

```
Router# install nv satellite {all | <id range> | <id>} update {file <file> | reference <reference>}
```

The example for install update command is as follows:

```
Router# install nv satellite 100 update file disk0:ncs5k-mp1s-2.2.0.0-r631.x86_64.rpm
tftp://172.27.18.8/ncs5k-mgb1-2.2.0.0-r631.x86_64.rpm
```

```
Router# install nv satellite all update reference MyRef
```

Install Reference Command

A reference name can be given for a set of files using the install references command. When a reference is created the specified files are copied to the host. Other install operations such as transfer, update or replace, can then be initiated using the reference name.

The SMU/image install references command syntax is as follows:

```
Router# install nv satellite reference <name of reference> create file <file1> <file 2>
```

When a reference is being created, the full list of files which should be included in the reference should be specified. Recreating a reference with the same name will delete the previous files and create a reference with the new files.

The example for install references command is as follows:

```
Router# install nv satellite reference MyRef create file
tftp://172.27.18.8/ncs5k-mpls-2.2.0.0-r631.x86_64.rpm
tftp://172.27.18.8/ncs5k-mgbl-2.2.0.0-r631.x86_64.rpm
```

It is also possible to create empty references as follows:

```
Router# install nv satellite reference AnotherRef create empty
```

Verification

The command **show nv satellite install references** command can be used to verify the references that were created.

The command syntax is as follows:

```
Router# show nv satellite install references [name <name of reference>]
```

The examples are as below:

```
Router# show nv satellite install references
Reference: MyRef, file count: 2
    ncs5k-mpls-2.2.0.0-r631.x86_64.rpm
    ncs5k-mgbl-2.2.0.0-r631.x86_64.rpm
Reference: AnotherRef, file count: 0
    Empty
Router# show nv satellite install references name MyRef
Reference: MyRef, file count: 2
    ncs5k-mpls-2.2.0.0-r631.x86_64.rpm
    ncs5k-mgbl-2.2.0.0-r631.x86_64.rpm
```

Install Cisco 8000 Series satellite port extender

These are the ways to install the Cisco 8000 Series satellite port extender:

- **update** keyword - this option transfers and activates software packages or SMUs on the satellite in a single step, ideal for straightforward upgrades. For more information, refer to [Install Cisco 8000 Series satellite port extender via update keyword, on page 82](#).
- **Image reference** - this option involves creating a named reference to a set of files and then performing the update operation on that reference, which is useful for managing and reusing groups of files during installation. For more information, refer to [Install Cisco 8000 Series satellite port extender via image reference, on page 83](#).

Install Cisco 8000 Series satellite port extender via update keyword

To install the SMUs and base packages on the Cisco 8000 Series satellite port extender, use the **install nv satellite** command with **update** keyword in the EXEC mode. The **update** keyword is supported on these satellite port extenders:

- Cisco 8011-4G24Y4H-I
- Cisco 8011-32Y8L2H2FH

Use this procedure to install Cisco 8000 Series satellite port extender.

Procedure

- Step 1** In the EXEC mode, activate the SMUs or the base packages on the satellite port extender by using the **install nv satellite** { *satellite-id* | *all* | *satellite-id-range* } **update file** { *location-of-file-on-host* } command.

Example:

```
Router# install nv satellite 300 update file harddisk:/8000-aarch64.tgz
```

Important

To activate multiple SMUs, use a master tar file. For instance, if you need to install three SMUs, you cannot activate them by using a single command. Instead, bundle the three SMU tar files into a single master tar file and activate that file. This approach enables you to activate all three SMUs in a single operation.

- Step 2** Enter **Yes** when the router prompts.

Example:

```
Do you wish to continue? [confirm(y/n)] y
Install Op 3: install nv satellite 300 update file harddisk:/8000-aarch64.tgz
1 configured satellite has been specified for the update operation.
1 satellite has successfully initiated the update operation.
```

Install Cisco 8000 Series satellite port extender via image reference

To manage and apply grouped file sets with more flexibility, use the image reference option to install a Cisco 8000 Series satellite. This option is applicable to these Cisco 8000 Series satellite port extenders:

- Cisco 8011-4G24Y4H-I
- Cisco 8011-32Y8L2H2FH

Use this procedure to install Cisco 8000 Series satellite port extender via image reference.

Procedure

- Step 1** Enter the global configuration mode.

```
Router# configure
```

- Step 2** To create a base image reference for satellite install operations, use the **install nv satellite image-reference** *image-reference-name* **create file** *file-name* command. When a reference is created, the specified files are copied to the host. The update operation can then be initiated using the reference name.

Example:

```
Router#install nv sat image-reference MyReference create file harddisk:/8000-aarch64.iso
Install Op 3: install nv satellite image-reference
MyReference create file harddisk:/8000-aarch64.iso
```

- Step 3** To delete the image-reference file, use the **install nv satellite image-reference** *image-reference-name* **delete** command.

Verify Cisco 8000 Series satellite port extender configuration

Use the following commands to verify that the host discovers the satellite port extender and that the satellite port extender is operational.

After you configure the satellite port extenders, verify that the host discovers the satellite port extenders and that the satellite port extender is operational. Use the `show nv satellite status`, `show inventory`, and `show running-config nv` commands to confirm discovery, platform detection, inventory details, and configuration state.



Note You can use these commands in any sequence.

Procedure

- Step 1** Use the `show nv satellite status` command to verify the satellite port extender operational status. To verify the status, check the **Status** field, it must show **Connected (Stable)**.

```
Router#show nv satellite status
Mon May 25 12:53:20.605 UTC
Satellite 105
-----
Status: Connected (Stable)
Redundancy: Standby (Group: 1)
Type: 8011-4G24Y4H-I
Displayed device name: Sat105
MAC address: dcd8.3bda.a004
IPv4 address: 10.0.105.1 (auto, VRF: **nVSatellite)
Serial Number: FLM29390NE5
Supported connection type: TCP
Remote version: Compatible (latest version)
  ADM_CONFIG: 5.00
  IOFPGA: 0.90
  PRIM_BOOTLOADER: 52.24
  STDBY_FPGA: 1.38
  TAM_FW: 9.09
  XR: 26.2.1.37I (Recommended: 26.2.1.37I)
Received candidate fabric ports:
  nVFabric-TenGigE0/0/26-27 (permanent)
  nVFabric-HundredGigE0/0/0-3 (permanent)
Configured satellite fabric links:
  HundredGigE0/0/0/4
-----
  Status: Satellite Ready
  Remote ports: TenGigE0/0/21,23,25
Router#
```

- Step 2** Use the `show running-config nv` command to verify the satellite port extender configuration.

Example:

```
Router#show running-config nv
Mon May 25 13:04:07.807 UTC
nv
satellite 105
type 8011-4G24Y4H-I
redundancy
host-priority 110
```

```

!
serial-number FLM29390NE5
redundancy delayed-switchback 5
!
!

```

Router

Step 3 Use the `show inventory` command to verify the inventory information.

Example:

```

Router#show inventory
Thu May 21 06:39:34.220 UTC
NAME: "0/RP0", DESCR: "ASR 9900 Fixed Chassis Route Processor"
PID: A99-RP-F , VID: V02, SN: FOC2929NGHU

NAME: "0/RP1", DESCR: "ASR 9900 Fixed Chassis Route Processor"
PID: A99-RP-F , VID: V02, SN: FOC2929NGLX

NAME: "0/0", DESCR: "ASR 9903 1600G Fixed Linecard"
PID: ASR-9903-LC , VID: V05, SN: FOC2934N21Z

NAME: "0/0/1", DESCR: "ASR 9903 2T Multi-rate Port Expansion Card"
PID: A9903-20HG-PEC , VID: V01, SN: FOC2431NVHU

NAME: "HundredGigE0/0/0/0", DESCR: "100GE-AOC5M QSFP Module"
PID: QSFP-100G-AOC5M , VID: V04, SN: DPZ2631C219-B

NAME: "HundredGigE0/0/0/1", DESCR: "100GE-AOC5M QSFP Module"
PID: QSFP-100G-AOC5M , VID: V04, SN: DPZ2631C199-A

NAME: "HundredGigE0/0/0/4", DESCR: "100GE-SR4-S QSFP Module"
PID: QSFP-100G-SR4-S , VID: V03, SN: INP29280972

NAME: "HundredGigE0/0/0/5", DESCR: "100GE-AOC5M QSFP Module"
PID: QSFP-100G-AOC5M , VID: V04, SN: DPZ2631C207-B

NAME: "HundredGigE0/0/0/7", DESCR: "100GE-SR4-S QSFP Module"
PID: QSFP-100G-SR4-S , VID: V01, SN: AVF2046G09W

NAME: "HundredGigE0/0/0/9", DESCR: "100GE-AOC5M QSFP Module"
PID: QSFP-100G-AOC5M , VID: V01, SN: FIW210800JZ-B

NAME: "TenGigE0/0/0/27", DESCR: "10GBASE-SR SFP+ Module for MMF"
PID: SFP-10G-SR , VID: V03, SN: ACW243617Y2

NAME: "HundredGigE0/0/0/15", DESCR: "100GE-SR4-S QSFP Module"
PID: QSFP-100G-SR4-S , VID: V03, SN: INL254404T4

NAME: "TenGigE0/0/0/16", DESCR: "10GBASE-SR SFP Module, Enterprise-Class"
PID: SFP-10G-SR-S , VID: V01, SN: AVD2134DP48

NAME: "TenGigE0/0/0/17", DESCR: "10GBASE-SR SFP+ Module for MMF"
PID: SFP-10G-SR , VID: V03, SN: AVD2227A3VW

NAME: "TenGigE0/0/0/18", DESCR: "10GBASE-SR SFP+ Module for MMF"
PID: SFP-10G-SR , VID: V03, SN: AVD223394FF

NAME: "TenGigE0/0/0/19", DESCR: "10GBASE-SR SFP+ Module for MMF"
PID: SFP-10G-SR , VID: V03, SN: ACW26430SV8

NAME: "TenGigE0/0/0/20", DESCR: "10GBASE-SR SFP Module, Enterprise-Class"
PID: SFP-10G-SR-S , VID: V01, SN: AVD2202D1GJ

```

Verify Cisco 8000 Series satellite port extender configuration

```

NAME: "TenGigE0/0/0/21", DESCR: "10GBASE-SR SFP Module, Enterprise-Class"
PID: SFP-10G-SR-S      , VID: V01, SN: AVD2203D835

NAME: "TenGigE0/0/0/22", DESCR: "10GBASE-SR SFP+ Module for MMF"
PID: SFP-10G-SR      , VID: V03, SN: ACW26450BKK

NAME: "TenGigE0/0/0/23", DESCR: "10GBASE-SR Ext Temp SFP+ Module for MMF"
PID: SFP-10G-SR-X    , VID: V02, SN: AVD193370AX

NAME: "FourHundredGigE0/0/1/4", DESCR: "400G LR4-S QSFPDD Module"
PID: QDD-400G-LR4-S   , VID: V01, SN: IND2910042R

NAME: "Rack 0", DESCR: "ASR 9903 Chassis"
PID: ASR-9903        , VID: V05, SN: FOC2939N47P

NAME: "0/FT0", DESCR: "ASR 9903 Fan Tray"
PID: ASR-9903-FAN    , VID: V01, SN: DCH2925005Q

NAME: "0/FT1", DESCR: "ASR 9903 Fan Tray"
PID: ASR-9903-FAN    , VID: V01, SN: DCH292500B8

NAME: "0/FT2", DESCR: "ASR 9903 Fan Tray"
PID: ASR-9903-FAN    , VID: V01, SN: DCH2925008P

NAME: "0/FT3", DESCR: "ASR 9903 Fan Tray"
PID: ASR-9903-FAN    , VID: V01, SN: DCH2925005V

NAME: "0/PT0", DESCR: "Simulated Power Tray IDPROM"
PID: ASR-9900-AC-PEM  , VID: V03, SN: FOT1981P81A

NAME: "0/PT0-PM0", DESCR: "1.6kW-AC Power Module"
PID: PWR-1.6KW-AC     , VID: V01, SN: POG2932D0D3

NAME: "0/PT0-PM1", DESCR: "1.6kW-AC Power Module"
PID: PWR-1.6KW-AC     , VID: V01, SN: POG2932D0LQ

NAME: "0/PT0-PM2", DESCR: "1.6kW-AC Power Module"
PID: PWR-1.6KW-AC     , VID: V01, SN: POG2932D0LL

NAME: "0/PT0-PM3", DESCR: "1.6kW-AC Power Module"
PID: PWR-1.6KW-AC     , VID: V01, SN: POG2932D0HV

NAME: "SAT105/RP0", DESCR: "Cisco 8011 Series Fixed 1RU Router 4x100G, 24x1/10/25G, 4xCu"
PID: 8011-4G24Y4H-I   , VID: V03, SN: FLM29390NE5

NAME: "nVFabric-HundredGigE105/0/0/0", DESCR: "Cisco 100GE QSFP28 AOC Pluggable Optics Module"
PID: QSFP-100G-AOC5M  , VID: V04, SN: DPZ2631C200-A

NAME: "nVFabric-HundredGigE105/0/0/1", DESCR: "Cisco 100GE QSFP28 AOC Pluggable Optics Module"
PID: QSFP-100G-AOC5M  , VID: V04, SN: DPZ2631C217-A

NAME: "nVFabric-HundredGigE105/0/0/2", DESCR: "Cisco 100GE QSFP28 AOC Pluggable Optics Module"
PID: QSFP-100G-AOC5M  , VID: V04, SN: DPZ2631C219-A

NAME: "nVFabric-HundredGigE105/0/0/3", DESCR: "Cisco 100GE QSFP28 SR4 Pluggable Optics Module"
PID: QSFP-100G-SR4-S   , VID: V03, SN: FIW2421009T

NAME: "TenGigE105/0/0/21", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR      , VID: V03, SN: AVD2108A0T9

NAME: "TenGigE105/0/0/23", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR      , VID: V03, SN: AVD21239YJCJ

NAME: "TenGigE105/0/0/25", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"

```

```

PID: SFP-10G-SR          , VID: V03, SN: AVD22019ERG

NAME: "nVFabric-TenGigE105/0/0/26", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR          , VID: V03, SN: FNS16220PZR

NAME: "SAT105", DESCR: "C8010-1 Satellite Chassis"
PID: 8011-4G24Y4H-I      , VID: V03, SN: FLM29390NE5

NAME: "SAT105/FT0", DESCR: "8011 FAN"
PID: 8011-FAN            , VID: N/A, SN: N/A

NAME: "SAT105/PT0", DESCR: "Cisco 400W AC PSU"
PID: PWR-400-AC          , VID: V02, SN: LIT2838AZE4

Router#

```

Monitoring the satellites

Monitoring the Satellite Software

Status Check

To perform a basic status check, use the **show nv satellite status brief** command.

```
Router# show nv satellite status brief
```

Sat-ID	Type	IP Address	MAC address	State
100	asr9000v	101.102.103.105	dc7b.9426.1594	Connected (Stable)
200	asr9000v	101.102.103.106	0000.0000.0000	Halted; Conflict: no links configured
400		194.168.9.9	0000.0000.0000	Halted; Conflict: satellite has no type configured

This example displays the status check on Cisco 8000 Series satellite port extenders. You must verify the **Status** field, which displays the Connected status:

```
Router#show nv satellite status brief
```

```
Mon May 25 13:08:27.717 UTC
```

Sat-ID	Type	IP Address	MAC address	Status
105	8011-4G24Y4H-I	10.0.105.1	dcd8.3bda.a004	Connected (Stby)

```
Router#
```

These show commands display the status of Cisco NCS 5000 Series satellite:

```
Router# show nv satellite status brief
```

Sat-ID	Type	IP Address	MAC address	State
100	ncs5002	10.0.100.1	c472.95a6.2003	Connected

Check if Upgrade is Required

To check if an upgrade is required on satellite, run the **show nv satellite status satellite *satellite_id***.

This example shows a sample output for ASR9000v satellite:

```
Router# show nv satellite status satellite 100
```

```
Satellite 100
-----
State: Connected (Stable)
Type: asr9000v
Description: sat-test
MAC address: dc7b.9427.47e4
IPv4 address: 100.1.1.1
Configured Serial Number: CAT1521B1BB
Received Serial Number: CAT1521B1BB
Remote version: Compatible (latest version)
  ROMMON: 125.0 (Latest)
  FPGA: 1.13 (Latest)
  IOS: 200.8 (Latest)
Configured satellite fabric links:
  TenGigE0/2/0/6
  -----
    State: Satellite Ready
    Port range: GigabitEthernet0/0/0-9
  TenGigE0/2/0/13
  -----
    State: Satellite Ready
    Port range: GigabitEthernet0/0/30-39
  TenGigE0/2/0/9
  -----
    State: Satellite Ready
    Port range: GigabitEthernet0/0/10-19
```

This example shows a sample output for Cisco 8000 Series satellite port extender. If your XR image version and the recommended version doesn't match, then you must upgrade your software version. In this example, an upgrade isn't required because the **XR** version and the **Recommended** versions are same.

```
Router#show nv satellite status
Mon May 25 12:53:20.605 UTC
Satellite 105
-----
Status: Connected (Stable)
Redundancy: Standby (Group: 1)
Type: 8011-4G24Y4H-I
Displayed device name: Sat105
MAC address: dcd8.3bda.a004
IPv4 address: 10.0.105.1 (auto, VRF: **nVSatellite)
Serial Number: FLM29390NE5
Supported connection type: TCP
Remote version: Compatible (latest version)
  ADM_CONFIG: 5.00
  IOFPGA: 0.90
  PRIM_BOOTLOADER: 52.24
  STDBY_FPGA: 1.38
  TAM_FW: 9.09
  XR: 26.2.1.37I (Recommended: 26.2.1.37I)
Received candidate fabric ports:
  nVFabric-TenGigE0/0/26-27 (permanent)
  nVFabric-HundredGigE0/0/0-3 (permanent)
Configured satellite fabric links:
  HundredGigE0/0/0/4
  -----
    Status: Satellite Ready
    Remote ports: TenGigE0/0/21,23,25
Router#
```



Note From IOS XR Release 7.8.2 onwards, the **IOS** version for the ASR9000v satellite remains at **781.1** and will not be incremented, unless there is a software update. So when the host runs IOS XR Release 7.8.2 or higher, the latest **IOS** version for the ASR9000v satellite remains at **781.1**, as shown in the following output.

```
Router# show nv satellite status satellite 210
Satellite 210
-----
Status: Connected (Stable)
Type: asr9000v
Description: sat210
Displayed device name: Sat210
MAC address: 501c.bf10.5880
IPv4 address: 10.10.10.20 (VRF: default)
Serial Number: CAT1802U1SH
Remote version: Compatible (latest version)
  ROMMON: 128.0 (Latest)
  FPGA: 1.13 (Latest)
  IOS: 781.1 (Latest)
Received candidate fabric ports:
  nVFabric-GigE0/0/42-43 (permanent)
  nVFabric-TenGigE0/0/44-47 (permanent)
  nVFabric-GigE0/0/40-41 (additional)
Configured satellite fabric links:
  Bundle-Ether201
-----
Status: Satellite Ready
Remote ports: GigabitEthernet0/0/0-39
Discovered satellite fabric links:
  GigabitEthernet0/3/1/12: Satellite Ready; No conflict
  GigabitEthernet0/3/1/13: Satellite Ready; No conflict
```

The following code block shows the sample output for Cisco NCS 5000 Series Satellite :

```
Router# show nv satellite status satellite 100
-----
Satellite 100
-----
Status: Connected (Installing new image)
Type: ncs5002
Displayed device name: Sat100
MAC address: c472.95a6.0f25
IPv4 address: 10.0.100.1 (auto, VRF: **nVSatellite)
Serial Number: FOC1919ROWA
Remote version: Compatible (older version)
  IOFPGA: 0.16
  MB_MIFPGA: 0.15
  DB_MIFPGA: 0.15
  BIOS: 1.07
  XR: 6.1.1.08I (Available: 6.1.1.09I)
Received candidate fabric ports:
  nVFabric-TenGigE0/0/78-79 (permanent)
  nVFabric-HundredGigE0/1/0-3 (permanent)
Configured satellite fabric links:
  TenGigE0/0/0/3
-----
Status: Satellite Ready
No Port Ranges
```



Note If the satellite pie is not installed on the Cisco ASR 9000 Series Router Host, then the compatibility status will be shown as unknown as there is no local version to compare against. For the Cisco NCS 5000 Series satellites, in the case where there is no satellite pie on the host and the native image is pushed onto the satellite, this will always be the case. However, in such situations, a "Recommended" version will be displayed for guidance.

Output of Status Check

This example shows the output of **show nv satellite status** command for a Satellite configured in dual home mode.

```
RP/0/RSP0/CPU0:router# show nv satellite status

Satellite 100
-----
  Status: Connected (Stable)
  Redundancy: Active (Group: 10)
  Type: asr9000v
  Description: sat100
  MAC address: 4055.3958.61e4
  IPv4 address: 100.100.1.2 (VRF: default)
  Serial Number: CAT1604BIAN
  Remote version: Compatible (not latest version)
    ROMMON: 126.0 (Latest)
    FPGA: 1.13 (Latest)
    IOS: 322.5 (Available: 322.3)
  Configured satellite fabric links:
    TenGigE0/1/0/0
    -----
      Status: Satellite Ready
      Remote ports: GigabitEthernet0/0/30-43

    TenGigE0/1/0/1
    -----
      Status: Satellite Ready
      Remote ports: GigabitEthernet0/0/0-29
```

This example shows the sample output of a satellite interfaces over redundant ICL.

```
RP/0/RSP0/CPU0:router#show sits interface gig 300/0/0/0

Interface Name           : GigabitEthernet300/0/0/0
Interface IFHandle       : 0x020058a0
Base Interface           : TenGigE0/0/0/0
Base Interface IFHandle   : 0x000001c0
LAG Hash Index           : 2
Published Base interface : TenGigE0/0/0/0
Published Base ifh       : 0x000001c0
Published LAG Hash       : 2
Sat Interface State in DB : Republish Success
```

This command shows a sample output whether the bundle over bundle satellite interface is replicated.

```
RP/0/RSP1/CPU0:router# show bundle infrastructure ea bundle-ether 101 detail
```

Bundle-Ether101

Node	Platform Information
0/0/CPU0	Ifhandle : 0x02004d60 Channel Map : 0x3

Node: 0/0/CPU0

Member	Platform Information
Gi300/0/0/3	Ifhandle : 0x020057e0 Channel Map : 0x3 UL Id : 0 Base Interfaces Count : 2 Ifhandle : 0x000001c0 0x00000140 0x00000000 0x00000000



Note In this example output, **Remote version**, **ROMMON**, **FPGA**, and **IOS** must show the latest version. If it does not, an upgrade is required on the satellite. The version numbers displayed are the installed version on the ASR 9000v. If a version number is displayed, instead of latest key word in the above output, that would correspond to the ASR9000v image bundles in the satellite pie.



Note show tech from satellite devices can be pulled out remotely using **show tech-support satellite remote satellite [sat id] file disk0:/[filename]** option for offline analysis of the states on the satellite device. This works for Cisco ASR 9000v and Cisco NCS 5000 Series satellites.

Show status for Cisco 8000 Series satellite port extender topology

To display detailed topology information for nV satellite deployments and view information for a particular interface, a specific satellite, or filtered by distance or hops from the host device, use the **show nv satellite topology** command in the EXEC mode.

This command displays topology details for nV satellite devices connected to a router that includes:

- satellites that are connected,
- how the satellites are interconnected or the fabric links, and
- other details, such as MAC addresses, serial numbers, redundancy status, and link details.

You can choose the sequence or order in which satellite devices appear in the command output. You can choose the output from these options: The following code block shows the sample output for Cisco 8000 Series satellite port extender:

- distance - satellites are listed by their number of hops from the main host or the router. The directly connected satellites appear first and then those further away.

- satellite id - satellites are listed according to their unique ID numbers, such as Satellite 101, 102, and so on.

The output shows that the router's interface GigabitEthernet0/1/0/0 is actively discovering nV satellite devices in Redundancy-Group 1. Satellite 102 is detected, showing its serial number, MAC address, and several fabric links. One link connects directly to the host, while others are present but not yet identified on the remote end. The physical interface GigabitEthernet0/0/0/6 on Satellite 102 is directly connected to the host router's GigabitEthernet0/1/0/0 interface.

```
Router#show nv satellite topology
Tue Sep 17 05:56:38.635 PDT
GigabitEthernet0/1/0/0
-----
Redundancy-Group: 1
Discovery status: Running
Satellites:
Satellite 102 (BVID 2002)
-----
Received Serial Number: PyS102
MAC address: 00aa.c000.0102
Satellite fabric links:
GigabitEthernet0/0/0/6 (nVFabGigE102/0/0/6) (Remote ID: 0x900):
Host (GigabitEthernet0/1/0/0)
GigabitEthernet0/0/0/7 (nVFabGigE102/0/0/7) (Remote ID: 0xa00):
Remote port not yet identified
GigabitEthernet0/0/0/10 (nVFabGigE102/0/0/10) (Remote ID: 0xd00):
Remote port not yet identified
GigabitEthernet0/0/0/11 (nVFabGigE102/0/0/11) (Remote ID: 0xe00):
Remote port not yet identified
```

The output shows the router's interface (GigabitEthernet0/1/0/1) in Redundancy-Group 1, actively discovering connected satellites. Multiple satellites (103, 104, 105, 106) are listed with their serial numbers, MAC addresses, and details of their fabric links to the host and to each other. The output highlights direct host connections, inter-satellite links (some using VLANs or marked as not redundant), and one satellite link to a remote host device.

```
Router#show nv satellite topology sorted-by satellite-id
Tue Sep 17 06:01:03.745 PDT
GigabitEthernet0/1/0/1
-----
Redundancy-Group: 1
Discovery status: Running
Satellites:
Satellite 103 (VID 2)
-----
Received Serial Number: PyS003
MAC address: 0200.05a7.0003
Satellite fabric links:
GigabitEthernet0/0/0/1 (nVFabGigE103/0/0/1) (Remote ID: 0x300):
Host (GigabitEthernet0/1/0/1)
GigabitEthernet0/0/2 (nVFabGigE103/0/0/2) (Remote ID: 0x2):
Sat 104 (GigabitEthernet0/0/3 (Remote ID: 0x3)) (VLAN 10)
Satellite 104 (VID 3)
-----
Received Serial Number: PyS004
MAC address: 0200.05a7.0004
Satellite fabric links:
GigabitEthernet0/0/3 (nVFabGigE104/0/0/3) (Remote ID: 0x3):
Sat 103 (GigabitEthernet0/0/2 (Remote ID: 0x2)) (VLAN 10)
GigabitEthernet0/0/9 (nVFabGigE104/0/0/9) (Remote ID: 0x9):
Sat 105 (GigabitEthernet0/0/11 (Remote ID: 0xb)) (Not Redundant)
GigabitEthernet0/0/5 (nVFabGigE104/0/0/5) (Remote ID: 0x5):
```

```

Sat 106 (GigabitEthernet0/0/7 (Remote ID: 0x7))
Satellite 105 (VID 4) (Not Redundant)
-----
Received Serial Number: PyS005
MAC address: 0200.05a7.0005
Satellite fabric links:
GigabitEthernet0/0/11 (nVFabGigE105/0/0/11) (Remote ID: 0xb):
Sat 104 (GigabitEthernet0/0/9 (Remote ID: 0x9))
Satellite 106 (VID 5)
-----
Received Serial Number: PyS006
MAC address: 0200.05a7.0006
Satellite fabric links:
GigabitEthernet0/0/7 (nVFabGigE106/0/0/7) (Remote ID: 0x7):
Sat 104 (GigabitEthernet0/0/5 (Remote ID: 0x5))
GigabitEthernet0/0/0/6 (nVFabGigE106/0/0/6) (Remote ID: 0x800):
Remote Host (MAC: 02ba.c000.0000)

```

Show Commands for Dual Home Mode

The following example show commands used for Dual Home mode.

Dual Home Network Mode

```

RP/0/RSP1/CPU0:Router# show iccp group 10

Redundancy Group 10
  member ip:1.1.1.1 (vkg1), up (connected)
  monitor: route-watch (up)
  No backbone interfaces.
  enabled applications: SatelliteORBIT
  isolation recovery delay timer: 30 s, not running

RP/0/RSP1/CPU0:Router#show nv satellite protocol redundancy

ICCP Group: 10
-----
Status: Connected since 2014/01/22 15:47:35.845
Role: Primary (System MAC: 0000.0001.1234)
Channels:
  Control (0)
  -----
    Channel status: Open
    Messages sent: 8 (4 control), received: 6 (3 control).

  Topology (14)
  -----
    Channel status: Open
    Messages sent: 4 (3 control), received: 11 (0 control).

## active host:

RP/0/RSP1/CPU0:Router# show nv satellite status satellite 200
Satellite 200
-----
Status: Connected (Stable)
Redundancy: Active (Group: 10)
Type: asr9000v

```

```

MAC address: 8478.ac01.d2d8
IPv4 address: 192.1.1.200 (VRF: default)
Serial Number: CAT1708U0LV
Remote version: Compatible (latest version)
  ROMMON: 126.0 (Latest)
  FPGA: 1.13 (Latest)
  IOS: 322.6 (Latest)
Configured satellite fabric links:
  TenGigE0/0/0/1
-----
  Status: Satellite Ready
  Remote ports: GigabitEthernet0/0/0-10

```

##Standby host:

```
RP/0/RSP1/CPU0:Router# show nv satellite status satellite 200
```

```

Satellite 200
-----
Status: Connected (Stable)
Redundancy: Standby (Group: 10)
Type: asr9000v
MAC address: 8478.ac01.d2d8
IPv4 address: 192.1.1.200 (VRF: default)
Serial Number: CAT1708U0LV
Remote version: Compatible (latest version)
  ROMMON: 126.0 (Latest)
  FPGA: 1.13 (Latest)
  IOS: 322.6 (Latest)
Configured satellite fabric links:
  TenGigE0/3/0/6
-----
Status: Satellite Ready
Remote ports: GigabitEthernet0/0/0-10

```

Monitoring the Satellite Protocol Status

To check the status of the satellite discovery protocol, use the **show nv satellite protocol discovery** command.

```
Router# show nv satellite protocol discovery brief
```

Interface	Sat-ID	Status	Discovered links
Te0/1/0/0	100	Satellite Ready	Te0/1/0/0
Te0/1/0/1	100	Satellite Ready	Te0/1/0/1

(Or)

```
Router# show nv satellite protocol discovery interface TenGigE 0/1/0/0
```

```

Satellite ID: 100
Status: Satellite Ready
Remote ports: GigabitEthernet0/0/0-15
Host IPv4 Address: 101.102.103.104
Satellite IPv4 Address: 101.102.103.105
Vendor: cisco, ASR9000v-DC-E
Remote ID: 2
Remote MAC address: dc7b.9426.15c2
Chassis MAC address: dc7b.9426.1594

```

To check the status of a Cisco 8000 Series satellite port extender discovery protocol, use the **show nv satellite protocol discovery** command.

```
Router#show nv satellite protocol discovery
Mon May 25 13:17:13.192 UTC
Interface HundredGigE0/0/0/4
-----
Interface Status: Probing for satellites

Satellite ID: 105
Status: Satellite ready
Host IPv4 Address: 10.0.0.1
Satellite IPv4 Address: 10.0.105.1
Vendor: Cisco Systems, Inc.,
Serial Id: FLM29390NE5
Remote ID: 2147483650
Remote MAC address: dcd8.3bda.a009
Chassis MAC address: dcd8.3bda.a004
Router#
```

To check the status of a NCS 6000 satellite discovery protocol, use the **show nv satellite protocol discovery** command.

```
Router# show nv satellite protocol discovery brief
Interface      Sat-ID  Status                               Discovered links
-----
Hu0/1/0/0      100     Satellite ready                     Hu0/1/0/0
```

To check the status of the satellite control protocol status, use the **show nv satellite protocol control** command.

```
Router# show nv satellite protocol control brief

Sat-ID  IP Address      Protocol state  Channels
-----
101.102.103.105 Connected      Ctrl1, If-Ext L1, If-Ext L2, X-link, Soft Reset, Inventory,
EnvMon, Alarm

Router# sh nv satellite protocol control
Satellite 100
-----
IP address: 101.102.103.105
Status: Connected
Channels:
Control
-----
Channel status: Open
Messages sent: 24 (24 control), received: 23 (23 control).
Interface Extension Layer 1
-----
Channel status: Open
Messages sent: 7 (3 control), received: 14 (2 control).
Interface Extension Layer 2
-----
Channel status: Open
Messages sent: 11 (3 control), received: 10 (2 control).
Interface Extension Cross-link
-----
Channel status: Open
Messages sent: 4 (3 control), received: 3 (2 control).
```

This example shows a sample output for **show nv satellite protocol control brief** command on the Cisco 8000 Series satellite port extender.

```
Router#show nv satellite protocol control brief
Mon May 25 13:18:13.054 UTC
Sat-ID  IP Address  Protocol state  Channels
-----  -
105      10.0.105.1    Connected      Ctrl1, If-Ext L1, If-Ext L2, X-link,
                                     VICL, DevMgmt, Inventory, EnvMon,
                                     Alarm, Password, Topology,
                                     SyncE-If, Fabric L1, Fabric L2,
                                     CfgFabPorts, Notification
```

```
Router#show nv satellite protocol control brief
Sat-ID  IP Address  Protocol state  Channels
-----  -
100      10.0.100.1    Connected      Ctrl1, If-ExtL1, If-Ext L2, X-link,
                                     VICL, DevMgmt, Inventory, EnvMon,
                                     Alarm, Password, Topology,
```

To check the status of satellite protocol redundancy, use the **show nv satellite protocol redundancy** command.

```
Router# show nv satellite protocol redundancy

ICCP Group: 10
-----
Status: Connected since 2014/01/11 08:44:58.764
Role: Secondary (System MAC: 6c9c.ed23.c4e6)
Channels:
  Control (0)
  -----
    Channel status: Open
    Messages sent: 18 (9 control), received: 24 (12 control).

  Topology (14)
  -----
    Channel status: Open
    Messages sent: 88 (10 control), received: 60 (0 control).
```

This example shows a sample output for Cisco 8000 Series satellite port extender. Use the **show nv satellite protocol redundancy** command to check the status of satellite protocol redundancy.

```
Router#show nv satellite protocol redundancy
Mon May 25 13:19:20.776 UTC
ICCP Group: 1
-----
Status: Connected since 2026/05/21 09:30:02.681
Role: Primary (System MAC: ceb6.c861.26da)
Channels:
  Chan id Control (0)
  -----
    Channel status: Open
    Messages sent: 8 (4 control), received: 6 (3 control).

  Chan id ROID (1)
  -----
    Channel status: Open
    Messages sent: 5 (3 control), received: 1 (0 control).
```

```

Chan id Satellite Grouping (2)
-----
Channel status: Open
Messages sent: 5 (3 control), received: 2 (0 control).

Chan id Inner Tag Allocation (3)
-----
Channel status: Open
Messages sent: 3 (3 control), received: 0 (0 control).

Chan id Topology (14)
-----
Channel status: Open
Messages sent: 7 (3 control), received: 4 (0 control).
Router#

```

Monitoring the Satellite Inventory

You can use the **show inventory | beg SAT** and **show environment nv satellite all** commands in the exec mode to monitor the status of satellite inventory.

This example shows a sample output for NCS 5000 Series satellite.

```

Router# show inventory | beg SAT
NAME: "SAT201/RP0", DESCR: "Cisco NCS 5002 Route processor"
PID: NCS-5002 , VID: V00, SN: FOC19390B85

NAME: "SAT201/PORT-40", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR , VID: V03, SN: FNS17021J11

NAME: "SAT201/PORT-57", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR , VID: V03, SN: FNS17021Q1B

NAME: "SAT201/PORT-58", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR , VID: V03, SN: JUR19060MEP

NAME: "SAT201/PORT-59", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR , VID: V03, SN: SPC17050EU4

NAME: "SAT201/PORT-60", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR , VID: V03, SN: SPC17050ETY

NAME: "SAT201", DESCR: "NCS5002 Satellite Chassis"
PID: NCS-5002 , VID: V00, SN: FOC1939R191

NAME: "SAT201/FT0", DESCR: "NCS 5002 Router Fan Back to Front AirFlow"
PID: NCS-5002-FN-BK , VID: N/A, SN: N/A

NAME: "SAT201/FT1", DESCR: "NCS 5002 Router Fan Back to Front AirFlow"
PID: NCS-5002-FN-BK , VID: N/A, SN: N/A

NAME: "SAT201/PT0", DESCR: "NCS5K Power Module AC 650W Back to Front AirFlow"
PID: NC5K-PAC-650W-BK , VID: V00, SN: LIT193813NX

NAME: "SAT201/PT1", DESCR: "NCS5K Power Module AC 650W Back to Front AirFlow"
PID: NC5K-PAC-650W-BK , VID: V00, SN: LIT193813MP

Router# show environment nv satellite all ?
fan          Fan information(cisco-support)
temperature  Temperature information(cisco-support)
voltage      Voltage information(cisco-support)

```

```
|          Output Modifiers
<cr>
```

```
Router:sat-host# show environment nv satellite all fan
```

```
=====
Location          FRU Type          Fan speed (rpm)
          FAN_0    FAN_1
-----
SAT150/FT0        SAT-FANTRAY        5515    5888
SAT150/FT1        SAT-FANTRAY        5515    5863
```

```
Router#show environment nv satellite all voltage
```

```
...=====
Location  VOLTAGE          Value      Crit      Minor      Minor      Crit
          Sensor          (mV)      (Lo)      (Lo)      (Hi)      (Hi)
-----
          V3P3VA          3348      3135      3168      3436      3465
          V2P5VA          2525      2375      2400      2600      2625
          V1P2VA          1204      1140      1152      1248      1260
          V5P0           4991      4750      4800      5200      5250
          V3P3           3366      3135      3168      3436      3465
          V2P5           2499      2375      2400      2600      2625
          V1P8           1799      1710      1728      1872      1890
          V1P8_ZR          1810      1710      1728      1872      1890
          V1P5           1525      1425      1440      1560      1575
          V1P5_PCH          1511      1425      1440      1560      1575
          V1P05_VTT          1055      997      1008      1092      1103
          V1P0           1002      950      960      1040      1050
          V1P0_PCH          1001      950      960      1040      1050
          V0P8_CPU          802      760      768      832      850
          V3P3_BRCM          3326      3135      3168      3436      3465
          CPUVCC           862      284      288      1580      1596
          TDNT_VDD_V1P0          1005      903      912      1040      1050
          TDNT_AVDD_V1P0          1005      950      960      1040      1050
          V12P0_MZ          12114      11400      11520      12480      12600
          PHY4G_V1P0_MZ          1007      950      960      1040      1050
          PHY1_V1P0_MZ          1009      950      960      1040      1050
          V1P2_MZ          1218      1140      1152      1248      1260
          V2P5_MZ          2521      2375      2400      2600      2625
          V3P3_MZ          3388      3135      3168      3436      3465
```

This example shows a sample output for Cisco 8000 Series satellite port extender.

```
Router#show inventory | beg SAT
```

```
Tue May 19 12:46:06.779 UTC
```

```
NAME: "SAT105/RP0", DESCR: "Cisco 8011 Series Fixed 1RU Router 4x100G, 24x1/10/25G, 4xCu"
PID: 8011-4G24Y4H-I , VID: V03, SN: FLM29390NE5
```

```
NAME: "nVFabric-HundredGigE105/0/0/0", DESCR: "Cisco 100GE QSFP28 AOC Pluggable Optics
Module"
```

```
PID: QSFP-100G-AOC5M , VID: V04, SN: DPZ2631C200-A
```

```
NAME: "nVFabric-HundredGigE105/0/0/1", DESCR: "Cisco 100GE QSFP28 AOC Pluggable Optics
Module"
```

```
PID: QSFP-100G-AOC5M , VID: V04, SN: DPZ2631C217-A
```

```
NAME: "nVFabric-HundredGigE105/0/0/2", DESCR: "Cisco 100GE QSFP28 AOC Pluggable Optics
Module"
```

```
PID: QSFP-100G-AOC5M , VID: V04, SN: DPZ2631C219-A
```

```
NAME: "nVFabric-HundredGigE105/0/0/3", DESCR: "Cisco 100GE QSFP28 SR4 Pluggable Optics
```

```

Module"
PID: QSFP-100G-SR4-S      , VID: V03, SN: FIW2421009T

NAME: "TenGigE105/0/0/21", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR           , VID: V03, SN: AVD2108A0T9

NAME: "TenGigE105/0/0/23", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR           , VID: V03, SN: AVD21239YCJ

NAME: "TenGigE105/0/0/25", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR           , VID: V03, SN: AVD22019ERG

NAME: "nVFabric-TenGigE105/0/0/26", DESCR: "Cisco 10GE SFP+ SR Pluggable Optics Module"
PID: SFP-10G-SR           , VID: V03, SN: FNS16220PZR

NAME: "SAT105", DESCR: "C8010-1 Satellite Chassis"
PID: 8011-4G24Y4H-I       , VID: V03, SN: FLM29390NE5

NAME: "SAT105/FT0", DESCR: "8011 FAN"
PID: 8011-FAN              , VID: N/A, SN: N/A

NAME: "SAT105/PT0", DESCR: "Cisco 400W AC PSU"
PID: PWR-400-AC           , VID: V02, SN: LIT2838AZE4

```

Router#

Router#show environment nv satellite all ?

```

fan          Fan information(cisco-support)
temperature  Temperature information(cisco-support)
voltage      Voltage information(cisco-support)
|            Output Modifiers
<cr>

```

Router#show environment nv satellite all fan

Tue May 19 12:49:17.768 UTC

```

=====
Location          FRU Type          FAN_0  FAN_1  FAN_2  FAN_3  FAN_4
-----
SAT105/FT0        SAT-FANTRAY          7710   7890   7800   7890   7890

```

Router#show environment nv satellite all voltage

Tue May 19 12:50:34.473 UTC

```

=====
Location  VOLTAGE          Value    Crit    Minor    Minor    Crit
          Sensor          (mV)      (Lo)      (Lo)      (Hi)      (Hi)
-----
105
    ADM1266_VH1_12V          12619   10560   10800   13200   13440
    ADM1266_VH2_3.3V        3302    2904    2970    3630    3696
    ADM1266_VH3_3.3V        3315    2904    2970    3630    3696
    ADM1266_VH4_2.5V        2507    2200    2250    2750    2800
    ADM1266_VP1_2.5V        2509    2200    2250    2750    2800
    ADM1266_VP2_1.8V        1808    1584    1620    1980    2016
    ADM1266_VP3_1.2V        1205    1056    1080    1320    1344
    ADM1266_VP4_1.8V        1799    1584    1620    1980    2016
    ADM1266_VP5_1.8V        1806    1584    1620    1980    2016
    ADM1266_VP6_1.2V        1201    1056    1080    1320    1344
    ADM1266_VP7_1.1V        1104    970     990     1210    1230
    ADM1266_VP8_1.0V        1000    880     900     1100    1120
    ADM1266_VP9_0.9V        909     790     810     990     1010
    ADM1266_VP10_0.8V       853     700     720     880     900
    ADM1266_VP11_0.8V       802     700     720     1100    1120
    ADM1266_VP12_0.8V       803     700     720     1100    1120
    ADM1266_VP13_0.82V      847     722     738     902     918

```

```

P1_2V_DQMAC_VOUT          1199    1056    1080    1320    1344
P1_0V_DQMAC_VOUT          996     880     900    1100    1120
Router#

```

Monitoring the Satellite Environment

You can use the **show environment nv satellite all temperature** command in the exec mode to monitor the status of satellite environment.

```
Router# show environment nv satellite all temperature
```

```

=====
Location  TEMPERATURE          Value  Crit Major Minor Minor Major  Crit
          Sensor          (deg C)  (Lo)  (Lo)  (Lo)  (Hi)  (Hi)  (Hi)
-----
SAT150    Inlet              20     -10   -    -    -    -    -

```

This example shows a sample output for Cisco 8000 Series satellite.

```
Router#show environment nv satellite all temperature
```

```
Tue May 19 12:55:28.898 UTC
```

```

=====
Location  TEMPERATURE          Value  Crit Major Minor Minor Major  Crit
          Sensor          (deg C)  (Lo)  (Lo)  (Lo)  (Hi)  (Hi)  (Hi)
-----
SAT105
    MB-Inlet Temp Sensor      18     -45   -42   -40    65    70    75
    MB-Outlet Temp Sensor     25     -45   -42   -40    75    80    85
    NPU_0_T0                  24     -45   -42   -40   103   108   115

    NPU_0_T1                  22     -45   -42   -40   103   108   115

    NPU_0_T2                  41     -45   -42   -40   103   108   115

    NPU_0_T3                  41     -45   -42   -40   103   108   115

    NPU_0_T4                  41     -45   -42   -40   103   108   115

    MB-CPU Temp Sensor Local   42     -45   -42   -40    97   100   102

    MB-CPU Temp Sensor Remote  41     -45   -42   -40    97   100   102

    CPU_AP_PACKAGE_TEMP_SENSOR 30     -45   -42   -40    97   100   102

    CPU_AP_CORE_0_TEMP_SENSOR  25     -45   -42   -40    97   100   102

    CPU_AP_CORE_1_TEMP_SENSOR  34     -45   -42   -40    97   100   102

    CPU_AP_CORE_2_TEMP_SENSOR  30     -45   -42   -40    97   100   102

    CPU_AP_CORE_3_TEMP_SENSOR  31     -45   -42   -40    97   100   102

    CPU_CP_TEMP_SENSOR         31     -45   -42   -40    97   100   102

    P1_2V_DQMAC_TEMP          31     -40   -25   -10    95   100   105

```

```
Router#
```

Reloading the Satellite and Monitoring DOM Parameters

In order to reload the satellite device, use the **hw-module satellite satellite id/all reload** command.

```
Router# hw-module satellite 101 reload
```

```

Reload operation completed successfully.
Router:May  3 20:26:51.883 : invmgr[254]: %PLATFORM-INV-6-OIROUT : OIR: Node 101 removed

```

In order to see the DOM parameters of the SFPs and XSPs or access ports and ICL ports of the satellite, use the **show controllers gigabitEthernet interface phy** command.

For access ports

```

Router#show controllers gigabitEthernet 100/0/0/22 phy
Wed Apr  8 17:42:32.100 UTC

Port: 22
Xcvr Type: SFP
Vendor Name: CISCO-FINISAR
CLEI Code: IPUIALJRAA
Part Number: 10-2143-01V01
Product Id: SFP-GE-S
Thresholds:
Warning Low      Alarm High      Warning High    \
                  Alarm Low
Temperature:      109C              103C            \
-13C              -29C
Voltage:          3900uV          3700uV          \
2900uV            2700uV
Bias:             15mAmps         12mAmps         \
2mAmps            1mAmps
Transmit Power:   0.63100 mW (-1.99971 dBm)  0.63100 mW (-1.99971 dBm) \
0.07900 mW (-11.02373 dBm)  0.06600 mW (-11.80456 dBm)
Receive Power:    1.25800 mW (0.99681 dBm)  0.79400 mW (-1.00179 dBm) \
0.01500 mW (-18.23909 dBm)  0.01000 mW (-20.00000 dBm)
Temperature: 32 C
Voltage: 3327 uV
Bias: 5 mAmps
Tx Power:  0.28100 mW (-5.51294 dBm)
Rx Power:  0.000 mW (<-40.00 dBm)

```

For ICL port

```

Router#show controllers nvFabric-TenGigE 100/0/0/46 phy
Wed Apr  8 17:46:57.045 UTC

Port: 46
Xcvr Type: SFP
Vendor Name: CISCO-FINISAR
CLEI Code: COUIA75CAA
Part Number: 10-2457-02V02
Product Id: SFP-10G-LR
Thresholds:
Warning Low      Alarm High      Warning High    \
                  Alarm Low
Temperature:      75C              70C            \
0C               -5C
Voltage:          3630uV          3465uV          \
3135uV            2970uV
Bias:             70mAmps         68mAmps         \
2mAmps            1mAmps
Transmit Power:   2.23800 mW (3.49860 dBm)  1.12200 mW (0.49993 dBm) \
0.15100 mW (-8.21023 dBm)  0.06000 mW (-12.21849 dBm)
Receive Power:    2.23800 mW (3.49860 dBm)  1.12200 mW (0.49993 dBm) \
0.03600 mW (-14.43697 dBm)  0.01400 mW (-18.53872 dBm)
Temperature: 30 C
Voltage: 3366 uV
Bias: 34 mAmps

```

Tx Power: 0.86300 mW (-0.63989 dBm)
 Rx Power: 1.01000 mW (0.04321 dBm)

Port Level Parameters Configured on a Satellite

These are the port-level parameters that can be configured on a satellite nV system:

- Admin state (shut and no shut)
- Ethernet MTU



Note For Cisco ASR 9000v access ports, the maximum MTU is 9212 for a hub and spoke topology.

For Cisco NCS 5000 series satellite access ports, the maximum MTU is 9158.

- Ethernet MAC Address.
- Ethernet link auto-negotiation that includes,
 - Half and full duplex
 - Link speed
 - Flow control
- Static configuration of auto-negotiation parameters such as speed, duplex, and flow control
- Carrier-delay



Note The Cisco ASR 9000v satellite does not support asymmetric carrier-delay values for access ports. If the host side configuration includes asymmetric values, the satellite applies the minimum of the two for both the up and down carrier-delay values. If any of the carrier-delay values from the host side is less than 100ms, then the satellite applies the value of 100ms, as that is the smallest supported value for carrier-delay.

The Cisco NCS 5000 Series satellite supports both symmetric and asymmetric carrier-delay values for access ports.

- Layer-1 packet loopback which includes,
 - Line loopback
 - Internal loopback
- All satellite access port features on Cisco ASR 9000 Series Router.

Loopback Types on Satellite Ports

There are two types of loopback interfaces that can be configured on satellite ports. They are,


- Line Loopback
- Internal Loopback

These illustrations show how the loopback interface types function on a satellite.

Figure 10: Line Loopback



 Figure 11: Internal Loopback



You can specify the type of loopback to be used, as specified in this example:

```
Interface GigabitEthernet 100/0/0/0
  loopback line | internal
```

Configuration Examples for Satellite nV System

This section contains configuration examples for the Satellite nV system:

Satellite System Configuration: Example

This example shows a sample configuration to configure connectivity for a Satellite System:

Satellite Global Configuration

The satellite ID, type, serial number, description, and satellite IP address are configured in the satellite global configuration sub-mode:

```
nv
  satellite 100
    type asr9000v
    serial-number CAT1521B1BB
    description milpitas bldg20
    ipv4 address 10.0.0.100
  !
!
nv
  satellite 102
    type 8011-4G24Y4H-I
    serial-number FLM29390NE5
```

```

description nv-test
ipv4 address 10.0.101.1
!
!
```

ICL (satellite-fabric-link) Interface Configuration

On an interface connected to a Satellite (TenGigE or Bundle interface), the ports associated with the satellite-id must be specified. All fabric links connected to the same Satellite must use the same (Host) IPv4 address. This Host IPv4 addresses can be used for the same Host to connect to different Satellites.



Note Before you remove or change a configuration on an ICL interface, shut down the ICL port.

```

interface Loopback1000
vrf <vrf_name>
ipv4 address 10.0.0.1 255.0.0.0
vrf <vrf_name>
interface TenGigE0/2/1/0
description To Sat5 1/46
ipv4 point-to-point
ipv4 unnumbered Loopback1000
nv
satellite-fabric-link satellite 200
remote-ports GigabitEthernet 0/0/0-30
!
!
!
```



Note To manage satellite traffic, use the IP addresses from the global VRF of the router (shown in the examples). As mentioned in [Satellite Discovery and Control Protocol IP Connectivity](#) section, you can use a private VRF to prevent IP address conflict with global VRF. In such a case, the loopback interface and ICL interface (in the examples) must be assigned to the private VRF dedicated for satellite management traffic.

Satellite Interface Configuration

A Satellite interface can be used like any other regular Gigabit Ethernet interfaces:

```

interface GigabitEthernet200/0/0/0
l2transport
!
!

interface GigabitEthernet200/0/0/0
ip address 99.0.0.1 255.255.255.0
!
!

interface GigabitEthernet200/0/0/2
bundle id 100 mode active
!
```

!

This is a sample satellite interface configuration in the case of a dual home mode on the active and standby hosts:

Active Host

```
interface GigabitEthernet100/0/0/32
  ipv4 address 1.1.1.1 255.255.255.0
!
```

Standby Host

```
interface GigabitEthernet100/0/0/32
  ipv4 address 1.1.1.1 255.255.255.0
!
```

For an L3 interface, the IPv4 protocol states in the output of show ipv4 interface brief command show as up; up on the active host and up; down on the standby host.

Active host:

GigabitEthernet100/0/0/32	1.1.1.1	Up	Up
Standby host:			

GigabitEthernet100/0/0/32	1.1.1.1	Up	Down
---------------------------	---------	----	------

For an L2 interface, the ports show as up on both the hosts.

Active host:

GigabitEthernet100/0/0/33	unassigned	Up	Up
Standby host:			

GigabitEthernet100/0/0/33	unassigned	Up	Up
---------------------------	------------	----	----



Note You cannot add the satellite interface to the same bundle as the physical ICL link.

Satellite Management Using Private VRF

You can use a special private VRF instead of the global default routing table, to configure the loopback interface and ICLs used for satellite management traffic. IP addresses in this VRF will not conflict with any other addresses used on the router.

```
router(config)# vrf NV_MGMT_VRF
router(config)# address ipv4 unicast

router(config)# interface Loopback 1000
router(config)# vrf NV_MGMT_VRF
router(config)# ipv4 address 10.0.0.1 / 24

router(config)# interface TenGige 0/1/0/3
router(config)# vrf NV_MGMT_VRF
router(config)# ipv4 point-to-point
```

```

router(config)# ipv4 unnumbered Loopback 1000
router(config)# nv
router(config-nv)# satellite-fabric-link satellite 500
router(config-nv)# remote-ports GigabitEthernet 0/0/28-39
router(config)# nv satellite 500
router(config)# ipv4 address 10.0.0.2 / 24

```

Configuration of Satellite using Auto-IP

```

show run nv satellite 1200
nv
satellite 1200
  type asr9000v
!
interface GigabitEthernet0/1/0/5
transceiver permit pid all
nv
  satellite-fabric-link satellite 1200
  remote-ports GigabitEthernet 0/0/0-7
!
!
!

show run nv satellite 100
nv
satellite 100
type ncs5002
!
Interface HundredGigE0/1/0/0
nv
satellite-fabric-link satellite 100
remote-ports TenGigE 0/0/0-79

interface TenGigE100/0/0/4
ipv4 address 192.100.1.1 255.255.255.0
ipv6 address 2000:100:1::1/64

```

Satellite Configuration with Dual-Homed Hosts

You can configure satellite with dual-homed hosts as shown in this example.

```

redundancy
iccp
  group <group-id>
  member
    neighbor <ip-address>
  !
  backbone
    interface <interface-id>
  !
  isolation recovery-delay <value>
nv satellite
  system-mac <macaddr>
!
!
!
interface TenGigE0/1/0/0
nv
  satellite-fabric-link {network | satellite <id>}

```

```

    redundancy
      iccp-group <group-id>
    !
    remote-ports <interface-id>
  !
!
nv
satellite <id>
  type <type>
  device-name <name>
  redundancy
    host-priority <0-255>
  !
  serial-number <serial-number>
!

```

This example, applicable to Cisco 8000 Series satellites, display a sample configuration for MD5 verification of messages sent over the ICCP link between the two hosts.

```

mpls ldp
neighbor
  <partner-IP>:0 password [ clear {password} | encrypted {encrypted password} ]
redundancy
  iccp
    group <group-id>
    member
      neighbor <ip-address>
    !
    backbone
      interface <interface-id>
    !
    isolation recovery-delay <value>
  nv satellite
    system-mac <macaddr>
  !
!
!
interface TenGigE0/1/0/0
nv
  satellite-fabric-link {network | satellite <id>}
  redundancy
    iccp-group <group-id>
  !
  remote-ports <interface-id>
!
!
nv
satellite <id>
  type <type>
  device-name <name>
  redundancy
    host-priority <0-255>
  !
  serial-number <serial-number>
!

```

Dual-Home for Multiple Satellites with Single Physical ICLs on Both Hosts and Satellites

Dual Home Configuration for SAT1



Note When you use either a manual IP address or an IPv4 unnumbered loopback address for the ICL, the IP address must be different on both the hosts.

Host 1:

```
interface TenGigE0/1/1/23.100
  ipv4 point-to-point
  ipv4 address 100.100.1.101 255.255.255.0
  encapsulation dot1q 100
nv
  satellite-fabric-link satellite 100
  redundancy
    iccp-group 1
  !
  remote-ports GigabitEthernet 0/0/0-35
  !
  !
```

Host 2:

```
interface TenGigE0/1/1/2.100
  ipv4 point-to-point
  ipv4 address 100.100.1.102 255.255.255.0
  encapsulation dot1q 120
nv
  satellite-fabric-link satellite 100
  redundancy
    iccp-group 1
  !
  remote-ports GigabitEthernet 0/0/0-35
```

Dual Home Configuration for SAT2

Host 1:

```
Host1:

interface TenGigE0/1/1/23.200
  ipv4 point-to-point
  ipv4 address 100.100.1.101 255.255.255.0
  encapsulation dot1ad 100
nv
  satellite-fabric-link satellite 200
  redundancy
    iccp-group 1
  !
  remote-ports GigabitEthernet 0/0/0-35
  !
```

```
!
```

Host 2:

```
interface TenGigE0/1/1/2.200
  ipv4 point-to-point
  ipv4 address 100.100.1.102 255.255.255.0
  encapsulation dot1ad 120
  nv
    satellite-fabric-link satellite 200
    redundancy
      iccp-group 1
    !
    remote-ports GigabitEthernet 0/0/0-35
  !
```

Configuring nV Satellite Auto Image Upgrade: Example

The following example shows how to configure nV satellite auto image upgrade:

```
config
  nv satellite 100 upgrade on-connect
!
```

Additional References

These sections provide references to related documents.

Image Upgrade for Cisco NCS 500x Satellite from Cisco IOS XR Software Release 6.0.0

Prerequisites:

- Cisco NCS 500x satellite has 32GB internal memory and it is upgraded with the latest BIOS.
- Cisco ASR 9000 Host has a RSP3/RSP4 Route processor with at least 2 GB free memory on the disk.

Follow these steps to upgrade the image for Cisco NCS 500x Satellite:

1. Copy the new NCS 500x image (*ncs5k-mini-x-v2.iso*) into the host disk0:.



Note *ncs5k-mini-x-v2.iso* is a sample name for illustration purpose. Use the actual Cisco NCS 5000 image from Cisco webpage for the updated software.

2. Once the satellite is connected and the satellite IP address can be pinged successfully, telnet into the satellite using the username/password combination of root/root.

3. On the satellite telnet console, execute **install add source tftp://< HOST ICL IP address>/../disk0 ncs5k-mini-x-v2.iso**. The **show install log** command on the satellite Telnet console would indicate the install operation progress.
4. Once the install add operation completes and the console message indicates a success, the **show install inactive** command displays the package that just got added. Now, execute **install activate <package name>** to activate the new image.
5. Finally, the device reboots automatically and comes up with the new image. Once the image boots up completely, the satellite comes back in satellite mode and gets rediscovered.

Related Documents

Related Topic	Document Title
Satellite System software upgrade and downgrade on Cisco IOS XR Software	<i>Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide</i>
Cisco IOS XR interface configuration commands	<i>Cisco ASR 9000 Series Aggregation Services Router Interface and Hardware Component Command Reference</i>
Satellite QoS configuration information for the Cisco IOS XR software	<i>Cisco ASR 9000 Series Aggregation Services Router Modular Quality of Service Configuration Guide</i>
Bidirectional Forwarding Detection features on the satellite system	<i>Cisco ASR 9000 Series Aggregation Services Router Routing Configuration Guide</i>
Layer-2 and L2VPN features on the satellite system	<i>Cisco ASR 9000 Series Aggregation Services Router L2VPN and Ethernet Services Configuration Guide</i>
Layer-3 and L3VPN features on the satellite system	<i>Cisco ASR 9000 Series Aggregation Services Router MPLS Layer 3 VPN Configuration Guide</i>
Multicast features on the satellite system	<i>Cisco ASR 9000 Series Aggregation Services Router Multicast Configuration Guide</i>
Broadband Network Gateway features on the satellite system	<i>Cisco ASR 9000 Series Aggregation Services Router Broadband Network Gateway Configuration Guide</i>
AAA related information and configuration on the satellite system	<i>Cisco ASR 9000 Series Aggregation Services Router System Security Configuration Guide</i>
Information about user groups and task IDs	<i>Configuring AAA Services on Cisco IOS XR Software module of Cisco IOS XR System Security Configuration Guide</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

MIBs

MIBs	MIBs Link
There are no applicable MIBs for this module.	To locate and download MIBs for Cisco IOS XR software, use the MIB Locator tool.

RFCs

RFCs	Title
None	N.A.

Technical Assistance

Description	Link
The Cisco Technical Support website contains thousands of pages of searchable technical content, including links to products, technologies, solutions, technical tips, and tools. Registered Cisco.com users can log in from this page to access even more content.	http://www.cisco.com/support



CHAPTER 4

SNMP Components for Satellites

This chapter describes the SNMP components for Cisco ASR 9000v Satellite and Cisco NCS 5001 Satellite on Cisco ASR 9000 Series Aggregation Services Routers.

Cisco ASR 9000v Satellite supports only the operation as a satellite. It doesn't support the standalone operation. However, NCS 5001 operates on both conditions. When ASR9000 works as a host for the satellite, there's a difference about how satellite components are models by SNMP for Cisco IOS XR software of 32-bits and 64-bits. This improvement is performed on Cisco IOS XR software of 64-bits for better management capacity of satellite by host ASR9000.



Note Migrating from Cisco IOS XR software 32-bits to 64-bits, with Cisco ASR 9000v Satellite in place, can lead to generate an alarm. This alarm indicates that the Satellite RP is Unknown. This is an expected behaviour.

- [Example: Satellite ASR9000v2, on page 113](#)
- [Example: Satellite NCS5001, on page 115](#)
- [Example: Satellite Cisco 8000 Series, on page 117](#)

Example: Satellite ASR9000v2

The following is an example about SNMP components for Satellite ASR9000v2 over Host ASR9000 on Cisco IOS XR software 64-bit software version.

```
Router#show nv satellite status satellite 101
Fri May 26 16:13:37.656 UTC
Satellite 101
-----
Status: Connected (Stable)
Type: asr9000v2
Displayed device name: sat101
MAC address: 00a7.429c.3160
IPv4 address: 10.0.101.1 (auto, VRF: **nVSatellite)
Serial Number: CAT2131U192
Remote version: Compatible (latest version)
  ROMMON: 128.1 (Latest)
  FPGA: 1.13 (Latest)
  IOS: 772.100 (Latest)
Received candidate fabric ports:
  nVFabric-GigE0/0/42-43 (permanent)
  nVFabric-TenGigE0/0/44-47 (permanent)
```

Example: Satellite ASR9000v2

```

Configured satellite fabric links:
Bundle-Ether101
-----
Status: Satellite Ready
Remote ports: GigabitEthernet0/0/0-43
Discovered satellite fabric links:
  TenGigE0/2/0/0/8: Satellite Ready; No conflict
  TenGigE0/2/0/0/9: Satellite Ready; No conflict
  TenGigE0/2/0/1/8: Satellite Ready; No conflict
  TenGigE0/2/0/1/9: Satellite Ready; No conflict
Router#show snmp entity | include SAT101
Fri May 26 16:13:44.917 UTC
entPhysicalIndex: 847249308 entPhysicalName: SAT101/RP0
entPhysicalIndex: 847249314 entPhysicalName: SAT101/RP0-IDPROM
entPhysicalIndex: 847249597 entPhysicalName: SAT101/RP0-Control_Sensor
entPhysicalIndex: 847250107 entPhysicalName: SAT101/RP0-SFP bay 0
entPhysicalIndex: 847250108 entPhysicalName: SAT101/RP0-SFP bay 1
entPhysicalIndex: 847250109 entPhysicalName: SAT101/RP0-SFP bay 2
entPhysicalIndex: 847250110 entPhysicalName: SAT101/RP0-SFP bay 3
entPhysicalIndex: 847250111 entPhysicalName: SAT101/RP0-SFP bay 4
entPhysicalIndex: 847250112 entPhysicalName: SAT101/RP0-SFP bay 5
entPhysicalIndex: 847250113 entPhysicalName: SAT101/RP0-SFP bay 6
entPhysicalIndex: 847250114 entPhysicalName: SAT101/RP0-SFP bay 7
entPhysicalIndex: 847250115 entPhysicalName: SAT101/RP0-SFP bay 8
entPhysicalIndex: 847250116 entPhysicalName: SAT101/RP0-SFP bay 9
entPhysicalIndex: 847250117 entPhysicalName: SAT101/RP0-SFP bay 10
entPhysicalIndex: 847250118 entPhysicalName: SAT101/RP0-SFP bay 11
entPhysicalIndex: 847250119 entPhysicalName: SAT101/RP0-SFP bay 12
entPhysicalIndex: 847250120 entPhysicalName: SAT101/RP0-SFP bay 13
entPhysicalIndex: 847250121 entPhysicalName: SAT101/RP0-SFP bay 14
entPhysicalIndex: 847250122 entPhysicalName: SAT101/RP0-SFP bay 15
entPhysicalIndex: 847250123 entPhysicalName: SAT101/RP0-SFP bay 16
entPhysicalIndex: 847250124 entPhysicalName: SAT101/RP0-SFP bay 17
entPhysicalIndex: 847250125 entPhysicalName: SAT101/RP0-SFP bay 18
entPhysicalIndex: 847250126 entPhysicalName: SAT101/RP0-SFP bay 19
entPhysicalIndex: 847250127 entPhysicalName: SAT101/RP0-SFP bay 20
entPhysicalIndex: 847250128 entPhysicalName: SAT101/RP0-SFP bay 21
entPhysicalIndex: 847250129 entPhysicalName: SAT101/RP0-SFP bay 22
entPhysicalIndex: 847250130 entPhysicalName: SAT101/RP0-SFP bay 23
entPhysicalIndex: 847250131 entPhysicalName: SAT101/RP0-SFP bay 24
entPhysicalIndex: 847250132 entPhysicalName: SAT101/RP0-SFP bay 25
entPhysicalIndex: 847250133 entPhysicalName: SAT101/RP0-SFP bay 26
entPhysicalIndex: 847250134 entPhysicalName: SAT101/RP0-SFP bay 27
entPhysicalIndex: 847250135 entPhysicalName: SAT101/RP0-SFP bay 28
entPhysicalIndex: 847250136 entPhysicalName: SAT101/RP0-SFP bay 29
entPhysicalIndex: 847250137 entPhysicalName: SAT101/RP0-SFP bay 30
entPhysicalIndex: 847250138 entPhysicalName: SAT101/RP0-SFP bay 31
entPhysicalIndex: 847250139 entPhysicalName: SAT101/RP0-SFP bay 32
entPhysicalIndex: 847250140 entPhysicalName: SAT101/RP0-SFP bay 33
entPhysicalIndex: 847250141 entPhysicalName: SAT101/RP0-SFP bay 34
entPhysicalIndex: 847250142 entPhysicalName: SAT101/RP0-SFP bay 35
entPhysicalIndex: 847250143 entPhysicalName: SAT101/RP0-SFP bay 36
entPhysicalIndex: 847250144 entPhysicalName: SAT101/RP0-SFP bay 37
entPhysicalIndex: 847250145 entPhysicalName: SAT101/RP0-SFP bay 38
entPhysicalIndex: 847250146 entPhysicalName: SAT101/RP0-SFP bay 39
entPhysicalIndex: 847250147 entPhysicalName: SAT101/RP0-SFP bay 40
entPhysicalIndex: 847250148 entPhysicalName: SAT101/RP0-SFP bay 41
entPhysicalIndex: 847250149 entPhysicalName: SAT101/RP0-SFP bay 42
entPhysicalIndex: 847250150 entPhysicalName: SAT101/RP0-SFP bay 43
entPhysicalIndex: 847250151 entPhysicalName: SAT101/RP0-SFP bay 44
entPhysicalIndex: 847250152 entPhysicalName: SAT101/RP0-SFP bay 45
entPhysicalIndex: 847250153 entPhysicalName: SAT101/RP0-SFP bay 46
entPhysicalIndex: 847250154 entPhysicalName: SAT101/RP0-SFP bay 47
entPhysicalIndex: 847261596 entPhysicalName: SAT101/FT0

```

```

entPhysicalIndex: 847261602 entPhysicalName: SAT101/FT0-IDPROM
entPhysicalIndex: 847262445 entPhysicalName: SAT101/FT0-fan0
entPhysicalIndex: 847262446 entPhysicalName: SAT101/FT0-fan1
entPhysicalIndex: 847262447 entPhysicalName: SAT101/FT0-fan2
entPhysicalIndex: 847262448 entPhysicalName: SAT101/FT0-fan3
entPhysicalIndex: 847262545 entPhysicalName: SAT101/FT0-fan speed sensor 0
entPhysicalIndex: 847262546 entPhysicalName: SAT101/FT0-fan speed sensor 1
entPhysicalIndex: 847262547 entPhysicalName: SAT101/FT0-fan speed sensor 2
entPhysicalIndex: 847262548 entPhysicalName: SAT101/FT0-fan speed sensor 3
entPhysicalIndex: 847273884 entPhysicalName: SAT101/PT0
entPhysicalIndex: 847273889 entPhysicalName: SAT101/PT0-IDPROM
entPhysicalIndex: 847273993 entPhysicalName: SAT101/PT0-PEM Bay 0
entPhysicalIndex: 855633820 entPhysicalName: SAT101
entPhysicalIndex: 855633825 entPhysicalName: SAT101-IDPROM
entPhysicalIndex: 855633834 entPhysicalName: SAT101-LineCard Chassis backplane
entPhysicalIndex: 855633889 entPhysicalName: SAT101-Power Module Slot 0
entPhysicalIndex: 855633904 entPhysicalName: SAT101-Fan Tray Slot 0
entPhysicalIndex: 855633909 entPhysicalName: SAT101-RouteProcessor Slot 0

```

Example: Satellite NCS5001

The following is an example about SNMP components for Satellite NCS5001 over Host ASR9000 on Cisco IOS XR software 64-bit version.

```
Router#show nv satellite status satellite 102
```

```
Satellite 102
```

```
-----
```

```

Status: Connected (Stable)
Type: ncs5001
Displayed device name: Sat102
MAC address: 00bc.60eb.7ec5
IPv4 address: 102.102.102.12 (VRF: default)
Serial Number: FOC2234R1FA
Remote version: Compatible (latest version)
  IOFPGA: 0.18
  MB_MIFPGA: 0.17
  BIOS: 1.13
  XR: 7.1.3 (Recommended: 7.1.3)
Received candidate fabric ports:
  nVFabric-TenGigE0/0/38-39 (permanent)
  nVFabric-HundredGigE0/1/0-3 (permanent)
Configured satellite fabric links:
  Bundle-Ether102
-----

```

```

Status: Satellite Ready
Remote ports: TenGigE0/0/0-39
Discovered satellite fabric links:
  HundredGigE0/0/0/2: Satellite Ready; No conflict
  HundredGigE0/0/0/0: Satellite Ready; No conflict
  HundredGigE0/0/0/3: Satellite Ready; No conflict
  HundredGigE0/0/0/1: Satellite Ready; No conflict

```

```
Router#show snmp entity | include SAT102
```

```

Thu Nov 18 13:10:02.694 UTC
entPhysicalIndex: 838860701 entPhysicalName: SAT102/RP0
entPhysicalIndex: 838860707 entPhysicalName: SAT102/RP0-IDPROM
entPhysicalIndex: 838860990 entPhysicalName: SAT102/RP0-Control_Sensor
entPhysicalIndex: 838861500 entPhysicalName: SAT102/RP0-SFP bay 0
entPhysicalIndex: 838861501 entPhysicalName: SAT102/RP0-SFP bay 1

```

Example: Satellite NCS5001

```

entPhysicalIndex: 838861502 entPhysicalName: SAT102/RP0-SFP bay 2
entPhysicalIndex: 838861503 entPhysicalName: SAT102/RP0-SFP bay 3
entPhysicalIndex: 838861504 entPhysicalName: SAT102/RP0-SFP bay 4
entPhysicalIndex: 838861505 entPhysicalName: SAT102/RP0-SFP bay 5
entPhysicalIndex: 838861506 entPhysicalName: SAT102/RP0-SFP bay 6
entPhysicalIndex: 838861507 entPhysicalName: SAT102/RP0-SFP bay 7
entPhysicalIndex: 838861508 entPhysicalName: SAT102/RP0-SFP bay 8
entPhysicalIndex: 838861509 entPhysicalName: SAT102/RP0-SFP bay 9
entPhysicalIndex: 838861510 entPhysicalName: SAT102/RP0-SFP bay 10
entPhysicalIndex: 838861511 entPhysicalName: SAT102/RP0-SFP bay 11
entPhysicalIndex: 838861512 entPhysicalName: SAT102/RP0-SFP bay 12
entPhysicalIndex: 838861513 entPhysicalName: SAT102/RP0-SFP bay 13
entPhysicalIndex: 838861514 entPhysicalName: SAT102/RP0-SFP bay 14
entPhysicalIndex: 838861515 entPhysicalName: SAT102/RP0-SFP bay 15
entPhysicalIndex: 838861516 entPhysicalName: SAT102/RP0-SFP bay 16
entPhysicalIndex: 838861517 entPhysicalName: SAT102/RP0-SFP bay 17
entPhysicalIndex: 838861518 entPhysicalName: SAT102/RP0-SFP bay 18
entPhysicalIndex: 838861519 entPhysicalName: SAT102/RP0-SFP bay 19
entPhysicalIndex: 838861520 entPhysicalName: SAT102/RP0-SFP bay 20
entPhysicalIndex: 838861521 entPhysicalName: SAT102/RP0-SFP bay 21
entPhysicalIndex: 838861522 entPhysicalName: SAT102/RP0-SFP bay 22
entPhysicalIndex: 838861523 entPhysicalName: SAT102/RP0-SFP bay 23
entPhysicalIndex: 838861524 entPhysicalName: SAT102/RP0-SFP bay 24
entPhysicalIndex: 838861525 entPhysicalName: SAT102/RP0-SFP bay 25
entPhysicalIndex: 838861526 entPhysicalName: SAT102/RP0-SFP bay 26
entPhysicalIndex: 838861527 entPhysicalName: SAT102/RP0-SFP bay 27
entPhysicalIndex: 838861528 entPhysicalName: SAT102/RP0-SFP bay 28
entPhysicalIndex: 838861529 entPhysicalName: SAT102/RP0-SFP bay 29
entPhysicalIndex: 838861530 entPhysicalName: SAT102/RP0-SFP bay 30
entPhysicalIndex: 838861531 entPhysicalName: SAT102/RP0-SFP bay 31
entPhysicalIndex: 838861532 entPhysicalName: SAT102/RP0-SFP bay 32
entPhysicalIndex: 838861533 entPhysicalName: SAT102/RP0-SFP bay 33
entPhysicalIndex: 838861534 entPhysicalName: SAT102/RP0-SFP bay 34
entPhysicalIndex: 838861535 entPhysicalName: SAT102/RP0-SFP bay 35
entPhysicalIndex: 838861536 entPhysicalName: SAT102/RP0-SFP bay 36
entPhysicalIndex: 838861537 entPhysicalName: SAT102/RP0-SFP bay 37
entPhysicalIndex: 838861538 entPhysicalName: SAT102/RP0-SFP bay 38
entPhysicalIndex: 838861539 entPhysicalName: SAT102/RP0-SFP bay 39
entPhysicalIndex: 838861540 entPhysicalName: SAT102/RP0-SFP bay 40
entPhysicalIndex: 838861541 entPhysicalName: SAT102/RP0-SFP bay 41
entPhysicalIndex: 838863301 entPhysicalName: SAT102/RP0-CPUVCC
entPhysicalIndex: 838863302 entPhysicalName: SAT102/RP0-V3P3_BRCM
entPhysicalIndex: 838863303 entPhysicalName: SAT102/RP0-V0P8_CPU
entPhysicalIndex: 838863304 entPhysicalName: SAT102/RP0-V1P0
entPhysicalIndex: 838863305 entPhysicalName: SAT102/RP0-V1P0_PCH
entPhysicalIndex: 838863306 entPhysicalName: SAT102/RP0-V2P5VB
entPhysicalIndex: 838863307 entPhysicalName: SAT102/RP0-V1P05
entPhysicalIndex: 838863308 entPhysicalName: SAT102/RP0-V1P5_PCH
entPhysicalIndex: 838863309 entPhysicalName: SAT102/RP0-V1P5
entPhysicalIndex: 838863310 entPhysicalName: SAT102/RP0-V1P8_ZR
entPhysicalIndex: 838863311 entPhysicalName: SAT102/RP0-V1P8
entPhysicalIndex: 838863312 entPhysicalName: SAT102/RP0-V2P5
entPhysicalIndex: 838863313 entPhysicalName: SAT102/RP0-V1P2
entPhysicalIndex: 838863314 entPhysicalName: SAT102/RP0-V5P0
entPhysicalIndex: 838863315 entPhysicalName: SAT102/RP0-V1P2VA
entPhysicalIndex: 838863316 entPhysicalName: SAT102/RP0-V2P5VA
entPhysicalIndex: 838863317 entPhysicalName: SAT102/RP0-V3P3
entPhysicalIndex: 838863318 entPhysicalName: SAT102/RP0-V3P3VA
entPhysicalIndex: 838863319 entPhysicalName: SAT102/RP0-TDNT_VDD_V1P0
entPhysicalIndex: 838863320 entPhysicalName: SAT102/RP0-TDNT_AVDD_V1P0
entPhysicalIndex: 838872989 entPhysicalName: SAT102/FT0
entPhysicalIndex: 838872995 entPhysicalName: SAT102/FT0-IDPROM
entPhysicalIndex: 838873838 entPhysicalName: SAT102/FT0-fan0
entPhysicalIndex: 838873839 entPhysicalName: SAT102/FT0-fan1

```

```

entPhysicalIndex: 838873938 entPhysicalName: SAT102/FT0-fan speed sensor 0
entPhysicalIndex: 838873939 entPhysicalName: SAT102/FT0-fan speed sensor 1
entPhysicalIndex: 838877085 entPhysicalName: SAT102/FT1
entPhysicalIndex: 838877091 entPhysicalName: SAT102/FT1-IDPROM
entPhysicalIndex: 838877934 entPhysicalName: SAT102/FT1-fan0
entPhysicalIndex: 838877935 entPhysicalName: SAT102/FT1-fan1
entPhysicalIndex: 838878034 entPhysicalName: SAT102/FT1-fan speed sensor 0
entPhysicalIndex: 838878035 entPhysicalName: SAT102/FT1-fan speed sensor 1
entPhysicalIndex: 838885277 entPhysicalName: SAT102/PT0
entPhysicalIndex: 838885282 entPhysicalName: SAT102/PT0-IDPROM
entPhysicalIndex: 838885386 entPhysicalName: SAT102/PT0-PEM Bay 0
entPhysicalIndex: 838889373 entPhysicalName: SAT102/PT1
entPhysicalIndex: 838889378 entPhysicalName: SAT102/PT1-IDPROM
entPhysicalIndex: 838889482 entPhysicalName: SAT102/PT1-PEM Bay 0
entPhysicalIndex: 847245213 entPhysicalName: SAT102
entPhysicalIndex: 847245218 entPhysicalName: SAT102-IDPROM
entPhysicalIndex: 847245227 entPhysicalName: SAT102-LineCard Chassis backplane
entPhysicalIndex: 847245282 entPhysicalName: SAT102-Power Module Slot 0
entPhysicalIndex: 847245283 entPhysicalName: SAT102-Power Module Slot 1
entPhysicalIndex: 847245297 entPhysicalName: SAT102-Fan Tray Slot 0
entPhysicalIndex: 847245298 entPhysicalName: SAT102-Fan Tray Slot 1
entPhysicalIndex: 847245302 entPhysicalName: SAT102-RouteProcessor Slot 0

```

Example: Satellite Cisco 8000 Series

The following is an example about SNMP components for Satellite Cisco 8011-4G24Y4H-I over Host ASR9000 on Cisco IOS XR software 64-bit software version.

```

Router#show nv satellite status satellite 105
Wed May 27 05:34:18.103 UTC
Satellite 105
-----
Status: Connected (Stable)
Redundancy: Standby (Group: 1)
Type: 8011-4G24Y4H-I
Displayed device name: Sat105
MAC address: dcd8.3bda.a004
IPv4 address: 10.0.105.1 (auto, VRF: **nVSatellite)
Serial Number: FLM29390NE5
Supported connection type: TCP
Remote version: Compatible (latest version)
  ADM_CONFIG: 5.00
  IOFPGA: 0.90
  PRIM_BOOTLOADER: 52.24
  STDBY_FPGA: 1.38
  TAM_FW: 9.09
  XR: 26.2.1.37I (Recommended: 26.2.1.37I)
Received candidate fabric ports:
  nVFabric-TenGigE0/0/26-27 (permanent)
  nVFabric-HundredGigE0/0/0-3 (permanent)
Configured satellite fabric links:
  HundredGigE0/0/0/4
-----
Status: Satellite Ready
Remote ports: TenGigE0/0/21,23,25
Router#
Router#show snmp entity | include SAT105
Wed May 27 05:34:46.449 UTC
entPhysicalIndex: 838860701 entPhysicalName: SAT105/RP0
entPhysicalIndex: 838860707 entPhysicalName: SAT105/RP0-IDPROM

```

Example: Satellite Cisco 8000 Series

```

entPhysicalIndex: 838861501 entPhysicalName: SAT105/RP0-QSFP-bay-0
entPhysicalIndex: 838861502 entPhysicalName: SAT105/RP0-QSFP-bay-1
entPhysicalIndex: 838861503 entPhysicalName: SAT105/RP0-QSFP-bay-2
entPhysicalIndex: 838861504 entPhysicalName: SAT105/RP0-QSFP-bay-3
entPhysicalIndex: 838861505 entPhysicalName: SAT105/RP0-SFP-bay-4
entPhysicalIndex: 838861506 entPhysicalName: SAT105/RP0-SFP-bay-5
entPhysicalIndex: 838861507 entPhysicalName: SAT105/RP0-SFP-bay-6
entPhysicalIndex: 838861508 entPhysicalName: SAT105/RP0-SFP-bay-7
entPhysicalIndex: 838861509 entPhysicalName: SAT105/RP0-SFP-bay-8
entPhysicalIndex: 838861510 entPhysicalName: SAT105/RP0-SFP-bay-9
entPhysicalIndex: 838861511 entPhysicalName: SAT105/RP0-SFP-bay-10
entPhysicalIndex: 838861512 entPhysicalName: SAT105/RP0-SFP-bay-11
entPhysicalIndex: 838861513 entPhysicalName: SAT105/RP0-SFP-bay-12
entPhysicalIndex: 838861514 entPhysicalName: SAT105/RP0-SFP-bay-13
entPhysicalIndex: 838861515 entPhysicalName: SAT105/RP0-SFP-bay-14
entPhysicalIndex: 838861516 entPhysicalName: SAT105/RP0-SFP-bay-15
entPhysicalIndex: 838861517 entPhysicalName: SAT105/RP0-SFP-bay-16
entPhysicalIndex: 838861518 entPhysicalName: SAT105/RP0-SFP-bay-17
entPhysicalIndex: 838861519 entPhysicalName: SAT105/RP0-SFP-bay-18
entPhysicalIndex: 838861520 entPhysicalName: SAT105/RP0-SFP-bay-19
entPhysicalIndex: 838861521 entPhysicalName: SAT105/RP0-SFP-bay-20
entPhysicalIndex: 838861522 entPhysicalName: SAT105/RP0-SFP-bay-21
entPhysicalIndex: 838861523 entPhysicalName: SAT105/RP0-SFP-bay-22
entPhysicalIndex: 838861524 entPhysicalName: SAT105/RP0-SFP-bay-23
entPhysicalIndex: 838861525 entPhysicalName: SAT105/RP0-SFP-bay-24
entPhysicalIndex: 838861526 entPhysicalName: SAT105/RP0-SFP-bay-25
entPhysicalIndex: 838861527 entPhysicalName: SAT105/RP0-SFP-bay-26
entPhysicalIndex: 838861528 entPhysicalName: SAT105/RP0-SFP-bay-27
entPhysicalIndex: 838863361 entPhysicalName: SAT105/RP0-MB-Inlet-Temp-Sensor
RP/0/RP0/CPU0:R5_H3#

```



INDEX

A

active/standby [17](#)
ASR9001 [30](#)
auto-ip [54](#)

B

BNG [30](#)
 interoperability [30](#)

C

CGN [30](#)
chassis management [33](#)

H

host ip address, configuring [55](#)

I

inter-chassis link [22](#)

N

nV [30](#)

P

port extender model [14](#)
private vrf [105](#)

Q

quality of service [31](#)

S

Satellite Discovery And Control (SDAC) Protocol [24](#)
satellite ethernet [31](#)
 l2vpn [31](#)
 layer 2 information [31](#)
satellite global configuration [103](#)
satellite interface configuration [104](#)
satellite nV system [12, 38, 52](#)
 benefits [12](#)
 defining [52](#)
 restrictions [38](#)
sdac ip connectivity [24](#)
split brain handling [17](#)
sync-e [65, 67, 69](#)
 configuration example [69](#)
 restrictions [67](#)

T

time of day [33](#)

