



Bring-up the Router

After installing the hardware, boot the router. Connect to the XR console port and power on the router. The router completes the boot process using the pre-installed operating system (OS) image. If no image is available within the router, the router can be booted using PXE boot or an external bootable USB drive.

After booting is complete, create the root username and password, and then use it to log on to the XR console and get the router prompt. The first user created in XR console is synchronized to the System Admin console. From the XR console, access the System Admin console to configure system administration settings.

For more information about completing the hardware installation, see [Cisco ASR 9000 Series Aggregation Services Router Hardware Installation Guide](#).


In a large-scale environment, to provision routers remotely without any manually intervention, we recommend you to use Zero Touch Provisioning (ZTP). See [Deploy Router Using Classic ZTP](#).

- [Boot the Router, on page 1](#)
- [Boot the router using USB, on page 3](#)
- [Boot the Router Using iPXE, on page 5](#)
- [Setup Root User Credentials, on page 8](#)
- [Access the System Admin Console, on page 9](#)
- [Configure the Management Port, on page 10](#)
- [Perform Clock Synchronization with NTP Server, on page 12](#)

Boot the Router

Use the console port on the Route Processor (RP) to connect to a new router. The console port connect to the XR console by default. If necessary, subsequent connections can be established through the management port, after it is configured.

Figure 1: Route Processor Front Panel View

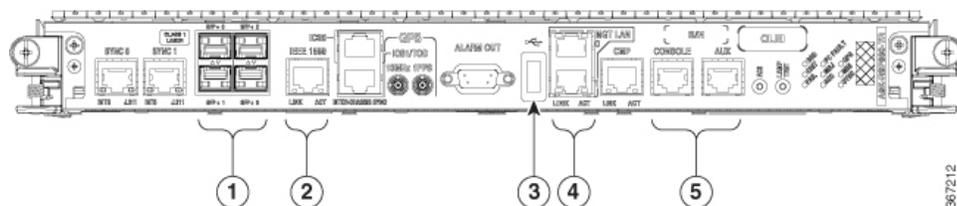

1	SFP/SFP+ ports
---	----------------

2	Service LAN port
3	External USB port
4	Management LAN ports
5	Console and Auxiliary (AUX) ports

Procedure

Step 1 Connect a terminal to the console port of the RP.

Step 2 Start the terminal emulation program on your workstation.

In the **COM1 Properties** window, select the **Port Settings** tab, and enter these console settings:

The baud rate is set by default and cannot be changed.

For chassis with RSP4 and RP2 cards, the console settings are baud rate 9600 bps, no parity, 1 stop bits and 8 data bits. The user can change this baud rate. For next generation RP3 and RSP5 cards, the console settings are baud rate 115200 bps, no parity, 1 stop bits and 8 data bits.

Step 3 Power on the router.

Connect the power cord to the power module. Turn on the router by switching the power switch to the "ON" position. The power switch is usually located near the power module. The router boots up. The boot process details are displayed on the console screen of the terminal emulation program.

Step 4 Press **Enter**.

The boot process is complete when the system prompts to enter the root-system username. If the prompt does not appear, wait for a while to give the router more time to complete the initial boot procedure, then press **Enter**.

Important

If the boot process fails, it may be because the preinstalled image on the router is corrupt. In this case, the router can be booted using an external bootable USB drive.

Note

We recommended that you check the `md5sum` of the image after copying the image from the source location to the server from where the router boots up with the new version. If you observe an `md5sum` mismatch, you can remove the corrupted file and ensure that a working copy of the image file is available for the setup to begin.

What to do next

Specify the root username and password. For more information, see [Setup Root User Credentials, on page 8](#).

Boot the router using USB

The bootable USB drive is used to re-image the router for the purpose of system upgrade, password recovery or boot the router in case of boot failure. The USB on router is mounted as disk 2.

Before you begin

Ensure that:

- The compressed boot file, `asr9k-x64-usb_boot.zip`, is available.
- A USB drive is connected to the router and accessible at `/mnt/usb/vdg/`.

Procedure

Step 1 Copy the compressed boot file, `asr9k-x64-usb_boot.zip`, from its source location, say, `/misc/disk1`, to the mounted USB drive.

Example:

```
[router:/misc/disk1]$cp asr9k-x64-usb_boot.zip /mnt/usb/vdg/
```

Step 2 Verify whether the file is copied to the USB drive.

Example:

```
[router:/mnt/usb/vdg]$ls
'System Volume Information'  asr9k-x64-usb_boot.zip
```

Use `ls -ltr` to verify the file size. We also recommend you to compare the MD5 checksum value at the source and destination to ensure data integrity, though the command for MD5 checksum is not shown in the provided logs.

```
[router:/mnt/usb/vdg]$ls -ltr
total 1810392
drwxr-xr-x. 2 root root      8192 Jul 14 15:23 'System Volume Information'
-rwxr-xr-x. 1 root root 1853832854 Sep 19 06:11 asr9k-x64-usb_boot.zip
```

Step 3 Extract the contents of the `asr9k-x64-usb_boot.zip` file directly onto the USB drive. This process converts the USB drive into a bootable medium.

Example:

```
[router:/mnt/usb/vdg]$unzip asr9k-x64-usb_boot.zip
Archive:  asr9k-x64-usb_boot.zip
creating: boot/
inflating: boot/install-image.iso
creating: EFI/
creating: EFI/boot/
inflating: EFI/boot/grub.cfg
inflating: EFI/boot/bootx64.efi
```

Step 4 Verify whether the file contents are extracted correctly and the `boot/` and `EFI/` directories are created.

Example:

```
[router:/mnt/usb/vdg]$ls
EFI 'System Volume Information'  asr9k-x64-usb_boot.zip  boot
```

Step 5 Reload the router.

Example:

```
router# hw-module location all bootmedia network reload
```

Step 6 While the router is reloading, press **Delete** or **Esc** to enter the **BIOS** menu.

From the **BIOS** menu, select the **Boot Manager** option using the up and down arrow keys and press **Enter**.

Figure 2: BIOS menu

```
Transferring Console
Intel(R) Xeon(R) CPU E5-2628L v2 @ 1.90GHz          1.90 GHz
Shumway.03.72.35.2019                             16384 MB RAM

Continue
Boot Manager
Device Manager
Boot From File
Setup Utility

This selection will direct the system to
continue to booting process

ASR-9904-AC

Serial ATA Port 5 : SMART iSATA SHSLM32GEBXCITHD02
Other Device 1 : SMART SATA SHSLM32G3BCITHD22
```

Step 7 From the **Boot Manager** menu, select the desired USB boot option from the listed choices using the up and down arrow keys and press **Enter** to boot from the USB drive.

Figure 3: Boot Manager menu

```
Boot Manager

Boot Option Menu

ASR9K Host OS (SMART SATA SHSLM32G3BCITHD22)
EFI USB Device (STEC STEC USB 2.0)
EFI USB Device 1 (SanDisk)
External Network 1 for IPv4 (70-E4-22-74-C9-E1)
External Network 0 for IPv4 (70-E4-22-74-C9-E0)
Internal EFI Shell
CISCO iPXE

^ and v to change option, ENTER to select an option, ESC to exit
```

Boot the Router Using iPXE

iPXE is a pre-boot execution environment that is included in the network card of the management interfaces and works at the system firmware (UEFI) level of the router. iPXE is used to re-image the system, and boot the router in case of boot failure or in the absence of a valid bootable partition. iPXE downloads the ISO image, proceeds with the installation of the image, and bootstraps within the new installation.

iPXE acts as a boot loader and provides the flexibility to choose the image that the system will boot based on the Platform Identifier (PID), the Serial Number, or the management mac-address. iPXE must be defined in the DHCP server configuration file.



Note PID and serial number is supported only if iPXE is invoked using the command (admin) hw-module location all bootmedia network reload all. If iPXE is selected manually from BIOS, PID and serial number is not supported.



Note Cisco ASR 9901 — By default, iPXE uses the previous attempted boot method on the next reload. If the Network option was previously used, the iPXE register will be set to 1 (IPXE_PREF=1). To boot an Cisco ASR 9901 router via DHCP on the next reload, you must set the IPXE_PREF settings to 0 (IPXE_PREF=0).

From the system admin console, enter the **run chvrf 0 ssh rp0_admin /opt/cisco/calvados/bin/nvram_dump -s IPXE_PREF=0** command twice. After entering this command the first time, the host is added to the known list of hosts.

```
sysadmin-vm:0_RP0# run chvrf 0 ssh rp0_admin /opt/cisco/calvados/bin/nvram_dump -s IPXE_PREF=0
Sat May 2 10:39:52.740 UTC+00:00
Warning: Permanently added 'rp0_admin' (ECDSA) to the list of known hosts.
sysadmin-vm:0_RP0# run chvrf 0 ssh rp0_admin /opt/cisco/calvados/bin/nvram_dump -s IPXE_PREF=0
Sat May 2 10:39:54.995 UTC+00:00
sysadmin-vm:0_RP0# hw-module location all bootmedia network reload
```

iPXE boot can be performed during the following scenarios:

- migration from 32-bit to 64-bit using migration script
- recover password
- boot-up failure with 64-bit image

Before you begin

Take a backup of configuration to a TFTP or FTP path to load the configuration back after the iPXE boot.

Procedure

Step 1 Login to the system admin console.

Example:

```
sysadmin-vm:0_RSP0# hw-module location all reload
Tue Mar 6 08:12:47.605 UTC
Reload hardware module ? [no,yes] yes
result Card graceful reload request on all acknowledged.
sysadmin-vm:0_RSP0#
```

Step 2 If the router is unable to boot, press Ctrl +C to stop the boot process when the following information is displayed.

Note

Use this procedure only on active RP; the standby RP must either be removed from the chassis, or stopped at the boot menu. After the active RP is installed with images from iPXE boot, boot the standby RP.

Example:

```
System Bootstrap, Version 10.57 [ASR9K x86 ROMMON],
Copyright (c) 1994-2018 by Cisco Systems, Inc.
Compiled on Mon 01/09/2017 17:15:01.98
BOARD_TYPE           : 0x100317
Rommon                : 10.57 (Primary)
Board Revision        : 4
PCH EEPROM            : 3.4
IPU FPGA (PL)        : 0.40.0 (Backup)
```

```

IPU INIT(HW_FPD)       : 0.30.0
IPU FSBL(BOOT.BIN)    : 1.19.0
IPU LINUX(IMAGE.FPD)  : 1.21.0
OPTIMUS FPGA          : 0.12.0
OMEGA FPGA            : 0.13.0
ALPHA FPGA            : 0.14.0
CHA FPGA              : 0.5.1
CBC0                  : Part 1=34.38, Part 2=34.38, Act Part=2
Product Number        : A9K-RSP880-SE
Chassis               : ASR-9904-AC
Chassis Serial Number : FOX1936GBDD
Slot Number           : 1
Pxe Mac Address LAN 0 : 70:e4:22:06:13:40
Pxe Mac Address LAN 1 : 70:e4:22:06:13:41
=====

```

```

Got EMT Mode as 3
Got Boot Mode as 0
Booting IOS-XR (32 bit Classic XR) - Press Ctrl-c to stop

```

Step 3 Choose option 4 for iPXE boot.

Example:

```

Please select the operating system and the boot device:
 1) IOS-XR (32 bit Classic XR)
 2) IOS-XR 64 bit Boot previously installed image
 3) IOS-XR 64 bit Mgmt Network boot using DHCP server
 4) IOS-XR 64 bit Mgmt Network boot using local settings (iPXE)
 5) IOS-XR 64 bit Internal network boot from RSP/RP
 6) IOS-XR 64 bit Local boot using embedded USB media
 7) IOS-XR 64 bit Local boot using front panel USB media
Selection [1/2/3/4/5/6/7]:

```

Step 4 Manually update iPXE ROMMON details before booting using FTP or TFTP.

Note

If you are using an iPXE server, skip Step4 and proceed to Steps5 and 6.

Example:

```

iPXE>set cisco/cisco-server-url:string tftp://<path>/asr9k-mini-x64.iso
iPXE>set cisco/cisco-ipv4-address:string 1.3.24.202
iPXE>set cisco/cisco-netmask-address:str 255.255.0.0
iPXE>set cisco/cisco-gateway-address:str 1.3.0.1

```

Step 5 Open the connected management port (0/1).

Example:

```

iPXE>ifclose net0
iPXE>ifclose net1
iPXE>ifopen net1

```

where net0 and net1 represents management port0 and port1 respectively.

Step 6 Boot the required image from FTP or TFTP location.

Example:

```

iPXE>
iPXE> ifopen net0:
iPXE> boot tftp://<path>/asr9k-mini-x64-<release-number>.iso
tftp://<path>/asr9k-mini-x64-<release-number>.iso... 0%
Booting iso-image@0x83c525000 (1135456256), bzImage@0x83c55f000 (4526671)

.....BIOS CODE SIGN ENTRY ...

```

Step 7 After the active RP is up and running, boot the standby RP. From the boot options select IOS-XR 64 bit Internal network boot from RSP/RP.

Example:

```
Please select the operating system and the boot device:
 1) IOS-XR (32 bit Classic XR)
 2) IOS-XR 64 bit Boot previously installed image
 3) IOS-XR 64 bit Mgmt Network boot using DHCP server
 4) IOS-XR 64 bit Mgmt Network boot using local settings (iPXE)
 5) IOS-XR 64 bit Internal network boot from RSP/RP
 6) IOS-XR 64 bit Local boot using embedded USB media
 7) IOS-XR 64 bit Local boot using front panel USB media
Selection [1/2/3/4/5/6/7]:
```

Setup Root User Credentials

When you boot the router for the first time, the system prompts you to configure root credentials (username and password). These credentials have been set up for the root user on the XR console (root-lr), the System Admin VM (root-system), and for disaster recovery purposes.

Procedure

Step 1 Enter root-system username: *username*

Enter the username of the root user. The character limit is 1023. In this example, the name of the root user is "root".

Important

The specified username is mapped to the "root-lr" group on the XR console. It is also mapped as the "root-system" user on the System Admin console.

When starting the router for the first time, or after resetting the router's operating system to its default state, the router does not have any user configuration. In such cases, the router prompts you to specify the "root-system username". However, if the router has been configured previously, the router prompts you to enter the "username", as described in Step 4.

Step 2 Enter secret: *password*

Enter the password for the root user. The character range of the password is from 6 through 253 characters. The password that you type is not displayed on the CLI for security reasons.

The root-system username and password must be safeguarded as they have superuser privileges. They are used to access the complete router configuration.

Step 3 Enter secret again: *password*

Reenter the password for the root-system user. The password that you type is not displayed on the CLI for security reasons.

Step 4 Username: *username*

Enter the root-system username to login to the XR VM console.

Step 5 Password: *password*

Enter the password of the root-system user. The correct password displays the router prompt. You are now logged into the XR VM console.

Step 6 (Optional) **show run username**

Displays user details.

```
username root
group root-lr
group cisco-support
secret 5 $1$NBg7$fHs1inKPZVvzqxMv775UE/
!
```

What to do next

- Configure routing functions from the XR console.
- Configure system administration settings from the System Admin prompt. The System Admin prompt is displayed on accessing the System Admin console. For details on how to get the System Admin prompt, see [Access the System Admin Console, on page 9](#).

Access the System Admin Console

You must log in to the System Admin console through the XR console to perform all system administration and hardware management setup.

Procedure

Step 1 Log in to the XR console as the root user.

Step 2 (Optional) Disable the login banner on console port when accessing the System Admin mode from XR mode.

- a) **configure**
- b) **service sysadmin-login-banner disable**

Example:

```
RP/0/RSP0/CPU0:router(config)#service sysadmin-login-banner disable
```

Disable the login banner on console port in System Admin mode.

- c) **commit**
- d) **end**

Step 3 **admin**

Example:

The login banner is enabled by default. The following example shows the command output with the login banner enabled:

```
RP/0/RSP0/CPU0:router#admin
```

```
Mon May 22 06:57:29.350 UTC

root connected from 127.0.0.1 using console on host
sysadmin-vm:0_RP0# exit
Mon May 22 06:57:32.360 UTC
```

The following example shows the command output with the login banner disabled:

```
RP/0/RP0/CPU0:router#admin
Thu Mar 01:07:14.509 UTC
sysadmin-vm:0_RP0# exit
```

Step 4 (Optional) exit

Return to the XR mode from the System Admin mode.

Configure the Management Port

To use the Management port for system management and remote communication, you must configure an IP address and a subnet mask for the management ethernet interface. To communicate with devices on other networks (such as remote management stations or TFTP servers), you need to configure a default (static) route for the router.

Before you begin

- Consult your network administrator or system planner to procure IP addresses and a subnet mask for the management interface.
- Physical port Ethernet 0 and Ethernet 1 on RP are the management ports. Ensure that the port is connected to management network.

SUMMARY STEPS

1. **configure**
2. **interface MgmtEth** *rack/slot/port*
3. **ipv4 address** *ipv4-address subnet-mask*
4. **ipv4 address** *ipv4 virtual address subnet-mask*
5. **no shutdown**
6. **exit**
7. **router static address-family ipv4 unicast** *0.0.0.0/0 default-gateway*
8. Use the **commit** or **end** command.

DETAILED STEPS

Procedure

Step 1 configure

Example:

```
RP/0/RSP0/CPU0:router# configure
```

Enters global configuration mode.

Step 2 **interface MgmtEth** *rack/slot/port*

Example:

```
RP/0/RSP0/CPU0:router(config)#interface mgmtEth 0/RP0/CPU0/0
```

Enters interface configuration mode for the management interface of the primary RP.

Step 3 **ipv4 address** *ipv4-address subnet-mask*

Example:

```
RP/0/RSP0/CPU0:router(config-if)#ipv4 address 10.1.1.1/8
```

Assigns an IP address and a subnet mask to the interface.

Step 4 **ipv4 address** *ipv4 virtual address subnet-mask*

Example:

```
RP/0/RSP0/CPU0:router(config-if)#ipv4 address 1.70.31.160 255.255.0.0
```

Assigns a virtual IP address and a subnet mask to the interface.

Step 5 **no shutdown**

Example:

```
RP/0/RSP0/CPU0:router(config-if)#no shutdown
```

Places the interface in an "up" state.

Step 6 **exit**

Example:

```
RP/0/RSP0/CPU0:router(config-if)#exit
```

Exits the Management interface configuration mode.

Step 7 **router static address-family ipv4 unicast** *0.0.0.0/0 default-gateway*

Example:

```
RP/0/RSP0/CPU0:router(config)#router static address-family ipv4 unicast 0.0.0.0/0 12.25.0.1
```

Specifies the IP address of the default-gateway to configure a static route; this is to be used for communications with devices on other networks.

Step 8 Use the **commit** or **end** command.

commit —Saves the configuration changes and remains within the configuration session.

end —Prompts user to take one of these actions:

- **Yes** — Saves configuration changes and exits the configuration session.
- **No** —Exits the configuration session without committing the configuration changes.
- **Cancel** —Remains in the configuration session, without committing the configuration changes.

What to do next

Connect to the management port to the ethernet network. With a terminal emulation program, establish a SSH or telnet connection to the management interface port using its IP address. Before establishing a telnet session, use the **telnet ipv4|ipv6 server max-servers** command in the XR Config mode, to set number of allowable telnet sessions to the router.

Perform Clock Synchronization with NTP Server

There are independent system clocks for the XR console and the System Admin console. To ensure that these clocks do not deviate from true time, they need to be synchronized with the clock of a NTP server. In this task you will configure a NTP server for the XR console. After the XR console clock is synchronized, the System Admin console clock will automatically synchronize with the XR console clock.

Before you begin

Configure and connect to the management port.

Procedure

Step 1 **configure****Example:**

```
RP/0/RSP0/CPU0:router# configure
```

Enters global configuration mode.

Step 2 **ntp server** *server_address***Example:**

```
RP/0/RSP0/CPU0:router(config)#ntp server 64.90.182.55
```

The XR console clock is configured to be synchronized with the specified sever.
