



# Smart Licensing Commands

---

This module describes the commands used to configure Smart Licensing.

For detailed information about Smart Licensing concepts, configuration tasks, and examples, see the *Implementing Smart Licensing on Cisco IOS XR Software* module in *System Management Configuration Guide for Cisco ASR 9000 Series Routers*.

- [license smart enable, on page 2](#)
- [show license all, on page 3](#)
- [show license certificate, on page 4](#)
- [show license entitlement, on page 5](#)
- [show license features \(chassis\), on page 6](#)
- [show license ha, on page 7](#)
- [show license pool, on page 8](#)
- [show license register-status, on page 9](#)
- [show license scheduler, on page 10](#)
- [show license status \(compliance\), on page 11](#)
- [show license udi \(smart\), on page 12](#)
- [show license version, on page 13](#)

# license smart enable

To enable Smart Licensing for your product, use the **license smart enable** command in the Administration Configuration mode. Use the **no** form of this command to disable Smart Licensing and return to the default traditional mode of licensing.

**license smart enable**  
**no license smart enable**

**Syntax Description** This command has no keywords or arguments.

**Command Default** By default, traditional licensing mode is on.

**Command Modes** Administration configuration

Command History	Release	Modification
	Release 5.2.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Smart Licensing components are packaged into the asr9k mini image. By default, traditional licensing mode is on. Use the **license smart enable** command to switch to the Smart Licensing model.

Task ID	Task ID	Operation
	pkg-mgmt	Read, Write, Execute

## Example

This example shows how to run the command to enable Smart Licensing, and the configuration with Smart Licensing enabled.

```
RP/0/RSP0/CPU0:router(admin)# configure
RP/0/RSP0/CPU0:router(admin-config)#license smart enable
RP/0/RSP0/CPU0:router(admin-config)#show config
Building configuration...
!! IOS XR Configuration 5.2.0.19I
license smart enable
end
```

# show license all

To display all entitlements in use the **show license all** command in the Administration mode.

**show license all**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Administration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 5.2.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

<b>Task ID</b>	<b>Task ID</b>	<b>Operation</b>
	pkg-mgmt	Read

## Example

This example displays the use of the **show license all** command.

```
RP/0/RSP0/CPU0:router(admin)#show license all
```

# show license certificate

To display details of the licensing certificate use the **show license certificate** command in the Administration mode.

## show license certificate

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Administration

Command History	Release	Modification
	Release 5.2.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	pkg-mgmt	Read

## Example

This example shows the output of the **show license certificate** command.

```
RP/0/RSP0/CPU0:router(admin)#show license cert
Licensing Certificates:
ID Cert Info:
Start Date: Mon Mar10 2014 05:58:28 UTC.
Expiry Date:Tue Mar10 2015 05:58:28 UTC
Serial Number: 34506
Version: 3
Subject/SN: 144a76ed-75de-4a8e-969e-30cf683c
Common Name: 5daab5111895b37e21e164dacc::1,2
ID Cert Info:
Start Date: Fri Jun14 2013 20:18:52 UTC.
Serial Number: 3
Expiry Date:Sun Apr24 2033 21:55:42 UTC
Version: 3
```

# show license entitlement

To display the details of the various entitlements you own use the **show license entitlement** command in the Administration mode.

## show license entitlement

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Administration

Command History	Release	Modification
	Release 5.2.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	pkg-mgmt	Read

## Example

This example shows the output of the **show license entitlement** command.

```
RP/0/RSP0/CPU0:router(admin)#show license entitlement
Entitlement:Tag: regid.2014-04.com.cisco.S-A9K-IVRF-LIC,1.0_0bb7,
Version: 1.0, Enforce Mode: Authorized
Requested Time : Mon May 19 2014 16:59:24 PST,
Requested Count: 1 Vendor String:
Tag: S-A9K-iVRF-LIC, Version: 1.0, Enforce Mode: Waiting
Requested Time : Mon Mar 10 2014 11:33:12 UTC,
Requested Count: 1 Vendor String:
Tag: regid.2014-04.com.cisco.S-A9K-IVRF-LIC,1.0_1bealf,
Version: 1.0, Not In Use
Requested Time : NA, Requested Count: NA
Vendor String:
Tag:S-A9K-9001-AIP-LIC,Version:1.0,Enforce Mode:Eval period
```

## show license features (chassis)

To display the licenses that are supported on a given chassis, use the **show license features** command in the Administration mode.

### show license features

<b>Syntax Description</b>	This command has no keywords or arguments.
---------------------------	--

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	Administration
----------------------	----------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 5.2.0	This command was introduced.

<b>Usage Guidelines</b>	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
-------------------------	---

<b>Task ID</b>	<b>Task ID</b>	<b>Operation</b>
	pkg-mgmt	Read

### Example

This example shows the output for the **show license features** command.

```
RP/0/RSP0/CPU0:router(admin)#show license features
Platform Feature ID:
A9K-iVRF-LIC
A9K-9001-AIP-LIC
A9K-9001-OPT-LIC
A9K-9001-VID-LIC
A9K-NVSAT1-LIC
A9K-NVSAT5-LIC
A9K-NVSAT20-LIC
A9K-NVSAT1S-LIC
A9K-NVSAT5S-LIC
A9K-NVSAT20S-LIC
A9K-NV-CLUSTR-LIC
A9K-9001-MOB-LIC
```

# show license ha

To display the Smart Licensing high availability status, whether it is in active or standby mode, use the **show license ha** command in the Administration mode.

**show license ha**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Administration

Command History	Release	Modification
	Release 5.2.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	pkg-mgmt	Read

## Example

This example shows the output of the **show license ha** command.

```
RP/0/RSP0/CPU0:router(admin)#show license ha
HA Info:
RP Role: Active
Chassis Role: Active
HA Sudi:
Role: Active PID:ASR-9001,SN:FOC1741NC0Z
```

# show license pool

To display the pool to which the device belongs, use the **show license pool** command in the Administration mode.

**show license pool**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Administration

Command History	Release	Modification
	Release 5.2.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	pkg-mgmt	Read

## Example

This example shows the output of the **show license pool** command.

```
RP/0/RSP0/CPU0:router(admin)#show license pool
Assigned Pool Info: IMC0_POOL
```

# show license register-status

To display the Smart Licensing registration status, use the **show license register-status** command in the Administration mode.

**show license register-status**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Administration

Command History	Release	Modification
	Release 5.2.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	pkg-mgmt	Read

## Example

This example shows the output for the **show license register-status** command.

```
RP/0/RSP0/CPU0:router(admin)#show license register-status
Registration Status: Completed
Step 3
for connectivity issues with the Cisco license
manager or register the device with a new token
ID.
Registration Start Time: Fri May 02 2014 17:19:53 PST
Next ID Cert Renew Time: Wed Oct 29 2014 17:21:55 PST
Next ID Cert Expiration Time: May02 2015 17:18:50 PST
Last Response Time: Fri May 02 2014 17:20:11 PST
Last Response Message: OK
```

# show license scheduler

To display the Smart Licensing scheduler information use the **show license scheduler** command in the Administration mode.

## show license scheduler

<b>Syntax Description</b>	This command has no keywords or arguments.
---------------------------	--

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	Administration
----------------------	----------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 5.2.0	This command was introduced.

<b>Usage Guidelines</b>	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
-------------------------	---

<b>Task ID</b>	<b>Task ID</b>	<b>Operation</b>
	pkg-mgmt	Read

## Example

This example shows how to use the **show license scheduler** command, and its output.

```
RP/0/RSP0/CPU0:router(admin)#show license scheduler
Upcoming Scheduled Jobs:
  Job Name: Daily Job
    Recurring: Yes,      Cancelled: No
    Next Run Time : Sat May 31 2014 03:58:02 PST
  Job Name: Authorization Renewal Job
    Recurring: No,      Cancelled: Yes
    Next Run Time : NA
  Job Name: Init Flag Check Job
    Recurring: No,      Cancelled: Yes
    Next Run Time : NA
  Job Name: Evaluation Expiration Check Job
    Recurring: No,      Cancelled: No
    Next Run Time : Wed Aug 20 2014 11:18:42 PST
  Job Name: Register Period Expiration Check Job
    Recurring: No,      Cancelled: No
    Next Run Time : Fri May 30 2014 04:15:06 PST
```

# show license status (compliance)

To display the compliance status of Smart Licensing, use the **show license status** command in the Administration mode.

**show license status**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Administration

Command History	Release	Modification
	Release 5.2.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	pkg-mgmt	Read

## Example

This example shows you to use show license status command to display the current status of your license.

```
RP/0/RSP0/CPU0:router(admin)#show license status
Compliance Status: Eval period
```

## show license udi (smart)

To display the Smart Licensing UDI, use the **show license udi** command in the Administration mode.

**show license udi**

<b>Syntax Description</b>	This command has no keywords or arguments.
---------------------------	--

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	Administration
----------------------	----------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Release 5.2.0	This command was introduced.

<b>Usage Guidelines</b>	To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
-------------------------	---

<b>Task ID</b>	<b>Task ID</b>	<b>Operation</b>
	pkg-mgmt	Read

### Example

This example shows you how to use the **show license udi** command, and a sample output.

```
RP/0/RSP0/CPU0:router#admin
RP/0/RSP0/CPU0:router(admin)#show license udi
UDI:
PID:ASR-9001, SN:FOC1741NCOZ
```

# show license version

To display the Smart Licensing version information, use the **show license version** in the Administration mode.

**show license version**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Administration

Command History	Release	Modification
	Release 5.2.0	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operation
	pkg-mgmt	Read

## Example

This example displays how to use the **show license version** command, and the output.

```
RP/0/RSP0/CPU0:router(admin)#show license version
Cisco Smart Licensing Agent, Version 1.1.0_dev/240
```

show license version