



## Configuring ATM Interfaces

This module describes how to configure ATM.

ATM is a cell-switching and multiplexing technology that is widely used in Wide Area Networks (WANs). ATM protocol standards enable point-to-point, point-to-multipoint, and broadcast services connections using various slow- and high-speed network media. Connectivity between two ATM permanent virtual circuits (PVCs) is established using ATM signaling mechanisms. Various ATM signaling standards are defined by these ATM forum standards:

- UNI Version 3.0, Version 3.1, and Version 4.0
- ITU
- IETF

### Feature History for Configuring ATM Interfaces

Release	Modification
Release 4.2.3	This feature was introduced on the Cisco ASR 9000 Series Router on these hardware: <ul style="list-style-type: none"><li>• 3-Port Clear Channel OC-3 ATM SPA</li><li>• 1-Port Clear Channel OC-3 ATM SPA</li><li>• 1-port Clear Channel OC-12 ATM SPA</li></ul>

- [Configuring ATM Interfaces, on page 1](#)
- [Prerequisites for Implementing ATM, on page 2](#)
- [Information About ATM, on page 2](#)
- [Configuring ATM Interfaces, on page 11](#)
- [ATM Configuration: Examples, on page 55](#)

## Configuring ATM Interfaces

This module describes how to configure ATM.

ATM is a cell-switching and multiplexing technology that is widely used in Wide Area Networks (WANs). ATM protocol standards enable point-to-point, point-to-multipoint, and broadcast services connections using various slow- and high-speed network media. Connectivity between two ATM permanent virtual circuits (PVCs) is established using ATM signaling mechanisms. Various ATM signaling standards are defined by these ATM forum standards:

- UNI Version 3.0, Version 3.1, and Version 4.0
- ITU
- IETF

### Feature History for Configuring ATM Interfaces

Release	Modification
Release 4.2.3	<p>This feature was introduced on the Cisco ASR 9000 Series Router on these hardware:</p> <ul style="list-style-type: none"> <li>• 3-Port Clear Channel OC-3 ATM SPA</li> <li>• 1-Port Clear Channel OC-3 ATM SPA</li> <li>• 1-port Clear Channel OC-12 ATM SPA</li> </ul>

## Prerequisites for Implementing ATM

You must be in a user group associated with a task group that includes the proper task IDs. The command reference guides include the task IDs required for each command. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

## Information About ATM

This section provides overviews of these features:

Network nodes use ATM connections to transfer bits of data organized as 53-byte ATM cells. User information (such as voice, video, and data) is segmented into ATM cells on one end of the connection, and then reassembled on the other end of the connection. ATM Adaptation Layer (AAL) defines the conversion of user information into ATM cells. AAL1 and AAL2 handle isochronous traffic (such as voice and video), and are relevant to the ATM node only when it is equipped with either a CES (Circuit Emulation Service) ATM interface card, or when it has voice over AAL2 capabilities. AAL3/4 and AAL5 support data communications; that is, they segment and reassemble data packets.

The two types of devices in an ATM network are switches and routers. Typically, ATM switches do packet switching at Layer 2, while ATM routers do packet switching using Layer 3 addresses, such as IPv4 network addresses, IPv6 network addresses, and MPLS labels.

ATM is supported on the following line cards:

- Cisco 1-port Clear Channel OC-3 SPA
- Cisco 3-port Clear Channel OC-3 SPA

- Cisco 1-port Clear Channel OC-12 SPA
- Cisco 2-Port Channelized T3/E3 ATM and Circuit Emulation (CEoPs) Shared Port Adapter (SPA-2CHT3-CE-ATM)

Cisco IOS XR software ATM interfaces can operate in these modes:

- Point-to-point
- Layer 2 port mode



---

**Note** A single ATM interface can simultaneously support point-to-point and L2VPN subinterfaces.

---

In Cisco IOS XR software, ATM interface configuration is hierarchical and comprises the following elements:

1. The ATM main interface, which is the physical interface. ATM main interfaces can be configured with point-to-point subinterfaces, vp-tunnels, ILMI interfaces, or as Layer 2 port mode attachment circuits (ACs) or Layer 2 subinterface ACs.
2. ATM subinterfaces, which are configured under the ATM main interface. An ATM subinterface does not actively carry traffic until you configure a PVC or PVP under the ATM subinterface.
3. PVCs, which are configured under an ATM subinterface. A single PVC is allowed per subinterface. PVCs are supported under point-to-point and Layer 2 subinterfaces.
4. Permanent virtual paths (PVPs), which are configured under a Layer 2 ATM subinterface. A single PVP is allowed per subinterface.

## VC-Class Mapping

A virtual circuit (VC) class enables the configuration of VC parameters that are then mapped to a main interface, subinterface, or PVC. Without `vc`-classes, you must perform considerable manual configuration on each ATM main interface, subinterface, and PVC and on the router. This configuration can be time consuming and error prone. After you have created `vc`-class, you can apply that `vc`-class to as many ATM interfaces, subinterfaces, or PVCs as you want.

Vc-classes include the following types of configuration data:

- ATM encapsulation for the VC
- OAM management
- traffic shaping

The order of configuration precedence is hierarchical, as demonstrated in the following list, where configuration on the PVC takes the highest precedence, and configuration on a `vc`-class that is attached to the ATM main interface takes the lowest precedence:

1. Configuration on the PVC
2. Configuration on a `vc`-class that is attached to the PVC
3. Configuration on the subinterface

4. Configuration on a vc-class that is attached to the subinterface
5. Configuration on the ATM main interface
6. Configuration on a vc-class that is attached to the ATM main interface

For example, if the a PVC has unspecified bit rate (UBR) traffic shaping configured, but it is attached to a class map that is configure with CBR traffic shaping, the PVC maintains the UBR traffic shaping.



---

**Note** Vc-classes are not applicable to Layer 2 port mode ACs and Layer 2 PVPs. For Layer 2 VPN configurations, Vc-classes are applicable to the PVC only.

---

## VP-Tunnels

ATM interfaces support vp-tunnels. vp-tunnels are typically used to shape PVCs into a bundle and manage F4 Operation, Administration, and Maintenance (OAM). A vp-tunnel is configured under the main ATM interface, and then subinterfaces and PVCs can be added to the vp-tunnel. vp-tunnels and the PVCs that are configured under them share the same VPI. When a vp-tunnel goes down, all PVCs configured under that vp-tunnel go down, too.

By default, two F4 OAM connections are automatically opened for each vp-tunnel. Use the **f4oam disable** command in ATM vp-tunnel configuration mode to disable the F4 OAM packets for a vp-tunnel.

## F5 OAM on ATM Interfaces

The F5 Operation, Administration, and Maintenance (OAM) feature performs fault-management and performance-management functions on PVCs. If the F5 OAM feature is not enabled on a PVC, then that PVC remains up on the end device in the event of a service disruption where network connectivity is lost. The result is that routing entries that point to the connection remain in the routing table and, therefore, packets are lost. The F5 OAM feature detects such failures and brings the PVC down if there is a disruption along its path.

Use the **oam-pvc manage** command to enable the F5OAM feature on a PVC. After OAM is enabled on a PVC, the PVC can generate F5 loopback cells and you can configure continuity check (CC) management for the PVC. Use the **oam ais-rdi** and **oam retry** commands to configure continuity checking on a PVC.

To drop all current and future OAM cells received on an ATM interface, use the **atm oam flush** command in interface configuration mode.



---

**Note** The **oam ais-rdi** and **oam retry** commands take effect only after OAM management is enabled on a PVC with the **oam-pvc manage** command.

---

## ILMI on ATM Interfaces

The ILMI protocol is defined by the ATM Forum for setting and capturing physical layer, ATM layer, virtual path, and virtual circuit parameters on ATM interfaces. When two ATM interfaces run the ILMI protocol, they exchange ILMI packets across the physical connection. These packets consist of SNMP messages as

large as 484 octets. ATM interfaces encapsulate these messages in an ATM adaptation layer 5 (AAL5) trailer, segment the packet into cells, and schedule the cells for transmission.

You must enable ILMI on ATM interfaces that communicate with end devices that are configured for ILMI. To enable ILMI, create a PVC with ILMI encapsulation directly under the main ATM interface by using the **pvc vpi/vci ilmi** command in interface configuration mode.

PVCs use ILMI encapsulation to carry ILMI messages. Use the **pvc vpi/vci ilmi** command in interface configuration mode to create an ILMI PVC on an ATM main interface.



---

**Note** You must use the same VPI and VCI values on both ends of the PVC that connects the end device and the router. The ILMI configuration commands are available only after an ILMI PVC is created under the ATM main interface. The ILMI configuration takes effect on the ATM main interface. ILMI configuration is not supported on Layer 2 port mode ACs.

---

## Layer 2 VPN on ATM Interfaces

The Layer 2 VPN (L2VPN) feature enables the connection between different types of Layer 2 attachment circuits and pseudowires, allowing users to implement different types of end-to-end services.

Cisco IOS XR software supports a point-to-point, end-to-end service, where two ATM ACs are connected together.

Switching can take place in two ways:

- AC-to-PW—Traffic reaching the PE is tunneled over a pseudowire (and conversely, traffic arriving over the PW is sent out over the AC). This is the most common scenario.
- Local switching—Traffic arriving on one AC is immediately sent out another AC without passing through a pseudowire.

Keep the following in mind when configuring L2VPN on an ATM interface:

- Cisco IOS XR software supports up to 2000 ACs per line card.
- ATM-over-MPLS supports two types of cell encapsulation:
  - AAL5 CPCS mode—Unsegmented ATM cells are transported across an MPLS backbone.
  - ATM cell (AAL0) mode—Cells are segmented and then reassembled, or packed. AAL0 is supported on ATM main ports, PVCs, and PVPs. The benefits of using AAL0 mode is that groups of ATM cells share a label that maximizes bandwidth efficiencies.



---

**Note** AAL5 mode is supported on PVCs only.

---

Use the following commands to display AC and pseudowire information:

- **show interfaces**
- **show l2vpn xconnect**

- `show atm pvp`
- `show atm pvc`



**Note** For detailed information about configuring an L2VPN network, see the *Implementing MPLS Layer 2 VPNs* module of *Cisco IOS XR Multiprotocol Label Switching Configuration Guide*.

## Cell Packing on L2VPN ACs with AAL0 Mode Encapsulation

Cell packing is supported on L2VPN ATM interfaces that are configured with AAL0 mode encapsulation. Cell packing relates to the delay variations that are defined in the ATM standards. Users can specify the number of cells that can be processed by the pseudowire, and configure the maximum cell packing timeout (MCPT) timers to use in conjunction with cell packing.

The **cell-packing** command allows the user to perform the following tasks:

- Configure the maximum number of cells that can be transmitted in a single packet.
- Attach one of the three MCPT timers to an individual Layer 2 port mode AC, PVC, or PVP.

The three MCPT timers are defined under the main ATM interface with the **atm mcpt-timer** command, which lets the user specify the maximum number of microseconds to wait to complete cell packing on a single packet before that packet is transmitted. If the associated MCPT timer expires before the maximum number of cells that can be packed is reached, then the packet is transmitted with the number of cells that have been packed thus far.

We recommend configuring a low, medium, and high value for the three MCPT timers to accommodate the different ATM traffic classes. Low- latency constant bit rate (CBR) traffic typically uses a low MCPT timer value, while high-latency Unspecified bit rate (UBR) traffic typically requires a high MCPT timer value. Variable bit rate real-time (VBR-rt) and variable bit rate non-real-time (VBR-nrt) traffic typically use a median MCPT timer value.

## Circuit Emulation over Packet on the Cisco 2-Port Channelized T3/E3 ATM and Circuit Emulation Shared Port Adapter

The Circuit Emulation over Packet (CEoP) SPA is a low-speed ATM SPA that enables service providers and enterprises to migrate to a one-packet network capable of efficiently delivering both data and circuit services.

CEoP is a virtual imitation of a physical connection. CEoP does ATM conversion and transparent transfer of ATM data to the router engine. CEoP first performs cell delineation, then segmentation and reassembly (SAR), and then sends the cells to the router engine.

CEoP benefits service providers who operate both packet-switched networks and time-division multiplexed (TDM) networks, who wish to move their data services from a TDM network to a packet network for scalability and efficiency.

Cisco provides routing and switching solutions capable of transporting Layer 2 and Layer 3 protocols such as Ethernet, IP, and Frame Relay. Although most applications and services have been migrated to the packet-based network, some, including voice and legacy applications, still rely on a circuit or leased line for transport. The CEoP SPAs implement Circuit-Emulation-over-Packet by transporting circuits over a

packet-based network. CEoP SPAs help service providers migrate to one packet network capable of efficiently delivering both data and circuit services.

CEoP is supported on:

- Cisco 2-Port Channelized T3/E3 ATM and Circuit Emulation (CEoPs) Shared Port Adapter (SPA-2CHT3-CE-ATM)

No new or specific configurations or CLIs are necessary to enable CEoP on the card.

## Features Supported in CEoP

CEoP supports these features:

- T3 channelized to T1
- Clear channel T3
- ATM encapsulation only
- Packet forwarding
- Scalability - 2K L3 interfaces per CEoP SPA
- Scalability - 2K L2 connections per CEoP SPA
- On-Line Insertion and Removal (OIR)
- Quack authentication
- Environment Monitoring
- FPD
- Quality of Service (QoS)
- Inverse Multiplexing (IMA)

## ATM Layer 2 QoS

QoS is configured on ATM interfaces primarily in the same way that it is configured on other interfaces. No new CLIs are added in this release.

For complete information on configuring QoS and QoS commands, refer to these documents:

- *Cisco ASR 9000 Series Aggregation Services Router Modular Quality of Service Configuration Guide*
- *Cisco ASR 9000 Series Aggregation Services Router Modular Quality of Service Command Reference*



---

**Note** Layer 2 QoS is supported on all Engine 5 ATM SPAs, including all CEoP SPAs.

---

This section describes the features and restrictions that apply to ATM Layer 2 QoS.

## Features

These QoS features are supported:

- Layer 2 Ingress QoS – classification on ATM CLP, marking with MPLS EXP imposition are supported.
- Layer 2 Egress Main Interface QoS – shaping, policing, and queueing are supported. Marking is not supported. This feature works on both Layer 2 and Layer 3 PVCs independent of any subinterface QoS policies.
- The Modular QoS CLI (MQC) actions are supported for ATM traffic in the ingress direction only.
  - match atm clp
  - match atm oam
  - set atm clp
  - set mpls exp imp
  - set prec tunnel (L2TPv3 only)
  - set dscp tunnel (L2TPv3 only)
- Traffic is classified based on Cell Loss Priority—CLP1, CLP0, or OAM.
- OAM traffic can be excluded from policing by using the match-oam classification in a hierarchical policy map
- The following set actions are supported:
  - set mpls exp imp
  - set prec tunnel
  - set dscp tunnel
  - set qos-group
  - set disc-class
  - set atm-clp (exceed action only)
- Policy map counters are supported.

## Matching

The following match criteria is supported on Layer 2 ATM interfaces in the ingress direction only:

- match atm clp0
- match atm clp1
- match atm oam

The following match criteria is supported on Layer 2 ATM interfaces in the egress direction only:

- match mpls exp topmost (egress only)
- match qos-group (egress only)





---

**Note** The **match-all** command does not support the above match criteria.

---

## Marking

The following marking actions are supported on Layer 2 ATM interfaces:

- set mpls exp imposition (AToM only)
- set qos-group (AToM and local switching)
- set discard-class (AToM and local switching)
- set mpls exp imposition and set atm-clp (AToM only)
- set tunnel-dscp (L2TPv3 only)
- set tunnel-prec (L2TPv3 only)



---

**Note** Packets can be matched and remarked for CLP0, CLP1, and OAM.

---

## Policing

Policing is supported on Layer 2 ATM interfaces in the ingress direction only.

Policing is performed during segmentation and reassembly (SAR) for the following ATM traffic classes:

- CBR.1
- VBR.1
- VBR.2
- VBR.3
- UBR.1
- UBR.2

Policing is supported for VC and VP modes, but not for Port mode L2 ATM interfaces.

OAM cells are policed along with the user cells unless the QOS policy is explicitly configured to exclude OAM cells from being policed. This can be achieved using different match criteria in the policy map with class-default matching all the traffic including OAM cells.

Policing is supported for ATM AAL5SNAP, AAL5MUX and AAL5NLPID encapsulated packets.

Policing is done on AAL0 packets with the same conditions as AAL5 packets as follows:

- AAL5 packet is conforming if all the cells in the packet conform to PCR and SCR buckets.
- AAL5 packet is exceeding if at least one cell does not conform to the SCR bucket.
- AAL5 packet is violating if at least one cell does not conform to the PCR bucket.




---

**Note** The Martini Control Word C bit is set for all exceeding AAL5 packets. All violating AAL5 packets are dropped.

---

The following policing options are supported for ATM TM4.0 GCRA policing:

- Rate in cellsp/s and percent
- Peak rate in cellsp/s and percent
- Delay tolerance in us
- Maximum burst size in cells

The following conform and exceed actions are supported for Layer 2 ATM interfaces in the ingress direction:

- transmit
- drop
- set mpls exp imposition (AToM only)
- set qos-group (AToM and Local switching)
- set discard-class (AToM and Local switching)
- set atm-clp (exceed action only, AToM and Local switching)
- set tunnel-prec (L2TPv3 only)
- set tunnel-dscp (L2TPv3 only)




---

**Note** The only violate action that is supported is the drop action.

---

The following combination of multiple policing actions is supported:

- set mpls exp imposition and set atm-clp (exceed action only, AToM only)

## Hierarchical Policy Maps

For VBR.2 and VBR.3 traffic classes, 2-level hierarchical policy maps are supported in the ingress direction only. Attempts to attach hierarchical policy maps in the egress direction are denied.

The parent policy contains the policing configuration for the PCR bucket and matches on all traffic. The parent policy may exclude OAM traffic.

The child policy contains the policing configuration for the SCR bucket and typically matches on CLP0 cells.

Marking actions are supported only in child policy maps. All other policing actions are allowed in parent policy maps.

Only two policing buckets per Layer 2 circuit are allowed; one in the parent policy that defines the peak rate, and one in the child policy that defines the SCR.

Typically CLP0 cells are sent to the SCR bucket, but it is possible to send both CLP0 and CLP1 cells to the SCR bucket, using the classification criteria in the child policy.



**Note** For ATM Layer 2 QoS, in policy maps, the **set atm-clp** command is supported only as a police exceed action. It is not supported as a standalone set action.

## Configuring ATM Interfaces

The ATM interface configuration tasks are described in these procedures:

### Bringing Up an ATM Interface

This task describes the commands used to bring up an ATM interface.

#### Before you begin

#### Restrictions

The configuration on both ends of the ATM connection must match for the interface to be active.

#### SUMMARY STEPS

1. **configure**
2. **interface atm** *interface-path-id*
3. **no shutdown**
4. **end** or **commit**
5. **exit**
6. **exit**
7. **show interfaces atm** *interface-path-id* **brief**

#### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure</b> <b>Example:</b>  RP/0/RSP0/CPU0:router# <b>configure</b>	Enters global configuration mode.
Step 2	<b>interface atm</b> <i>interface-path-id</i> <b>Example:</b>  RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1	Enters ATM interface configuration mode.
Step 3	<b>no shutdown</b> <b>Example:</b>	Removes the shutdown configuration.

	Command or Action	Purpose
	<pre>RP/0/RSP0/CPU0:router (config-if)# no shutdown</pre>	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>Removal of the shutdown configuration eliminates the forced administrative down on the interface, enabling it to move to an up or down state.</li> </ul>
<b>Step 4</b>	<p><b>end</b> or <b>commit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-if)# end</pre> <p>or</p> <pre>RP/0/RSP0/CPU0:router(config-if)# commit</pre>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> <li>When you issue the <b>end</b> command, the system prompts you to commit changes: <pre>Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:</pre> </li> <li>Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>
<b>Step 5</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-if)# exit</pre>	Exits interface configuration mode and enters global configuration mode.
<b>Step 6</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config)# exit</pre>	<p>Exits global configuration mode and enters EXEC mode.</p> <p>Repeat Step 1 through Step 6 to bring up the interface at the other end of the connection.</p> <p>Brings up the connection.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The configuration on both ends of the ATM connection must match.</li> </ul>
<b>Step 7</b>	<p><b>show interfaces atm <i>interface-path-id</i> brief</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router# show interfaces atm 0/6/0/1 brief</pre>	<p>(Optional) Verifies that the interface is active and properly configured.</p> <p>If you have brought up an ATM interface properly, the “Intf State” field for that interface in the <b>show interfaces atm</b> command output shows “up.”</p>

**What to do next**

To modify the default configuration of the ATM interface you just brought up, see the “Configuring Optional ATM Interface Parameters” section on page 26.

To configure a point-to-point subinterface on the ATM interface you just brought up, see the “How to Create and Configure a Point-to-Point ATM Subinterface with a PVC” section on page 28.

To create a vp-tunnel on the ATM interface you just brought up, see the “How to Create and Configure a VP-Tunnel” section on page 33.

To use the interface as a Layer 2 post mode AC, see the “How to Configure a Layer 2 Attachment Circuit” section on page 40.

To attach a Vc-class to the ATM interface you just brought up, see the “How to Create and Configure a VC-Class” section on page 52.

To enable ILMI on the ATM interface you just brought up, see the “How to Configure ILMI on ATM Interfaces” section on page 59.

## Configuring Optional ATM Interface Parameters

This task describes the commands you can use to modify the default configuration on an ATM interface.

**Before you begin**

Before you modify the default ATM interface configuration, we recommend that you bring up the ATM interface and remove the shutdown configuration, as described in the [Bringing Up an ATM Interface](#).

**Restrictions**

The configuration on both ends of the ATM connection must match for the interface to be active.

**SUMMARY STEPS**

1. **configure**
2. **interface atm** *interface-path-id*
3. **atm maxvpi-bits 12**
4. **atm oam flush**
5. **atm mcpt-timers** *timer-1 timer-2 timer-3*
6. **end** or **commit**
7. **exit**
8. **exit**
9. **show atm interface atm** [*interface-path-id*]
10. **show interfaces atm** *interface-path-id*

**DETAILED STEPS**

	Command or Action	Purpose
Step 1	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# <code>configure</code>	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>interface atm</b> <i>interface-path-id</i> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1</pre>	Enters ATM interface configuration mode.
<b>Step 3</b>	<b>atm maxvpi-bits</b> <i>12</i> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config-if)# atm maxvpi-bits 12</pre>	(Optional) Enables support for the 12-bit VPI NNI cell format.
<b>Step 4</b>	<b>atm oam flush</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config-if)# atm oam flush</pre>	(Optional) Drops all current and future OAM cells received on an ATM interface.
<b>Step 5</b>	<b>atm mcpt-timers</b> <i>timer-1 timer-2 timer-3</i> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config-if)# atm mcpt-timers 50 100 200</pre>	(Optional) Specifies the maximum cell packing timeout values for each of the three per-interface MCPT timers, in microseconds.  <b>Note</b> <ul style="list-style-type: none"> <li>• The default value for each timer is 50 microseconds.</li> <li>• The <b>atm mcpt-timers</b> command is applicable to Layer 2 ATM ACs only.</li> </ul>
<b>Step 6</b>	<b>end</b> or <b>commit</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config-if)# end</pre> or <pre>RP/0/RSP0/CPU0:router (config-if)# commit</pre>	Saves configuration changes. <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes:   <pre>Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:</pre> </li> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>• Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>

	Command or Action	Purpose
<b>Step 7</b>	<b>exit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if)# exit	Exits interface configuration mode and enters global configuration mode.
<b>Step 8</b>	<b>exit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config)# exit	Exits global configuration mode and enters EXEC mode.
<b>Step 9</b>	<b>show atm interface atm</b> [ <i>interface-path-id</i> ] <b>Example:</b> RP/0/RSP0/CPU0:router# show atm interface atm 0/6/0/1	(Optional) Displays ATM-specific data for the specified ATM interface.
<b>Step 10</b>	<b>show interfaces atm</b> <i>interface-path-id</i> <b>Example:</b> RP/0/RSP0/CPU0:router# show interfaces atm 0/6/0/1	(Optional) Displays general information for the specified ATM interface.

#### What to do next

To configure a point-to-point subinterface on the ATM interface you just brought up, see the “How to Create and Configure a Point-to-Point ATM Subinterface with a PVC” section on page 28.

To create a vp-tunnel on the ATM interface you just brought up, see the “How to Create and Configure a VP-Tunnel” section on page 33.

To use the interface as a Layer 2 ATM AC, see the “How to Configure a Layer 2 Attachment Circuit” section on page 40.

To attach a Vc-class to the ATM interface you just brought up, see the “How to Create and Configure a VC-Class” section on page 52.

To enable ILMI on the ATM interface you just brought up, see the “How to Configure ILMI on ATM Interfaces” section on page 59.

## How to Create and Configure a Point-to-Point ATM Subinterface with a PVC

The configuration tasks for creating and configuring a point-to-point ATM subinterface with a PVC are described in the following procedures:

### Creating a Point-to-Point ATM Subinterface with a PVC

The procedure in this section creates a point-to-point ATM subinterface and configures a permanent virtual circuit (PVC) on that ATM subinterface.

**Before you begin**

Before you can create an ATM subinterface on an ATM interface, you must bring up an ATM interface, as described in the [Bringing Up an ATM Interface](#).

**Restrictions**

Only one PVC can be configured for each point-to-point ATM subinterface.

**SUMMARY STEPS**

1. **configure**
2. **interface atm** *interface-path-id.subinterface* **point-to-point**
3. **ipv4 address** *ipv4\_address/prefix*
4. **pvc** *vpi/vci*
5. **end** or **commit**

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm</b> <i>interface-path-id.subinterface</i> <b>point-to-point</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1.10	Enters ATM subinterface configuration mode.
<b>Step 3</b>	<b>ipv4 address</b> <i>ipv4_address/prefix</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config-subif)# <b>ipv4</b> <b>address</b> 10.46.8.6/24	Assigns an IP address and subnet mask to the subinterface.
<b>Step 4</b>	<b>pvc</b> <i>vpi/vci</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config-subif)# pvc 5/10	(Optional) Creates an ATM permanent virtual circuit (PVC) and enters ATM PVC configuration submode. <b>Note</b> <ul style="list-style-type: none"> <li>• Only one PVC is allowed per subinterface.</li> </ul>
<b>Step 5</b>	<b>end</b> or <b>commit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-subif)# end or RP/0/RSP0/CPU0:router (config-subif)# commit	Saves configuration changes. <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes:</li> </ul> <pre>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</pre>



	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>• Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul> <p>Repeat Step 1 through Step 5 to bring up the ATM subinterface and any associated PVC at the other end of the connection.</p> <p>Brings up the ATM connection.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The configuration on both ends of the subinterface connection must match.</li> </ul>

### What to do next

To configure optional PVC parameters, see the “Configuring Optional Point-to-Point ATM PVC Parameters” section on page 30.

To attach Layer 3 service policies, such as Multiprotocol Label Switching (MPLS) or quality of service (QoS), to the PVC under the PVC submode, refer to the appropriate Cisco IOS XR software configuration guide.

To configure a vc-class and apply it to an ATM subinterface or PVC, see the “Creating and Configuring a VC-Class” section.

## Configuring Optional Point-to-Point ATM PVC Parameters

This task describes the commands you can use to modify the default configuration on an ATM PVC.

Before you can modify the default PVC configuration, you must create the PVC on an ATM subinterface, as described in the [Creating a Point-to-Point ATM Subinterface with a PVC](#).

### Restrictions

The configuration on both ends of the PVC must match for the connection to be active.

### SUMMARY STEPS

1. **configure**
2. **interface atm** *interface-path-id.subinterface* **point-to-point**
3. **pvc** *vpi/vci*

4. **encapsulation** {*aal5mux ipv4* | *aal5nlpid* | *aal5snap*}
5. **oam-pvc manage** [*frequency*] [*disable*] [*keep-vc-up* [*seg-aisrdi-failure*]
6. **oam ais-rdi** [*down-count* [*up-count*]]
7. **oam retry** [*up-count* [*down-count* [*retry-frequency*]]]
8. **shape** [*cbr peak\_output\_rate* | *ubr peak\_output\_rate* | *vbr-nrt peak\_output\_rate sustained\_output\_rate burst\_size* | *vbr-rt peak\_output\_rate sustained\_output\_rate burst\_size*]
9. **service-policy** [*input* | *output*] *policy\_name*
10. **end** or **commit**
11. Repeat Step 1 through Step 10 to configure the PVC at the other end of the connection.

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b>  RP/0/RSP0/CPU0:router# <b>configure</b>	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm</b> <i>interface-path-id.subinterface</i> <b>point-to-point</b> <b>Example:</b>  RP/0/RSP0/CPU0:router (config)# <b>interface atm</b> 0/6/0/1.10 <b>point-to-point</b>	Enters ATM subinterface configuration mode.
<b>Step 3</b>	<b>pvc</b> <i>vpi/vci</i> <b>Example:</b>  RP/0/RSP0/CPU0:router (config-subif)# <b>pvc</b> 5/10	Enters subinterface configuration mode for the PVC.
<b>Step 4</b>	<b>encapsulation</b> { <i>aal5mux ipv4</i>   <i>aal5nlpid</i>   <i>aal5snap</i> } <b>Example:</b>  RP/0/RSP0/CPU0:router (config-atm-vc)# <b>encapsulation aal5snap</b>	Configures the ATM adaptation layer (AAL) and encapsulation type for a PVC.  <b>Note</b> The default encapsulation type for a vc-class is AAL5/SNAP
<b>Step 5</b>	<b>oam-pvc manage</b> [ <i>frequency</i> ] [ <i>disable</i> ] [ <i>keep-vc-up</i> [ <i>seg-aisrdi-failure</i> ]] <b>Example:</b>  RP/0/RSP0/CPU0:router (config-atm-vc)# <b>oam-pvc</b> <b>manage</b> 200 <b>keep-vc-up</b>	Enable ATM OAM F5 loopback cell generation and configures continuity check (CC) management for the ATM permanent virtual circuit (PVC).  <ul style="list-style-type: none"> <li>• Include the <b>disable</b> keyword to disable OAM management on the specified PVC.</li> <li>• Include the <b>keep-vc-up</b> keyword specify that PVC remains in the UP state when CC cells detect connectivity failure.</li> <li>• Include the <b>seg-aisrdi-failure</b> keyword to specify that, if segment AIS/RDI cells are received, the VC</li> </ul>

	Command or Action	Purpose
		will not be brought down because of end CC failure or loopback failure.
<b>Step 6</b>	<b>oam ais-rdi</b> [ <i>down-count</i> [ <i>up-count</i> ]] <b>Example:</b> RP/0/RSP0/CPU0:router (config-atm-vc)# <b>oam ais-rdi</b> 25 5	Configures the PVC so that it is brought down after a specified number of OAM alarm indication signal/remote defect indication (AIS/RDI) cells are received on the associated PVC.
<b>Step 7</b>	<b>oam retry</b> [ <i>up-count</i> [ <i>down-count</i> [ <i>retry-frequency</i> ]]] <b>Example:</b> RP/0/RSP0/CPU0:router (config-atm-vc)# <b>oam retry</b> 5 10 5	Configures parameters related to OAM management for the PVC. If no OAM AIS/RDI cells are received within the specified interval, the PVC is brought up.
<b>Step 8</b>	<b>shape</b> [ <i>cbr peak_output_rate</i>   <i>ubr peak_output_rate</i>   <i>vbr-nrt peak_output_rate sustained_output_rate burst_size</i>   <i>vbr-rt peak_output_rate sustained_output_rate burst_size</i> ] <b>Example:</b> RP/0/RSP0/CPU0:router (config-atm-vc)# <b>shape</b> vbr-nrt 100000 100000 8000	Configures ATM traffic shaping for the PVC. You must estimate how much bandwidth is required before you configure ATM traffic shaping. <ul style="list-style-type: none"> <li>• <i>peak_output_rate</i>—Configures the maximum cell rate that is always available for the traffic.</li> <li>• <i>Sustained_output_rate</i>—Sustained output rate for the bit rate.</li> <li>• <i>burst size</i>—Burst cell size for the bit rate. Range is from 1 through 8192.</li> </ul>
<b>Step 9</b>	<b>service-policy</b> [ <i>input</i>   <i>output</i> ] <i>policy_name</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config-atm-vc)# <b>service-policy input policyA</b>	Attaches a QoS policy to an input or output PVC. Replace <i>policy_name</i> with the name of the service policy you want to attach to the PVC. <b>Note</b> For information on creating and configuring service policies, see the <i>Cisco IOS XR Modular Quality of Service Configuration Guide</i> .
<b>Step 10</b>	<b>end</b> or <b>commit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-subif)# <b>end</b> or RP/0/RSP0/CPU0:router(config-subif)# <b>commit</b>	Saves configuration changes. <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes:   Uncommitted changes found, commit them before exiting (yes/no/cancel)?  [cancel]:   Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> </ul>

	Command or Action	Purpose
		<p>Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</p> <p>Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</p> <p>Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</p>
<b>Step 11</b>	Repeat Step 1 through Step 10 to configure the PVC at the other end of the connection.	<p>Brings up the connection.</p> <p><b>Note</b> The configuration on both ends of the connection must match.</p>

**What to do next**

- To attach Layer 3 service policies, such as MPLS or QoS, to the PVC under the PVC submode, refer to the appropriate Cisco IOS XR software configuration guide.
- To configure a vc-class and apply it to an ATM subinterface or PVC, see the “Creating and Configuring a VC-Class” section.

## How to Create and Configure a VP-Tunnel

The configuration tasks for creating and configuring an ATM vp-tunnel are described in the following procedures:



**Note** VP-tunnels are specific to point-to-point ATM interfaces and cannot be configured on ATM ACs.

## Creating and Configuring a VP-Tunnel on an ATM Interface

The procedures in this section create a vp-tunnel on a point-to-point ATM main interface. The creation and configuration of a vp-tunnel is a four-step process:

The procedure in this section creates a vp-tunnel on an ATM main interface.

**Before you begin**

Before you can create a vp-tunnel on an ATM main interface, you must bring up an ATM interface, as described in the [Bringing Up an ATM Interface](#).

**Restrictions**

- A vp-tunnel is not truly active until a PVC is created with the same VPI value as the vp-tunnel, as described in the [Creating and Configuring Subinterfaces with PVCs on a VP-tunnel](#).

- When a vp-tunnel goes down, all VCs that are configured under that vp-tunnel go down.
- The following cards do not support vp-tunnels with a VPI of 0:
  - 4-Port OC-3c/STM-1c ATM ISE Line Card, multimode
  - 4-Port OC-3c/STM-1c ATM ISE Line Card, single-mode
  - 4-port OC-12/STM-4 ATM multimode ISE line card with SC connector
  - Series 4-port OC-12/STM-4 ATM single-mode, intermediate-reach ISE line card with SC Connector

## SUMMARY STEPS

1. **configure**
2. **interface atm** *interface-path-id*
3. **vp-tunnel** *vpi*
4. **f4oam disable**
5. **shape** [**cbr** *peak\_output\_rate* | **vbr-nrt** *peak\_output\_rate sustained\_output\_rate burst\_size* | **vbr-rt** *peak\_output\_rate sustained\_output\_rate burst\_size*]
6. **end** or **commit**
7. **exit**
8. **exit**
9. **show atm vp-tunnel interface atm** [*interface-path-id*]

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
Step 2	<b>interface atm</b> <i>interface-path-id</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1	Enters ATM interface configuration mode.
Step 3	<b>vp-tunnel</b> <i>vpi</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config)# vp-tunnel 10	Configures a vp-tunnel on an ATM interface.
Step 4	<b>f4oam disable</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-atm-vp-tunnel)# f4oam disable	(Optional) Disables the passing of OAM packets.

	Command or Action	Purpose
<b>Step 5</b>	<p><b>shape</b> [<i>cbr peak_output_rate</i>   <i>vbr-nrt peak_output_rate sustained_output_rate burst_size</i>   <i>vbr-rt peak_output_rate sustained_output_rate burst_size</i>]</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-if)# shape</pre>	<p>Configures ATM traffic shaping for the PVC.</p> <p>You must estimate how much bandwidth is required before you configure ATM traffic shaping.</p> <ul style="list-style-type: none"> <li>• <i>peak_output_rate</i>—Configures the maximum cell rate that is always available for the traffic.</li> <li>• <i>Sustained_output_rate</i>—Sustained output rate for the bit rate.</li> <li>• <i>burst size</i>—Burst cell size for the bit rate. Range is from 1 through 8192.</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• After you configure traffic shaping on the vp-tunnel, you cannot configure traffic shaping directly on the PVCs configured under that vp-tunnel. If you attempt to use the <b>shape</b> command on a PVC that is configured under a tunnel, the command is rejected.</li> </ul>
<b>Step 6</b>	<p><b>end</b> or <b>commit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-if)# end</pre> <p>or</p> <pre>RP/0/RSP0/CPU0:router (config-if)# commit</pre>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes: <pre>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</pre> </li> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>• Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>
<b>Step 7</b>	<p><b>exit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-if)# exit</pre>	<p>Exits interface configuration mode and enters global configuration mode.</p>

	Command or Action	Purpose
Step 8	<b>exit</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config)# exit</pre>	Exits global configuration mode and enters EXEC mode. Repeat Step 1 through Step 8 to bring up the vp-tunnel at the other end of the connection. Brings up the vp-tunnel.
Step 9	<b>show atm vp-tunnel interface atm [interface-path-id]</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config)# show atm vp-tunnel interface atm 0/6/0/1</pre>	Displays vp-tunnel information for the entire router or a specific ATM interface.

To attach Layer 3 service policies, such as MPLS or QoS, to the vp-tunnel or its PVCs, refer to the appropriate Cisco IOS XR Software configuration guide.

## Creating and Configuring Subinterfaces with PVCs on a VP-tunnel

The procedure in this section creates and configures a subinterface with a PVC on a vp-tunnel.



**Note** A vp-tunnel is not truly active until a PVC is created with the same VPI value as the vp-tunnel.

### Before you begin

Before you can create a subinterface with a PVC on an ATM vp-tunnel, you must create a vp-tunnel on the ATM main interface, as described in the [Creating and Configuring a VP-Tunnel on an ATM Interface](#).

### Restrictions

- A PVC and its host vp-tunnel must share the same VPI for the connection to be active.
- The following cards do not support vp-tunnels with a VPI of 0:
  - 4-Port OC-3c/STM-1c ATM ISE Line Card, multimode
  - 4-Port OC-3c/STM-1c ATM ISE Line Card, single-mode
  - 4-port OC-12/STM-4 ATM multimode ISE line card with SC connector
  - Series 4-port OC-12/STM-4 ATM single-mode, intermediate-reach ISE line card with SC Connector

### SUMMARY STEPS

1. **configure**
2. **interface atm interface-path-id.subinterface point-to-point**
3. **ipv4 address ipv4\_address/prefix**
4. **pvc vpi/vci**
5. **end** or **commit**

6. **ping atm interface atm** *interface-path-id.subinterface vpi/vci* RP/0/RSP0/CPU0:router # ping atm interface atm 0/2/0/0.10 10/100
7. **show atm vp-tunnel** [*interface atm interface-path-id*]

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm</b> <i>interface-path-id.subinterface</i> <b>point-to-point</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1.10 point-to-point	Creates a new subinterface and enters ATM subinterface configuration mode for that subinterface.
<b>Step 3</b>	<b>ipv4 address</b> <i>ipv4_address/prefix</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config-subif)#ipv4 address 10.46.8.6/24	Assigns an IP address and subnet mask to the subinterface.
<b>Step 4</b>	<b>pvc</b> <i>vpi/vci</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config-subif)# pvc 5/10	<p>Creates an ATM permanent virtual circuit (PVC) on the subinterface and attaches it to the vp-tunnel you created in the <a href="#">Creating and Configuring a VP-Tunnel on an ATM Interface</a>.</p> <p>Replace <i>vpi</i> with the VPI of the vp-tunnel on which you are creating the PVC.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The PVC VPI and vp-tunnel VCI must match or the connection will not be active.</li> <li>• A vp-tunnel is not usable until you create PVCs under it.</li> </ul>
<b>Step 5</b>	<b>end</b> or <b>commit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-subif)# end or RP/0/RSP0/CPU0:router (config-subif)# commit	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes:  <pre>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</pre> </li> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> </ul>



	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>• Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul> <p>Repeat Step 1 through Step5 to bring up the subinterface and PVC at the other end of the vp-tunnel.</p> <p>Brings up the subinterface and PVC.</p>
<p><b>Step 6</b></p>	<p><b>ping atm interface atm</b> <i>interface-path-id.subinterface vpi/vci</i> RP/0/RSP0/CPU0:router # ping atm interface atm 0/2/0/0.10 10/100</p>	<p>Verifies connectivity between two ATM connection endpoints through the vp-tunnel you configured in Step 1 through Step 6.</p> <ul style="list-style-type: none"> <li>• Replace <i>interface-path-id.subinterface</i> with the ATM subinterface that is configured on the vp-tunnel whose connectivity you want to verify. This is the same <i>interface-path-id.subinterface</i> you configured in Step 2.</li> <li>• Replace <i>vci</i> with the VCI of the PVC configured on the vp-tunnel whose connectivity you want to verify. This is the same <i>vci</i> you configured in Step 4.</li> <li>• Replace <i>vpi</i> with the VPI of the PVC that is configured on the vp-tunnel whose connectivity you want to verify. This is the same <i>vpi</i> you configured in Step 4.</li> </ul>
<p><b>Step 7</b></p>	<p><b>show atm vp-tunnel</b> [<b>interface atm</b> <i>interface-path-id</i>]</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config)# show atm vp-tunnel interface atm 0/6/0/1</pre>	<p>Displays vp-tunnel information for the entire router or a specific ATM interface.</p>

**What to do next**

To create and configure ATM subinterfaces and PVCs on a vp-tunnel, see the “Creating and Configuring Subinterfaces with PVCs on a VP-tunnel” section on page 35

To configure a vc-class and apply it to an ATM interface, see the “Creating and Configuring a VC-Class” section on page 50.

## How to Configure a Layer 2 Attachment Circuit

The Layer 2 AC configuration tasks are described in these procedures:



**Note** After you configure an interface for Layer 2 switching, no routing commands such as **ipv4 address** are permissible. If any routing commands are configured on the interface, then the **l2transport** command is rejected.

## Creating a Layer 2 Port Mode AC

The procedure in this section creates a Layer 2 port mode AC.

### Before you begin

Before you can create a Layer 2 port mode AC, you must bring up an ATM main interface, as described in the [Bringing Up an ATM Interface](#).

### Restrictions

ILMI configuration is not supported on Layer 2 port mode ACs. Before you can configure an Layer 2 port mode AC, you must ensure that no configuration, such as subinterfaces, already exists on that port. If any preconfiguration does exist, you must remove it.

### SUMMARY STEPS

1. **configure**
2. **interface atm** *interface-path-id*
3. **l2transport**
4. **end** or **commit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b>  RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm</b> <i>interface-path-id</i> <b>Example:</b>  RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1	Enters interface configuration mode for an ATM interface.
<b>Step 3</b>	<b>l2transport</b> <b>Example:</b>  RP/0/RSP0/CPU0:router (config-if)# l2transport	Enters ATM Layer 2 transport configuration mode, and enables Layer 2 port mode on this ATM interface.

	Command or Action	Purpose
<b>Step 4</b>	<p><b>end</b> or <b>commit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-if-12)# end</pre> <p>or</p> <pre>RP/0/RSP0/CPU0:router(config-if-12)# commit</pre>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> <li>When you issue the <b>end</b> command, the system prompts you to commit changes: <pre>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</pre> </li> <li>Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul> <p>Repeat Step 1 through Step 4 to bring up the Layer 2 port mode AC at the other end of the connection.</p> <p>Brings up the Layer 2 port mode AC.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>The configuration on both ends of the connection must match.</li> </ul>

### What to do next

To configure a point-to-point pseudowire XConnect on the Layer 2 port mode AC you just created, see the Implementing MPLS Layer 2 VPNs module of Cisco IOS XR Multiprotocol Label Switching Configuration Guide.

To configure optional Layer 2 VPN parameters for the ATM AC, see the “Configuring Optional Parameters on a Layer 2 Port Mode AC” section on page 39.

## Configuring Optional Parameters on a Layer 2 Port Mode AC

The procedure in this section configures optional Layer 2 VPN transport parameters on a Layer 2 port mode AC.

### Before you begin

Before you can configure Layer 2 VPN parameters on a Layer 2 port mode AC, you must create a Layer 2 port mode AC, as described in the [Creating a Layer 2 Port Mode AC](#).

## SUMMARY STEPS

1. **configure**
2. **interface atm** *interface-path-id*
3. **atm mcpt-timers** *timer-1 timer-2 timer-3*
4. **l2transport**
5. **cell-packing** *cells timer* RP/0/RSP0/CPU0:router (config-if-l2)# cell-packing 6 1
6. **end** or **commit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm</b> <i>interface-path-id</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1	Enters interface configuration mode for an ATM interface.
<b>Step 3</b>	<b>atm mcpt-timers</b> <i>timer-1 timer-2 timer-3</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if)# <b>atm mcpt-timers 50 100 200</b>	Specifies the maximum cell packing timeout values for each of the three per-interface MCPT timers, in microseconds.  <b>Note</b> <ul style="list-style-type: none"> <li>• The default value for each timer is 50 microseconds.</li> </ul>
<b>Step 4</b>	<b>l2transport</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if)# l2transport	Enters ATM Layer 2 transport configuration mode.
<b>Step 5</b>	<b>cell-packing</b> <i>cells timer</i> RP/0/RSP0/CPU0:router (config-if-l2)# cell-packing 6 1	Sets the maximum number of cells allowed per packet, and specifies a maximum cell packing timeout (MCPT) timer to use for cell packing. <ul style="list-style-type: none"> <li>• Replace <i>cells</i> with the maximum number of cells to use per packet. Range is from 2 through 86.</li> <li>• Replace <i>timer</i> with the number that indicates the appropriate MCPT timer to use for cell packing. Can be <b>1</b>, <b>2</b>, or <b>3</b>. You can configure up to three different MCPT values for a single main interface.</li> </ul>
<b>Step 6</b>	<b>end</b> or <b>commit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if-l2)# end	Saves configuration changes. <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes:</li> </ul>

	Command or Action	Purpose
	<p>or</p> <pre>RP/0/RSP0/CPU0:router(config-if-l2)# commit</pre>	<pre>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</pre> <ul style="list-style-type: none"> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>• Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul> <p>Repeat Step 1 through Step 6 to configure the AC at the other end of the connection.</p> <p>Brings up the Layer 2 port mode AC.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The configuration on both ends of the connection must match.</li> </ul>

## Creating an ATM Layer 2 Subinterface with a PVC

The procedure in this section creates a Layer 2 subinterface with a PVC.

### Before you begin

Before you can create a subinterface on an ATM interface, you must bring up an ATM interface, as described in the [Bringing Up an ATM Interface](#).

### Restrictions

Only one PVC can be configured for each ATM subinterface.

### SUMMARY STEPS

1. **configure**
2. **interface atm** *interface-path-id.subinterface l2transport*
3. **pvc** *vpi/vci*
4. **end** or **commit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm interface-path-id.subinterface l2transport</b> <b>Example:</b> RP/0/RSP0/CPU0:router(config)# interface atm 0/6/0/1.10 l2transport	Creates a subinterface and enters ATM subinterface configuration mode for that subinterface.
<b>Step 3</b>	<b>pvc vpi/vci</b> <b>Example:</b> RP/0/RSP0/CPU0:router(config-if)# pvc 5/20	Creates an ATM permanent virtual circuit (PVC) and enters ATM Layer 2 transport PVC configuration mode.  <b>Note</b> <ul style="list-style-type: none"> <li>Only one PVC is allowed per subinterface.</li> </ul>
<b>Step 4</b>	<b>end or commit</b> <b>Example:</b> RP/0/RSP0/CPU0:router(config-atm-l2transport-pvc)# end  or  RP/0/RSP0/CPU0:router(config-atm-l2transport-pvc)# commit	Saves configuration changes.  <ul style="list-style-type: none"> <li>When you issue the <b>end</b> command, the system prompts you to commit changes:                 Uncommitted changes found, commit them before exiting(yes/no/cancel)?                [cancel]:             </li> <li>Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul> Repeat Step 1 through Step 4 to bring up the ATM subinterface and any associated PVC at the other end of the AC.  Brings up the AC.  <b>Note</b> <ul style="list-style-type: none"> <li>The configuration on both ends of the AC must match.</li> </ul>

**What to do next**

To configure optional PVC parameters, see the “Configuring Optional ATM Layer 2 PVC Parameters” section on page 43.

To configure a vc-class and apply it to the PVC, see the “Attaching a VC-Class to a PVC on an ATM Subinterface” section on page 55.

To configure a point-to-point pseudowire XConnect on the AC you just created, see the Implementing MPLS Layer 2 VPNs module of Cisco IOS XR Multiprotocol Label Switching Configuration Guide.

## Configuring Optional ATM Layer 2 PVC Parameters

This task describes the commands you can use to modify the default configuration on an ATM Layer 2 PVC.

**Before you begin**

Before you can modify the default PVC configuration, you must create the PVC on a Layer 2 ATM subinterface, as described in the [Creating an ATM Layer 2 Subinterface with a PVC](#).

**Restrictions**

The configuration on both ends of the PVC must match for the connection to be active.

**SUMMARY STEPS**

1. **configure**
2. **interface atm** *interface-path-id.subinterface* **l2transport**
3. **pvc** *vpi/vci*
4. **encapsulation** {*aal0* | *aal5*}
5. **cell-packing** *cells timer*
6. **shape** [**cbr** *peak\_output\_rate* | **ubr** *peak\_output\_rate* | **vbr-nrt** *peak\_output\_rate sustained\_output\_rate burst\_size* | **vbr-rt** *peak\_output\_rate sustained\_output\_rate burst\_size*]
7. **end** or **commit**

**DETAILED STEPS**

	Command or Action	Purpose
Step 1	<b>configure</b> <b>Example:</b>  RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
Step 2	<b>interface atm</b> <i>interface-path-id.subinterface</i> <b>l2transport</b> <b>Example:</b>  RP/0//CPU0:router(config-if)# interface atm 0/6/0/1.10 l2transport	Enters ATM subinterface configuration mode for a Layer 2 ATM subinterface.
Step 3	<b>pvc</b> <i>vpi/vci</i> <b>Example:</b>	Enters ATM Layer 2 transport PVC configuration mode for the specified PVC.

	Command or Action	Purpose
	RP/0/RSP0/CPU0:router(config-atm-l2transport-pvc)# pvc 5/20	
<b>Step 4</b>	<p><b>encapsulation</b> {aal0   aal5}</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-atm-l2transport-pvc)# encapsulation aal5</pre>	<p>Configures the ATM adaptation layer (AAL) and encapsulation type for a PVC.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The default encapsulation type for a PVC is AAL5.</li> </ul>
<b>Step 5</b>	<p><b>cell-packing</b> <i>cells</i> <i>timer</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-atm-l2transport-pvc)# cell-packing 5 2</pre>	<p>Sets the maximum number of cells allowed per packet, and specifies a maximum cell packing timeout (MCPT) timer to use for cell packing.</p> <ul style="list-style-type: none"> <li>• Replace <i>cells</i> with the maximum number of cells to use per packet. Range is from 2 through 86.</li> <li>• Replace <i>timer</i> with the number that indicates the appropriate MCPT timer to use for cell packing. Can be <b>1</b>, <b>2</b>, or <b>3</b>. You can configure up to three different MCPT values for a single main interface.</li> </ul>
<b>Step 6</b>	<p><b>shape</b> [<b>cbr</b> <i>peak_output_rate</i>   <b>ubr</b> <i>peak_output_rate</i>   <b>vbr-nrt</b> <i>peak_output_rate</i> <i>sustained_output_rate</i> <i>burst_size</i>   <b>vbr-rt</b> <i>peak_output_rate</i> <i>sustained_output_rate</i> <i>burst_size</i>]</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-atm-l2transport-pvc)# shape vbr-nrt 100000 100000 8000</pre>	<p>Configures ATM traffic shaping for the PVC.</p> <p>You must estimate how much bandwidth is required before you configure ATM traffic shaping.</p> <ul style="list-style-type: none"> <li>• <i>peak_output_rate</i>—Configures the maximum cell rate that is always available for the traffic.</li> <li>• <i>Sustained_output_rate</i>—Sustained output rate for the bit rate.</li> <li>• <i>burst_size</i>—Burst cell size for the bit rate. Range is from 1 through 8192.</li> </ul>
<b>Step 7</b>	<p><b>end</b> or <b>commit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-atm-l2transport-pvc)# end</pre> <p>or</p> <pre>RP/0/RSP0/CPU0:router(config-atm-l2transport-pvc)# commit</pre>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes: <p>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</p> </li> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> </ul>



	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> </ul> <p>Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</p> <p>Repeat Step 1 through Step 7 to configure the PVC at the other end of the AC.</p> <p>Brings up the AC.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The configuration on both ends of the connection must match.</li> </ul>

### What to do next

To configure a pseudo-wire XConnect on the AC you just created, see the Implementing MPLS Layer 2 VPNs module of Cisco IOS XR Multiprotocol Label Switching Configuration Guide.

To configure a vc-class and apply it to the PVC, see the “Attaching a VC-Class to a PVC on an ATM Subinterface” section on page 54.

## Creating an ATM Layer 2 Subinterface with a PVP

The procedure in this section creates an ATM Layer 2 subinterface with a permanent virtual path (PVP) on that ATM subinterface.

### Before you begin

Before you can create a subinterface with a PVP on an ATM interface, you must bring up an ATM interface, as described in the [Bringing Up an ATM Interface](#).

### Restrictions

- Only one PVP can be configured for each L2VPN ATM AC.
- F4 OAM emulation is not supported on Layer 2 PVPs.

### SUMMARY STEPS

1. **configure**
2. **interface atm** *interface-path-id.subinterface* **l2transport**
3. **pvp** *vpi*
4. **end** or **commit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm interface-path-id.subinterface l2transport</b> <b>Example:</b> RP/0/RSP0/CPU0:router(config)# interface atm 0/6/0/1.10 l2transport	Creates an ATM subinterface and enters ATM layer2 transport configuration mode for that subinterface.
<b>Step 3</b>	<b>pvp vpi</b> <b>Example:</b> RP/0/RSP0/CPU0:router(config-if)# pvp 100	(Optional) Creates an ATM PVP and enters ATM PVP configuration submenu.  <b>Note</b> <ul style="list-style-type: none"> <li>• Only one PVP is allowed per subinterface.</li> </ul>
<b>Step 4</b>	<b>end or commit</b> <b>Example:</b> RP/0/RSP0/CPU0:router(config-atm-l2transport-pvp)# end  or  RP/0/RSP0/CPU0:router(config-atm-l2transport-pvp)# commit	Saves configuration changes.  <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes:                 Uncommitted changes found, commit them before exiting(yes/no/cancel)?                [cancel]:             </li> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>• Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul> Repeat Step 1 through Step 4 to bring up the ATM subinterface and any associated PVP at the other end of the AC.  Brings up the ATM AC.  <b>Note</b> <ul style="list-style-type: none"> <li>• The configuration on both ends of the AC connection must match.</li> </ul>

**What to do next**

To configure optional PVP parameters, see the “Configuring Optional ATM Layer 2 PVP Parameters” section on page 46.

To configure a point-to-point pseudowire XConnect on the AC you just created, see the Implementing MPLS Layer 2 VPNs module of Cisco IOS XR Multiprotocol Label Switching Configuration Guide.

## Configuring Optional ATM Layer 2 PVP Parameters

This task describes the commands you can use to modify the default configuration on an ATM Layer 2 PVP.

**Before you begin**

Before you can modify the default PVP configuration, you must create the PVP on an ATM subinterface, as described in the [Creating an ATM Layer 2 Subinterface with a PVP](#).

**SUMMARY STEPS**

1. **configure**
2. **interface atm** *interface-path-id.subinterface* **l2transport**
3. **pvp** *vpi*
4. **cell-packing** *cells timer*
5. **shape** [**cbr** *peak\_output\_rate* | **ubr** *peak\_output\_rate* | **vbr-nrt** *peak\_output\_rate sustained\_output\_rate burst\_size* | **vbr-rt** *peak\_output\_rate sustained\_output\_rate burst\_size*]
6. **end** or **commit**

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b>  RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm</b> <i>interface-path-id.subinterface</i> <b>l2transport</b> <b>Example:</b>  RP/0/RSP0/CPU0:router(config)# interface atm 0/6/0/1.10 l2transport	Enters ATM subinterface configuration mode.
<b>Step 3</b>	<b>pvp</b> <i>vpi</i> <b>Example:</b>  RP/0/RSP0/CPU0:router(config-if)# pvp 10	Enters subinterface configuration mode for the PVP.

	Command or Action	Purpose
<b>Step 4</b>	<p><b>cell-packing</b> <i>cells timer</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-atm-l2transport-pvp)# cell-packing 5 2</pre>	<p>Sets the maximum number of cells allowed per packet, and specifies a maximum cell packing timeout (MCPT) timer to use for cell packing.</p> <ul style="list-style-type: none"> <li>• Replace <i>cells</i> with the maximum number of cells to use per packet. Range is from 2 through 86.</li> <li>• Replace <i>timer</i> with the number that indicates the appropriate MCPT timer to use for cell packing. Can be <b>1</b>, <b>2</b>, or <b>3</b>. You can configure up to three different MCPT values for a single main interface.</li> </ul>
<b>Step 5</b>	<p><b>shape</b> [<i>cbr peak_output_rate</i>   <i>ubr peak_output_rate</i>   <i>vbr-nrt peak_output_rate sustained_output_rate burst_size</i>   <i>vbr-rt peak_output_rate sustained_output_rate burst_size</i>]</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-atm-l2transport-pvp)# shape vbr-nrt 100000 100000 8000</pre>	<p>Configures ATM traffic shaping for the PVC.</p> <p>You must estimate how much bandwidth is required before you configure ATM traffic shaping.</p> <ul style="list-style-type: none"> <li>• <i>peak_output_rate</i>—Configures the maximum cell rate that is always available for the traffic.</li> <li>• <i>Sustained_output_rate</i>—Sustained output rate for the bit rate.</li> <li>• <i>burst size</i>—Burst cell size for the bit rate. Range is from 1 through 8192.</li> </ul>
<b>Step 6</b>	<p><b>end</b> or <b>commit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-atm-l2transport-pvp)# end</pre> <p>or</p> <pre>RP/0/RSP0/CPU0:router(config-atm-l2transport-pvp)# commit</pre>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes: <pre>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</pre> </li> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> </ul> <p>Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</p> <p>Repeat Step 1 through Step 6 to configure the PVP at the other end of the AC.</p>

	Command or Action	Purpose
		Brings up the AC.  <b>Note</b> • The configuration on both ends of the AC connection must match.

To configure a point-to-point pseudowire XConnect on the AC you just created, see the Implementing MPLS Layer 2 VPNs module of Cisco IOS XR Multiprotocol Label Switching Configuration Guide.

## How to Create and Configure a VC-Class

The configuration tasks for creating and configuring an ATM VC-Class are described in these procedures:

### Creating and Configuring a VC-Class

This section describes the tasks and commands required to create a virtual circuit (VC) class and attach it to an ATM main interface, subinterface, or permanent virtual circuit (PVC).

#### Restrictions

For Layer 2 VPN AC configurations, VC-classes can be applied to PVCs only. VC-classes are not supported on Layer 2 port mode interfaces or PVPs.

#### SUMMARY STEPS

1. **configure**
2. **vc-class atm name**
3. **encapsulation {aal5mux ipv4 | aal5nlpid | aal5snap}**
4. **oam ais-rdi [down-count [up-count]]**
5. **oam retry [up-count [down-count [retry-frequency]]]**
6. **oam-pvc manage seconds**
7. **shape [cbr peak\_output\_rate | ubr peak\_output\_rate | vbr-nrt peak\_output\_rate sustained\_output\_rate burst\_size| vbr-rt peak\_output\_rate sustained\_output\_rate burst\_size]**
8. **end** or **commit**

#### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b>  <b>Example:</b>  RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>vc-class atm name</b>  <b>Example:</b>  RP/0/RSP0/CPU0:router (config)# vc-class atm class1	Creates a vc-class for an ATM interface and enters vc-class configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<p><b>encapsulation</b> {aal5mux ipv4   aal5nlpid   aal5snap}</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-vc-class-atm)# encapsulation aal5snap</pre>	<p>Configures the ATM adaptation layer (AAL) and encapsulation type for an ATM vc-class.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• The default encapsulation type for a vc-class is AAL5/SNAP</li> <li>• In Vc-classes, the <b>encapsulation</b> command applies to Layer 3 Point-to-point configurations only.</li> </ul>
<b>Step 4</b>	<p><b>oam ais-rdi</b> [down-count [up-count]]</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-vc-class-atm)# oam ais-rdi 25 5</pre>	<p>Configures the vc-class so that it is brought down after a specified number of OAM alarm indication signal/remote defect indication (AIS/RDI) cells are received on the associated PVC.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• In vc-classes, the <b>oam ais-rdi</b> command applies to Layer 3 Point-to-point configurations only.</li> </ul>
<b>Step 5</b>	<p><b>oam retry</b> [up-count [down-count [retry-frequency]]]</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-vc-class-atm)# oam retry 5 10 5</pre>	<p>Configures parameters related to OAM management.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• In vc-classes, the <b>oam retry</b> command applies to Layer 3 Point-to-point configurations only.</li> </ul>
<b>Step 6</b>	<p><b>oam-pvc manage</b> seconds</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-vc-class-atm)# oam-pvc manage 300</pre>	<p>Configures the ATM OAM F5 loopback frequency.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• In vc-classes, the <b>oam-pvc manage</b> command applies to Layer 3 Point-to-point configurations only.</li> </ul>
<b>Step 7</b>	<p><b>shape</b> [cbr peak_output_rate   ubr peak_output_rate   vbr-nrt peak_output_rate sustained_output_rate burst_size   vbr-rt peak_output_rate sustained_output_rate burst_size]</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-vc-class-atm)# shape vbr-nrt 100000 100000 8000</pre>	<p>Configures ATM traffic shaping for the PVC.</p> <p>You must estimate how much bandwidth is required before you configure ATM traffic shaping.</p> <ul style="list-style-type: none"> <li>• <i>peak_output_rate</i>—Configures the maximum cell rate that is always available for the traffic.</li> <li>• <i>Sustained_output_rate</i>—Sustained output rate for the bit rate.</li> <li>• <i>burst_size</i>—Burst cell size for the bit rate. Range is from 1 through 8192.</li> </ul>
<b>Step 8</b>	<p><b>end</b> or <b>commit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-if)# end</pre>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes:</li> </ul>

	Command or Action	Purpose
	OR  RP/0/RSP0/CPU0:router(config-if)# commit	<pre>Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:</pre> <ul style="list-style-type: none"> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>• Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>

**What to do next**

Attach the vc-class to an ATM main interface, subinterface, or PVC.

To attach a vc-class to an ATM main interface, see the “Attaching a VC-Class to a Point-to-Point ATM Main Interface” section on page -50.

To attach a vc-class to an ATM subinterface, see the “Attaching a VC-Class to a Point-to-Point ATM Subinterface” section on page -52.

To attach a vc-class to an ATM PVC, see the “Attaching a VC-Class to a PVC on an ATM Subinterface” section on page -53.

## Attaching a VC-Class to a Point-to-Point ATM Main Interface

This section describes the tasks and commands required to attach a vc-class to a point-to-point ATM main interface.

**Restrictions**

VC-classes are not applicable to Layer 2 port mode ACs. For Layer 2 VPN configurations, Vc-classes are applicable to the PVC only.

**SUMMARY STEPS**

1. **configure**
2. **interface atm** *interface-path-id* **point-to-point**
3. **class-int** *vc-class-name*
4. **end** or **commit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm <i>interface-path-id</i> point-to-point</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1 point-to-point	Enters ATM interface configuration mode.
<b>Step 3</b>	<b>class-int <i>vc-class-name</i></b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if)# class-int classA	Attaches the vc-class to an ATM main interface. Replace the <i>vc-class-name</i> argument with the name of the vc-class you configured in the <a href="#">Creating and Configuring a VC-Class</a> .
<b>Step 4</b>	<b>end or commit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if)# end or RP/0/RSP0/CPU0:router (config-if)# commit	Saves configuration changes. <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes:                Uncommitted changes found, commit them before exiting (yes/no/cancel)?                [cancel]:</li> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>• Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>

## Attaching a VC-Class to a Point-to-Point ATM Subinterface

This section describes the tasks and commands required to attach a vc-class to an ATM subinterface.

## SUMMARY STEPS

1. **configure**



2. **interface atm** *interface-path-id.subinterface* **point-to-point**
3. **class-int** *vc-class-name*
4. **end** or **commit**

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	<p><b>configure</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router# configure</pre>	Enters global configuration mode.
<b>Step 2</b>	<p><b>interface atm</b> <i>interface-path-id.subinterface</i> <b>point-to-point</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1.10 point-to-point</pre>	Enters ATM subinterface configuration mode.
<b>Step 3</b>	<p><b>class-int</b> <i>vc-class-name</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-subif)# class-int classA</pre>	Assigns the vc-class to an ATM subinterface. Replace the <i>vc-class-name</i> argument with the name of the vc-class you configured in the <a href="#">Creating and Configuring a VC-Class</a> .
<b>Step 4</b>	<p><b>end</b> or <b>commit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config-subif)# end</pre> <p>or</p> <pre>RP/0/RSP0/CPU0:router(config-subif)# commit</pre>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes: <pre>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</pre> </li> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>• Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>

## Attaching a VC-Class to a PVC on an ATM Subinterface

This section describes the tasks and commands required to attach a vc-class to a PVC on an ATM subinterface.



**Note** VC-classes are supported on point-to-point and Layer 2 PVCs.

### SUMMARY STEPS

1. **configure**
2. **interface atm** *interface-path-id.subinterface* [**point-to-point** | **l2transport**]
3. **pvc** *vpi/vci*
4. **class-vc** *vc-class-name*
5. **end** or **commit**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm</b> <i>interface-path-id.subinterface</i> [ <b>point-to-point</b>   <b>l2transport</b> ] <b>Example:</b> RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1.10	Enters subinterface configuration mode and creates the ATM subinterface if it does not already exist.  Use the <b>point-to-point</b> keyword if you are attaching the vc-class to a point-to-point subinterface. Use the <b>l2transport</b> keyword if you are attaching the vc-class to a Layer 2 transport subinterface.  <b>Note</b> <ul style="list-style-type: none"> <li>• For more information on creating and configuring ATM subinterfaces, see the <a href="#">Creating a Point-to-Point ATM Subinterface with a PVC</a>.</li> </ul>
<b>Step 3</b>	<b>pvc</b> <i>vpi/vci</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if)# pvc 5/50	Enters ATM PVC configuration mode and creates the PVC if it does not already exist.  <b>Note</b> <ul style="list-style-type: none"> <li>• For more information on creating and configuring PVCs on ATM subinterfaces, see the <a href="#">Creating a Point-to-Point ATM Subinterface with a PVC</a>.</li> </ul>

	Command or Action	Purpose
<b>Step 4</b>	<b>class-vc</b> <i>vc-class-name</i> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config-atm-vc)# class-vc classA</pre>	Assigns a vc-class to an ATM PVC. Replace the <i>vc-class-name</i> argument with the name of the vc-class you want to attach to the PVC.
<b>Step 5</b>	<b>end</b> or <b>commit</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config-if)# end or RP/0/RSP0/CPU0:router (config-if)# commit</pre>	Saves configuration changes. <ul style="list-style-type: none"> <li>When you issue the <b>end</b> command, the system prompts you to commit changes: <pre>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</pre> </li> <li>Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>

## How to Configure ILMI on ATM Interfaces

The configuration tasks for managing ILMI on ATM interfaces are described in the following procedures:

### Enabling ILMI on an ATM Interface

This task describes the commands you can use to configure an ATM interface for ILMI.



**Note** For ILMI, a PVC is configured directly on the ATM main interface. Subinterface configuration is not necessary for ATM interfaces that are used for ILMI.

#### Before you begin

Bring up the ATM interface and remove the shutdown configuration, as described in the [Bringing Up an ATM Interface](#).

#### Restrictions

- The configuration on both ends of the ATM ILMI connection must match for the interface to be active.
- ILMI configuration is not supported on Layer 2 port mode ACs.

## SUMMARY STEPS

1. **configure**
2. **interface atm** *interface-path-id*
3. **atm address-registration**
4. **atm ilmi-keepalive** [**act-poll-freq** *frequency*] [**retries count**] [**inact-poll-freq** *frequency*]
5. **pvc** *vpi/vci* **ilmi**
6. **end**
7. **commit** RP/0/RSP0/CPU0:router (config-if)# **end**
8. **exit**
9. **exit**
10. **show atm ilmi-status** [**atm** *interface-path-id*]

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b>  RP/0/RSP0/CPU0:router# <b>configure</b>	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm</b> <i>interface-path-id</i> <b>Example:</b>  RP/0/RSP0/CPU0:router (config)# <b>interface atm</b> 0/6/0/1	Enters ATM interface configuration mode.
<b>Step 3</b>	<b>atm address-registration</b> <b>Example:</b>  RP/0/RSP0/CPU0:router (config-if)# <b>atm</b> <b>address-registration</b>	(Optional) Enables the router to engage in address registration and callback functions with the Interim Local Management Interface (ILMI).
<b>Step 4</b>	<b>atm ilmi-keepalive</b> [ <b>act-poll-freq</b> <i>frequency</i> ] [ <b>retries count</b> ] [ <b>inact-poll-freq</b> <i>frequency</i> ] <b>Example:</b>  RP/0/RSP0/CPU0:router (config-if)# <b>atm</b> <b>ilmi-keepalive</b>	(Optional) Enables ILMI keepalives on an ATM interface.
<b>Step 5</b>	<b>pvc</b> <i>vpi/vci</i> <b>ilmi</b> <b>Example:</b>  RP/0/RSP0/CPU0:router (config-if)# <b>pvc</b> 5/30 <b>ilmi</b>	Creates an ATM permanent virtual circuit (PVC) with ILMI encapsulation.

	Command or Action	Purpose
Step 6	<b>end</b>	or
Step 7	<b>commit</b> RP/0/RSP0/CPU0:router (config-if)# end <b>Example:</b> RP/0/RSP0/CPU0:router(config-if)# commit	or Saves configuration changes. <ul style="list-style-type: none"> <li>When you issue the <b>end</b> command, the system prompts you to commit changes:   <pre>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</pre> </li> <li>Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>
Step 8	<b>exit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if)# exit	Exits interface configuration mode and enters global configuration mode.
Step 9	<b>exit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config)# exit	Exits global configuration mode and enters EXEC mode.
Step 10	<b>show atm ilmi-status</b> [ <i>atm interface-path-id</i> ] <b>Example:</b> RP/0/RSP0/CPU0:router (config)# show atm ilmi-status atm 0/6/0/1	(Optional) Verifies the ILMI configuration for the specified interface.

## Disabling ILMI on an ATM Interface

This task describes the commands you can use to disable ILMI on an ATM interface.

## SUMMARY STEPS

1. **configure**
2. **interface atm** *interface-path-id*
3. **atm ilmi-config disable**
4. **end** or **commit**
5. **exit**
6. **exit**
7. **show atm ilmi-status** [*atm interface-path-id*]

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm</b> <i>interface-path-id</i> <b>Example:</b> RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1	Enters ATM interface configuration mode.
<b>Step 3</b>	<b>atm ilmi-config disable</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if)# atm ilmi-config disable	(Optional) Disables ILMI on the ATM interface. To re-enable ILMI on an ATM interface, use the <b>no atm ilmi-config disable</b> form of this command.
<b>Step 4</b>	<b>end</b> or <b>commit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if)# end or RP/0/RSP0/CPU0:router (config-if)# commit	Saves configuration changes. <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes:                 Uncommitted changes found, commit them before exiting (yes/no/cancel)?                [cancel]:</li> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>
<b>Step 5</b>	<b>exit</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config-if)# exit</pre>	Exits interface configuration mode and enters global configuration mode.
<b>Step 6</b>	<b>exit</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config)# exit</pre>	Exits global configuration mode and enters EXEC mode.
<b>Step 7</b>	<b>show atm ilmi-status [atm interface-path-id]</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config)# show atm ilmi-status atm 0/6/0/1</pre>	(Optional) Verifies the ILMI configuration for the specified interface.

## How to Configure Channelized ATM

This task describes how to configure a T3 path into multiple T1 channels carrying ATM traffic.

### SUMMARY STEPS

- configure**
- hw-module subslot** *subslot-id* **cardtype** {t3 | e3}
- controller t3** *interface-path-id*
- mode** *mode*
- controller t1** *interface-path-id*
- mode** *mode*
- interface atm** *interface-path-id*
- interface atm** *interface-path-id.subinterface* **point-to-point**
- pvc** *vpi/vci*
- ipv4 address** *ipv4\_address/prefix*
- end** or **commit**
- hw-module subslot** *subslot-id* **cardtype** {t3 | e3}
- controller t3** *interface-path-id*
- mode** *mode*
- interface atm** *interface-path-id*
- vp-tunnel** *vpi*
- interface atm** *interface-path-id.subinterface* **point-to-point**
- pvc** *vpi/vci*
- ipv4 address** *ipv4\_address/prefix*

20. **interface atm** *interface-path-id.subinterface* **point-to-point**
21. **pvc** *vpi/vci*
22. **ipv4 address** *ipv4\_address/prefix*
23. **end** or **commit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>configure</b> <b>Example:</b> RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
<b>Step 2</b>	<b>hw-module subslot</b> <i>subslot-id</i> <b>cardtype</b> {t3   e3} <b>Example:</b> RP/0/RSP0/CPU0:router(config)# hw-module subslot 0/1/0 cardtype t3	Sets the card type for the SPA. <ul style="list-style-type: none"> <li>• t3—Specifies T3 connectivity of 44,210 kbps through the network, using B3ZS coding. This is the default setting.</li> <li>• e3—Specifies a wide-area digital transmission scheme used predominantly in Europe that carries data at a rate of 34,010 kbps.</li> </ul>
<b>Step 3</b>	<b>controller t3</b> <i>interface-path-id</i> <b>Example:</b> RP/0/RSP0/CPU0:router(config)# controller t3 0/1/0/0	Creates a T3 controller and enters the T3 controller configuration mode. Specifies the T3 controller interface-path-id identifier with the <i>rack/slot/module/port</i> notation.
<b>Step 4</b>	<b>mode</b> <i>mode</i> <b>Example:</b> RP/0/RSP0/CPU0:router(config-t3)# mode t1	Sets the mode of interface. The possible modes are: <ul style="list-style-type: none"> <li>• atm—clear channel carrying atm</li> <li>• e1—channelize into 21 E1s</li> <li>• serial—clear channel carrying hdlc like payload</li> <li>• t1—channelized into 28 T1s</li> </ul>
<b>Step 5</b>	<b>controller t1</b> <i>interface-path-id</i> <b>Example:</b> RP/0/RSP0/CPU0:router(config-t3)# controller t1 0/1/0/0	Creates a T1 controller and enters the T1 controller configuration submenu. Specifies the T1 controller interface-path-id with the <i>rack/slot/module/port</i> notation.
<b>Step 6</b>	<b>mode</b> <i>mode</i> <b>Example:</b> RP/0/RSP0/CPU0:router(config-t1)# mode atm	Sets the mode of interface. The possible modes are: <ul style="list-style-type: none"> <li>• atm—clear channel carrying atm</li> <li>• e1—channelize into 21 E1s</li> <li>• serial—clear channel carrying hdlc like payload</li> </ul>



	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>t1—channelized into 28 T1s</li> </ul>
<b>Step 7</b>	<p><b>interface atm</b> <i>interface-path-id</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-t1)# interface atm 0/1/0/0</pre>	Creates an ATM interface and enters ATM interface configuration mode. Specifies the ATM interface with the <i>rack/slot/module/port</i> notation.
<b>Step 8</b>	<p><b>interface atm</b> <i>interface-path-id.subinterface point-to-point</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-if)# interface atm 0/1/0/1.1 point-to-point</pre>	Creates an ATM subinterface as one endpoint of a point-to-point link and enters ATM subinterface configuration mode. Specifies the ATM interface with the <i>rack/slot/module/port.subinterface</i> notation.
<b>Step 9</b>	<p><b>pvc</b> <i>vpi/vci</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-subif)# pvc 10/100</pre>	Creates an ATM permanent virtual circuit (PVC) and enters ATM PVC configuration submode.  <b>Note</b> <ul style="list-style-type: none"> <li>Only one PVC is allowed per subinterface.</li> </ul>
<b>Step 10</b>	<p><b>ipv4 address</b> <i>ipv4_address/prefix</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-atm-vc)#ipv4 address 10.212.4.22 255.255.255.0</pre>	Assigns an IP address and subnet mask to the subinterface.
<b>Step 11</b>	<p><b>end</b> or <b>commit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-sonet)# end</pre> <p>or</p> <pre>RP/0/RSP0/CPU0:router(config-sonet)# commit</pre> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router# configure</pre>	Saves configuration changes.  <ul style="list-style-type: none"> <li>When you issue the <b>end</b> command, the system prompts you to commit changes:   <pre>Uncommitted changes found, commit them before exiting (yes/no/cancel)? [cancel]:</pre> </li> <li>Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> <li>Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>

	Command or Action	Purpose
		<p>How to Configure Clear Channel ATM with Virtual Path (VP) Tunnels</p> <p>This task describes how to configure a T3 ATM path with multiple VP tunnels.</p> <p>configure</p> <p>Enters global configuration mode.</p>
<b>Step 12</b>	<p><b>hw-module subslot</b> <i>subslot-id</i> <b>cardtype</b> {t3   e3}</p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config)# hw-module subslot 0/1/0 cardtype t3</pre>	<p>Sets the card type for the SPA.</p> <ul style="list-style-type: none"> <li>t3—Specifies T3 connectivity of 44,210 kbps through the network, using B3ZS coding. This is the default setting.</li> <li>e3—Specifies a wide-area digital transmission scheme used predominantly in Europe that carries data at a rate of 34,010 kbps.</li> </ul>
<b>Step 13</b>	<p><b>controller t3</b> <i>interface-path-id</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config)# controller t3 0/1/0/0</pre>	<p>Creates a T3 controller and enters the T3 controller configuration mode. Specifies the T3 controller <i>interface-path-id</i> with the <i>rack/slot/module/port</i> notation.</p>
<b>Step 14</b>	<p><b>mode</b> <i>mode</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-t3)# mode t1</pre>	<p>Sets the mode of interface. The possible modes are:</p> <ul style="list-style-type: none"> <li>atm—clear channel carrying atm</li> <li>e1—channelize into 21 E1s</li> <li>serial—clear channel carrying hdlc like payload</li> <li>t1—channelized into 28 T1s</li> </ul>
<b>Step 15</b>	<p><b>interface atm</b> <i>interface-path-id</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-t1)# interface atm 0/1/0/0</pre>	<p>Creates an ATM interface and enters ATM interface configuration mode. Specifies the ATM interface with the <i>rack/slot/module/port</i> notation.</p>
<b>Step 16</b>	<p><b>vp-tunnel</b> <i>vp</i></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router (config)# vp-tunnel 10</pre>	<p>Configures a vp-tunnel on an ATM interface.</p>
<b>Step 17</b>	<p><b>interface atm</b> <i>interface-path-id.subinterface</i> <b>point-to-point</b></p> <p><b>Example:</b></p>	<p>Creates an ATM subinterface as one endpoint of a point-to-point link and enters ATM subinterface configuration mode. Specifies the ATM interface with the <i>rack/slot/module/port.subinterface</i> notation.</p>

	Command or Action	Purpose
	RP/0/RSP0/CPU0:router(config-if)# interface atm 0/1/0/1.1 point-to-point	
<b>Step 18</b>	<p><b>pvc vpi/vci</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-subif)# pvc 10/100</pre>	<p>Creates an ATM permanent virtual circuit (PVC) and enters ATM PVC configuration submenu.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Only one PVC is allowed per subinterface.</li> </ul>
<b>Step 19</b>	<p><b>ipv4 address ipv4_address/prefix</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-atm-vc)#ipv4 address 10.212.8.22 255.255.255.0</pre>	Assigns an IP address and subnet mask to the subinterface.
<b>Step 20</b>	<p><b>interface atm interface-path-id.subinterface point-to-point</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-if)# interface atm 0/1/0/1.2 point-to-point</pre>	Creates an ATM subinterface as one endpoint of a point-to-point link and enters ATM subinterface configuration mode. Specifies the ATM interface with the <i>rack/slot/module/port.subinterface</i> notation.
<b>Step 21</b>	<p><b>pvc vpi/vci</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-subif)# pvc 10/200</pre>	<p>Creates an ATM permanent virtual circuit (PVC) and enters ATM PVC configuration submenu.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Only one PVC is allowed per subinterface.</li> </ul>
<b>Step 22</b>	<p><b>ipv4 address ipv4_address/prefix</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-atm-vc)#ipv4 address 10.212.12.22 255.255.255.0</pre>	Assigns an IP address and subnet mask to the subinterface.
<b>Step 23</b>	<p><b>end or commit</b></p> <p><b>Example:</b></p> <pre>RP/0/RSP0/CPU0:router(config-sonet)# end</pre> <p>or</p> <pre>RP/0/RSP0/CPU0:router(config-sonet)# commit</pre>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> <li>• When you issue the <b>end</b> command, the system prompts you to commit changes: <pre>Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:</pre> </li> <li>• Entering <b>yes</b> saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.</li> <li>• Entering <b>no</b> exits the configuration session and returns the router to EXEC mode without committing the configuration changes.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li>• Entering <b>cancel</b> leaves the router in the current configuration session without exiting or committing the configuration changes.</li> <li>• Use the <b>commit</b> command to save the configuration changes to the running configuration file and remain within the configuration session.</li> </ul>

## Attaching a Service-Policy to an Attachment Circuit

The QoS **service-policy** command can be configured for an attachment circuit in the following modes:

- PVC mode
- PVP mode
- Port mode
- Main Interface (non-port mode)

In PVC mode, PVP mode, and Port mode, the service policy is attached in the l2transport sub-interface mode. In non-port mode, the service policy is attached to the main interface.

Use the following procedures to attach a service-policy to an attachment circuit.

PVC Mode

### SUMMARY STEPS

1. **config**
2. **interface atm** *interface-path-id.subinterface* **l2transport**
3. **interface atm** *interface-path-id*
4. **service-policy input | output** *policy\_name*
5. **commit**
6. **config**
7. **interface atm** *interface-path-id.subinterface* **l2transport**
8. **pvp** *vpi*
9. **service-policy input | output** *policy\_name*
10. **commit**
11. **config**
12. **interface atm** *interface-path-id*
13. **l2transport**
14. **service-policy input | output** *policy\_name*
15. **commit**
16. **config**
17. **interface atm** *interface-path-id*
18. **service-policy input | output** *policy\_name*
19. **commit**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>config</b> <b>Example:</b>  RP/0/RSP0/CPU0:router# config terminal	Enters global configuration mode.
<b>Step 2</b>	<b>interface atm <i>interface-path-id</i>.subinterface l2transport</b> <b>Example:</b>  RP/0/RSP0/CPU0:router(config)# interface atm 0/1/0/0.2 l2transport	Creates a subinterface and enters ATM subinterface configuration mode for that subinterface.
<b>Step 3</b>	<b>interface atm <i>interface-path-id</i></b> <b>Example:</b>  RP/0/RSP0/CPU0:router (config)# interface atm 0/1/0/1	Enters interface configuration mode for an ATM interface.
<b>Step 4</b>	<b>service-policy input   output <i>policy_name</i></b> <b>Example:</b>  RP/0/RSP0/CPU0 (config-atm-l2transport-pvc) #service-policy input   output atm_policy_1	Attaches the specified service policy to the ATM PVC subinterface.
<b>Step 5</b>	<b>commit</b> <b>Example:</b>  RP/0/RSP0/CPU0:router(config-if)# commit	Saves configuration changes.  PVP Mode
<b>Step 6</b>	<b>config</b> <b>Example:</b>  RP/0/RSP0/CPU0:router# config terminal	Enters global configuration mode.
<b>Step 7</b>	<b>interface atm <i>interface-path-id</i>.subinterface l2transport</b> <b>Example:</b>  RP/0/RSP0/CPU0:router(config)# interface atm 0/1/0/0.2 l2transport	Creates a subinterface and enters ATM subinterface configuration mode for that subinterface.
<b>Step 8</b>	<b>pvp <i>vpi</i></b> <b>Example:</b>  RP/0/RSP0/CPU0:router(config-subif)# pvp 30	(Optional) Creates an ATM PVP and enters ATM PVP configuration submode.  <b>Note</b> • Only one PVP is allowed per subinterface.

	Command or Action	Purpose
<b>Step 9</b>	<b>service-policy input   output <i>policy_name</i></b> <b>Example:</b> <pre>RP/0/RSP0/CPU0 (config-atm-l2transport-pvp)#service-policy input   output atm_policy_2</pre>	Attaches the specified service policy to the ATM PVP subinterface.
<b>Step 10</b>	<b>commit</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router(config-if)# commit</pre>	Saves configuration changes. Port Mode
<b>Step 11</b>	<b>config</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router# config terminal</pre>	Enters global configuration mode.
<b>Step 12</b>	<b>interface atm <i>interface-path-id</i></b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config)# interface atm 0/1/0/1</pre>	Enters interface configuration mode for an ATM interface.
<b>Step 13</b>	<b>l2transport</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config-if)# l2transport</pre>	Enters ATM Layer 2 transport configuration mode, and enables Layer 2 port mode on this ATM interface.
<b>Step 14</b>	<b>service-policy input   output <i>policy_name</i></b> <b>Example:</b> <pre>RP/0/RSP0/CPU0 (config-if-l2)#service-policy input   output atm_policy_3</pre>	Attaches the specified service policy to the ATM Layer 2 subinterface.
<b>Step 15</b>	<b>commit</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router(config-if)# commit</pre>	Saves configuration changes. Main Interface (non-port mode)
<b>Step 16</b>	<b>config</b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router# config terminal</pre>	Enters global configuration mode.
<b>Step 17</b>	<b>interface atm <i>interface-path-id</i></b> <b>Example:</b> <pre>RP/0/RSP0/CPU0:router (config)# interface atm 0/1/0/1</pre>	Enters interface configuration mode for an ATM interface.

	Command or Action	Purpose
Step 18	<b>service-policy input   output <i>policy_name</i></b> <b>Example:</b> RP/0/RSP0/CPU0 (config-if) #service-policy input   output atm_policy_4	Attaches the specified service policy to the main ATM interface.
Step 19	<b>commit</b> <b>Example:</b> RP/0/RSP0/CPU0:router (config-if) # commit	Saves configuration changes.

## ATM Configuration: Examples

This section provides the following configuration examples:

### ATM Interface Bring Up and Configuration: Example

The following example shows how to bring up and configure an ATM interface:

```
RP/0/RSP0/CPU0:router #configure
RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/0
RP/0/RSP0/CPU0:router (config-if)# atm address-registration
RP/0/RSP0/CPU0:router (config-if)# no shutdown

RP/0/RSP0/CPU0:router (config-if)# commit
```

### Point-To-Point ATM Subinterface Configuration: Example

The following example shows how to configure a point-to-point ATM subinterface on an ATM main interface:

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router (config)# interface atm 0/2/0/2.1 point-to-point
RP/0/RSP0/CPU0:router (config-if)# ipv4 address 10.46.8.6/24
RP/0/RSP0/CPU0:router (config-if)# pvc 0/200
RP/0/RSP0/CPU0:router (config-atm-vc)# commit
RP/0/RSP0/CPU0:router (config-atm-vc)# exit
RP/0/RSP0/CPU0:router (config-if)# exit
RP/0/RSP0/CPU0:router (config)# exit

RP/0/RSP0/CPU0:router # show interfaces atm 0/2/0/2.1

ATM0/2/0/2.1 is up, line protocol is up
Hardware is ATM network sub-interface(s)
Description: Connect to P4_C12810 ATM 1/2.1
Internet address is 10.46.8.6/24
MTU 4470 bytes, BW 155000 Kbit
    reliability Unknown, txload Unknown, rxload Unknown
Encapsulation AAL5/SNAP, controller loopback not set,
Last clearing of "show interface" counters Unknown
```

Datarate information unavailable.  
Interface counters unavailable.

RP/0/RSP0/CPU0:router # **show atm interface atm 0/2/0/3**

```
Interface                : ATM0/2/0/3
AAL Enabled              : AAL5
Max-VP                   : 254
Max-VC                   : 2046
Configured L2 PVPs      : 0
Configured L2 PVCs      : 0
Configured L3 VP-Tunnels : 0
Configured L3 PVCs      : 1
L2 PVPs in Down State   : 0
L2 PVCs in Down State   : 0
L3 VP-Tunnels in Down State : 0
L3 PVCs in Down State   : 0
Cell packing count      : 0
```

```
Received Side Statistics:
  Received Cells          : 0
  Received Bytes         : 0
  Received AAL Packets    : 0
```

```
Receive Side Cells Dropped:
  Unrecognized VPI/VCI   : 0
```

```
Receive Side AAL5 Packets Dropped:
  Unavailable SAR Buffer  : 0
  Non-Resource Exhaustion : 0
  Reassembly Timeout     : 0
  Zero Length           : 0
  Unavailable Host Buffer : 0
  Packet size exceeds MPS : 0
  AAL5 Trailer Length Errors : 0
```

```
Transmit Side Statistics:
  Transmitted Cells      : 1899716067
  Transmitted Bytes      : 0
  Transmitted AAL Packets : 0
```

```
Transmit Side Cells Dropped:
  Unrecognized VPI/VCI   : 0
```

```
Transmit Side AAL5 Packets Dropped:
  Unavailable SAR Buffer  : 0
  Non-Resource Exhaustion : 0
  WRED Threshold         : 0
  WRED Random            : 0
```

RP/0/RSP0/CPU0:router # **show atm pvc 10/100**

Detailed display of VC(s) with VPI/VCI = 10/100

```
ATM0/2/0/3.100: VPI: 10 VCI: 100
UBR, PeakRate: 622000 Kbps
AAL5-LLC/SNAP
OAM frequency: 10 second(s), OAM retry frequency: 1 second(s),
OAM up retry count: 3, OAM down retry count: 5,
OAM Keep-vc-up: False, OAM AIS-RDI failure: None,
OAM AIS-RDI down count: 1, OAM AIS-RDI up time: 3 second(s),
OAM Loopback status: No loopback enabled,
OAM VC state: Loopback Not verified,
VC is not managed by OAM,
```



```

OAM cells received: 0,
F5 InEndLoop: 0, F5 InSegLoop: 0,
F5 InEndAIS: 0, F5 InSegAIS: 0,
F5 InEndRDI: 0, F5 InSegRDI: 0,
OAM cells sent: 0,
F5 OutEndLoop: 0, F5 OutSegLoop: 0,
F5 OutEndAIS: 0, F5 OutSegAIS: 0,
F5 OutEndRDI: 0, F5 OutSegRDI: 0,
OAM cells drops: 0

InPkts: 0                OutPkts: 0
InBytes: 0               OutBytes: 0
WRED pkt drop: 0
Non WRED pkt drop: 0

Internal state: READY
Status: UP

```

## Layer 2 AC Creation and Configuration: Example

This example shows how to create and configure one endpoint of a Layer 2 port mode AC:

```

RP/0/RSP0/CPU0:router# configure

RP/0/RSP0/CPU0:router (config)# interface atm 0/6/0/1

RP/0/RSP0/CPU0:router (config-if)# l2transport
RP/0/RSP0/CPU0:router (config-if-l2)# cell-packing 6 1

RP/0/RSP0/CPU0:router (config-if-l2)# commit

```

The following example shows how to create and configure an AC on a Layer 2 subinterface with a PVC:

```

RP/0/RSP0/CPU0:router# configure

RP/0/RSP0/CPU0:router (config)# interface atm 0/1/0/0.230 l2transport

RP/0/RSP0/CPU0:router (config-if)# pvc 15/230

RP/0/RSP0/CPU0:router (config-atm-l2transport-pvc)# encapsulation aal0

RP/0/RSP0/CPU0:router (config-atm-l2transport-pvc)# cell-packing 5 2

RP/0/RSP0/CPU0:router (config-atm-l2transport-pvc)# shape cbr 622000

RP/0/RSP0/CPU0:router (config-atm-l2transport-pvc)# commit

RP/0/RSP0/CPU0:router (config-atm-l2transport-pvc)#

RP/0/RSP0/CPU0:router (config-if)# exit

```

```
RP/0/RSP0/CPU0:router(config)# exit
```

```
RP/0/RSP0/CPU0:router# show atm pvc
```

Interface	VPI	VCI	Type	Encaps	SC	Peak Kbps	Avg/Min Kbps	Burst Cells	Sts
ATM0/1/0/0.230	15	230	PVC	AAL0	UBR	622000	N/A	N/A	UP
ATM0/1/0/3.19	17	19	PVC	SNAP	UBR	622000	N/A	N/A	UP

The following example shows how to create and configure an AC on an ATM subinterface with a PVP:

```
RP/0/RSP0/CPU0:router# configure
```

```
RP/0/RSP0/CPU0:router(config)# interface atm 0/6/0/1.10 l2transport
```

```
RP/0/RSP0/CPU0:router(config-if)# pvp 100
```

```
RP/0/RSP0/CPU0:router(config-atm-l2transport-pvp)# cell-packing 5 2
```

```
RP/0/RSP0/CPU0:router(config-atm-l2transport-pvp)# shapeubr 155000
```

```
RP/0/RSP0/CPU0:router(config-atm-l2transport-pvp)# commit
```

```
RP/0/RSP0/CPU0:router# show atm pvp interface atm 0/6/0/1
```

Interface	VPI	SC	Peak Kbps	Avg/Min Kbps	Burst Cells	Sts
ATM0/6/0/1.10	100	UBR	155000	N/A	N/A	UP

## VC-Class Creation and Configuration: Example

The following example shows how to configure a vc-class:

```
RP/0/RSP0/CPU0:router # configure
```

```
RP/0/RSP0/CPU0:router(config)# vc-class atm atm-class-1
```

```
RP/0/RSP0/CPU0:router(config-vc-class-atm)# encapsulation aal5snap
```

```
RP/0/RSP0/CPU0:router(config-vc-class-atm)# oam ais-rdi 25 5
```

```
RP/0/RSP0/CPU0:router(config-vc-class-atm)# oam retry 5 10 5
```

```
RP/0/RSP0/CPU0:router(config-vc-class-atm)# oam-pvc manage 300
```

```
RP/0/RSP0/CPU0:router(config-vc-class-atm)# shape cbr 100000
```

```
RP/0/RSP0/CPU0:router(config-vc-class-atm)# commit
```

The following example shows how to attach a vc-class to an ATM main interface:

```
RP/0/RSP0/CPU0:router # configure
```

```
RP/0/RSP0/CPU0:router(config)# interface ATM0/2/0/0.1 point-to-point
```

```
RP/0/RSP0/CPU0:router(config-if)# class-int atm-class-1
```

```
RP/0/RSP0/CPU0:router(config-if)# commit
```

The following example shows how to attach a vc-class to an ATM subinterface:

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router(config)# interface ATM0/2/0/0.1 point-to-point
RP/0/RSP0/CPU0:router(config-if)# pvc 10/100
RP/0/RSP0/CPU0:router (config-atm-vc)# class-vc atm-class-1
RP/0/RSP0/CPU0:router (config-atm-vc)# commit
```

The following example shows how to display information about a specific ATM vc-class:

```
RP/0/RSP0/CPU0:router # show atm vc-class atm-class-1
ATM vc-class atm-class-1

encapsulation      -   aal5snap
shape              -   cbr 100000
oam ais-rdi        -   not configured
oam retry          -   not configured
oam-pvc            -   manage 300
```

The following example shows how to display configuration information for the parameters on a virtual circuit (VC) class that is associated with a particular PVC:

```
RP/0/RSP0/CPU0:router # show atm class-link 10/100

Detailed display of VC(s) with VPI/VCI = 10/100

Class link for VC 10/100
ATM0/2/0/0.1: VPI: 10 VCI: 100
shape : cbr 100000 (VC-class configured on VC)
encapsulation : aal5snap (VC-class configured on VC)
oam-pvc : manage 300 (VC-class configured on VC)
oam retry : 3 5 1 (Default value)
oam ais-rdi : 1 3 (Default value)
```

## Channelized ATM Configuration: Example

The following example shows how to configure a T3 path into multiple T1 channels carrying ATM traffic.

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# hw-module subslot 0/4/0 cardtype t3
RP/0/RSP0/CPU0:router(config)# controller T3 0/4/0/0
RP/0/RSP0/CPU0:router(config-t3)# mode t1
RP/0/RSP0/CPU0:router(config-t3)# controller T1 0/4/0/0/1
RP/0/RSP0/CPU0:router(config-t1)# mode atm
RP/0/RSP0/CPU0:router(config-t1)# interface ATM 0/4/0/0/1
RP/0/RSP0/CPU0:router(config-if)# interface ATM 0/4/0/0/1.1 point-to-point
RP/0/RSP0/CPU0:router(config-subif)# pvc 10/100
RP/0/RSP0/CPU0:router(config-atm-vc)# ipv4 address 10.212.4.22 255.255.255.0
RP/0/RSP0/CPU0:router(config-subif)# commit
```

## Clear Channel ATM with Virtual Path (VP) Tunnels Configuration: Example

The following example shows how to configure a T3 ATM path with multiple VP tunnels.

```
RP/0/RSP0/CPU0:router# config
RP/0/RSP0/CPU0:router(config)# hw-module subslot 0/4/0 cardtype t3
RP/0/RSP0/CPU0:router(config)# controller T3 0/4/0/1
```

```

RP/0/RSP0/CPU0:router(config-t3)# mode atm
RP/0/RSP0/CPU0:router(config-t3)# interface ATM 0/4/0/1
RP/0/RSP0/CPU0:router(config-if)# vp-tunnel 10
RP/0/RSP0/CPU0:router(config-atm-vp-tunnel)# interface ATM 0/4/0/1.1 point-to$
RP/0/RSP0/CPU0:router(config-subif)# pvc 10/100
RP/0/RSP0/CPU0:router(config-atm-vc)# ipv4 address 10.212.8.22 255.255.255.0
RP/0/RSP0/CPU0:router(config-subif)# interface ATM 0/4/0/1.2 point-to-point
RP/0/RSP0/CPU0:router(config-subif)# pvc 10/200
RP/0/RSP0/CPU0:router(config-atm-vc)# ipv4 address 10.212.12.22 255.255.255.0
RP/0/RSP0/CPU0:router(config-subif)# commit

```

## ATM Layer 2 QoS Configuration: Examples

The following examples show how to configure QoS for ATM. For complete information on configuring QoS and QoS commands, refer to the Cisco XR 12000 Series Router Modular Quality of Service Configuration Guide and the Cisco XR 12000 Series Router Modular Quality of Service Command Reference.

### Attaching a Service-Policy to an Attachment Circuit Configuration: Example

#### PVC Mode

```

config
interface ATM 0/1/0/0.2 l2transport
pvc 10/2
service-policy input | output atm_policy_o

```

#### PVP Mode

```

config
interface ATM 0/1/0/0.3 l2transport
pvp 30
service-policy input atm_policy_i

```

#### Port Mode

```

config
interface ATM 0/1/0/0
l2transport
service-policy input atm_policy_i

```

#### Main Interface (non-port mode)

```

config
interface ATM 0/1/0/0
service-policy input | output atm_policy_o

```

### Policy Map Configuration for CBR/UBR: Example

For CBR.1 (real-time traffic) and UBR (best effort, non-real time traffic) you must specify the PCR and delay tolerance parameters for policing. The main difference between the configurations for UBR.1 and UBR.2 traffic is that for UBR.2 traffic, the exceed action includes the **set-clp-transmit** option to tag non-conforming cells. The police rate can also be expressed as a percentage.

The following example shows how to configure a QoS policy map for CBR/UBR:

```
policy-map CBR1
  class class-default
    police rate pcr cellsp delay-tolerance cdvt us
    conform-action action
    exceed-action action
```

## Policy Map Configuration for VBR.1: Example

For VBR.1 real-time and non-real time traffic you must specify the PCR, SCR, and delay tolerance parameters for for policing. The **atm-mbs** parameter can be specified to define the burst allowed on the SCR bucket. The police rates can also be expressed as percentages. Class atm\_clp1 is allowed with police actions.

The following example shows how to configure a QoS policy map for VBR.1:

```
policy-map VBR1
  class class-default
    police rate scr cellsp atm-mbs mbs cells peak-rate pcr cellsp delay-tolerance
  cdvt us
    conform-action action
    exceed-action action
```

## Policy Map Configuration for VBR.2 and VBR.3: Example

For VBR.2 and VBR.3 real-time and non-real time traffic you must specify the PCR, SCR, and delay tolerance parameters for policing. The **atm-mbs** parameter can be specified to define the burst allowed on the SCR bucket. The main difference between VBR.1 and VBR.2/VBR.3 is that the SCR bucket is for CLP0 cells only. The police rates can be expressed as percentages. The child policy can have other set actions and can match on ATM CLP1.

The following example shows how to configure a hierarchical policy for VBR.2:

```
policy-map child
  class atm_clp0
    police rate scr cellsp atm-mbs mbs cells
    conform-action action
    exceed-action action

policy-map VBR2
  class class-default
    police rate pcr cellsp delay-tolerance cdvt us
    conform-action action
    exceed-action action
  service-policy child
```

## Policy Map Configuration to Exclude OAM Cells: Example

OAM cells can be excluded from being policed by configuring the classification criteria. Since **match not** is not supported, the different classes must be explicitly configured:

The following example shows how to configure a policy map to exclude OAM cells:

```
class-map clp-0-1
  match clp 0
  match clp 1
```

```

policy-map child
  class atm-oam
    set
  class class-default
    police rate scr cellspcs atm-mbs mbs cells
    conform-action action
    exceed-action action

policy-map VBR2
  class clp-0-1
    police rate pcr cellspcs delay-tolerance cdvt us
    conform-action action
    exceed-action action
  service-policy child

```

## Policy Map Configuration for Dual Queue Limit: Example

Dual Queue limit configuration is supported on egress L2 ATM interfaces to differentiate between CLP0 and CLP1 cells.



**Note** For dual queue, only output service policies are supported. Input service policies are not supported.

The following example shows how to configure a policy map for Dual Queue Limit:

```

policy-map q-limit
  class class-default
    queue-limit atm-clp Threshold {[ms|us|cells]} Tail-drop-threshold {[ms|us|cells]}

```

## Verifying ATM Layer 2 QoS Configuration: Examples

The following examples show how to display policing results for an ATM interface policy map:

```
show policy-map interface ATM 0/3/0/0.12 input
```

```
ATM 0/3/0/0.12 input: pvc1
```

```

Class class-default
  Classification statistics          (packets/bytes)      (rate - kbps)
  Matched                          :                0/0                0
  Transmitted                       :                0/0                0
  Total Dropped                     :                0/0                0

```

```
show policy-map interface ATM 0/3/0/0.12 output
```

```
ATM 0/3/0/0.12 output: pvc1
```

```

Class class-default
  Classification statistics          (packets/bytes)      (rate - kbps)
  Matched                          :                0/0                0
  Transmitted                       :                0/0                0
  Total Dropped                     :                0/0                0

```

The following examples show how to display the configured QoS properties for an ATM interface policy map:

```
show qos interface atm 0/3/0/0.12 input
```

```
Interface ATM0_3_0_0.12 -- Direction: input
Policy                   :   pvcl
Total number of classes:   1
Cell Packing Criteria = CELL_PACK_TIMER_MTU
-----
LEVEL1 class: classid    = 0x1
class name               = class-default
new exp                  = 6

show qos interface atm 0/3/0/0.12 output

Interface ATM0_3_0_0.12 -- Direction: output
Policy                   :   pvcl
Total number of classes:   1
Cell Packing Criteria = CELL_PACK_TIMER_MTU
-----
LEVEL1 class: classid    = 0x1
class name               = class-default
new exp                  = 6
```

