

Configuring Object Tracking

This module describes the configuration of object tracking on your Cisco IOS XR network. For complete descriptions of the commands listed in this module, see Related Documents, on page 16. To locate documentation for other commands that might appear in the course of performing a configuration task, search online in *Cisco ASR 9000 Series Aggregation Services Router Commands Master List*.

Table	і: геациге пізцогу тай	ie

Table 4. Fasture Illatam Table

Feature Name	Release Information	Description
Enhanced Object Tracking	Release 6.4.2	The Enhanced Object Tracking feature is introduced. The ability to error-disable interfaces is added based on the state of objects that are tracked.
Enhanced Object Tracking	Release 4.2.1	The ability to create a tracked list based on a threshold percentage or weight was added.
Enhanced Object Tracking	Release 4.0.0	This feature was introduced.

This module contains the following topics:

- Prerequisites for Implementing Object Tracking, on page 1
- Information about object tracking, on page 2
- Restrictions for Enhanced Object Tracking, on page 3
- How to Implement Object Tracking, on page 3
- Configure Enhanced Object Tracking, on page 13
- Configuration Examples for Configuring Object Tracking, on page 15
- Additional References, on page 16

Prerequisites for Implementing Object Tracking

You must be in a user group associated with a task group that includes the proper task IDs. The command reference guides include the task IDs required for each command. If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Information about object tracking

Object tracking enables the system to monitor a specific object and perform a client-defined action on another object. The object receiving the action may not have any direct relationship with the tracked object. The system bases these actions on changes in the properties of the tracked object.

- **Boolean AND function** When you assign a Boolean AND function to a tracked list, the system requires every object in the subset to be in the "up" state for the tracked object to be considered "up."
- Boolean OR function When you assign a Boolean OR function to a tracked list, the system requires at least one object in the subset to be in the "up" state for the tracked object to be considered "up."

Assign a tracked object

You can assign each tracked object a **unique name** using the track command in **configuration mode**.

Track process

The tracking process operates as follows:

- Polling: The system periodically polls the tracked object.
- State Monitoring: It detects and reports any changes in the object's state.
- State Values: The tracked object can be in either an "up" or "down" state.
- Polling Timing: Polling occurs either:
 - Immediately, or
 - After a configured delay

Track multiple objects

You can track multiple objects using a list. The system supports flexible combinations using Boolean logic.

Boolean AND Function

- When you assign a Boolean AND function to a tracked list:
 - All objects in the subset must be in the "up" state.
 - This condition sets the tracked object to the "up" state.

Boolean OR Function

- When you assign a Boolean OR function to a tracked list:
 - At least one object in the subset must be in the "up" state.
 - This condition sets the tracked object to the "**up**" state.

Restrictions for Enhanced Object Tracking

- You can perform Enhanced Object Tracking only on physical interfaces and not on virtual interfaces.
- The only action you can perform is error-disabling interfaces based on the state of a track (up/down).
- The maximum number of action interfaces that can be added under a single track is 1024.

How to Implement Object Tracking

This section describes the various object tracking procedures.

Tracking the Line Protocol State of an Interface

Perform this task in global configuration mode to track the line protocol state of an interface.

A tracked object is considered up when a line protocol of the interface is up.

After configuring the tracked object, you may associate the interface whose state should be tracked and specify the number of seconds to wait before the tracking object polls the interface for its state.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- **3.** type line-protocol state
- 4. interface type interface-path-id
- 5. exit
- 6. (Optional) delay {up seconds | down seconds }
- 7. Use one of the following commands:
 - end
 - commit

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example:	
	RP/0/RSP0/CPU0:router# configure	
Step 2	track track-name	Enters track configuration mode.
	Example:	

I

	Command or Action	Purpose
	RP/0/RSP0/CPU0:router(config)# track track1	• <i>track-name</i> —Specifies a name for the object to be tracked.
Step 3	type line-protocol state Example:	Creates a track based on the line protocol of an interface.
	RP/0/RSP0/CPU0:router(config-track)# type line-protocol state	
Step 4	interface type interface-path-id	Specifies the interface to track the protocol state.
	<pre>Example: RP/0/RSP0/CPU0:router(config-track-line-prot)#</pre>	• <i>type</i> —Specifies the interface type. For more information, use the question mark (?) online help function.
	interface atm 0/2/0/0.1	• <i>interface-path-id</i> —Identifies a physical interface or a virtual interface.
		Note Use the show interfaces command to see a list of all possible interfaces currently configured on the router.
		Note The loopback and null interfaces are always in the up state and, therefore, cannot be tracked.
Step 5	exit	Exits the track line protocol configuration mode.
	Example: RP/0/RSP0/CPU0:router(config-track-line-prot)# exit	
Step 6	(Optional) delay {up seconds down seconds } Example:	Schedules the delay that can occur between tracking whether the object is up or down.
	RP/0/RSP0/CPU0:router(config-track)# delay up 10	
Step 7	Use one of the following commands:	Saves configuration changes.
	• end • commit	• When you issue the end command, the system prompts you to commit changes:
	Example: RP/0/RSP0/CPU0:router(config-track)# end	Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:
	<pre>or RP/0/RSP0/CPU0:router(config-track)# commit</pre>	 Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.
		 Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes.

 Command or Action	Purpose
	• Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes.
	• Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Tracking IP Route Reachability

When a host or a network goes down on a remote site, routing protocols notify the router and the routing table is updated accordingly. The routing process is configured to notify the tracking process when the route state changes due to a routing update.

A tracked object is considered up when a routing table entry exists for the route and the route is accessible.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- 3. type route reachability
- **4.** Use one of the following commands:
 - vrf vrf-table-name
 - route ipv4 *IP-prefix/mask*
- 5. exit
- **6.** (Optional) **delay** {**up** seconds | **down** seconds}
- 7. Use the commit or end command.

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example:	
	RP/0/RSP0/CPU0:router# configure	
Step 2	track track-name	Enters track configuration mode.
	Example:	• <i>track-name</i> —Specifies a name for the object to be tracked.
	<pre>RP/0/RSP0/CPU0:router(config)# track track1</pre>	

	Command or Action	Purpose
Step 3	type route reachability Example:	Configures the routing process to notify the tracking process when the state of the route changes due to a routing update.
	RP/0/RSP0/CPU0:router(config-track)# type route reachability vrf internet	
Step 4	Use one of the following commands: • vrf vrf-table-name • route ipv4 IP-prefix/mask Example: RP/0/RSP0/CPU0:router(config-track-route) # vrf vrf-table-4 or RP/0/RSP0/CPU0:router(config-track-route) # route	 Configures the type of IP route to be tracked, which can consist of either of the following, depending on your router type: <i>vrf-table-name</i>—A VRF table name. <i>IP-prefix/mask</i>—An IP prefix consisting of the network and subnet mask (for example, 10.56.8.10/16).
О 4 а и Г	ipv4 10.56.8.10/16	The design of the second
Step 5	<pre>exit Example: RP/0/RSP0/CPU0:router(config-track-line-prot)# exit</pre>	Exits the track line protocol configuration mode.
Step 6	<pre>(Optional) delay {up seconds down seconds} Example: RP/0/RSP0/CPU0:router(config-track) # delay up 10</pre>	Schedules the delay that can occur between tracking whether the object is up or down.
Step 7	Use the commit or end command.	 commit —Saves the configuration changes, and remains within the configuration session. end —Prompts user to take one of these actions: Yes — Saves configuration changes and exits the configuration session. No —Exits the configuration session without committing the configuration changes. Cancel —Remains in the configuration mode, without committing the configuration changes.

Building a Track Based on a List of Objects

Perform this task in the global configuration mode to create a tracked list of objects (which, in this case, are lists of interfaces or prefixes) using a Boolean expression to determine the state of the list.

A tracked list contains one or more objects. The Boolean expression enables two types of calculations by using either AND or OR operators. For example, when tracking two interfaces, using the AND operator, up means that *both* interfaces are up, and down means that *either* interface is down.



Note An object must exist before it can be added to a tracked list.

The NOT operator is specified for one or more objects and negates the state of the object.

After configuring the tracked object, you must associate the interface whose state should be tracked and you may optionally specify the number of seconds to wait before the tracking object polls the interface for its state.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- **3.** type list boolean { and | or }
- 4. object object-name [not]
- 5. exit
- 6. (Optional) delay {up seconds | down seconds }
- 7. Use one of the following commands:
 - end
 - commit

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example:	
	RP/0/RSP0/CPU0:router# configure	
Step 2	track track-name	Enters track configuration mode.
	Example:	 track-name—Specifies a name for the object to be tracked.
	<pre>RP/0/RSP0/CPU0:router(config)# track track1</pre>	
Step 3	type list boolean { and or }	Configures a Boolean list object and enters track list
	Example:	configuration mode.
	RP/0/RSP0/CPU0:router(config-track-list)# type list boolean and	 boolean—Specifies that the state of the tracked list is based on a Boolean calculation. and—Specifies that the list is up if all objects are up, or down if one or more objects are down. For example when tracking two interfaces, up means that both

	Command or Action	Purpose
		 interfaces are up, and down means that either interface is down. or—Specifies that the list is up if at least one object is up. For example, when tracking two interfaces, up means that either interface is up, and down means that both interfaces are down.
Step 4	object object-name [not]	Specifies the object to be tracked by the list
	Example: RP/0/RSP0/CPU0:router(config-track-list)# object 3 not	 <i>obect-name</i>—Name of the object to track. not—Negates the state of the object.
Step 5	exit	Exits the track line protocol configuration mode.
	Example: RP/0/RSP0/CPU0:router(config-track-line-prot)# exit	
Step 6	(Optional) delay {up seconds down seconds } Example:	Schedules the delay that can occur between tracking whether the object is up or down.
	RP/0/RSP0/CPU0:router(config-track)# delay up 10	
Step 7	Use one of the following commands:	Saves configuration changes.
	• end • commit	• When you issue the end command, the system prompts you to commit changes:
	Example: RP/0/RSP0/CPU0:router(config-track)# end	Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:
	<pre>Or RP/0/RSP0/CPU0:router(config-track)# commit</pre>	• Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.
		• Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes.
		• Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes.
		• Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Building a Track Based on a List of Objects - Threshold Percentage

Perform this task in the global configuration mode to create a tracked list of objects (which, in this case, are lists of interfaces or prefixes) using a threshold percentage to determine the state of the list.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- 3. type list threshold percentage
- **4. object** *object-name*
- 5. threshold percentage up percentage down percentage
- **6.** Use one of the following commands:
 - end
 - commit

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure	Enters global configuration mode.
	Example:	
	RP/0/RSP0/CPU0:router# configure	
Step 2	track track-name	Enters track configuration mode.
	Example:	• <i>track-name</i> —Specifies a name for the object to be tracked.
	<pre>RP/0/RSP0/CPU0:router(config)# track track1</pre>	
Step 3	type list threshold percentage	Configures a track of type threshold percentage list.
	Example:	
	RP/0/RSP0/CPU0:router(config-track-list)# type list threshold percentage	
Step 4	object object-name	Configures object 1, object 2, object 3 and object 4 as
	Example:	members of track type track1.
	<pre>RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 1 RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 2</pre>	•
	<pre>RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 3 RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 4</pre>	

	Command or Action	Purpose
Step 5	thresholdpercentage up percentage down percentageExample:	Configures the percentage of objects that need to be UP or DOWN for the list to be considered UP or Down respectively.
	RP/0/RSP0/CPU0:router(config-track-list-threshold)# threshold percentage up 50 down 33	For example, if object 1, object 2, and object 3 are in the UP state and object 4 is in the DOWN state, the list is considered to be in the UP state.
Step 6	Use one of the following commands:	Saves configuration changes.
	• end • commit	• When you issue the end command, the system prompts you to commit changes:
	Example: RP/0/RSP0/CPU0:router(config-track)# end	Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:
	<pre>or RP/0/RSP0/CPU0:router(config-track)# commit</pre>	• Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode.
		• Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes.
		• Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes.
		• Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Building a Track Based on a List of Objects - Threshold Weight

Perform this task in the global configuration mode to create a tracked list of objects (which, in this case, are lists of interfaces or prefixes) using a threshold weight to determine the state of the list.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- 3. type list threshold weight
- 4. object object-name weight weight
- 5. threshold weight up weight down weight
- **6.** Use one of the following commands:
 - end
 - commit

DETAILED STEPS

Procedure

	Command or Action	Purpose	
Step 1	configure	Enters global configuration mode.	
	Example:		
	RP/0/RSP0/CPU0:router# configure		
Step 2	track track-name	Enters track configuration mode.	
	Example:	 track-name—Specifies a name for the object to be tracked. 	
	<pre>RP/0/RSP0/CPU0:router(config)# track track1</pre>		
Step 3	type list threshold weight	Configures a a track of type, threshold weighted list.	
	Example:		
	RP/0/RSP0/CPU0:router(config-track-list)# type list threshold weight		
Step 4	object object-name weight weight	Configures object 1, object 2 and object 3 as members of	
	Example:	track t1 and with weights 10, 5 and 3 respectively.	
	<pre>RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 1 weight 10 RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 2 weight 5 RP/0/RSP0/CPU0:router(config-track-list-threshold)# object 3 weight 3</pre>		
Step 5	threshold weight up weight down weight	Configures the range of weights for the objects that need	
	Example:	to be UP or DOWN for the list to be considered UP or DOWN respectively. In this example, the list is considered	
	RP/0/RSP0/CPU0:router(config-track-list-threshold)# threshold weight up 10 down 5	to be in the DOWN state because objects 1 and 2 are in the UP state and the cumulative weight is 15 (not in the 10-5 range).	
Step 6	Use one of the following commands:	Saves configuration changes.	
	• end • commit	• When you issue the end command, the system prompts you to commit changes:	
	Example:	Uncommitted changes found, commit them	
	RP/0/RSP0/CPU0:router(config-track)# end	<pre>before exiting(yes/no/cancel)? [cancel]:</pre>	
	or	 Entering yes saves configuration changes to the running configuration file, exits the configuration 	
	RP/0/RSP0/CPU0:router(config-track)# commit	session, and returns the router to EXEC mode.	

Command or Action	Purpose
	• Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes.
	• Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes.
	• Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Tracking IPSLA Reachability

Use this task to enable the tracking of the return code of IP service level agreement (SLA) operations.

SUMMARY STEPS

- 1. configure
- 2. track track-name
- 3. type rtr ipsla-no reachability
- 4. Use the commit or end command.

DETAILED STEPS

	Command or Action	Purpose	
Step 1	configure	Enters global configuration mode.	
	Example:		
	RP/0/RSP0/CPU0:router# configure		
Step 2	track track-name	Enters track configuration mode.	
	Example:		
	<pre>RP/0/RSP0/CPU0:router(config)# track t1</pre>		
Step 3	type rtr ipsla-no reachability	Specifies the IP SLA operation ID to be tracked for	
	Example:	reachability. Values for the <i>ipsla-no</i> can range from 1 to 2048	
	<pre>RP/0/RSP0/CPU0:router(config-track)# type rtr 100 reachability</pre>	-0.01	
Step 4	Use the commit or end command.	commit —Saves the configuration changes and remains within the configuration session.	
		end —Prompts user to take one of these actions:	

Command or Action	Purpose
	• Yes — Saves configuration changes and exits the configuration session.
	• No —Exits the configuration session without committing the configuration changes.
	• Cancel —Remains in the configuration session, without committing the configuration changes.

Configuring IPSLA Tracking: Example

This example shows the configuration of IPSLA tracking:

```
RP/0/RSP0/CPU0:router(config)# track track1
RP/0/RSP0/CPU0:router(config-track)# type rtr 1 reachability
RP/0/RSP0/CPU0:router(config-track)# delay up 5
RP/0/RSP0/CPU0:router(config-track)# delay down 10
```

Configure Enhanced Object Tracking

Router (config-track) #action

You can configure tracks with the **action** command to enable Enhanced Object Tracking. As a prerequisite, configure the track type that is to be tracked.

The following example shows how to configure the **action** command on a track based on the change in state of the track:

```
/* Configure track1 to track line-protocol state of the interface FourHundredGigE0/0/0/1
*/
Router#configure
Router(config) #track track1
Router(config-track) #type line-protocol state
Router(config-track-line-prot) #interface FourHundredGigE0/0/0/1
Router(config-track-line-prot) #exit
Router (config-track) #exit
/* Configure track2 to track line-protocol state of the interface FourHundredGigE0/1/0/1
*/
Router(config) #track track2
Router(config-track) #type line-protocol state
Router(config-track-line-prot) #interface FourHundredGigE0/1/0/1
Router(config-track-line-prot) #exit
Router (config-track) #exit
/* Configure track3 with boolean AND of track1 state and track2 state. Specify actions to
take when track3 state changes. */
Router(config) #track track3
Router(config-track) #type list boolean and
Router(config-track-list-boolean) #object track1
Router(config-track-list-boolean) #object track2
Router(config-track-line-boolean) #exit
```

Router(config-track-action)#track-down error-disable interface FourHundredGigE0/0/0/0 auto-recover Router(config-track-action)#track-down error-disable interface FourHundredGigE0/1/0/0

The following running configuration example shows you how to configure the **action** command for the scenario described in Figure 1.

```
track track1
 type line-protocol state
 interface FourHundredGigE0/0/0/1
 Т
!
track track2
type line-protocol state
 interface FourHundredGigE0/1/0/1
 1
T.
track track3
 type list boolean and
 object track1
 object track2
 1
action
 track-down error-disable interface FourHundredGigE0/0/0/0 auto-recover
 track-down error-disable interface FourHundredGigE0/1/0/0
```

Verification

To view the state of the track, use the **show track** command.

Initially, let us assume the line-protocol state of FourHundredGigE0/0/0/1 (track1 interface) and FourHundredGigE0/1/0/1 (track2 interface) are up and HundredGigE0/0/0/35 (track4 interface) is down.

```
Router#show track

Track track3

List boolean and is UP

7 changes, last change 16:04:28 IST Mon Jul 02 2018

object track2 UP

object track1 UP

Track track1

Interface FourHundredGigE0/0/0/1 line-protocol

Line protocol is UP

7 changes, last change 16:04:28 IST Mon Jul 02 2018

Track track2

Interface FourHundredGigE0/1/0/1 line-protocol

Line protocol is UP

7 changes, last change 16:02:41 IST Mon Jul 02 2018
```

To verify if the interface configured for tracking is error-disabled, use the **show error-disable** command. As none of the track states match the track-action state, there are no error-disabled interfaces.

```
Router#show error-disable
Interface Error-Disable reason Retry (s) Time disabled
```

```
There are no interfaces error-disabled matching the given criteria
```

To view the status of all the interfaces of the tracked object, use the **show interface brief** command.

Router #show interface brief Intf Name		LineP State	Encap Type	MTU (byte)	BW (Kbps)
FourHundredGigE0/0/0/0	up	up	ARPA	1514	100000000
FourHundredGigE0/0/0/1	up	up	ARPA	1514	100000000

FourHundredGigE0/1/0/0	up	up	ARPA	1514	10000000
FourHundredGigE0/1/0/1	up	up	ARPA	1514	10000000

When a track state changes, the corresponding track action happens and the status of the interfaces configured in the action changes. The state of track3 becomes "down" when either track1 state or track2 state becomes "down". The following **show error-disable** command displays the corresponding output.

Router#show error-	uter# show error-disable		
Interface	Error-Disable reason	Retry (s)	Time disabled
FH0/0/0/0	ot-track-state-change		08:42:08
FH0/1/0/0	ot-track-state-change		08:42:01

When the state of track3 is "down", the show interface brief command displays the following output.

Router#show interface brief				
Intf Name	Intf State	LineP State	Encap Type 🛛 🛚	MTU (byte)
BW (Kbps)				
FourHundredGigE0/0/0/0	admin-down	admin-down	ARPA	1514
10000000				
FourHundredGigE0/0/0/1	admin-down	admin-down	ARPA	1514
10000000				
FourHundredGigE0/1/0/0	admin-down	admin-down	ARPA	1514
10000000				
FourHundredGigE0/1/0/1	up	up	ARPA	1514
10000000				

When track3 state comes back up, the error-disable status on the interface FourHundredGigE0/0/0/0 clears. This is because of the **auto-recover** configuration for FourHundredGigE0/0/0/0. However, interface FourHundredGigE0/1/0/0 remains in the error-disable status because **auto-recover** isn't configured on this interface.

The change reflects in the output of the show interface brief command.

RP/0/0/CPU0:ios# show inte Intf Name		LineP State	Encap Type	MTU (byte)	BW (Kbps)
FourHundredGigE0/0/0/0	up	up	ARPA	1514	100000000
FourHundredGigE0/0/0/1	up	up	ARPA	1514	100000000
FourHundredGigE0/1/0/0	err-disable	admin-down	ARPA	1514	100000000
FourHundredGigE0/1/0/1	up	up	ARPA	1514	100000000

Configuration Examples for Configuring Object Tracking

Configuring IPSLA Tracking: Example

This example shows the configuration of IPSLA tracking, including the ACL and IPSLA configuration:

ACL configuration:

```
RP/0/RSP0/CPU0:router(config)# ipv4 access-list abf-track
RP/0/RSP0/CPU0:router(config-ipv4-acl)# 10 permit any any nexthop track track1 1.2.3.4
```

Object tracking configuration:

```
RP/0/RSP0/CPU0:router(config)# track track1
RP/0/RSP0/CPU0:router(config-track)# type rtr 1 reachability
```

RP/0/RSP0/CPU0:router(config-track)# delay up 5
RP/0/RSP0/CPU0:router(config-track)# delay down 10

IPSLA configuration:

```
RP/0/RSP0/CPU0:router(config)# ipsla
RP/0/RSP0/CPU0:router(config-ipsla)# operation 1
RP/0/RSP0/CPU0:router(config-ipsla-op)# type icmp echo
RP/0/RSP0/CPU0:router(config-ipsla-icmp-echo)# source address 2.3.4.5
RP/0/RSP0/CPU0:router(config-ipsla-icmp-echo)# destination address 1.2.3.4
RP/0/RSP0/CPU0:router(config-ipsla-icmp-echo)# frequency 60
RP/0/RSP0/CPU0:router(config-ipsla-icmp-echo)# exit
RP/0/RSP0/CPU0:router(config-ipsla-op)# exit
RP/0/RSP0/CPU0:router(config-ipsla-op)# exit
RP/0/RSP0/CPU0:router(config-ipsla)# schedule operation 1
RP/0/RSP0/CPU0:router(config-ipsla-sched)# start-time now
RP/0/RSP0/CPU0:router(config-ipsla-sched)# life forever
```

Additional References

The following sections provide references related to implementing object tracking for IPSec network security.

Related Topic	Document Title
IP SLA configuration information	Implementing IP Service Level Agreements on the Cisco ASR 9000 Series Router module in System Monitoring Configuration Guide for Cisco ASR 9000 Series Routers
IP SLA commands	IP Service Level Agreement Commands on the Cisco ASR 9000 Series Router module in System Monitoring Command Reference for Cisco ASR 9000 Series Routers
Object tracking commands	Object Tracking Commands on the Cisco ASR 9000 Series Router module in System Management Command Reference for Cisco ASR 9000 Series Routers

Related Documents

Standards

Standards	Tide
No new or modified standards are supported by this feature, and support for existing standards has not	—
been modified by this feature.	

MIBs

MBs	MIBs Link
	To locate and download MIBs using Cisco IOS XR software, use the Cisco MIB Locator found at the following URL and choose a platform under the Cisco Access Products menu: http://cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml

RFCs

R	FCs	Title
	FC 401	Security Architecture for the Internet Protocol

Technical Assistance

Description	Link
The Cisco Technical Support website contains thousands of pages of searchable technical content, including links to products, technologies, solutions, technical tips, and tools. Registered Cisco.com users can log in from this page to access even more content.	http://www.cisco.com/cisco/web/support/index.html

I