



# Management Plane Protection Commands

---

This module describes the commands used to configure management plane protection (MPP).

For detailed information about keychain management concepts, configuration tasks, and examples, see the *Implementing Management Plane Protection on the Cisco ASR 9000 Series Router* module in the *System Security Configuration Guide for Cisco ASR 9000 Series Routers* .

- [address ipv4 \(MPP\)](#), on page 2
- [address ipv6 \(MPP\)](#), on page 4
- [allow](#), on page 6
- [control-plane](#), on page 8
- [inband](#), on page 9
- [interface \(MPP\)](#), on page 11
- [management-plane](#), on page 13
- [out-of-band](#), on page 14
- [show mgmt-plane](#), on page 16
- [vrf \(MPP\)](#), on page 18

## address ipv4 (MPP)

To configure the peer IPv4 address in which management traffic is allowed on the interface, use the **address ipv4** command in interface peer configuration mode. To remove the IP address that was previously configured on this interface, use the **no** form of this command.

```
address ipv4 {peer-ip-address | peer-ip-address / length}
no address ipv4 {peer-ip-address | peer-ip-address / length}
```

Syntax Description	<i>peer-ip-address</i>	Peer IPv4 address in which management traffic is allowed on the interface. This address can effectively be the source address of the management traffic that is coming in on the configured interface.
	<i>peer ip-address/length</i>	Prefix of the peer IPv4 address. • IPv4— <i>A.B.C.D/length</i>

**Command Default** If no specific peer is configured, all peers are allowed.

**Command Modes** Interface peer configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	system	read, write

### Examples

The following example shows how to configure the peer IPv4 address 10.1.0.0 with a prefix of 16 for management traffic:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
RP/0/RSP0/CPU0:router(config-ctrl)# management-plane
RP/0/RSP0/CPU0:router(config-mpp)# inbandout-of-band
RP/0/RSP0/CPU0:router(config-mpp-inbandoutband)# interface GigabitEthernet POS 0/16/10/12
RP/0/RSP0/CPU0:router(config-mpp-inbandoutband-GigabitEthernet0_1_1_POS0_6_0_2)# allow
Telnet TFTP peer
RP/0/RSP0/CPU0:router(config-telnettftp-peer)# address ipv4 10.1.0.0/16ipv6 33::33
```

Related Commands	Command	Description
	<a href="#">address ipv6 (MPP), on page 4</a>	Configures the peer IPv6 address in which management traffic is allowed on the interface.
	<a href="#">allow, on page 6</a>	Configures an interface as an inband or out-of-band interface to allow all peer addresses for a specified protocol or all protocols.
	<a href="#">control-plane, on page 8</a>	Configures the control plane.
	<a href="#">inband, on page 9</a>	Configures an inband interface or protocol.
	<a href="#">interface (MPP), on page 11</a>	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.
	<a href="#">management-plane, on page 13</a>	Configures management plane protection to allow and disallow protocols.
	<a href="#">out-of-band, on page 14</a>	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
	<a href="#">show mgmt-plane, on page 16</a>	Displays the management plane.

## address ipv6 (MPP)

To configure the peer IPv6 address in which management traffic is allowed on the interface, use the **address ipv6** command in interface peer configuration mode. To remove the IP address that was previously configured on this interface, use the **no** form of this command.

```
address ipv6 {peer-ip-address | peer-ip-address/length}
```

Syntax Description		
	<i>peer-ip-address</i>	Peer IPv6 address in which management traffic is allowed on the interface. This address can effectively be the source address of the management traffic that is coming in on the configured interface.
	<i>peer ip-address/length</i>	Prefix of the peer IPv6 address.

**Command Default** If no specific peer is configured, all peers are allowed.

**Command Modes** Interface peer configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task Operations
	system read, write

**Examples** The following example shows how to configure the peer IPv6 address 33::33 for management traffic:

```
RR/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
RP/0/RSP0/CPU0:router(config-ctrl)# management-plane
RP/0/RSP0/CPU0:router(config-mpp)# out-of-band
RP/0/RSP0/CPU0:router(config-mpp-outband)# interface
GigabitEthernet 0/1/1/2

RP/0/RSP0/CPU0:router(config-mpp-outband-GigabitEthernet0_1_1_2)# allow TFTP peer
RP/0/RSP0/CPU0:router(config-tftp-peer)# address ipv6 33::33
```

Related Commands	Command	Description
	<a href="#">address ipv4 (MPP), on page 2</a>	Configures the peer IPv4 address in which management traffic is allowed on the interface.
	<a href="#">allow, on page 6</a>	Configures an interface as an inband or out-of-band interface to allow all peer addresses for a specified protocol or all protocols.
	<a href="#">control-plane, on page 8</a>	Configures the control plane.
	<a href="#">inband, on page 9</a>	Configures an inband interface or protocol.
	<a href="#">interface (MPP), on page 11</a>	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.
	<a href="#">management-plane, on page 13</a>	Configures management plane protection to allow and disallow protocols.
	<a href="#">out-of-band, on page 14</a>	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
	<a href="#">show mgmt-plane, on page 16</a>	Displays the management plane.

# allow

To configure an interface as an inband or out-of-band interface to allow all peer addresses for a specified protocol or all protocols, use the **allow** command in management plane protection inband interface configuration mode or management plane protection out-of-band interface configuration. To disallow a protocol on an interface, use the **no** form of this command.

**allow** {*protocol* | **all**} [**peer**]  
**no allow** {*protocol* | **all**} [**peer**]

## Syntax Description

*protocol* Interface configured to allow peer-filtering for the following specified protocol's traffic:

- HTTP(S)
- SNMP (also versions)
- Secure Shell (v1 and v2)
- TFTP
- Telnet
- XML

**all** Configures the interface to allow peer-filtering for all the management traffic that is specified in the list of protocols.

**peer** (Optional) Configures the peer address on the interface. Peer refers to the neighboring router interface in which traffic might arrive to the main router.

## Command Default

By default, no management protocol is allowed on any interface except the management interfaces.

## Command Modes

Management plane protection inband interface configuration

## Command History

Release	Modification
Release 3.7.2	This command was introduced.
Release 4.0.0	The XML keyword was added.

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

If you permit or allow a specific protocol to an interface, traffic is allowed only for that protocol, and all other management traffic is dropped.

After you configure the interface as inband or out-of-band, the specified protocol's traffic, or all protocol traffic, is allowed on the interface. Interfaces that are not configured as inband or out-of-band interfaces, drop the protocol traffic.

The IOS XR XML API provides a programmatic interface to the router for use by external management applications. This interface provides a mechanism for router configuration and monitoring utilizing XML formatted request and response streams. As one of the management services, XML should be capable of applying MPP. To secure XML MPP data, XML keyword has been added to the command.

Task ID	Task ID	Operations
	system	read, write

### Examples

The following example shows how to configure all management protocols for all inband interfaces:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
RP/0/RSP0/CPU0:router(config-ctrl)# management-plane
RP/0/RSP0/CPU0:router(config-mpp)# inband
RP/0/RSP0/CPU0:router(config-mpp-inband)# interface all
RP/0/RSP0/CPU0:router(config-mpp-inband-all)# allow all
```

The following example shows how to configure peer interface for the TFTP protocol for out-of-band interfaces:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
RP/0/RSP0/CPU0:router(config-ctrl)# management-plane
RP/0/RSP0/CPU0:router(config-mpp)# out-of-band
RP/0/RSP0/CPU0:router(config-mpp-outband)# interface GigabitEthernet 0/1/1/2
RP/0/RSP0/CPU0:router(config-mpp-outband-GigabitEthernet0_1_1_2)# allow TFTP peer
RP/0/RSP0/CPU0:router(config-tftp-peer)#
```

The following example shows how to configure MPP support on an XML peer in-band interface:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
RP/0/RSP0/CPU0:router(config-ctrl)# management-plane
RP/0/RSP0/CPU0:router(config-ctrl-mpp)# inband interface all allow xml peer address ipv4
172.10.10.1
```

Related Commands	Command	Description
	<a href="#">control-plane, on page 8</a>	Configures the control plane.
	<a href="#">inband, on page 9</a>	Configures an inband interface or protocol.
	<a href="#">interface (MPP), on page 11</a>	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.
	<a href="#">management-plane, on page 13</a>	Configures management plane protection to allow and disallow protocols.
	<a href="#">out-of-band, on page 14</a>	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
	<a href="#">show mgmt-plane, on page 16</a>	Displays the management plane.

# control-plane

To enter the control plane configuration mode, use the **control-plane** command. To disable all the configurations under control plane mode, use the **no** form of this command.

**control-plane**  
**no control-plane**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Global configuration mode

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **control-plane** command to enter control plane configuration mode.

Task ID	Task ID	Operations
	system	read, write

**Examples** The following example shows how to enter control plane configuration mode using the **control-plane** command:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
RP/0/RSP0/CPU0:router(config-ctrl)#
```

Related Commands	Command	Description
	<a href="#">management-plane, on page 13</a>	Configures management plane protection to allow and disallow protocols.



# inband

To configure an inband interface and to enter management plane protection inband configuration mode, use the **inband** command in management plane protection configuration mode. To disable all configurations under inband configuration mode, use the **no** form of this command.

**inband**  
**no inband**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Management plane protection configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **inband** command to enter management plane protection inband configuration mode.

Task ID	Task ID	Operations
	system	read, write

## Examples

The following example shows how to enter management plane protection inband configuration mode using the **inband** command:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
RP/0/RSP0/CPU0:router(config-ctrl)# management-plane
RP/0/RSP0/CPU0:router(config-mpp)# inband
RP/0/RSP0/CPU0:router(config-mpp-inband)#
```

## Related Commands

Command	Description
<a href="#">control-plane, on page 8</a>	Configures the control plane.
<a href="#">interface (MPP), on page 11</a>	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.
<a href="#">management-plane, on page 13</a>	Configures management plane protection to allow and disallow protocols.

Command	Description
<a href="#">out-of-band, on page 14</a>	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
<a href="#">show mgmt-plane, on page 16</a>	Displays the management plane.

## interface (MPP)

To configure a specific interface or all interfaces as an inband or out-of-band interface, use the **interface** command in management plane protection inband configuration mode or management plane protection out-of-band configuration mode. To disable all the configurations under an interface mode, use the **no** form of this command.

```
interface {type interface-path-id | all}
no interface {type interface-path-id | all}
```

Syntax Description	<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
	<i>interface-path-id</i>	Virtual interface instance. Number range varies depending on interface type.
	<b>Note</b>	Use the <b>show interfaces</b> command in EXEC mode to see a list of all interfaces currently configured on the router.
		For more information about the syntax for the router, use the question mark (?) online help function.
	<b>all</b>	Configures all interfaces to allow for management traffic.

**Command Default** None

**Command Modes** Management plane protection out-of-band configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **interface** command to enter management plane protection inband interface configuration mode or management plane protection out-of-band interface configuration mode.

For the *instance* argument, you cannot configure Management Ethernet interfaces as inband interfaces.

Task ID	Task ID	Operations
	system	read, write

### Examples

The following example shows how to configure all inband interfaces for MPP:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
```

```
RP/0/RSP0/CPU0:router(config-ctrl)# management-plane
RP/0/RSP0/CPU0:router(config-mpp)# inband
RP/0/RSP0/CPU0:router(config-mpp-inband)# interface all
RP/0/RSP0/CPU0:router(config-mpp-inband-all)#
```

The following example shows how to configure all out-of-band interfaces for MPP:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
RP/0/RSP0/CPU0:router(config-ctrl)# management-plane
RP/0/RSP0/CPU0:router(config-mpp)# out-of-band
RP/0/RSP0/CPU0:router(config-mpp-outband)# interface all
RP/0/RSP0/CPU0:router(config-mpp-outband-all)#
```

#### Related Commands

Command	Description
<a href="#">allow, on page 6</a>	Configures an interface as an inband or out-of-band interface to allow all peer addresses for a specified protocol or all protocols.
<a href="#">control-plane, on page 8</a>	Configures the control plane.
<a href="#">inband, on page 9</a>	Configures an inband interface or protocol.
<a href="#">management-plane, on page 13</a>	Configures management plane protection to allow and disallow protocols.
<a href="#">out-of-band, on page 14</a>	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
<a href="#">show mgmt-plane, on page 16</a>	Displays the management plane.

# management-plane

To configure management plane protection to allow and disallow protocols, use the **management-plane** command in control plane configuration mode. To disable all configurations under management-plane mode, use the **no** form of this command.

**management-plane**  
**no management-plane**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Control plane configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **management-plane** command to enter the management plane protection configuration mode.

Task ID	Task ID	Operations
	system	read, write

## Examples

The following example shows how to enter management plane protection configuration mode using the **management-plane** command:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
RP/0/RSP0/CPU0:router(config-ctrl)# management-plane
RP/0/RSP0/CPU0:router(config-mpp)#
```

# out-of-band

To configure out-of-band interfaces or protocols and to enter management plane protection out-of-band configuration mode, use the **out-of-band** command in management plane protection configuration mode. To disable all configurations under management plane protection out-of-band configuration mode, use the **no** form of this command.

**out-of-band**  
**no out-of-band**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Management plane protection out-of-band configuration

Command History	Release	Modification
	Release 3.7.2	This command was introduced.

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Use the **out-of-band** command to enter management plane protection out-of-band configuration mode.

*Out-of-band* refers to an interface that allows only management protocol traffic to be forwarded or processed. An *out-of-band management interface* is defined by the network operator to specifically receive network management traffic. The advantage is that forwarding (or customer) traffic cannot interfere with the management of the router.

Task ID	Task ID	Operations
	system	read, write

## Examples

The following example shows how to enter management plane protection out-of-band configuration mode using the **out-of-band** command:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# control-plane
RP/0/RSP0/CPU0:router(config-ctrl)# management-plane
RP/0/RSP0/CPU0:router(config-mpp)# out-of-band
RP/0/RSP0/CPU0:router(config-mpp-outband)#
```

## Related Commands

Command	Description
<a href="#">control-plane, on page 8</a>	Configures the control plane.

Command	Description
<a href="#">inband, on page 9</a>	Configures an inband interface or protocol.
<a href="#">interface (MPP), on page 11</a>	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.
<a href="#">management-plane, on page 13</a>	Configures management plane protection to allow and disallow protocols.
<a href="#">show mgmt-plane, on page 16</a>	Displays the management plane.
<a href="#">vrf (MPP), on page 18</a>	Configures a Virtual Private Network (VPN) routing and forwarding (VRF) reference of an out-of-band interface.

## show mgmt-plane

To display information about the management plane such as type of interface and protocols enabled on the interface, use the **show mgmt-plane** command.

**show mgmt-plane** [{inband | out-of-band}] [{interface type interface-path-id | vrf}]

### Syntax Description

inband	(Optional) Displays the inband management interface configurations that are the interfaces that process management packets as well as data-forwarding packets. An inband management interface is also called a <i>shared management interface</i> .
out-of-band	(Optional) Displays the out-of-band interface configurations. Out-of-band interfaces are defined by the network operator to specifically receive network management traffic.
interface	(Optional) Displays all the protocols that are allowed in the specified interface.
type	Interface type. For more information, use the question mark (?) online help function.
interface-path-id	Interface instance. Number range varies depending on interface type.  <b>Note</b> Use the <b>show interfaces</b> command to see a list of all interfaces currently configured on the router.  For more information about the syntax for the router, use the question mark (?) online help function.
vrf	(Optional) Displays the Virtual Private Network (VPN) routing and forwarding reference of an out-of-band interface.

### Command Default

None

### Command Modes

EXEC

### Command History

Release	Modification
Release 3.7.2	This command was introduced.

### Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **vrf** keyword is valid only for out-of-band VRF configurations.

### Task ID

Task ID	Operations
system	read



**Examples**

The following sample output displays all the interfaces that are configured as inband or out-of-band interfaces under MPP:

```
RP/0/RSP0/CPU0:router# show mgmt-plane

Management Plane Protection

inband interfaces
-----

interface - GigabitEthernet0_1_1_0
  ssh configured -
    All peers allowed
  telnet configured -
    peer v4 allowed - 10.1.0.0/16
  all configured -
    All peers allowed
interface - GigabitEthernet0_1_1_0
  telnet configured -
    peer v4 allowed - 10.1.0.0/16

interface - all
  all configured -
    All peers allowed

outband interfaces
-----
interface - GigabitEthernet0_1_1_0
  tftp configured -
    peer v6 allowed - 33::33
```

The following sample output displays the Virtual Private Network (VPN) routing and forwarding (VRF) reference of an out-of-band interface:

```
RP/0/RSP0/CPU0:router# show mgmt-plane out-of-band vrf

Management Plane Protection -
  out-of-band VRF - my_out_of_band
```

**Related Commands**

Command	Description
<a href="#">management-plane, on page 13</a>	Configures management plane protection to allow and disallow protocols.

## vrf (MPP)

To configure a Virtual Private Network (VPN) routing and forwarding (VRF) reference of an out-of-band interface, use the **vrf** command in management plane protection out-of-band configuration mode. To remove the VRF definition before the VRF name is used, use the **no** form of this command.

**vrf** *vrf-name*  
**no vrf** *vrf-name*

<b>Syntax Description</b>	<i>vrf-name</i> Name assigned to a VRF.				
<b>Command Default</b>	The VRF concept must be used to configure interfaces as out-of-band. If no VRF is configured during an out-of-band configuration, the interface goes into a default VRF.				
<b>Command Modes</b>	Management plane protection out-of-band configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.7.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.7.2	This command was introduced.
Release	Modification				
Release 3.7.2	This command was introduced.				
<b>Usage Guidelines</b>	<p>To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.</p> <p>If the VRF reference is not configured, the default name MPP_OUTBAND_VRF is used.</p> <p>If there is an out-of-band configuration that is referring to a VRF and the VRF is deleted, all the MPP bindings are removed.</p>				
<b>Task ID</b>	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>system</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	system	read
Task ID	Operations				
system	read				
<b>Examples</b>	<p>The following example shows how to configure the VRF:</p> <pre>RP/0/RSP0/CPU0:router# configure RP/0/RSP0/CPU0:router(config)# vrf my_out_of_band RP/0/RSP0/CPU0:router(config-vrf)# address-family ipv4 unicast RP/0/RSP0/CPU0:router(config-vrf-af)# exit RP/0/RSP0/CPU0:router(config-vrf)# address-family ipv6 unicast RP/0/RSP0/CPU0:router(config-vrf-af)# commit RP/0/RSP0/CPU0:router(config-vrf-af)# end RP/0/RSP0/CPU0:router#</pre> <p>The following example shows how to configure the VRF definition for MPP:</p> <pre>RP/0/RSP0/CPU0:router# configure RP/0/RSP0/CPU0:router(config)# control-plane RP/0/RSP0/CPU0:router(config-ctrl)# management-plane</pre>				

```
RP/0/RSP0/CPU0:router(config-mpp)# out-of-band
RP/0/RSP0/CPU0:router(config-mpp-outband)# vrf my_out_of_band
```

**Related Commands**

Command	Description
<a href="#">control-plane, on page 8</a>	Configures the control plane.
<a href="#">interface (MPP), on page 11</a>	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.
<a href="#">management-plane, on page 13</a>	Configures management plane protection to allow and disallow protocols.
<a href="#">out-of-band, on page 14</a>	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
<a href="#">show mgmt-plane, on page 16</a>	Displays the management plane.

