



# Process Health Monitoring

---

This chapter describes how to manage and monitor the health of various components of your device. It contains the following sections:

- [Monitoring Control Plane Resources, on page 1](#)
- [Monitoring Hardware Using Alarms, on page 5](#)

## Monitoring Control Plane Resources

The following sections explain the of memory and CPU monitoring from the perspective of the Cisco IOS process and the overall control plane:

- [Avoiding Problems Through Regular Monitoring, on page 1](#)
- [Cisco IOS Process Resources, on page 2](#)
- [Overall Control Plane Resources, on page 3](#)

## Avoiding Problems Through Regular Monitoring

Processes should provide monitoring and notification of their status/health to ensure correct operation. When a process fails, a syslog error message is displayed and either the process is restarted or the device is rebooted. A syslog error message is displayed when a monitor detects that a process is stuck or has crashed. If the process can be restarted, it is restarted; else, the device is restarted.

Monitoring system resources enables you to detect potential problems before they occur, thus avoiding outages. The following are the advantages of regular monitoring:

- Lack of memory on line cards that are in operation for a few years can lead to major outages. Monitoring memory usage helps to identify memory issues in the line cards and enables you to prevent an outage.
- Regular monitoring establishes a baseline for a normal system load. You can use this information as a basis for comparison when you upgrade hardware or software—to see if the upgrade has affected resource usage.

## Cisco IOS Process Resources

You can view CPU utilization statistics on active processes and see the amount of memory being used in these processes using the **show memory** command and the **show process cpu** command. These commands provide a representation of memory and CPU utilization from the perspective of only the Cisco IOS process; they do not include information for resources on the entire platform. For example, when the **show memory** command is used in a system with 8 GB RAM running a single Cisco IOS process, the following memory usage is displayed:

```
Router# show memory
Tracekey : 1#08d3ff66f05826cb63fb2b7325fcbcd0

          Head      Total (b)      Used (b)      Free (b)      Lowest (b)      Largest (b)
Processor 7FB733EC4048 3853903068 193512428 3660390640 707918492 3145727908
reserve P 7FB733EC40A0 102404      92          102312      102312      102312
lsmapi_io 7FB7320C11A8 6295128    6294304    824         824         412
Dynamic heap limit(MB) 3000      Use(MB) 0
```

The **show process cpu** command displays Cisco IOS CPU utilization average:

```
Router# show process cpu
CPU utilization for five seconds: 1%/0%; one minute: 1%; five minutes: 1%
PID Runtime(ms)      Invoked      uSecs      5Sec      1Min      5Min TTY Process
  1         1         14         71 0.00% 0.00% 0.00% 0 Chunk Manager
  2        127         872        145 0.00% 0.00% 0.00% 0 Load Meter
  3         0         1         0 0.00% 0.00% 0.00% 0 Policy bind Proc
  4         0         1         0 0.00% 0.00% 0.00% 0 Retransmission o
  5         0         1         0 0.00% 0.00% 0.00% 0 IPC ISSU Dispatc
  6         11         13         846 0.00% 0.00% 0.00% 0 RF Slave Main Th
  7         0         1         0 0.00% 0.00% 0.00% 0 EDDRI_MAIN
  8         0         1         0 0.00% 0.00% 0.00% 0 RO Notify Timers
  9        1092         597        1829 0.00% 0.01% 0.00% 0 Check heaps
 10         8         73        109 0.00% 0.00% 0.00% 0 Pool Manager
 11         0         1         0 0.00% 0.00% 0.00% 0 DiscardQ Backgro
 12         0         2         0 0.00% 0.00% 0.00% 0 Timers
 13         0         32         0 0.00% 0.00% 0.00% 0 WATCH_AFS
 14         0         1         0 0.00% 0.00% 0.00% 0 MEMLEAK PROCESS
 15        1227        40758        30 0.00% 0.02% 0.00% 0 ARP Input
 16         41        4568         8 0.00% 0.00% 0.00% 0 ARP Background
 17         0         2         0 0.00% 0.00% 0.00% 0 ATM Idle Timer
 18         0         1         0 0.00% 0.00% 0.00% 0 ATM ASYNC PROC
 19         0         1         0 0.00% 0.00% 0.00% 0 CEF MIB API
 20         0         1         0 0.00% 0.00% 0.00% 0 AAA_SERVER_DEADT
 21         0         1         0 0.00% 0.00% 0.00% 0 Policy Manager
 22         0         2         0 0.00% 0.00% 0.00% 0 DDR Timers
 23         60         23        2608 0.00% 0.00% 0.00% 0 Entity MIB API
 24         43         45         955 0.00% 0.00% 0.00% 0 PrstVbl
 25         0         2         0 0.00% 0.00% 0.00% 0 Serial Backgroun
 26         0         1         0 0.00% 0.00% 0.00% 0 RMI RM Notify Wa
 27         0         2         0 0.00% 0.00% 0.00% 0 ATM AutoVC Perio
 28         0         2         0 0.00% 0.00% 0.00% 0 ATM VC Auto Crea
 29         30        2181         13 0.00% 0.00% 0.00% 0 IOSXE heartbeat
 30         1         9        111 0.00% 0.00% 0.00% 0 Btrace time base
 31         5         182         27 0.00% 0.00% 0.00% 0 DB Lock Manager
 32         16        4356         3 0.00% 0.00% 0.00% 0 GraphIt
 33         0         1         0 0.00% 0.00% 0.00% 0 DB Notification
 34         0         1         0 0.00% 0.00% 0.00% 0 IPC Apps Task
 35         0         1         0 0.00% 0.00% 0.00% 0 ifIndex Receive
 36         4         873         4 0.00% 0.00% 0.00% 0 IPC Event Notifi
 37         49        4259        11 0.00% 0.00% 0.00% 0 IPC Mcast Pendin
 38         0         1         0 0.00% 0.00% 0.00% 0 Platform appsess
 39         2         73         27 0.00% 0.00% 0.00% 0 IPC Dynamic Cach
 40         5         873         5 0.00% 0.00% 0.00% 0 IPC Service NonC
```

41	0	1	0	0.00%	0.00%	0.00%	0	IPC Zone Manager
42	38	4259	8	0.00%	0.00%	0.00%	0	IPC Periodic Tim
43	18	4259	4	0.00%	0.00%	0.00%	0	IPC Deferred Por
44	0	1	0	0.00%	0.00%	0.00%	0	IPC Process leve
45	0	1	0	0.00%	0.00%	0.00%	0	IPC Seat Manager
46	3	250	12	0.00%	0.00%	0.00%	0	IPC Check Queue
47	0	1	0	0.00%	0.00%	0.00%	0	IPC Seat RX Cont
48	0	1	0	0.00%	0.00%	0.00%	0	IPC Seat TX Cont
49	22	437	50	0.00%	0.00%	0.00%	0	IPC Keep Alive M
50	25	873	28	0.00%	0.00%	0.00%	0	IPC Loadometer
51	0	1	0	0.00%	0.00%	0.00%	0	IPC Session Deta
52	0	1	0	0.00%	0.00%	0.00%	0	SENSOR-MGR event
53	2	437	4	0.00%	0.00%	0.00%	0	Compute SRP rate

## Overall Control Plane Resources

Control plane memory and CPU utilization on each control processor allows you to keep a tab on the overall control plane resources. You can use the **show platform resources** command to monitor the overall system health and resource usage for the IOS XE platforms. Also, you can use the **show platform software status control-processor brief** command (summary view) or the **show platform software status control-processor** command (detailed view) to view control plane memory and CPU utilization information.

All control processors should show status, Healthy. Other possible status values are Warning and Critical. Warning indicates that the device is operational, but that the operating level should be reviewed. Critical implies that the device is nearing failure.

If you see a Warning or Critical status, take the following actions:

- Reduce the static and dynamic loads on the system by reducing the number of elements in the configuration or by limiting the capacity for dynamic services.
- Reduce the number of routes and adjacencies, limit the number of ACLs and other rules, reduce the number of VLANs, and so on.

The following sections describe the fields in the **show platform software status control-processor** command output.

### Load Average

Load average represents the process queue or process contention for CPU resources. For example, on a single-core processor, an instantaneous load of 7 would mean that seven processes are ready to run, one of which is currently running. On a dual-core processor, a load of 7 would mean that seven processes are ready to run, two of which are currently running.

### Memory Utilization

Memory utilization is represented by the following fields:

- Total—Total line card memory
- Used—Consumed memory
- Free—Available memory
- Committed—Virtual memory committed to processes

## CPU Utilization

CPU utilization is an indication of the percentage of time the CPU is busy, and is represented by the following fields:

- CPU—Allocated processor
- User—Non-Linux kernel processes
- System—Linux kernel process
- Nice—Low-priority processes
- Idle—Percentage of time the CPU was inactive
- IRQ—Interrupts
- SIRQ—System Interrupts
- IOWait—Percentage of time CPU was waiting for I/O

### Example: show platform software status control-processor Command

The following are some examples of using the **show platform software status control-processor** command:

```
Router# show platform software status control-processor
RP0: online, statistics updated 3 seconds ago
RP0: online, statistics updated 5 seconds ago
Load Average: healthy
  1-Min: 1.35, status: healthy, under 9.30
  5-Min: 1.06, status: healthy, under 9.30
 15-Min: 1.02, status: healthy, under 9.30
Memory (kb): healthy
  Total: 7768456
  Used: 2572568 (33%), status: healthy
  Free: 5195888 (67%)
  Committed: 3112968 (40%), under 90%
Per-core Statistics
CPU0: CPU Utilization (percentage of time spent)
  User: 3.00, System: 2.40, Nice: 0.00, Idle: 94.60
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU1: CPU Utilization (percentage of time spent)
  User: 0.00, System: 0.00, Nice: 0.00, Idle:100.00
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU2: CPU Utilization (percentage of time spent)
  User: 0.00, System: 0.00, Nice: 0.00, Idle:100.00
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU3: CPU Utilization (percentage of time spent)
  User: 0.00, System: 0.00, Nice: 0.00, Idle:100.00
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU4: CPU Utilization (percentage of time spent)
  User: 7.30, System: 1.70, Nice: 0.00, Idle: 91.00
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU5: CPU Utilization (percentage of time spent)
  User: 3.30, System: 1.50, Nice: 0.00, Idle: 95.20
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU6: CPU Utilization (percentage of time spent)
  User: 17.91, System: 11.81, Nice: 0.00, Idle: 70.27
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU7: CPU Utilization (percentage of time spent)
  User: 11.91, System: 13.31, Nice: 0.00, Idle: 74.77
```

```

IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU8: CPU Utilization (percentage of time spent)
  User: 2.70, System: 2.00, Nice: 0.00, Idle: 95.30
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU9: CPU Utilization (percentage of time spent)
  User: 0.00, System: 0.00, Nice: 0.00, Idle:100.00
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU10: CPU Utilization (percentage of time spent)
  User: 0.00, System: 0.00, Nice: 0.00, Idle:100.00
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU11: CPU Utilization (percentage of time spent)
  User: 0.00, System: 0.00, Nice: 0.00, Idle:100.00
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00

```

```
Router# show platform software status control-processor brief
```

```
Load Average
```

```
Slot Status 1-Min 5-Min 15-Min
RP0 Healthy 1.14 1.07 1.02
```

```
Memory (kB)
```

```
Slot Status Total Used (Pct) Free (Pct) Committed (Pct)
RP0 Healthy 7768456 2573416 (33%) 5195040 (67%) 3115096 (40%)
```

```
CPU Utilization
```

Slot	CPU	User	System	Nice	Idle	IRQ	SIRQ	IOWait
RP0	0	2.80	1.80	0.00	95.39	0.00	0.00	0.00
	1	0.00	0.00	0.00	100.00	0.00	0.00	0.00
	2	0.00	0.00	0.00	100.00	0.00	0.00	0.00
	3	0.00	0.00	0.00	100.00	0.00	0.00	0.00
	4	6.80	1.80	0.00	91.39	0.00	0.00	0.00
	5	3.20	1.60	0.00	95.19	0.00	0.00	0.00
	6	16.30	12.60	0.00	71.10	0.00	0.00	0.00
	7	12.40	13.70	0.00	73.90	0.00	0.00	0.00
	8	2.40	2.40	0.00	95.19	0.00	0.00	0.00
	9	0.00	0.00	0.00	100.00	0.00	0.00	0.00
	10	0.00	0.00	0.00	100.00	0.00	0.00	0.00
	11	0.00	0.00	0.00	100.00	0.00	0.00	0.00

## Monitoring Hardware Using Alarms

- [Device Design and Monitoring Hardware, on page 5](#)
- [BootFlash Disk Monitoring, on page 6](#)
- [Approaches for Monitoring Hardware Alarms, on page 6](#)

## Device Design and Monitoring Hardware

The router sends alarm notifications when problems are detected, allowing you to monitor the network remotely. You do not need to use **show** commands to poll devices on a routine basis; however, you can perform onsite monitoring if you choose.

## BootFlash Disk Monitoring

The bootflash disk must have enough free space to store two core dumps. This condition is monitored, and if the bootflash disk is too small to store two core dumps, a syslog alarm is generated, as shown in the following example:

```
Aug 22 13:40:41.038 R0/0: %FLASH_CHECK-3-DISK_QUOTA: Flash disk quota exceeded
[free space is 7084440 kB] - Please clean up files on bootflash.
```

The size of the bootflash disk must be at least of the same size as that of the physical memory installed on the device. If this condition is not met, a syslog alarm is generated as shown in the following example:

```
%IOSXEBOOT-2-FLASH_SIZE_CHECK: (rp/0): Flash capacity (8 GB) is insufficient for fault
analysis based on
installed memory of RP (16 GB)
%IOSXEBOOT-2-FLASH_SIZE_CHECK: (rp/0): Please increase the size of installed flash to at
least 16 GB (same as
physical memory size)
```

## Approaches for Monitoring Hardware Alarms

- [Onsite Network Administrator Responds to Audible or Visual Alarms, on page 6](#)
- [Viewing the Console or Syslog for Alarm Messages, on page 7](#)
- [Network Management System Alerts a Network Administrator when an Alarm is Reported Through SNMP, on page 9](#)

## Onsite Network Administrator Responds to Audible or Visual Alarms

- [About Audible and Visual Alarms, on page 6](#)
- [Clearing an Audible Alarm, on page 6](#)
- [Clearing a Visual Alarm, on page 7](#)

### About Audible and Visual Alarms

An external element can be connected to a power supply using the DB-25 alarm connector on the power supply. The external element is a DC light bulb for a visual alarm and a bell for an audible alarm.

If an alarm illuminates the CRIT, MIN, or MAJ LED on the faceplate of the device, and a visual or audible alarm is wired, the alarm also activates an alarm relay in the power supply DB-25 connector, and either the bell rings or the light bulb flashes.

### Clearing an Audible Alarm

To clear an audible alarm, perform one of the following tasks:

- Press the **Audible Cut Off** button on the faceplate.
- Enter the **clear facility-alarm** command.

## Clearing a Visual Alarm

To clear a visual alarm, you must resolve the alarm condition. The **clear facility-alarm** command does not clear an alarm LED on the faceplate or turn off the DC light bulb. For example, if a critical alarm LED is illuminated because an active module was removed without a graceful deactivation, the only way to resolve that alarm is to replace the module.

## Viewing the Console or Syslog for Alarm Messages

The network administrator can monitor alarm messages by reviewing alarm messages sent to the system console or to a system message log (syslog).

- [Enabling the logging alarm Command, on page 7](#)
- [Examples of Alarm Messages, on page 7](#)
- [Reviewing and Analyzing Alarm Messages, on page 9](#)

## Enabling the logging alarm Command

The **logging alarm** command must be enabled for the system to send alarm messages to a logging device, such as the console or a syslog. This command is not enabled by default.

You can specify the severity level of the alarms to be logged. All the alarms at and above the specified threshold generate alarm messages. For example, the following command sends only critical alarm messages to logging devices:

```
Router(config)# logging alarm critical
```

If alarm severity is not specified, alarm messages for all severity levels are sent to logging devices.

## Examples of Alarm Messages

The following are examples of alarm messages that are sent to the console when a module is removed before performing a graceful deactivation. The alarm is cleared when the module is reinserted.

### Module Removed

```
*Aug 22 13:27:33.774: %C-SM-X-16G4M2X: Module removed from subslot 1/1, interfaces disabled
*Aug 22 13:27:33.775: %SPA_OIR-6-OFFLINECARD: Module (SPA-4XT-SERIAL) offline in subslot
1/1
```

### Module Reinserted

```
*Aug 22 13:32:29.447: %CC-SM-X-16G4M2X: Module inserted in subslot 1/1
*Aug 22 13:32:34.916: %SPA_OIR-6-ONLINECARD: Module (SPA-4XT-SERIAL) online in subslot 1/1
*Aug 22 13:32:35.523: %LINK-3-UPDOWN: SIP1/1: Interface EOBC1/1, changed state to up
```

## Alarms

To view alarms, use the **show facility-alarm status** command. The following example shows a critical alarm for the power supply:

```
Router# show facility-alarm status
System Totals Critical: 1 Major: 0 Minor: 0
```

Source	Time	Severity	Description [Index]
-----	-----	-----	-----

Power Supply Bay 1 Missing [0]	Jul 08 2020 11:51:34	CRITICAL	Power Supply/FAN Module
POE Bay 0 Missing [0]	Jul 08 2020 11:51:34	INFO	Power Over Ethernet Module
POE Bay 1 Missing [0]	Jul 08 2020 11:51:34	INFO	Power Over Ethernet Module
xcvr container 0/0/4 Down [1]	Jul 08 2020 11:51:47	INFO	Transceiver Missing - Link
TenGigabitEthernet0/1/0 State Down [2]	Jul 08 2020 11:52:24	INFO	Physical Port Administrative
GigabitEthernet1/0/0 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative
GigabitEthernet1/0/1 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative
GigabitEthernet1/0/2 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative
GigabitEthernet1/0/3 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative
GigabitEthernet1/0/4 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative
GigabitEthernet1/0/5 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative
GigabitEthernet1/0/6 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative
GigabitEthernet1/0/7 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative
TwoGigabitEthernet1/0/17 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative
TwoGigabitEthernet1/0/18 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative
TwoGigabitEthernet1/0/19 State Down [2]	Jul 08 2020 11:56:35	INFO	Physical Port Administrative

To view critical alarms, use the **show facility-alarm status critical** command, as shown in the following example:

```
Router# show facility-alarm status critical
System Totals Critical: 1 Major: 0 Minor: 0
```

Source	Time	Severity	Description [Index]
-----	-----	-----	-----
Power Supply Bay 1 Missing [0]	Jul 08 2020 11:51:34	CRITICAL	Power Supply/FAN Module

To view the operational state of the major hardware components on the device, use the **show platform diag** command.



```
Router# show platform diag
Chassis type: C8300-1N1S-4T2X

Slot: 0, C8300-1N1S-4T2X
  Running state           : ok
  Internal state          : online
  Internal operational state : ok
  Physical insert detect time : 00:00:24 (01:29:20 ago)
  Software declared up time  : 00:01:01 (01:28:44 ago)
  CPLD version            : 20011540
  Firmware version        : 17.3(1r)

Sub-slot: 0/0, 4x1G-2xSFP+
  Operational status      : ok
  Internal state          : inserted
  Physical insert detect time : 00:01:14 (01:28:30 ago)
  Logical insert detect time  : 00:01:14 (01:28:30 ago)

Sub-slot: 0/1, C-NIM-1X
  Operational status      : ok
  Internal state          : inserted
  Physical insert detect time : 00:01:14 (01:28:31 ago)
  Logical insert detect time  : 00:01:14 (01:28:31 ago)

Slot: 1, C8300-1N1S-4T2X
  Running state           : ok
  Internal state          : online
  Internal operational state : ok
  Physical insert detect time : 00:00:24 (01:29:20 ago)
  Software declared up time  : 00:01:02 (01:28:43 ago)
  CPLD version            : 20011540
  Firmware version        : 17.3(1r)

Sub-slot: 1/0, C-SM-X-16G4M2X
  Operational status      : ok
  Internal state          : inserted
  Physical insert detect time : 00:01:14 (01:28:30 ago)
  Logical insert detect time  : 00:01:14 (01:28:30 ago)

Slot: R0, C8300-1N1S-4T2X
  Running state           : ok, active
```

## Reviewing and Analyzing Alarm Messages

To facilitate the review of alarm messages, you can write scripts to analyze alarm messages sent to the console or syslog. Scripts can provide reports on events such as alarms, security alerts, and interface status.

Syslog messages can also be accessed through Simple Network Management Protocol (SNMP) using the history table defined in the CISCO-SYSLOG-MIB.

## Network Management System Alerts a Network Administrator when an Alarm is Reported Through SNMP

The SNMP is an application-layer protocol that provides a standardized framework and a common language used for monitoring and managing devices in a network. Of all the approaches to monitor alarms, SNMP is the best approach to monitor more than one device in an enterprise and service provider setup.

SNMP provides notification of faults, alarms, and conditions that might affect services. It allows a network administrator to access device information through a network management system (NMS) instead of reviewing logs, polling devices, or reviewing log reports.

To use SNMP to get alarm notification, use the following MIBs:

- ENTITY-MIB, RFC 4133 (required for the CISCO-ENTITY-ALARM-MIB and CISCO-ENTITY-SENSOR-MIB to work)
- CISCO-ENTITY-ALARM-MIB
- CISCO-ENTITY-SENSOR-MIB (for transceiver environmental alarm information, which is not provided through the CISCO-ENTITY-ALARM-MIB)