



cnBNG CP Commands

This guide describes the CLI commands that are used to configure a control plane in cnBNG.

Some keywords and commands are common across multiple commands and configuration modes respectively. Use the information in the Command Modes section only as a reference to navigate to the command in the applicable configuration modes.

- [auto-test enable, on page 5](#)
- [auto-test enable idle-timer, on page 5](#)
- [clear subscriber, on page 5](#)
- [endpoint ep, on page 7](#)
- [endpoint ep interface, on page 8](#)
- [endpoint ep interface sla, on page 8](#)
- [endpoint ep interface vip, on page 9](#)
- [endpoint ep vip, on page 9](#)
- [geo switch-role, on page 10](#)
- [helm, on page 10](#)
- [helm charts, on page 10](#)
- [helm repository, on page 11](#)
- [ipam-address-chunk, on page 11](#)
- [ipam address-pool, on page 13](#)
- [ipam address-pool ipv4 address-range, on page 14](#)
- [ipam address-pool ipv4 split-size, on page 14](#)
- [ipam address-pool ipv4 threshold, on page 15](#)
- [ipam address-pool ipv6 address-ranges address-range, on page 15](#)
- [ipam address-pool ipv6 address-ranges split-size, on page 16](#)
- [ipam address-pool ipv6 address-ranges threshold, on page 16](#)
- [ipam address-pool ipv6 prefix-ranges prefix-range, on page 16](#)
- [ipam address-pool ipv6 prefix-ranges split-size, on page 17](#)
- [ipam address-pool ipv6 prefix-ranges threshold, on page 17](#)
- [ipam address-pool static, on page 18](#)
- [ipam source, on page 18](#)
- [ipam threshold, on page 18](#)
- [k8 bng, on page 19](#)
- [k8 label pod-group-config, on page 20](#)
- [kubernetes, on page 21](#)

- [kubernetes nodes](#), on page 22
- [logging json-logging](#), on page 22
- [logging level](#), on page 23
- [logging logger](#), on page 24
- [logging logger level](#), on page 25
- [logging transaction](#), on page 26
- [prepend as-path true](#), on page 27
- [profile aaa](#), on page 27
- [profile aaa accounting](#), on page 27
- [profile aaa accounting service](#), on page 28
- [profile aaa accounting session](#), on page 28
- [profile aaa authentication](#), on page 29
- [profile aaa authorization](#), on page 30
- [profile aaa authorization type subscriber](#), on page 30
- [profile aaa authorization username](#), on page 30
- [profile attribute-format](#), on page 31
- [profile coa](#), on page 31
- [profile coa client](#), on page 32
- [profile dhcp](#), on page 32
- [profile dhcp ipv4](#), on page 32
- [profile dhcp ipv4 class](#), on page 33
- [profile dhcp ipv4 class matches](#), on page 33
- [profile dhcp ipv4 class matches match](#), on page 33
- [profile dhcp ipv4 class server](#), on page 34
- [profile dhcp ipv4 class server lease](#), on page 35
- [profile dhcp ipv4 class server netbios-node-type](#), on page 36
- [profile dhcp ipv4 class server option-codes](#), on page 37
- [profile dhcp ipv4 class server option-codes option-code](#), on page 37
- [profile dhcp ipv4 server](#), on page 38
- [profile dhcp ipv4 server lease](#), on page 39
- [profile dhcp ipv4 server netbios-node-type](#), on page 40
- [profile dhcp ipv4 server option-codes](#), on page 40
- [profile dhcp ipv4 server option-codes option-code](#), on page 41
- [profile dhcp ipv6](#), on page 42
- [profile dhcp ipv6 class](#), on page 42
- [profile dhcp ipv6 class server](#), on page 42
- [profile dhcp ipv6 class server lease](#), on page 43
- [profile dhcp ipv6 mode server option-codes option-code](#), on page 44
- [profile dhcp ipv6 server](#), on page 45
- [profile dhcp ipv6 server lease](#), on page 46
- [profile feature-template](#), on page 47
- [profile feature-template ipv4](#), on page 47
- [profile feature-template ipv4 verify-unicast-source](#), on page 48
- [profile feature-template ipv6](#), on page 48
- [profile feature-template ipv6 verify-unicast-source](#), on page 49
- [profile feature-template ppp](#), on page 49

- [profile feature-template ppp chap, on page 50](#)
- [profile feature-template ppp ipcp, on page 50](#)
- [profile feature-template ppp ipcp dns, on page 51](#)
- [profile feature-template ppp ipcp renegotiation, on page 51](#)
- [profile feature-template ppp ipcp wins, on page 51](#)
- [profile feature-template ppp ipv6cp renegotiation, on page 52](#)
- [profile feature-template ppp keepalive, on page 52](#)
- [profile feature-template ppp lcp delay, on page 53](#)
- [profile feature-template ppp lcp renegotiation, on page 53](#)
- [profile feature-template ppp pap, on page 54](#)
- [profile feature-template ppp timeout, on page 54](#)
- [profile feature-template ppp timeout absolute, on page 54](#)
- [profile feature-template qos, on page 55](#)
- [profile feature-template service-accounting, on page 56](#)
- [profile feature-template session-accounting, on page 56](#)
- [profile l2tp tunnel timeout busy, on page 57](#)
- [profile pppoe, on page 57](#)
- [profile pppoe max-payload, on page 60](#)
- [profile pppoe session-limit circuit-id, on page 61](#)
- [profile pppoe session-limit circuit-id-and-remote-id, on page 61](#)
- [profile pppoe session-limit mac, on page 62](#)
- [profile pppoe session-limit max, on page 62](#)
- [profile pppoe session-limit outer-vlan, on page 63](#)
- [profile radius, on page 63](#)
- [profile radius accounting, on page 64](#)
- [profile radius accounting attribute called-station-id, on page 66](#)
- [profile radius accounting attribute calling-station-id, on page 66](#)
- [profile radius accounting attribute nas-identifier-format, on page 67](#)
- [profile radius accounting attribute nas-port-id, on page 67](#)
- [profile radius accounting detect-dead-server, on page 67](#)
- [profile radius attribute called-station-id, on page 68](#)
- [profile radius attribute called-station-id format, on page 68](#)
- [profile radius attribute calling-station-id, on page 69](#)
- [profile radius attribute calling-station-id format, on page 69](#)
- [profile radius attribute nas-identifier-format, on page 70](#)
- [profile radius attribute nas-identifier-format format, on page 70](#)
- [profile radius attribute nas-ip, on page 71](#)
- [profile radius attribute nas-port-id, on page 71](#)
- [profile radius attribute nas-port-id format, on page 72](#)
- [profile radius detect-dead-server, on page 73](#)
- [profile radius radius-server attribute, on page 73](#)
- [profile radius server, on page 74](#)
- [profile radius server-group, on page 75](#)
- [profile radius server-group server, on page 75](#)
- [profile server-group, on page 76](#)
- [profile slaac, on page 76](#)

- [profile subscriber](#), on page 77
- [profile subscriber aaa](#), on page 78
- [profile subscriber accounting send-stop setup-failure](#), on page 78
- [profile subscriber class](#), on page 79
- [profile subscriber class aaa](#), on page 79
- [profile subscriber class matches](#), on page 80
- [profile subscriber class matches match](#), on page 80
- [profile subscriber event](#), on page 81
- [profile subscriber event aaa](#), on page 82
- [profile subscriber event class](#), on page 83
- [profile subscriber event class aaa](#), on page 83
- [profile subscriber event class matches](#), on page 84
- [profile subscriber event class matches match](#), on page 84
- [show sessions](#), on page 85
- [show sessions affinity](#), on page 85
- [show sessions commit-pending](#), on page 85
- [show affinity](#) , on page 86
- [show diagnostics](#), on page 86
- [show diagnostics info](#), on page 86
- [show endpoint](#), on page 87
- [show ipam dp](#), on page 87
- [show ipam pool](#), on page 87
- [show l2tp-tunnel-destination upf](#), on page 88
- [show peers](#), on page 88
- [show resources](#), on page 89
- [show resources info](#), on page 89
- [show role-additional-info instance-id](#), on page 89
- [show rpc](#), on page 89
- [show running-status](#), on page 90
- [show running-status info](#), on page 90
- [show subscriber](#), on page 90
- [show subscriber](#), on page 91
- [show subscriber filter](#), on page 92
- [show subscriber redundancy](#), on page 95
- [show subscriber redundancy-sync](#), on page 96
- [show subscriber route-synchronize upf](#), on page 96
- [show subscriber session](#), on page 97
- [show subscriber synchronize](#), on page 98
- [split-prefix-iana-first](#), on page 98
- [subscriber featurette dhcp-lease-reservation enable](#), on page 99
- [subscriber-redundancy group](#), on page 99
- [subscriber redundancy session-synchronize add](#), on page 100
- [subscriber redundancy session-synchronize delete](#), on page 101
- [subscriber reset-token](#), on page 102
- [subscriber route-synchronize](#), on page 102
- [subscriber session-synchronize](#), on page 102

- [subscriber session-synchronize-cp](#), on page 103
- [subscriber token](#), on page 103
- [user-plane](#), on page 104
- [user-plane flowctrl-group](#), on page 104
- [user-plane peer-address](#), on page 105
- [user-plane port-id](#), on page 105

auto-test enable

Enables RADIUS automated testing.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > Server Configuration (config-server)
Syntax Description	auto-test enable
Usage Guidelines	Use this command to enable RADIUS automated testing. To disable the RADIUS Automated Testing feature, use the no auto-test enable command.

auto-test enable idle-timer

Enables RADIUS automated testing along with idle-timer functionality.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > Server Configuration (config-server)
Syntax Description	auto-test enable idle-timer <i>value</i> idle-timer <i>value</i> Specify the value for idle-timer. Must be a number in the range of 1 - 30.
Usage Guidelines	Use this command to enable RADIUS automated testing along with idle-timer functionality. To disable the idle-timer functionality, use the no auto-test idle-timer command.

clear subscriber

Clears BNG subscriber data.

Command Modes	Exec
Syntax Description	<pre>clear subscriber [force] type { [ipv4-pool <i>ipv4_pool_name</i>] [ipv4-range <i>ipv4_address_range</i>] [ipv6-addr-pool <i>ipv6_address_pool_name</i>] [ipv6-addr-range <i>ipv6_address_range</i>] [ipv6-pfx-pool <i>ipv6_prefix_pool_name</i>] [ipv6-pfx-range</pre>

```

    ipv6_prefix_range ] [ mac mac_address ] [ port-id upf_port_id ] [ sublabel
    subscriber_label ] [ upf upf_name ] }

```

force

Specify to force session deletion, even if UP is down.

ipv4-pool *ipv4_pool_name*

Specify the IPv4 address pool name.

Must be a string.

ipv4-range *ipv4_address_range*

Specify the IPv4 address range in the format "*poolName/start-ip*".

Must be a string.

ipv6-addr-pool *ipv6_address_pool_name*

Specify the IPv6 address pool name.

Must be a string.

ipv6-addr-range *ipv6_address_range*

Specify the IPv6 address range in the format "*poolName/start-ip*".

Must be a string.

ipv6-pfx-pool *ipv6_prefix_pool_name*

Specify the IPv6 prefix pool name.

Must be a string.

ipv6-pfx-range *ipv6_prefix_range*

Specify the IPv6 prefix range in the format "*poolName/start-pfx*".

Must be a string.

mac *mac_address*

Specify the MAC address in the format "*aabb.ccdd.eeff*".

Must be a string.

port-id *upf_port_id*

Specify the user plane function port ID in the format "*upf/port-id*".

Must be a string.

sublabel *subscriber_label*

Specify the subscriber label.

Must be a string.

upf *upf_name*

Specify the user plane function name.

Must be a string.

type

Specify the type.

Must be one of the following:

- **dhcp**
- **pppoe**
- **sessmgr**

Usage Guidelines

Use this command to clear BNG subscriber data.

endpoint ep

Configures endpoint parameters.

Command Modes

Exec > Global Configuration

Syntax Description

```
endpoint endpoint_type { replicas replicas_per_node | nodes node_replicas_for_resiliency
| loopbackEth loopbackEth | loopbackPort loopbackPort }
```

eptype endpoint_type

Specify the endpoint type.

loopbackEth loopbackEth

Specify the endpoint local interface name or host IP.

Must be a string.

loopbackPort loopbackPort

Specify the endpoint local port.

Must be an integer.

nodes node_replicas_for_resiliency

Specify the number of node replicas for resiliency.

Must be an integer.

Default Value: 1.

replicas *replicas_per_node*

Specify the number of replicas per node.

Must be an integer.

Default Value: 1.

In a GR setup for AIO CP cluster, the replica count must be 1 for BGP speaker pod, GR-replication pod, and UDP-proxy pod. For other pods, the replica count should be based on capacity planning.

Usage Guidelines Use this command to configure endpoint parameters.

endpoint ep interface

Configures the interface type.

Command Modes Exec > Global Configuration

Syntax Description **endpoint ep interface** *interface_type*

loopbackEth *loopback_eth*

Specify the loopback Eth.

Must be a string.

loopbackPort *loopback_port*

Specify the loopback port.

Must be an integer.

interface_type

Specify the interface type.

Usage Guidelines Use this command to configure the interface type.

endpoint ep interface sla

Configures SLA parameters.

Command Modes Exec > Global Configuration

Syntax Description **endpoint ep interface sla { response *response_time* | procedure *procedure_time* }**

procedure *procedure_time*

Specify the procedure time in milliseconds.

Must be an integer in the range of 1000-120000.

response *response_time*

Specify the response time in milliseconds.

Must be an integer in the range of 1000-180000.

Usage Guidelines

Use this command to configure SLA parameters.

endpoint ep interface vip

Configures VIP IP parameters.

Command Modes

Exec > Global Configuration

Syntax Description

endpoint ep interface vip { vip-ip *vip_ip* | vip-port *vip_port* | offline }

offline

Specify to mark the vip-ip as offline.

vip-ip *vip_ip*

Specify the host IP address.

Must be a string.

vip-port *vip_port*

Specify the port number.

Must be an integer.

Usage Guidelines

Use this command to configure VIP IP parameters.

endpoint ep vip

Configures VIP parameters.

Command Modes

Exec > Global Configuration > Endpoint Configuration

Syntax Description

vip-ip *vip_ip_address* [[vip-port *port_number*] [offline]]

offline

Specify the VIP-IP as offline.

vip-ip *vip_ip_address*

Specify the VIP IP address.

Must be a string.

vip-port *port_number*

Specify the port number.

Must be an integer.

Usage Guidelines Use this command to configure VIP parameters.

geo switch-role

Switches the GR role between geographically distributed sites from Primary to Standby, or vice versa.

Command Modes Exec

Syntax Description **geo switch-role { *role* *role* | *instance-id* *gr_instanceId* }**
role *role*

Specifies new role for the given site.

Role can be primary or standby.

instance-id *gr_instanceId*

Specifies the GR Instance ID.

helm

Configures Helm configuration parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **helm default-repository *default_repository_name***
default-repository *default_repository_name*

Specify the name of the default Helm repository.

Usage Guidelines Use this command to configure Helm configuration parameters.

helm charts

Displays Helm release details.

Command Modes Exec > Global Configuration (config)

Syntax Description **charts**

Usage Guidelines Use this command to view Helm release details.

helm repository

Configures Helm repository parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

```
helm repository helm_repo_name [ [ access-token access_token ] [ url helm_repo_url ] [ username helm_repo_username ] [ password helm_repo_password ] ]
```

access-token *helm_repo_access_token*

Specify the access token for the Helm repository.

Must be a string.

password *helm_repo_password*

Specify the password for the Helm repository.

Must be an aes-cfb-128-encrypted string.

url *helm_repo_url*

Specify the URL for the Helm repository.

Must be a string.

username *helm_repo_username*

Specify the username for the Helm repository.

Must be a string.

helm_repo_name

Specify the name of the Helm repository.

Must be a string.

Usage Guidelines

Use this command to configure the Helm repository parameters.

ipam-address-chunk

Configures pre-allocation of Gateway IP and address chunks.

Command Modes

Exec mode

Syntax Description

```
ipam-address-chunk { allocate | release { [ pool-group-tag value | pool-name pool_name ] } { address-type [ ipv6-addr | ipv6-prefix | ipv4 ] } [ ipam-dp-key dp_key ]
```

```
[ gr-instance gr_instance ]
[ srg-peer-id srg_peer_id ]
```

allocate

Enables pre-allocation of IP address chunk and the gateway IP.

release

Releases the data plane and its associated IP address chunks.

pool-group-tag / pool-name

Provide either the pool-name or the pool-group-tag, and this should match the pool information configured in the DHCP profile.

address-type

Specify one of the three possible address types:

- ipv6-addr
- ipv6-prefix
- ipv4

ipam-dp-key

Specifies the data plane key for IP management.

- **Routed SRG case:** Indicates the value of ipam-dp-key specified in the DHCP pool. Currently, circuit-id is supported. Essentially, use the value of circuit-id set on the access-side OLT.
- **Non-Routed SRG case:** The **ipam-dp-key** can either be the same as the srg-peer-id or it can be different.
- **Non-Routed Non SRG case:** This scenario is not supported currently.
- **Routed Non SRG case:** This scenario is not supported currently.

gr-instance

Specifies the GR instance information. If not provided, the local gr-instance is used as the default value.

srg-peer-id

The SRG group peer-id as specified in the configuration.

Usage Guidelines

Use this command to allocate and release IP address chunks.

The output of this action command provides information about the chunk and the first IP address that were reserved. For example,

```
bng# ipam-address-chunk allocate instance-id 1 pool-name dhcp-ipv6-iapd ipv6-prefix
ipam-dp-key
INGJRJKTMDHRTW6001ENBESR001 srg-peer-id Peer1
Sat Aug 24 06:27:29.200 UTC+00:00
```

```
result
Gateway Address: 2001:DB8::1/50
```

ipam address-pool

Configures IPAM address pools.

Command Modes	Exec > Global Configuration (config) > IPAM Configuration (config-ipam)
Syntax Description	address-pool <i>pool_name</i> [static offline vrf-name <i>vrf_name</i>] address-quarantine-timer <i>address_quarantine_timer_interval</i> Specify the address quarantine timer interval in seconds. Must be an integer in the range of 4-60. Default Value: 4. default-gateway <i>ip_address</i> Specify the default gateway IP address for static pool. Must be an IPv4 address. offline Specify the pool as an offline pool. prefix-length <i>prefix_length</i> Specify the prefix length. Must be an integer in the range of 1-64. Default Value: 64. vrf-name <i>vrf_name</i> Specify the VRF name. Must be a string. pool_name Specify the address pool's name. Must be a string.

Usage Guidelines	Use this command to configure IPAM address pools.
-------------------------	---

ipam address-pool ipv4 address-range

Configures IPv4 address ranges.

Command Modes Exec > Global Configuration (config) > IPAM Configuration (config-ipam) > Address Pool Configuration

Syntax Description **address-range** *start_ipv4_address end_ipv4_address* [**offline**]

default-gateway *ip_address*

Specify the default gateway IP address for static pool.

Must be an IPv4 address.

offline

Specify the IPv4 address range as offline.

end_ipv4_address

Specify the end address of the IPv4 address range.

Must be an IPv4 address.

start_ipv4_address

Specify the start address of the IPv4 address range.

Must be an IPv4 address.

Usage Guidelines Use this command to configure IPv4 address ranges.

ipam address-pool ipv4 split-size

Configures chunk split size.

Command Modes Exec > Global Configuration > IPAM Configuration

Syntax Description **split-size** [**per-cache** *number_of_addresses*] [**per-dp** *number_of_addresses*]

no-split

Specify not to split the address range into smaller chunks.

per-cache *number_of_addresses*

Specify the number of addresses per chunk for IPAM cache allocation. Specify in power of 2.

Must be an integer in the range of 2-262144.

per-dp number_of_addresses

Specify the number of addresses per chunk for data-plane allocation. Specify in power of 2.

Must be an integer in the range of 2-262144.

Usage Guidelines

Use this command to configure chunk split sizes.

ipam address-pool ipv4 threshold

Configures pool thresholds.

Command Modes

Exec > Global Configuration > IPAM Configuration

Syntax Description

threshold **upper-threshold** *upper_threshold*

upper-threshold upper_threshold

Specify the upper threshold value in percentage.

Must be an integer in the range of 1-100.

Usage Guidelines

Use this command to configure pool thresholds.

ipam address-pool ipv6 address-ranges address-range

Configures IPv6 address ranges.

Command Modes

Exec > Global Configuration (config) > IPAM Configuration (config-ipam) > Address Pool Configuration > Address Ranges Configuration

Syntax Description

address-range *start_ipv6_address end_ipv6_address* [**offline**]

default-gateway ip_address

Specify the default gateway IP address for static pool.

Must be an IPv4 address.

offline

Specify the IPv6 address range as offline.

end_ipv6_address

Specify the end address of the IPv6 address range.

Must be an IPv6 address.

start_ipv6_address

Specify the start address of the IPv6 address range.

Must be an IPv6 address.

Usage Guidelines Use this command to configure IPv6 address ranges.

ipam address-pool ipv6 address-ranges split-size

Configures chunk split size.

Command Modes Exec > Global Configuration > IPAM Configuration

Syntax Description **split-size** [**per-cache** *number_of_addresses*] [**per-dp** *number_of_addresses*]

no-split

Specify not to split the address range into smaller chunks.

per-cache *number_of_addresses*

Specify the number of addresses per chunk for IPAM cache allocation. Specify in power of 2.

Must be an integer in the range of 2-262144.

per-dp *number_of_addresses*

Specify the number of addresses per chunk for data-plane allocation. Specify in power of 2.

Must be an integer in the range of 2-262144.

Usage Guidelines Use this command to configure chunk split sizes.

ipam address-pool ipv6 address-ranges threshold

Configures pool thresholds.

Command Modes Exec > Global Configuration > IPAM Configuration

Syntax Description **threshold** **upper-threshold** *upper_threshold*

upper-threshold *upper_threshold*

Specify the upper threshold value in percentage.

Must be an integer in the range of 1-100.

Usage Guidelines Use this command to configure pool thresholds.

ipam address-pool ipv6 prefix-ranges prefix-range

Configures IPv6 prefix ranges.

Command Modes	Exec > Global Configuration (config) > IPAM Configuration (config-ipam) > Address Pool Configuration > Prefix Ranges Configuration
Syntax Description	prefix-range <i>prefix_value</i> length <i>prefix_length</i> [offline] length <i>prefix_length</i> Specify the prefix length. Must be an integer in the range of 1-63. offline Specify the IPv6 prefix range as offline. prefix-range <i>prefix_value</i> Specify the IPv6 prefix range. Must be an IPv6 address.
Usage Guidelines	Use this command to configure IPv6 prefix ranges.

ipam address-pool ipv6 prefix-ranges split-size

Configures chunk split size.

Command Modes	Exec > Global Configuration > IPAM Configuration
Syntax Description	split-size [per-cache <i>number_of_addresses</i>] [per-dp <i>number_of_addresses</i>] no-split Specify not to split the address range into smaller chunks. per-cache <i>number_of_addresses</i> Specify the number of addresses per chunk for IPAM cache allocation. Specify in power of 2. Must be an integer in the range of 2-262144. per-dp <i>number_of_addresses</i> Specify the number of addresses per chunk for data-plane allocation. Specify in power of 2. Must be an integer in the range of 2-262144.
Usage Guidelines	Use this command to configure chunk split sizes.

ipam address-pool ipv6 prefix-ranges threshold

Configures pool thresholds.

Command Modes	Exec > Global Configuration > IPAM Configuration
Syntax Description	threshold upper-threshold <i>upper_threshold</i> upper-threshold <i>upper_threshold</i> Specify the upper threshold value in percentage. Must be an integer in the range of 1-100.
Usage Guidelines	Use this command to configure pool thresholds.

ipam address-pool static

Configures static pool parameters.

Command Modes	Exec > Global Configuration (config) > IPAM Configuration (config-ipam) > Address Pool Configuration
Syntax Description	static { enable user-plane <i>user_plane</i> } enable Specify to set pool as static. user-plane <i>user_plane</i> Specify to associate user plane for this static pool. Must be a string.
Usage Guidelines	Use this command to configure static pool parameters.

ipam source

Configures pool-datastore source selection.

Command Modes	Exec > Global Configuration (config)
Syntax Description	ipam source local local Specify to use local address pool datastore.
Usage Guidelines	Use this command to configure pool-datastore source selection. Enters the IPAM Configuration mode";

ipam threshold

Configures global thresholds.

Command Modes	Exec > Global Configuration (config) > IPAM Configuration (config-ipam)
Syntax Description	threshold [[ipv4-addr <i>ipv4_address_threshold</i>] [ipv6-addr <i>ipv6_address_threshold</i>] [ipv6-prefix <i>ipv6_prefix_threshold</i>]]

ipv4-addr *ipv4_address_threshold*

Specify the IPv4 address threshold in percentage.

Must be an integer in the range of 1-100.

ipv6-addr *ipv6_address_threshold*

Specify the IPv6 address threshold in percentage.

Must be an integer in the range of 1-100.

ipv6-prefix *ipv6_prefix_threshold*

Specify the IPv6 prefix threshold in percentage.

Must be an integer in the range of 1-100.

Usage Guidelines	Use this command to configure global thresholds.
-------------------------	--

k8 bng

Configures k8 BNG parameters.

Command Modes	Exec > Global Configuration
----------------------	-----------------------------

Syntax Description	bng etcd-endpoint <i>etcd_endpoint</i> datastore-endpoint <i>datastore_endpoint</i> coverage-build { false true }
---------------------------	---

etcd-endpoint *etcd_endpoint*

Specify the Etcd endpoint configuration. For example, *hostname:port*

Default Value: "etcd:2379".

datastore-endpoint *datastore_endpoint*

Specify the Datastore endpoint configuration. For example, *hostname:port*

etcd-endpoint *etcd_endpoint*

Specify the Etcd endpoint configuration. For example, *hostname:port*

Default Value: "datastore-ep-session:8882".

coverage-build { false | true }

Specify to enable or disable coverage build.

Must be one of the following:

- **false**
- **true**

Default Value: false.

datastore-endpoint *datastore_endpoint*

Specify the Datastore endpoint configuration. For example, *hostname:port*

etcd-endpoint *etcd_endpoint*

Specify the Etcd endpoint configuration. For example, *hostname:port*

Usage Guidelines

Use this command to configure k8 BNG parameters.

k8 label pod-group-config

Configures K8 node affinity label pod group configuration.

Command Modes

Exec > Global Configuration

Syntax Description

k8 label pod-group-config pod-group *pod_group* **key** *label_key* **value** *label_value*

key *label_key*

Specify the key for the label.

Must be a string.

pod-group *pod_group*

Specify the pod group for the VMs.

Must be one of the following:

- **cdl-layer**
- **oam-layer**
- **protocol-layer**
- **service-layer**

value *label_value*

Specify the value for the label.

Must be a string.

Usage Guidelines

Use this command to configure K8 node affinity label pod group configuration.

kubernetes

Configures Kubernetes parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

```
k8s name k8s_cluster_name [ [ image-pull-secrets image_pull_secrets ] [
ingress-host-name ingress_host_name ] [ namespace k8s_namespace ] [ nf-name nf_name
] [ registry image_registry ] [ single-node { false | true } ] [
use-volume-claims { false | true } ] ]
```

image-pull-secrets *image_pull_secrets*

Specify the image pull secrets stored within K8s.

Must be a string.

ingress-host-name *ingress_host_name*

Specify the generic ingress host name.

Must be a string.

name *k8s_cluster_name*

Specify the K8s cluster name.

Must be a string.

namespace *k8s_namespace*

Specify the K8s namespace for the network function.

Must be a string.

nf-name *nf_name*

Specify the NF deployed in this k8s namespace.

Must be a string.

registry *image_registry*

This keyword is deprecated.

Must be a string.

single-node { **false** | **true** }

Specify to enable or disable single node deployment.

Must be one of the following:

- **false**
- **true**

Default Value: false.

use-volume-claims { false | true }

Specify to enable or disable using volume claims when deploying.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines

Use this command to configure Kubernetes parameters.

kubernetes nodes

Configures list of k8s nodes.

Command Modes

Exec > Global Configuration (config)

Syntax Description

k8s nodes *k8s_node_name* [[**node-type** *node_type*] [**worker-type** *worker_type*]]

node-type *node_type*

Specify the K8s node type.

Must be a string.

worker-type *worker_type*

Specify the k8s worker type.

Must be a string.

k8s_node_name

Specify the K8s node name.

Must be a string.

Usage Guidelines

Use this command to configure the list of k8s nodes.

logging json-logging

Configures JSON logging for selected events.

Command Modes

Exec > Global configuration

Syntax Description

logging json-logging { **application** | **transaction** | **monitor-subscriber** }

application

Enables JSON logging in the application.

transaction

Enables JSON logging for transactions.

monitor-subscriber

Enables JSON logging in the monitor-subscriber feature.

logging level

Configures the logging level.

Command Modes

Exec > Global Configuration

Syntax Description

level *log_level*

application *application_log_level*

Specify the application logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

monitor-subscriber *monitor_subscriber_log_level*

Specify the monitor subscriber logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

tracing *tracing_log_level*

Specify the tracing logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

transaction *transaction_log_level*

Specify the transaction logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

Usage Guidelines Use this command to configure the logging level.

logging logger

Configures the log name.

Command Modes Exec > Global Configuration

Syntax Description **logger** *log_name*

log_name

Specify the log name in "module.component.interface" format.

Must be a string.

Usage Guidelines Use this command to configure the log name.

logging logger level

Configures the logging level.

Command Modes

Exec > Global Configuration

Syntax Description

logger level *log_type_options*

application *application_log_level*

Specify the application logging level.

Must be one of the following:

- debug
- error
- info
- off
- trace
- warn

monitor-subscriber *monitor_subscriber_log_level*

Specify the monitor subscriber logging level.

Must be one of the following:

- debug
- error
- info
- off
- trace
- warn

tracing *tracing_log_level*

Specify the tracing logging level.

Must be one of the following:

- debug
- error
- info
- off

- **trace**
- **warn**

transaction *transaction_log_level*

Specify the transaction logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

Usage Guidelines

Use this command to configure the logging level.

logging transaction

Configures the transaction logging parameters.

Command Modes

Exec > Global Configuration

Syntax Description

transaction *transaction_log_parameters*

duplicate

Specify to enable duplicate in transaction logging.

Must be one of the following:

- **disable**
- **enable**

Default Value: disable.

message

Specify to enable messages in transaction logging.

Must be one of the following:

- **disable**
- **enable**

Default Value: disable.

Usage Guidelines Use this command to configure the transaction logging parameters.

prepend as-path true

Enables the cnBNG to prepend the AS-path attribute to BGP Virtual IP (VIP) routes when advertising to neighboring routers.

Command Modes Exec > Global Configuration (config) > Router BGP Configuration (config-bgp)

Syntax Description **prepend as-path true**

Usage Guidelines Use this command to enable prepending of AS-path attribute to BGP VIP routes.

profile aaa

Configures AAA profiles.

Command Modes Exec > Global Configuration (config)

Syntax Description **profile aaa** *aaa_profile_name*

aaa_profile_name

Specify the AAA profile name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,"']*).

Usage Guidelines Use this command to configure AAA profiles. Enters the AAA Profile Configuration mode.

profile aaa accounting

Configures accounting configuration parameters.

Command Modes Exec > Global Configuration (config) > AAA Profile Configuration (config-aaa-*aaa_profile_name*)

Syntax Description **accounting method-order** *method_list_order*

method-order method_list_order

Specify the method list order.

Must be one of the following:

- radius

Usage Guidelines Use this command to configure accounting parameters.

You can configure a maximum of three elements with this command.

profile aaa accounting service

Configures asynchronous mode for service accounting.

Command Modes

Exec > Global Configuration (config) > AAA Profile Configuration (config-aaa-aaa_profile_name)
>Accounting configuration (config-accounting)

Syntax Description

```
service { acct-interim-async true/false | acct-start-async true/false | acct-stop-async true/false }
```

acct-interim-async true/false

Specifies the option to enable or disable the asynchronous mode when interim updates are sent.

Must be one of the following:

- **true**
- **false**

acct-start-async true/false

Specifies the option to enable or disable the asynchronous mode when an Accounting-Start request is sent to AAA.

Must be one of the following:

- **true**
- **false**

acct-stop-async true/false

Specifies the option to enable or disable the asynchronous mode when an Accounting-Stop request is sent.

Must be one of the following:

- **true**
- **false**

Usage Guidelines

Use this command to configure asynchronous mode for service accounting.

If asynchronous RADIUS accounting is configured, message retransmission functionality will be unavailable. Lost messages due to network issues or server errors will not be retried by the Control Plane.

profile aaa accounting session

Configures asynchronous mode for session accounting.

Command Modes

Exec > Global Configuration (config) > AAA Profile Configuration (config-aaa-aaa_profile_name)
>Accounting configuration (config-accounting)

Syntax Description

```
session { acct-interim-async true/false | acct-start-async true/false |  
acct-stop-async true/false }
```

acct-interim-async *true/false*

Specifies the option to enable or disable the asynchronous mode when interim updates are sent.

Must be one of the following:

- **true**
- **false**

acct-start-async *true/false*

Specifies the option to enable or disable the asynchronous mode when an Accounting-Start request is sent to AAA.

Must be one of the following:

- **true**
- **false**

acct-stop-async *true/false*

Specifies the option to enable or disable the asynchronous mode when an Accounting-Stop request is sent.

Must be one of the following:

- **true**
- **false**

Usage Guidelines

Use this command to configure asynchronous mode for session accounting.

If asynchronous RADIUS accounting is configured, message retransmission functionality will be unavailable. Lost messages due to network issues or server errors will not be retried by the Control Plane.

profile aaa authentication

Configures authentication parameters.

Command Modes

Exec > Global Configuration (config) > AAA Profile Configuration (config-aaa-*aaa_profile_name*)

Syntax Description

```
authentication [ method-order method_list_order ]
```

method-order *method_list_order*

Specify the method list order.

Must be one of the following:

- **radius**

Usage Guidelines

Use this command to configure authentication parameters.

You can configure a maximum of three elements with this command.

profile aaa authorization

Configures authorization parameters.

Command Modes

Exec > Global Configuration (config) > AAA Profile Configuration (config-aaa-aaa_profile_name)

Syntax Description

authorization [**password** *default_password*]

password *default_password*

Specify the default password.

Must be a string.

Usage Guidelines

Use this command to configure authorization parameters. Enters the Authorization Configuration mode.

profile aaa authorization type subscriber

Configures authorization type subscriber.

Command Modes

Exec > Global Configuration (config) > AAA Profile Configuration (config-aaa-aaa_profile_name) > Authorization Configuration (config-authorization)

Syntax Description

type subscriber method-order *method_list_order*

method-order *method_list_order*

Specify the method list order.

Must be one of the following:

- **radius**

Usage Guidelines

Use this command to configure authorization type subscriber.

You can configure a maximum of three elements with this command.

profile aaa authorization username

Configures the default user name.

Command Modes

Exec > Global Configuration (config) > AAA Profile Configuration (config-aaa-aaa_profile_name) > Authorization Configuration (config-authorization)

Syntax Description	<pre>username { format <i>attribute_format</i> identifier <i>identifier_type</i> value <i>user_name</i> }</pre> format <i>attribute_format</i> Specify the attribute format. identifier <i>identifier_type</i> Specify the identifier type. value <i>user_name</i> Specify the user name. Must be a string.
Usage Guidelines	Use this command to configure the default user name.

profile attribute-format

Configures AAA attribute templates.

Command Modes	Exec > Global Configuration (config)
Syntax Description	<pre>profile attribute-format <i>profile_name</i> [format-order <i>attributes_list</i>]</pre> format-order <i>attributes_list</i> Specify the ordered list of attributes. profile_name Specify the profile name. Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,"']*).
Usage Guidelines	Use this command to configure AAA attribute templates. Enters the Attribute Format Profile Configuration mode. You can configure a maximum of 32 elements with this command.

profile coa

Configures RADIUS Dynamic-author/COA parameters.

Command Modes	Exec > Global Configuration
Syntax Description	<pre>profile coa server-key <i>server_shared_secret_key</i></pre>

server-key *server_shared_secret_key*

Specify the COA server shared secret key.

Must be an aes-cfb-128-encrypted string.

Usage Guidelines

Use this command to configure RADIUS Dynamic-author/COA parameters.

profile coa client

Configures RADIUS COA client parameters.

Command Modes

Exec > Global Configuration

Syntax Description

client ip *client_ip_address* **server-key** *client_shared_secret_key*

ip *client_ip_address*

Specify the client IP address.

Must be an IP address.

server-key *client_shared_secret_key*

Specify the client shared secret key.

Must be an aes-cfb-128-encrypted string.

Usage Guidelines

Use this command to configure RADIUS COA client parameters.

profile dhcp

Configures DHCP profiles.

Command Modes

Exec > Global Configuration (config)

Syntax Description

dhcp *dhcp_profile_name*

dhcp_profile_name

Specify the DHCP profile name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",')*).

Usage Guidelines

Use this command to configure DHCP profiles. Enters the DHCP Profile Configuration mode.

profile dhcp ipv4

Configures DHCP IPv4 parameters.

Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name)
Syntax Description	ipv4 [mode <i>dhcp_mode</i>] mode <i>dhcp_mode</i> Specify the DHCP server or proxy mode. Default Value: server.
Usage Guidelines	Use this command to configure DHCP IPv4 parameters. Enters the DHCP IPv4 Configuration mode.

profile dhcp ipv4 class

Configures DHCP IPv4 class configuration parameters.

Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4)
Syntax Description	class <i>dhcp_class_name</i> dhcp_class_name Specify the DHCP class name. Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,\"')]*).
Usage Guidelines	Use this command to configure DHCP IPv4 class configuration parameters. Enters the DHCP Class Configuration mode.

profile dhcp ipv4 class matches

Configures the list of match values.

Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name)
Syntax Description	matches [match-type { all any }] match-type <i>match_type</i> Specify the match type.
Usage Guidelines	Use this command to configure the list of match values. Enters the Matches Configuration mode.

profile dhcp ipv4 class matches match

Configures match key and value.

Command Modes Exec > Global Configuration (config) > DHCP Configuration (config-dhcp-dhcp_profile_name) > DHCP Class Configuration (config-class-dhcp_class_name) > Matches Configuration (config-matches)

Syntax Description **match** *match_key* { **ascii** *ascii_string* | **hex** *hex_string* }

match_key

Specify the match key.

ascii ascii_string

Specify the ASCII strings.

Must be a string.

hex hex_string

Specify the hexadecimal strings.

Must be a string in the pattern ([0-9a-fA-F]{2}([0-9a-fA-F]{2})*)?.

match_key

Specify the match key.

You can configure a maximum of "8" elements with this command.

Usage Guidelines Use this command to configure match key and value.

You can configure a maximum of "8" elements with this command.

profile dhcp ipv4 class server

Configures DHCP server mode.

Command Modes Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4)

Command Modes Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name)

Syntax Description **server** [**boot-filename** *boot_file_name* | **dns-servers** *ip_address* | **domain-name** *domain_name* | **netbios-name-server** *ip_address* | **next-server** *ip_address* | **ntp-servers** *ntp_servers* | **pool-name** *pool_name*]

boot-filename boot_file_name

Specify the boot file name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",\\"]*)).

dns-servers ip_address

Specify the DNS server IP addresses.

Must be an IPv4 address.

domain-name *domain_name*

Specify the domain name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,"']*).

netbios-name-server *ip_address*

Specify the NetBIOS name server IP addresses.

Must be an IPv4 address.

next-server *ip_address*

Specify the TFTP server IP address to be used by the client.

Must be an IPv4 address.

ntp-servers *ntp_servers*

Specify the NTP servers.

Must be an IPv4 address.

pool-name *pool_name*

Specify the pool name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,"']*).

Usage Guidelines

Use this command to configure the DHCP server mode. Enters the DHCP Server Configuration mode.

You can configure a maximum of "8" elements with this command.

profile dhcp ipv4 class server lease

Configures DHCP Server Lease parameters.

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Server Configuration Mode (config-server)

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name) > DHCP Server Configuration Mode (config-server)

Syntax Description

lease { [**days** *days*] [**hours** *hours*] [**minutes** *minutes*] }

days *days*

Specify the number of days.

Must be an integer in the range of 0-365.

hours *hours*

Specify the hours.

Must be an integer in the range of 0-23.

minutes *minutes*

Specify the minutes.

Must be an integer in the range of 0-59.

Usage Guidelines

Use this command to configure the DHCP Server Lease parameters.

profile dhcp ipv4 class server netbios-node-type

Configures NetBIOS node type.

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Server Configuration Mode (config-server)

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name) > DHCP Server Configuration Mode (config-server)

Syntax Description

netbios-node-type { **broadcast-node** | **hexadecimal** *hex_number* | **hybrid-node** | **mixed-node** | **peer-to-peer-node** }

broadcast-node

Specify broadcast node.

hexadecimal *hex_number*

Specify the hexadecimal number.

Must be a string in the pattern ([0-9a-fA-F]{2}(:[0-9a-fA-F]{2})*)?.

hybrid-node

Specify hybrid node.

mixed-node

Specify mixed node.

peer-to-peer-node

Specify peer-to-peer node.

Usage Guidelines

Use this command to configure the NetBIOS node type.

profile dhcp ipv4 class server option-codes

Configures the OptionCode table.

Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Server Configuration Mode (config-server)
Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name) > DHCP Server Configuration Mode (config-server)
Syntax Description	option-codes
Usage Guidelines	Use this command to configure the OptionCode table. Enters the Option Codes Configuration mode.

profile dhcp ipv4 class server option-codes option-code

Configures a DHCP option code.

Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Server Configuration Mode (config-server) > Option Codes Configuration (config-option-codes)
Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name) > DHCP Server Configuration Mode (config-server) > Option Codes Configuration (config-option-codes)
Syntax Description	option-code <i>dhcp_option_code</i> [ascii-string <i>ascii_string</i> force-insert { false true } hex-string <i>hex_string</i> ip-address <i>ip_address</i>]

ascii-string *ascii_string*

Specify the ASCII string.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,\"')]*).

force-insert { **false** | **true** }

Specify whether to force insert this option.

Must be one of the following:

- **false**
- **true**

hex-string *hex_string*

Specify the hexadecimal string.

Must be a string in the pattern ([0-9a-fA-F]{2}([0-9a-fA-F]{2})*)?.

ip-address *ip_address*

Specify the server's IP addresses.

Must be an IPv4 address.

option-code *dhcp_option_code*

Specify the DHCP option code.

Must be an integer in the range of 0-255.

Usage Guidelines

Use this command to configure a DHCP option code. Enters the Option Code Configuration mode.

You can configure a maximum of "8" elements with this command.

profile dhcp ipv4 server

Configures DHCP server mode.

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4)

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name)

Syntax Description

server [**boot-filename** *boot_file_name* | **dns-servers** *ip_address* | **domain-name** *domain_name* | **netbios-name-server** *ip_address* | **next-server** *ip_address* | **ntp-servers** *ntp_servers* | **pool-name** *pool_name*]

boot-filename *boot_file_name*

Specify the boot file name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",')]*).

dns-servers *ip_address*

Specify the DNS server IP addresses.

Must be an IPv4 address.

domain-name *domain_name*

Specify the domain name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",')]*).

netbios-name-server *ip_address*

Specify the NetBIOS name server IP addresses.

Must be an IPv4 address.

next-server *ip_address*

Specify the TFTP server IP address to be used by the client.

Must be an IPv4 address.

ntp-servers *ntp_servers*

Specify the NTP servers.

Must be an IPv4 address.

pool-name *pool_name*

Specify the pool name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,\"']*).

Usage Guidelines

Use this command to configure the DHCP server mode. Enters the DHCP Server Configuration mode.

You can configure a maximum of "8" elements with this command.

profile dhcp ipv4 server lease

Configures DHCP Server Lease parameters.

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Server Configuration Mode (config-server)

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name) > DHCP Server Configuration Mode (config-server)

Syntax Description

lease { [**days** *days*] [**hours** *hours*] [**minutes** *minutes*] }

days *days*

Specify the number of days.

Must be an integer in the range of 0-365.

hours *hours*

Specify the hours.

Must be an integer in the range of 0-23.

minutes *minutes*

Specify the minutes.

Must be an integer in the range of 0-59.

Usage Guidelines

Use this command to configure the DHCP Server Lease parameters.

profile dhcp ipv4 server netbios-node-type

Configures NetBIOS node type.

Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Server Configuration Mode (config-server)
----------------------	--

Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name) > DHCP Server Configuration Mode (config-server)
----------------------	--

Syntax Description	netbios-node-type { broadcast-node hexadecimal <i>hex_number</i> hybrid-node mixed-node peer-to-peer-node }
---------------------------	---

broadcast-node

Specify broadcast node.

hexadecimal *hex_number*

Specify the hexadecimal number.

Must be a string in the pattern ([0-9a-fA-F]{2}(:[0-9a-fA-F]{2})*)?.

hybrid-node

Specify hybrid node.

mixed-node

Specify mixed node.

peer-to-peer-node

Specify peer-to-peer node.

Usage Guidelines	Use this command to configure the NetBIOS node type.
-------------------------	--

profile dhcp ipv4 server option-codes

Configures the OptionCode table.

Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Server Configuration Mode (config-server)
----------------------	--

Command Modes	Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name) > DHCP Server Configuration Mode (config-server)
----------------------	--

Syntax Description	option-codes
---------------------------	---------------------

Usage Guidelines Use this command to configure the OptionCode table. Enters the Option Codes Configuration mode.

profile dhcp ipv4 server option-codes option-code

Configures a DHCP option code.

Command Modes Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Server Configuration Mode (config-server) > Option Codes Configuration (config-option-codes)

Command Modes Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv4 Configuration (config-ipv4) > DHCP Class Configuration (config-class-dhcp_class_name) > DHCP Server Configuration Mode (config-server) > Option Codes Configuration (config-option-codes)

Syntax Description **option-code** *dhcp_option_code* [**ascii-string** *ascii_string* | **force-insert** { **false** | **true** } | **hex-string** *hex_string* | **ip-address** *ip_address*]

ascii-string *ascii_string*

Specify the ASCII string.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,\"']*).

force-insert { **false** | **true** }

Specify whether to force insert this option.

Must be one of the following:

- **false**
- **true**

hex-string *hex_string*

Specify the hexadecimal string.

Must be a string in the pattern ([0-9a-fA-F]{2}([0-9a-fA-F]{2})*)?.

ip-address *ip_address*

Specify the server's IP addresses.

Must be an IPv4 address.

option-code *dhcp_option_code*

Specify the DHCP option code.

Must be an integer in the range of 0-255.

Usage Guidelines Use this command to configure a DHCP option code. Enters the Option Code Configuration mode. You can configure a maximum of "8" elements with this command.

profile dhcp ipv6

Configures DHCP IPv6 parameters.

Command Modes Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name)

Syntax Description **ipv6** [**mode** *dhcp_mode*]

mode *dhcp_mode*

Specify the DHCP mode server or proxy.

Default Value: server.

Usage Guidelines Use this command to configure DHCP IPv6 parameters. Enters the DHCP IPv6 Configuration mode.

profile dhcp ipv6 class

Configures DHCP IPv6 class configuration parameters.

Command Modes Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv6 Configuration (config-ipv6)

Syntax Description **class** *dhcp_class_name*

dhcp_class_name

Specify the DHCP class name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,\"']*).

Usage Guidelines Use this command to configure DHCP IPv6 class configuration parameters.

profile dhcp ipv6 class server

Configures DHCP server mode.

Command Modes Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv6 Configuration (config-ipv6)

Command Modes Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv6 Configuration (config-ipv6) > DHCP Class Configuration (config-class-dhcp_class_name)

Syntax Description **server** { **aftr-name** *aftr_name* | **dns-servers** *ip_address* | **domain-name** *domain_name* | **iana-pool-name** *iana_pool_name* | **iapd-pool-name** *iapd_pool_name* | **preference** *server_preference* | **rapid-commit** }

aftr-name *aftr_name*

Specify the Address Family Transition Router (AFTR) name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\',')]*).

dns-servers *ip_address*

Specify the DNS server IP addresses.

Must be an IPv6 address.

domain-name *domain_name*

Specify the domain name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\',')]*).

iana-pool-name *iana_pool_name*

Specify the IANA pool name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\',')]*).

iapd-pool-name *iapd_pool_name*

Specify the IAPD pool name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\',')]*).

preference *server_preference*

Specify the DHCP server preference.

Must be an integer in the range of 1-255.

rapid-commit

Specify to allow rapid commit.

Usage Guidelines

Use this command to configure the DHCP server mode.

You can configure a maximum of "8" elements with this command.

profile dhcp ipv6 class server lease

Configures the lease parameters.

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv6 Configuration (config-ipv6) > DHCP Server Configuration Mode (config-server)

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv6 Configuration (config-ipv6) > DHCP Class Configuration (config-class-dhcp_class_name) > DHCP Server Configuration Mode (config-server)

Syntax Description **lease { [days *days*] [hours *hours*] [minutes *minutes*] }**

days *days*

Specify the number of days.

Must be an integer in the range of 0-365.

hours *hours*

Specify the hours.

Must be an integer in the range of 0-23.

minutes *minutes*

Specify the minutes.

Must be an integer in the range of 1-59.

Usage Guidelines Use this command to configure lease parameters.

profile dhcp ipv6 mode server option-codes option-code

Configures a DHCP option code.

Command Modes Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv6 Configuration (config-ipv6) > DHCP Server Configuration Mode (config-server) > Option Codes Configuration (config-option-codes)

Syntax Description **option-code *dhcp_option_code* [**ascii-string** *ascii_string* | **force-insert** { **false** | **true** } | **hex-string** *hex_string* | **ip-address** *ip_address*]**

option-code *dhcp_option_code*

Specify the DHCP option code [up to 255].

ascii-string *ascii_string*

Specify the ASCII string.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",']*).

force-insert { false | true }

Specify whether to force insert this option.

Must be one of the following:

- false
- true

If set to true, force insert the option regardless of the DHCPv6 Option Request Option (ORO) value. If set to false, honor the ORO option.

hex-string *hex_string*

Specify the hexadecimal string.

Must be a string in the pattern ([0-9a-fA-F]{2}([0-9a-fA-F]{2})*)?.

ip-address *ipv6_address*

Specify the server's IP addresses.

Must be an IPv6 address.

profile dhcp ipv6 server

Configures DHCP server mode.

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv6 Configuration (config-ipv6)

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv6 Configuration (config-ipv6) > DHCP Class Configuration (config-class-dhcp_class_name)

Syntax Description

```
server { aftr-name aftr_name | dns-servers ip_address | domain-name domain_name
| iana-pool-name iana_pool_name | iapd-pool-name iapd_pool_name | ipam-dp-key
circuit-id delimiter value substring value | preference server_preference |
rapid-commit }
```

aftr-name *aftr_name*

Specify the Address Family Transition Router (AFTR) name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",')]*).

dns-servers *ip_address*

Specify the DNS server IP addresses.

Must be an IPv6 address.

domain-name *domain_name*

Specify the domain name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",')]*).

iana-pool-name *iana_pool_name*

Specify the IANA pool name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",')]*).

iapd-pool-name *iapd_pool_name*

Specify the IAPD pool name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",\\')]*).

ipam-dp-key circuit-id delimiter *value* substring *value*

Specify the data plane key for IP management.

- **circuit-id *value***: The DHCPv6 interface-id found in the hop zero relay header will be used as the key for IPAM in the data plane.
- **delimiter *value***: The delimiter value must be a single character and can be one of the following: [!@#\$\$%^&*()_+].
- **substring *value***: This option can only be set to 0 or 1. It allows the string to be split into two substrings based on the first occurrence of the specified delimiter.

preference *server_preference*

Specify the DHCP server preference.

Must be an integer in the range of 1-255.

rapid-commit

Specify to allow rapid commit.

Usage Guidelines

Use this command to configure the DHCP server mode.

You can configure a maximum of "8" elements with this command.

profile dhcp ipv6 server lease

Configures the lease parameters.

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv6 Configuration (config-ipv6) > DHCP Server Configuration Mode (config-server)

Command Modes

Exec > Global Configuration (config) > DHCP Profile Configuration (config-dhcp-dhcp_profile_name) > DHCP IPv6 Configuration (config-ipv6) > DHCP Class Configuration (config-class-dhcp_class_name) > DHCP Server Configuration Mode (config-server)

Syntax Description

lease { [*days* *days*] [*hours* *hours*] [*minutes* *minutes*] }

days* *days

Specify the number of days.

Must be an integer in the range of 0-365.

hours* *hours

Specify the hours.

Must be an integer in the range of 0-23.

minutes *minutes*

Specify the minutes.

Must be an integer in the range of 1-59.

Usage Guidelines

Use this command to configure lease parameters.

profile feature-template

Configures feature templates.

Command Modes

Exec > Global Configuration (config)

Syntax Description

feature-template *feature_template_name* [[**vrf-name** *vrf_name*] [**httpr-policy** *httpr_policy_name*]]

httpr-policy *httpr_policy_name*

Specify the PBR HTTPR policy name.

Must be a string in the pattern ([a-zA-Z1-9_][^(\s,\t,\",')]*).

vrf-name *vrf_name*

Specify the VRF name.

Must be a string in the pattern ([a-zA-Z1-9_][^(\s,\t,\",')]*).

feature_template_name

Specify the feature template name.

Must be a string in the pattern ([a-zA-Z1-9_][^(\s,\t,\",')]*).

Usage Guidelines

Use this command to configure feature templates. Enters the Feature Template Configuration mode.

profile feature-template ipv4

Configures IPv4 features.

Command Modes

Exec > Global Configuration (config) > Feature Template Profile Configuration
(config-feature-template-*feature_template_name*)

Syntax Description

ipv4 [[**mtu** *maximum_transmission_unit*] [**ingress-acl** *ingress_ipv4_acl_name*] [**egress-acl** *egress_ipv4_acl_name*] [**disable-unreachables**]]

disable-unreachables

Specify to disable sending ICMP Unreachable messages.

egress-acl egress_ipv4_acl_name

Specify the egress IPV4 ACL name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",\\']*)).

ingress-acl ingress_ipv4_acl_name

Specify the ingress IPV4 ACL name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",\\']*)).

mtu maximum_transmission_unit

Specify the Maximum Transmission Unit in bytes.

Must be an integer in the range of 68-65535.

Usage Guidelines

Use this command to configure IPv4 features. Enters the IPv4 Configuration mode.

profile feature-template ipv4 verify-unicast-source

Enables per-packet validation for unicast.

Command Modes

Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template-*feature_template_name*) > IPv4 Configuration (config-ipv4)

Syntax Description

verify-unicast-source reachable-via-rx

reachable-via-rx

Specify the source is reachable via interface on which packet was received.

Usage Guidelines

Use this command to enable per-packet validation for unicast.

profile feature-template ipv6

Configures IPv6 features.

Command Modes

Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template-*feature_template_name*)

Syntax Description

ipv6 [[mtu *maximum_transmission_unit*] [ingress-acl *ingress_ipv6_acl_name*] [egress-acl *egress_ipv6_acl_name*]]

disable-unreachables

Specify to disable sending ICMP Unreachable messages.

egress-acl egress_ipv6_acl_name

Specify the egress IPV6 ACL name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",')]*).

ingress-acl *ingress_ipv6_acl_name*

Specify the ingress IPv6 ACL name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",')]*).

mtu *maximum_transmission_unit*

Specify the Maximum Transmission Unit in bytes.

Must be an integer in the range of 1280-65535.

Usage Guidelines

Use this command to configure IPv6 features. Enters the IPv6 Configuration mode.

profile feature-template ipv6 verify-unicast-source

Configures per packet validation for unicast.

Command Modes

Exec > Global Configuration (config) > Feature Template Profile Configuration
(config-feature-template-*feature_template_name*) > IPv6 Configuration (config-ipv6)

Syntax Description

verify-unicast-source reachable-via-rx

reachable-via-rx

Specify source is reachable via interface on which packet was received.

Usage Guidelines

Use this command to configure per packet validation for unicast.

profile feature-template ppp

Configures PPP feature.

Command Modes

Exec > Global Configuration (config) > Feature Template Profile Configuration
(config-feature-template-*feature_template_name*)

Syntax Description

ppp [[authentication *authentication_method*] [max-bad-auth *max_auth_failures*] [max-configure *max_configure*] [max-failure *max_conf_naks*]]

authentication *authentication_method*

Specify the authentication method.

Must be one of the following:

- chap
- pap

max-bad-auth *max_auth_failures*

Specify the maximum authentication failures to allow.

Must be an integer in the range of 0-10.

max-configure *max_configure*

Specify the maximum conf-reqs to send without response.

Must be an integer in the range of 1-10.

max-failure *max_conf_naks*

Specify the maximum conf-naks to receive.

Must be an integer in the range of 1-5.

Usage Guidelines

Use this command to configure the PPP feature. Enters the PPP Configuration mode.

You can configure a maximum of "2" elements with this command.

profile feature-template ppp chap

Configures Challenge Handshake Authentication Protocol (CHAP) parameters.

Command Modes

Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template-*feature_template_name*) > PPP Configuration (config-ppp)

Syntax Description

chap **hostname** *chap_host_name* [**password** *chap_password*]

hostname *chap_host_name*

Specify the CHAP host name.

hostname *chap_host_name*

Specify the CHAP host name.

password *chap_password*

Specify the CHAP password.

Must be an aes-cfb-128-encrypted string.

Usage Guidelines

Use this command to configure CHAP parameters.

profile feature-template ppp ipcp

Configures PPP IPCP negotiation parameters.

Command Modes

Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template-*feature_template_name*) > PPP Configuration (config-ppp)

Syntax Description **ipcp peer-address-pool** *peer_address_pool_name*

peer-address-pool *peer_address_pool_name*

Specify the peer-address pool name.

Usage Guidelines Use this command to configure PPP IPCP negotiation parameters.

profile feature-template ppp ipcp dns

Configures DNS address to be used for peer.

Command Modes Exec > Global Configuration (config) > Feature Template Profile Configuration
(config-feature-template-*feature_template_name*) > PPP Configuration (config-ppp)

Syntax Description **ipcp dns primary-address** *primary_address* **secondary-address** *secondary_address*

primary-address *primary_address*

Specify the primary address. The first address is considered as Primary and second address as Secondary.

Must be an IPv4 address.

secondary-address *secondary_address*

Specify the secondary address.

Must be an IPv4 address.

Usage Guidelines Use this command to configure DNS address to be used for peer.

profile feature-template ppp ipcp renegotiation

Configures renegotiation parameters.

Command Modes Exec > Global Configuration (config) > Feature Template Profile Configuration
(config-feature-template-*feature_template_name*) > PPP Configuration (config-ppp)

Syntax Description **ipcp renegotiation ignore**

ignore

Specify to ignore attempts by the peer to renegotiate LCP.

Usage Guidelines Use this command to configure renegotiation parameters.

profile feature-template ppp ipcp wins

Configures WINS address to be used for peer.

Command Modes	Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template- <i>feature_template_name</i>) > PPP Configuration (config-ppp)
Syntax Description	ipcp wins primary-address <i>primary_ip_address</i> secondary-address <i>secondary_ip_address</i> primary-address <i>primary_ip_address</i> Specify the primary address. Must be an IPv4 address. secondary-address <i>secondary_ip_address</i> Specify the secondary address. Must be an IPv4 address.
Usage Guidelines	Use this command to configure WINS address to be used for peer.

profile feature-template ppp ipv6cp renegotiation

Configures IPv6CP renegotiation parameters.

Command Modes	Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template- <i>feature_template_name</i>) > PPP Configuration (config-ppp)
Syntax Description	ipv6cp renegotiation ignore ignore Specify to ignore attempts by the peer to renegotiate LCP.
Usage Guidelines	Use this command to configure IPv6CP renegotiation parameters.

profile feature-template ppp keepalive

Configures PPP Keepalive parameters.

Command Modes	Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template- <i>feature_template_name</i>) > PPP Configuration (config-ppp)
Syntax Description	keepalive { disable interval <i>keepalive_interval</i> retry <i>keepalive_retries</i> } disable Specify to disable PPP keepalive. interval <i>keepalive_interval</i> Specify the keepalive interval in minutes.

Must be an integer in the range of 10-120.

retry *keepalive_retries*

Specify the number of keepalive retries.

Must be an integer in the range of 1-255.

Usage Guidelines Use this command to configure PPP Keepalive parameters.

profile feature-template ppp lcp delay

Configures the time to delay before starting active LCP negotiations.

Command Modes Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template-*feature_template_name*) > PPP Configuration (config-ppp)

Syntax Description **lcp delay seconds** *delay_value* **milliseconds** *delay_value*

milliseconds *delay_value*

Specify the delay value in milliseconds.

Must be an integer in the range of 0-70000000.

seconds *delay_value*

Specify the delay value in seconds.

Must be an integer in the range of 0-255.

Usage Guidelines Use this command to configure the time to delay before starting active LCP negotiations.

profile feature-template ppp lcp renegotiation

Configures LCP renegotiation feature.

Command Modes Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template-*feature_template_name*) > PPP Configuration (config-ppp)

Syntax Description **lcp renegotiation ignore**

ignore

Specify to ignore attempts by the peer to renegotiate LCP.

Usage Guidelines Use this command to configure LCP renegotiation feature.

profile feature-template ppp pap

Configures PAP parameters.

Command Modes Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template-*feature_template_name*) > PPP Configuration (config-ppp)

Syntax Description **pap accept-null-password**

accept-null-password

Specify to accept null-password option.

Usage Guidelines Use this command to configure PAP parameters.

profile feature-template ppp timeout

Configures PPP timeout parameters.

Command Modes Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template-*feature_template_name*) > PPP Configuration (config-ppp)

Syntax Description **timeout { [authentication total_auth_complete_time] [retry max_response_time] }**

Command Modes Exec > Global Configuration (config) > Endpoint N4 Protocol Configuration (config-endpoint-n4-protocol)

Syntax Description **retransmission timeout total_auth_complete_time [retry max_response_time]**

authentication total_auth_complete_time

Specify the total time to allow for authentication to complete.

Must be an integer in the range of 3-30.

retry max_response_time

Specify the maximum time to wait for a response to a Conf-Req in seconds.

Must be an integer in the range of 1-10.

Usage Guidelines Use this command to configure PPP timeout parameters.

profile feature-template ppp timeout absolute

Configures the absolute timeout period for a PPP session.

Command Modes	Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template- <i>feature_template_name</i>) > PPP Configuration (config-ppp)
Syntax Description	timeout absolute minutes <i>timeout_minutes</i> seconds <i>timeout_seconds</i> minutes <i>timeout_minutes</i> Specify the timeout period in minutes. Must be an integer in the range of 0-70000000.
Usage Guidelines	Use this command to configure the absolute timeout period for a PPP session.

profile feature-template qos

Configures QoS policy parameters.

Command Modes	Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template- <i>feature_template_name</i>)
Syntax Description	qos [in-policy <i>in_policy_name</i> { in-shared-policy-instance <i>spi_name</i> } out-policy <i>out_policy_name</i> { out-shared-policy-instance <i>spi_name</i> } merge-level <i>merge_level</i>] in-policy <i>in_policy_name</i> Specify the QoS input policy name. Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\',')]*). in-shared-policy-instance <i>spi_name</i> Specify the input SPI name for the QoS policy. This command applies a shared traffic policy to inbound traffic across multiple interfaces Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\',')]*). merge-level <i>merge_level</i> Specify the merge level. 0 = merge disabled, 0 = merge enabled + level. Must be an integer. out-policy <i>out_policy_name</i> Specify the QoS output policy name. Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\',')]*). out-shared-policy-instance <i>spi_name</i> Specify the output SPI name for the QoS policy. This command applies a shared traffic policy to outbound traffic across multiple interfaces.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",')]*).

Usage Guidelines Use this command to configure QoS policy parameters.

profile feature-template service-accounting

Configures service accounting parameters.

Command Modes Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template-*feature_template_name*)

Syntax Description **service-accounting** [[**enable**] [**aaa-profile** *aaa_profile_name*] [**periodic-interval** *interim_interval*]]

aaa-profile *aaa_profile_name*

Specify the AAA profile to use for service accounting.

enable

Specify to enable service accounting.

periodic-interval *interim_interval*

Specify the interim interval in seconds.

Must be an integer in the range of 60-4320000.

Usage Guidelines Use this command to configure service accounting parameters.

profile feature-template session-accounting

Configures session accounting parameters.

Command Modes Exec > Global Configuration (config) > Feature Template Profile Configuration (config-feature-template-*feature_template_name*)

Syntax Description **session-accounting enable** { **aaa-profile** *aaa_profile_name* | **periodic-interval** *interim_interval* | **dual-stack-delay** *dual_stack_delay_wait* }

aaa-profile *aaa_profile_name*

Specify the AAA profile to use for session accounting.

dual-stack-delay *dual_stack_delay_wait*

Specify the dual stack set delay wait in seconds.

Must be an integer in the range of 1-30.

enable

Specify to enable session accounting.

periodic-interval *interim_interval*

Specify the interim interval in seconds.

Must be an integer in the range of 60-4320000.

Usage Guidelines

Use this command to configure session accounting parameters.

profile l2tp tunnel timeout busy

Configures the timeout period before marking an LNS server as busy.

Command Modes

Exec > Global Configuration (config) > profile l2tp >

Syntax Description

```
profile l2tp l2tp_profile_name { tunnel { timeout { busy value } } }
```

tunnel timeout busy *value*

Specifies the timeout period before marking an LNS server as busy. The valid values range from 60 to 65535 seconds.

profile pppoe

Configures PPPOE Subscriber profiles.

Command Modes

Exec > Global Configuration (config)

Syntax Description

```
profile pppoe pppoe_profile_name [ [ ac-cookie ac_cookie ] [ ac-name ac_name ] [ ctrl-pkt-priority priority ] [ service-name pppoe_service_names ] [ service-selection-disable { false | true } ] [ timeout-completion session_completion_timeout ] ]
```

ctrl-pkt-priority *priority*

Specify the CoS bits to use in PADx packets.

Must be an integer in the range of 0-7.

Default Value: 0.

mtu *pppoe_mtu*

Specify the PPPOE MTU for LCP negotiation.

Must be an integer in the range of 500-2000.

Default Value: 1492.

service-name *pppoe_service_names*

Specify the supported PPPoE service names. You can simultaneously configure multiple service names.

service-selection-disable { false | true }

Specify to disable or enable the advertising of extra service names in PADO packets.

Must be one of the following:

- false
- true

Default Value: false.

pppoe_profile_name

Specify the PPPOE profile name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",')]*).

ac-name *ac_name*

Specify the the AC-Name to use in PADO packets.

ctrl-pkt-priority *priority*

Specify the CoS bits to use in PADx packets.

Must be an integer in the range of 0-7.

Default Value: 0.

mtu *pppoe_mtu*

Specify the PPPOE MTU for LCP negotiation.

Must be an integer in the range of 500-2000.

Default Value: 1492.

service-name *pppoe_service_names*

Specify the supported PPPoE service names. You can simultaneously configure multiple service names.

service-selection-disable { false | true }

Specify to disable or enable the advertising of extra service names in PADO packets.

Must be one of the following:

- false
- true

Default Value: false.

pppoe_profile_name

Specify the PPPOE profile name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",\\')]*).

ac-cookie ac_cookie

Specify the AC-Cookie to use in PADO packets.

ac-name ac_name

Specify the the AC-Name to use in PADO packets.

ctrl-pkt-priority priority

Specify the CoS bits to use in PADx packets.

Must be an integer in the range of 0-7.

Default Value: 0.

mtu pppoe_mtu

Specify the PPPOE MTU for LCP negotiation.

Must be an integer in the range of 500-2000.

Default Value: 1492.

service-name pppoe_service_names

Specify the supported PPPoE service names. You can simultaneously configure multiple service names.

service-selection-disable { false | true }

Specify to disable or enable the advertising of extra service names in PADO packets.

Must be one of the following:

- false
- true

Default Value: false.

pppoe_profile_name

Specify the PPPOE profile name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",\\')]*).

ac-cookie ac_cookie

Specify the AC-Cookie to use in PADO packets.

ac-name *ac_name*

Specify the the AC-Name to use in PADO packets.

ctrl-pkt-priority *priority*

Specify the CoS bits to use in PADx packets.

Must be an integer in the range of 0-7.

Default Value: 0.

mtu *pppoe_mtu*

Specify the PPPOE MTU for LCP negotiation.

Must be an integer in the range of 500-2000.

Default Value: 1492.

service-name *pppoe_service_names*

Specify the supported PPPoE service names. You can simultaneously configure multiple service names.

service-selection-disable { false | true }

Specify to disable or enable the advertising of extra service names in PADO packets.

Must be one of the following:

- false
- true

Default Value: false.

timeout-completion *session_completion_timeout*

Specify the maximum wait time for session to be completed.

Must be an integer in the range of 3-600.

Default Value: 180.

pppoe_profile_name

Specify the PPPOE profile name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",']*).

Usage Guidelines

Use this command to configure PPPOE Subscriber profiles. Enters the PPPOE Profile Configuration mode.

profile pppoe max-payload

Configures a range for the ppp-max payload tag value.

Command Modes

Exec > Global Configuration (config) > PPPOE Profile Configuration (config-pppoe-*pppoe_profile_name*)

Syntax Description	<pre>max-payload { deny minimum <i>minimum_payload_value</i> maximum <i>maximum_payload_value</i> }</pre> deny Specify to deny the PPP-max payload value. maximum <i>maximum_payload_value</i> Specify the maximum payload value. Must be an integer in the range of 1-40000. Default Value: "1500". minimum <i>minimum_payload_value</i> Specify the minimum value for the payload. Must be an integer in the range of 1-40000. Default Value: "1492".
Usage Guidelines	Use this command to configure a range for the ppp-max payload tag value.

profile pppoe session-limit circuit-id

Configures the maximum number of sessions allowed per Circuit-ID.

Command Modes	Exec > Global Configuration (config) > PPPOE Profile Configuration (config-pppoe-pppoe_profile_name)
Syntax Description	<pre>session-limit circuit-id <i>value</i> [threshold <i>threshold_count</i>]</pre> threshold <i>threshold_count</i> Specify the threshold count. Must be an integer in the range of 1-65535. value <i>attribute_value</i> Specify the attribute value. Must be an integer in the range of 1-65535.
Usage Guidelines	Use this command to configure the maximum number of sessions allowed per Circuit-ID.

profile pppoe session-limit circuit-id-and-remote-id

Configures the maximum number of sessions allowed based on the combination of PPPoE Circuit-ID and Remote-ID.

Command Modes	Exec > Global Configuration (config) > PPPOE Profile Configuration (config-pppoe- <i>pppoe_profile_name</i>)
Syntax Description	session-limit circuit-id-and-remote-id <i>value</i> <i>value</i> Specify the attribute value. Must be an integer in the range of 1-65535.

profile pppoe session-limit mac

Configures the maximum number of sessions allowed per peer MAC address.

Command Modes	Exec > Global Configuration (config) > PPPOE Profile Configuration (config-pppoe- <i>pppoe_profile_name</i>)
Syntax Description	session-limit mac <i>value</i> [threshold <i>threshold_count</i>] threshold <i>threshold_count</i> Specify the threshold count. Must be an integer in the range of 1-65535. value <i>attribute_value</i> Specify the attribute value. Must be an integer in the range of 1-65535.
Usage Guidelines	Use this command to configure the maximum number of sessions allowed per peer MAC address.

profile pppoe session-limit max

Configures the maximum number of sessions allowed under the PPPoE profile.

Command Modes	Exec > Global Configuration (config) > PPPOE Profile Configuration (config-pppoe- <i>pppoe_profile_name</i>)
Syntax Description	session-limit max <i>value</i> [threshold <i>threshold_count</i>] threshold <i>threshold_count</i> Specify the threshold count. Must be an integer in the range of 1-65535. value <i>attribute_value</i> Specify the attribute value. Must be an integer in the range of 1-65535.

Usage Guidelines Use this command to configure the maximum number of sessions allowed under the PPPoE profile.

profile pppoe session-limit outer-vlan

Configures the maximum number of sessions allowed per outer-vlan, per access interface.

Command Modes Exec > Global Configuration (config) > PPPOE Profile Configuration (config-pppoe-*pppoe_profile_name*)

Syntax Description **session-limit outer-vlan** *value* [**threshold** *threshold_count*]

threshold *threshold_count*

Specify the threshold count.

Must be an integer in the range of 1-65535.

value *attribute_value*

Specify the attribute value.

Must be an integer in the range of 1-65535.

Usage Guidelines Use this command to configure the maximum number of sessions allowed per outer-vlan, per access interface.

profile radius

Configures RADIUS client profile parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **profile radius** [**algorithm** *radius_server_selection_algorithm* | **deadtime** *dead_time* | **max-retry** *max_retry* | **timeout** *retransmit_timeout_duration*]

algorithm *radius_server_selection_algorithm*

Specify the algorithm for selecting RADIUS server.

Must be one of the following:

- **first-server**: Highest priority first.
- **round-robin**: Round-robin.
- **least-outstanding**: Least number of outstanding transactions.

deadtime *dead_time*

Specify the time to elapse, in minutes, between RADIUS server marked unreachable and when connection can be re-attempted.

Must be an integer in the range of 0-65535.

max-retry *max_retry*

Specify the maximum number of times the system must attempt retry with the RADIUS server.

Must be an integer in the range of 0-65535.

timeout *retransmit_timeout_duration*

Specify the time duration to wait for response from the RADIUS server before retransmitting.

Must be an integer in the range of 1-65535.

Usage Guidelines

Use this command to configure RADIUS client parameters. Enters the RADIUS Client Profile Configuration mode.

profile radius accounting

Configures RADIUS accounting parameters.

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)

Syntax Description

```

profile radius accounting
  algorithm { first-server | round-robin }
  attribute { nas-identifier value | nas-ip { ipv4_address | user-plane-ip
} |
  nas-port { nas_port } | { format-e format_e
  { nas-port-type nas_port_type } }
  deadtime value
  detect-dead-server response-timeout value
  max-retry value
  timeout value
  commit

```

algorithm { first-server | round-robin }

Specify the algorithm for selecting RADIUS server.

Must be one of the following:

- **first-server**: Highest priority first.
- **round-robin**: Round-robin.

```

attribute { nas-identifier value | nas-ip { ipv4_address | user-plane-ip } | nas-port { format-e format_e_value
| nas-port-type nas_port_type }}

```

Configures the RADIUS identification parameters.

- **nas-identifier** *value*: Specifies the attribute name by which the system will be identified in Accounting-Request messages. *value* must be an alphanumeric string.
- **nas-ip** *ipv4_address*: Specifies the NAS IPv4 address. *ipv4_address* must be an IPv4 address in dotted decimal notation.

- **nas-ip user-plane-ip**: Enables the `user-plane-ip-address` AVPair to use the configured User-Plane IP address in Accounting-Request messages.
- **nas-port { nas_port } | { format-e format_e { nas-port-type nas_port_type } }**: Specifies the nas-port attributes.
 - `nas_port` configures the NAS port value. The NAS port value ranges from 1 to 4294967295.

**Note**

If none of the NAS port configurations are present, the existing default nas-port logic is applied. That is, setting a fixed-number per radius-pod.

- **format-e format_e_value**: Specifies the custom attribute formation support for nas-port. The nas-port is a 32 bit integer format. The configuration takes a 32 length of characters, each presenting a particular attribute mapping. The `format_e_value` pattern is: 01FSAPRiLUVQ]*):
- 0 – Set bit to 0
1 – Set bit to 1
F - PHY_SHELF
S – PHY_SLOT
A – PHY_ADAPTER
P - PHY_PORT
R - PHY_CHASSIS
i - PHY_SUBSLOT
L - PHY_CHANNEL
V - OUTER_VLAN_ID
Q - INNER_VLAN_ID
U - PPPOE_SESSION_ID
- **nas-port-type nas_port_type**: Specifies the NAS port type. The supported values range from 0 to 44.

**Note**

- The nas-port-type configuration is not in scope of the Control Plane. It is derived from the interface-type.
- The supported NAS port types are 36 , 37, 43, and 44.
- The NAS port type value takes precedence over the common NAS port format-e.

deadtime dead_time

Sets the time to elapse, in minutes, between RADIUS server marked unreachable and when connection can be re-attempted.

Must be an integer in the range of 0-65535. Default: 10 minutes.

detect-dead-server response-timeout *value*

Sets the timeout value that marks a server as "dead" when a packet is not received for the specified number of seconds.

value must be an integer from 1 through 65535. Default: 10 seconds.

max-retry *max_retry*

Sets the maximum number of times the system must attempt retry with the RADIUS server.

Must be an integer in the range of 0-65535. Default: 2

timeout *retransmit_timeout_duration*

Sets the time duration to wait for response from the RADIUS server before retransmitting.

Must be an integer in the range of 1-65535. Default: 2 seconds.

Usage Guidelines

Use this command to configure RADIUS accounting parameters. Enters the RADIUS Accounting Configuration mode.

profile radius accounting attribute called-station-id

Configures the AAA called-station-id attribute.

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)

Syntax Description

attribute called-station-id *value*

value

Specify the value of the AAA called-station-id attribute.

Must be a string.

Usage Guidelines

Use this command to configure the AAA called-station-id attribute.

profile radius accounting attribute calling-station-id

Configures the AAA calling-station-id attribute.

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)

Syntax Description	attribute calling-station-id <i>value</i> value Specify the value of the AAA calling-station-id attribute. Must be a string.
Usage Guidelines	Use this command to configure the AAA calling-station-id attribute.

profile radius accounting attribute nas-identifier-format

Configures the AAA nas-identifier-format attribute.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	attribute nas-identifier-format <i>value</i>
Usage Guidelines	Use this command to configure the AAA nas-identifier-format attribute.

profile radius accounting attribute nas-port-id

Configures the AAA nas-port-id attribute.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	attribute nas-port-id <i>value</i> value Specify value of the AAA nas-port-id attribute. Must be a string.
Usage Guidelines	Use this command to configure the AAA nas-port-id attribute.

profile radius accounting detect-dead-server

Configures parameters to detect a dead RADIUS server.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
----------------------	---

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	detect-dead-server response-timeout <i>response_timeout_duration</i> response-timeout <i>response_timeout_duration</i> Specify the time duration, in seconds, for a response from the RADIUS server to mark it as unreachable. Must be an integer in the range of 1-65535.
Usage Guidelines	Use this command to configure parameters to detect a dead RADIUS server.

profile radius attribute called-station-id

Configures the AAA called-station-id attribute.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	attribute called-station-id <i>value</i> format-name <i>format_name</i> Specify the attribute format name. Must be a string. value Specify the value of the AAA called-station-id attribute. Must be a string.
Usage Guidelines	Use this command to configure the AAA called-station-id attribute.

profile radius attribute called-station-id format

Configures node parameters.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	attribute <i>attribute_name</i> format nas-port-type <i>nas_port_type</i> format-name <i>format_name</i>

nas-port-type *nas_port_type*

Specify the Nas-Port-Type value to apply format name on.

Must be an integer.

format-name *format_name*

Specify the attribute format name.

Must be a string.

nas-port-type *nas_port_type*

Specify the Nas-Port-Type value to apply format name on.

Must be an integer.

Usage Guidelines

Use this command to configure node parameters for nas-port-id, calling-station-id, called-station-id, nas-identifier-format.

profile radius attribute calling-station-id

Configures the AAA calling-station-id attribute.

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)

Syntax Description

attribute calling-station-id *value*

format-name *format_name*

Specify the attribute format name.

Must be a string.

value

Specify the value of the AAA calling-station-id attribute.

Must be a string.

Usage Guidelines

Use this command to configure the AAA calling-station-id attribute.

profile radius attribute calling-station-id format

Configures node parameters.

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	attribute <i>attribute_name</i> format nas-port-type <i>nas_port_type</i> format-name <i>format_name</i> nas-port-type <i>nas_port_type</i> Specify the Nas-Port-Type value to apply format name on. Must be an integer. format-name <i>format_name</i> Specify the attribute format name. Must be a string. nas-port-type <i>nas_port_type</i> Specify the Nas-Port-Type value to apply format name on. Must be an integer.
Usage Guidelines	Use this command to configure node parameters for nas-port-id, calling-station-id, called-station-id, nas-identifier-format.

profile radius attribute nas-identifier-format

Configures the AAA nas-identifier-format attribute.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	attribute nas-identifier-format <i>value</i> format-name <i>format_name</i> Specify the attribute format name. Must be a string.
Usage Guidelines	Use this command to configure the AAA nas-identifier-format attribute.

profile radius attribute nas-identifier-format format

Configures node parameters.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
----------------------	---

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	attribute <i>attribute_name</i> format nas-port-type <i>nas_port_type</i> format-name <i>format_name</i> nas-port-type <i>nas_port_type</i> Specify the Nas-Port-Type value to apply format name on. Must be an integer. format-name <i>format_name</i> Specify the attribute format name. Must be a string. nas-port-type <i>nas_port_type</i> Specify the Nas-Port-Type value to apply format name on. Must be an integer.
Usage Guidelines	Use this command to configure node parameters for nas-port-id, calling-station-id, called-station-id, nas-identifier-format.

profile radius attribute nas-ip

Configures the NAS IPv4 or User-Plane IP address.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Attribute Configuration (config-attribute)
Syntax Description	attribute nas-ip { <i>ipv4_address</i> user-plane-ip } nas-ip <i>ipv4_address</i> Specifies the AAA NAS IPv4 address. nas-ip user-plane-ip Enables the <i>user-plane-ip-address</i> AVPair to use the configured User-Plane IP address in Access-Request or Accounting-Request messages.
Usage Guidelines	Use this command to configure the AAA NAS-IP attribute.

profile radius attribute nas-port-id

Configures the AAA nas-port-id attribute.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	attribute nas-port-id <i>value</i> format-name <i>format_name</i> Specify the attribute format name. Must be a string. value Specify value of the AAA nas-port-id attribute. Must be a string.
Usage Guidelines	Use this command to configure the AAA nas-port-id attribute.

profile radius attribute nas-port-id format

Configures node parameters.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	attribute <i>attribute_name</i> format nas-port-type <i>nas_port_type</i> format-name <i>format_name</i> nas-port-type <i>nas_port_type</i> Specify the Nas-Port-Type value to apply format name on. Must be an integer. format-name <i>format_name</i> Specify the attribute format name. Must be a string. nas-port-type <i>nas_port_type</i> Specify the Nas-Port-Type value to apply format name on. Must be an integer.
Usage Guidelines	Use this command to configure node parameters for nas-port-id, calling-station-id, called-station-id, nas-identifier-format.

profile radius detect-dead-server

Configures parameters to detect a dead RADIUS server.

Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)
Command Modes	Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Accounting Configuration (config-accounting)
Syntax Description	detect-dead-server response-timeout <i>response_timeout_duration</i> response-timeout <i>response_timeout_duration</i> Specify the time duration, in seconds, for a response from the RADIUS server to mark it as unreachable. Must be an integer in the range of 1-65535.
Usage Guidelines	Use this command to configure parameters to detect a dead RADIUS server.

profile radius radius-server attribute

Configures RADIUS server attributes list.

Command Modes	Exec > Global Configuration (config)
Syntax Description	profile radius radius-server attribute attr-list <i>list_name</i> { ietf-attributes <i>ietf_attributes</i> vendor-attribute { vendor-id <i>vendor_id</i> vendor-type <i>vendor_type_value</i> [name] } attribute attr-list <i>list_name</i> Specify the RADIUS server attributes list. ietf-attributes <i>ietf_attributes</i> Configures the list of Internet Engineering Task Force (IETF) attributes. For example, ietf-attributes [88 8 30 2] indicates that IETF attributes such as Framed-IP-Pool (88), Framed-IP-Address (8), Called-Station-Id(30), User-Password(2) are configured. vendor-attribute vendor-id <i>vendor_id</i> vendor-type <i>vendor_type_value</i> Configures the list of Internet Engineering Task Force (IETF) attributes. For example, ietf-attributes [88 8 30 2] indicates that IETF attributes such as Framed-IP-Pool (88), Framed-IP-Address (8), Called-Station-Id(30), User-Password(2) are configured. name [Optional] Specifies the attribute name for a Cisco generic Vendor Specific Attribute (VSA). The name option is only available for vendor-id 9 and vendor-type 1.



Note For vendor-type 1, if names are not configured, the accept or reject action applies to all vendor-type attributes of the configured vendor ID.

profile radius server

Configures RADIUS external server configuration.

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)

Syntax Description

server *radius_server_ip_address* *radius_server_port_number* [**priority** *radius_server_priority* | **secret** *radius_server_secret* | **type** *server_type*]

priority *radius_server_priority*

Specify the priority of the RADIUS server.

Must be an integer in the range of 1-100.

secret *radius_server_secret*

Specify the secret of the RADIUS server.

Must be an aes-cfb-128-encrypted string.

type *server_type*

Specify the server type.

Must be one of the following:

- **acct**
- **auth**

Default Value: auth.

radius_server_ip_address

Specify the IP address of the RADIUS server.

Must be an IP address.

radius_server_port_number

Specify the port number of the RADIUS server.

Must be an integer in the range of 1-65535.

Usage Guidelines

Use this command to configure RADIUS external server configuration.

profile radius server-group

Configures association of RADIUS servers to groups.

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius)

Syntax Description

```
server-group server_group_name { accounting { request accept list_name reply
accept list_name } | authentication { request accept list_name reply accept
list_name }
```

server_group_name

Specify the server group name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,\"')]*).

accounting { request accept | request reject list_name reply accept | reply reject list_name }

Enters the accounting sub-mode.

- **request accept** *list_name*: Configures the accept attributes list for request messages in RADIUS accounting.
- **reply accept** *list_name*: Configures the accept attributes list for reply messages in RADIUS accounting.
- **request reject** *list_name*: Configures the reject attributes list for request messages in RADIUS accounting.
- **reply reject** *list_name*: Configures the reject attributes list for reply messages in RADIUS accounting.

authentication { request accept | request reject list_name reply accept | reply reject list_name }

Enters the authentication sub-mode.

- **request accept** *list_name*: Configures the accept attributes list for request messages in RADIUS authentication.
- **reply accept** *list_name*: Configures the accept attributes list for reply messages in RADIUS authentication.
- **request reject** *list_name*: Configures the reject attributes list for request messages in RADIUS authentication.
- **reply reject** *list_name*: Configures the reject attributes list for reply messages in RADIUS authentication.

Usage Guidelines

Use this command to configure association of RADIUS servers to groups. Enters the Server Group Configuration mode.

profile radius server-group server

Configures RADIUS server information.

Command Modes

Exec > Global Configuration (config) > RADIUS Profile Configuration (config-radius) > RADIUS Server Group Configuration (config-server-group-server_group_name)

Syntax Description **server** *radius_server_type* **ip** *radius_server_ip_address* **port** *radius_port_number*

ip *radius_server_ip_address*

Specify IP address of the RADIUS server.

port *radius_port_number*

Specify the port number of the RADIUS server.

radius_server_type

Specify the server type.

Must be one of the following:

- **acct**: Server used for accounting requests.
- **auth**: Server is used for authentication/authorization requests.

Usage Guidelines Use this command to configure RADIUS server information.

profile server-group

Configures AAA custom server groups.

Command Modes Exec > Global Configuration (config)

Syntax Description **server-group** *server_group_name* **radius-group** *radius_server_group_name*

radius-group *radius_server_group_name*

Specify the RADIUS server group name.

aaa_server_group_name

Specify the AAA server group name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\",']*).

Usage Guidelines Use this command to configure AAA custom server groups.

profile slaac

Configures Stateless Address Autoconfiguration (SLAAC) profile parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **profile slaac** *slaac_profile_name* { [**managed-config-flag enable**] [**other-config-flag enable**] [**prefix-pool** *slaac_prefix_pool_name*]

managed-config-flag enable

Enables M-bit for IPv6 RA packets.

other-config-flag enable

Enables O-bit for IPv6 RA packets.

prefix-pool *slaac_prefix_pool_name*

Specifies the /64 IPv6 PD prefix pool to allocate SLAAC prefix to subscribers.

Usage Guidelines

Use this command to configure SLAAC profiles. Enters the SLAAC Profile Configuration mode.

profile subscriber

Configures subscriber profiles.

Command Modes

Exec > Global Configuration (config)

Syntax Description

```
profile subscriber subscriber_profile_name [ [ activate-feature-templates
template_names ] [ apply-all-class ] [ dhcp-profile dhcp_profile_name ] [
pppoe-profile pppoe_profile_name ] [ session-type session_type ] ]
```

activate-feature-templates *template_names*

Specify the list of feature templates to activate.

apply-all-class

Specify to apply all classes if enabled.

dhcp-profile *dhcp_profile_name*

Specify the DHCP-FSOL profile name.

pppoe-profile *pppoe_profile_name*

Specify the PPPOE-FSOL profile name.

session-type *session_type*

Specify the allowed session type.

Must be one of the following:

- **ipv4**
- **ipv4v6**
- **ipv6**

Default Value: ipv4v6.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,\"'"]*).

Use this command to configure subscriber profiles. Enters the Subscriber Profile Configuration mode.

You can configure a maximum of "8" elements with this command.

Configures AAA operations.

```
aaa aaa option aaa profile name
```

- **authenticate**
- **authorize**

Specify the AAA profile name.

Use this command to configure AAA operations.

Enables the sending of accounting stop records upon session bring-up failures.

Exec > Global Configuration (config)

Syntax Description

```
profile subscriber subs_profile accounting send-stop setup-failure
aaa-profile aaa_profile_name
```

If the AAA_Profile_Name is	then
<code>use-author-profile</code>	the AAA profile configured for authorization is used for sending the accounting stop record in case of session bringup failure. This configuration is used for IPoE sessions.
<code>use-authen-profile</code>	the AAA profile configured for authentication is used for sending the accounting stop record in case of session bringup failure. This configuration is used for PPPoE, LAC or LNS sessions.

profile subscriber class

Configures subscriber classification parameters.

Command Modes

Exec > Global Configuration (config) > Subscriber Profile Configuration
(config-subscriber-subscriber_profile_name)

Command Modes

Exec > Global Configuration (config) > Subscriber Profile Configuration
(config-subscriber-subscriber_profile_name) > Event Configuration (config-event-event_name)

Syntax Description

```
class class_name [ activate-feature-templates feature_template_names ]
```

activate-feature-templates *feature_template_names*

Specify the list of feature template names to activate.

class_name

Specify the class name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,\"']*).

Usage Guidelines

Use this command to configure subscriber classification parameters. Enters the Subscriber Class Configuration mode.

You can configure a maximum of "8" elements with this command.

profile subscriber class aaa

Configures AAA operations.

Command Modes

Exec > Global Configuration (config) > Subscriber Profile Configuration
(config-subscriber-subscriber_profile_name) > Subscriber Class Configuration (config-class-class_name)

Syntax Description **aaa** *aaa_option profile_name*

aaa_option

Specify the AAA option.

Must be one of the following:

- **authenticate**
- **authorize**

profile_name

Specify the AAA profile name.

Usage Guidelines Use this command to configure AAA operations.

profile subscriber class matches

Configures the list of match values.

Command Modes Exec > Global Configuration (config) > Subscriber Profile Configuration (config-subscriber-subscriber_profile_name) > Class Configuration (config-class-class_name)

Command Modes Exec > Global Configuration (config) > Subscriber Profile Configuration (config-subscriber-subscriber_profile_name) > Event Configuration (config-event-event_name) > Class Configuration (config-class-class_name)

Syntax Description **matches** [**match-type** { **all** | **any** }]

match-type match_type

Specify the match type.

Usage Guidelines Use this command to configure the list of match values. Enters the Matches Configuration mode.

profile subscriber class matches match

Configures match key and value.

Command Modes Exec > Global Configuration (config) > Subscriber Profile Configuration (config-subscriber-subscriber_profile_name) > Class Configuration (config-class-class_name) > Matches Configuration (config-matches)

Command Modes Exec > Global Configuration (config) > Subscriber Profile Configuration (config-subscriber-subscriber_profile_name) > Event Configuration (config-event-event_name) > Class Configuration (config-class-class_name) > Matches Configuration (config-matches)

Syntax Description **match** *match_key* { *match_protocol* | **ascii** *ascii_string* | **regex** *regex_string* }

match_key

Specify the match key.

ascii ascii_string

Specify the ASCII string.

Must be a string.

regex regex_string

Specify the regular expression string.

Must be a string.

match_key

Specify the match key.

match_protocol

Specify the match protocol.

Must be one of the following:

- **dhcp**
- **ppp**

You can configure a maximum of "2" elements with this command.

You can configure a maximum of "8" elements with this command.

Usage Guidelines

Use this command to configure match key and value.

You can configure a maximum of "8" elements with this command.

profile subscriber event

Configures subscriber events.

Command Modes

Exec > Global Configuration (config) > Subscriber Profile Configuration
(config-subscriber-subscriber_profile_name) > Event Configuration (config-event-event_name)

Syntax Description

event *event_name* [**activate-feature-templates** *template_names* | **apply-all-class**
| **deactivate-feature-templates** *template_names*]

event event_name

Specify the event name.

activate-feature-templates template_names

Specify the list of feature templates to activate.

apply-all-class

Specify to apply all classes if enabled.

deactivate-feature-templates *template_names*

Specify the list of feature templates to deactivate.

event *event_name*

Specify the event name.

You can configure a maximum of "8" elements with this command.

Usage Guidelines

Use this command to configure subscriber events.

You can configure a maximum of "8" elements with this command.

profile subscriber event aaa

Configures AAA operations.

Command Modes

Exec > Global Configuration (config) > Subscriber Profile Configuration
(config-subscriber-subscriber_profile_name)

Command Modes

Exec > Global Configuration (config) > Subscriber Profile Configuration
(config-subscriber-subscriber_profile_name) > Class Configuration (config-class-class_name)

Command Modes

Exec > Global Configuration (config) > Subscriber Profile Configuration
(config-subscriber-subscriber_profile_name) > Event Configuration (config-event-event_name)

Command Modes

Exec > Global Configuration (config) > Subscriber Profile Configuration
(config-subscriber-subscriber_profile_name) > Event Configuration (config-event-event_name) > Class
Configuration (config-class-class_name)

Syntax Description

aaa *aaa_option* *aaa_profile_name*

aaa_option

Specify the AAA option.

Must be one of the following:

- **authenticate**
- **authorize**

aaa_profile_name

Specify the AAA profile name.

Usage Guidelines

Use this command to configure AAA operations.

profile subscriber event class

Configures subscriber classification.

Command Modes

Exec > Global Configuration

Syntax Description

```
class { class-name class_name | deactivate-feature-templates template_names | activate-feature-templates template_names }
```

activate-feature-templates *template_names*

Specify the list of feature template names to activate.

class-name *class_name*

Specify the class name.

Must be a string in the pattern ([a-zA-Z1-9_][^\s,\\t,\\',\\'')*).

deactivate-feature-templates *template_names*

Specify the list of feature template names to deactivate.

You can configure a maximum of "8" elements with this command.

Usage Guidelines

Use this command to configure subscriber classification.

You can configure a maximum of "8" elements with this command.

profile subscriber event class aaa

Configures AAA operations.

Command Modes

Exec > Global Configuration (config) > Subscriber Profile Configuration
(config-subscriber-subscriber_profile_name) > Subscriber Class Configuration (config-class-class_name)

Syntax Description

```
aaa aaa_option profile_name
```

aaa_option

Specify the AAA option.

Must be one of the following:

- **authenticate**
- **authorize**

profile_name

Specify the AAA profile name.

Usage Guidelines Use this command to configure AAA operations.

profile subscriber event class matches

Configures the list of match values.

Command Modes Exec > Global Configuration (config) > Subscriber Profile Configuration (config-subscriber-subscriber_profile_name) > Class Configuration (config-class-class_name)

Command Modes Exec > Global Configuration (config) > Subscriber Profile Configuration (config-subscriber-subscriber_profile_name) > Event Configuration (config-event-event_name) > Class Configuration (config-class-class_name)

Syntax Description **matches** [**match-type** { **all** | **any** }]

match-type match_type

Specify the match type.

Usage Guidelines Use this command to configure the list of match values. Enters the Matches Configuration mode.

profile subscriber event class matches match

Configures match key and value.

Command Modes Exec > Global Configuration (config) > Subscriber Profile Configuration (config-subscriber-subscriber_profile_name) > Class Configuration (config-class-class_name) > Matches Configuration (config-matches)

Command Modes Exec > Global Configuration (config) > Subscriber Profile Configuration (config-subscriber-subscriber_profile_name) > Event Configuration (config-event-event_name) > Class Configuration (config-class-class_name) > Matches Configuration (config-matches)

Syntax Description **match** match_key { match_protocol | **ascii** ascii_string | **regex** regex_string }

match_key

Specify the match key.

ascii ascii_string

Specify the ASCII string.

Must be a string.

regex regex_string

Specify the regular expression string.

Must be a string.

match_key

Specify the match key.

match_protocol

Specify the match protocol.

Must be one of the following:

- **dhcp**
- **ppp**

Usage Guidelines

Use this command to configure match key and value.

You can configure a maximum of "8" elements with this command.

show sessions

Displays pending session commits in the database.

Command Modes

Exec

Syntax Description

show sessions

Usage Guidelines

Use this command to view pending session commits in the database.

show sessions affinity

Displays instance-wise affinity count.

Command Modes

Exec

Syntax Description

show sessions affinity

Usage Guidelines

Use this command to view the instance-wise affinity count.

show sessions commit-pending

Displays all pending session commits.

Command Modes

Exec

Syntax Description

show sessions commit-pending

Usage Guidelines

Use this command to view all pending session commits.

show affinity

Displays affinity information.

Command Modes

Exec > Global Configuration (config)

Syntax Description

```
show affinity { pod-instance-map | primary-key primary_key | secondary-key
  { key-name sk_name key-value sk_value } }
```

show affinity pod-instance-map

Displays pod instance maps maintained in the cache-pod for affinity handling. This includes:

- `AffinityCache.podInstanceIdToStartTimeMap`
- `AffinityCache.hostNameToPodInstanceIdMap`
- `AffinityCache.podInstanceIdToHostNameMap`

show affinity primary-key *primary_key*

Displays affinity information for a specified affinity primary key.

show affinity secondary-key { *key-name sk_name* *key-value sk_value* }

Displays affinity information for a specified secondary key or a secondary key-value.

Usage Guidelines

Use this command to display affinity information that can assist with troubleshooting.

show diagnostics

Displays diagnostics information.

Command Modes

Exec

Syntax Description

```
show diagnostics
```

Usage Guidelines

Use this command to view diagnostics information.

show diagnostics info

Displays diagnostics information.

Command Modes

Exec

Syntax Description

```
show diagnostics info
```

Usage Guidelines

Use this command to view diagnostics information.

show endpoint

Displays endpoint status.

Command Modes

Exec

Syntax Description

show endpoint { all | info | ipv4 | ipv6 }

all

Displays the status of all endpoints.

info

Displays the information of all endpoints..

ipv4

Displays the status of all IPv4 endpoints.

ipv6

Displays the status of all IPv6 endpoints.

Usage Guidelines

Use this command to view the status or information of endpoints.

show ipam dp

Displays IPAM data-plane allocations.

Command Modes

Exec

Syntax Description

show ipam dp

Usage Guidelines

Use this command to view IPAM data-plane allocations.

show ipam pool

Displays pool allocation information.

Command Modes

Exec

Syntax Description

show ipam pool

Usage Guidelines

Use this command to view pool allocation information.

show l2tp-tunnel-destination upf

Displays the status of LNS servers.

Command Modes

Exec

Syntax Description

show l2tp-tunnel-destination upf *user_plane_name*

upf *user_plane_name*

Specify the user plane name.

Must be a string.

Usage Guidelines

Use this command to display the status (active or down) of a particular LNS server. For example,

```
bng# show l2tp-tunnel-destination upf lps_asr9k-200
Wed Aug 13 10:57:06.504 UTC+00:00
result
[
{
  "server": "192.69.1.199",
  "vrf": "",
  "status": "Active"
}
```

show peers

Displays peer information.

Command Modes

Exec

Syntax Description

show peers { all | ipv4 | ipv6 }

all

Displays all peers.

ipv4

Displays all IPv4 peers.

ipv6

Displays all IPv6 peers.

Usage Guidelines

Use this command to view peer information.

show resources

Displays resources information.

Command Modes

Exec

Syntax Description

show resources

Usage Guidelines

Use this command to view resources information.

show resources info

Displays resources information.

Command Modes

Exec

Syntax Description

show resources info

Usage Guidelines

Use this command to view resources information.

show role-additional-info instance-id

Displays additional information related to the CP GR role, including the instance ID, current role, the timestamp of the role change, and the reason for the action.

Command Modes

Exec

Syntax Description

show role-additional-info instance-id *instance_id*

Usage Guidelines

Use this command to view additional information related to the CP GR role. For example,

```
bng# show role-additional-info instance-id 1
Thu Jul 31 13:41:55.331 UTC+00:00
result InstanceID=[Instance.1], Role=[STANDBY], Time=[2025/07/31 11:37:57.000], Reason=[CLI]
```

show rpc

Displays RPC information.

Command Modes

Exec

Syntax Description

show rpc { all | ipv4 | ipv6 }

all

Displays all RPCs.

ipv4

Displays all IPv4 RPCs.

ipv6

Displays all IPv6 RPCs.

Usage Guidelines Use this command view RPC information.

show running-status

Displays system running status information.

Command Modes Exec

Syntax Description **show running-status**

Usage Guidelines Use this command to view system running status information.

show running-status info

Displays system running status information.

Command Modes Exec

Syntax Description **show running-status info**

Usage Guidelines Use this command to view system running status information.

show subscriber

Displays BNG subscriber data.

Command Modes Exec

Syntax Description **show subscriber** *type* [**count** | **detail** | **sublabel** *subscriber_label*]

acct-sess-id *accounting_session_id*

Specify the accounting session ID.

Must be a string.

count

Specify to display the number of sessions.

debug

Specify debug information.

detail

Specify to display detailed information.

sublabel *subscriber_label*

Specify the subscriber label.

Must be a string.

sync *sync_info*

Specify synchronization information.

Must be one of the following:

- **synchronize**

upf *upf_info*

Specify UPF information.

Must be a string.

upmgr

Specify SMUP information.

type

Specify the type.

Must be one of the following:

- **charging**
- **dhcp**
- **pppoe**
- **session**

Usage Guidelines

Use this command to view BNG subscriber data.

show subscriber

Displays subscriber information.

Command Modes

Exec

Syntax Description

show subscriber { all | supi *supi_id* }

all

Specify all SUPI.

supi *supi_id*

Specify the SUPI.

Must be a string.

Usage Guidelines

Use this command to view summary and detailed subscriber information for all subscribers or specific subscribers based on SUPI.

show subscriber filter

Configures additional filters.

Command Modes

Exec

Syntax Description

```
show subscriber type filter [ afi address_family | iana-state-bound
iana_bound_state | iapd-state-bound iapd_bound_state | ipv4-addr ipv4_address |
ipv4-pool ipv4_pool_name | ipv4-range ipv4_address_range | ipv4-state-bound
ipv4_bound_state | ipv6-addr ipv6_address | ipv6-addr-pool ipv6_address_pool_name |
ipv6-addr-range ipv6_address_range | ipv6-pfx ipv6_prefix | ipv6-pfx-pool
ipv6_prefix_pool | ipv6-pfx-range ipv6_prefix_range | mac mac_address | port-id
upf_port_id | state session_state | up-subs-id up_subscriber_id | upf upf_name |
upmgr sm_up_info | username session_user_name | vrf vrf_name ]
```

afi *address_family*

Specify the address family.

Must be one of the following:

- **dual**
- **ipv4**
- **ipv6**
- **pending**

iana-state-bound *iana_bound_state*

Specify the IANA bound state.

Must be one of the following:

- **iana-state-bound**

iapd-state-bound *iapd_bound_state*

Specify the IAPD bound state.

Must be one of the following:

- **iapd-state-bound**

ipv4-addr *ipv4_address*

Specify the IPv4 address in the format "*pool-name/ipv4-addr*".

Must be a string.

ipv4-pool *ipv4_pool_name*

Specify the IPv4 pool name.

Must be a string.

ipv4-range *ipv4_address_range*

Specify the IPv4 address range in the format "*poolName/start-ip*".

Must be a string.

ipv4-state-bound *ipv4_bound_state*

Specify the IPv4 bound state.

Must be one of the following:

- **ipv4-state-bound**

ipv6-addr-pool *ipv6_address_pool_name*

Specify the IPv6 address pool name.

Must be a string.

ipv6-addr-range *ipv6_address_range*

Specify the IPv6 address range in the format "*poolName/start-ip*".

Must be a string.

ipv6-addr *ipv6_address*

Specify the IPv6 address in the format "*pool-name/ipv6-addr*".

Must be a string.

ipv6-pfx-pool *ipv6_prefix_pool*

Specify the IPv6 prefix pool name.

Must be a string.

ipv6-pfx-range *ipv6_prefix_range*

Specify the IPv6 prefix range in the format "*poolName/start-pfx*".

Must be a string.

ipv6-ptx *ipv6_prefix*

Specify the IPv6 prefix in the format "*pool-name/ipv6-ptx*".

Must be a string.

mac *mac_address*

Specify the MAC address in the format "*aabb.ccdd.eeff*".

Must be a string.

port-id *upf_port_id*

Specify the user plane function port ID in the format "*upf/portid*".

Must be a string.

smstate *sm_session_state*

Specify the state of the SM session.

Must be one of the following:

- **created**
- **deleted**
- **established**

smupstate *smup_session_state*

Specify the state of the SMUP session.

Must be one of the following:

- **smUpSessionCreated**
- **smUpSessionDeleted**
- **smUpSessionWait4SmCreate**

state *session_state*

Specify the session state.

Must be one of the following:

- **complete**
- **incomplete**

up-subs-id *up_subscriber_id*

Specify the UP subscriber ID.

Must be a string.

upf *upf_name*

Specify the user plane function name.

Must be a string.

upmgr *upmgr*

Specify the UPMgr.

Must be one of the following:

- **upmgr**

username *session_user_name*

Specify the user name of the session.

Must be a string.

Usage Guidelines

Use this command to configure additional filters.

show subscriber redundancy

Displays the key values of SRG groups

Command Modes

Exec

Syntax Description

show subscriber redundancy [**count** | **debug** | **detail** | **gr-instance** *gr_instance_id* | **srg-peer-id** *srg_peer_id* | **upf** *upf_name*]

count

Specify the count of SRG groups

debug

Specify debug information

detail

Specify to display detailed information.

gr-instance *gr_instance_id*

Specify the geo redundancy instance identity.

srg-peer-id *srg_peer_id*

Specify the identity of peer user plane for the group.

upf *upf_name*

Specify the name of user plane function.

Usage Guidelines

Use this command to view the key values of SRG groups.

show subscriber redundancy-sync

Displays the subscriber reconciliation details.

Command Modes

Exec

Syntax Description

show subscriber redundancy-sync [**gr-instance** *gr_instance_id* | **srg-peer-id** *srg_peer_id* | **upf** *upf_name*]

gr-instance *gr_instance_id*

Specify the geo redundancy instance identity.

srg-peer-id *srg_peer_id*

Specify the identity of peer user plane for the SRG.

upf *upf_name*

Specify the name of user plane function.

Usage Guidelines

Use this command to view the subscriber reconciliation details.

show subscriber route-synchronize upf

Displays the status of subscriber route synchronization with the specific UPF.

Command Modes

Exec

Syntax Description

show subscriber route-synchronize upf *user_plane_name*

upf *user_plane_name*

Specify the user plane name.

Must be a string.

Usage Guidelines

Use this command to display the status of route-synchronization with the particular UPF. For example,

```
bng# show subscriber route-synchronize upf lps_asr9k-165
Mon Aug  4 05:29:05.500 UTC+00:00
subscriber-details
{
  "upf": "lps_asr9k-165",
  "sync-status": "NIL_STATUS",
```

```
"sync-error": ""
}
```



Note The output of this command is similar to the **subscriber route-synchronize status upf user_plane_name** command.

show subscriber session

Displays the session manager CDL record keys per session.

Command Modes

Exec

Syntax Description

```
show subscriber session [ detail ] [ disconnect-history ] | filter {  
smupstate { upf_name/smUpSessionCreated } | { mac mac_id [ detail ] } |  
sesstype ipoerouted | ipam-dp-key }
```

detail

Display the session details from SM CDL record.

```
disconnect-history { srg-peer-id srg_peer_id | upf upf_name { filter | last | unique }
```

Display the disconnected session details.

```
filter { smupstate { upf_name/smUpSessionCreated } }
```

Display whether the session is created in the respective UPF for the SRG sessions.

```
filter { mac mac_id [ detail ] }
```

Display subscriber sessions based on the MAC ID.

For example,

```
bng# show subscriber session filter { mac aa11.0000.0001 } detail  
Thu Jul 11 16:37:30.579 UTC+00:00  
subscriber-details  
{  
  "subResponses": [  
    {  
      "subLabel": "16777228",  
      "srgPeerId": "Peer1",  
      "srgId": "Group1",  
      "mac": "aa11.0000.0001",  
      "acct-sess-id": "Local_DC_16777228",  
      "sesstype": "routedipoe",  
      "state": "established",  
      "subCreateTime": "Thu, 11 Jul 2024 15:59:49 UTC",  
      "dhcpAuditId": 2,  
      "transId": "1",  
      <snip
```

filter { sesstype routedipoe }

Display the IPOE routed subscriber sessions.

filter ipam-dp-key

Display sessions based on the ipam-dp-key.

Usage Guidelines

Use this command to view the session manager CDL record keys per session.

show subscriber synchronize

Synchronize information.

Command Modes

Exec

Syntax Description

show subscriber synchronize [**srg-peer-id** *peer_id* | **upf** *upf_info*]

Syntax Description

show subscriber synchronize-cp **upf** *upf_info*

synchronise-cp

Specify to synchronise CP information.

Must be one of the following:

- **synchronize-cp**

synchronize

Specify to synchronise UP information.

Must be one of the following:

- **synchronize**

srg-peer-id *peer_id*

Specify the identity of peer user plane for the group.

upf *upf_info*

Specify UPF information.

Must be a string of 1-64 characters.

Usage Guidelines

Use this command to synchronise information.

split-prefix-iana-first

Enables allocation of both IANA and IAPD from the same IP pool.

Command Modes	IPAM configuration mode
Syntax Description	<code>split-prefix-iana-first</code>

subscriber featurette dhcp-lease-reservation enable

Enables/disables DHCP IP Lease Reservation.

Command Modes	Exec > Global Configuration (config)
Syntax Description	<code>[no] subscriber featurette dhcp-lease-reservation enable</code> subscriber featurette dhcp-lease-reservation enable Enables DHCP IP Lease Reservation no subscriber featurette dhcp-lease-reservation enable Disables DHCP IP Lease Reservation
Usage Guidelines	Use this command to enable or disable DHCP IP Lease Reservation.

subscriber-redundancy group

Configures subscriber geographical redundancy group.

Command Modes	Exec > Global Configuration > Userplane Configuration (config-user-plane-userplane_name)
Syntax Description	subscriber-redundancy group <i>group_name</i> { disable domain-identifier <i>domain-name</i> l3-routed peer-identifier <i>peer-id</i> port-id-map <i>port-name</i> <i>port-id</i> <i>name</i> <i>port-id</i> [preferred-role-active] [revertive-timer <i>sec</i>] standby-mode { hot warm } } subscriber-redundancy group <i>group_name</i> Specifies the name of the subscriber redundancy group that is unique to a user plane. disable Disables an SRG group without deleting the entire configuration of the group. The behaviour is same as removing an SRG group. domain-identifier <i>domain_name</i> Specifies the domain name to identify all groups common between two userplanes. l3-routed Enables L3 Routed subscriber.

peer-identifier *peer_id*

Identifies the peer user-plane for the group. This identifier must be unique across all groups in the control plane. The same peer-identifier must be configured in the peer user-plane.

port-id-map **port-name** *port_name* *port_id*

Specifies the mapping of access interfaces between user planes. At least one port-id-map must be configured.

preferred-role-active

This is an optional configuration.

Sets the preferred role active for user plane. If preferred-role-active is not configured, none of the UPs under the SRG group will be active. Default value: false.

state-control-route *route_name* **afi** *ipv6* *aggregate_route* **vrf** *vrf_name*

Programs the route to the UP for a specific routed SRG group based on the active or standby state of the UP.

revertive-timer *sec*

This is an optional configuration.

Specifies the revertive timer in seconds. *revertive_timer_value* must be an integer in the range of 60 to 3600. This command is available only when **preferred-role-active** is configured.

standby-mode { **hot** | **warm** }

Configures the standby mode for the group. Default: hot mode.

Usage Guidelines

Use this command to configure the subscriber redundancy group (SRG) configuration.

subscriber redundancy session-synchronize add

Synchronizes the sessions with the standby UP.

Command Modes

Exec

Syntax Description

```
subscriber-redundancy session-synchronize add { domain [ domain_ID ] |
duration timeout_value | peer-id [ peer_id ] | target-upf upf_id | tps value |
upf [ upf_id ] }
```

domain [*domain_id*]

Specifies the list of SRG domains.

duration *timeout_value*

Specifies the maximum timeout value in minutes.

peer-id [*peer_id*]

Specifies the list of SRG peer identities.

target-upf *upf_id*

Specifies the identity of target UP.

tps *value*

Specifies the maximum number of allowed transactions per second (TPS).

upf [*upf_id*]

Specifies the list of UPs.

subscriber redundancy session-synchronize delete

Deletes SRG sessions.

Command Modes

Exec

Syntax Description

subscriber-redundancy session-synchronize delete { domain [*domain_ID*] | duration *timeout_value* | peer-id [*peer_id*] | target-upf *upf_id* | tps *value* | upf [*upf_id*] }

domain [*domain_id*]

Specifies the list of SRG domains.

duration *timeout_value*

Specifies the maximum timeout value in minutes.

peer-id [*peer_id*]

Specifies the list of SRG peer identities.

target-upf *upf_id*

Specifies the identity of target UP.

tps *value*

Specifies the maximum number of allowed transactions per second (TPS).

upf [*upf_id*]

Specifies the list of UPs.

subscriber reset-token

Configure to reset the in-use token for the specified protocol.

Command Modes

Exec

Syntax Description

subscriber reset-token { dhcp | pppoe }

subscriber reset-token { dhcp | pppoe }

Reset the in-use token to zero for DHCP or PPPoE.

Usage Guidelines

Use this command to reset the in-use token to zero.

subscriber route-synchronize

Synchronizes routes to UPF.

Command Modes

Exec

Syntax Description

subscriber route-synchronize upf *user_plane_name*

upf *user_plane_name*

Specify the user plane name.

Must be a string.

Usage Guidelines

Use this command to synchronize routes to UPF.

subscriber session-synchronize

Synchronizes sessions to UPF.

Command Modes

Exec

Syntax Description

subscriber session-synchronize upf *user_plane_name* [**abort** | **timeout** *sla_timeout*]

abort

Specify to abort synchronization.

timeout *sla_timeout*

Specify the SLA timeout duration in seconds.

Must be an integer in the range of 10-1800.

upf *user_plane_name*

Specify the user plane name.

Must be a string.

Usage Guidelines

Use this command to synchronize sessions to UPE.

subscriber session-synchronize-cp

Synchronizes sessions on CP.

Command Modes

Exec

Syntax Description

subscriber session-synchronize-cp upf *user_plane_name* [abort | timeout *timeout_value* | tps *tps*]

abort

Specify to abort synchronization.

timeout *timeout_value*

Specify the timeout duration in minutes.

Must be an integer in the range of 2-100.

tps *tps*

Specify the TPS.

Must be an integer in the range of 40-4000.

upf *user_plane_name*

Specify name of the user plane function.

Must be a string of 1-64 characters.

Usage Guidelines

Use this command to synchronize sessions on CP.

subscriber token

Configures FSOL token mechanism.

Command Modes

Exec > Global Configuration (config)

Syntax Description

subscriber token { dhcp | pppoe } *token_count*

subscriber token { dhcp | pppoe } *token_count*

Set the maximum token available for FSOL pod.

- **dhcpcd**: Set the DHCP pod token count.
- **pppoe**: Set the PPPoE pod token count.

Usage Guidelines

Configures the userplane configuration.

Command Modes

Syntax Description

Specify as offline.

Specify the Subscriber Profile to associate at current level.

Specify the userplane name.

Usage Guidelines

Configures the associated flow control group in user plane.

Command Modes

Syntax Description

Specify the flow control group to be associated.

Usage Guidelines

user-plane peer-address

Configures the userplane IP address.

Command Modes	Exec > Global Configuration (config) > User Plane Configuration (config-user-plane- <i>userplane_name</i>)
Syntax Description	peer-address ipv4 <i>ipv4_address</i> ipv4 <i>ipv4_address</i> Specify the IPv4 address. Must be an IPv4 address.
Usage Guidelines	Use this command to configure the userplane IP address.

user-plane port-id

Configures Port Identifier parameters.

Command Modes	Exec > Global Configuration (config) > User Plane Configuration (config-user-plane- <i>userplane_name</i>)
Syntax Description	port-id <i>port_number</i> [subscriber-profile <i>subscriber_profile_name</i>] subscriber-profile <i>subscriber_profile_name</i> Specify the Subscriber Profile to associate to the Port Identifier level. port_number Specify the port identifier. Must be a string in the pattern ([a-zA-Z1-9_][^\s,\t,\"')]*).
Usage Guidelines	Use this command to configure Port Identifier parameters.

user-plane port-id