CISCO

Unpacking the Router

This section includes instructions about how to unpack the Cisco 1120 Connected Grid Router and describes the items that ship with the router.

These topics are discussed:

- Unpacking the Router, page 3
- Router Package Contents, page 3

Unpacking the Router

Note: When you unpack the router, do not remove the foam blocks attached to antennas and antenna connectors. The foam protects the antennas and connectors during installation.

Follow these steps to unpack the router:

- 1. Open the shipping container and carefully remove the contents.
- 2. Return all packing material to the shipping container, and save it.
- 3. Ensure that all items listed in the Router Package Contents, page 3 are included in the shipment. If any item is damaged or missing, notify your authorized Cisco sales representative.

Router Package Contents

Your router kit contains the items listed in Table 1 on page 4.

Router Package Contents

Table 1 Router Package Contents

Qty.	Item	Description
1	Cisco 1120 Connected Grid Router	Router enclosure with the following components installed:
		 Connected Grid Modules (1 to 2, depending on configuration ordered) with required antennas
		■ 2-GB SD Flash Memory Module
		 AC power supply (integrated)
1	DIN Rail Mounting Kit	Includes:
		■ DIN rail mounting bracket
		All required hardware to attach bracket to router
2	Power connectors adapters	Use these mating connectors for wiring the router power connectors
1	User Documentation Kit	Includes:
		Read Me First card
		Regulatory Compliance and Safety Information document