



Management Plane Protection Commands

This module describes the commands used to configure management plane protection (MPP).

For detailed information about keychain management concepts, configuration tasks, and examples, see the *Implementing Management Plane Protection on the Cisco IOS XR Software module in the System Security Configuration Guide for Cisco CRS Routers* Software configuration module.

- [address ipv4 \(MPP\), on page 2](#)
- [allow, on page 4](#)
- [control-plane, on page 6](#)
- [inband, on page 7](#)
- [interface \(MPP\), on page 8](#)
- [management-plane, on page 10](#)
- [out-of-band, on page 11](#)
- [show mgmt-plane, on page 13](#)
- [vrf \(MPP\), on page 15](#)

address ipv4 (MPP)

To configure the peer IPv4 or IPv6 address in which management traffic is allowed on the interface, use the **address ipv4** command in interface peer configuration mode. To remove the IP address that was previously configured on this interface, use the **no** form of this command.

address {**ipv4** | **ipv6**}
peer-ip-address
|peer-ip-address/length

Syntax Description	<i>peer-ip-address</i>	(Required) Peer IPv4 or IPv6 address in which management traffic is allowed on the interface. This address can effectively be the source address of the management traffic that is coming in on the configured interface.
---------------------------	------------------------	---

<i>peer ip-address/length</i>	(Required) Prefix of the peer IP address and IPv4 or IPv6 format:
-------------------------------	---

- IPv4—*A.B.C.D/length*
- IPv6—*X.X:X.X*

Command Default	If no specific peer is configured, all peers are allowed.
------------------------	---

Command Modes	Interface peer configuration
----------------------	------------------------------

Command History	Release	Modification
	Release 3.6.0	This command was introduced.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID	Operations
	system	read, write

Examples

The following example shows how to configure the peer IPv6 address 33::33 for management traffic:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# control-plane
RP/0/RP0/CPU0:router(config-ctrl)# management-plane
RP/0/RP0/CPU0:router(config-mpp)# inbandout-of-band
RP/0/RP0/CPU0:router(config-mpp-inbandoutband)# interface GigabitEthernet POS 0/16/10/12
RP/0/RP0/CPU0:router(config-mpp-inbandoutband-GigabitEthernet0_1_1_1POS0_6_0_2)# allow
Telnet TFTP peer
RP/0/RP0/CPU0:router(config-telnettftp-peer)# address ipv4 10.1.0.0/16ipv6 33::33
```

Related Commands

Command	Description
allow, on page 4	Configures an interface as an inband or out-of-band interface to allow all peer addresses for a specified protocol or all protocols.
control-plane, on page 6	Configures the control plane.
inband, on page 7	Configures an inband interface or protocol.
interface (MPP), on page 8	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.
management-plane, on page 10	Configures management plane protection to allow and disallow protocols.
out-of-band, on page 11	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
show mgmt-plane, on page 13	Displays the management plane.

allow

To configure an interface as an inband or out-of-band interface to allow all peer addresses for a specified protocol or all protocols, use the **allow** command in management plane protection inband interface configuration mode or management plane protection out-of-band interface configuration. To disallow a protocol on an interface, use the **no** form of this command.

allow {*protocol* | **all**} [**peer**]

Syntax Description

protocol Interface configured to allow peer-filtering for the following specified protocol's traffic:

- HTTP(S)
- SNMP (also versions)
- Secure Shell (v1 and v2)
- TFTP
- Telnet
- XML

all Configures the interface to allow peer-filtering for all the management traffic that is specified in the list of protocols.

peer (Optional) Configures the peer address on the interface. Peer refers to the neighboring router interface in which traffic might arrive to the main router.

Command Default

By default, no management protocol is allowed on any interface except the management interfaces.

Command Modes

Management plane protection inband interface configuration

Command History

Release	Modification
Release 3.5.0	This command was introduced.
Release 3.6.0	The following modifications were added:
	<ul style="list-style-type: none"> • The peer keyword was added to support peer-filtering. • Management plane protection out-of-band interface configuration mode was added.
Release 4.0.0	The XML keyword was added.

Usage Guidelines

If you permit or allow a specific protocol to an interface, traffic is allowed only for that protocol, and all other management traffic is dropped.

After you configure the interface as inband or out-of-band, the specified protocol's traffic, or all protocol traffic, is allowed on the interface. Interfaces that are not configured as inband or out-of-band interfaces, drop the protocol traffic.

The IOS XR XML API provides a programmatic interface to the router for use by external management applications. This interface provides a mechanism for router configuration and monitoring utilizing XML formatted request and response streams. As one of the management services, XML should be capable of applying MPP. To secure XML MPP data, XML keyword has been added to the command.

Task ID	Task ID	Operations
	system	read, write

Examples

The following example shows how to configure all management protocols for all inband interfaces:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# control-plane
RP/0/RP0/CPU0:router(config-ctrl)# management-plane
RP/0/RP0/CPU0:router(config-mpp)# inband
RP/0/RP0/CPU0:router(config-mpp-inband)# interface all
RP/0/RP0/CPU0:router(config-mpp-inband-all)# allow all
```

The following example shows how to configure peer interface for the TFTP protocol for out-of-band interfaces:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# control-plane
RP/0/RP0/CPU0:router(config-ctrl)# management-plane
RP/0/RP0/CPU0:router(config-mpp)# out-of-band
RP/0/RP0/CPU0:router(config-mpp-outband)# interface GigabitEthernet 0/1/1/2
RP/0/RP0/CPU0:router(config-mpp-outband-GigabitEthernet0_1_1_2)# allow TFTP peer
RP/0/RP0/CPU0:router(config-tftp-peer)#
```

The following example shows how to configure MPP support on an XML peer in-band interface:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# control-plane
RP/0/RP0/CPU0:router(config-ctrl)# management-plane
RP/0/RP0/CPU0:router(config-ctrl-mpp)# inband interface all allow xml peer address ipv4 172.10.10.1
```

Related Commands	Command	Description
	control-plane, on page 6	Configures the control plane.
	inband, on page 7	Configures an inband interface or protocol.
	interface (MPP), on page 8	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.
	management-plane, on page 10	Configures management plane protection to allow and disallow protocols.
	out-of-band, on page 11	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
	show mgmt-plane, on page 13	Displays the management plane.

control-plane

To enter the control plane configuration mode, use the **control-plane** command in Global Configuration mode. To disable all the configurations under control plane mode, use the **no** form of this command.

control-plane

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes Global Configuration mode

Command History	Release	Modification
	Release 3.5.0	This command was introduced.

Usage Guidelines Use the **control-plane** command to enter control plane configuration mode.

Task ID	Task ID	Operations
	system	read, write

Examples The following example shows how to enter control plane configuration mode using the **control-plane** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# control-plane
RP/0/RP0/CPU0:router(config-ctrl)#
```

Related Commands	Command	Description
	management-plane, on page 10	Configures management plane protection to allow and disallow protocols.

inband

To configure an inband interface and to enter management plane protection inband configuration mode, use the **inband** command in management plane protection configuration mode. To disable all configurations under inband configuration mode, use the **no** form of this command.

inband

Syntax Description	This command has no keywords or arguments.				
Command Default	None				
Command Modes	Management plane protection inband configuration				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Release 3.5.0</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Release 3.5.0	This command was introduced.
Release	Modification				
Release 3.5.0	This command was introduced.				

Usage Guidelines Use the **inband** command to enter management plane protection inband configuration mode.

Task ID	Task ID	Operations
	system	read, write

Examples

The following example shows how to enter management plane protection inband configuration mode using the **inband** command:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# control-plane
RP/0/RP0/CPU0:router(config-ctrl)# management-plane
RP/0/RP0/CPU0:router(config-mpp)# inband
RP/0/RP0/CPU0:router(config-mpp-inband)#
```

Related Commands	Command	Description
	control-plane , on page 6	Configures the control plane.
	interface (MPP) , on page 8	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.
	management-plane , on page 10	Configures management plane protection to allow and disallow protocols.
	out-of-band , on page 11	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
	show mgmt-plane , on page 13	Displays the management plane.

interface (MPP)

To configure a specific interface or all interfaces as an inband or out-of-band interface, use the **interface** command in management plane protection inband configuration mode or management plane protection out-of-band configuration mode. To disable all the configurations under an interface mode, use the **no** form of this command.

interface {*type* *interface-path-id* | **all**}

Syntax Description	<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
	<i>interface-path-id</i>	Virtual interface instance. Number range varies depending on interface type.
	Note	Use the show interfaces command in EXEC mode to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
	all	Configures all interfaces to allow for management traffic.

Command Default None

Command Modes Management plane protection out-of-band configuration

Command History	Release	Modification
	Release 3.5.0	This command was introduced.
	Release 3.6.0	The management plane protection out-of-band configuration mode was added.

Usage Guidelines Use the **interface** command to enter management plane protection inband interface configuration mode or management plane protection out-of-band interface configuration mode.

For the *instance* argument, you cannot configure Management Ethernet interfaces as inband interfaces.

Task ID	Task ID	Operations
	system	read, write

Examples The following example shows how to configure all inband interfaces for MPP:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# control-plane
RP/0/RP0/CPU0:router(config-ctrl)# management-plane
RP/0/RP0/CPU0:router(config-mpp)# inband
RP/0/RP0/CPU0:router(config-mpp-inband)# interface all
RP/0/RP0/CPU0:router(config-mpp-inband-all)#
```


The following example shows how to configure all out-of-band interfaces for MPP:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# control-plane
RP/0/RP0/CPU0:router(config-ctrl)# management-plane
RP/0/RP0/CPU0:router(config-mpp)# out-of-band
RP/0/RP0/CPU0:router(config-mpp-outband)# interface all
RP/0/RP0/CPU0:router(config-mpp-outband-all)#
```

Related Commands

Command	Description
allow, on page 4	Configures an interface as an inband or out-of-band interface to allow all peer addresses for a specified protocol or all protocols.
control-plane, on page 6	Configures the control plane.
inband, on page 7	Configures an inband interface or protocol.
management-plane, on page 10	Configures management plane protection to allow and disallow protocols.
out-of-band, on page 11	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
show mgmt-plane, on page 13	Displays the management plane.

management-plane

To configure management plane protection to allow and disallow protocols, use the **management-plane** command in control plane configuration mode. To disable all configurations under management-plane mode, use the **no** form of this command.

management-plane

Syntax Description	This command has no keywords or arguments.	
Command Default	None	
Command Modes	Control plane configuration	
Command History	Release	Modification
	Release 3.5.0	This command was introduced.
Usage Guidelines	Use the management-plane command to enter the management plane protection configuration mode.	
Task ID	Task ID	Operations
	system	read, write
Examples	<p>The following example shows how to enter management plane protection configuration mode using the management-plane command:</p> <pre>RP/0/RP0/CPU0:router# configure RP/0/RP0/CPU0:router(config)# control-plane RP/0/RP0/CPU0:router(config-ctrl)# management-plane RP/0/RP0/CPU0:router(config-mpp)#</pre>	

out-of-band

To configure out-of-band interfaces or protocols and to enter management plane protection out-of-band configuration mode, use the **out-of-band** command in management plane protection configuration mode. To disable all configurations under management plane protection out-of-band configuration mode, use the **no** form of this command.

out-of-band

Syntax Description	This command has no keywords or arguments.
Command Default	None
Command Modes	Management plane protection out-of-band configuration

Command History	Release	Modification
	Release 3.6.0	This command was introduced.

Usage Guidelines	<p>Use the out-of-band command to enter management plane protection out-of-band configuration mode.</p> <p><i>Out-of-band</i> refers to an interface that allows only management protocol traffic to be forwarded or processed. An <i>out-of-band management interface</i> is defined by the network operator to specifically receive network management traffic. The advantage is that forwarding (or customer) traffic cannot interfere with the management of the router.</p>
-------------------------	---

Task ID	Task	Operations
	system	read, write

Examples	<p>The following example shows how to enter management plane protection out-of-band configuration mode using the out-of-band command:</p>
-----------------	--

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# control-plane
RP/0/RP0/CPU0:router(config-ctrl)# management-plane
RP/0/RP0/CPU0:router(config-mpp)# out-of-band
RP/0/RP0/CPU0:router(config-mpp-outband)#
```

Related Commands	Command	Description
	control-plane, on page 6	Configures the control plane.
	inband, on page 7	Configures an inband interface or protocol.
	interface (MPP), on page 8	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.

Command	Description
management-plane , on page 10	Configures management plane protection to allow and disallow protocols.
show mgmt-plane , on page 13	Displays the management plane.
vrf (MPP) , on page 15	Configures a Virtual Private Network (VPN) routing and forwarding (VRF) reference of an out-of-band interface.

show mgmt-plane

To display information about the management plane such as type of interface and protocols enabled on the interface, use the **show mgmt-plane** command in EXEC mode.

show mgmt-plane [{**inband** | **out-of-band**}] [{**interface** *type interface-path-id* | **vrf**}]

Syntax Description	inband	(Optional) Displays the inband management interface configurations that are the interfaces that process management packets as well as data-forwarding packets. An inband management interface is also called a <i>shared management interface</i> .
	out-of-band	(Optional) Displays the out-of-band interface configurations. Out-of-band interfaces are defined by the network operator to specifically receive network management traffic.
	interface	(Optional) Displays all the protocols that are allowed in the specified interface.
	<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
	<i>interface-path-id</i>	Interface instance. Number range varies depending on interface type.
		<p>Note Use the show interfaces command to see a list of all interfaces currently configured on the router.</p> <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>
	vrf	(Optional) Displays the Virtual Private Network (VPN) routing and forwarding reference of an out-of-band interface.
Command Default	None	
Command Modes	EXEC mode	
Command History	Release	Modification
	Release 3.5.0	This command was introduced.
	Release 3.6.0	<p>The following modifications were added:</p> <ul style="list-style-type: none"> Both inband and out-of-band keywords were added. The vrf keyword was added only for out-of-band VRF configurations. Sample output was updated to display inband and out-of-band interface configurations.
Usage Guidelines	The vrf keyword is valid only for out-of-band VRF configurations.	

Task ID**Task ID Operations**

system read

Examples

The following sample output displays all the interfaces that are configured as inband or out-of-band interfaces under MPP:

```
RP/0/RP0/CPU0:router# show mgmt-plane

Management Plane Protection

inband interfaces
-----

interface - GigabitEthernet0_1_1_0
    ssh configured -
        All peers allowed
    telnet configured -
        peer v4 allowed - 10.1.0.0/16
    all configured -
        All peers allowed
interface - GigabitEthernet0_1_1_0
    telnet configured -
        peer v4 allowed - 10.1.0.0/16

interface - all
    all configured -
        All peers allowed

outband interfaces
-----

interface - GigabitEthernet0_1_1_0
    tftp configured -
        peer v6 allowed - 33::33
```

The following sample output displays the Virtual Private Network (VPN) routing and forwarding (VRF) reference of an out-of-band interface:

```
RP/0/RP0/CPU0:router# show mgmt-plane out-of-band vrf

Management Plane Protection -
    out-of-band VRF - my_out_of_band
```

Related Commands

Command	Description
management-plane, on page 10	Configures management plane protection to allow and disallow protocols.

vrf (MPP)

To configure a Virtual Private Network (VPN) routing and forwarding (VRF) reference of an out-of-band interface, use the **vrf** command in management plane protection out-of-band configuration mode. To remove the VRF definition before the VRF name is used, use the **no** form of this command.

vrf *vrf-name*

Syntax Description	<i>vrf-name</i> Name assigned to a VRF.				
Command Default	The VRF concept must be used to configure interfaces as out-of-band. If no VRF is configured during an out-of-band configuration, the interface goes into a default VRF.				
Command Modes	Management plane protection out-of-band configuration				
Command History	<table> <tr> <th>Release</th><th>Modification</th></tr> <tr> <td>Release 3.6.0</td><td>This command was introduced.</td></tr> </table>	Release	Modification	Release 3.6.0	This command was introduced.
Release	Modification				
Release 3.6.0	This command was introduced.				
Usage Guidelines	<p>If the VRF reference is not configured, the default name MPP_OUTBAND_VRF is used.</p> <p>If there is an out-of-band configuration that is referring to a VRF and the VRF is deleted, all the MPP bindings are removed.</p>				
Task ID	<table> <tr> <th>Task ID</th><th>Operations</th></tr> <tr> <td>system</td><td>read</td></tr> </table>	Task ID	Operations	system	read
Task ID	Operations				
system	read				

Examples

The following example shows how to configure the VRF:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# vrf my_out_of_band
RP/0/RP0/CPU0:router(config-vrf)# address-family ipv4 unicast
RP/0/RP0/CPU0:router(config-vrf-af)# exit
RP/0/RP0/CPU0:router(config-vrf)# address-family ipv6 unicast
RP/0/RP0/CPU0:router(config-vrf-af)# commit
RP/0/RP0/CPU0:router(config-vrf-af)# end
RP/0/RP0/CPU0:router#
```

The following example shows how to configure the VRF definition for MPP:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# control-plane
RP/0/RP0/CPU0:router(config-ctrl)# management-plane
RP/0/RP0/CPU0:router(config-mpp)# out-of-band
RP/0/RP0/CPU0:router(config-mpp-outband)# vrf my_out_of_band
```

Related Commands

Command	Description
control-plane, on page 6	Configures the control plane.
interface (MPP), on page 8	Configures a specific inband or out-of-band interface or all inband or out-of-band interfaces.
management-plane, on page 10	Configures management plane protection to allow and disallow protocols.
out-of-band, on page 11	Configures out-of-band interfaces or protocols and enters management plane protection out-of-band configuration mode.
show mgmt-plane, on page 13	Displays the management plane.