



Preface



Note This product has reached end-of-life status. For more information, see the [End-of-Life and End-of-Sale Notices](#).

The *Cisco IOS XR Interface and Hardware Component Configuration Guide for the Cisco CRS Router* provides information and procedures related to router interface and hardware configuration.

The preface contains these sections:

- [Changes to This Document, on page i](#)
- [Obtaining Documentation and Submitting a Service Request, on page i](#)

Changes to This Document



Note This software release has reached end-of-life status. For more information, see the [End-of-Life and End-of-Sale Notices](#).

This table lists the technical changes made to this document since it was first released.

Table 1: Changes to This Document

Date	Summary
January 2020	Initial release of this document.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at: <http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html>

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.

