



## INDEX

---

<b>AR</b>	Cisco IOS XR Advanced System Command Reference
<b>CGR</b>	Cisco IOS XR Carrier Grade NAT Command Reference
<b>HR</b>	Cisco IOS XR Interface and Hardware Component Command Reference
<b>IR</b>	Cisco IOS XR IP Addresses and Services Command Reference
<b>MCR</b>	Cisco IOS XR Multicast Command Reference
<b>MNR</b>	Cisco IOS XR System Monitoring Command Reference
<b>MPR</b>	Cisco IOS XR MPLS Command Reference
<b>NFR</b>	Cisco IOS XR NetFlow Command Reference
<b>QR</b>	Cisco IOS XR Modular Quality of Service Command Reference
<b>RR</b>	Cisco IOS XR Routing Command Reference
<b>SMR</b>	Cisco IOS XR System Management Command Reference
<b>SR</b>	Cisco IOS XR System Security Command Reference
<b>VPR</b>	Cisco IOS XR Virtual Private Network Command Reference

---

### A

action capabilities-conflict command	<a href="#">HR-340</a>
action critical-event command	<a href="#">HR-343</a>
action discovery-timeout command	<a href="#">HR-345</a>
action dying-gasp command	<a href="#">HR-348</a>
action high-threshold command	<a href="#">HR-350</a>
action link-fault command	<a href="#">HR-352, HR-361</a>
action remote-loopback command	<a href="#">HR-354</a>
action session-down command	<a href="#">HR-356</a>
action session-up command	<a href="#">HR-359</a>
action uni-directional link-fault command	<a href="#">HR-352, HR-361</a>
action wiring-conflict command	<a href="#">HR-364</a>
address-family ipv4 unicast (BFD) command	<a href="#">HR-86</a>
admin-state command	<a href="#">HR-190</a>
aggregate reference	<a href="#">HR-367</a>
ais-shut (SONET) command	<a href="#">HR-922</a>
ais-shut (SONET path) command	<a href="#">HR-924</a>
ais transmission command	<a href="#">HR-369</a>
ais transmission up command	<a href="#">HR-371</a>

aps group (global) command	<a href="#">HR-928</a>
aps group command	<a href="#">HR-925</a>
atm address-registration command	<a href="#">HR-2</a>
atm ilmi-config disable command	<a href="#">HR-3</a>
atm ilmi-keepalive command	<a href="#">HR-5</a>
atm ilmi-trap disable command	<a href="#">HR-7</a>
atm maxvpi-bits 12 command	<a href="#">HR-9</a>
atm mcpt-timers command	<a href="#">HR-11</a>
atm oam flush command	<a href="#">HR-13</a>
authenticate (PGP) command	<a href="#">HR-930</a>

---

### B

b3-ber-prdi command	<a href="#">HR-932</a>
bandwidth (global) command	<a href="#">HR-614</a>
bert e3 command	<a href="#">HR-1050</a>
bert error command	<a href="#">HR-1052</a>
bert interval command	<a href="#">HR-1054</a>
bert pattern command	<a href="#">HR-1056</a>
bert t3 command	<a href="#">HR-1058</a>
bfd address-family ipv4 minimum-interval command	<a href="#">HR-94</a>
bfd address-family ipv4 multiplier command	<a href="#">HR-97</a>
bfd address-family ipv4 timers command	<a href="#">HR-100</a>
bfd command	<a href="#">HR-88</a>
bfd fast-detect (BGP) command	<a href="#">HR-102</a>
bfd minimum-interval command	<a href="#">HR-105</a>
bfd multiplier command	<a href="#">HR-109</a>
buckets archive command	<a href="#">HR-373</a>
buckets size command	<a href="#">HR-375</a>
bundle-hash	<a href="#">HR-706</a>
bundle id command	<a href="#">HR-712</a>
bundle maximum-active links command	<a href="#">HR-714</a>

bundle minimum-active bandwidth command [HR-718](#)  
 bundle minimum-active links command [HR-720](#)  
 bundle port-priority command [HR-722](#)

---

## C

cablelength command [HR-1060](#)  
 carrier-delay command [HR-266](#)  
 cell-packing command [HR-15](#)  
 ce tftp server command [HR-144](#)  
 channel local command [HR-933](#)  
 channel remote command [HR-935](#)  
 class-int command [HR-17](#)  
 class-vc command [HR-19](#)  
 clear bfd counters command [HR-112](#)  
 clear controller backplane ethernet clients  
 command [HR-640](#)  
 clear controller backplane ethernet statistics  
 command [HR-642](#)  
 clear controller switch command [HR-774](#)  
 clear controller switch errdisable command [HR-775](#)  
 clear controller switch inter-rack command [HR-776](#)  
 clear controller t3 command [HR-1061](#)  
 clear counters sonet command [HR-937](#)  
 clear ethernet cfm ccm-learning-database location  
 command [HR-377](#)  
 clear ethernet cfm interfaces statistics command [HR-378](#)  
 clear ethernet cfm local meps command [HR-380](#)  
 clear ethernet cfm peer meps command [HR-382](#)  
 clear ethernet cfm traceroute-cache command [HR-384](#)  
 clear ethernet oam statistics command [HR-386](#)  
 clear ethernet sla statistics all command [HR-388](#)  
 clear ethernet sla statistics on-demand command [HR-390](#)  
 clear ethernet sla statistics profile command [HR-392](#)  
 clear frame-relay lmi [HR-576](#)  
 clear interface command [HR-616](#)  
 clear lacp counters command [HR-724](#)  
 clear mac-accounting command [HR-268](#)  
 clear ppp sso state command [HR-832](#)

clear ppp statistics command [HR-834](#)  
 clear srp counters command [HR-1008](#)  
 clock source (SONET) command [HR-939](#)  
 clock source (T3/E3 controller) command [HR-1063](#)  
 connection timeout command [HR-395](#)  
 continuity-check archive hold-time command [HR-397](#)  
 continuity-check interval command [HR-399](#)  
 continuity-check loss auto-traceroute command [HR-401](#)  
 controller (SONET) command [HR-940](#)  
 controller dwdm command [HR-192](#), [HR-1122](#), [HR-1126](#)  
 controller e3 command [HR-1065](#)  
 controller t3 command [HR-1067](#)  
 cos (CFM) [HR-403](#)  
 crc (serial) command [HR-908](#)  
 crc command (POS) [HR-816](#)

---

## D

dampening (BFD) command [HR-114](#)  
 dampening command [HR-618](#)  
 debug ethernet cfm packets command [HR-405](#)  
 debug ethernet cfm protocol-state command [HR-408](#)  
 delay clear (T3/E3) command [HR-1069](#)  
 delay clear command [HR-942](#)  
 delay trigger (T3/E3) command [HR-1070](#)  
 delay trigger command [HR-943](#)  
 description (T3/E3) command [HR-1072](#)  
 diagnostic bootup level command [HR-144](#)  
 diagnostic load command [HR-146](#)  
 diagnostic monitor command [HR-148](#)  
 diagnostic monitor interval command [HR-150](#)  
 diagnostic monitor syslog command [HR-152](#)  
 diagnostic monitor threshold command [HR-153](#)  
 diagnostic ondemand action-on-failure command [HR-155](#)  
 diagnostic ondemand iterations command [HR-157](#)  
 diagnostic schedule command [HR-158](#)  
 diagnostic start command [HR-160](#)  
 diagnostic stop command [HR-162](#)  
 diagnostic unload command [HR-164](#)

domain command [HR-410](#)  
dot1q native vlan command [HR-1108](#)  
dot1q vlan command [HR-1110](#)  
down-when-looped (T3/E3) command [HR-1074](#)  
down-when-looped command [HR-945](#)  
dsu bandwidth command [HR-1075](#)  
dsu mode command [HR-1077](#)  
dsu remote command [HR-1079](#)  
duplex (Management Ethernet) command [HR-800](#)

---

## E

echo disable command [HR-116](#)  
echo latency detect command [HR-120](#)  
echo startup validate command [HR-122](#)  
efd command [HR-412](#)  
encap (PVC) command [HR-578](#)  
encapsulation (ATM) command [HR-21](#)  
encapsulation command (POS) [HR-818](#)  
encapsulation command (serial) [HR-910](#)  
encapsulation frame-relay command [HR-580](#)  
encapsulation ppp command [HR-836](#)  
ethernet cfm (global) command [HR-414](#)  
ethernet cfm (interface) command [HR-416](#)  
ethernet cfm mep command [HR-418](#)  
ethernet oam command [HR-420](#)  
ethernet oam loopback command [HR-423](#)  
ethernet oam profile command [HR-425](#)  
ethernet sla command [HR-427](#)  
ethernet sla on-demand operation type  
cfm-delay-measurement probe [HR-429](#)  
ethernet sla on-demand operation type cfm-loopback  
probe [HR-434](#)

---

## F

f4oam disable command [HR-25](#)  
flow-control command [HR-270](#)  
force command [HR-947](#)

frame-period threshold command [HR-439](#)  
frame-period window command [HR-441](#)  
frame-relay intf-type command [HR-582](#)  
frame-relay lmi disable command [HR-583](#)  
frame-relay lmi-n391dte command [HR-584](#)  
frame-relay lmi-n392dce command [HR-585](#)  
frame-relay lmi-n392dte command [HR-587](#)  
frame-relay lmi-n393dce command [HR-588](#)  
frame-relay lmi-n393dte command [HR-590](#)  
frame-relay lmi-t391dte command [HR-591](#)  
frame-relay lmi-t392dce command [HR-592](#)  
frame-relay lmi-type command [HR-593](#)  
frame-seconds threshold command [HR-443](#)  
frame-seconds window command [HR-445](#)  
frame threshold command [HR-447](#)  
frame window command [HR-449](#)  
framing (E3) command [HR-1081](#)  
framing (SONET) command [HR-949](#)  
framing (T3) command [HR-1082](#)

---

## G

g709 bdi-to-client-gais command [HR-194](#)  
g709 disable command [HR-196](#)  
g709 fec command [HR-198](#)  
g709 odu overhead tti command [HR-200](#)  
g709 odu report disable command [HR-202](#)  
g709 otu overhead tti command [HR-204](#)  
g709 otu report disable command [HR-206](#)  
g709 otu threshold command [HR-208](#)  
g709 tim-to-client-gais command [HR-210](#)  
g709 tti-processing command [HR-212](#)  
group command [HR-837](#)

---

## H

hw-module port command [HR-1012](#)  
hw-module subslot cardtype command [HR-1083](#)

---

**I**

interface (BFD) command [HR-124](#)  
interface (global) command [HR-620](#)  
interface (VLAN) command [HR-1112](#)  
interface atm command [HR-25](#)  
interface Bundle-Ether command [HR-727](#)  
interface Bundle-POS command [HR-729](#)  
interface GigabitEthernet command [HR-272](#)  
interface MgmtEth command [HR-802](#)  
interface null 0 command [HR-808](#)  
interface pos command [HR-820](#)  
interface serial command [HR-912](#)  
interface srp command [HR-1015](#)  
interface TenGigE command [HR-274](#)  
invert command [HR-914](#)  
ipv6 checksum command [HR-126](#)

---

**K**

keepalive (serial) command [HR-916](#)  
keepalive command (POS) [HR-822](#)

---

**L**

l2transport (ATM) command [HR-29](#)  
lACP fast-switchover command [HR-730](#)  
lACP packet-capture command [HR-732](#)  
lACP period short command [HR-735](#)  
lACP system-priority command [HR-738](#)  
lanmode on command [HR-1128](#)  
line delay clear command [HR-951](#)  
line delay trigger command [HR-952](#)  
link-monitor command [HR-451](#)  
lockout command [HR-953](#)  
log ais command [HR-453](#)  
log continuity-check errors command [HR-455](#)  
log continuity-check mep changes command [HR-457](#)  
log crosscheck errors command [HR-459](#)

log efd command [HR-461](#)  
log signal command [HR-214](#)  
loopback (DWDM) command [HR-216](#)  
loopback (Ethernet) command [HR-276](#)  
loopback (SONET) command [HR-955](#)  
loopback (T3/E3) command [HR-1085](#)

---

**M**

mac-accounting command [HR-278](#)  
mac-address (Ethernet) command [HR-279](#)  
mac-address (Management Ethernet) command [HR-804](#)  
maintenance disable command [HR-217](#)  
manual command [HR-956](#)  
maximum-meps command [HR-463](#)  
mdl command [HR-1087](#)  
mep crosscheck command [HR-465](#)  
mep domain command [HR-469](#)  
mep-id command [HR-467](#)  
mib-retrieval command [HR-471](#)  
mip auto-create command [HR-473](#)  
mode (Ethernet OAM) command [HR-475](#)  
mode command [HR-1089](#)  
monitoring command [HR-477](#)  
mtu command [HR-622](#)  
multi-router aps command [HR-839](#)

---

**N**

national bits (E3) command [HR-1091](#)  
negotiation auto command [HR-280](#)  
network connection id command [HR-219](#)  
network port id command [HR-220](#)  
network srlg command [HR-221](#)

---

**O**

oam ais-rdi command [HR-31](#)

oam-pvc manage command [HR-34](#)  
oam retry command [HR-37](#)  
overhead (SONET) command [HR-958](#)  
overhead (SONET path) command [HR-960](#)

---

## P

packet-gap non-standard command [HR-281](#)  
packet size command [HR-479](#)  
path (SONET) command [HR-964](#)  
path delay clear command [HR-962](#)  
path delay trigger command [HR-963](#)  
peer ipv4 address command [HR-841](#)  
ping (administration EXEC) command [HR-166](#)  
ping atm interface atm command [HR-40](#)  
ping ethernet cfm command [HR-482](#)  
pm fec report enable command [HR-222](#)  
pm fec threshold command [HR-224](#)  
pm optics report enable command [HR-226](#)  
pm optics threshold command [HR-228](#)  
pm otn report enable command [HR-230](#)  
pm otn threshold command [HR-234](#)  
pos command [HR-824](#)  
ppp authentication command [HR-843](#)  
ppp chap password command [HR-846](#)  
ppp chap refuse command [HR-848](#)  
ppp ipcp dns command [HR-850](#)  
ppp ipcp neighbor-route disable command [HR-852](#)  
ppp ipcp peer-address default command [HR-854](#)  
ppp max-bad-auth command [HR-856](#)  
ppp max-configure command [HR-858](#)  
ppp max-failure command [HR-860](#)  
ppp max-terminate command [HR-862](#)  
ppp ms-chap hostname command [HR-864](#)  
ppp ms-chap password command [HR-866](#)  
ppp ms-chap refuse command [HR-867](#)  
ppp multilink multiclass command [HR-868](#)  
ppp multilink multiclass local command [HR-870](#)  
ppp multilink multiclass remote apply command [HR-872](#)

ppp pap refuse command [HR-868](#)  
ppp pap sent-username password command [HR-876](#)  
ppp timeout authentication command [HR-878](#)  
ppp timeout retry command [HR-880](#)  
priority (SLA) command [HR-485](#)  
proactive command [HR-237](#)  
proactive revert threshold command [HR-239](#)  
proactive revert window command [HR-241](#)  
proactive trigger threshold command [HR-243](#)  
proactive trigger window command [HR-245](#)  
probe command [HR-487](#)  
profile (EOAM) command [HR-489](#)  
profile (SLA) command [HR-491](#)  
pvc (ATM) command [HR-42](#)  
pvc (Frame Relay) command [HR-594](#)  
pvp (ATM) command [HR-46](#)

---

## R

redundancy command [HR-882](#)  
report (SONET) command [HR-966](#)  
report (SONET path) command [HR-968](#)  
report sd-ber command [HR-1130](#)  
report sf-ber disable command [HR-1131](#)  
require-remote command [HR-493](#)  
revert command [HR-970](#)  
rx-los-threshold command [HR-247](#)

---

## S

schedule (SLA) command [HR-495](#)  
schedule command [HR-495](#)  
scrambling disable (SONET path) command [HR-972](#)  
security ttl command [HR-884](#)  
send (SLA) command [HR-499](#)  
serial command [HR-918](#)  
service command [HR-502](#)  
shape command [HR-48](#)

- show aps agents command [HR-975](#)
- show aps command [HR-973](#)
- show aps group command [HR-977](#)
- show atm cell-packing command [HR-50](#)
- show atm class-link command [HR-52](#)
- show atm ilmi-status command [HR-55](#)
- show atm interface atm command [HR-58](#)
- show atm pvc command [HR-63](#)
- show atm pvp command [HR-69](#)
- show atm vc-class command [HR-74](#)
- show bfd client command [HR-130](#)
- show bfd counters packet command [HR-132](#)
- show bfd mib session command [HR-135](#)
- show bfd session command [HR-138](#)
- show bundle Bundle-Ether command [HR-740](#)
- show bundle Bundle-POS command [HR-749](#)
- show bundle replication bundle-ether command [HR-757](#)
- show controller dwdm command [HR-249, HR-1132](#)
- show controller dwdm pm command [HR-258](#)
- show controllers (Ethernet) [HR-282](#)
- show controllers atm command [HR-77](#)
- show controllers backplane ethernet brief command [HR-644](#)
- show controllers backplane ethernet clients command [HR-646](#)
- show controllers backplane ethernet detail command [HR-651](#)
- show controllers backplane ethernet manageability bridge basic command [HR-656](#)
- show controllers backplane ethernet manageability bridge fdb-entry command [HR-658](#)
- show controllers backplane ethernet manageability bridge forwarding command [HR-661](#)
- show controllers backplane ethernet manageability bridge list command [HR-664](#)
- show controllers backplane ethernet manageability bridge port command [HR-666](#)
- show controllers backplane ethernet manageability bridge span-tree command [HR-670](#)
- show controllers backplane ethernet manageability bridge transparent command [HR-673](#)
- show controllers backplane ethernet manageability interface attributes command [HR-675](#)
- show controllers backplane ethernet manageability interface list command [HR-677](#)
- show controllers backplane ethernet manageability interface mau-autonet-info command [HR-680](#)
- show controllers backplane ethernet manageability interface mau-info command [HR-683](#)
- show controllers backplane ethernet manageability interface mau-jack-type command [HR-688](#)
- show controllers backplane ethernet manageability interface statistics command [HR-690](#)
- show controllers backplane ethernet multicast groups command [HR-693](#)
- show controllers e3 command [HR-1093](#)
- show controllers null interface command [HR-809](#)
- show controllers pos command [HR-980](#)
- show controllers sonet command [HR-986](#)
- show controllers srp command [HR-1017](#)
- show controllers switch command [HR-778](#)
- show controllers switch inter-rack ports command [HR-780](#)
- show controllers switch inter-rack statistics command [HR-782](#)
- show controllers switch inter-rack stp command [HR-785](#)
- show controllers switch inter-rack uddl command [HR-787](#)
- show controllers switch ports command [HR-695](#)
- show controllers switch statistics command [HR-697](#)
- show controllers switch stp location command [HR-789](#)
- show controllers switch stp ports command [HR-792](#)
- show controllers switch stp region command [HR-794](#)
- show controllers switch uddl location command [HR-795](#)
- show controllers switch uddl ports command [HR-797](#)
- show controllers t3 command [HR-1097](#)
- show diag command [HR-171](#)
- show diagnostic bootup level command [HR-176](#)
- show diagnostic content command [HR-178](#)
- show diagnostic ondemand settings command [HR-181](#)
- show diagnostic result command [HR-182](#)
- show diagnostic schedule command [HR-184](#)
- show diagnostic status command [HR-186](#)
- show efd interface command [HR-505](#)



- show ethernet cfm ccm-learning-database command [HR-507](#)
- show ethernet cfm configuration-errors command [HR-509](#)
- show ethernet cfm interfaces ais command [HR-511](#)
- show ethernet cfm interfaces statistics command [HR-514](#)
- show ethernet cfm local maintenance-points command [HR-516](#)
- show ethernet cfm local meps command [HR-518](#)
- show ethernet cfm peer meps command [HR-523](#)
- show ethernet cfm traceroute-cache command [HR-529](#)
- show ethernet oam configuration command [HR-536](#)
- show ethernet oam discovery command [HR-539](#)
- show ethernet oam interfaces command [HR-542](#)
- show ethernet oam statistics command [HR-545](#)
- show ethernet sla configuration-errors command [HR-547](#)
- show ethernet sla operations command [HR-549](#)
- show ethernet sla statistics command [HR-553](#)
- show frame-relay lmi command [HR-596, HR-598](#)
- show frame-relay multilink [HR-604](#)
- show frame-relay pvc command [HR-601](#)
- show hw-module subslot brief command [HR-188](#)
- show im dampening command [HR-625](#)
- show interfaces (frame relay) [HR-606](#)
- show interfaces command [HR-627](#)
- show interfaces pos command [HR-826](#)
- show lacp bundle command [HR-758](#)
- show lacp counters command [HR-760](#)
- show lacp io command [HR-762](#)
- show lacp packet-capture command [HR-765](#)
- show lacp port command [HR-768](#)
- show lacp system-id command [HR-771](#)
- show mac-accounting (Ethernet) command [HR-336](#)
- show ppp interfaces command [HR-886](#)
- show ppp sso alerts command [HR-894](#)
- show ppp sso state command [HR-896](#)
- show ppp sso summary command [HR-899](#)
- show run diagnostic monitor command [HR-188](#)
- show spantree command [HR-700](#)
- show srp command [HR-1019](#)
- show vlan interface command [HR-1114](#)
- show vlan tags command [HR-1116](#)
- show vlan trunks command [HR-1118](#)
- shutdown (DWDM) command [HR-262](#)
- shutdown (global) command [HR-637](#)
- shutdown (SONET) command [HR-993](#)
- shutdown (T3/E3) command [HR-1104](#)
- shutdown command [HR-81](#)
- signalling command [HR-995](#)
- sla operation command [HR-560](#)
- snmp-server traps ethernet cfm command [HR-562](#)
- snmp-server traps ethernet oam events command [HR-563](#)
- snmp-server traps frame-relay pvc command [HR-611](#)
- speed (Management Ethernet) command [HR-805](#)
- srp ips delay trigger-keepalive command [HR-1030](#)
- srp ips request forced-switch command [HR-1032](#)
- srp ips timer command [HR-1034](#)
- srp ips wtr-timer command [HR-1036](#)
- srp mac-count command [HR-1038](#)
- srp mac-reject command [HR-1039](#)
- srp manual-switch command [HR-1041](#)
- srp shutdown command [HR-1045](#)
- srp topology-timer command [HR-1047](#)
- ssrp group command [HR-901](#)
- ssrp location command [HR-903](#)
- ssrp profile command [HR-905](#)
- statistics measure command [HR-564](#)
- symbol-period threshold command [HR-566](#)
- symbol-period window command [HR-568](#)

---

**T**

- threshold (SONET) command [HR-999](#)
- threshold (SONET path) command [HR-1001](#)
- threshold sd-ber command [HR-1140](#)
- threshold sf-ber command [HR-1141](#)
- timers (APS) command [HR-997](#)
- traceroute cache command [HR-570](#)
- traceroute ethernet cfm command [HR-572](#)

transmit-delay (POS) command [HR-829](#)

transmit-delay (serial) command [HR-919](#)

transmit-power command [HR-262](#)

---

## U

uneq-shut (SONET path) command [HR-1003](#)

unidirectional command [HR-1004](#)

---

## V

vc-class atm command [HR-83](#)

---

## W

wanmode on command [HR-1142](#)

wavelength command [HR-263](#)