

Configuring ISG Policies for Regulating Network Access

Intelligent Services Gateway (ISG) is a Cisco IOS XE software feature set that provides a structured framework in which edge devices can deliver flexible and scalable services to subscribers. ISG supports the use of policies for governing subscriber session bandwidth and network accessibility. This module provides information about the following methods of regulating session bandwidth and network access: Modular Quality of Service (QoS) command-line interface (CLI) policies and ISG policing.

- Information About ISG Policies for Regulating Network Access, on page 1
- How to Configure ISG Policies for Regulating Network Access, on page 3
- Configuration Examples for ISG Policies for Regulating Network Access, on page 6
- Additional References, on page 7
- Feature Information for ISG Policies for Regulating Network Access, on page 7

Information About ISG Policies for Regulating Network Access

Methods of Regulating Network Access

ISG supports the following methods of regulating network access. Each of these methods can be applied to an ISG session and can be dynamically updated.

Modular QoS CLI (MQC) Policies

QoS policies configured using the MQC are supported for subscriber sessions only. MQC policies cannot be applied to ISG services.

ISG Policing

ISG policing supports policing of upstream and downstream traffic. ISG policing differs from policing configured using the MQC in that ISG policing can be configured in service profiles to support policing of traffic flows. MQC policies cannot be configured in service profiles. ISG policing can also be configured in user profiles and service profiles to support session policing.

Overview of ISG Policing


Traffic policing allows you to control the maximum rate of traffic sent or received on an interface. Policing is often configured on interfaces at the edge of a network to limit traffic into or out of the network. Traffic that falls within the rate parameters is sent, whereas traffic that exceeds the parameters is dropped or sent with a different priority.

ISG policing supports policing of upstream and downstream traffic and can be applied to a session or a flow. The following sections describe session-based policing and flow-based policing.

Session-Based Policing

Session-based policing applies to the aggregate of subscriber traffic for a session. In the figure below, session policing would be applied to all traffic moving from the PPPoE client to ISG and from ISG to the PPPoE client.

 Figure 1: Session-Based Policing



Session-based policing parameters can be configured on a AAA server in either a user profile or a service profile that does not specify a traffic class. It can also be configured on the router in a service policy map. Session-based policing parameters that are configured in a user profile take precedence over session-based policing parameters configured in a service profile or service policy map.

Flow-Based Policing

Flow-based policing applies only to the destination-based traffic flows that are specified by a traffic class. In the figure below, flow-based policing would allow you to police the traffic between the PPPoE client and Internet 1 or Internet 2.

Figure 2: Flow-Based Policing



Flow-based policing can be configured on a AAA server in a service profile that specifies a traffic class. It can also be configured on the router under a traffic class in a service policy map. Flow-based policing and session-based policing can coexist and operate simultaneously on subscriber traffic.

How to Configure ISG Policies for Regulating Network Access

Configuring ISG Policing

Configuring Policing in a Service Policy Map on the Router

Perform this task to configure ISG policing on the router.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. policy-map type service policy-map-name
- **4.** [priority]class type traffic class-map-name
- **5. police input** *committed-rate normal-burst excess-burst*
- 6. police output committed-rate normal-burst excess-burst

DETAILED STEPS

	Command or Action	Purpose	
Step 1	enable	Enables privileged EXEC mode.	
	Example:	Enter your password if prompted.	
	Router> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Router# configure terminal		
Step 3	policy-map type service policy-map-name	Creates or modifies a service policy map, which is used to	
	Example:	define an ISG service.	
	Router(config) # policy-map type service service1		
Step 4	[priority]class type traffic class-map-name	Associates a previously configured traffic class with the	
	Example:	policy map.	
	Router(config-service-policymap)# class type traffic silver		
Step 5	police input committed-rate normal-burst excess-burst	Configures ISG policing of upstream traffic.	
	Example:	• These parameters will be used to limit traffic flowing from the subscriber toward the network.	
	Router(config-service-policymap-class-traffic)# police input 20000 30000 60000		

	Command or Action	Purpose
Step 6	police output committed-rate normal-burst excess-burst Example:	Configures ISG policing of downstream traffic. • These parameters will be used to limit the traffic flowing from the network toward the subscriber.
	Router(config-service-policymap-class-traffic)# police output 21000 31500 63000	

What to Do Next

You may want to configure a method of activating the service policy map; for example, control policies can be used to activate services. For more information about methods of service activation, see the module "Configuring ISG Subscriber Services".

Configuring Policing in a Service Profile or User Profile on the AAA Server

SUMMARY STEPS

- **1.** Do one of the following:
 - Add the following Policing vendor-specific attribute (VSA) to the user profile on the AAA server.
 - 26, 9, 250
 - "QU;committed-rate;normal-burst;excess-burst;D;committed-rate;normal-burst;excess-burst"
 - Add the following Policing VSA to the service profile on the AAA server.

DETAILED STEPS

	Command or Action	Purpose
Step 1	Do one of the following:	Enables ISG policing of upstream and downstream traffic.
	 Add the following Policing vendor-specific attribute (VSA) to the user profile on the AAA server. 26, 9, 250	 If you specify the committed rate and normal burst, excess burst will be calculated automatically. You can specify upstream or downstream parameters first.
	Example:	
	26,9,251 "Q;comitted-ate;comel-bust;exessbust;D;comitted-ate;comel-bust;exessbust	

What to Do Next

You may want to configure a method of activating the service profile; for example, control policies can be used to activate services. For more information about methods of service activation, see the module "Configuring ISG Subscriber Services".

Verifying ISG Policing

Perform this task to verify ISG policing configuration.

SUMMARY STEPS

- 1. enable
- 2. show subscriber session [detailed] [identifier | uid session-id| username name]

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Router> enable	
Step 2	show subscriber session [detailed] [identifier identifier uid session-id username name]	Displays ISG subscriber session information.
	Example:	
	Router# show subscriber session detailed	

Examples

The following example shows output for the **show subscriber session** command when policing parameters have been configured in the service profile. The "Config level" field indicates where the policing parameters are configured; in this case, in the service profile.

```
Router# show subscriber session detailed

Current Subscriber Information: Total sessions 2

Unique Session ID: 1
.....

Session inbound features:
Feature: Policing
   Upstream Params:
Average rate = 24000, Normal burst = 4500, Excess burst = 9000

Config level = Service
Session outbound features:
Feature: Policing
   Dnstream Params:
Average rate = 16000, Normal burst = 3000, Excess burst = 6000

Config level = Service
....
```

The following example shows output for the **show subscriber session** command where upstream policing parameters are specified in a user profile and downstream policing parameters are specified in a service profile.

```
Router# show subscriber session all
Current Subscriber Information: Total sessions 2
Unique Session ID: 2
.....
```

```
Session inbound features:
Feature: Policing
   Upstream Params:
Average rate = 24000, Normal burst = 4500, Excess burst = 9000
Config level = Per-user ========> Upstream parameters are specified in the user profile.
Session outbound features:
Feature: Policing
   Dnstream Params:
Average rate = 16000, Normal burst = 3000, Excess burst = 6000
Config level = Service ========> No downstream parameters in the user profile, hence the parameters in the service profile are applied.
```

Configuration Examples for ISG Policies for Regulating Network Access

ISG Policing Examples

Flow-Based Policing Configured in a Service Policy Map Using the CLI

The following example shows the configuration of ISG flow-based policing in a service policy map:

```
class-map type traffic match-any C3 match access-group in 103 match access-group out 203 policy-map type service P3 class type traffic C3 police input 20000 30000 60000 police output 21000 31500 63000
```

Session-Based Policing Configured in a User Profile on a AAA Server

The following example shows policing configured in a user profile:

```
Cisco:Account-Info = "QU;23465;8000;12000;D;64000"
```

Session-Based Policing Configured in a Service Profile on a AAA Server

The following example shows policing configured in a service profile:

```
Cisco:Service-Info = "QU;16000;D;31000"
```

Additional References

Related Documents

Related Topic	Document Title
ISG commands	Cisco IOS Intelligent Services Gateway Command Reference
How to configure QoS policies using the MQC	"Applying QoS Features Using MQC" module in the Cisco IOS Quality of Service Configuration Guide
How to configure DBS	"Controlling Subscriber Bandwidth" module in the Cisco IOS Broadband Access Aggregation and DSL Configuration Guide

Technical Assistance

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	1 1
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

Feature Information for ISG Policies for Regulating Network Access

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 1: Feature Information for Policies for Regulating Network Access

Feature Name	Releases	Feature Configuration Information
ISG: Flow Control: QoS Control: Dynamic Rate Limiting	Cisco IOS XE Release 2.2	ISG can change the allowed bandwidth of a session or flow by dynamically applying rate-limiting policies.

Feature Information for ISG Policies for Regulating Network Access