



## Configuring GPS

---

This chapter contains the following sections:

- [GPS Overview, on page 1](#)
- [Configuring LTE GPS, on page 3](#)
- [Enabling NMEA Data Streaming, on page 5](#)
- [Debug Cellular-Based GPS, on page 7](#)
- [NTP Clock Sync with GPS, on page 7](#)
- [National Marine Electronics Association \(NMEA\) IOx Support, on page 10](#)
- [Example: Connecting to a Server Hosting a GPS Application, on page 11](#)

### GPS Overview

Satellite navigation is a system of satellites that provide autonomous geo-spatial positioning with global coverage and allow small electronic receivers to determine location (longitude, latitude, and altitude/elevation) using time signals transmitted from satellites. Often times the terms “GNSS” and “GPS” are used interchangeably but there are key differences between the two:

- The United States’ Global Positioning System (GPS) consists of up to 31 medium Earth orbit satellites in six different orbital planes, with the exact number of satellites varying as older satellites are retired and replaced. Operational since 1978 and globally available since 1994, GPS is currently the world’s most utilized satellite navigation system. A GPS receiver can only use signals from the 31 satellites in the Global Positioning System, and if too many of these signals are blocked, the receiver becomes useless until it can find a signal again.
- GNSS stands for Global Navigation Satellite System, and is the standard generic term for satellite navigation systems that provide autonomous geo-spatial positioning with global coverage. This term includes GPS, GLONASS, Galileo, Beidou and other regional systems. GNSS is a term used worldwide. The advantage to having access to multiple satellites is accuracy, redundancy and availability at all times. Though satellite systems don’t often fail, if one fails GNSS receivers can pick up signals from other systems. Also, if line of sight is obstructed, having access to multiple satellites is also a benefit. Common GNSS Systems are GPS, GLONASS, Galileo, Beidou and other regional systems. A GNSS receiver can use signals from any positioning satellite, not just the ones in the GPS system. This means that even if all of the GPS signals are blocked, it can pick up signals from any of the other satellite systems worldwide. This flexibility makes GNSS receivers much more accurate and reliable than GPS technology alone. With GNSS, you can be confident that you are getting the best result possible, wherever and whenever you need it.




---

**Note** A GNSS antenna is required for proper reception of GNSS constellation signal. Most Cisco antennas are GPS only, your antenna SKU must explicitly state it supports GNSS.

---




---

**Note** For the purposes of this document, we will be referring only to Cellular Modem based GPS.

---

### Cellular GPS Use Cases

The following are descriptions of some of the use cases for GPS:

- **Geo-Fencing** — Geo-fencing is the concept of controlling a device's operation based on where it is located. One use may be to only allow a device to operate if it is located in an area it is authorized to be. For example, if a router inside a store, kiosk or ATM was taken to a location other than where it should be, the router could disable itself. Or if the device is programmed to send (or polled) for its location, and the cloud/host application finds it outside the authorized area, the application may stop allowing communications to the devices behind the router.
- **Asset Tracking** — Asset tracking is the concept of knowing where equipment or devices are currently, and their condition/operation. The condition/operation can be gleaned by cloud/host applications, or by network management tools. The location of the specific device/equipment however can be important to an organization's operations. For example, a transportation enterprise may need to know the location of each of its trucks, train cars and ships in order to coordinate the on-time shipment and delivery of cargo. This may allow for the best selection of transport means and specific vehicles for a particular expedited shipment.
- **Time Synchronization** — Accurate time on a router can be important, for having exact time stamps of logs, or for accurate execution of tasks via automated/scheduled router functions. There may be times that the router requires synchronization of its internal clock with a highly accurate time source. Inability to sync the time may occur with deployments in vehicles or movable installations that are out of signal range for long periods, or where the deployment used a connection to an isolated private network with no NTP server.
- **GPS streaming to Apps and IOx** — When a modem has GPS enabled, the NMEA stream can be forwarded to IOx from the ngiolite module. This is accomplished by create a tunnel between Linux and IOx and then forward all NMEA messages over the tunnel to IOx.

### Cellular GPS Parameters

Refer to the following table:

Parameters	Cellular Modem Based GPS
Type	Cellular Modem based GPS
PIDs Supported	See the <a href="#">Supported Modem Technology</a> section for modules that support GPS.
Configuration Modes	Standalone mode

Parameters	Cellular Modem Based GPS
Number of satellites needed for co-ordinates	Standalone mode – 4
Satellites Supported in show command	Co-ordinates seen in show commands output is based only on GPS.
Initial Calibration Required	No
Co-ordinates in Absence of Satellite	No Co-ordinates will be acquired, and it stays in acquiring status.
Device Name of Controller to use for Configuration	controller cellular <slot>
CLI to enable feature	<b>lte gps enable</b> <b>lte gps mode standalone</b> <b>Note</b> A modem power cycle is required after enabling the configuration.
CLI to configure nmea	<b>lte gps nmea</b>
CLI to configure nmea udp socket	<b>lte gps nmea ip udp</b> <source_ip> <destination_ip> <destination_port>
CLI to verify configuration under show running-config	<b>show run   sec controller cellular</b> <slot>
Show commands to verify gps output	<b>show cellular</b> <slot> <b>gps</b> <b>show controller cellular</b> <slot>   <b>inc GPS</b>
Access to GPS nmea traffic on IOx side	Supported
Debug Command	<b>debug cellular</b> <slot> <b>messages gps</b> <b>debug cellular</b> <slot> <b>messages nmea</b>
Yang Model Support	Yes

## Configuring LTE GPS

Follow these steps to configure the LTE cellular modem for GPS in Standalone mode.



**Note** For a 4G LTE-Advanced, the *slot* argument identifies the router slot, module slot, and the port, and is separated by slashes (0/4/0).



**Note** Starting with IOS XE 17.9.1, GPS will be enabled by default.

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> Router# <b>configure terminal</b>	Enters the configuration mode.
<b>Step 2</b>	<b>controller cellular slot</b> <b>Example:</b> Router(config)# <b>controller cellular 0/4/0</b>	Enters the controller cellular configuration mode.
<b>Step 3</b>	<b>lte gps enable</b> <b>Example:</b> Router(config-controller)# <b>lte gps enable</b>	(Optional) GPS is enabled by default. Use this command to enable the GPS feature if GPS has been disabled for any reason.
<b>Step 4</b>	<b>lte gps mode standalone</b> <b>Example:</b> Router(config-controller)# <b>lte gps mode standalone</b>	Enables the standalone GPS mode.
<b>Step 5</b>	<b>end</b> <b>Example:</b> Router(config-controller)# <b>end</b>	Exits the controller configuration mode and returns to the privileged EXEC mode.
<b>Step 6</b>	<b>test cellular slot modem-power-cycle</b> <b>Example:</b> Router# <b>test cellular 0/4/0 modem-power-cycle</b>	GPS can take effect only after modem power cycle.
<b>Step 7</b>	<b>show cellular slot gps</b> <b>Example:</b> Router# <b>show cellular 0/4/0 gps</b> GPS Feature = enabled GPS Mode Configured = standalone GPS Port Selected = Dedicated GPS port GPS Status = GPS coordinates acquired Last Location Fix Error = Offline [0x0] Latitude = 37 Deg 25 Min 4.8915 Sec North Longitude = 121 Deg 55 Min 8.5627 Sec West Timestamp (GMT) = Wed Nov 7 21:54:18 2018  Fix type index = 0, Height = 8 m Satellite Info ----- Satellite #1, elevation 45, azimuth 303, SNR 20 * Satellite #3, elevation 15, azimuth 296, SNR 21 Satellite #8, elevation 9, azimuth 227, SNR 27 * Satellite #11, elevation 41, azimuth 270, SNR 27 * * Satellite #18, elevation 64, azimuth 258, SNR 29 * Satellite #22, elevation 35, azimuth 303, SNR 22 * Satellite #31, elevation 51, azimuth 140, SNR 24	Displays a summary of the following GPS data: <ul style="list-style-type: none"> <li>• GPS state information (GPS disabled, GPS acquiring, GPS enabled)</li> <li>• GPS mode configured (standalone)</li> <li>• GPS location and timestamp information</li> <li>• GPS satellite information</li> <li>• GPS feature (enabled or disabled)</li> <li>• GPS port selected (Dedicated GPS and GPS port with voltage-no-bias)</li> </ul>

	Command or Action	Purpose
	<pre>* Satellite #32, elevation 46, azimuth 43, SNR 22 * Satellite #10, elevation 25, azimuth 97, SNR 0 Satellite #14, elevation 68, azimuth 26, SNR 0 !!... truncated ....!! Router#</pre>	
<b>Step 8</b>	<p><b>show cellular slot gps detail</b></p> <p><b>Example:</b></p> <pre>Router# show cellular 0/4/0 gps detail GPS Feature = enabled GPS Mode Configured = standalone GPS Port Selected = Dedicated GPS port GPS Status = GPS coordinates acquired Last Location Fix Error = Offline [0x0] Latitude = 37 Deg 25 Min 4.9282 Sec North Longitude = 121 Deg 55 Min 8.5209 Sec West Timestamp (GMT) = Wed Nov 7 21:53:52 2018  Fix type index = 0, Height = 7 m HDOP = 1.5, GPS Mode Used = standalone  Satellite Info ----- Satellite #8, elevation 9, azimuth 227, SNR 31 * Satellite #11, elevation 41, azimuth 270, SNR 32 * Satellite #18, elevation 64, azimuth 258, SNR 33 * Satellite #22, elevation 35, azimuth 303, SNR 26 * Satellite #31, elevation 51, azimuth 140, SNR 27 * Satellite #32, elevation 46, azimuth 43, SNR 22 Satellite #1, elevation 45, azimuth 303, SNR 0 Satellite #3, elevation 14, azimuth 296, SNR 0 !!!...truncated!!! Router#</pre>	Displays detailed GPS data.

## Enabling NMEA Data Streaming

GPS NMEA data streaming to external NMEA 2.0-compliant GPS plotter applications can be enabled on Cisco 4G LTE Advanced.



**Note** This assumes you have already configured and enabled LTE GPS.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<p><b>configure terminal</b></p> <p><b>Example:</b></p>	Enters the configuration mode.

	Command or Action	Purpose
	Router# <b>configure terminal</b>	
<b>Step 2</b>	<b>controller cellular slot</b>  <b>Example:</b> Router(config)# <b>controller cellular 0/4/0</b>	Enters the controller cellular configuration mode.
<b>Step 3</b>	<b>lte gps nmea {ip   udp [source address][destination address][destination port] }</b>  <b>Example:</b> Router(config-controller)# <b>lte gps nmea ip</b>  or  Router(config-controller)# <b>lte gps nmea</b>	Enables NMEA. Cisco 4G LTE Advanced supports only IP NMEA. Therefore, the IP interface and serial interface options are unavailable.
<b>Step 4</b>	<b>end</b>  <b>Example:</b> Router(config-controller)# <b>end</b>	Exits the controller configuration mode and returns to the privileged EXEC mode.
<b>Step 5</b>	<b>test cellular slot modem-power-cycle</b>  <b>Example:</b> Router# <b>test cellular 0/4/0 modem-power-cycle</b>	GPS can take effect only after modem power cycle.
<b>Step 6</b>	<b>show cellular slot gps</b>  <b>Example:</b> Router# <b>show cellular 0/4/0 gps</b> GPS Feature = enabled GPS Mode Configured = standalone GPS Port Selected = Dedicated GPS port GPS Status = GPS coordinates acquired Last Location Fix Error = Offline [0x0] Latitude = 37 Deg 25 Min 4.8915 Sec North Longitude = 121 Deg 55 Min 8.5627 Sec West Timestamp (GMT) = Wed Nov 7 21:54:18 2018  Fix type index = 0, Height = 8 m Satellite Info ----- Satellite #1, elevation 45, azimuth 303, SNR 20 * Satellite #3, elevation 15, azimuth 296, SNR 21 Satellite #8, elevation 9, azimuth 227, SNR 27 * Satellite #11, elevation 41, azimuth 270, SNR 27 * * Satellite #18, elevation 64, azimuth 258, SNR 29 * Satellite #22, elevation 35, azimuth 303, SNR 22 * Satellite #31, elevation 51, azimuth 140, SNR 24 * Satellite #32, elevation 46, azimuth 43, SNR 22 * Satellite #10, elevation 25, azimuth 97, SNR 0 Satellite #14, elevation 68, azimuth 26, SNR 0 !!... truncated ....!! Router#	Displays a summary of the following GPS data: <ul style="list-style-type: none"> <li>• GPS state information (GPS disabled, GPS acquiring, GPS enabled)</li> <li>• GPS mode configured (standalone)</li> <li>• GPS location and timestamp information</li> <li>• GPS satellite information</li> <li>• GPS feature (enabled or disabled)</li> <li>• GPS port selected (Dedicated GPS and GPS port with voltage-no-bias)</li> </ul>

	Command or Action	Purpose
Step 7	<p><b>show cellular slot gps detail</b></p> <p><b>Example:</b></p> <pre>Router# show cellular 0/4/0 gps detail GPS Feature = enabled GPS Mode Configured = standalone GPS Port Selected = Dedicated GPS port GPS Status = GPS coordinates acquired Last Location Fix Error = Offline [0x0] Latitude = 37 Deg 25 Min 4.9282 Sec North Longitude = 121 Deg 55 Min 8.5209 Sec West Timestamp (GMT) = Wed Nov 7 21:53:52 2018  Fix type index = 0, Height = 7 m HDOP = 1.5, GPS Mode Used = standalone  Satellite Info ----- Satellite #8, elevation 9, azimuth 227, SNR 31 * Satellite #11, elevation 41, azimuth 270, SNR 32 * Satellite #18, elevation 64, azimuth 258, SNR 33 * Satellite #22, elevation 35, azimuth 303, SNR 26 * Satellite #31, elevation 51, azimuth 140, SNR 27 * Satellite #32, elevation 46, azimuth 43, SNR 22 Satellite #1, elevation 45, azimuth 303, SNR 0 Satellite #3, elevation 14, azimuth 296, SNR 0 !!!...truncated!!! Router#</pre>	Displays detailed GPS data.

## Debug Cellular-Based GPS

Use the following commands to debug Cellular-Based GPS issues.

- **debug cellular <slot> messages gps**
- **debug cellular <slot> messages nmea**

## NTP Clock Sync with GPS

This feature enables GPS time as the time source for NTP from LTE modems (except LM960) on the router.

GPS time will act as a stratum 0 source and IOS NTP server will act as a stratum 1 device, which in turn provides clock information to its NTP clients (stratum 2 and 3).

In order to use the NTP clock sync feature, you must first enable cellular modem GPS. See the command examples in the following section.

## Command Line Interface

To enable LTE GPS time to NTP feature, the following CLI is available and needs to be configured. If the CLI is not configured, LTE time acquired by the GPS over the LTE modem will not be the time source.

The following example uses the CLI to select the interface/modem as time source:




---

**Note** Make sure the LTE modems are present on the slot you are trying to configure.

---

```
Route(config)# ntp refclock gps interface <Cellular Interface>
```

```
Router(config)# ntp refclock gps interface ?
Cellular      Cellular WAN interface
```

Once the above CLIs are configured, all NTP CLI show commands shall reflect the time from the LTE modems.

## Example Output

### Using Cellular Interface 0/1/0

Make sure that the interface is configured for GPS.

```
Router#show cellular 0/1/0 gps
GPS Feature = enabled
GPS Mode Configured = standalone
GPS Port Selected = Dedicated GPS port
GPS Status = GPS coordinates acquired
Last Location Fix Error = Offline [0x0]
Latitude = 37 Deg 25 Min 5.1159 Sec North
Longitude = 121 Deg 55 Min 8.4338 Sec West
Timestamp (GMT) = Thu Apr 22 02:03:07 2021

Fix type index = 0, Height = 28 m
Satellite Info
-----
Satellite #5, elevation 39, azimuth 49, SNR 29 *
Satellite #10, elevation 1, azimuth 212, SNR 22
Satellite #12, elevation 2, azimuth 164, SNR 22
Satellite #15, elevation 23, azimuth 130, SNR 25
Satellite #16, elevation 7, azimuth 323, SNR 26
Satellite #18, elevation 51, azimuth 286, SNR 32 *
Satellite #20, elevation 73, azimuth 188, SNR 29 *
Satellite #23, elevation 30, azimuth 206, SNR 28 *
Satellite #25, elevation 29, azimuth 189, SNR 25 *
Satellite #26, elevation 25, azimuth 305, SNR 29 *
Satellite #29, elevation 75, azimuth 53, SNR 31 *
Satellite #2, elevation 0, azimuth 74, SNR 0
Satellite #13, elevation 15, azimuth 94, SNR 0
Satellite #78, elevation 21, azimuth 309, SNR 31 *
Satellite #77, elevation 26, azimuth 250, SNR 14
Satellite #76, elevation 4, azimuth 203, SNR 24
Satellite #65, elevation 19, azimuth 170, SNR 24
Satellite #88, elevation 19, azimuth 299, SNR 29 *
Satellite #87, elevation 47, azimuth 337, SNR 30 *
Satellite #71, elevation 38, azimuth 50, SNR 28 *
Satellite #72, elevation 49, azimuth 125, SNR 24
Satellite #70, elevation 0, azimuth 0, SNR 0
```



```
Satellite #86, elevation 31, azimuth 70, SNR 0
Satellite #1, elevation 13, azimuth 185, SNR 0
Satellite #7, elevation 19, azimuth 53, SNR 0
Satellite #19, elevation 16, azimuth 157, SNR 0
Satellite #24, elevation 28, azimuth 300, SNR 0
Satellite #31, elevation 40, azimuth 239, SNR 0
Satellite #33, elevation 64, azimuth 12, SNR 0 **
```

Configure the interface to use GPS as a time source.

```
Router#config term
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#ntp refclock gps interface Cellular0/1/0
Router(config)#end
```

Verify the action.

```
Router#show run | sec ntp
ntp refclock gps interface Cellular0/1/0

Router#show ntp associations

  address          ref clock      st  when  poll reach  delay  offset  disp
~127.127.5.1      .GPS.          0   -    16    0  0.000  0.000  16000.
* sys.peer, # selected, + candidate, - outlyer, x falseticker, ~ configured

Router#show ntp status
Clock is synchronized, stratum 1, reference is .GPS.
nominal freq is 250.0000 Hz, actual freq is 249.8750 Hz, precision is 2**10
ntp uptime is 393200 (1/100 of seconds), resolution is 4016
reference time is E42B582E.00022760 (02:04:30.000 UTC Thu Apr 22 2021)
clock offset is -0.0328 msec, root delay is 0.00 msec
root dispersion is 7939.08 msec, peer dispersion is 7937.98 msec
loopfilter state is 'CTRL' (Normal Controlled Loop), drift is 0.000499999 s/s
system poll interval is 64, last update was 6 sec ago.
```

## Yang Model Support

YANG model support is available for the CLI below:




---

**Note** Make sure the LTE modems are present on the slot you are trying to configure.

---

Use the following command to configure Cellular interface timestamp as the NTP source.

```
ntp refclock gps interface <cellular 0/x/0>
```

Use the following command to disable the Cellular interface timestamp as the NTP source.

```
[no] ntp refclock gps interface <cellular 0/x/0>
```




---

**Note** A model file, Cisco-IOS-XE-ntp.yang, is available for the configuration model.

---

### Yang Model Examples

Cellular Slot 1

```
<rpc xmlns="urn:ietf:params:xml:ns:netconf:base:1.0" message-id="101">
  <edit-config>
```

```

<target>
  <running/>
</target>
<config>
  <native xmlns="http://cisco.com/ns/yang/Cisco-IOS-XE-native">
    <ntp>
      <refclock xmlns="http://cisco.com/ns/yang/Cisco-IOS-XE-ntp">
        <gps>
          <interface>Cellular0/1/0</interface>
        </gps>
      </refclock>
    </ntp>
  </native>
</config>
</edit-config>
</rpc>

```

### Get the configuration

```

<rpc xmlns="urn:ietf:params:xml:ns:netconf:base:1.0" message-id="101">
  <get-config>
    <source>
      <running/>
    </source>
    <filter>
      <native xmlns="http://cisco.com/ns/yang/Cisco-IOS-XE-native">
        <ntp>
          <refclock xmlns="http://cisco.com/ns/yang/Cisco-IOS-XE-ntp"
xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0" nc:operation="delete"/>
        </ntp>
      </native>
    </filter>
  </get-config>
</rpc>

```

### Delete the configuration

```

<rpc xmlns="urn:ietf:params:xml:ns:netconf:base:1.0" message-id="101">
  <edit-config>
    <target>
      <running/>
    </target>
    <config>
      <native xmlns="http://cisco.com/ns/yang/Cisco-IOS-XE-native">
        <ntp>
          <refclock xmlns="http://cisco.com/ns/yang/Cisco-IOS-XE-ntp"
xmlns:nc="urn:ietf:params:xml:ns:netconf:base:1.0" nc:operation="delete"/>
        </ntp>
      </native>
    </config>
  </edit-config>
</rpc>

```

## National Marine Electronics Association (NMEA) IOx Support

From linux or the IOx container, the following tty is available for NMEA traffic:

- /dev/ttyTun9
- /dev/ttyS2

## Example: Connecting to a Server Hosting a GPS Application

You can feed the NMEA data to a remote server that hosts the GPS application. The server can be connected to the router either directly using an Ethernet cable or through a LAN or WAN network. If the application supports serial port, run a serial port emulation program to create a virtual serial port over the LAN or WAN connection.



---

**Note** Microsoft Streets & Trips is a licensed software that you can download from the Microsoft website.

---

To connect a Cisco 4G LTE-Advanced through IP to a PC running Microsoft Streets & Trips, perform the following steps:

1. Connect the PC to the router using an Ethernet cable.
2. Ensure that the PC and router can ping.
3. Launch the serial port redirector on the PC.
4. Create a virtual serial port that connects to the NMEA port on the router.
5. Launch **Microsoft Streets & Trips** on your PC.
6. Select the GPS Menu.
7. Click Start Tracking.
8. If you have acquired a location fix from the **show cellular 0/4/0 gps** command output on the router, the current location is plotted on the graph, and a reddish brown dotted cursor with a circle around it is seen on the map.



---

**Note** If you have not acquired a location fix, the Microsoft application times out and disconnects.

---

