



## Installation Roadmap for NCS 4016

This chapter lists the steps to install the Cisco NCS 4016 chassis and its components and prepare the system for operation.

- [Installation Roadmap, on page 1](#)

## Installation Roadmap

This table lists the steps to install the Cisco NCS 4016 chassis and its components and prepare the system for operation. Use this table as a checklist to ensure that all components are properly installed in the correct order. For information about a step, see the respective book or section of this installation guide.

**Table 1: Overview of Installation Steps**

Step	See
Verify that the chassis is secured in the rack. <b>Note</b> For ease of installation, the cosmetic door should be removed.	Cisco Network Convergence System 4000 Series Unpacking, Moving, and Securing Guide
Ground the chassis.	<a href="#">Installing the Chassis Ground Cable</a>
Verify that the power components are installed.	<a href="#">Installing Power Components</a>
Verify that the ECU/ECU2 is installed.	
Verify that the fan trays are installed.	<a href="#">Removing and Replacing the Fan Tray</a>
Connect the AC or DC power cord.	<a href="#">Disconnecting AC or DC Power</a>
Power on the chassis.	<a href="#">Powering On the Chassis</a>
Install cards and remaining components in the chassis.	<a href="#">Installing Route Processor Cards, Fabric Cards, and Line Cards</a>
Re-install the cosmetic door.	<a href="#">Removing and Replacing the Front Door</a>

