



Priority Shutdown Commands

This chapter provides details of the commands used for assigning priorities to the line cards for shutdown.

- [power-mgmt progressive location, on page 2](#)
- [priority location, on page 3](#)

power-mgmt progressive location

To enable the LC priority shutdown feature on the chassis, use the **power-mgmt progressive location** command in the global configuration mode.

power-mgmt progressive location *rack-id*

Syntax Description

rack-id The ID of the rack.

Command Default

None

Command Modes

Global configuration

Command History

Release	Modification
Release 6.5.31	This command was introduced.

Usage Guidelines

None

Example

The following example enables the LC priority shutdown on the chassis specified.

```
RP/0/RP0:hostname (config)#power-mgmt progressive location L0
```

priority location

To configure the shutdown priority to the line card specified, use the **priority location** command in the power-mgmt progressive configuration mode.

priority location *line-card-location card-priority*

Syntax Description	<i>line-card-location</i>	The ID of the rack and slot.
	<i>card-priority</i>	The shutdown priority.
Command Default	None	
Command Modes	Power-mgmt progressive configuration mode.	
Command History	Release	Modification
	Release 6.5.31	This command was introduced.
Usage Guidelines	None	

Example

The following example configures the shutdown priority to the line card specified.

```
RP/0/RP0:hostname (config-location-L0)#priority location 0/9 6
```

priority location